


STORAGE CABINET

User Manual

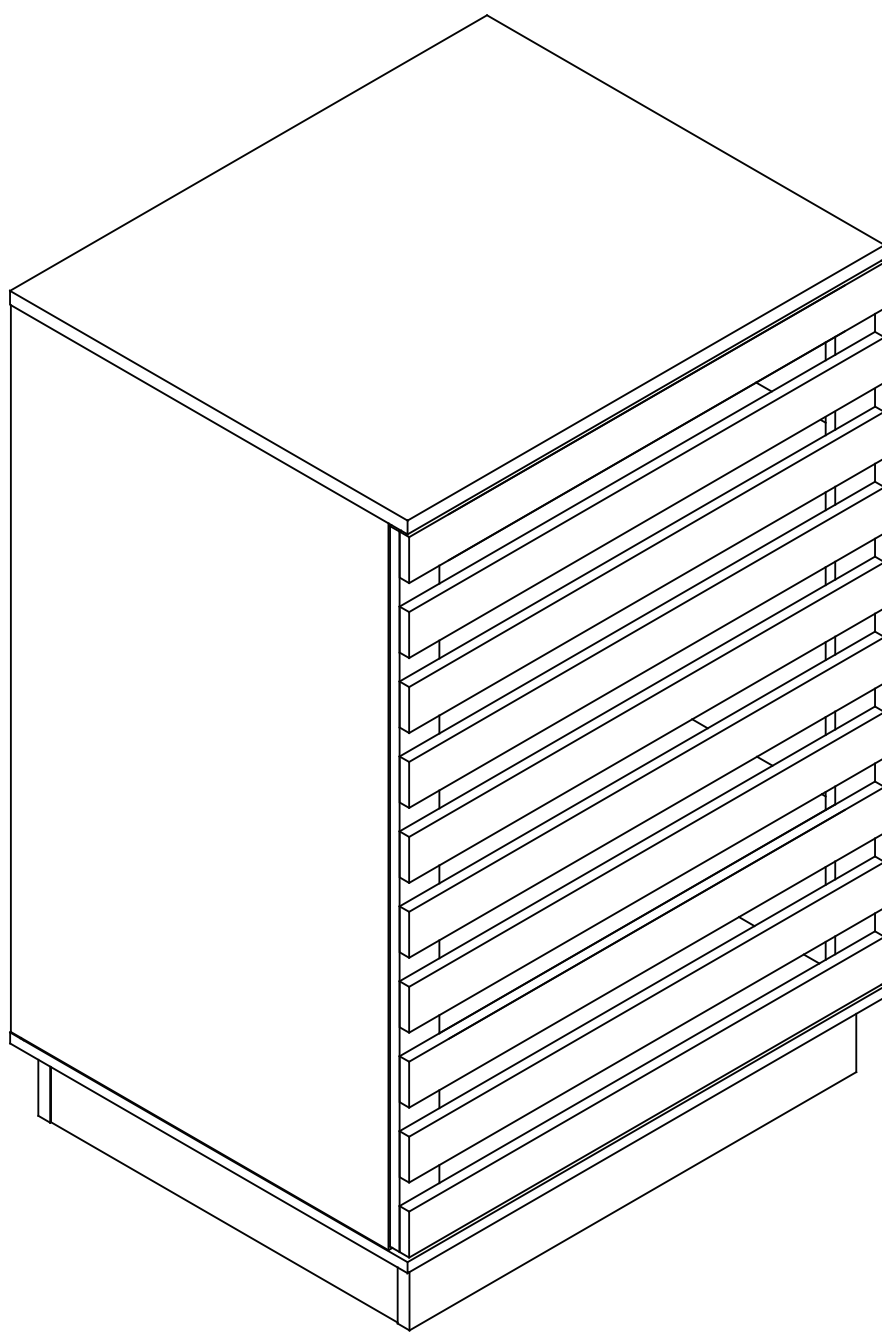

Made in China

For a Hassle-Free installation

1. Ensure you have received all cartons and familiarize yourself with the workload.

Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

3. Read instructions carefully and check no parts are missing.

4. Lay out all hardware on a soft surface so you can easily identify them.

5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.

6. Install your new product carefully following the instructions. Don't skip ahead!

* If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we're always here to help :)

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.

2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.


3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

4. Unless specially designed to accommodate, do not set heavy objects on top of this product.













5. Place the heaviest items on the lowest shelf.

6. Never allow children to climb or bang on drawers, doors or shelves.





PANEL LAYOUT








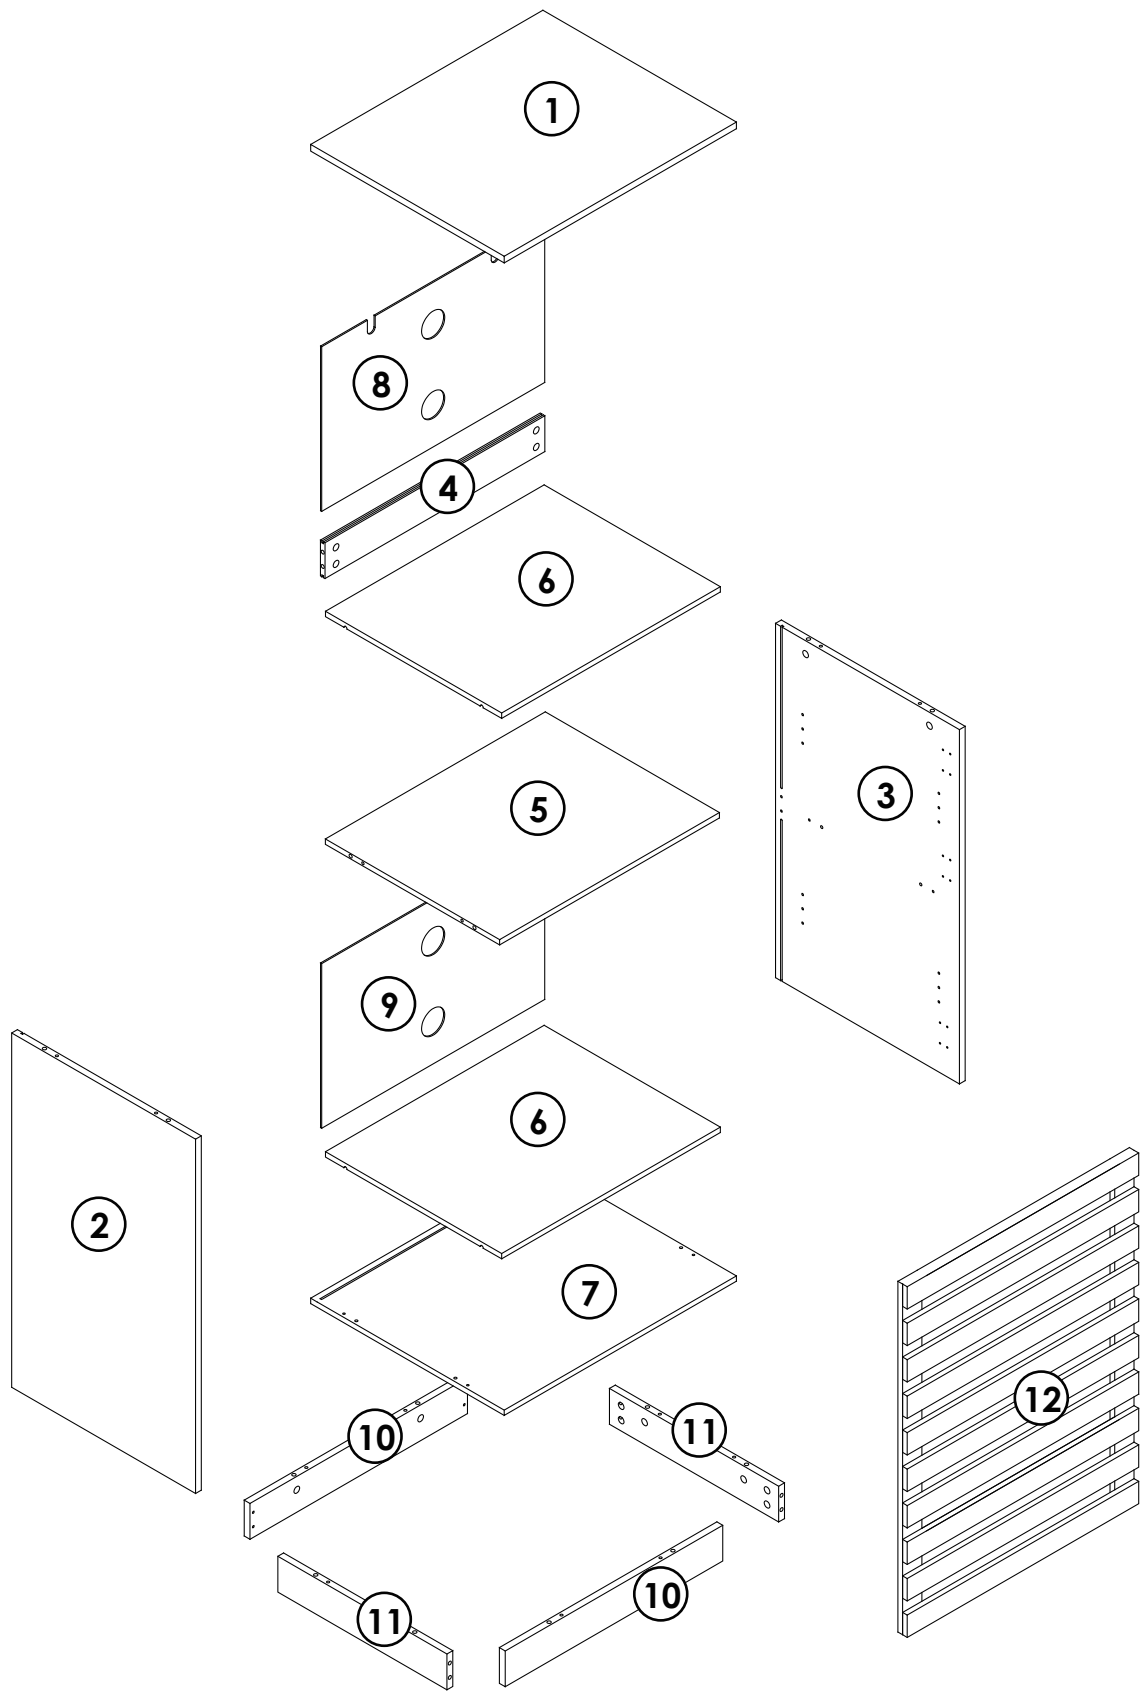


PARTS LIST

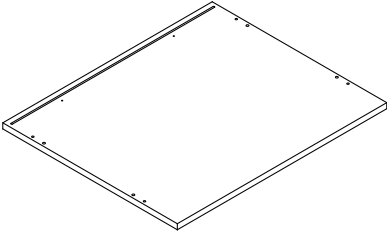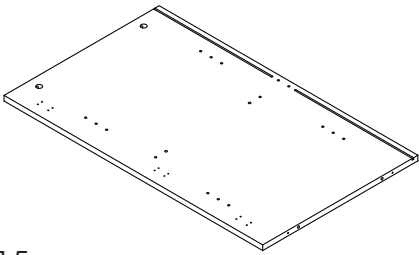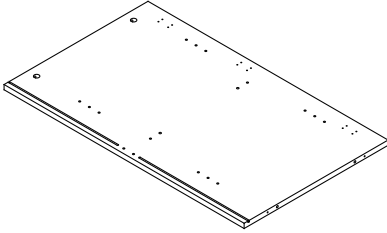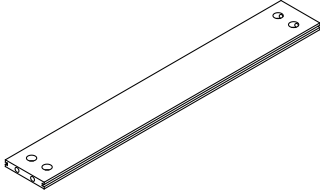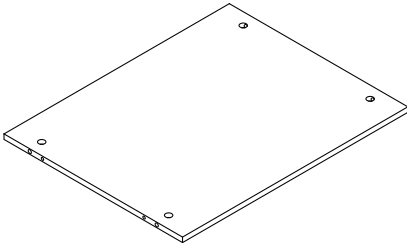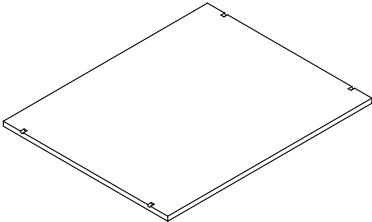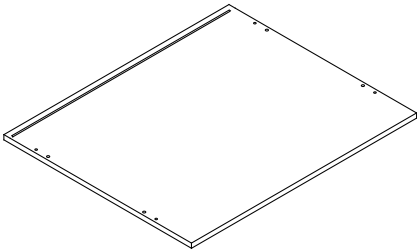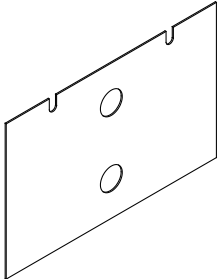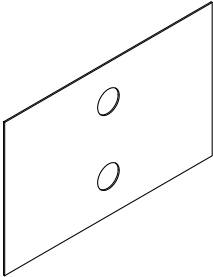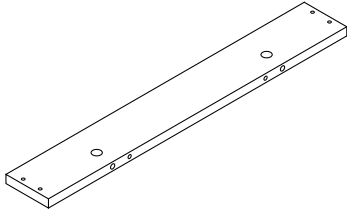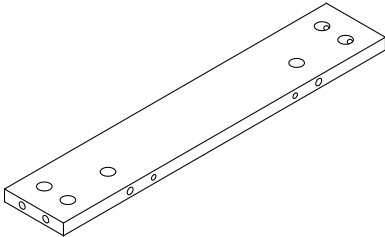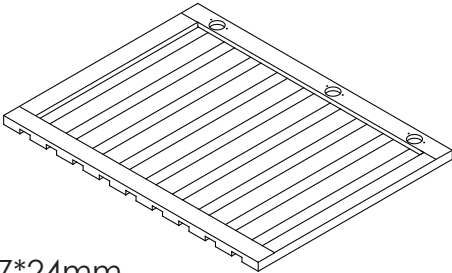1  599*499*15mm 1 pc	2  792*474*15mm 1 pc
3  792*474*15mm 1 pc	4  568*79*12mm 1 pc
5  568*429*12mm 1 pc	6  564*432*12mm 2 pc
7  599*499*12mm 1 pc	8  576*364*3mm 1 pc
9  576*364*3mm 1 pc	10  561*79*12mm 2 pcs
11  430*79*12mm 2 pcs	12  784*597*24mm 1 pc


HARDWARE LIST

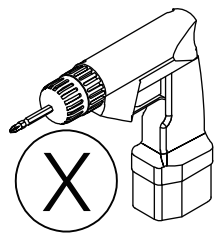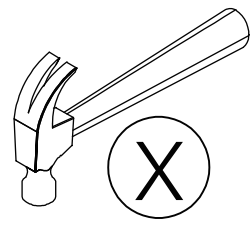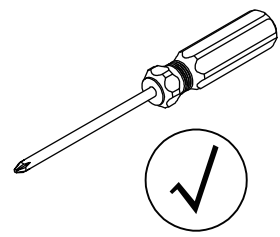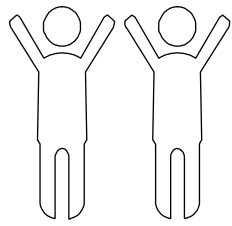

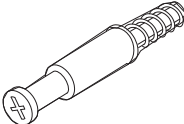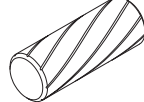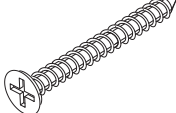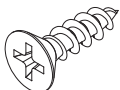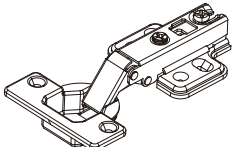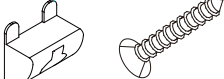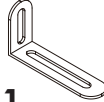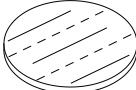A  Ø6*35mm 28 pcs	B  Ø15*10mm 28 pcs	C  Ø6*30mm 20 pcs	D  Ø4*40mm 6 pcs
E  Ø3.5*12mm 18 pcs	F  Ø5*17mm 8 pcs	G  110*62*25mm 3pcs	H  Ø3*16mm 10pcs
J  J1 73*25mm +  J2 Ø4*12mm +  J3 30*8mm 2 pcs		K  Ø20mm 8 pcs	

ASSEMBLY STEPS

CAM BOLT INSTALLATION AS BELOW:

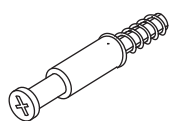


Cam bolt





Connecting piece


Pin

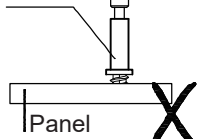





No gap

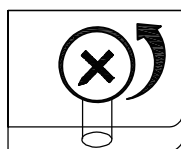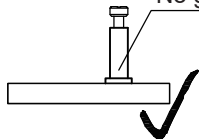

Rotate connecting piece if found in the position illustrated above.

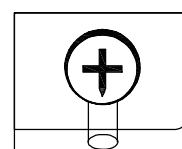




Correct orientation to receive bolts.

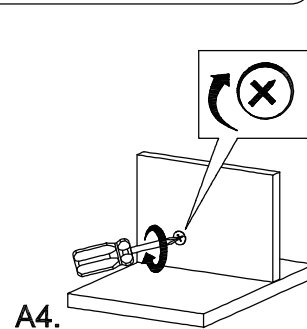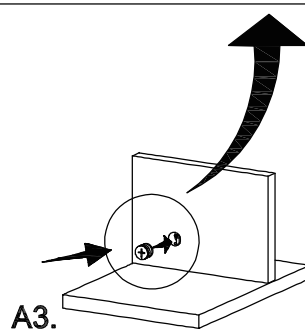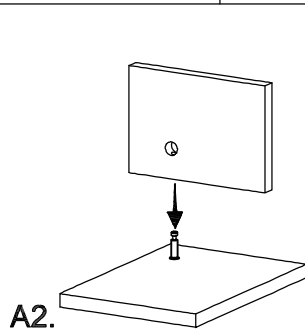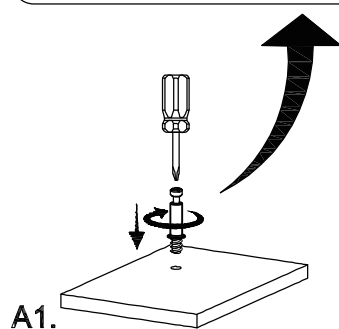

1

YOU WILL NEED




A x4

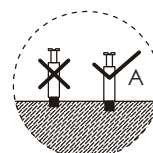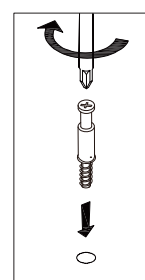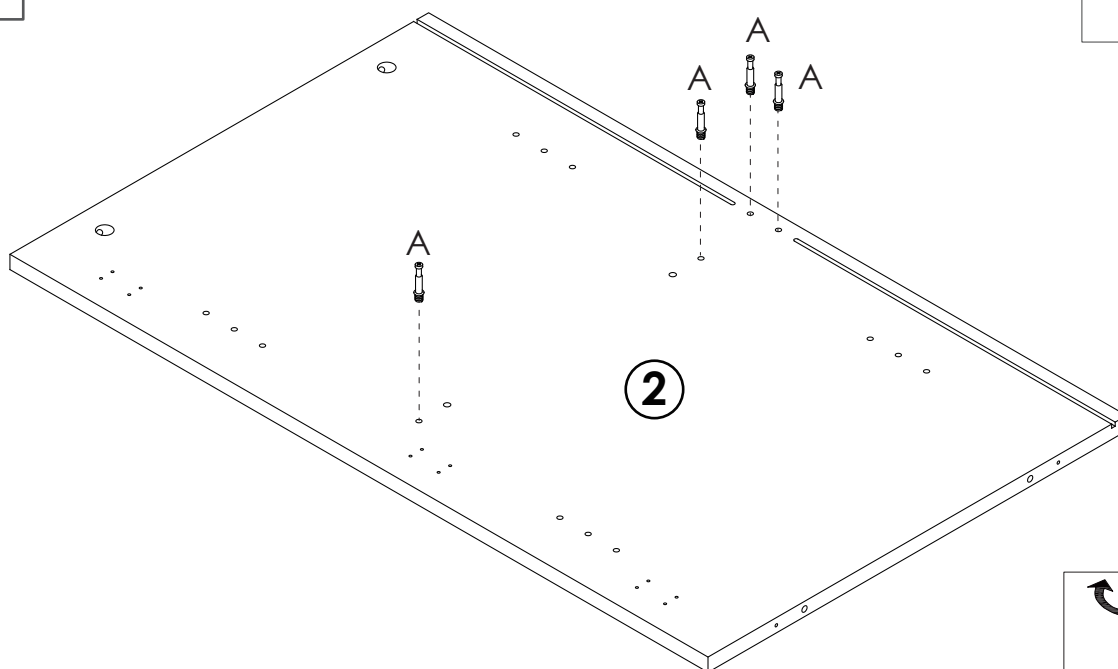

2

YOU WILL NEED



A x4

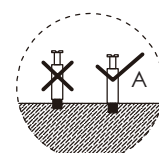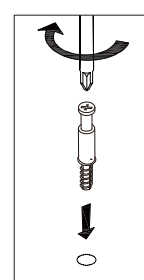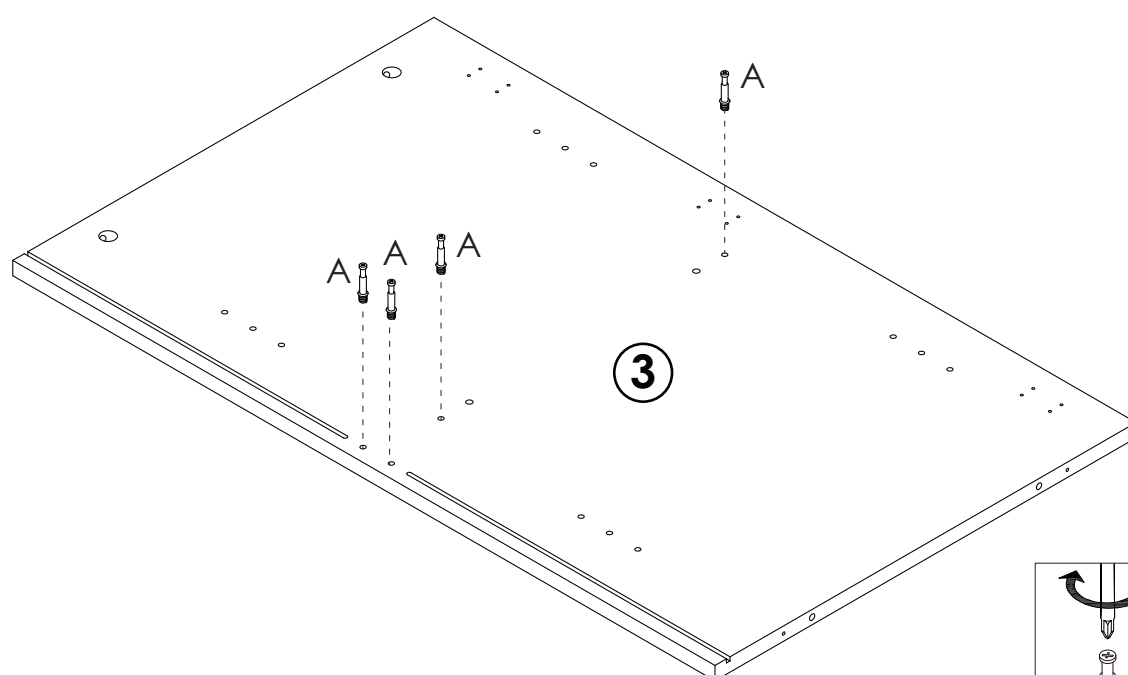

3

YOU WILL NEED

B x2

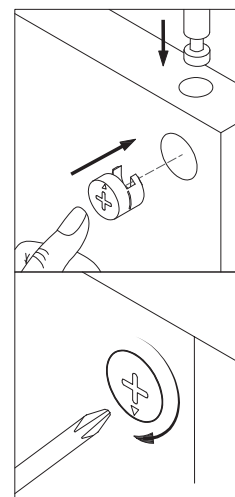
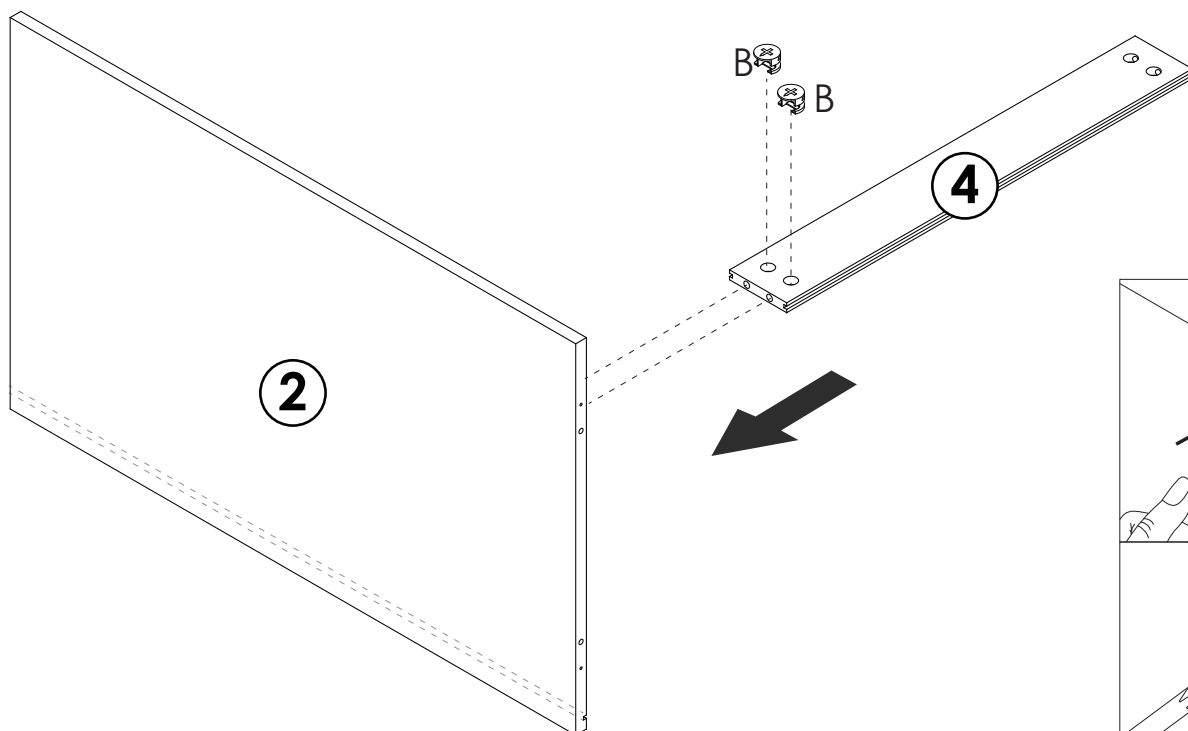


4


YOU WILL NEED

C x2

B x2

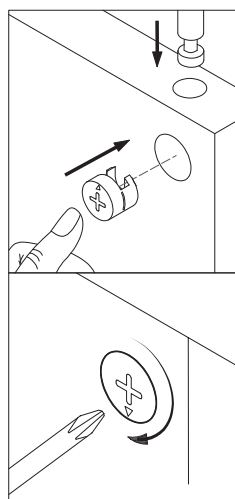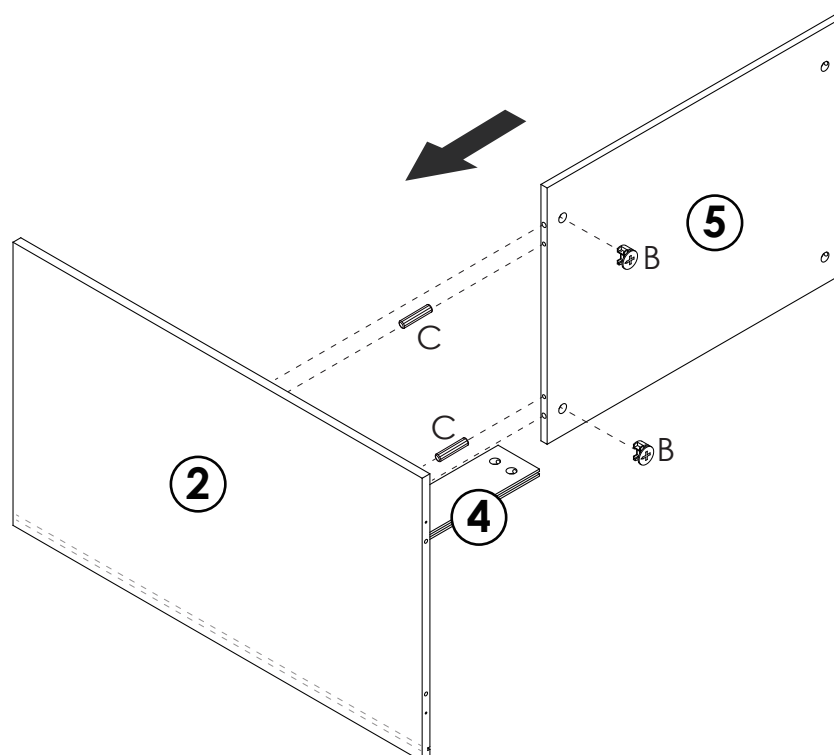



5

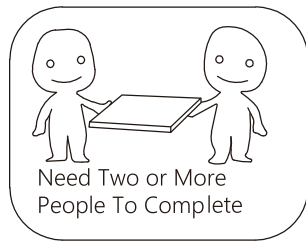

YOU WILL NEED


C x2

B x4

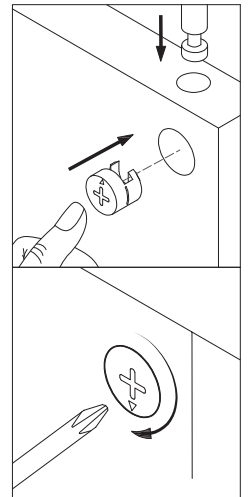
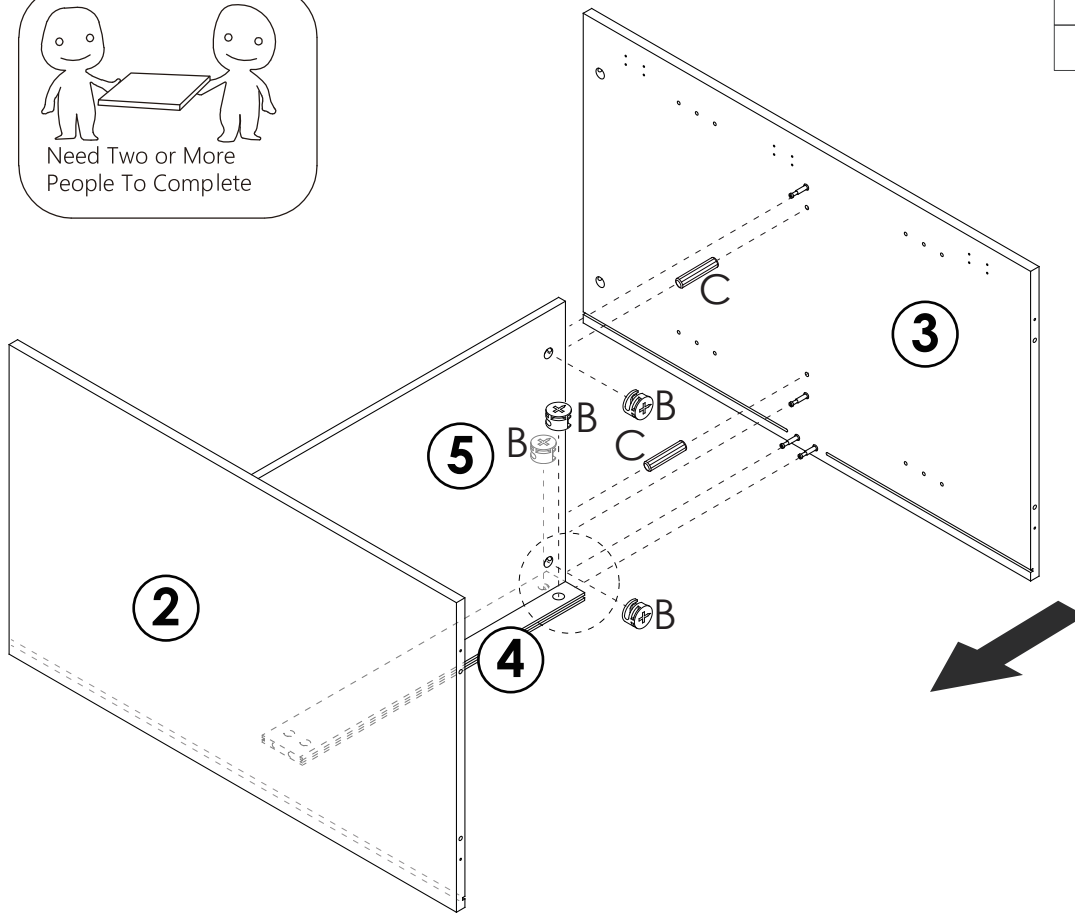


6

The thin backplate must be fully installed into the slot or it will prevent proper installation.

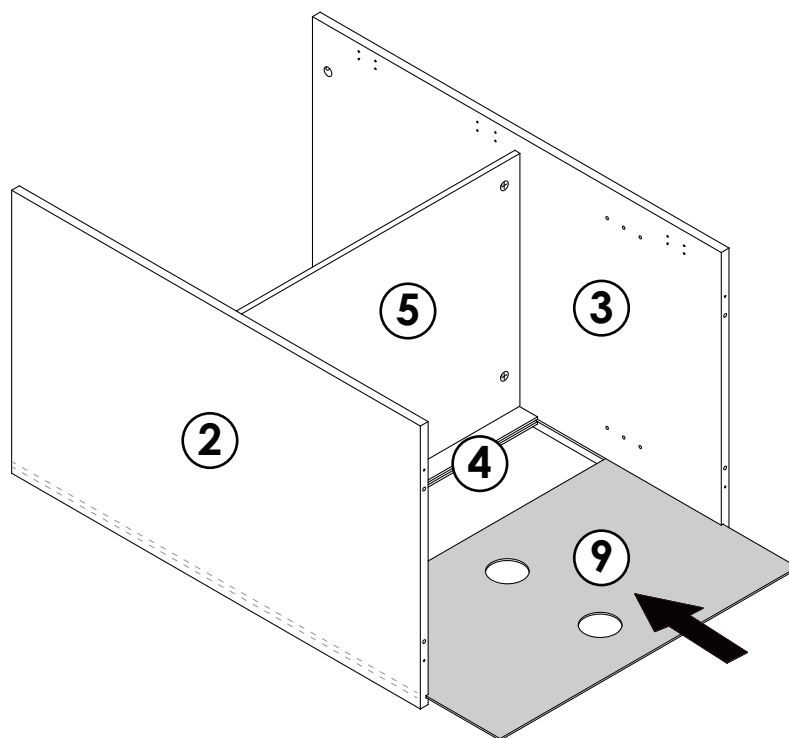



The 9th board needs to be fully inserted into the 4th board

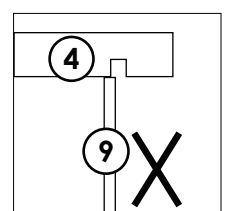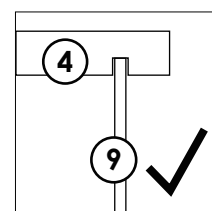

7

YOU WILL NEED

A x8

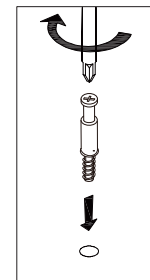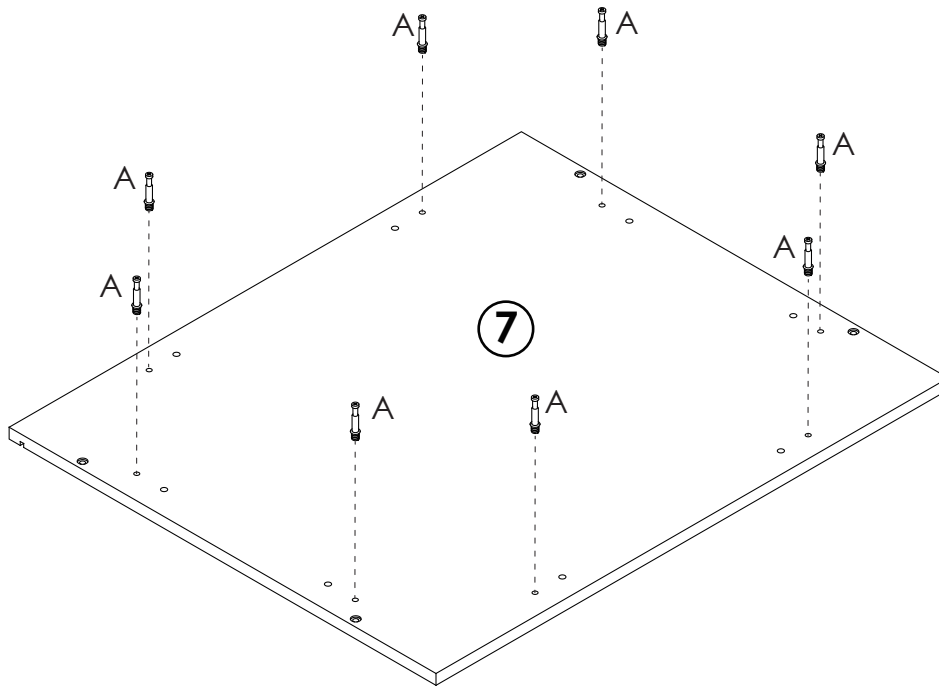


8

The thin backplate must be fully installed into the slot or it will prevent proper installation.



YOU WILL NEED

C x4

D x4

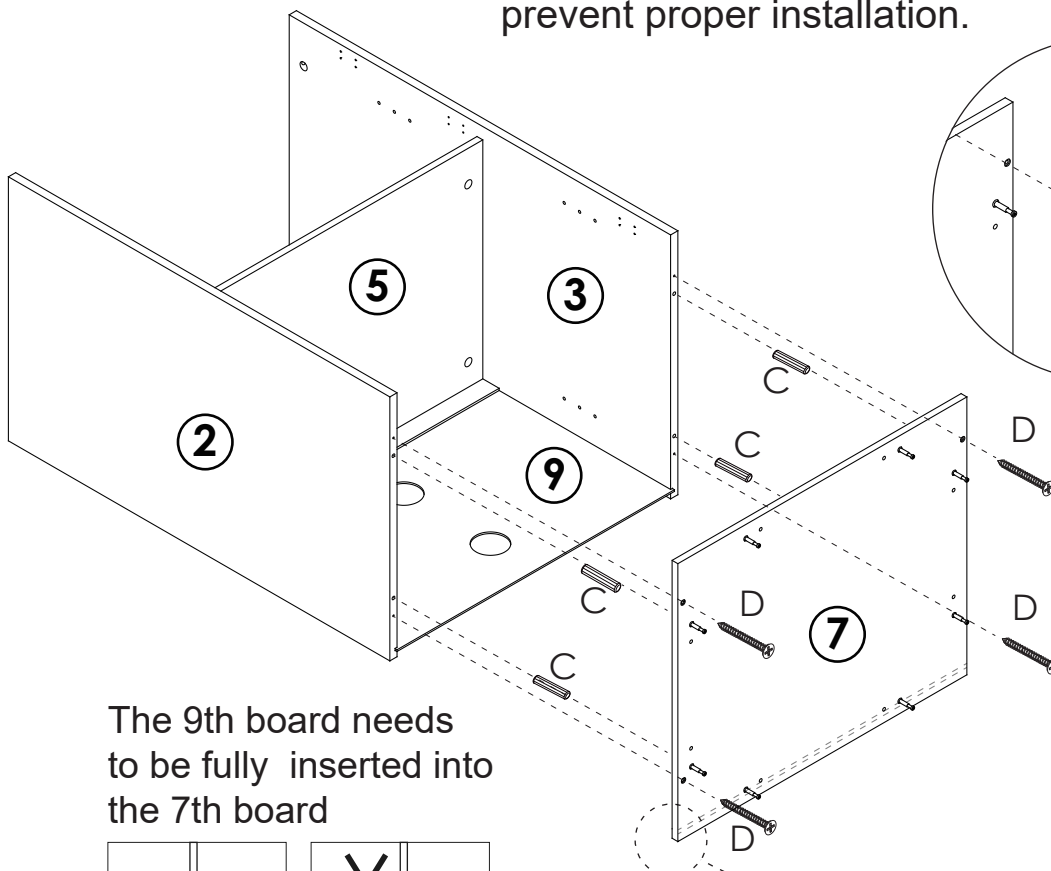



The 9th board needs to be fully inserted into the 7th board

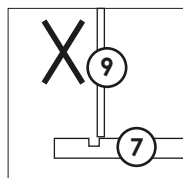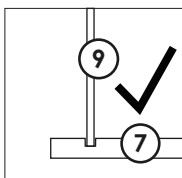

9

YOU WILL NEED



A x8

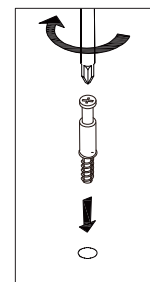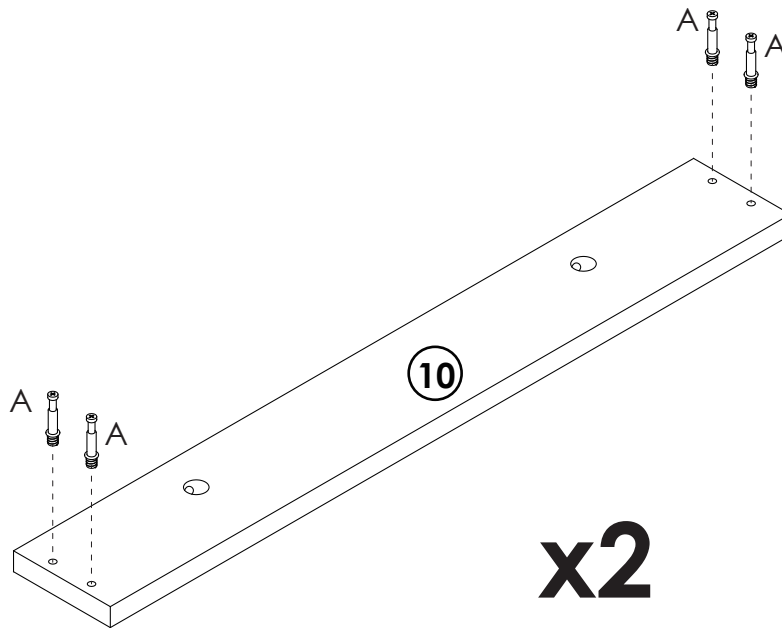

10

YOU WILL NEED

B x8


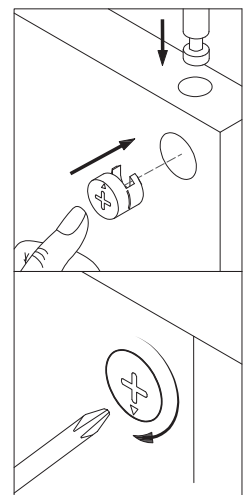
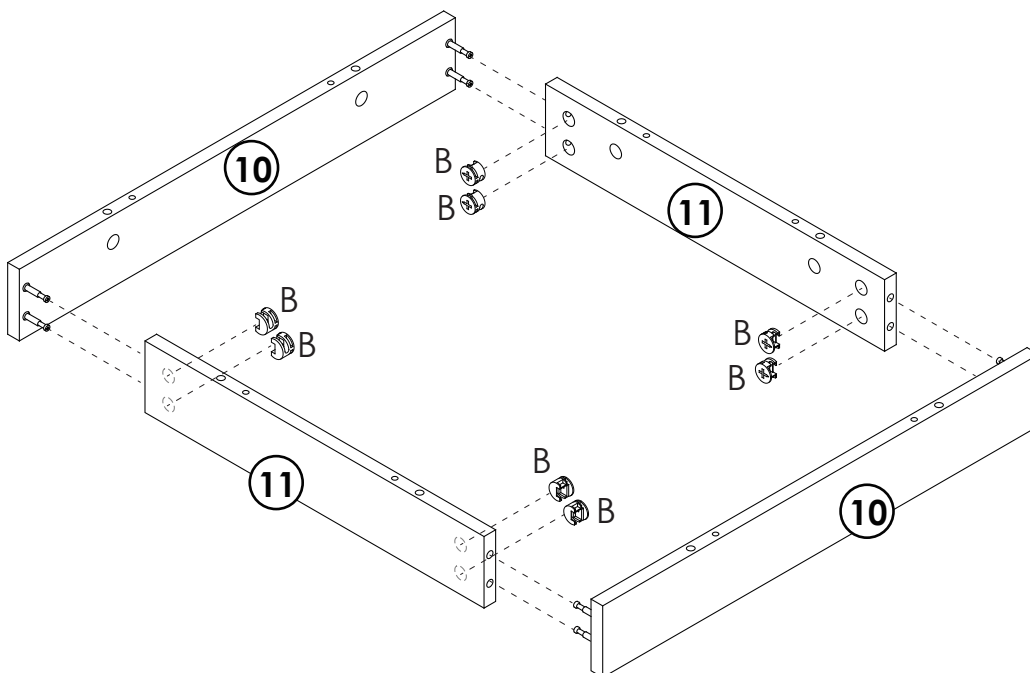


11


YOU WILL NEED

C x8

B x8

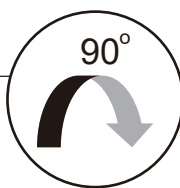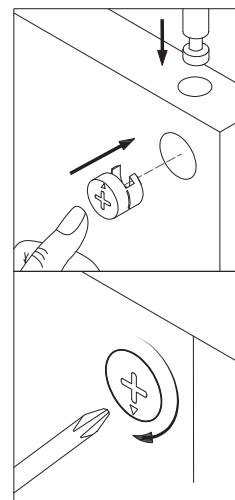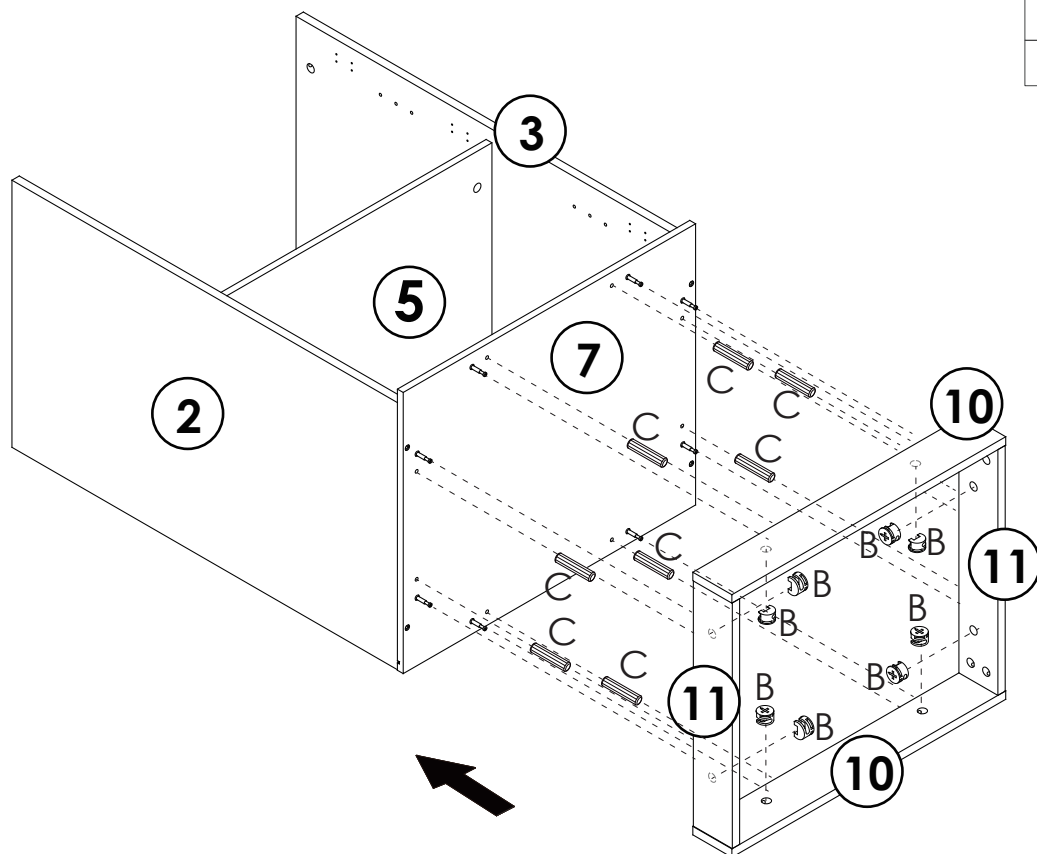



12

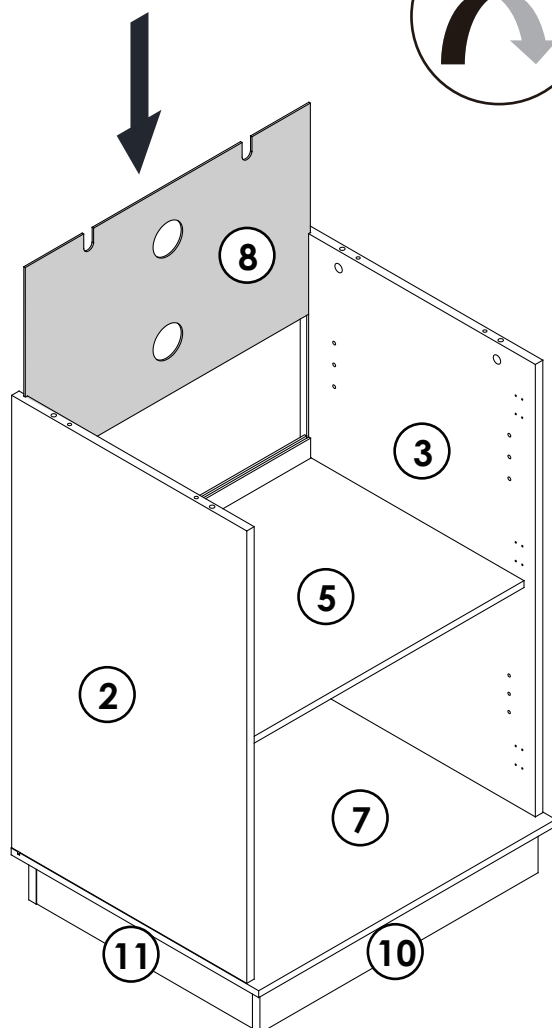

The thin backplate must be fully installed into the slot or it will prevent proper installation.



The 8th board needs to be fully inserted into the 4th board

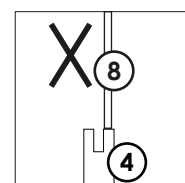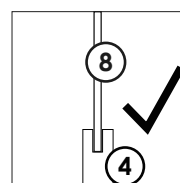





13

YOU WILL NEED

A x4

J1 x2

J2 x2

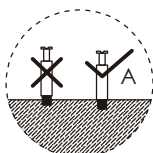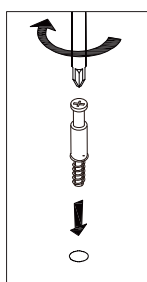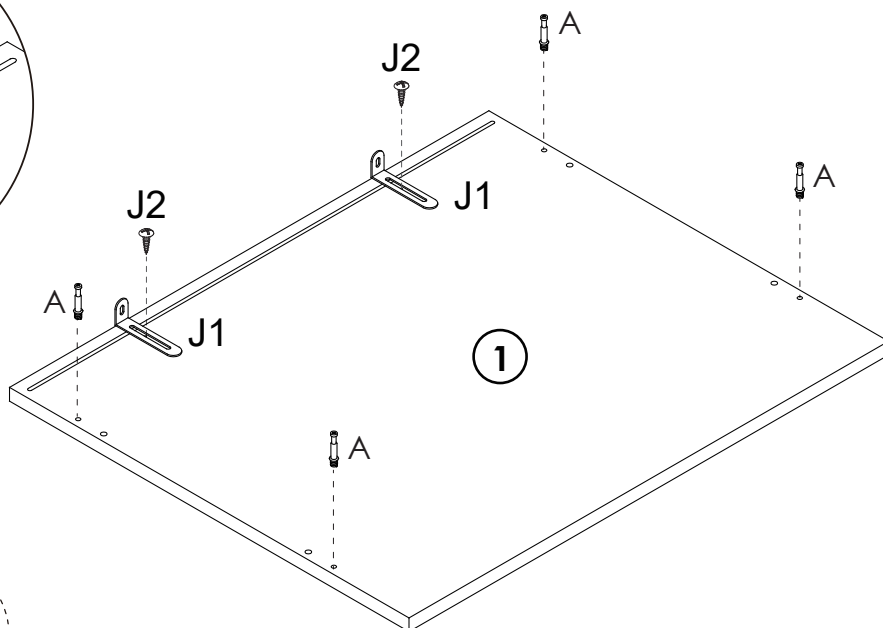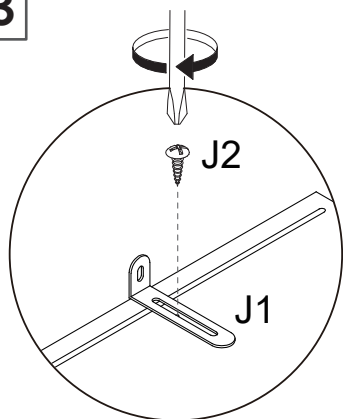

14

YOU WILL NEED





C x4

B x4

The thin backplate must be fully installed into the slot or it will prevent proper installation.





The 8th board needs to be fully inserted into the 1th board

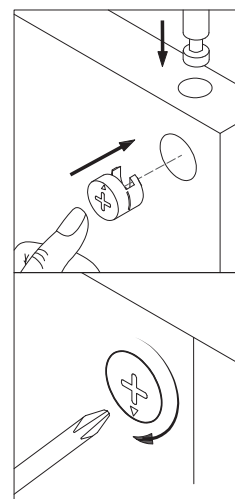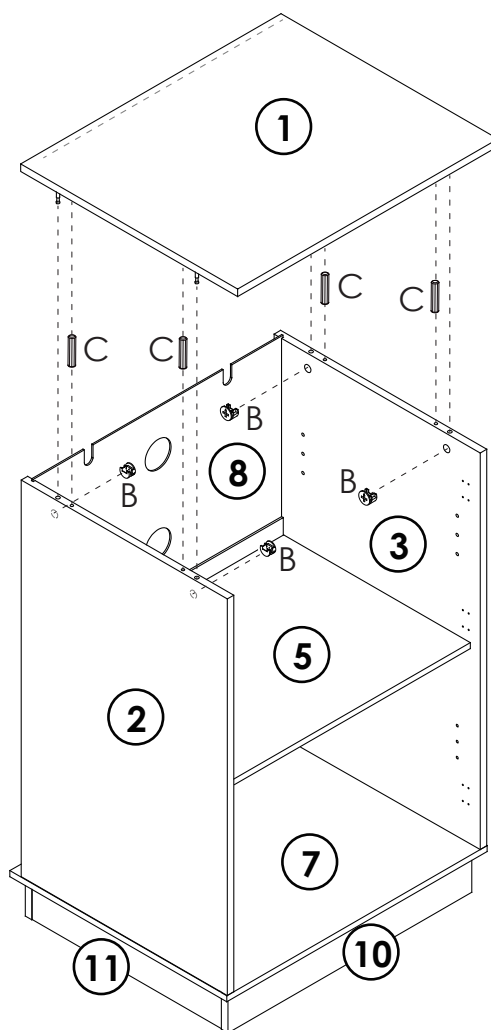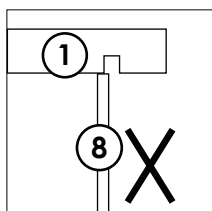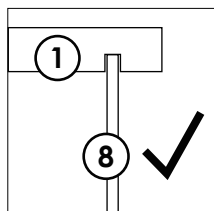

⚠ DANGER

To prevent furniture from toppling attach, mount, boor otherwise secure to walls and floors. Do not place unstable furniture near where children play. An anchor kit suitable for plaster walls is included with this item. If you require a different kit consult your nearest hardware store.



Note: Toppling preventer must be installed otherwise there is a risk of tipping

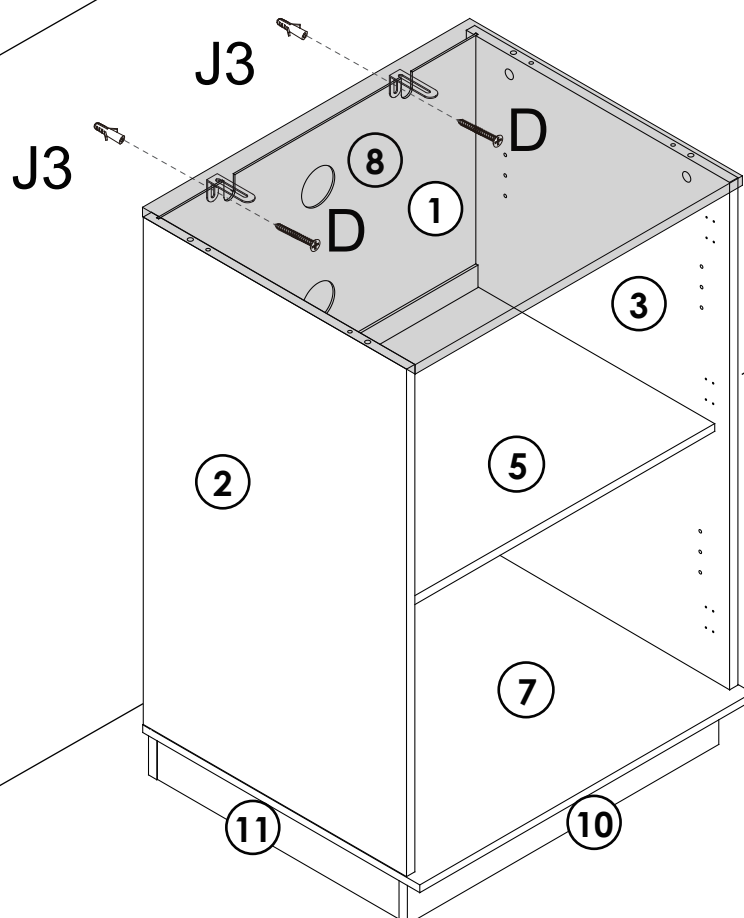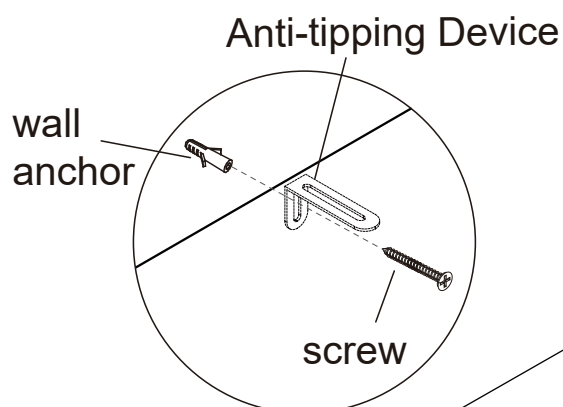

16

YOU WILL NEED





F x8

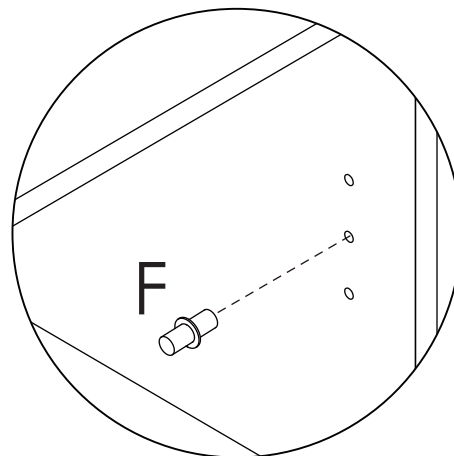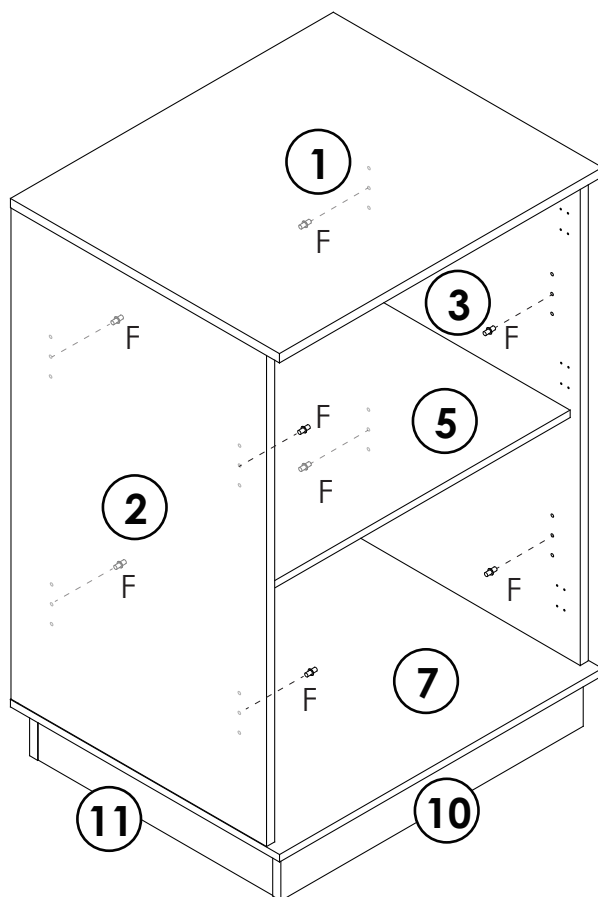

17

YOU WILL NEED

K x8

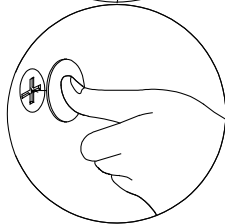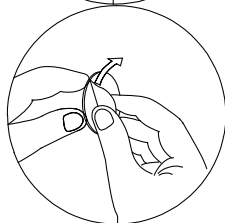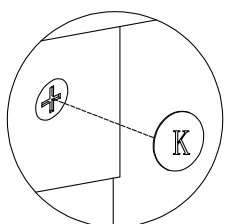
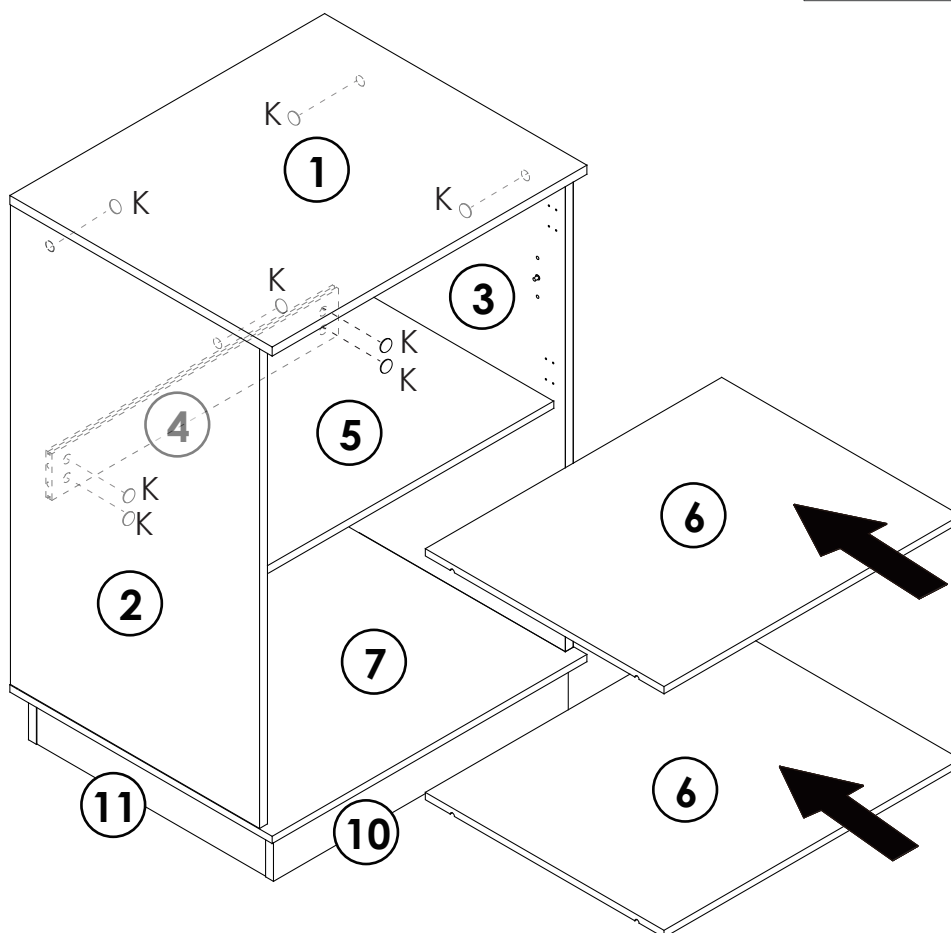


Cover the visible

18

YOU WILL NEED

H x10

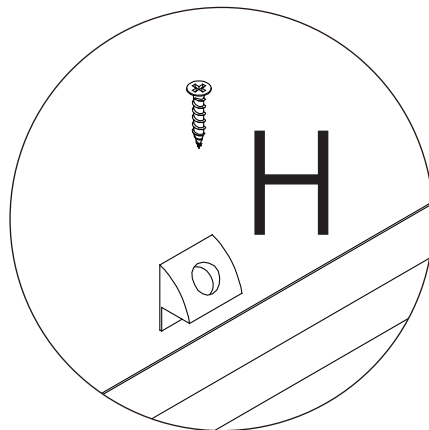
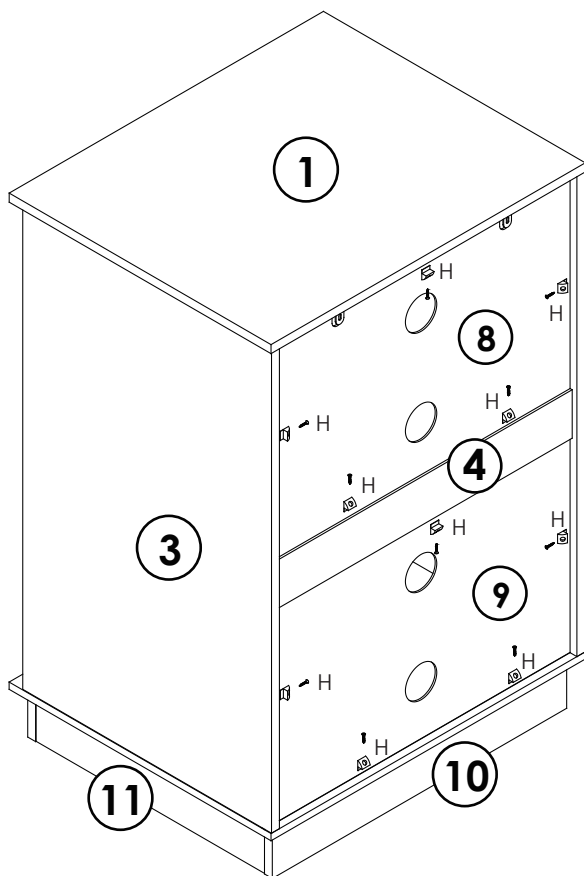



19

YOU WILL NEED


G x3

E x6

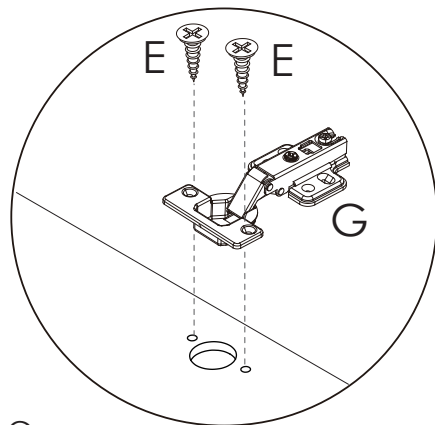
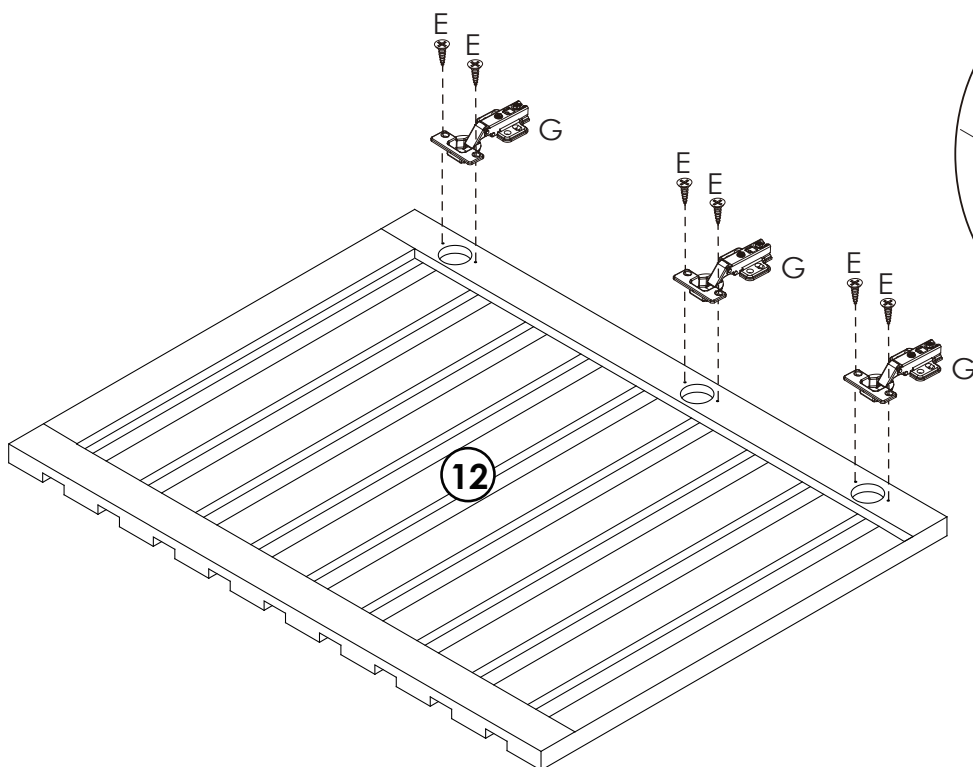


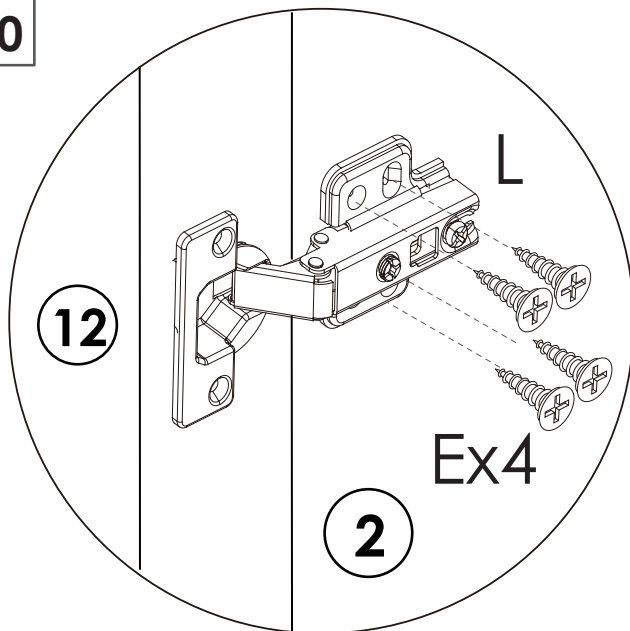

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.

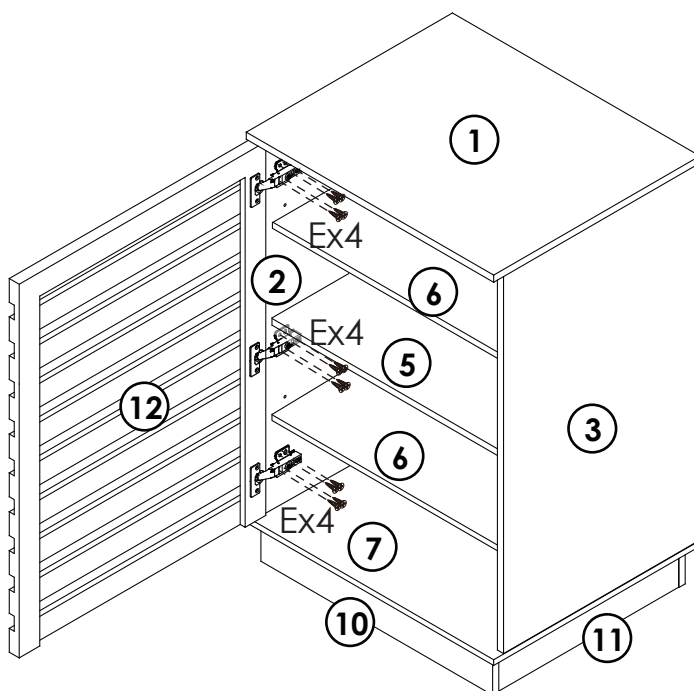


OR

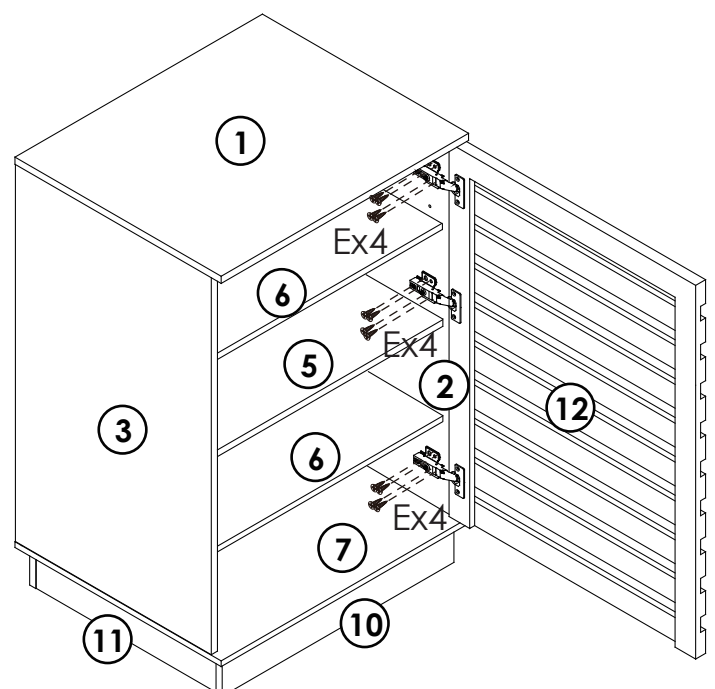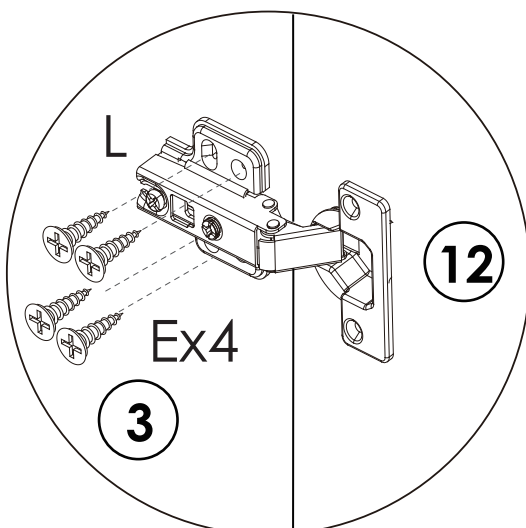





NOTE :If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

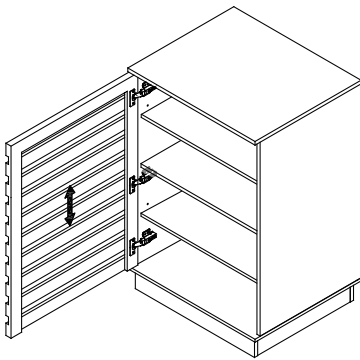


1

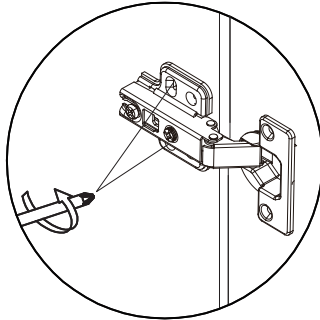


2

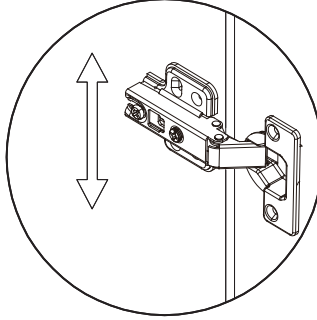


3

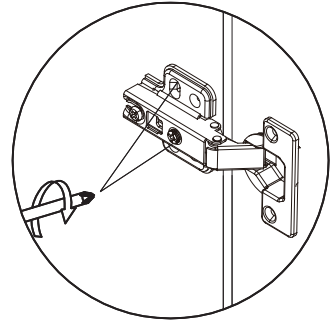


lose these 2 screws move hinge up/down tighten these 2 screws again

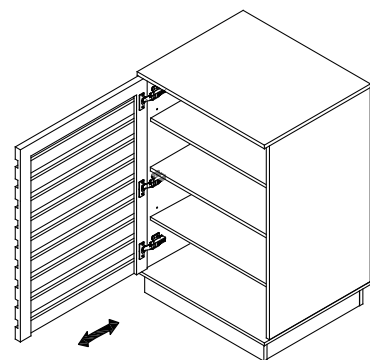


1

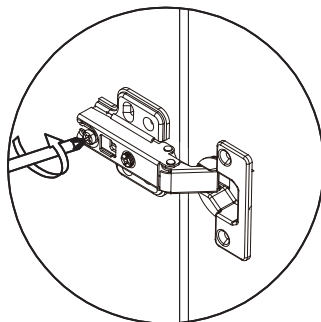


2

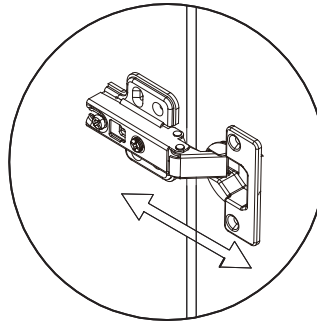


3

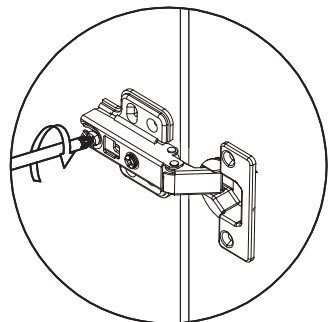


lose these screws shift hinge in/out tighten this screw again

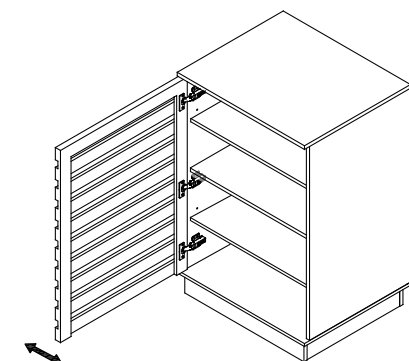

1

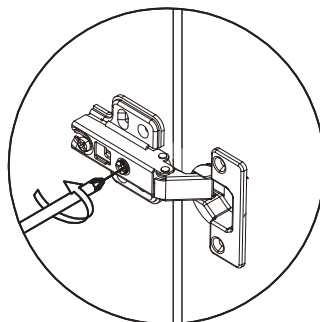



2

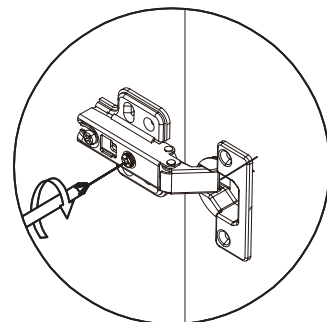

lose this screw would get
hinge/door closer to side board

tighten this screw would get
hinge/door away from side board

OR

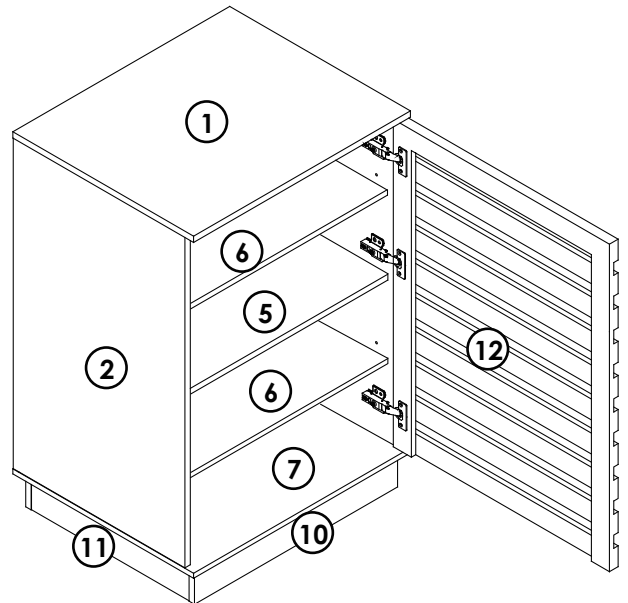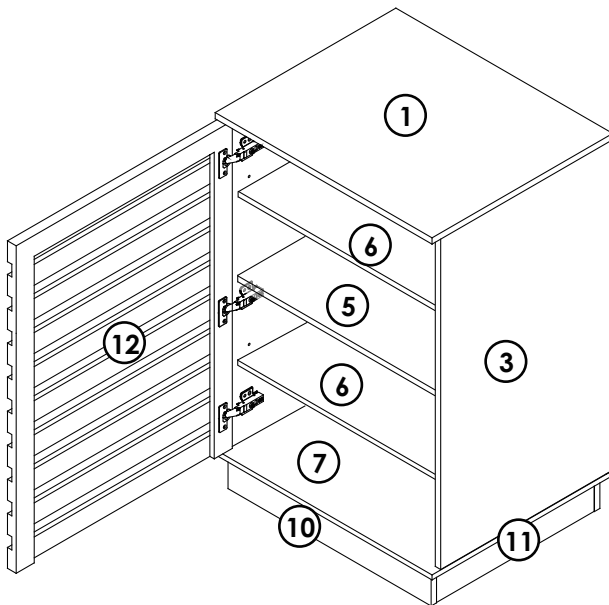**WARNING**

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Made in China