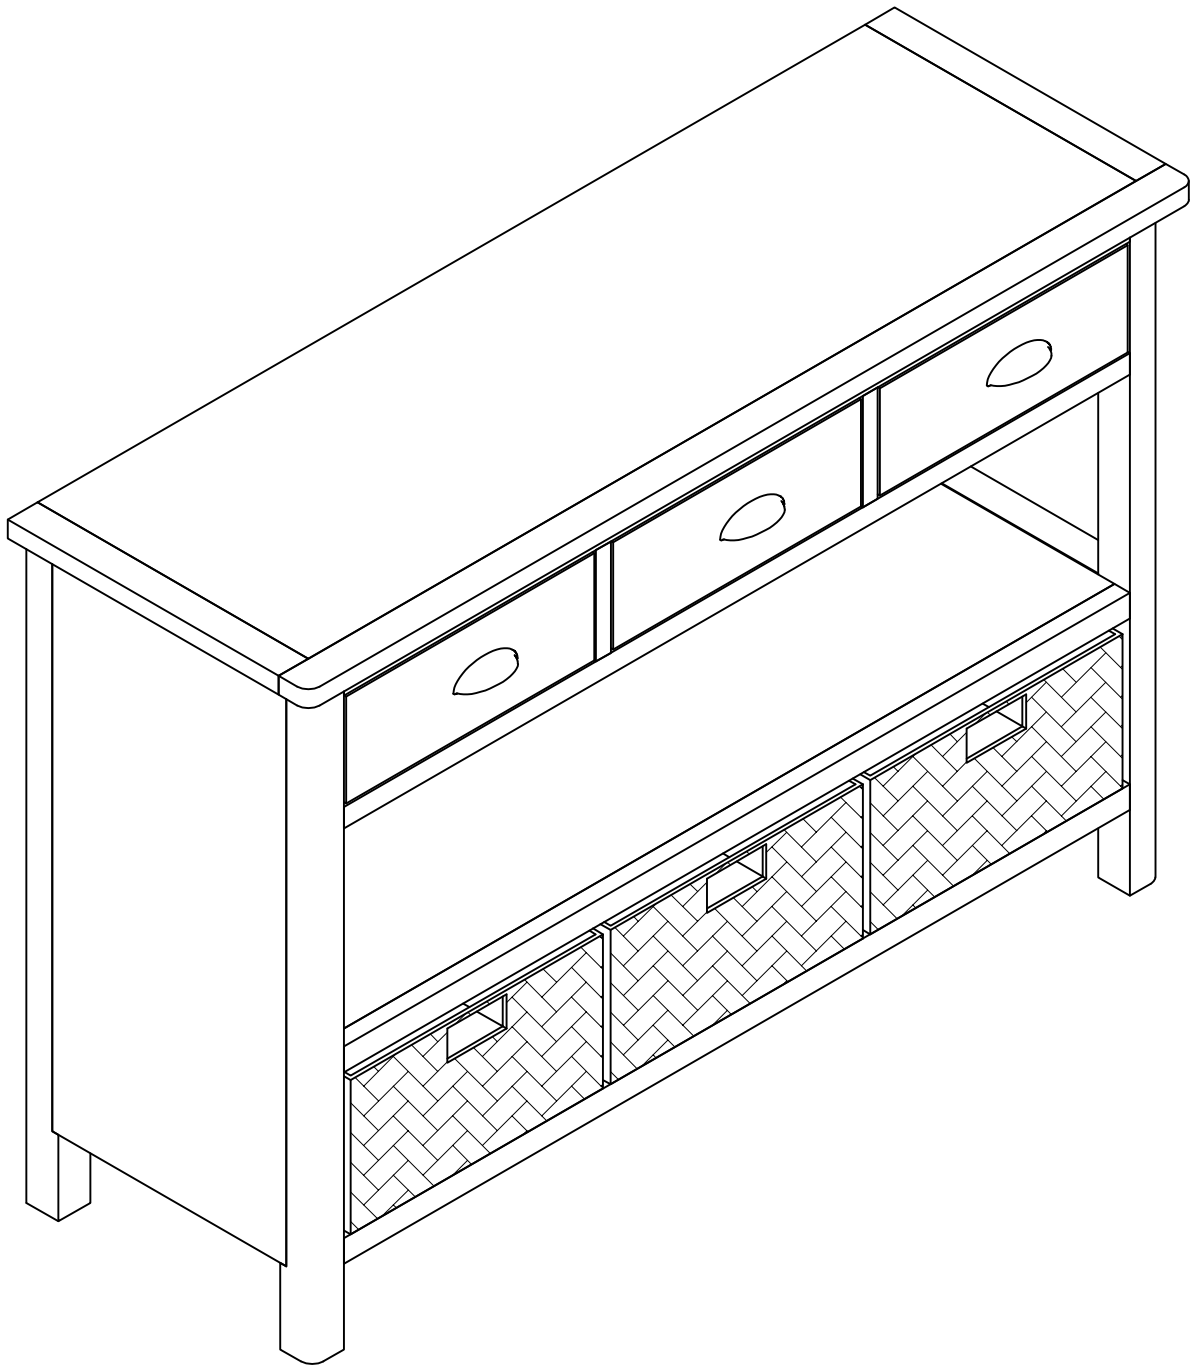
# ASSEMBLY INSTRUCTION



# ASSEMBLY INSTRUCTION

Please read these instructions fully before starting assembly：

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.

2. Kindly follow the assembly instructions step by step.

3. Do not tighten all screws and bolts until the table is fully assembled.

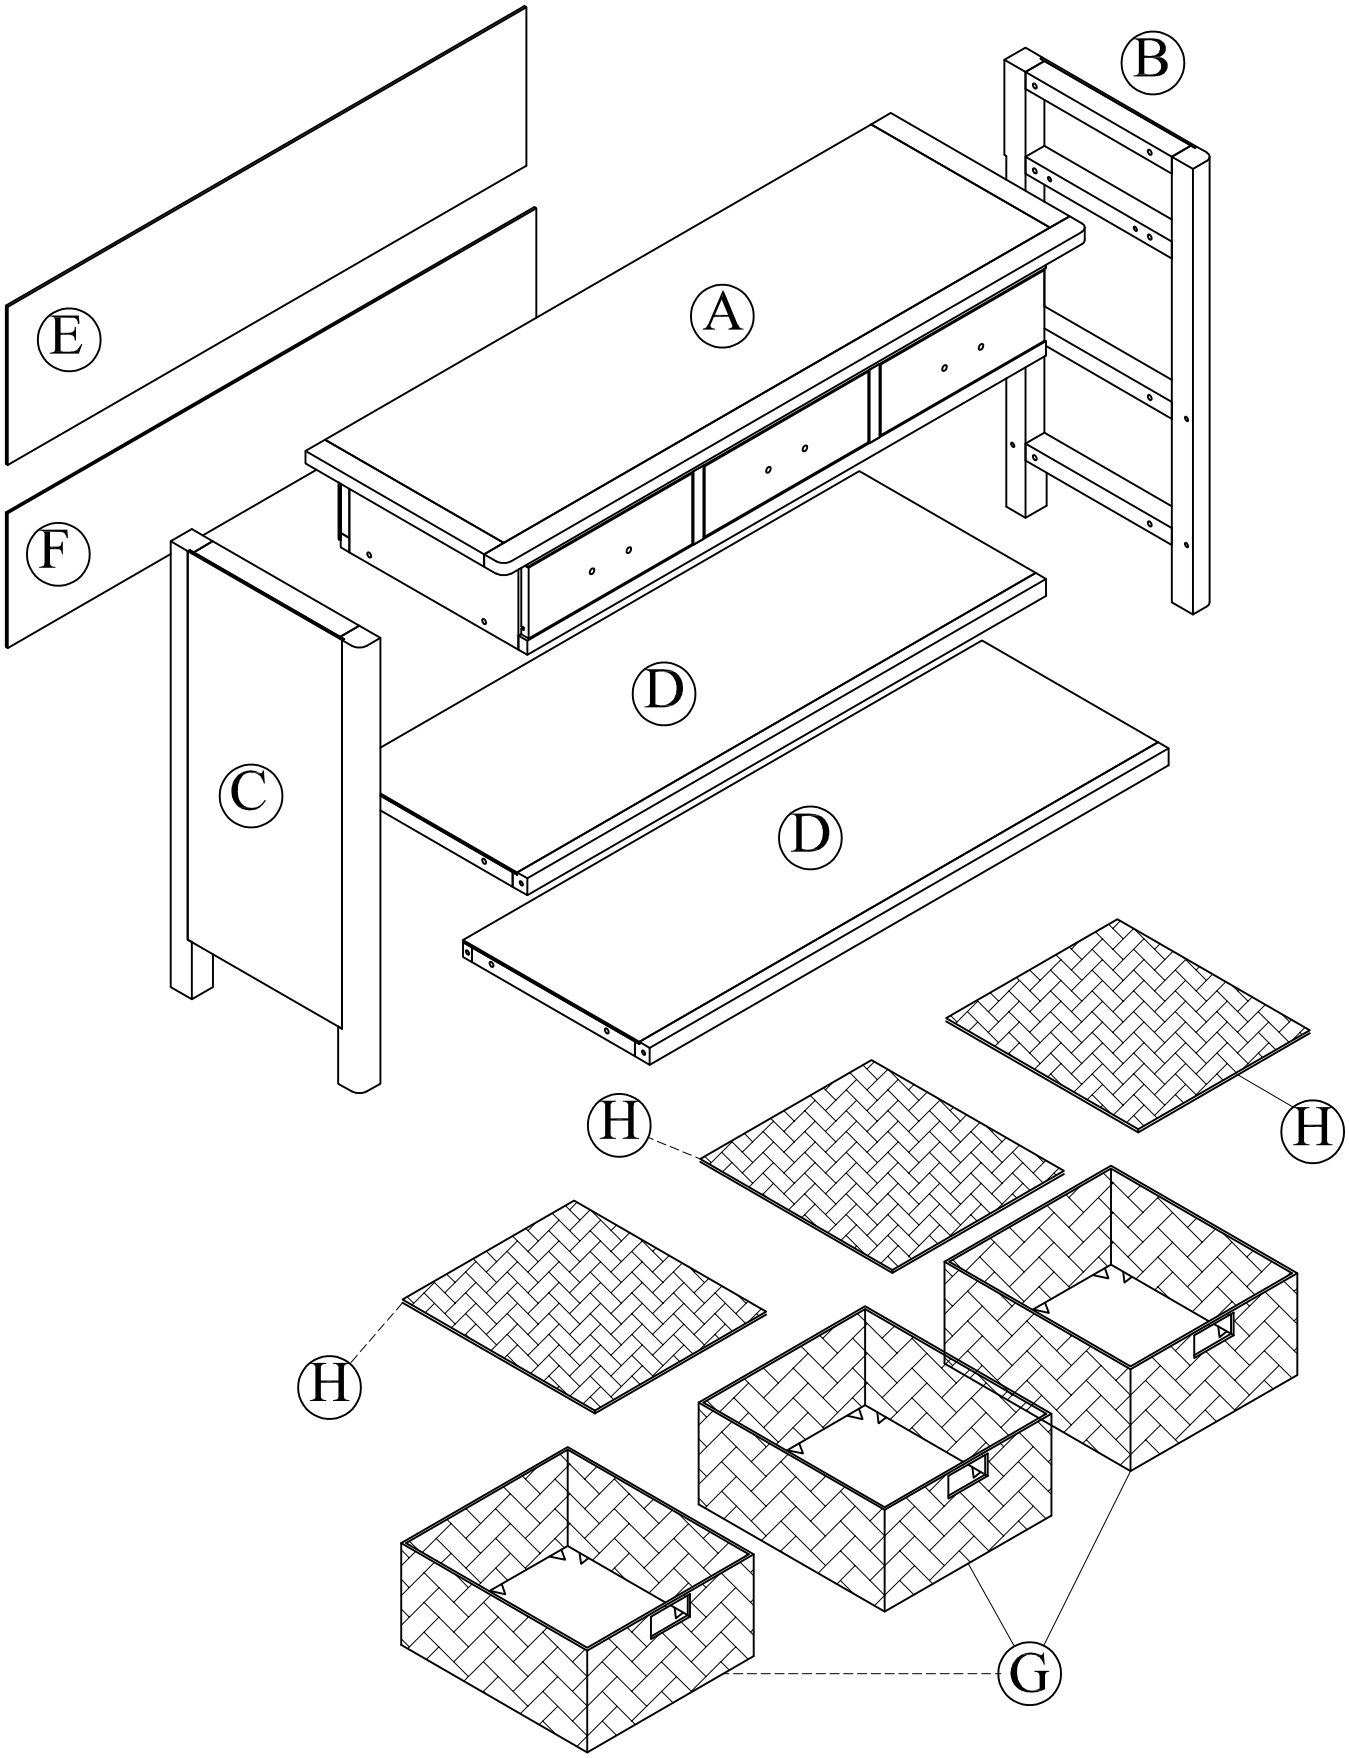
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.

5. Parts of the assembly will be easier with 2 people.

Care and maintenance：









Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

# ASSEMBLY INSTRUCTION








# ASSEMBLY INSTRUCTION

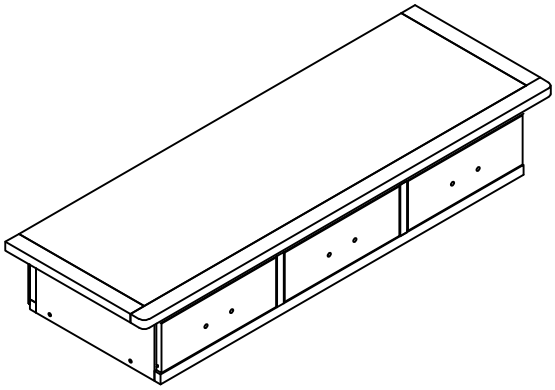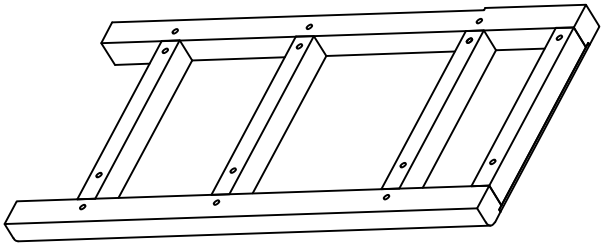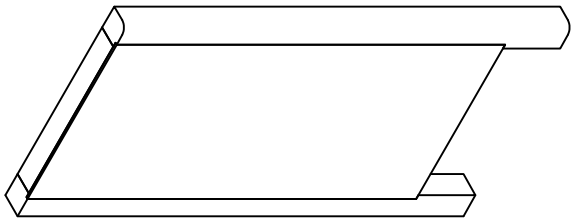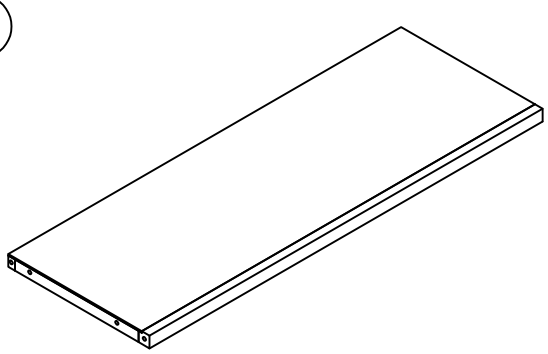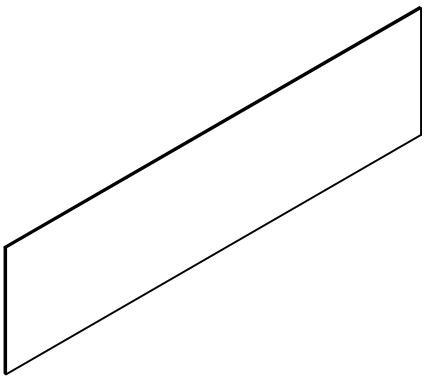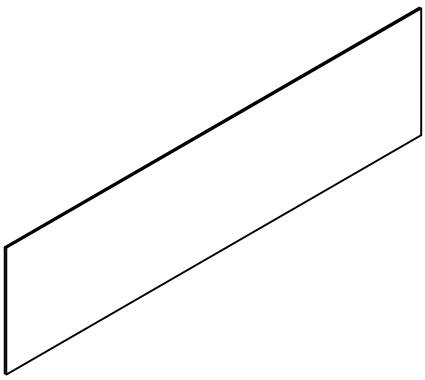
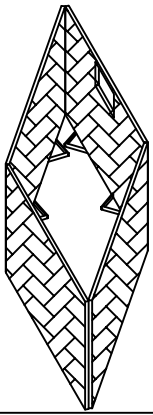
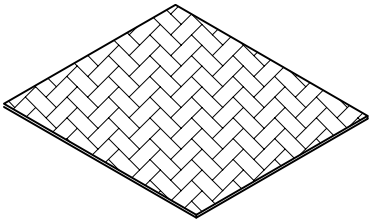
## Part List

| | |
|---|---|
| A  | B  |
| TOP FRAME =1PC | RIGHT LEG =1PC |
| C  | D  |
| LEFT LEG =1PC | SHELF & BOTTOM =2PCS |
| E  | F  |
| BACK PANEL (UPPER) =1PC | BACK PANEL (LOWER) =1PC |
| G  | H  |
| FRAME OF BASKETS =3PCS | BOTTOM OF BASKETS =3PCS |

# ASSEMBLY INSTRUCTION

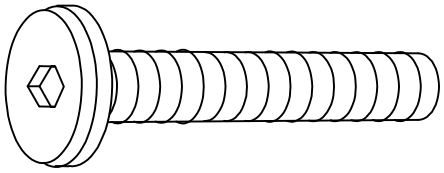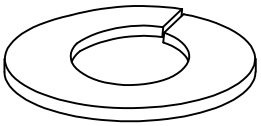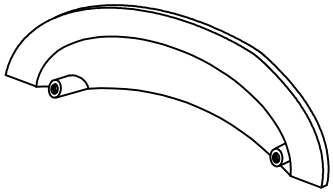
## Hardware List

| | |
|---|---|
| ①  | ②  |
| WOODEN DOLWEL 8 X 30 =12PCS | BOLT 1/4" X 30 =16PCS |
| ③  | ④  |
| SPRING WASHER =16PCS | FLAT WASHER =16PCS |
| ⑤  | ⑥  |
| ALLEN KEY K4 X 90 =1PC | HANDLE= 3PCS |

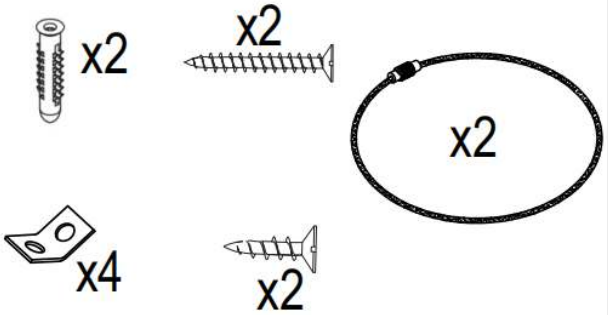
| | | |
|---|---|---|
| ⑦  | ⑧  | ⑨   |
| BOLT OF HANDLE M4 X10=6PCS | MUSHROOM SCREW M3.5 X15=26PCS | ANTITIP KIT =2SETS |

# ASSEMBLY INSTRUCTION
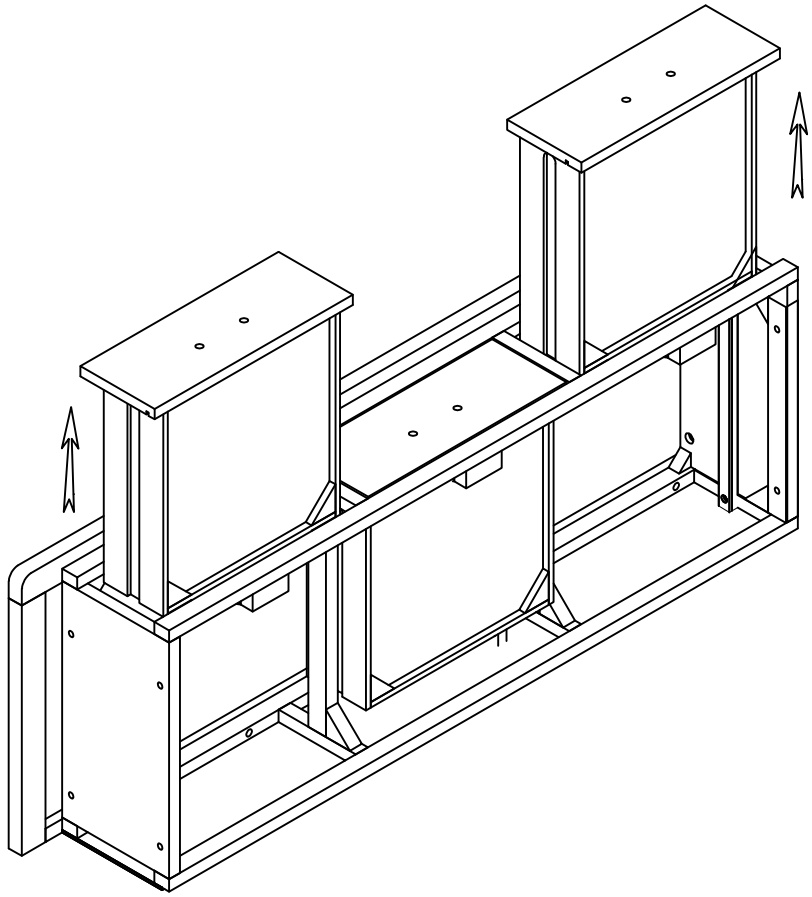
## Step 1



## Step 2

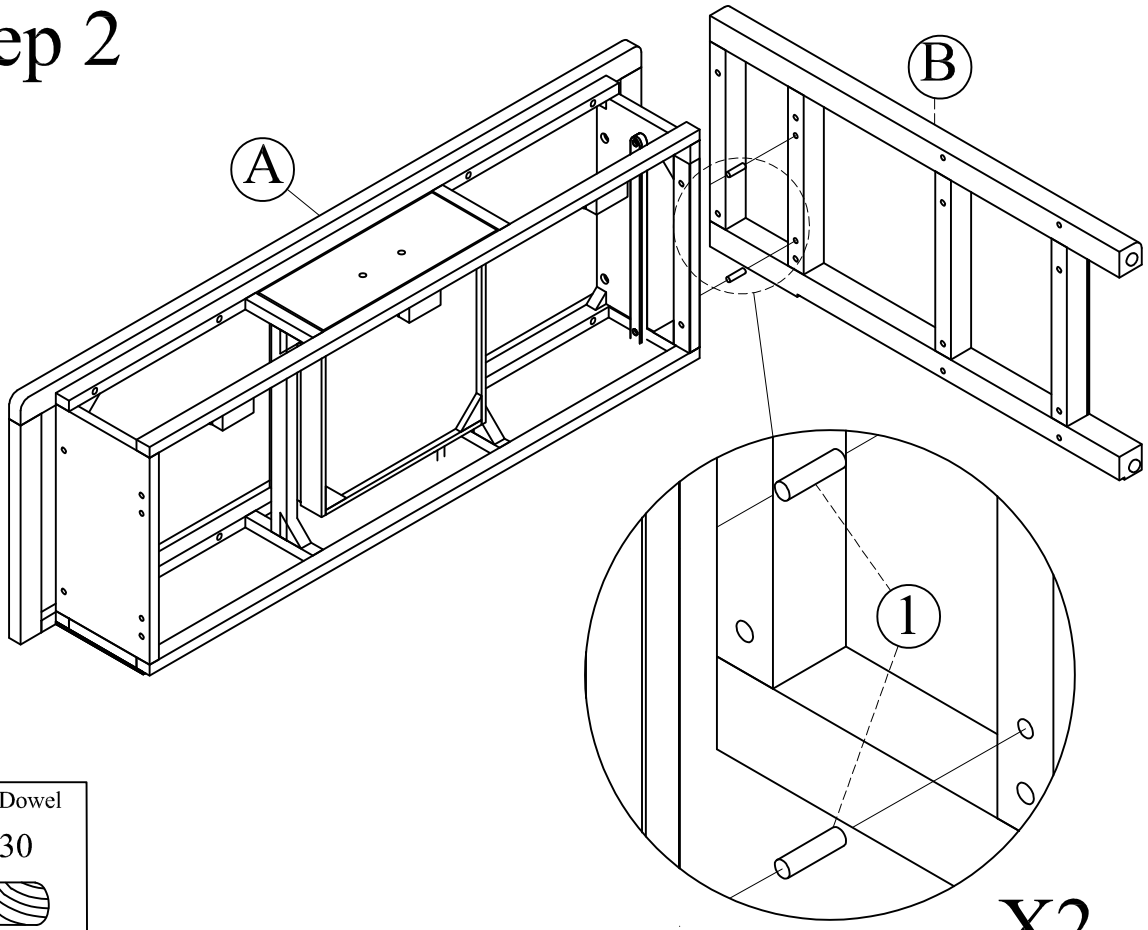


Wooden Dowel

∅8 x 30




① x 2

X2

# ASSEMBLY INSTRUCTION

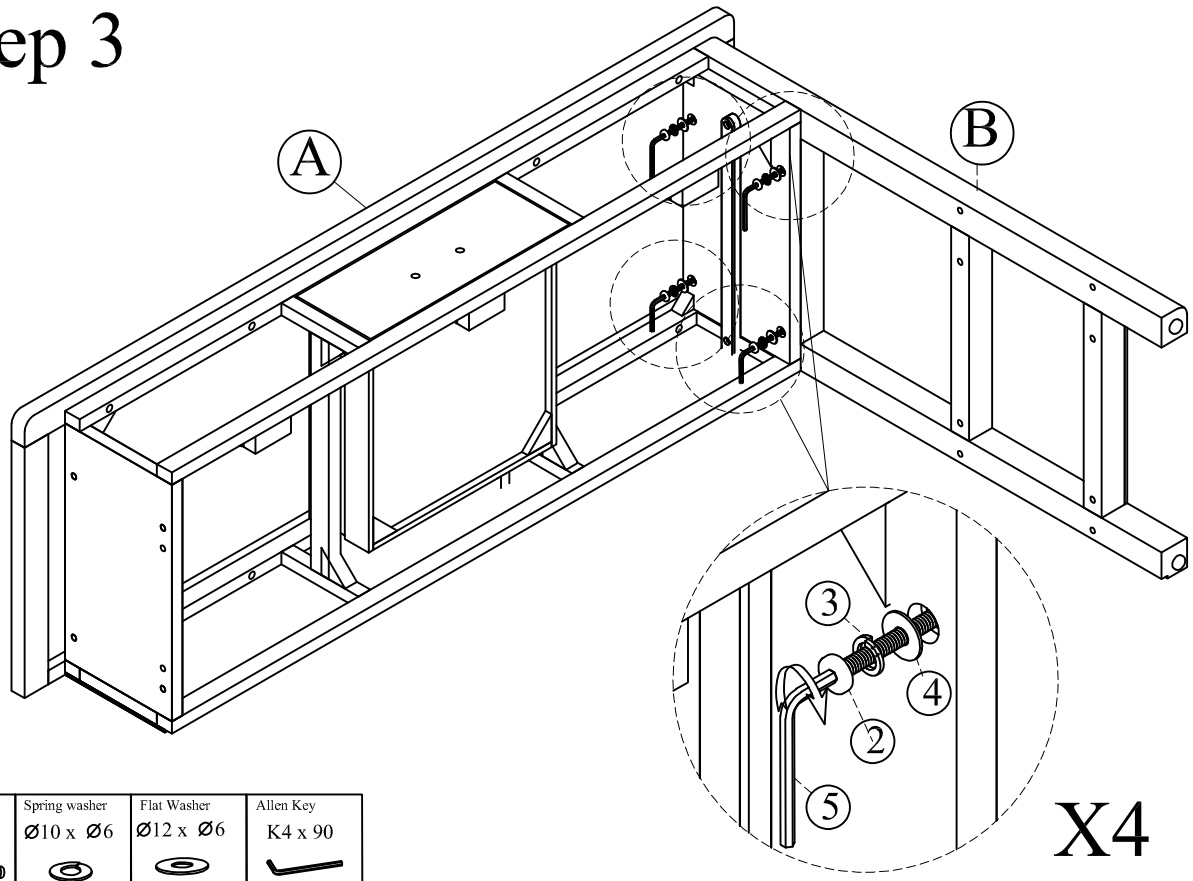
## Step 3




X4

| Bolt | Spring washer | Flat Washer | Allen Key |
|---|---|---|---|
| 1/4 x 30 | Ø10 x Ø6 | Ø12 x Ø6 | K4 x 90 |
| ② x 4 | ③ x 4 | ④ x 4 | ⑤ x 1 |

## Step 4

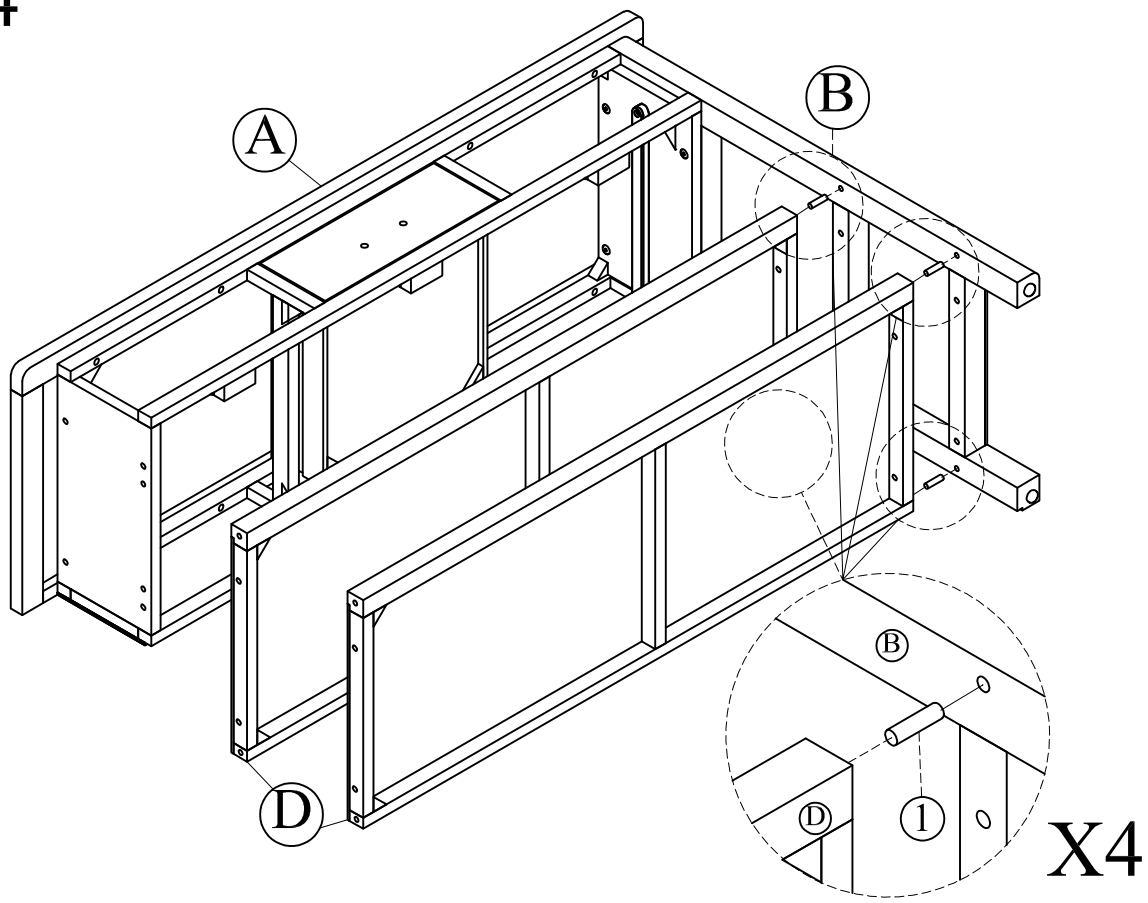



X4

| Wooden Dowel |
|---|
| Ø8 x 30 |
| ① x 4 |


# ASSEMBLY INSTRUCTION
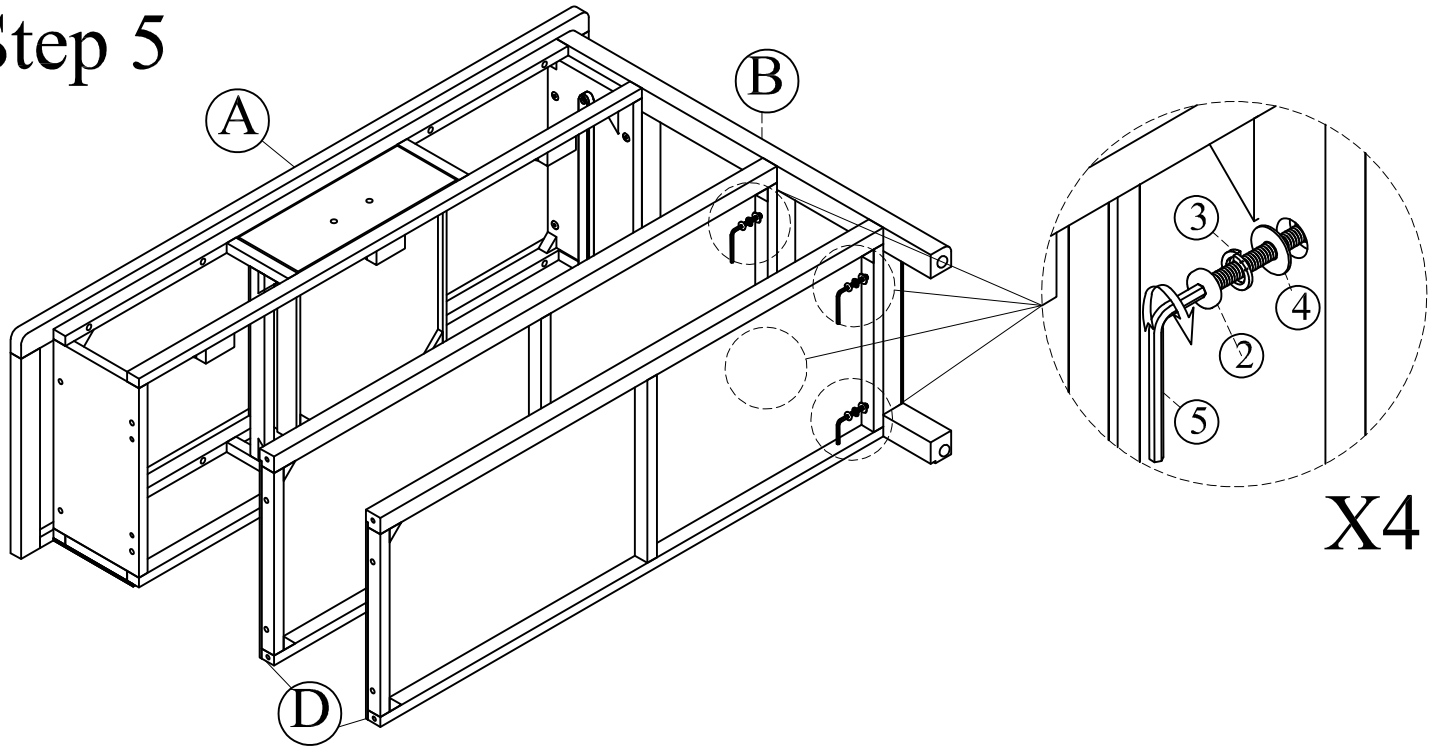
## Step 5




| Bolt | Spring washer | Flat Washer | Allen Key |
|---|---|---|---|
| 1/4 x 30 | Ø10 x Ø6 | Ø12 x Ø6 | K4 x 90 |
| ② x 4 | ③ x 4 | ④ x 4 | ⑤ x 1 |


## Step 6

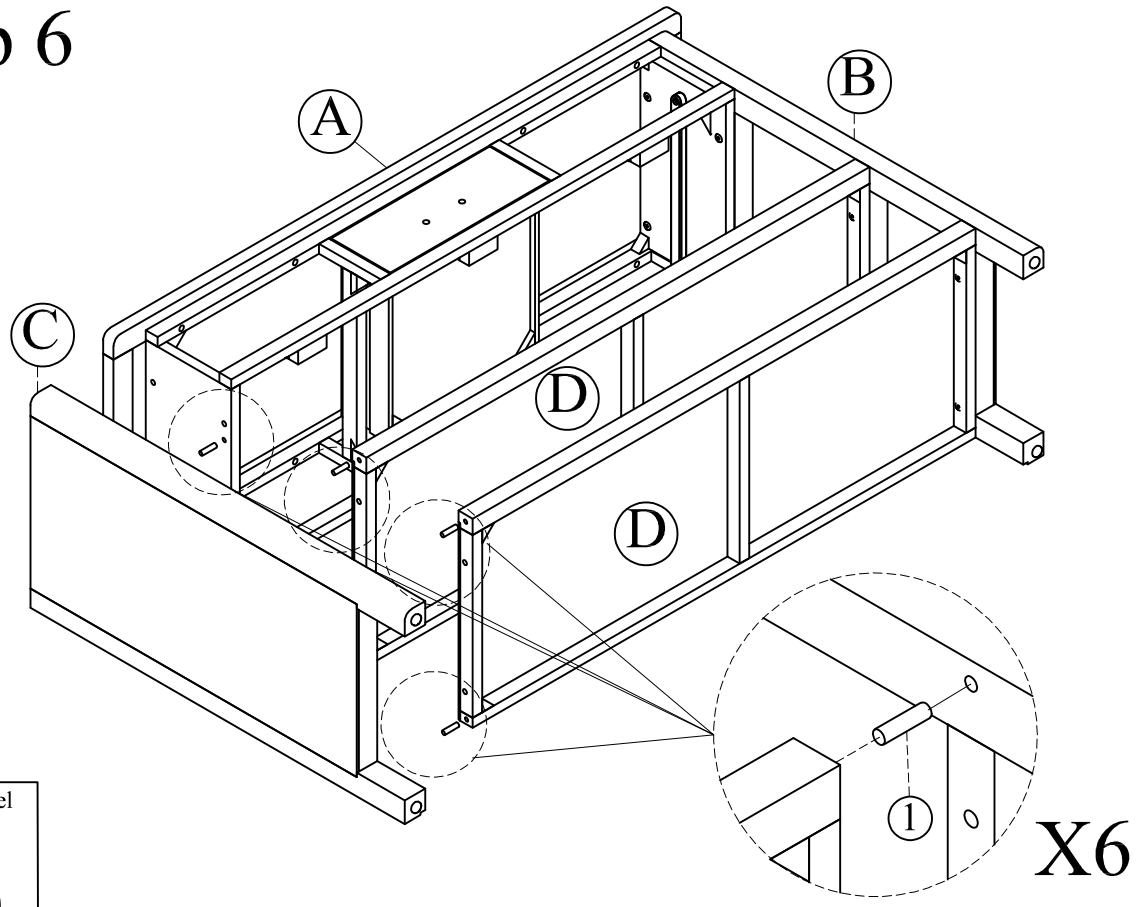



| Wooden Dowel |
|---|
| Ø8 x 30 |
| ① x 6 |

# ASSEMBLY INSTRUCTION
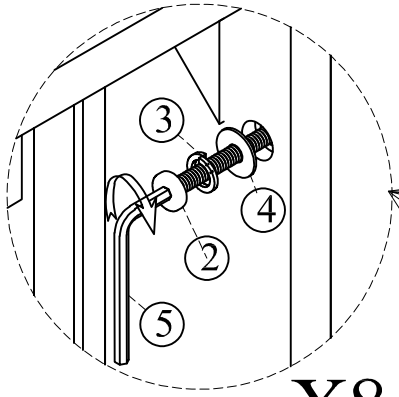
## Step 7






X8

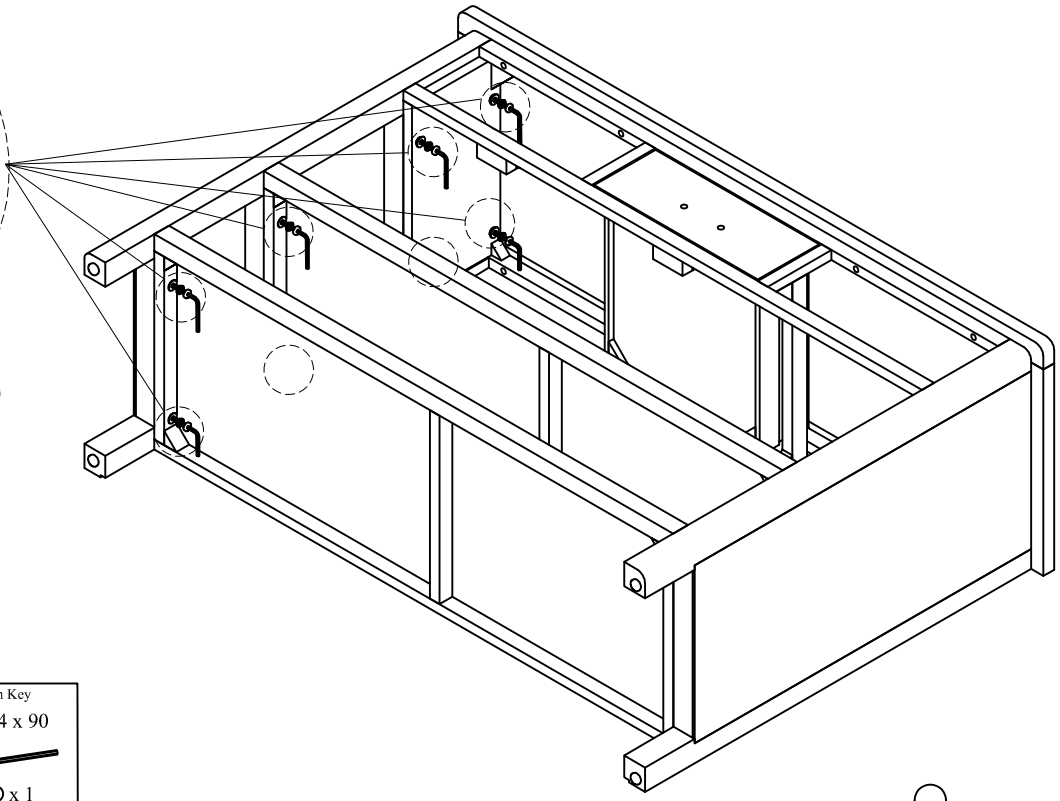

| Bolt | Spring washer | Flat Washer | Allen Key |
|---|---|---|---|
| 1/4 x 30 | Ø10 x Ø6 | Ø12 x Ø6 | K4 x 90 |
| ② x 8 | ③ x 8 | ④ x 8 | ⑤ x 1 |

## Step 8

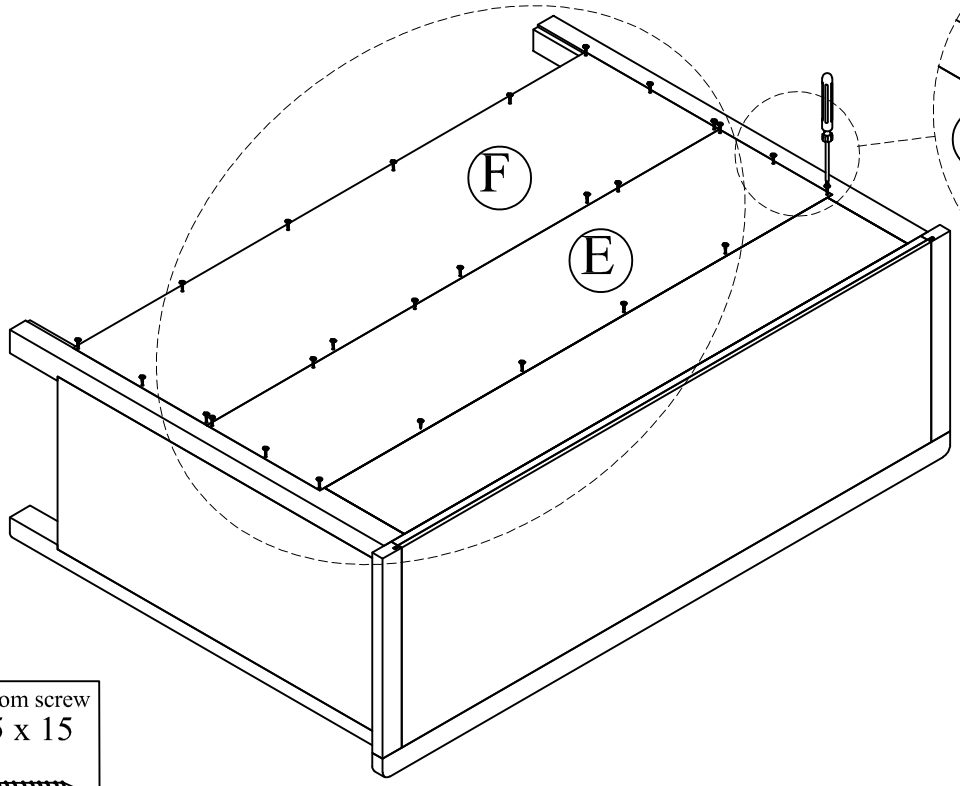

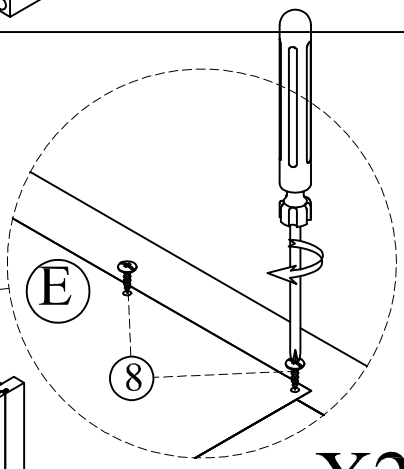




X26


| Mushroom screw |
|---|
| M3.5 x 15 |
| ⑧ x 26 |


# ASSEMBLY INSTRUCTION
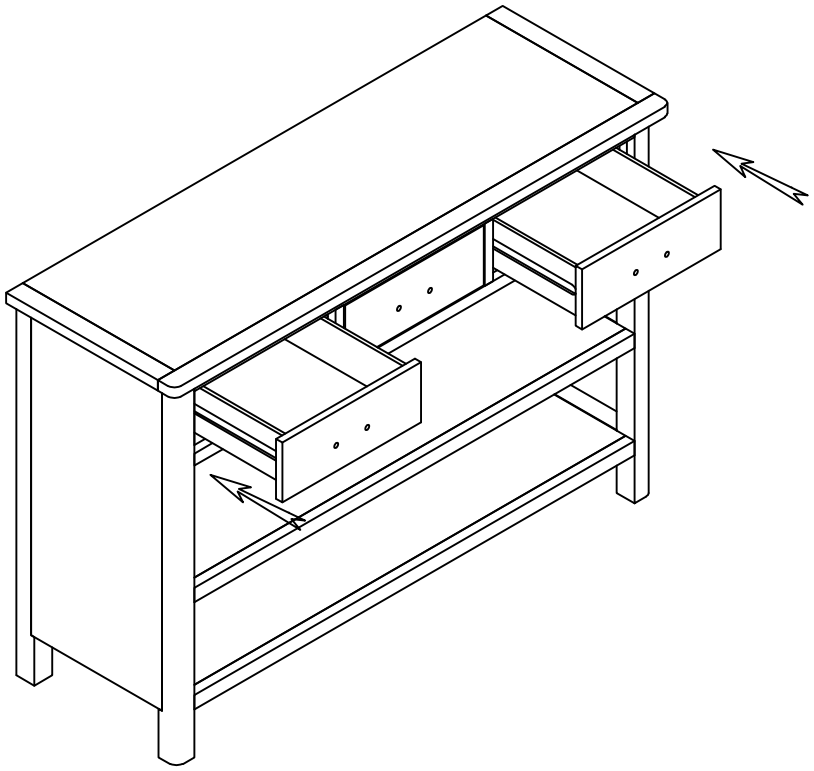
## Step 9




## Step 10

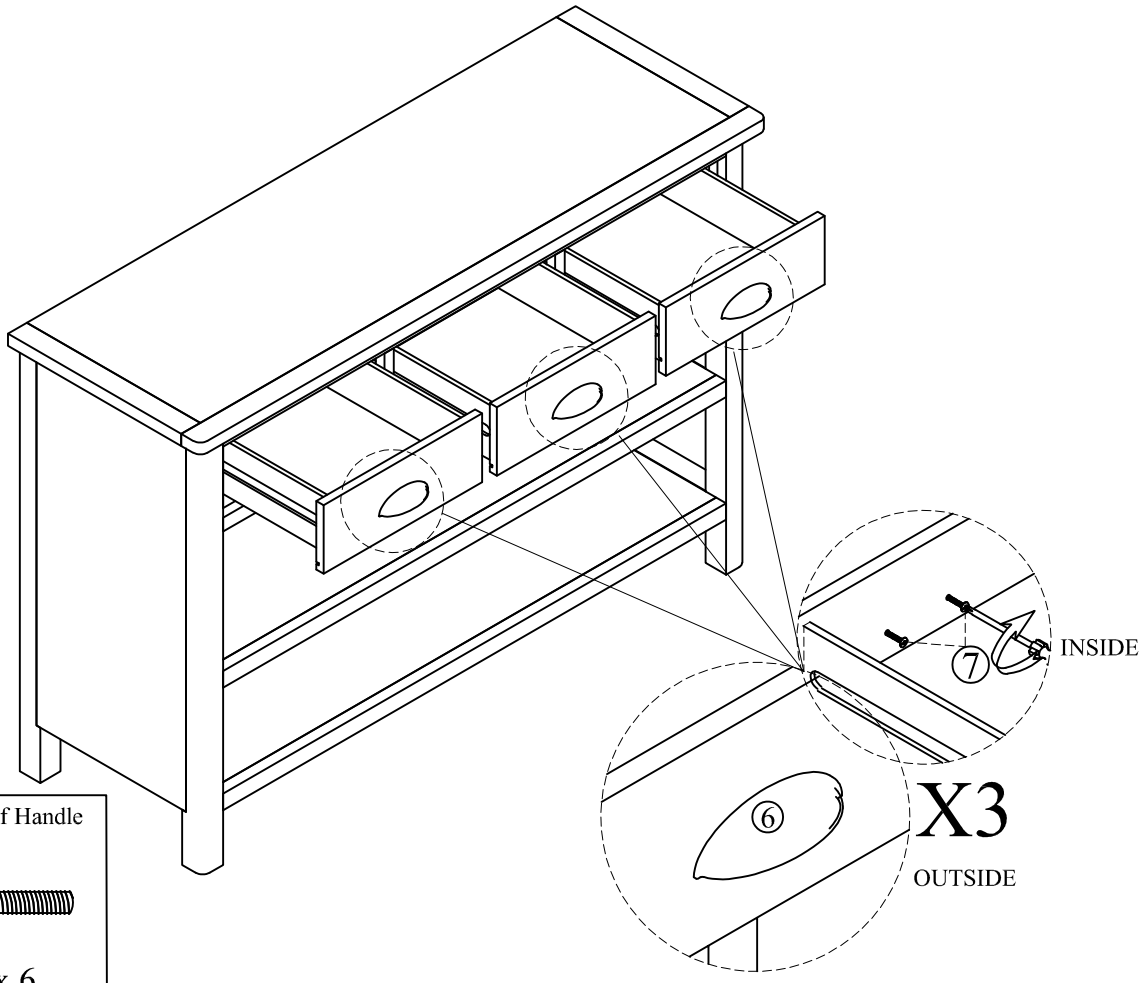


| Handle | Bolt of Handle |
| --- | --- |
|  |  |
| ⑥ x 3 | ⑦ x 6 |


# ASSEMBLY INSTRUCTION
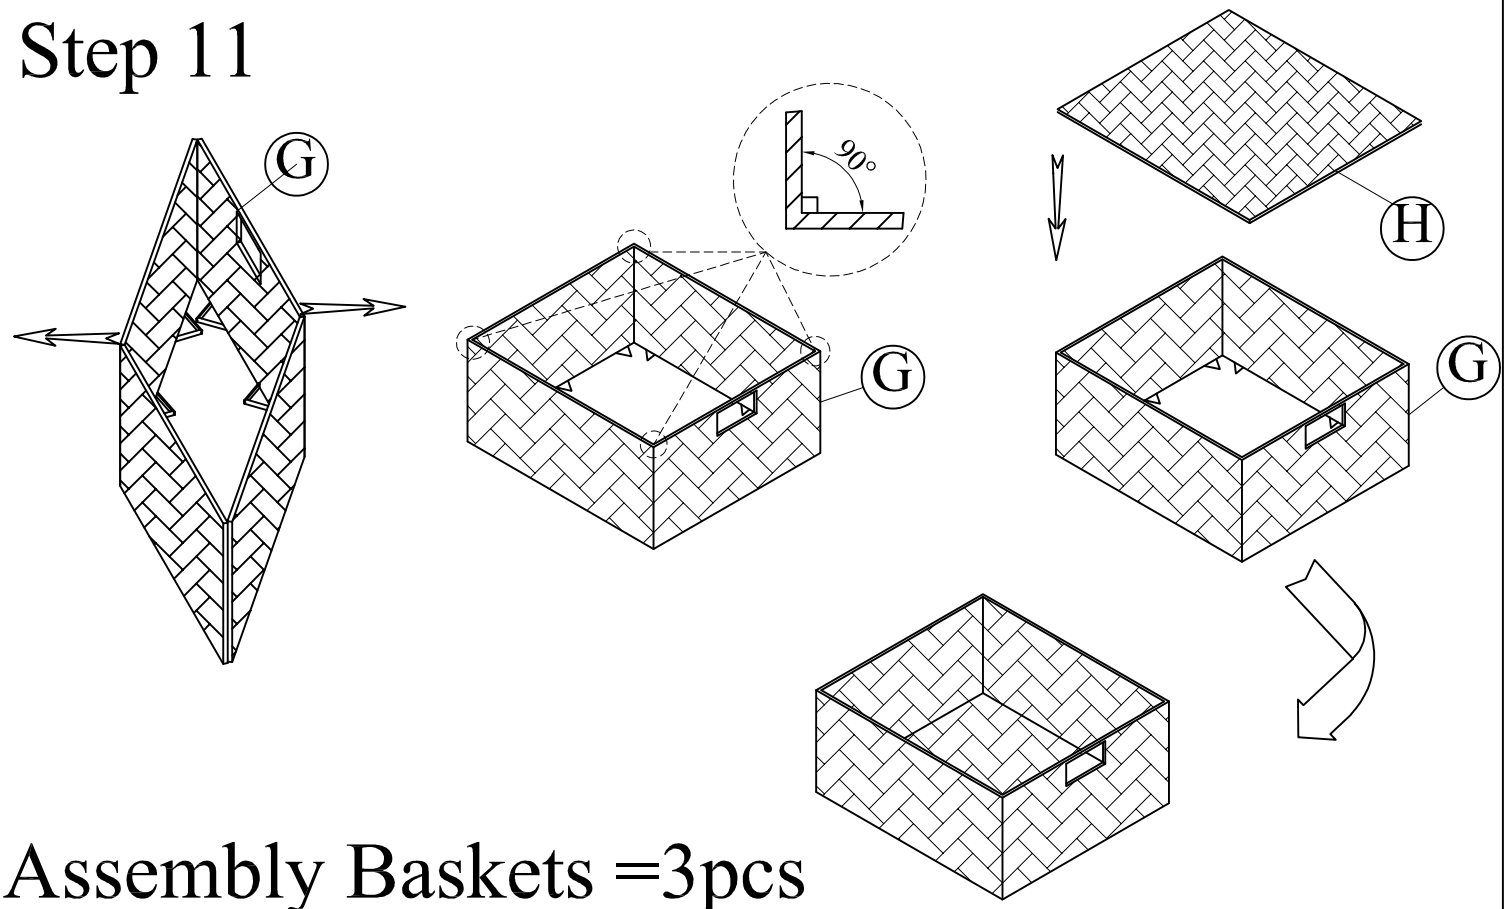
## Step 11





Assembly Baskets =3pcs

## Step 12

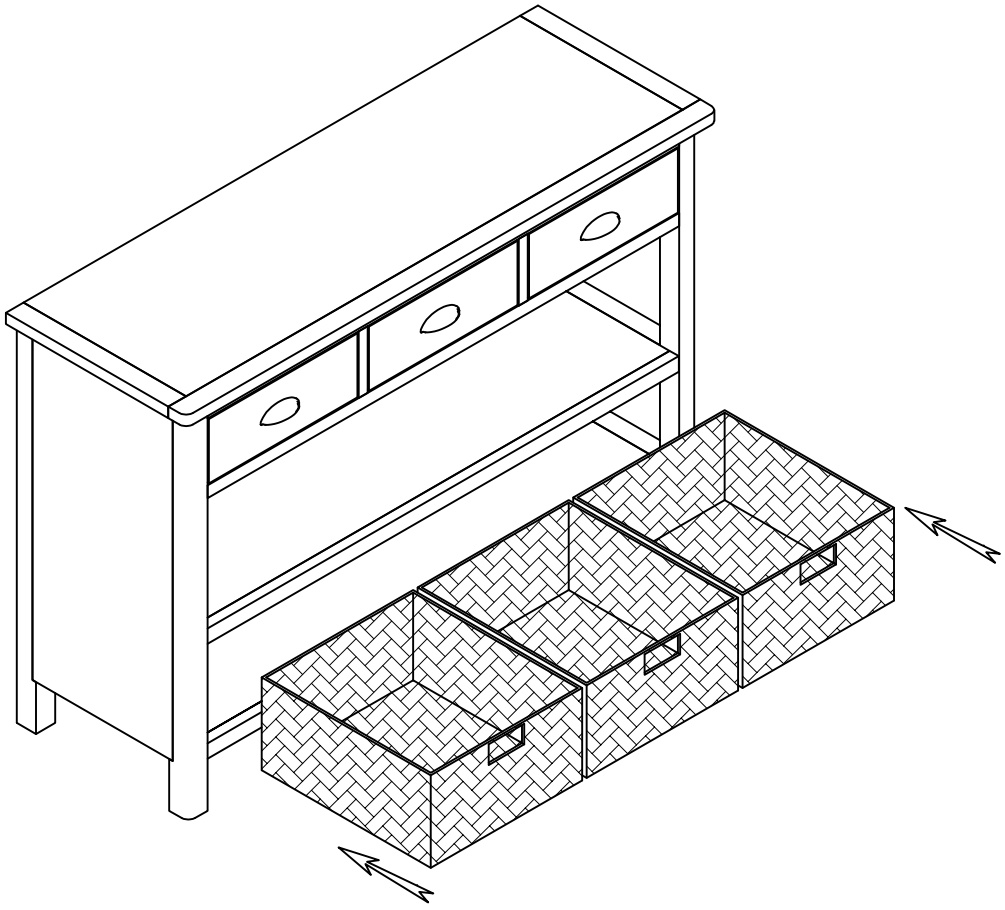


# ASSEMBLY INSTRUCTION
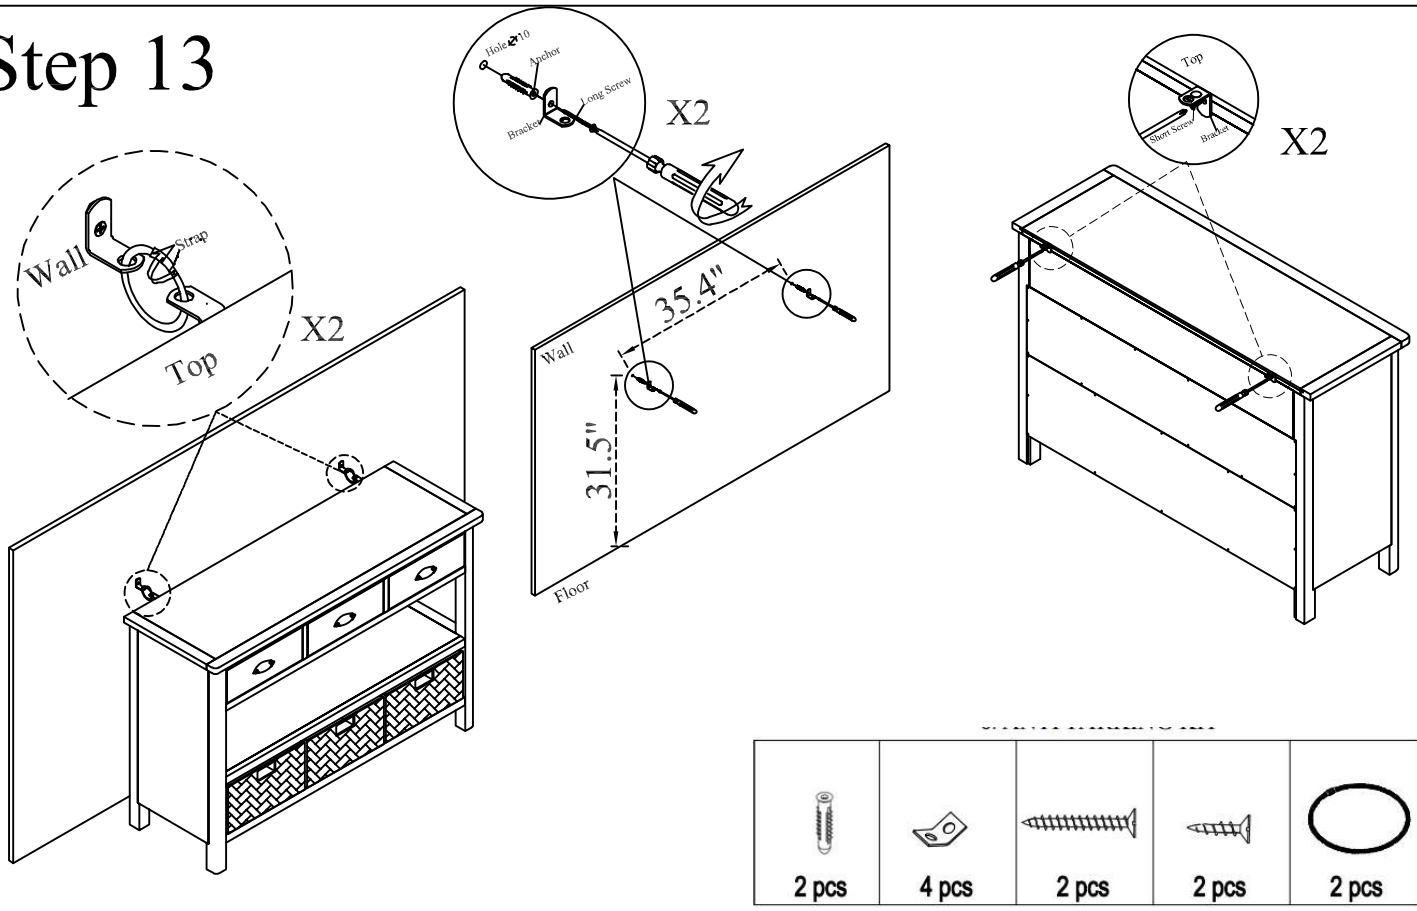
## Step 13




| | | | | |
|---|---|---|---|---|
| 2 pcs | 4 pcs | 2 pcs | 2 pcs | 2 pcs |

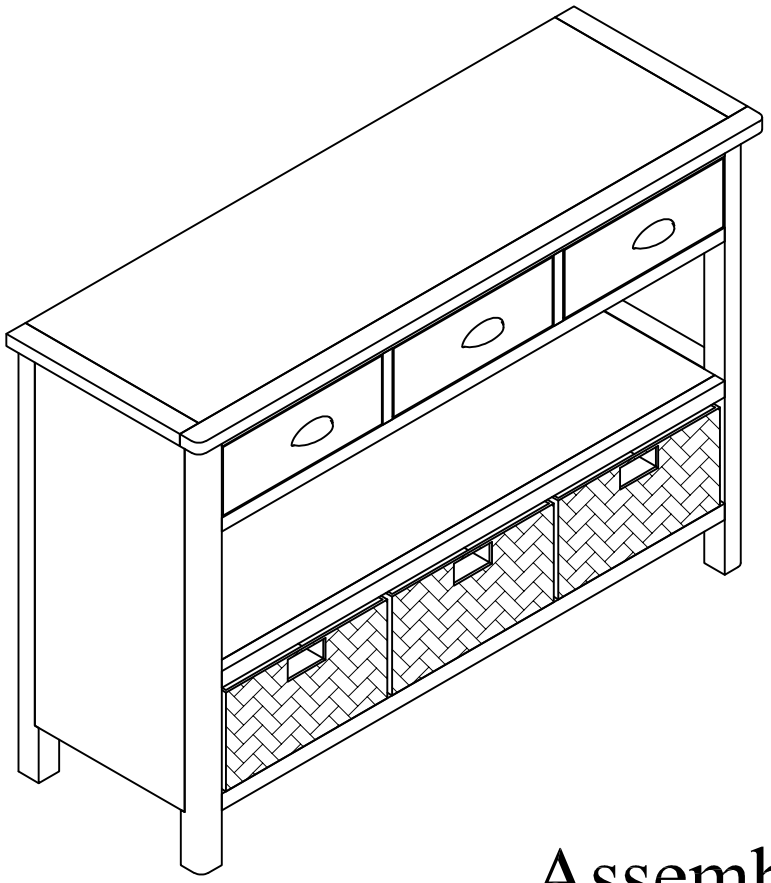

## Assembly Completed