


Tall Shoe Cabinet

ASSEMBLY INSTRUCTION

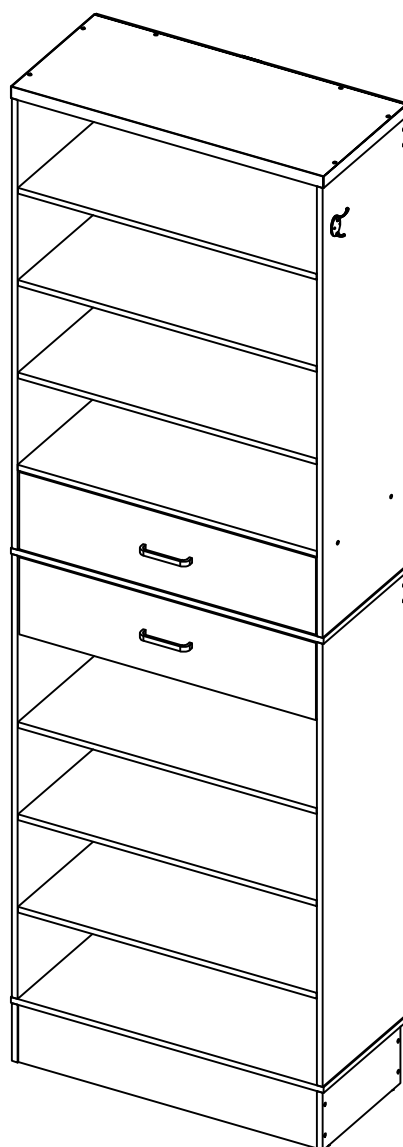

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

✉ toptohome@hotmail.com

Thank you for purchasing our products.


As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us from our store or [**toptohome@hotmail.com**](mailto:toptohome@hotmail.com) in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install, which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

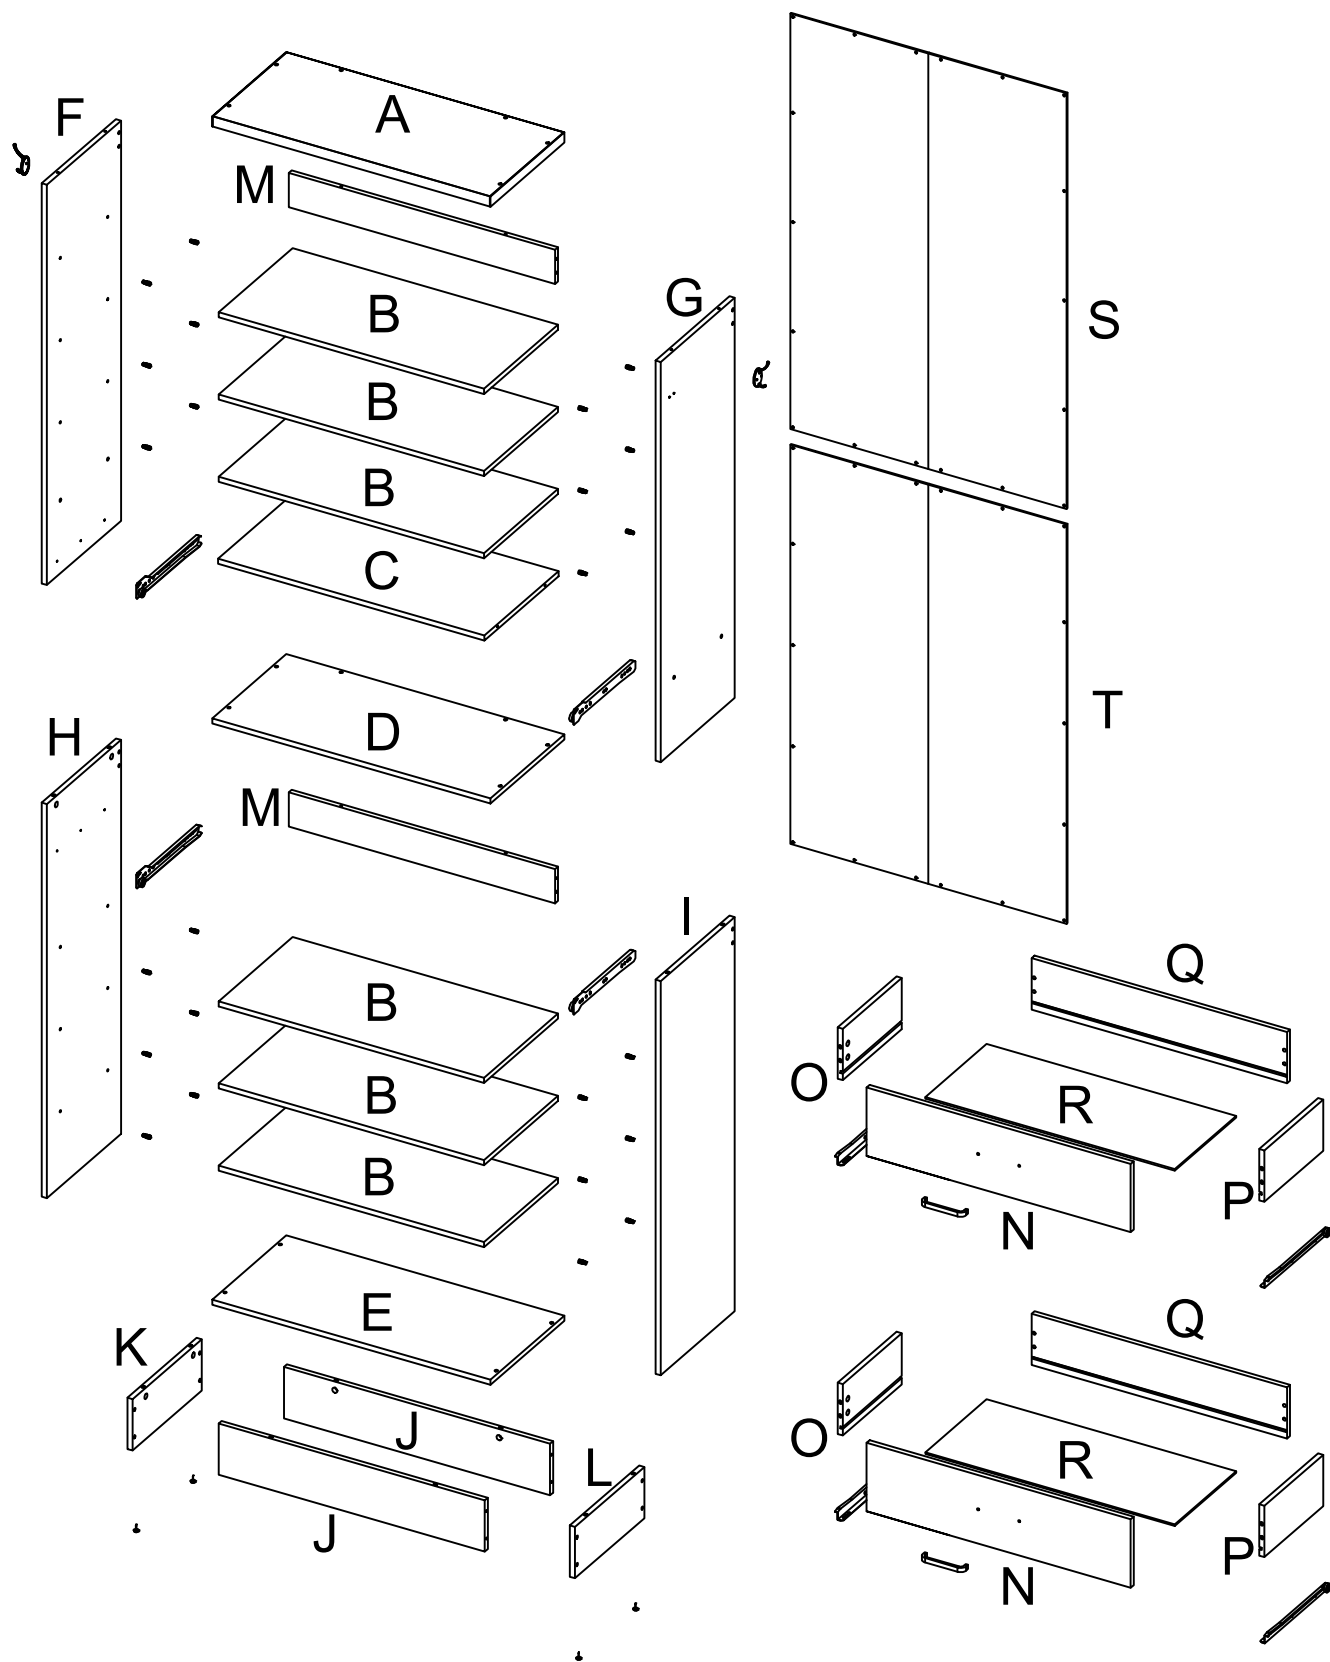


PART LIST


A x 1pc

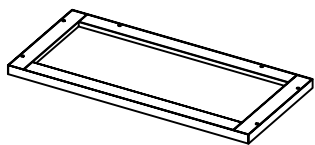


B x 6pcs

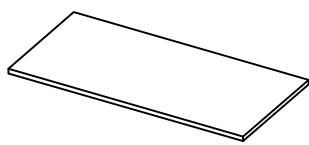


C x 1pc

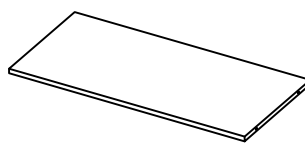


D x 1pc

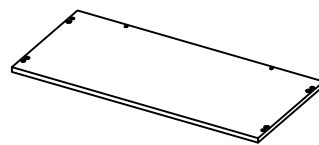


E x 1pc

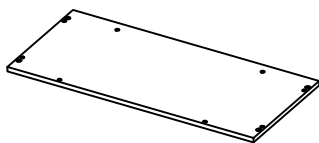


F x 1pc

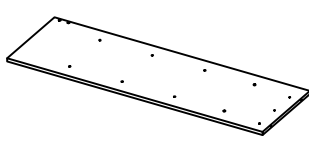


G x 1pc

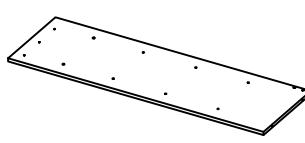


H x 1pc

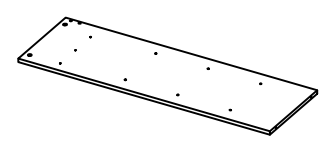


I x 1pc

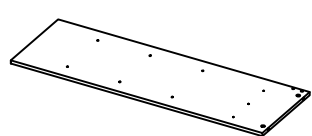


J x 2pcs

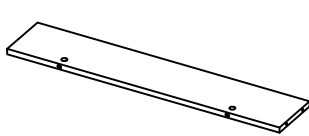


K x 1pc

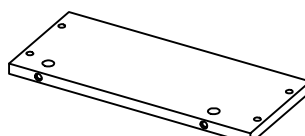


L x 1pc

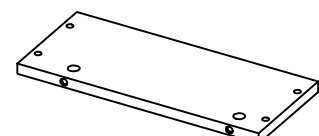


M x 2pcs

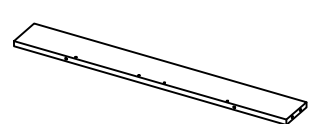


N x 2pcs

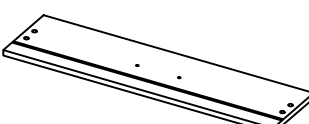


O x 2pcs

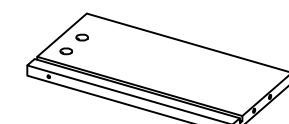


P x 2pcs

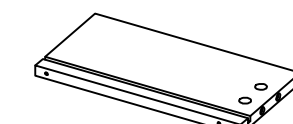


Q x 2pcs

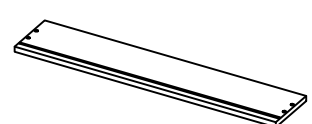


R x 2pcs

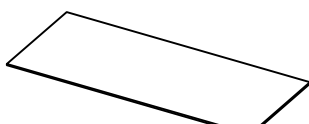

S x 1pc

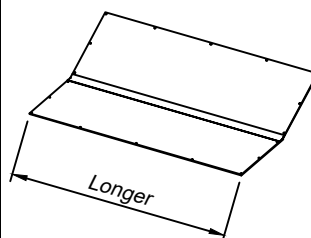


T x 1pc

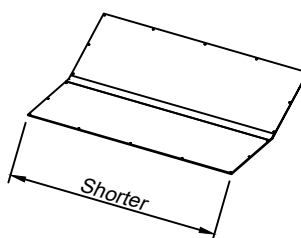

HARDWARE LIST


①



M6x40

38 pcs


②



M6x50

6 pcs


③

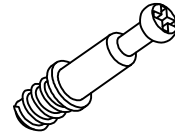

M6x28

20 pcs


④

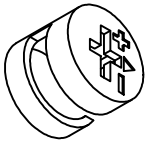

Ø12

20 pcs

⑤



M6

24 pcs


⑥



M3x16

36 pcs


⑦

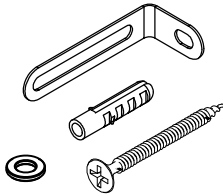

M4x40

2 pcs


⑧

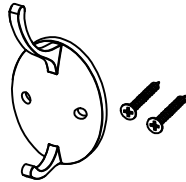

M4x16

2 pcs


⑨



Ø13

4 pcs


⑩



M4

1 pc

⑪

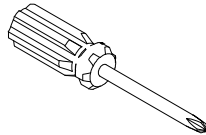

1 pc


⑫



M3x12

24 pcs

⑬

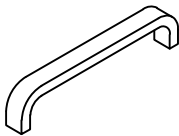

2 pcs


⑭



M4x15

4 pcs


⑮

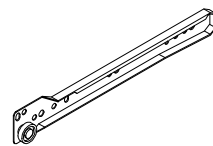

L250

2 pcs


⑯

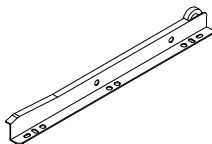

L250

2 pcs


⑰

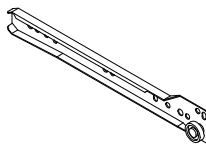

L250

2 pcs

⑱

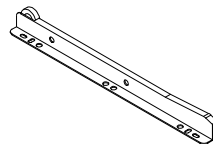


L250

2 pcs

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

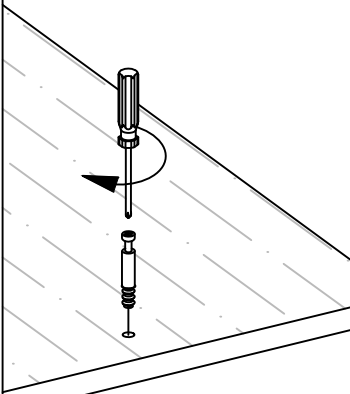

Push the male camlock into the entry hole.


2

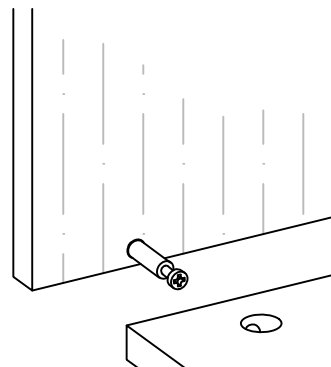

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

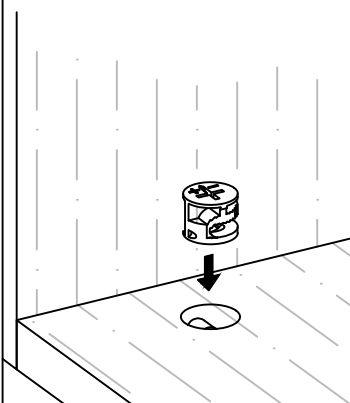


Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.






4

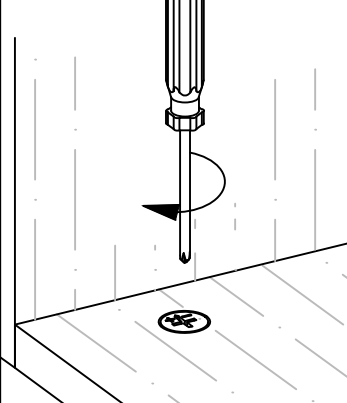

STEP 1

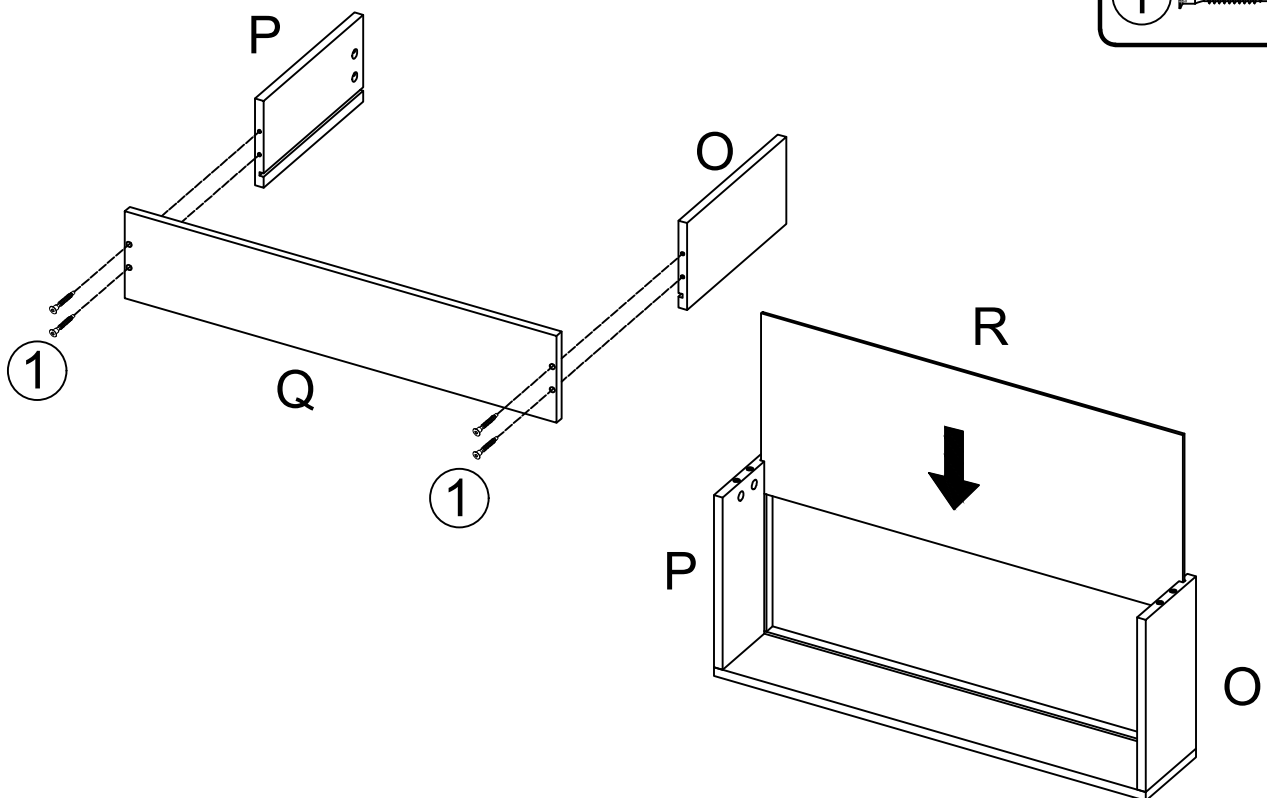


STEP 2

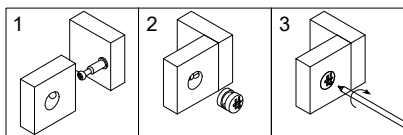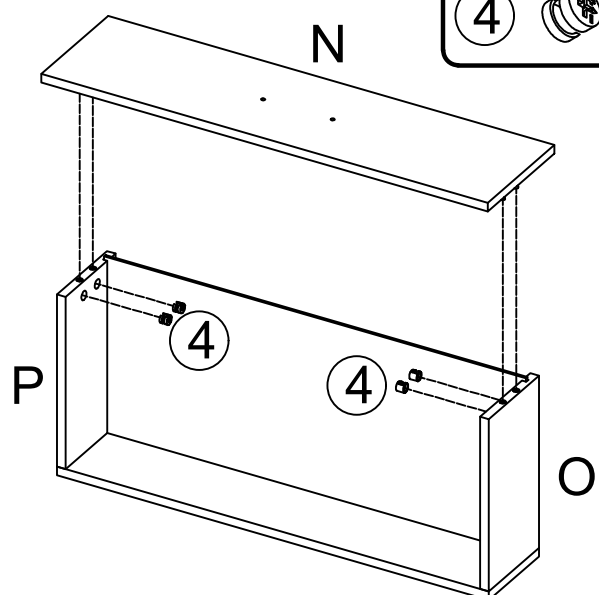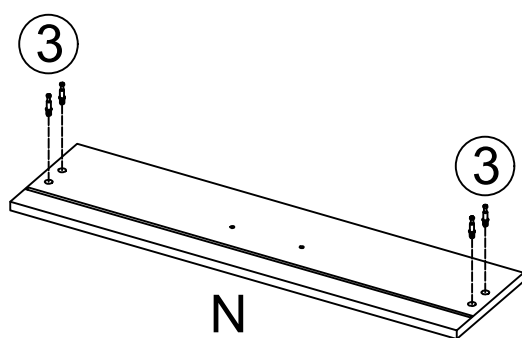


Cam Lock Fastening System

Please point the arrow upward to the mounting hole when installing Part ④. then use screwdriver to tighten it in the "+" direction.

STEP 3

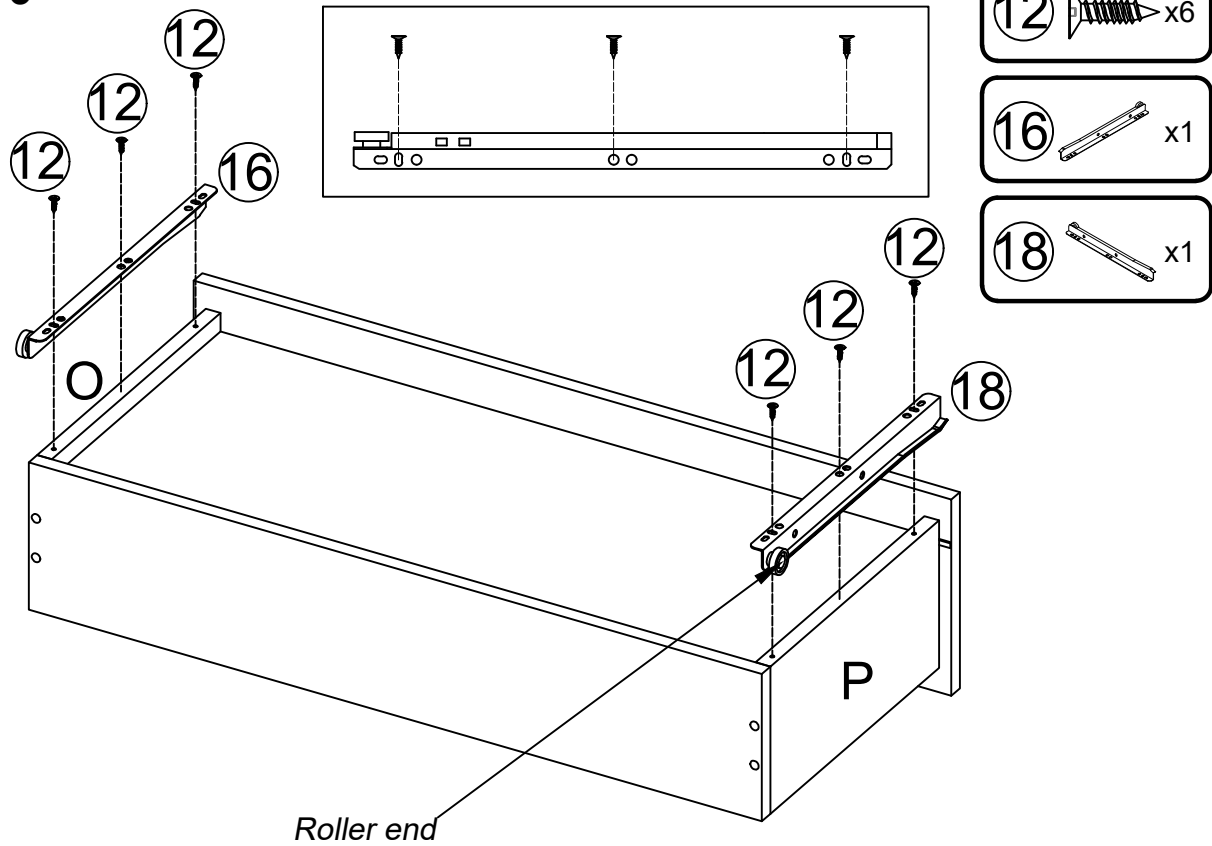



STEP 4

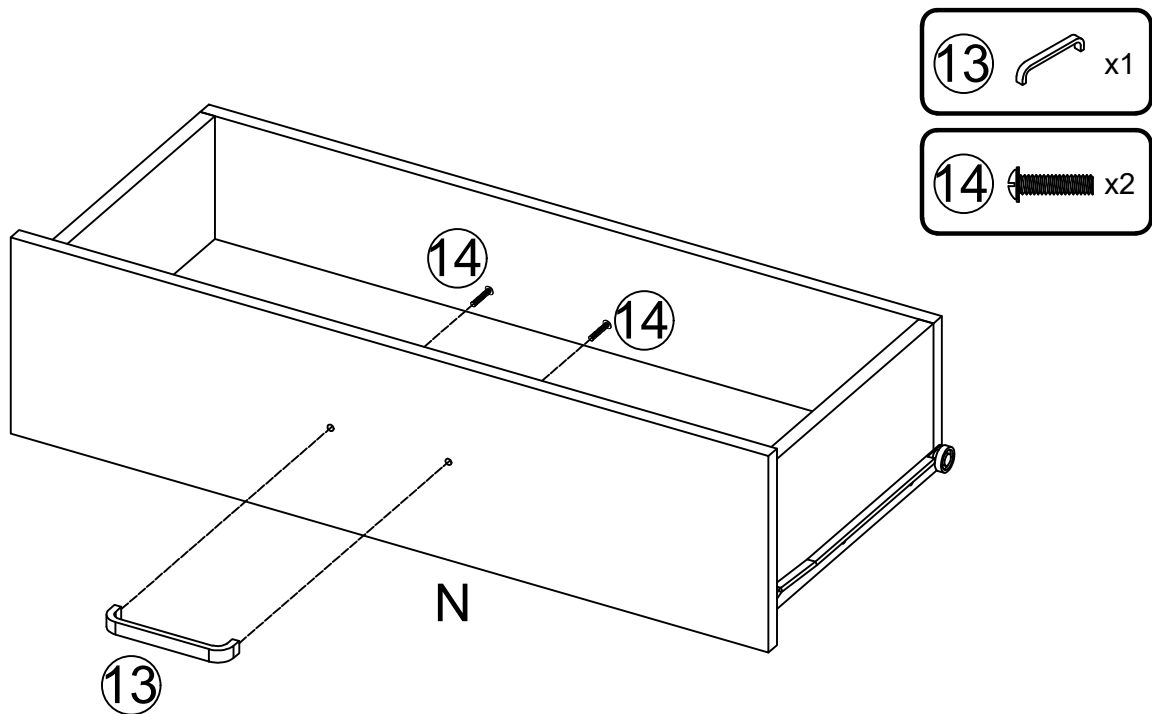

NOTICE:


The installation for all the two drawers is base on the one to four steps.

STEP 5

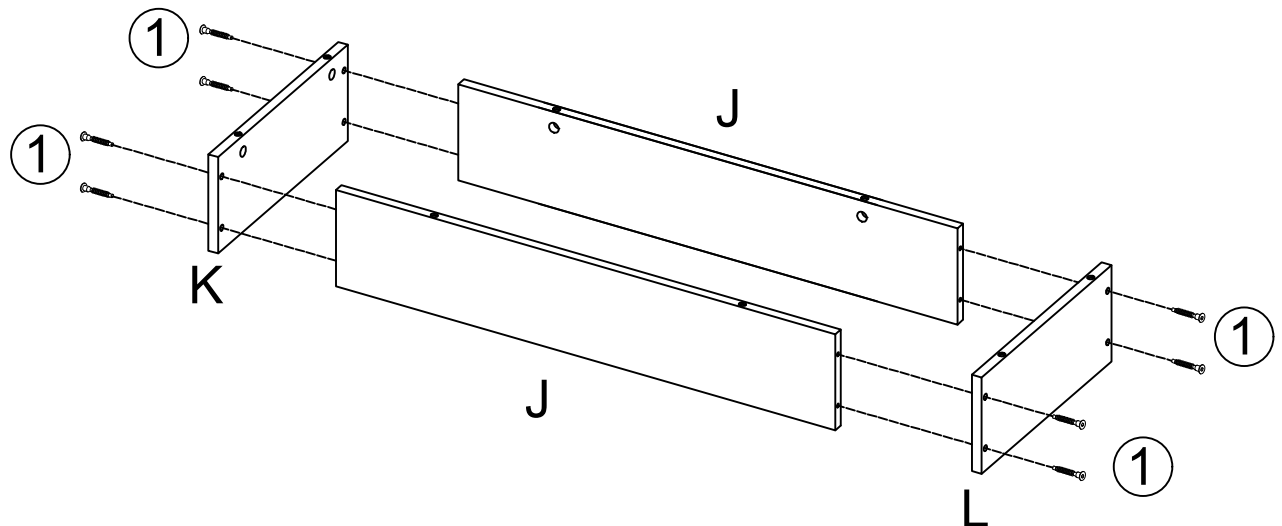


Keep the holes of the Part J, Part K and Part L toward this direction as shown.



STEP 6








Gently tap the Floor Protectors (9) at the bottom of side panels avoiding crack or damage of side panel.

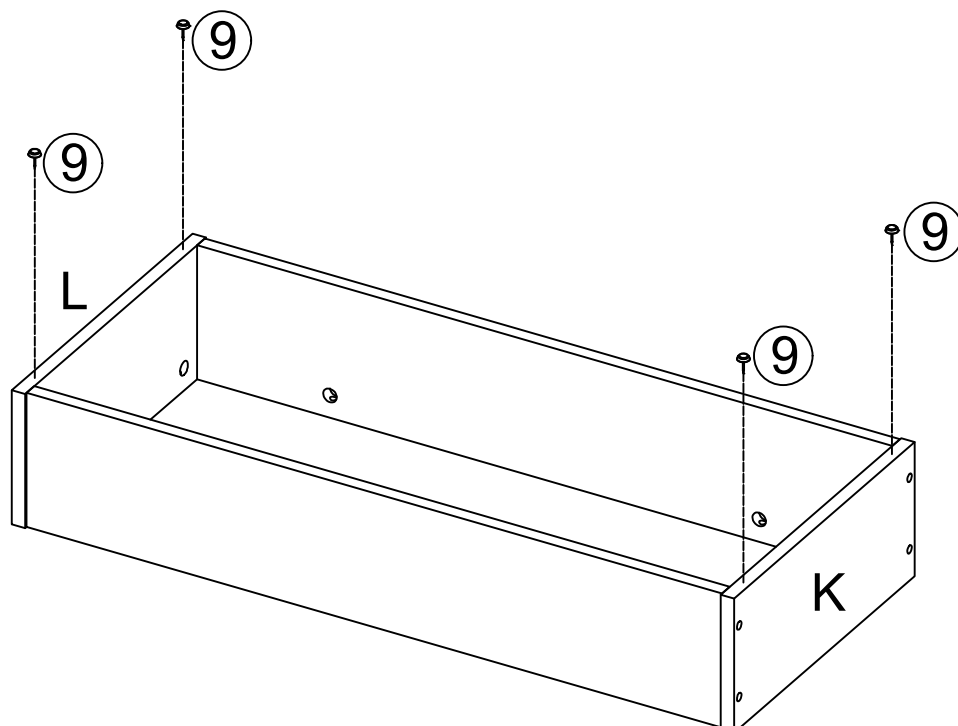



STEP 7

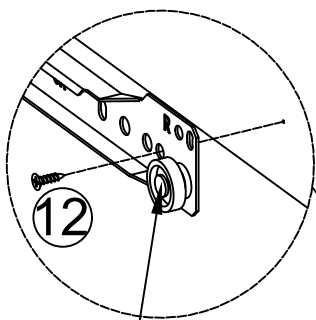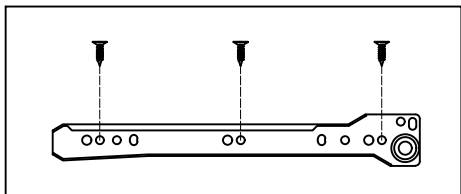






Roller is
bottom

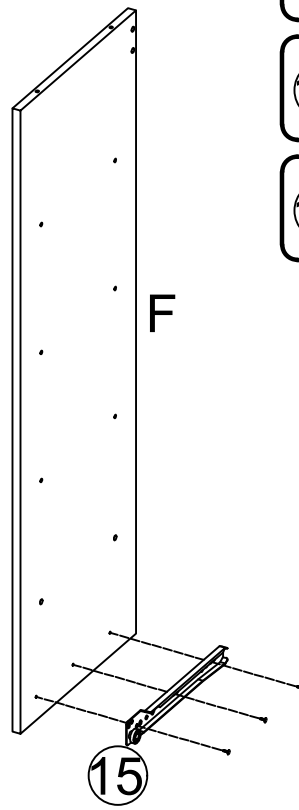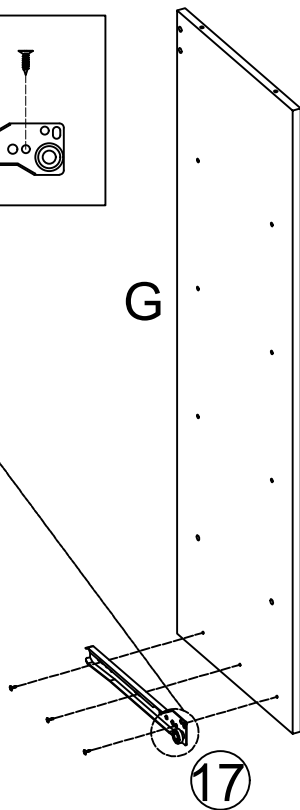



STEP 8

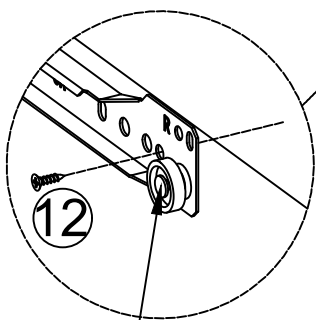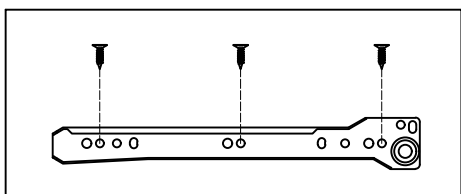



Roller is
bottom

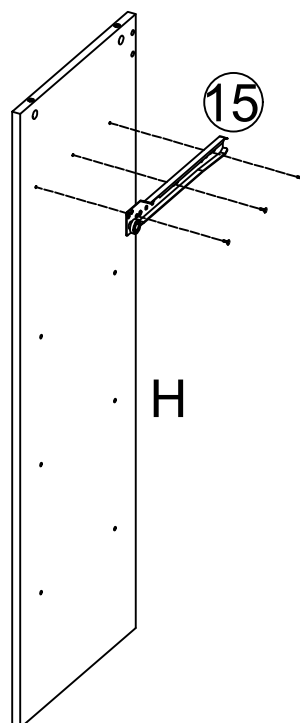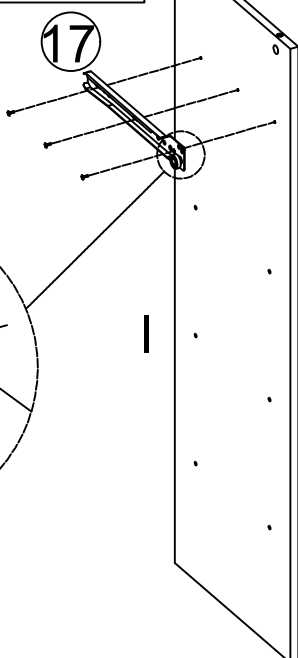



STEP 9

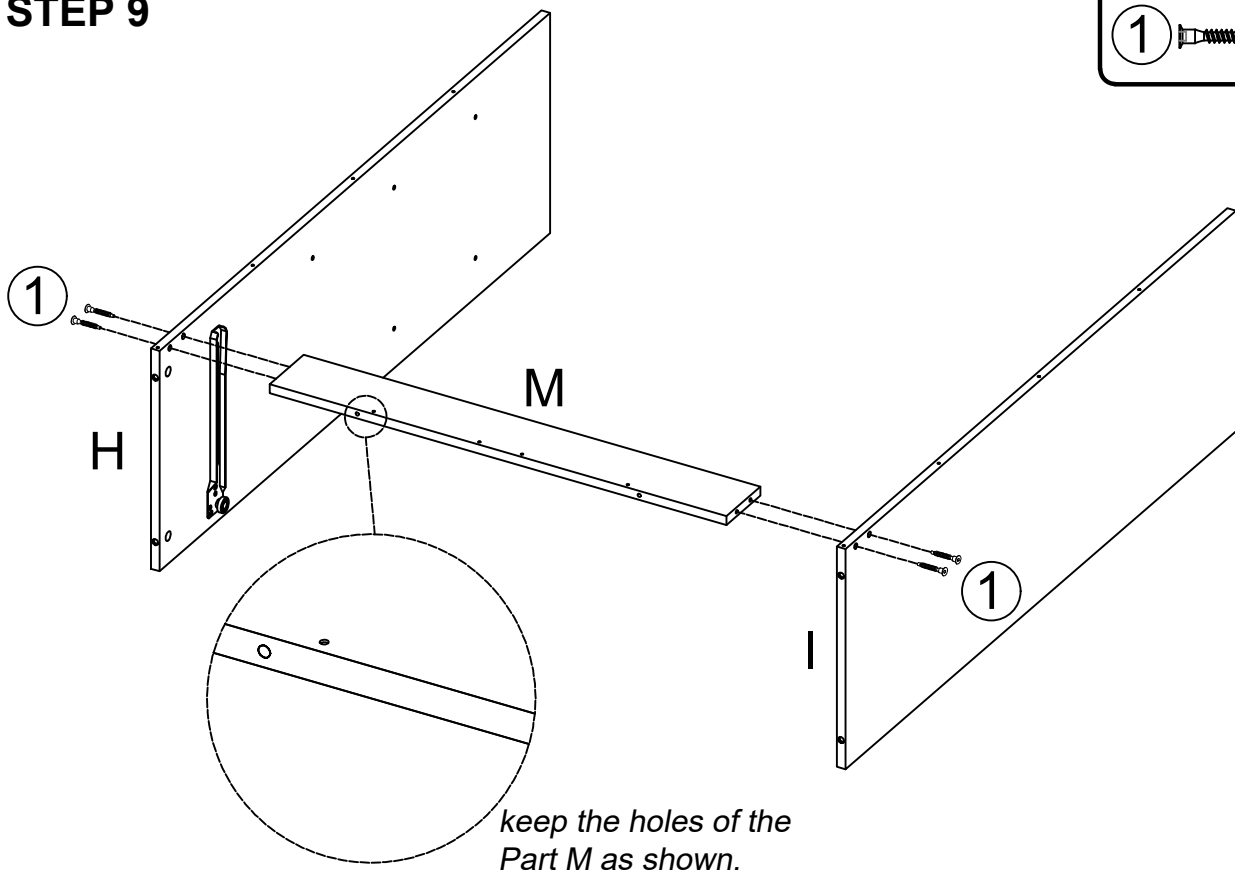



STEP 10

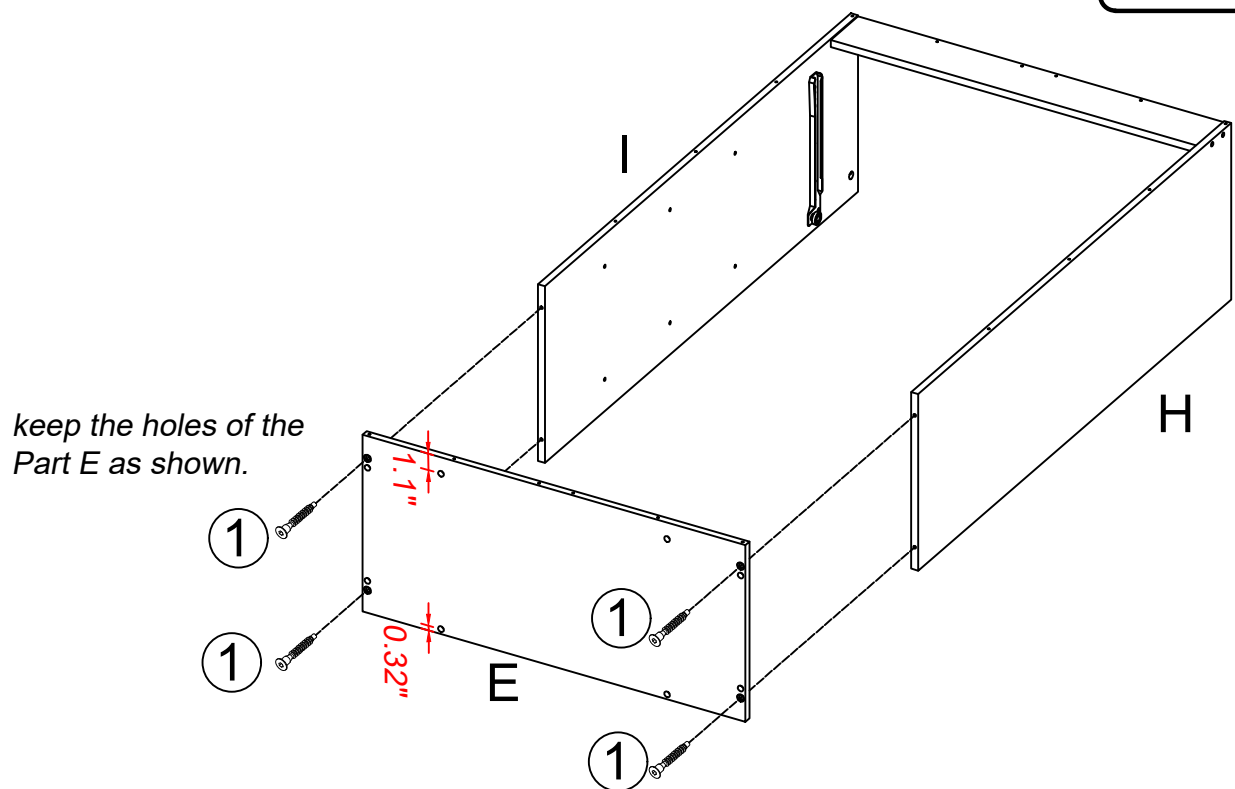



STEP 11

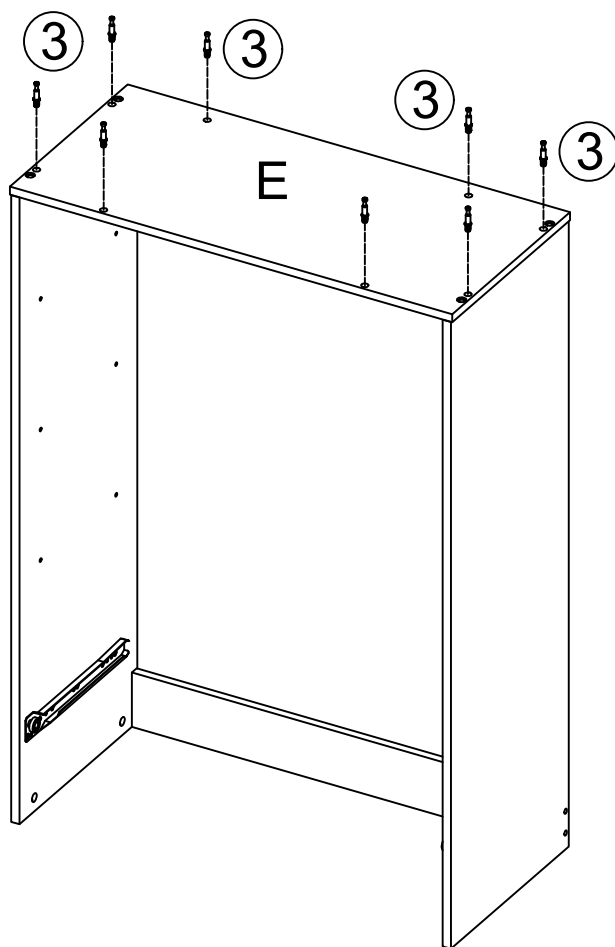



STEP 12

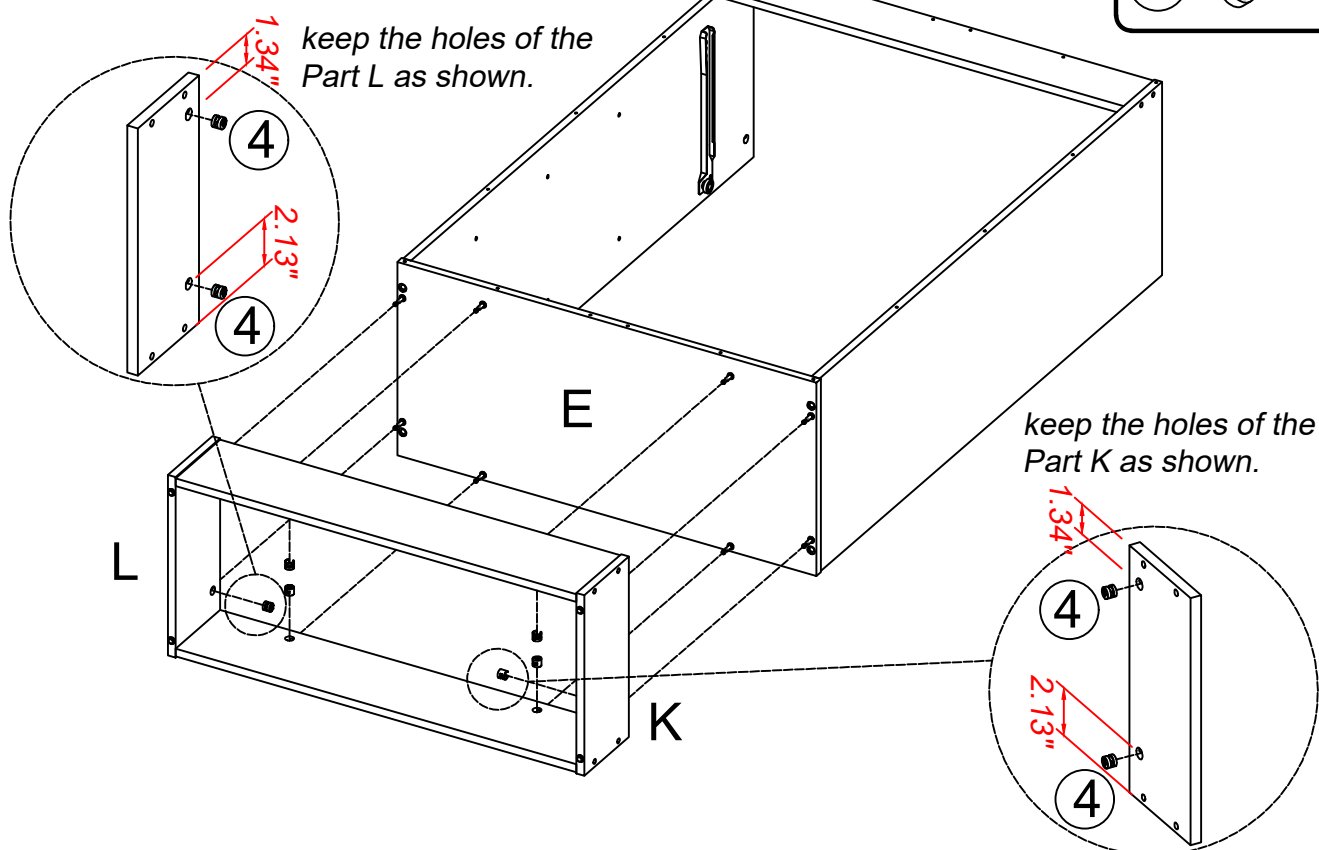



STEP 13

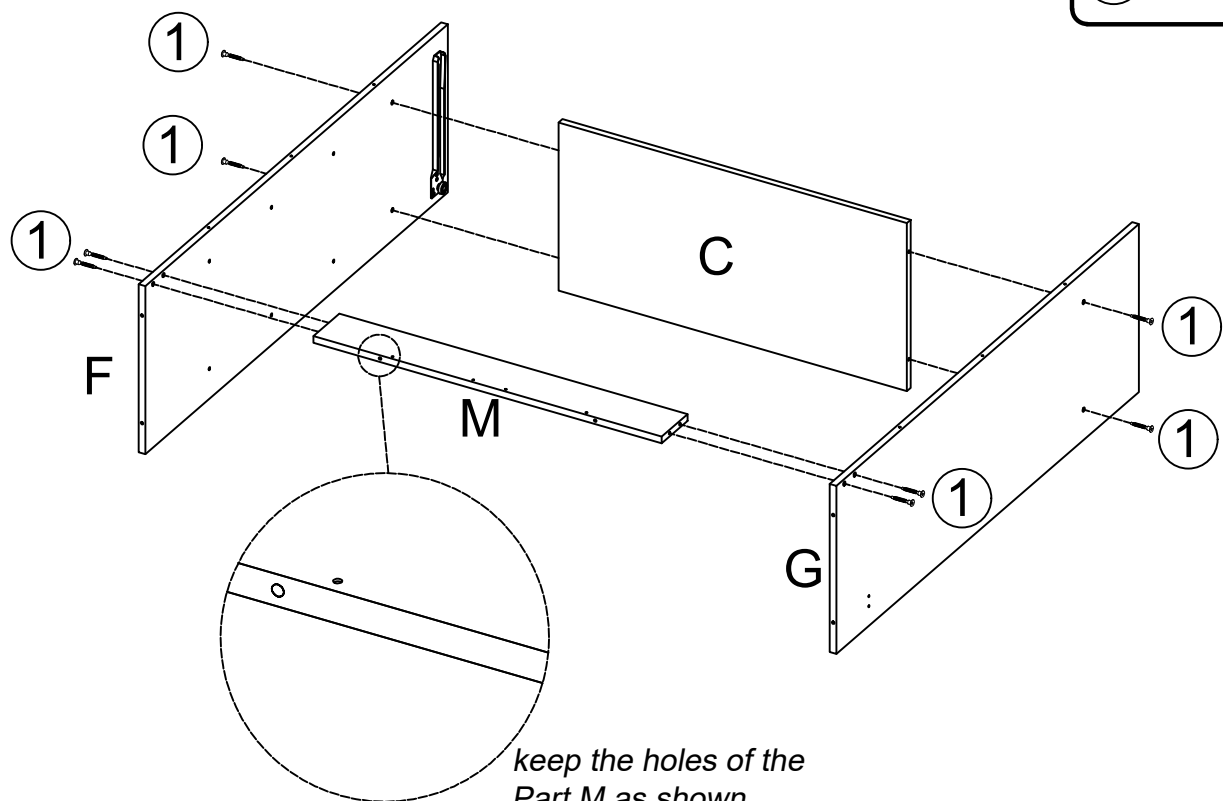



STEP 14

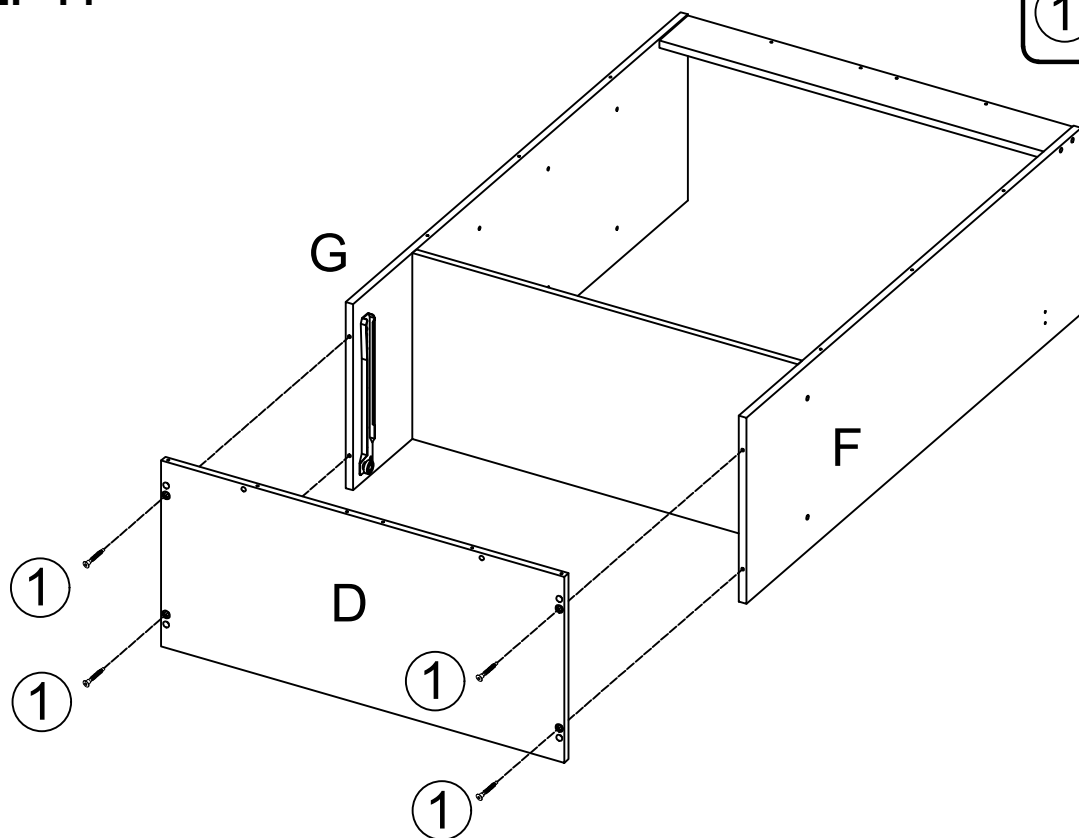


STEP 15

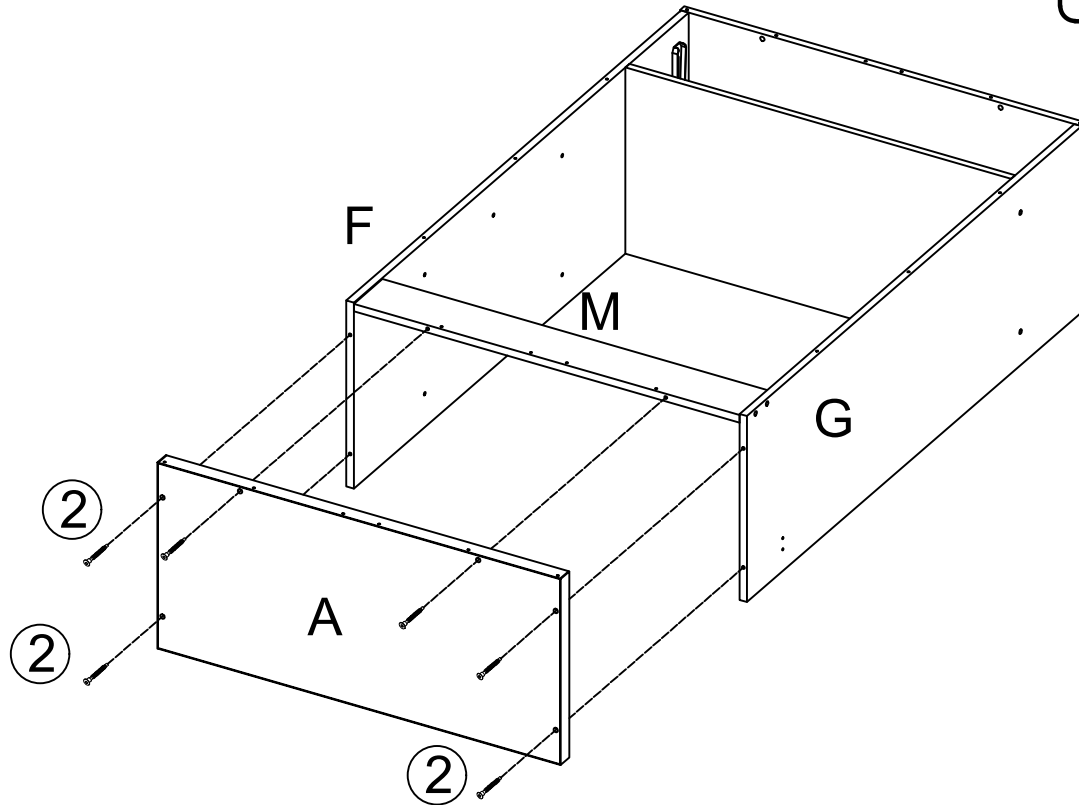


STEP 16

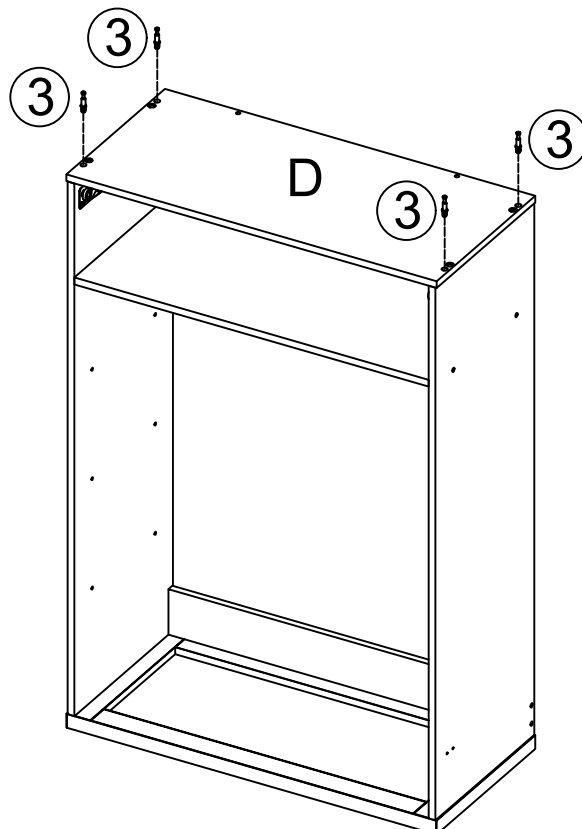


STEP 17

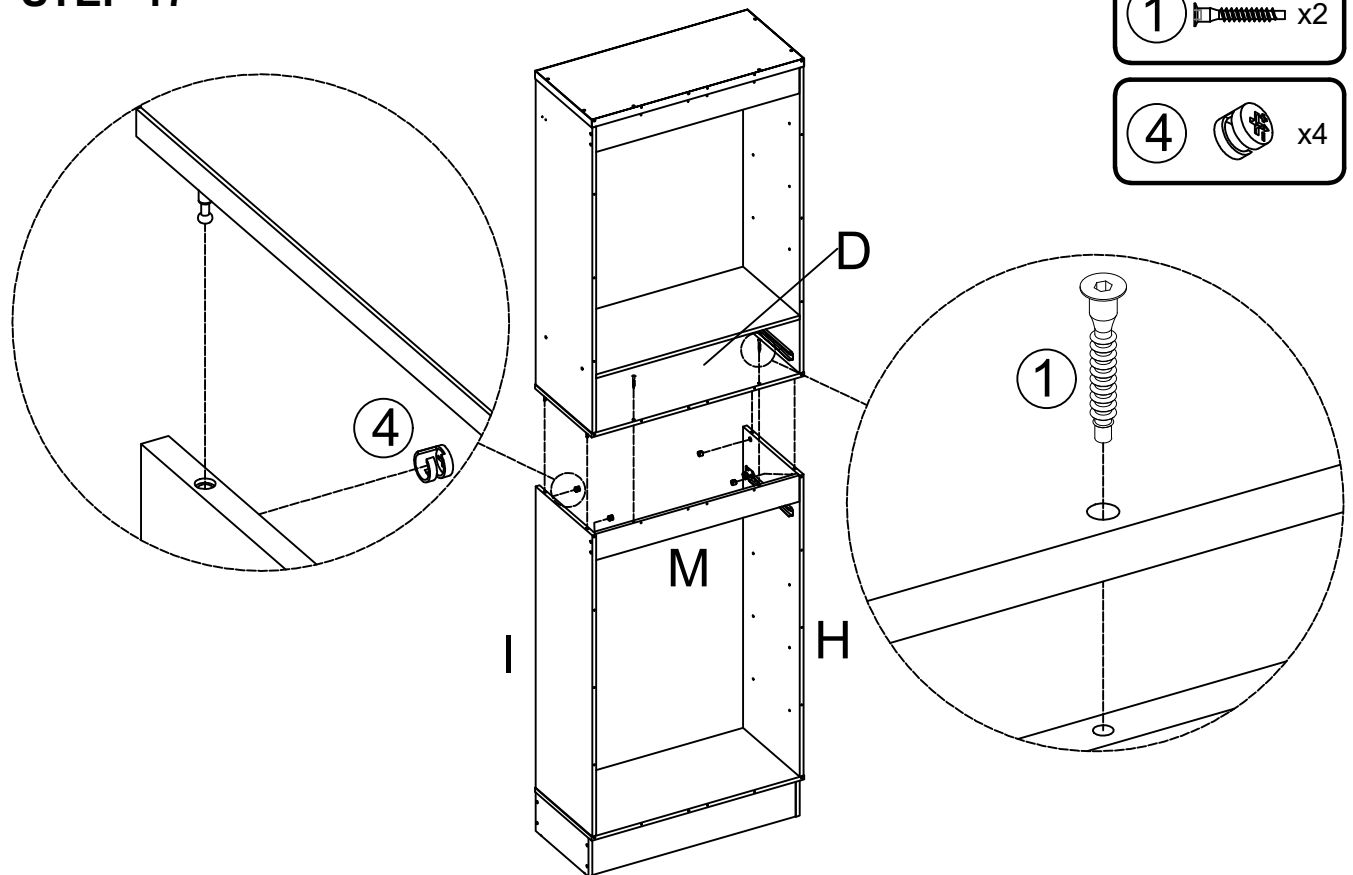


STEP 18

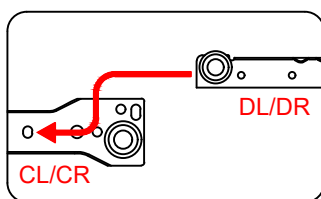


Please put the wheels align with the slots as the instruction shows, then slide into them

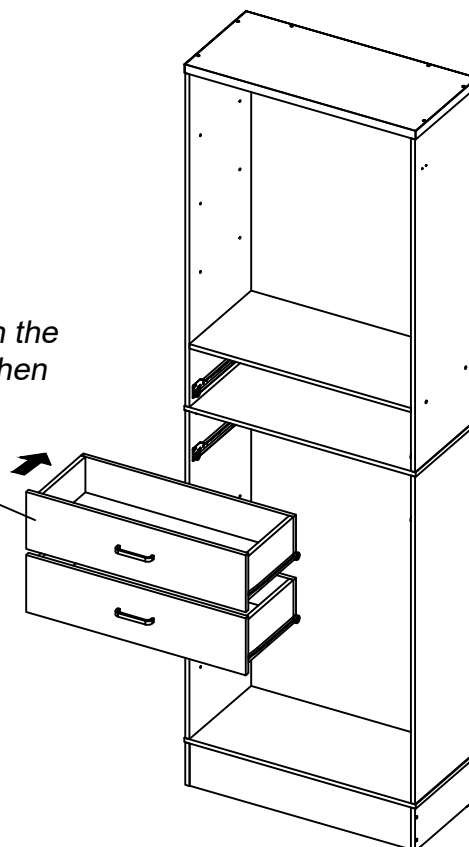



STEP 19




Expand the Back Panel Part S and Part T, then attach the Back Panel in place.

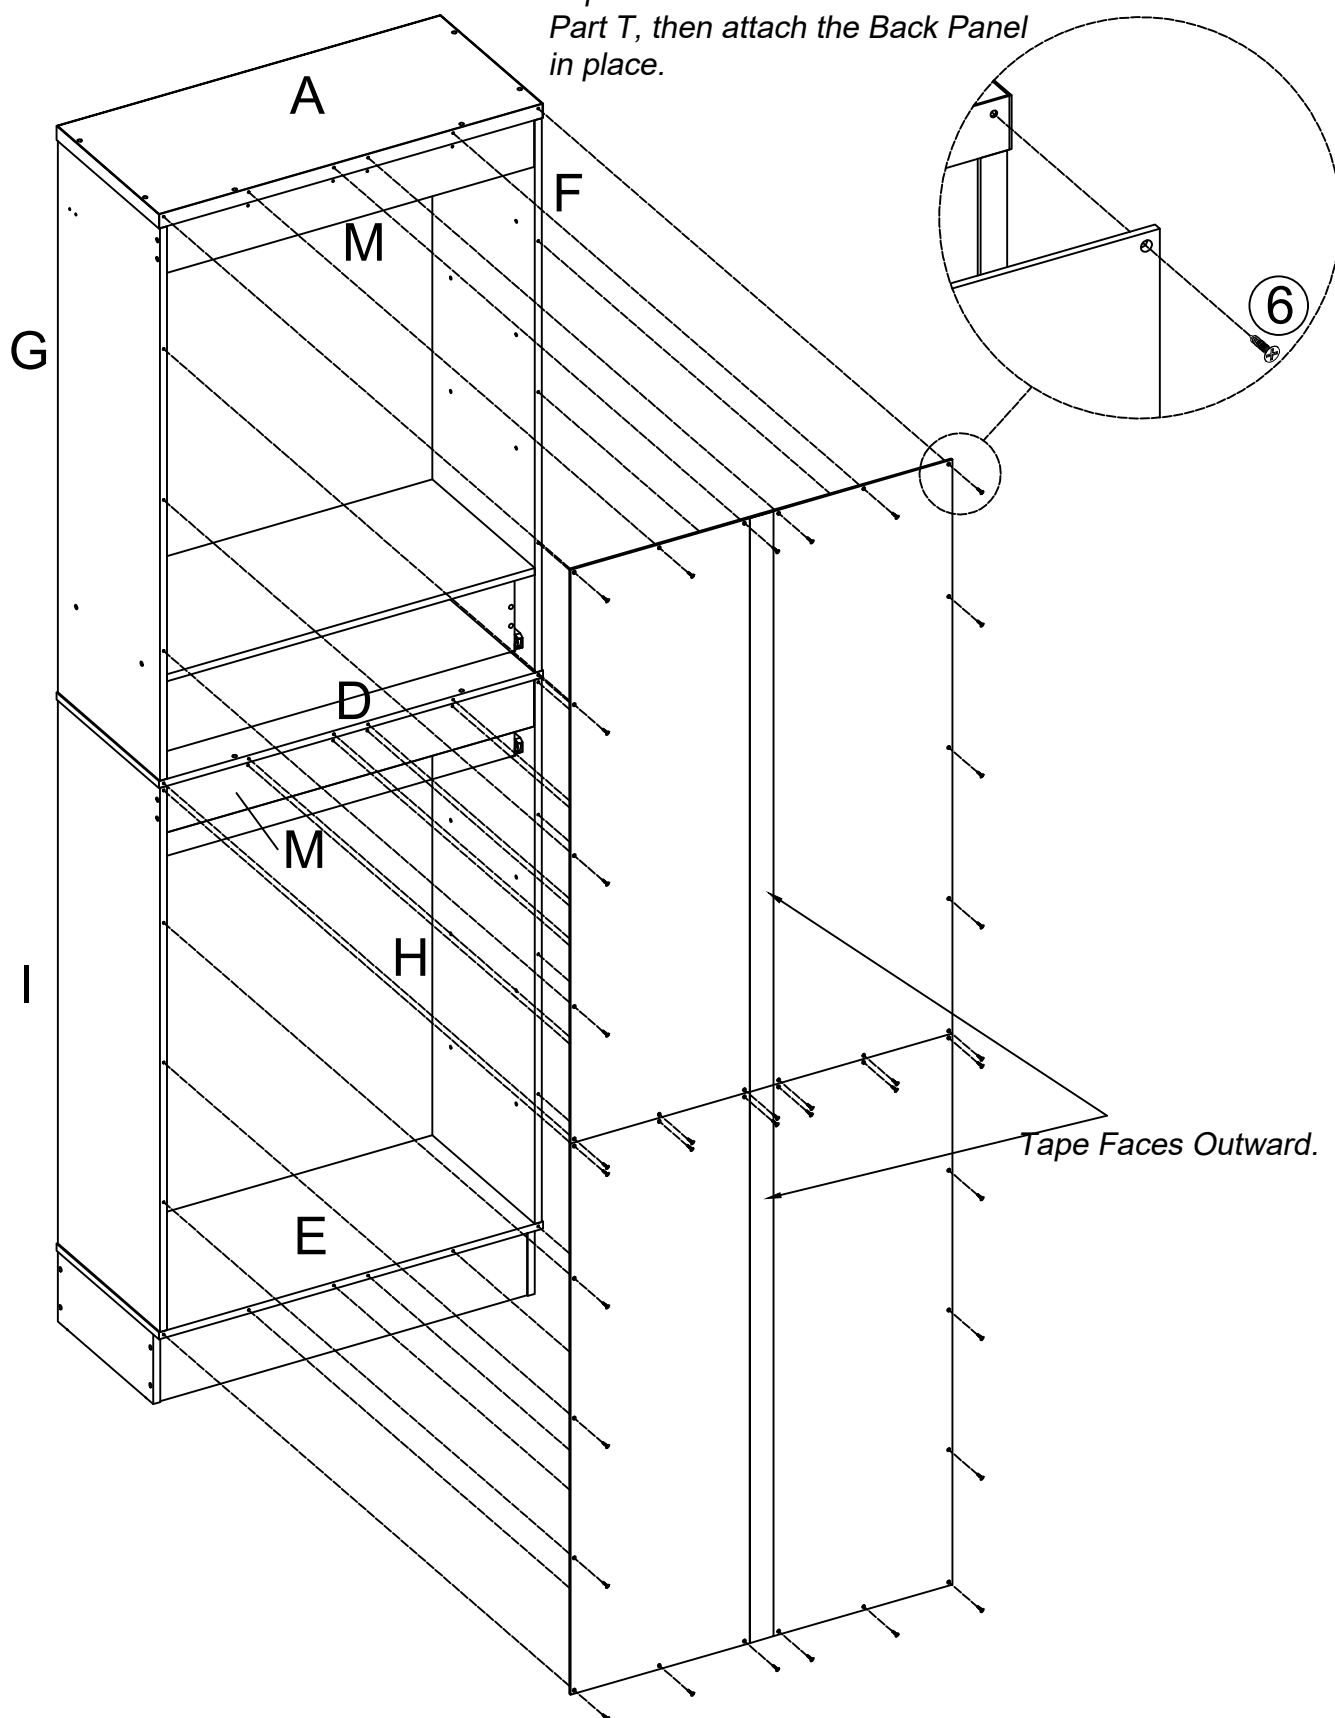



STEP 20

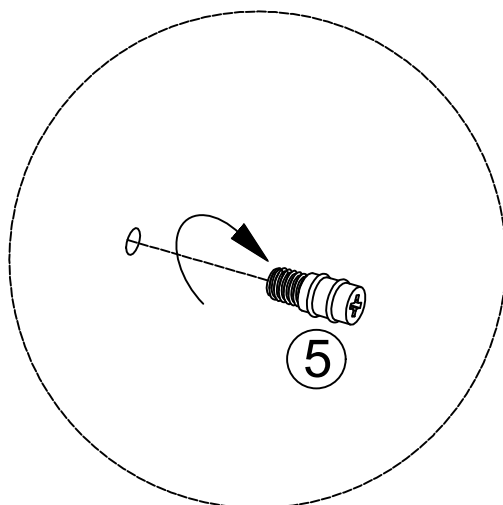


Put in these adjustable shelves.

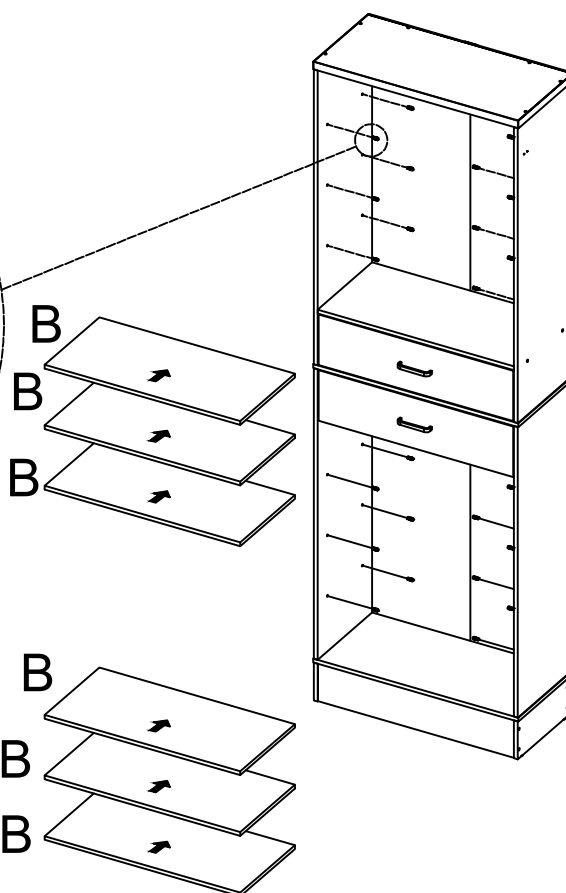

STEP 21

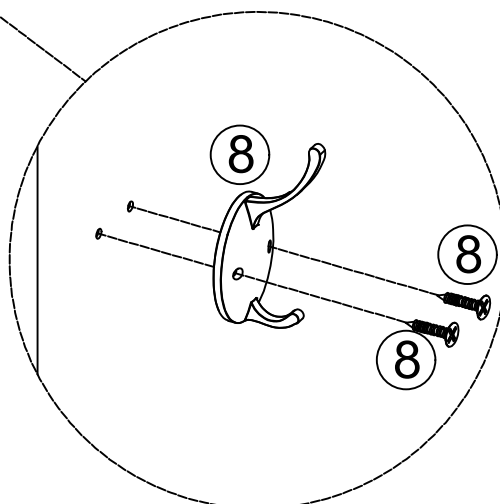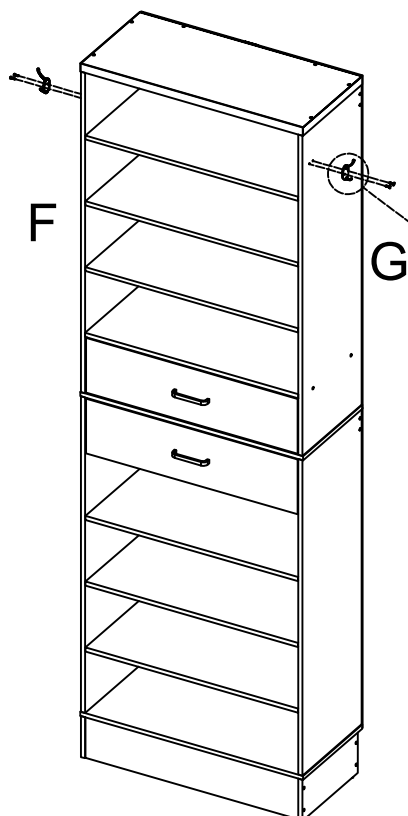


STEP 22



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

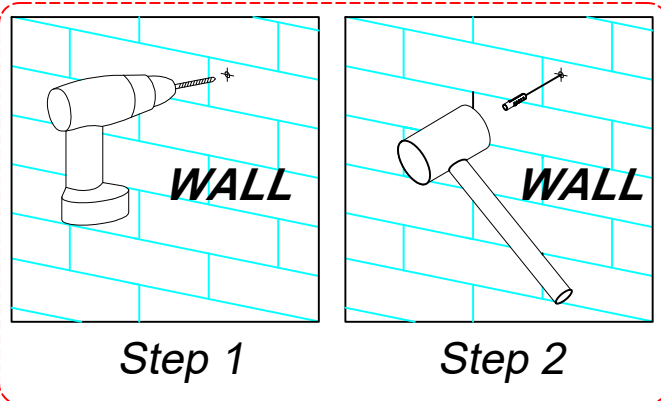

Please unscrew the Part ② screw first, then install Part ⑦.

