


ASSEMBLY INSTRUCTIONS


▲ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

HARDWARE LIST

No.	DESCRIPTION	SKETCH	SIZE	QTY
A	BOLT		Ø5/16" x 55mmL	4 PCS
B	SPRING WASHER		Ø5/16"	4 PCS
C	FLAT WASHER		Ø5/16" x 19mm	4 PCS
D	ALLEN KEY		4mm	1 PC

PARTS LIST


NO.	DESCRIPTION	DRAWING	QTY
1	BACK REST		1 PC
2	SEAT		1 PC
3	BUN FOOT		4 PCS
4	PILLOW		1 PC

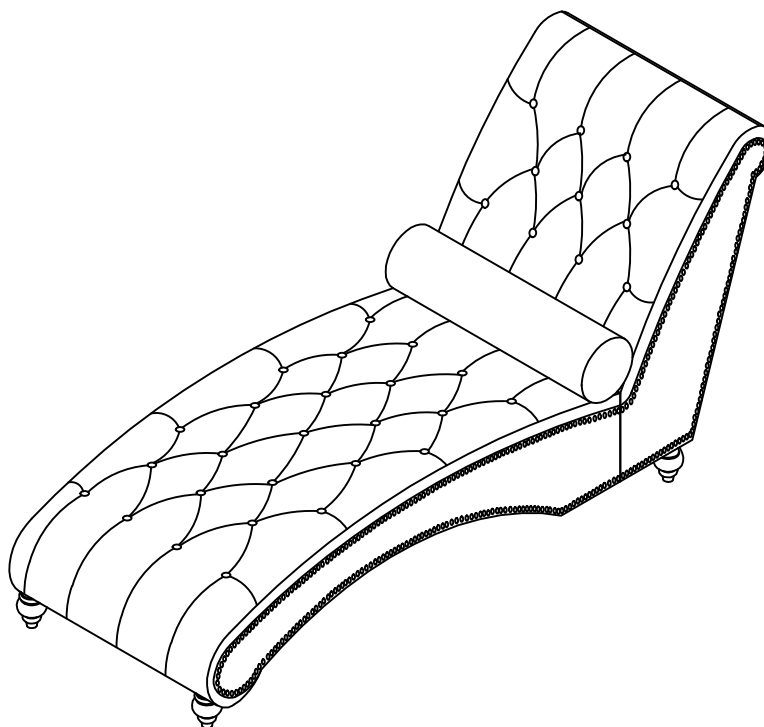

Assembly Completed


ASSEMBLY INSTRUCTIONS

* Please remove all parts from carton before assembly.

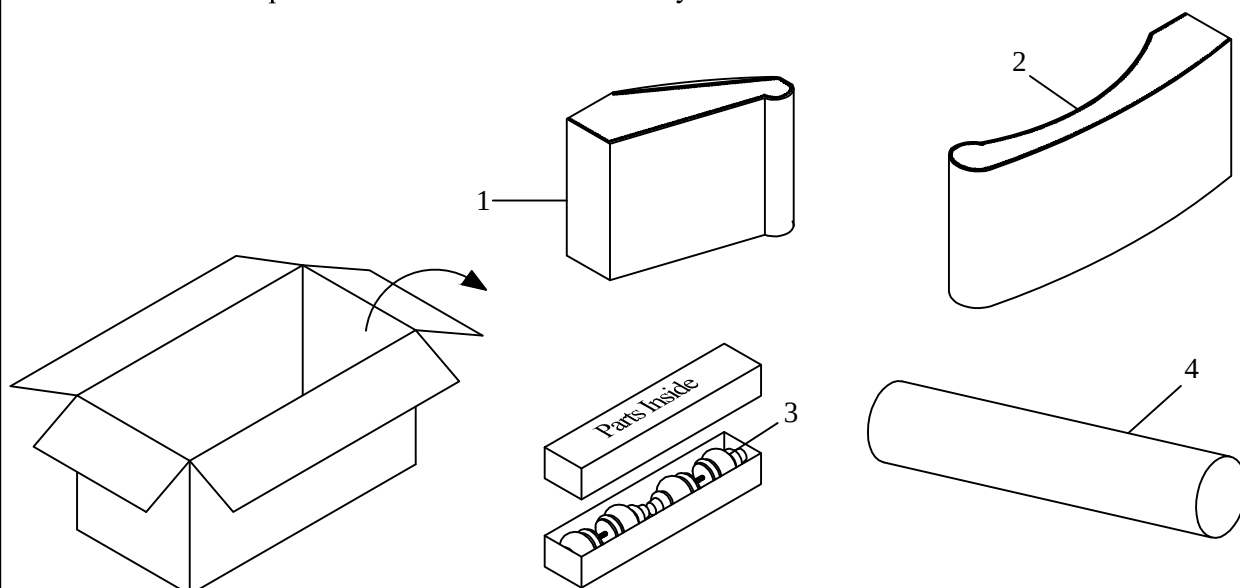


STEP 1

Attach Seat (2) to Back Rest (1) by using Bolt (A), Spring Washer (B), Flat Washer (C) and Allen Key (D).

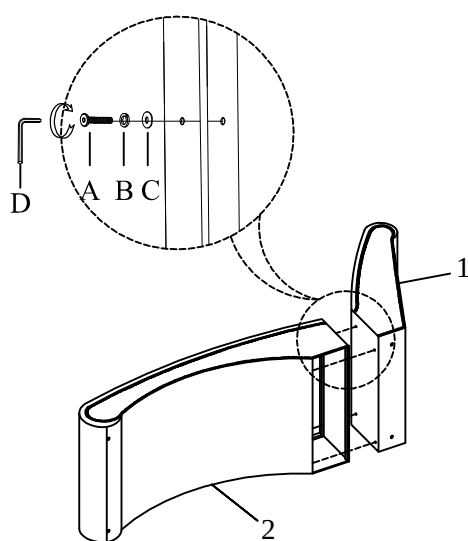


STEP 2

Attach Bun Foot (3) to Seat (2) and Back Rest (1). Rotate to tighten it.

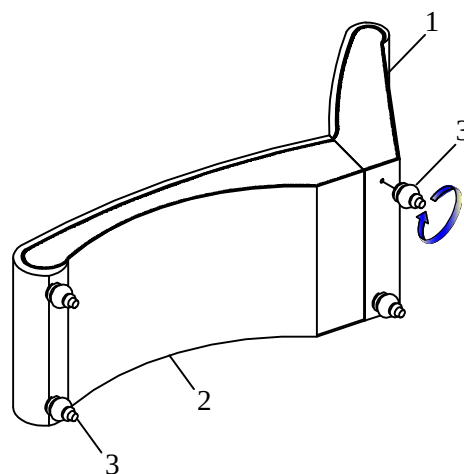

ASSEMBLY INSTRUCTIONS

Assembly Completed

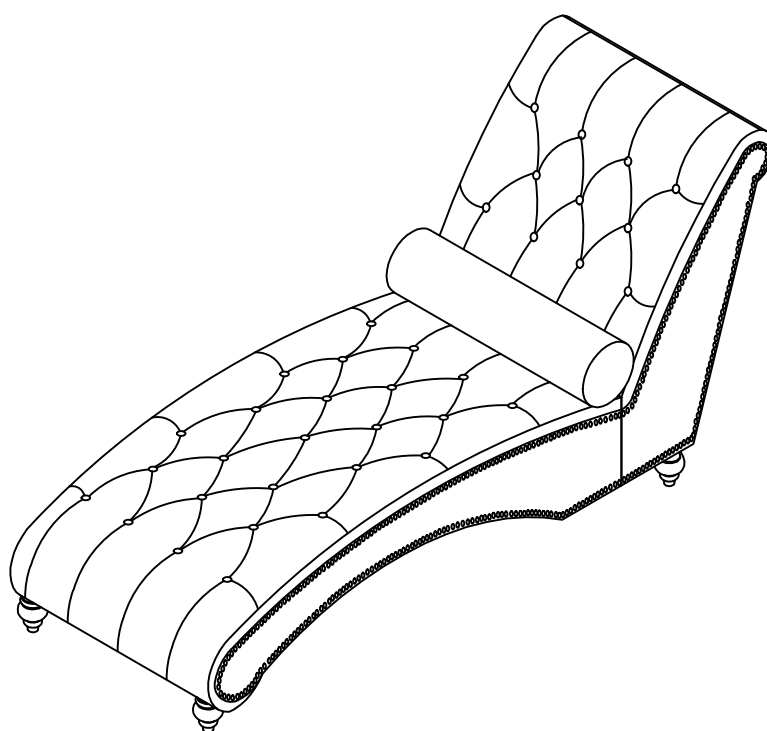

CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric furniture, please follow below care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to heating and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, or vents and be sure to use window treatments to block the sun's rays.
- Use soft brush to remove dust.