


ASSEMBLY INSTRUCTIONS

CVFDR1310

NOT SUPPLIED


HARDWARE

PARTS

S.NO.	DESCRIPTION	QNT
A	 BODY	01
B	 LEG	02
C	 STRETCHER	01


S.NO.	DESCRIPTION	QNT
D	 WASHER	10
E	 SPRING WASHER	10
F	 JCBC M6 x 40 mm	08
G	 JCBC M6 x 20 mm	02
H	 ALLEN KEY	01
I	 HANDLE KNOB	04
J	 JCMC 35 mm	04

STEP - 1

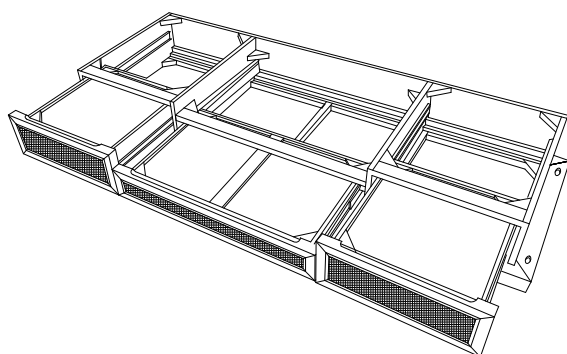


Position body (A) as shown above, with the drawer pulled out

STEP - 2

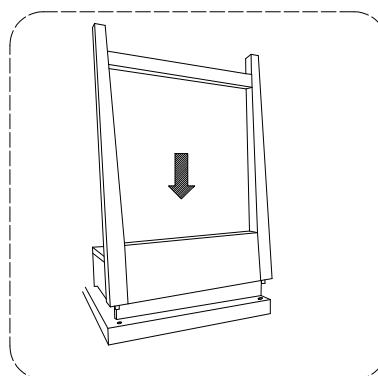

Install the legs (B) as shown in the picture, position the dowel in the hole located on the body top


STEP - 3

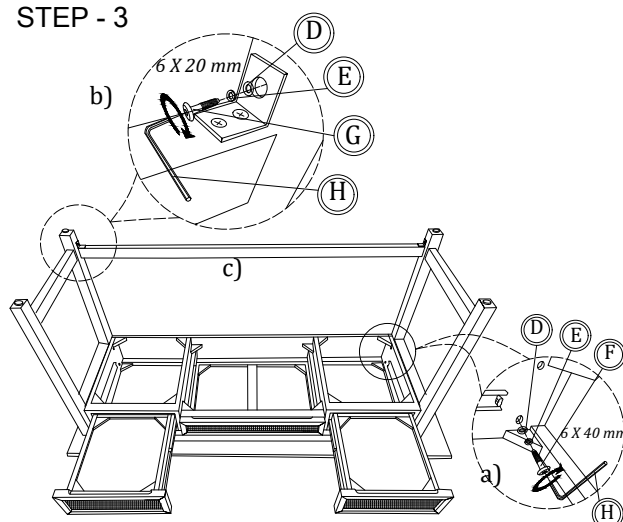

- Install the stretcher (C), then lock it between the body and legs using Washer (D), Spring Washer (E), JCBC M6x40 (F), Then tighten with allen key (H)
- Lock the stretcher with the legs using Washer (D), Spring Washer (E), JCBC M6x20 (G), Then tighten with allen key (H)

STEP - 4

Install the knob (I) on the drawer, lock it with a JCMC (J) screw and tighten with a screwdriver

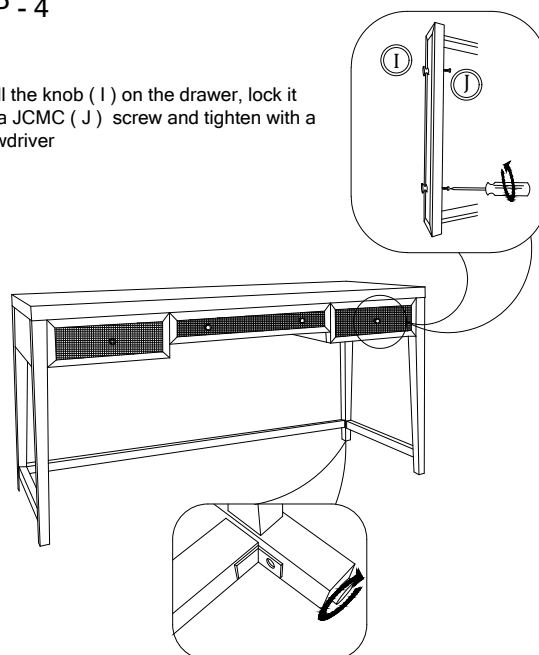

Leveller are provided at the bottom to the balance on uneven surface

MADE IN INDONESIA