


HW-AM554609

CUSTOMER MANUAL

-V0.1

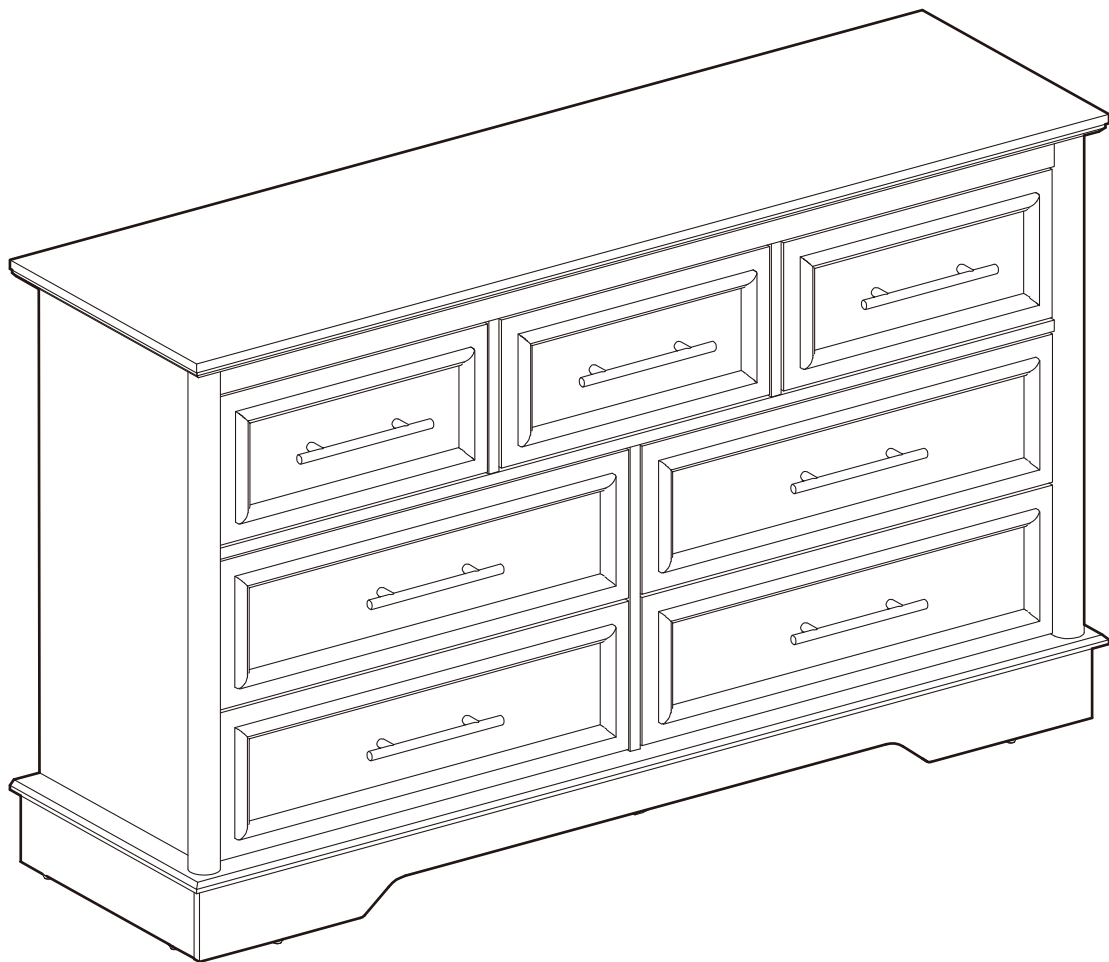

Contact us: Support@lghm.vip

⚠ WARNING



Children have died from furniture tipover.

To reduce the risk of furniture tipover:




- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!




ASSEMBLY STRUCTURE REFERENCE DIAGRAM

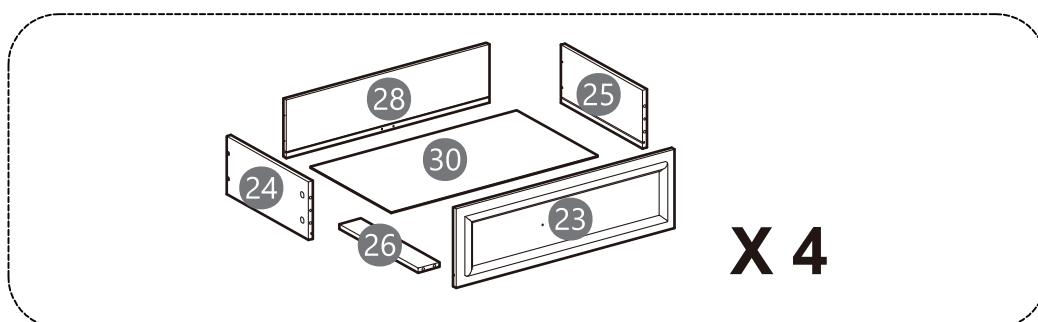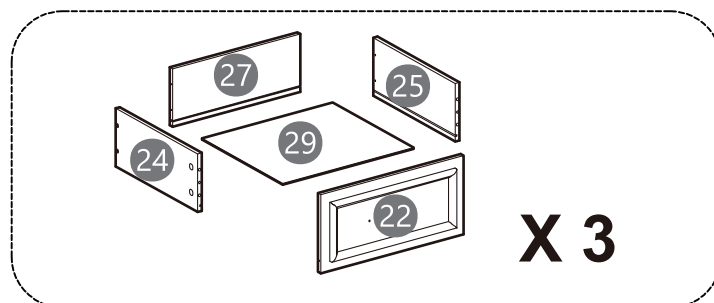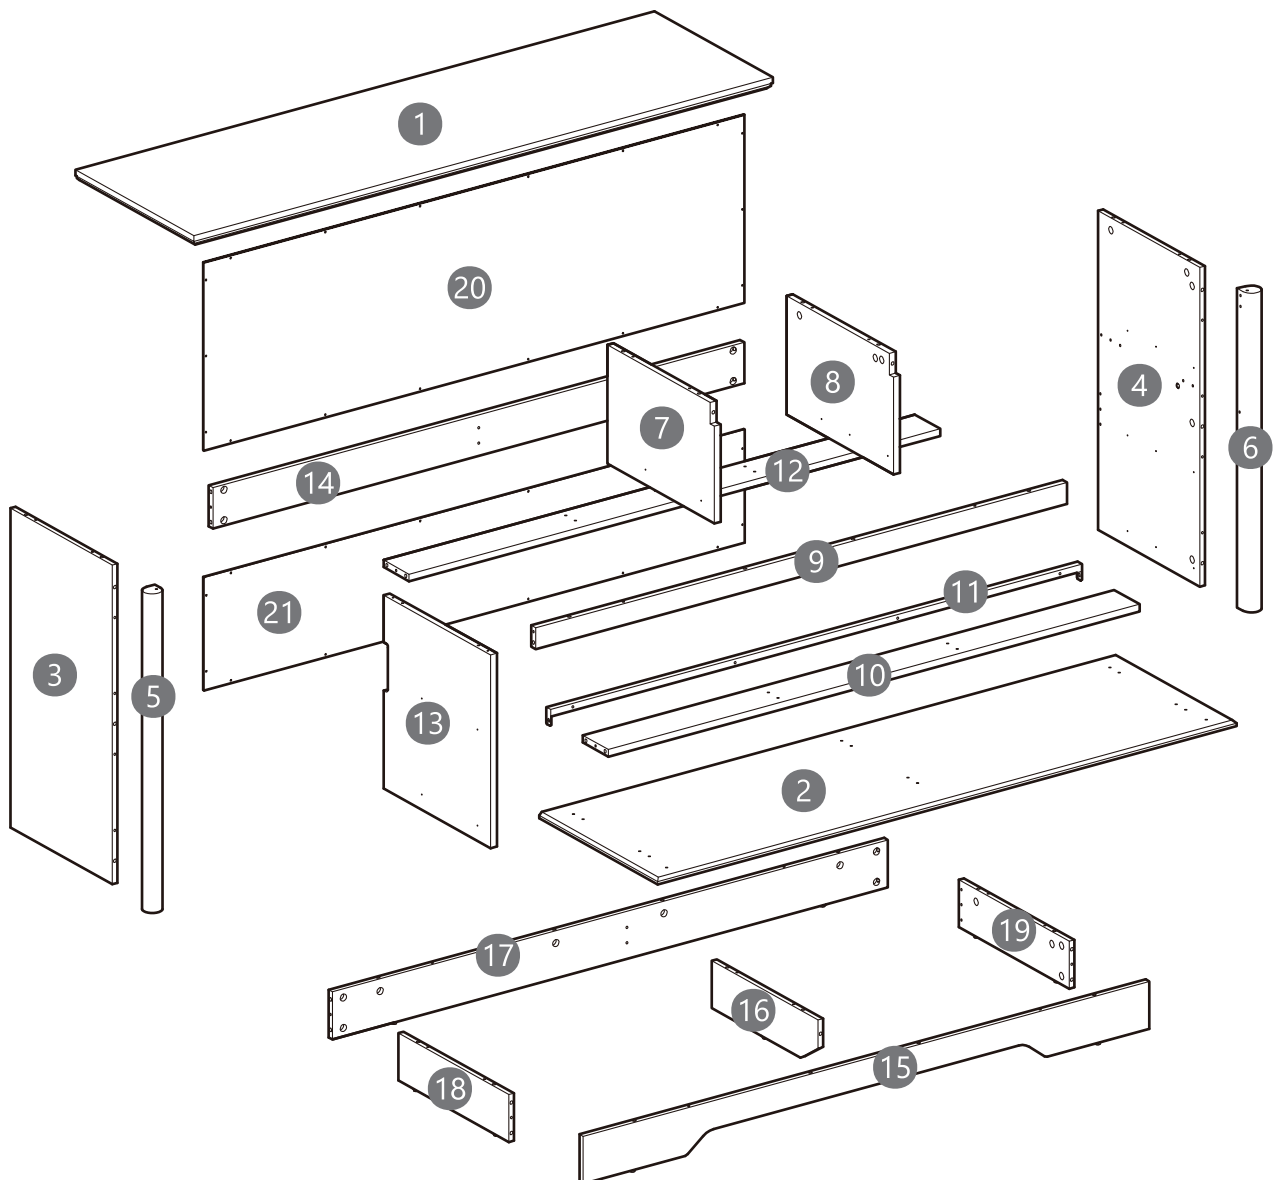

PARTS

A

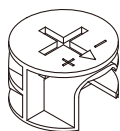

X 94+2

B



X 94+2


C



Ø6 x 30mm


X 71+2

D



X 14+1

E

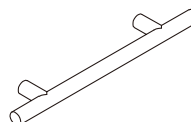

X 7

F



M4 x 20mm

X 14+1

G



Ø3 x 12mm

X 80+2


H



Ø3 x 14mm

X 34+2

I



M4 x 25mm

X 4

J



M6 x 10mm


X 2

K



X 2

L



X 2

M



Ø4 x 35mm

X 38+2


N



M3

X 1


O

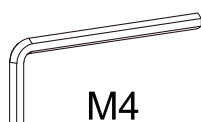

M4

X 1

P



X 1

Q

CL X 7



DL X 7



CR X 7







DR X 7




Attention: there are 4 kinds of slides in our product, in which 2 are **Boards slides**, which marked as **CL & CR** and contains 7 pieces respectively, and the other 2 are the **Drawer slides**, which marked as **DL & DR** and contains 7 pieces respectively.

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

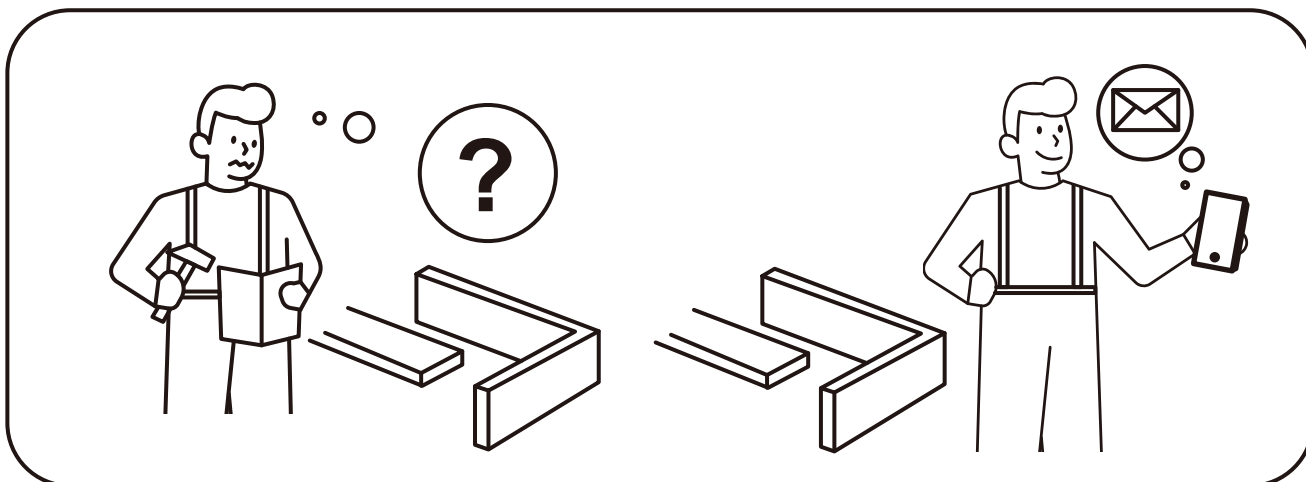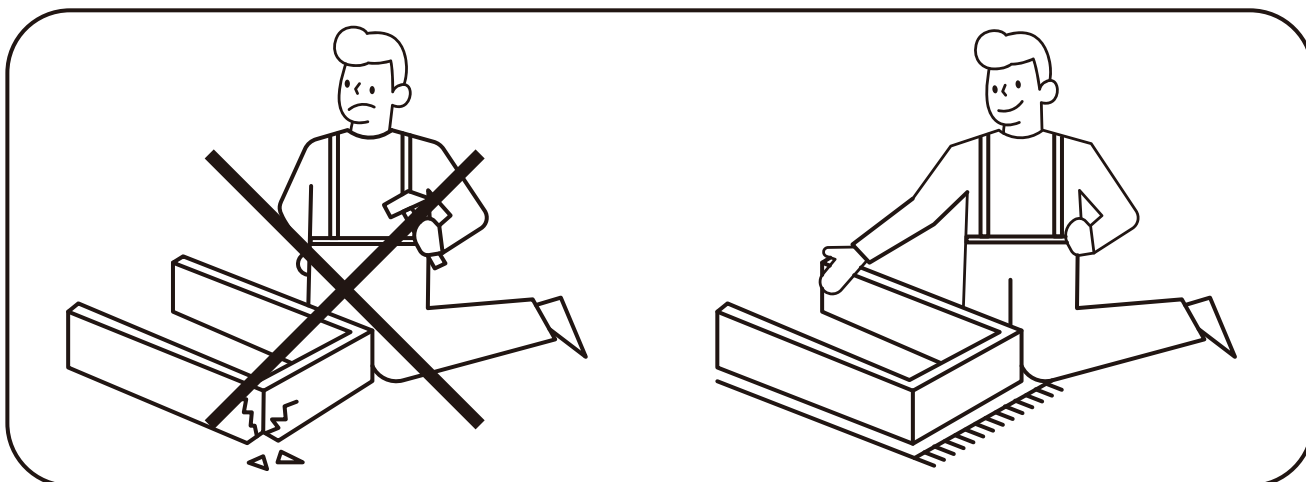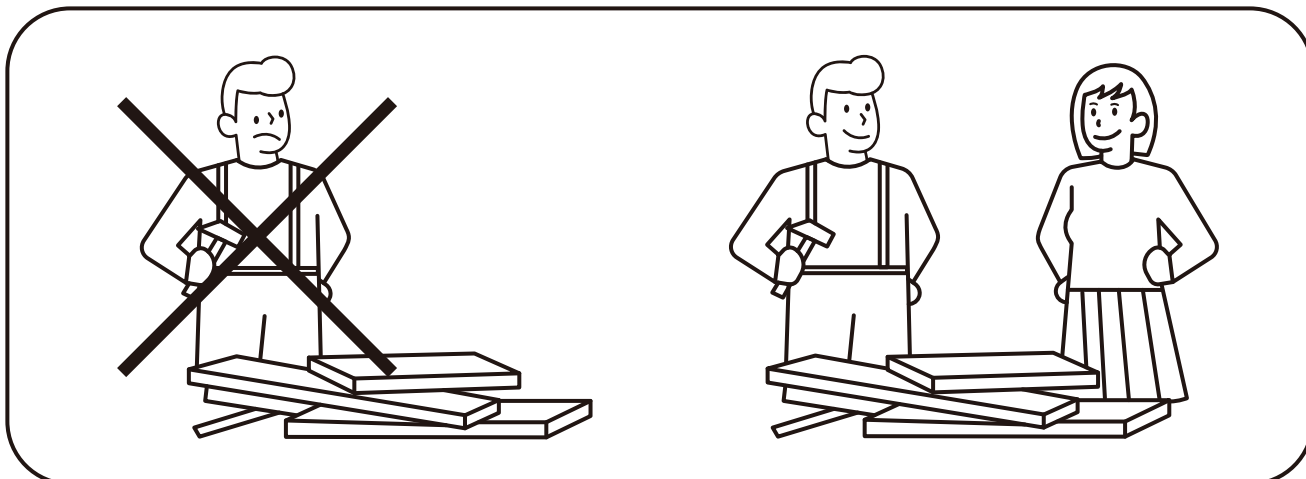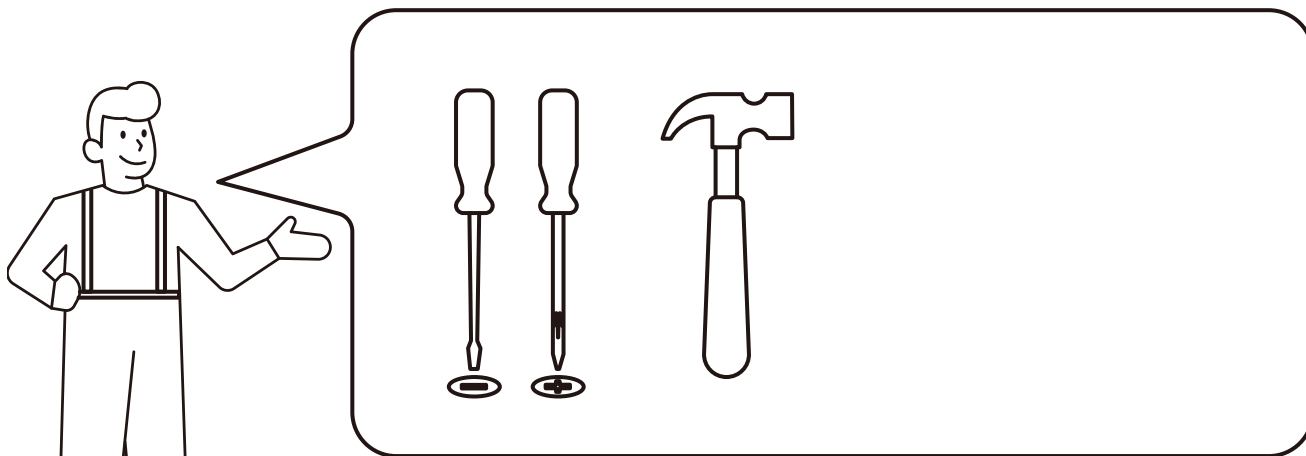


How to work the Knock Down (kd) assembly system

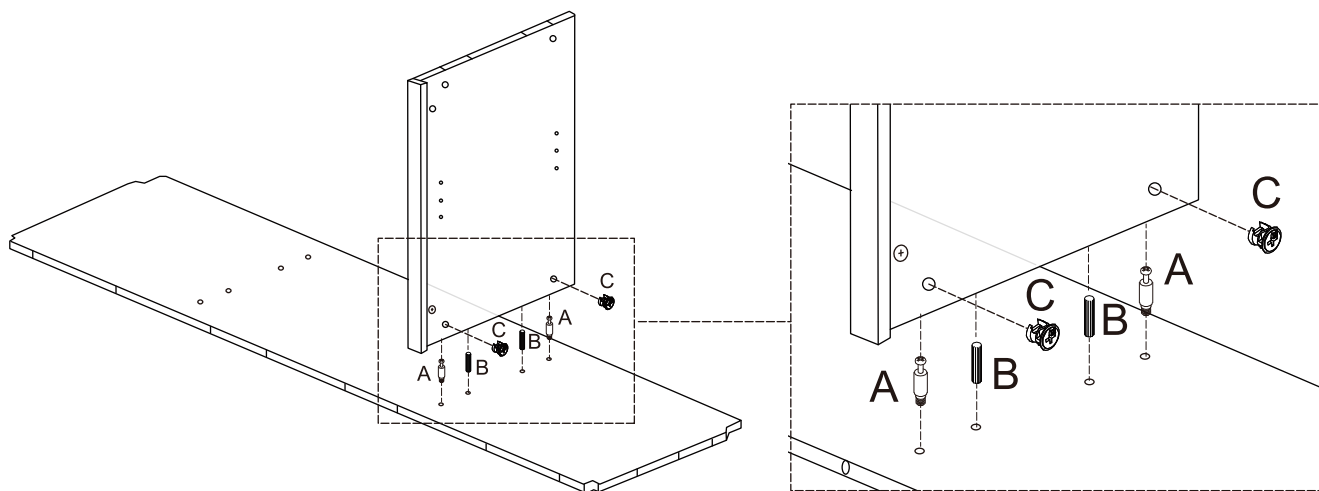


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

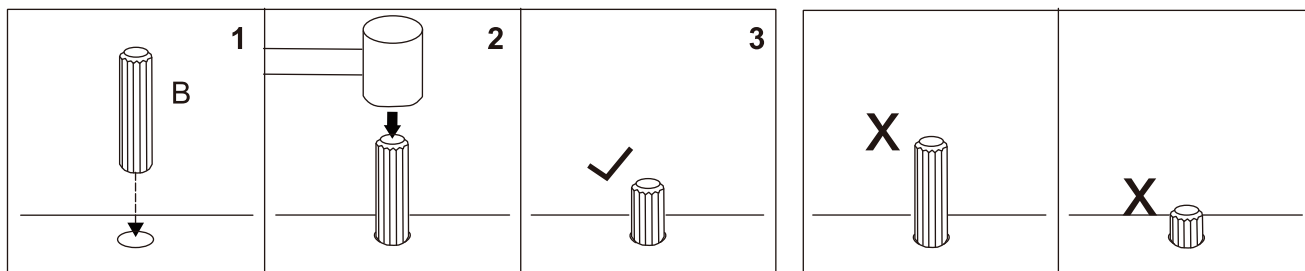

How to use the Cam Lock system

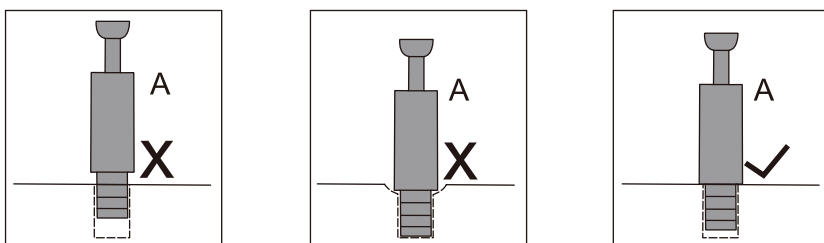


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

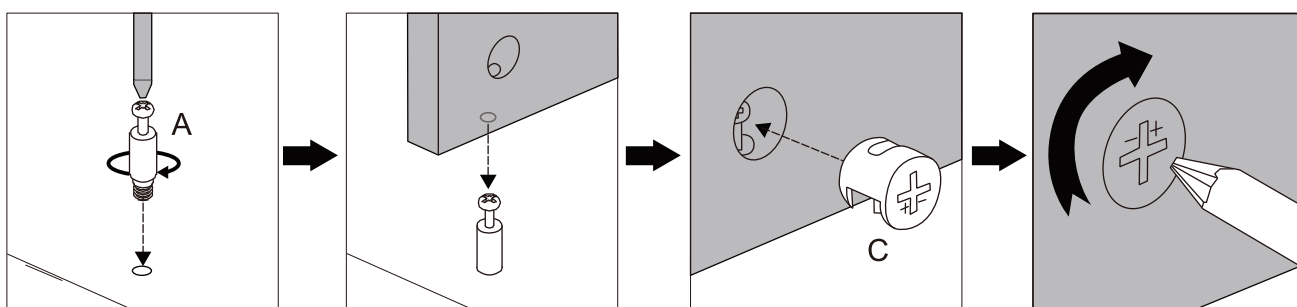


Before installing the product, observe the general structure.

It is divided into 5 parts in total:

1. Install the Boards and Slides(③&④&⑦&⑧&⑬)
2. Install the Top Panel (①) & Frame Part (⑨&⑩&⑪&⑭)
3. Install the Back Panel (②⑤&②⑥)
4. Install the Drawers
5. Install the Drawers Slides

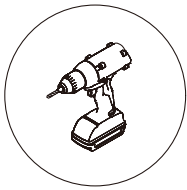


We recommend using a power drill to assemble.

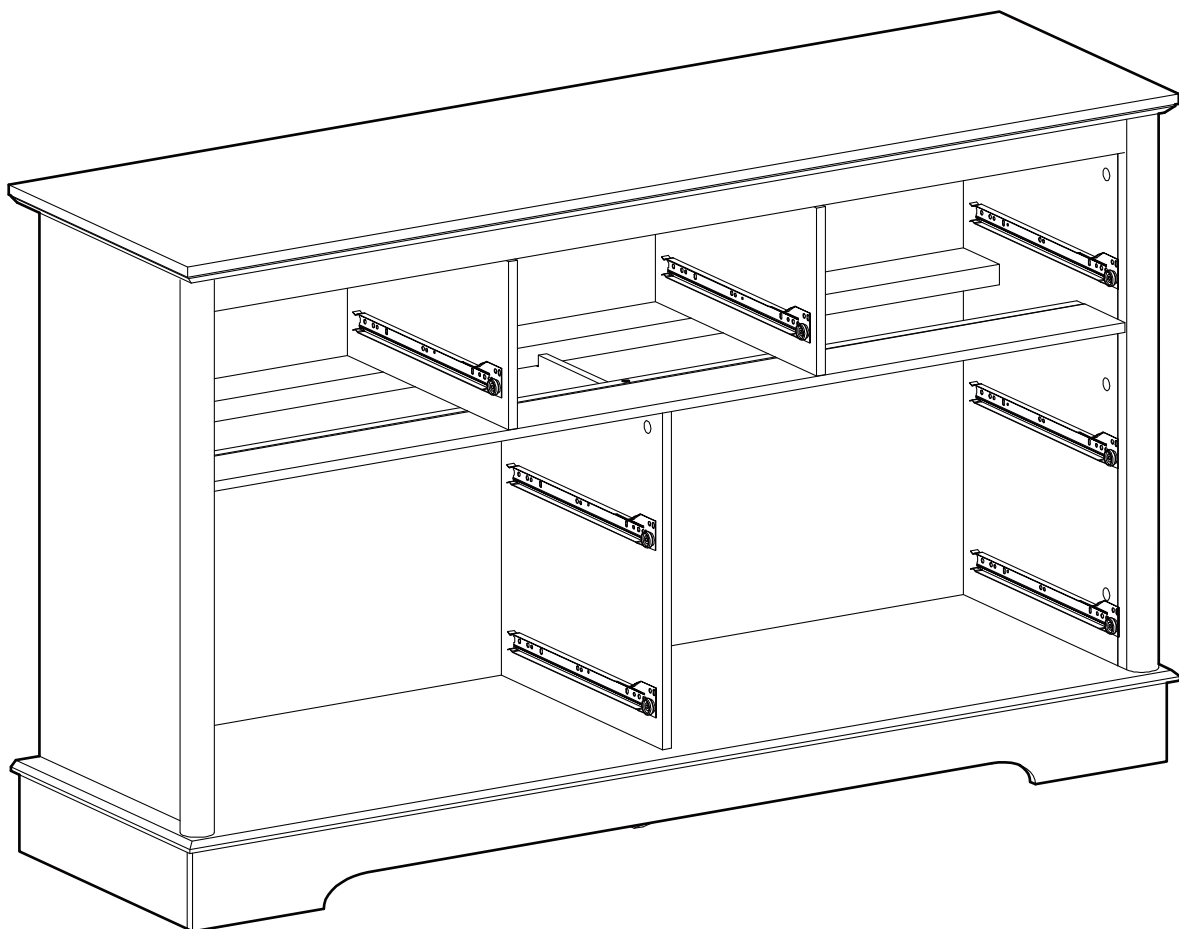

Step 1


Using Screws (G) to assemble Slide (CL) to Board (⑦).

Screwing one more screw in this position for reinforcement.

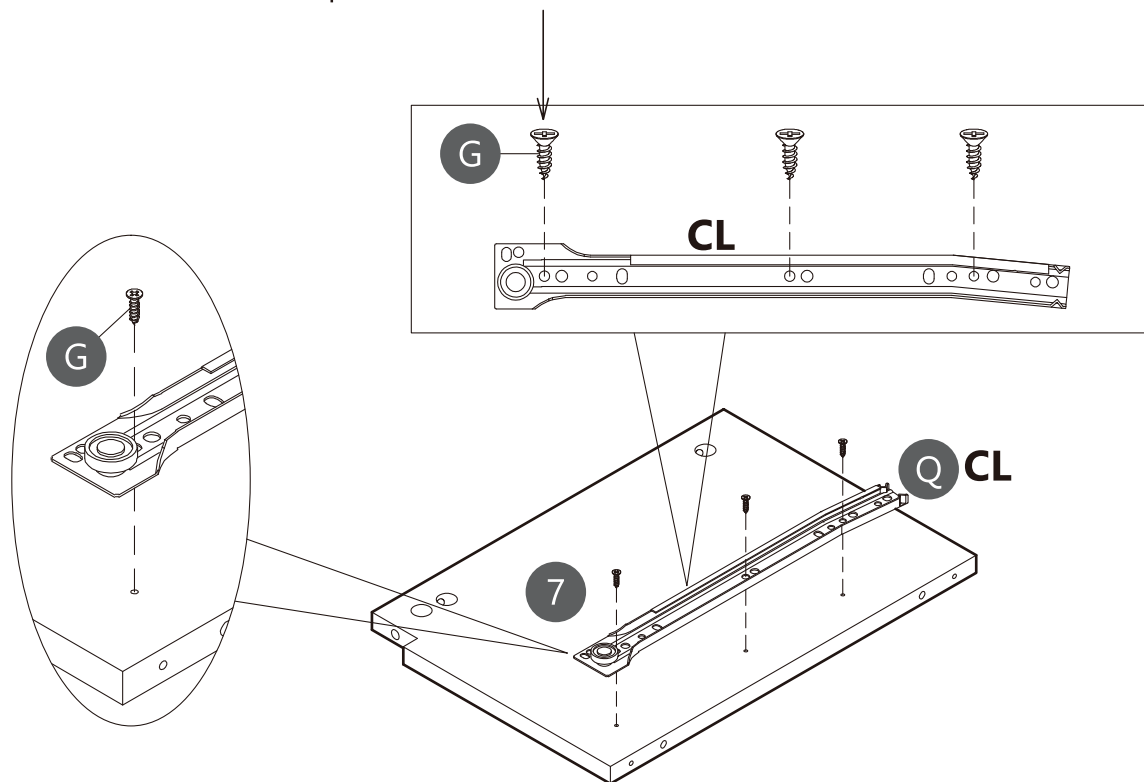


Using Screws (G) to assemble Slide (CR) to Board (⑦).

Screwing one more screw in this position for reinforcement.

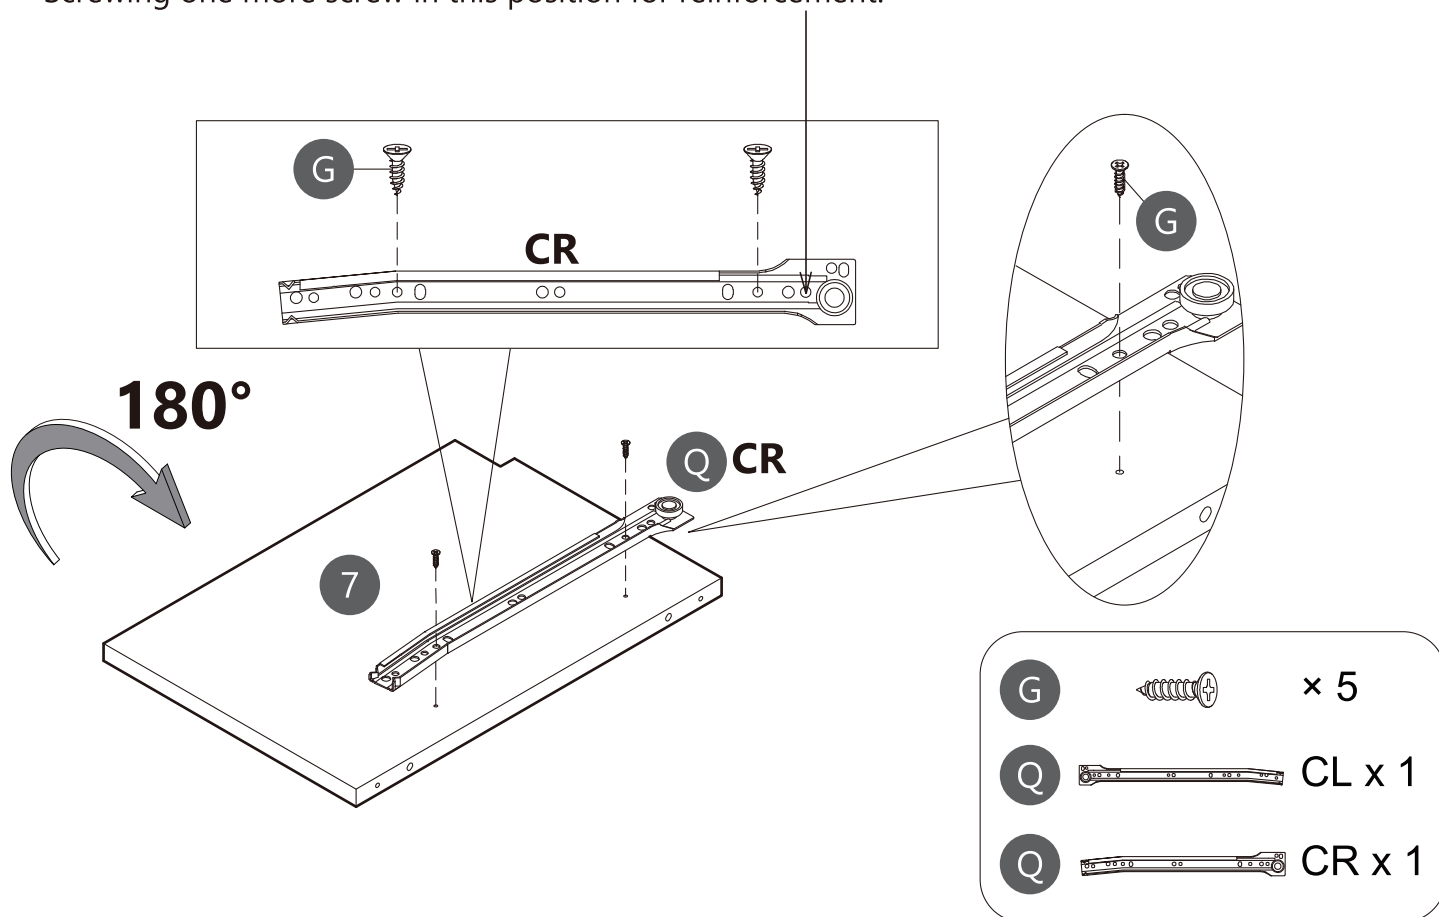

Display. Non-installation steps

Reference to the completion of the installation:
checking the position of the slides and screws in the board.

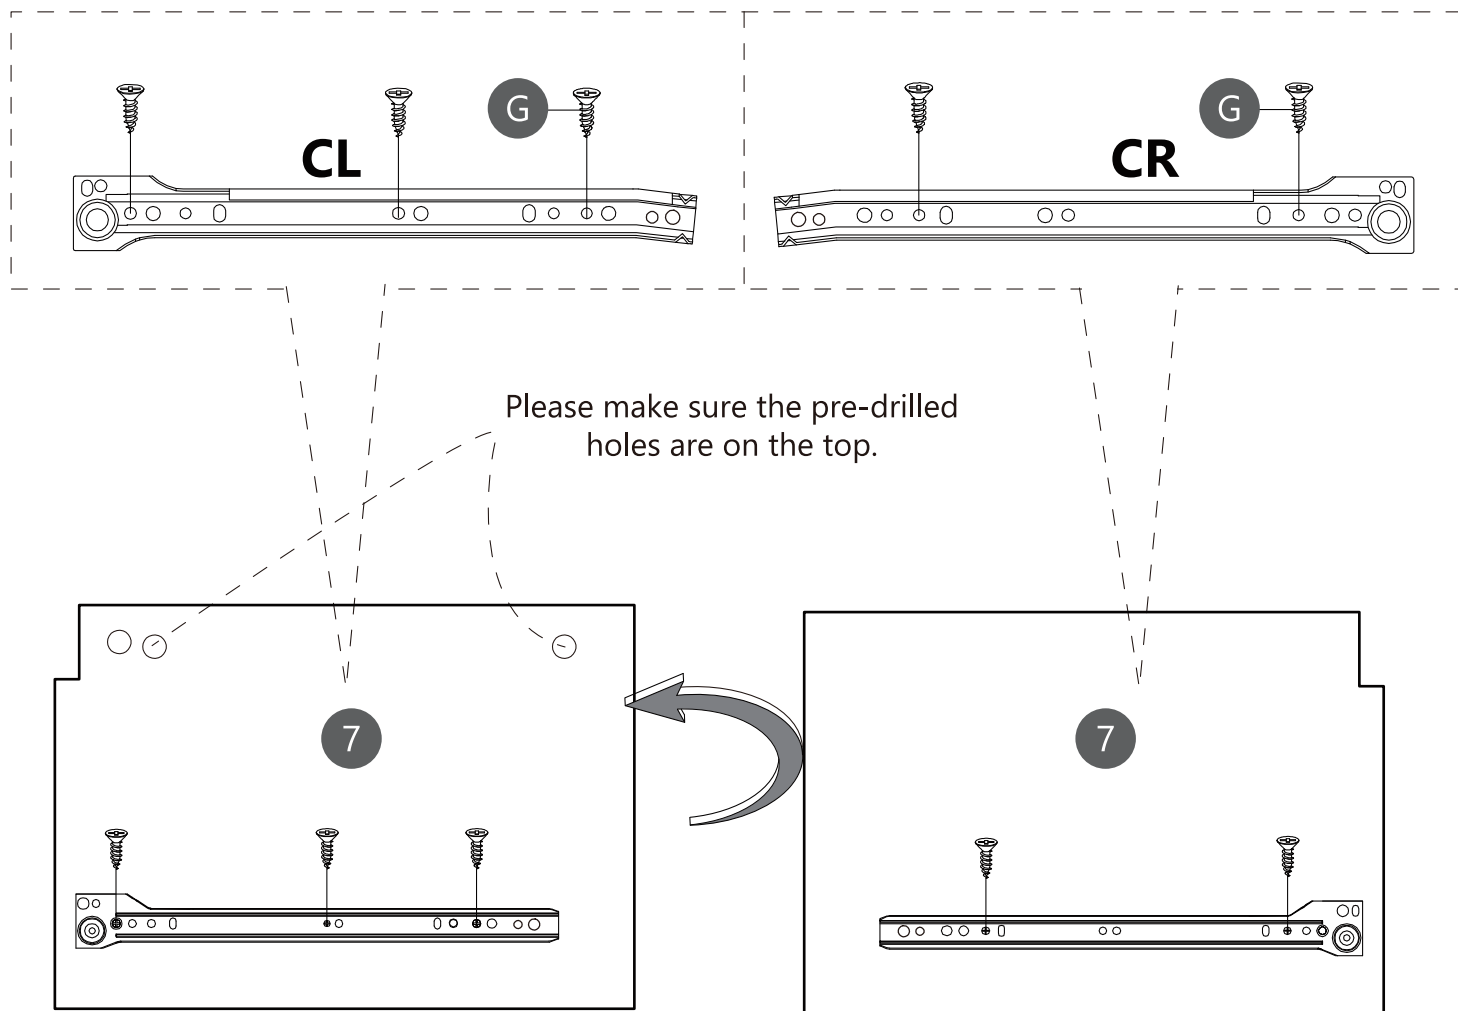


TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 2


Using Screws (G) to assemble Slide (CL) to Board (⑧).

Screwing one more screw in this position for reinforcement.

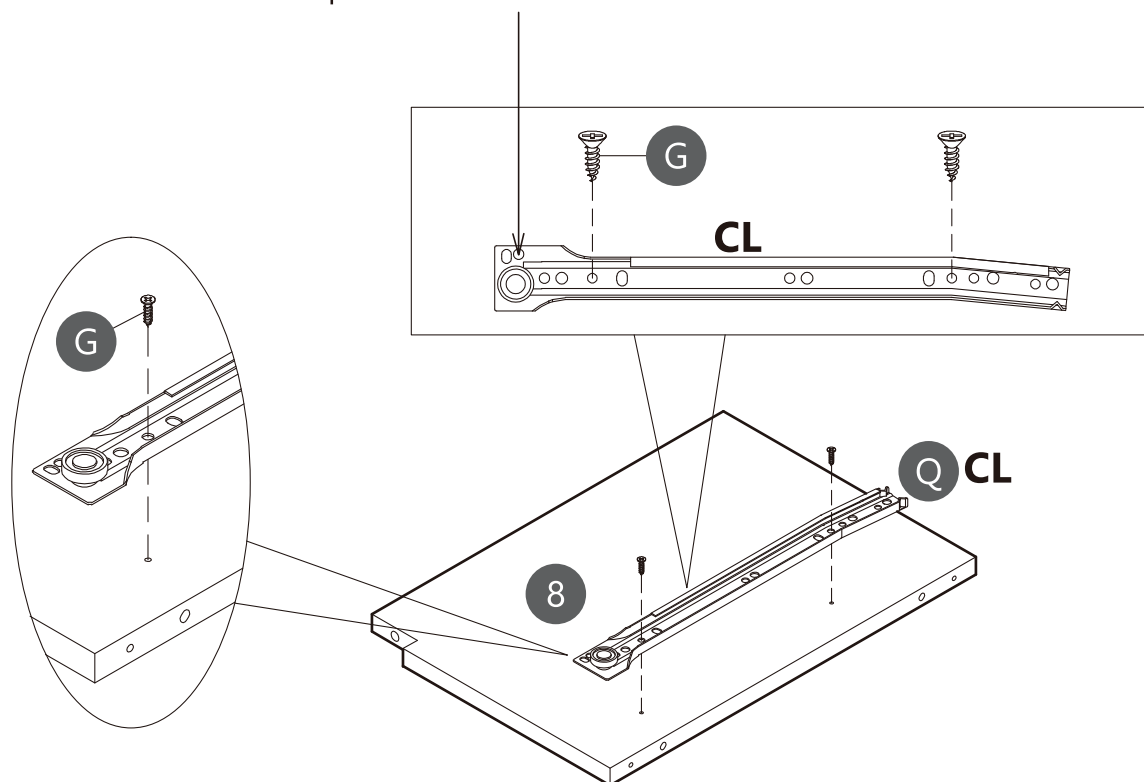

Using Screws (G) to assemble Slide (CR) to Board (⑧).


Screwing one more screw in this position for reinforcement.

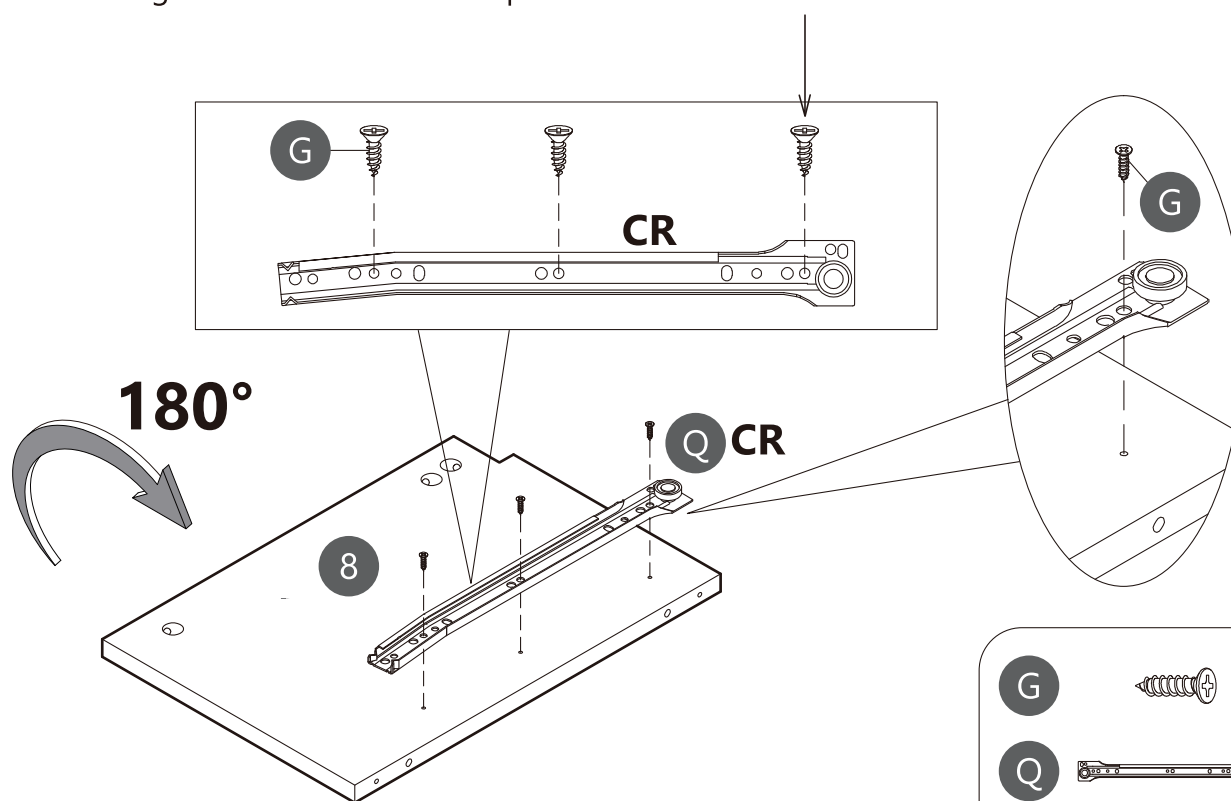

G		× 5
Q		CL x 1
Q		CR x 1

Display. Non-installation steps


Reference to the completion of the installation:
checking the position of the slides and screws in the board.

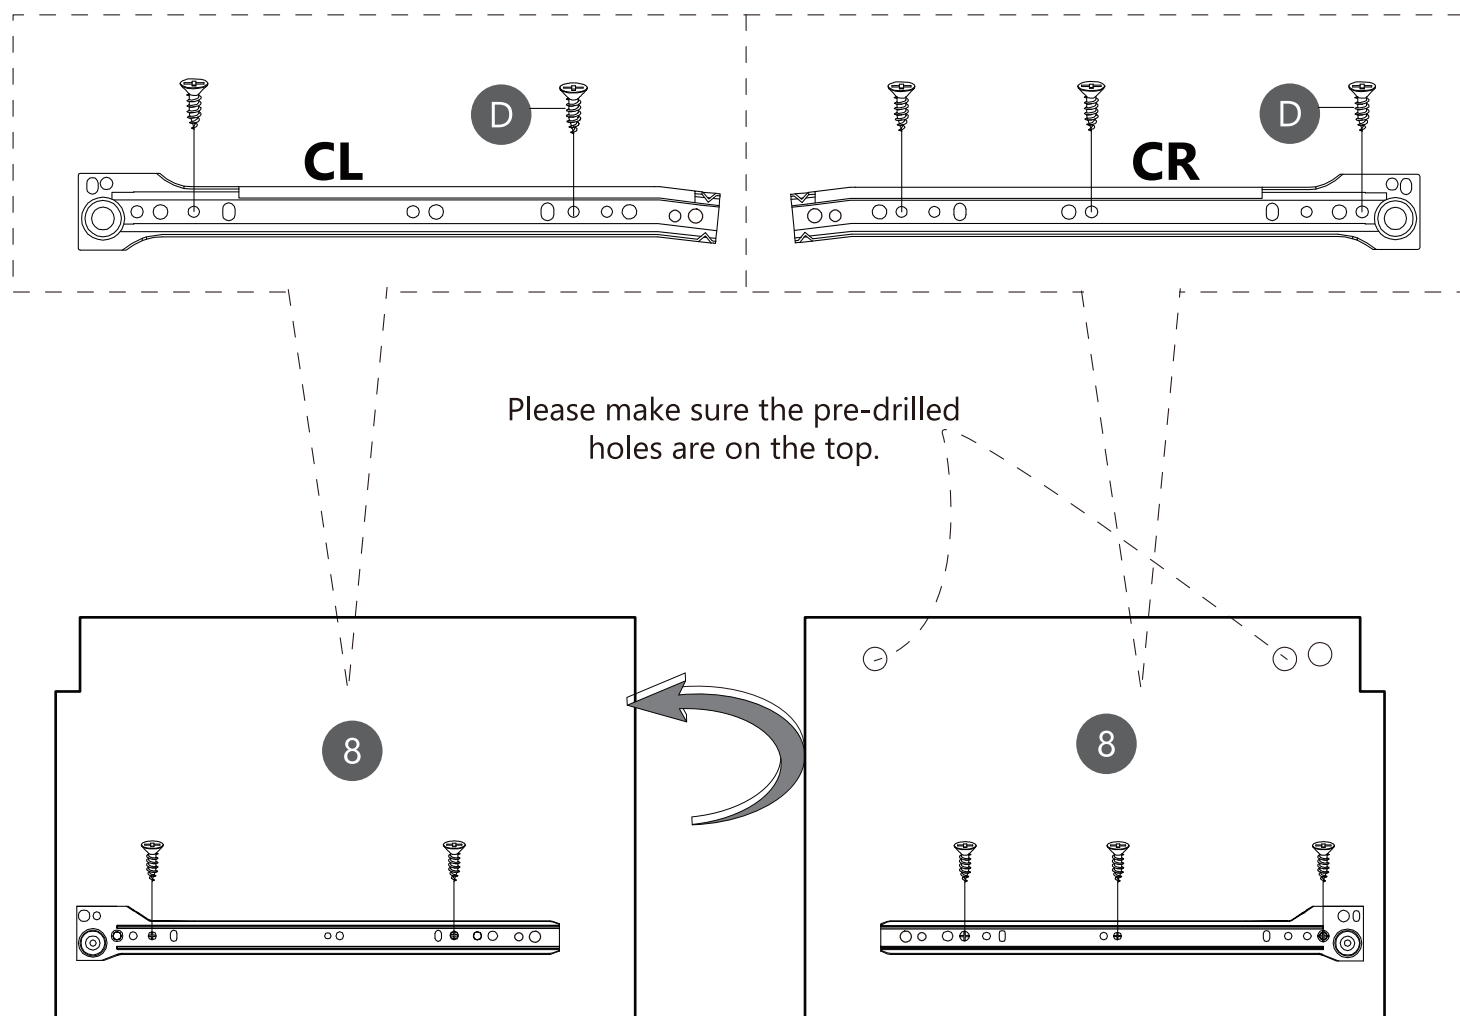

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.



Step 3

Securing Cam Bolt (B) into Board (9).

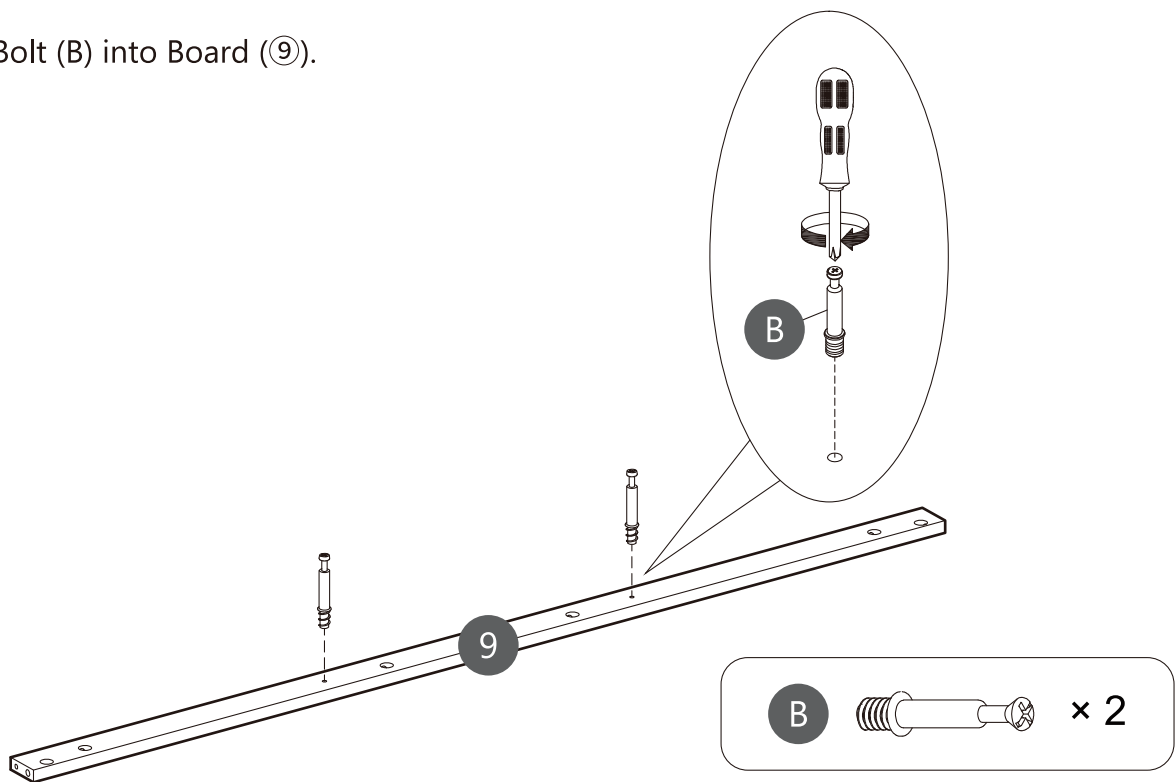


Step 4

Attach Board (7&8) to Board (9). Using Cam Lock (A) secure Board (7&8) to Board (9).

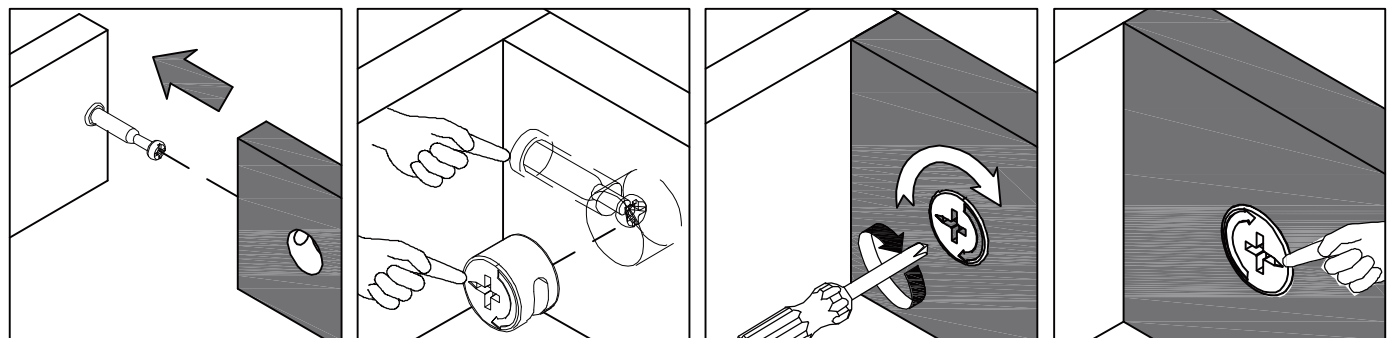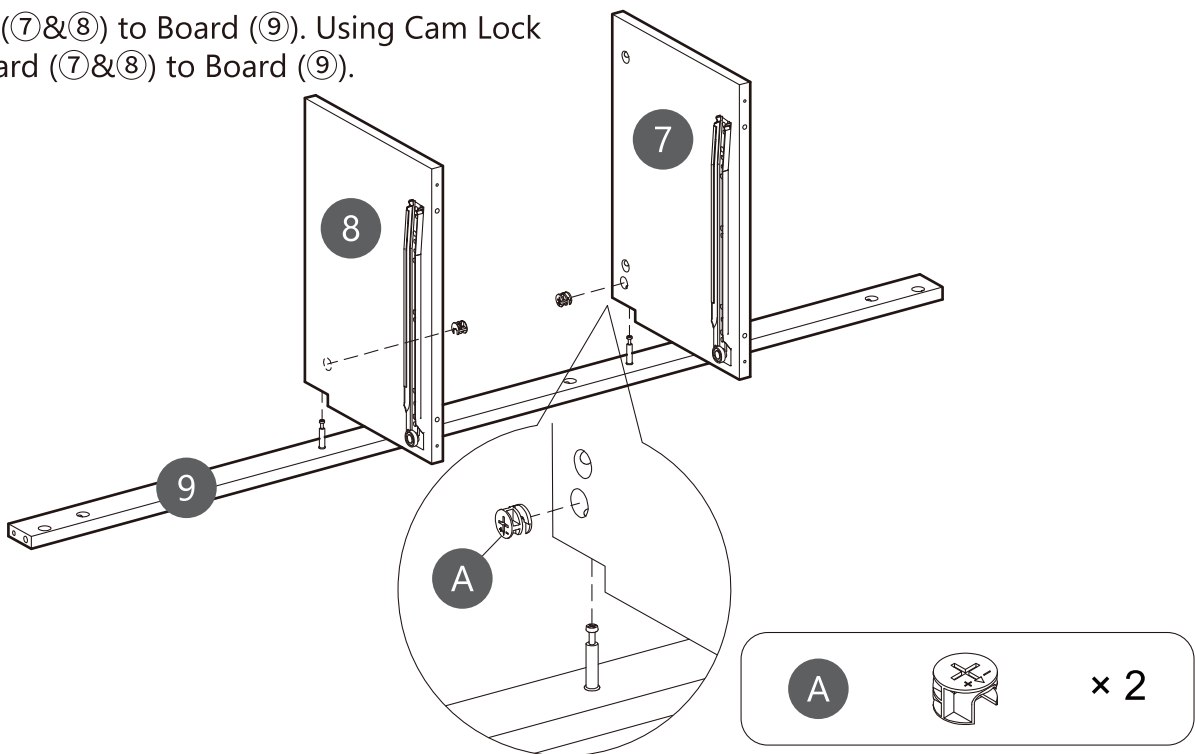

Step 5

Using Screws (I) secure Board (11) to Board (10).

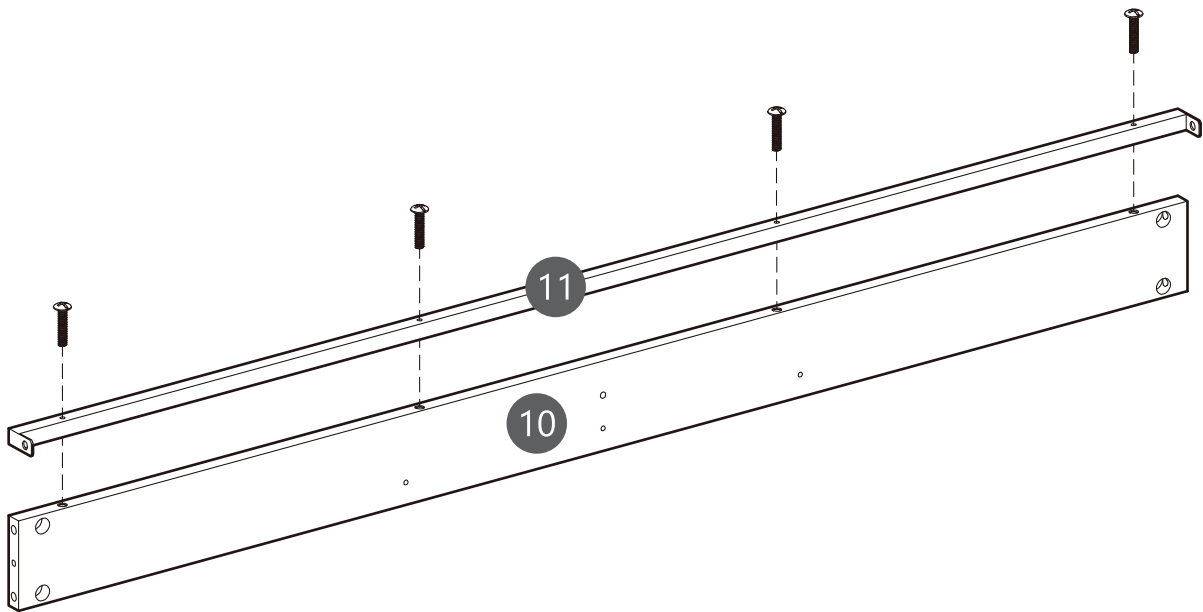


I



× 4

Step 6

Inserting Wooden Dowel (C) into Board (7&8), then attach Board (10&12) to Board (7&8), Using Screws (D)secure Board (10&12) to Board (7&8).

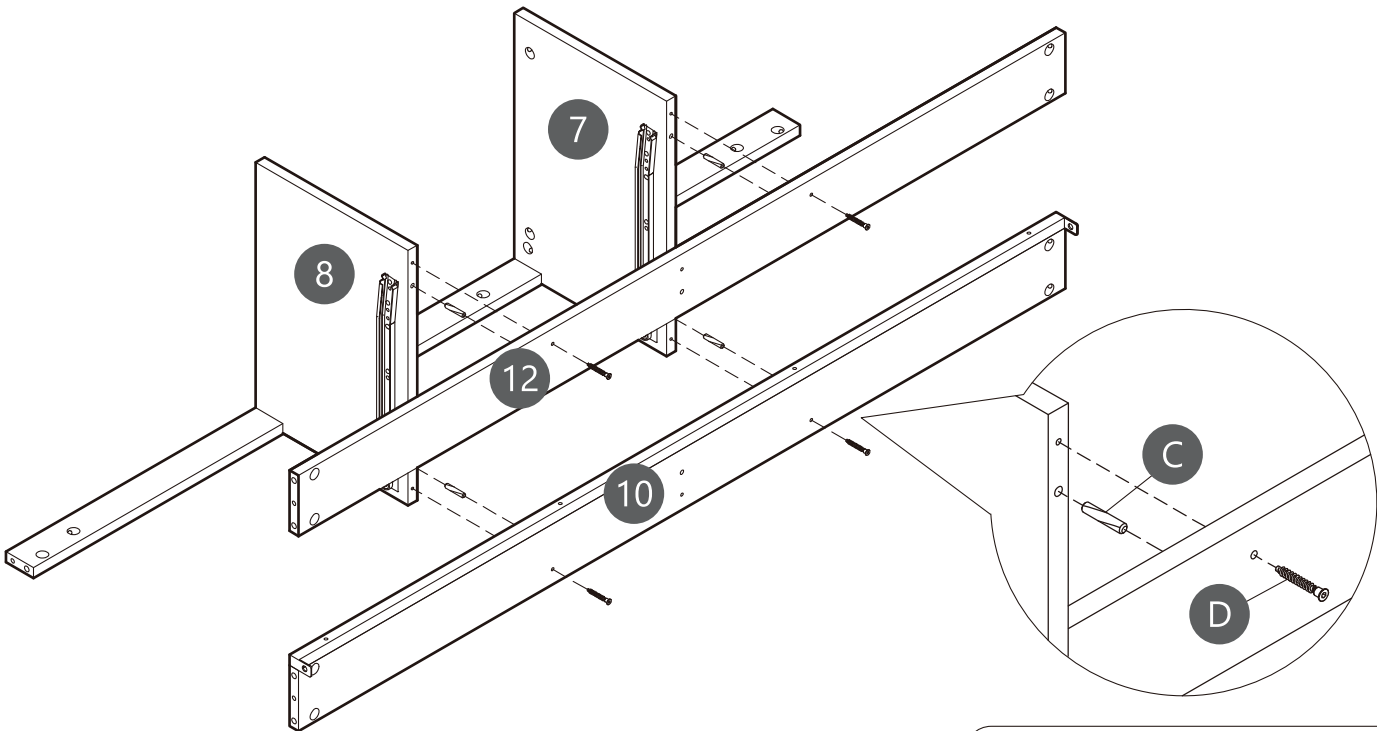

C



× 4

D




× 4

Step 7


Using Screws (G) to assemble Slide (CL) to Board (13).

Screwing one more screw in this position for reinforcement.

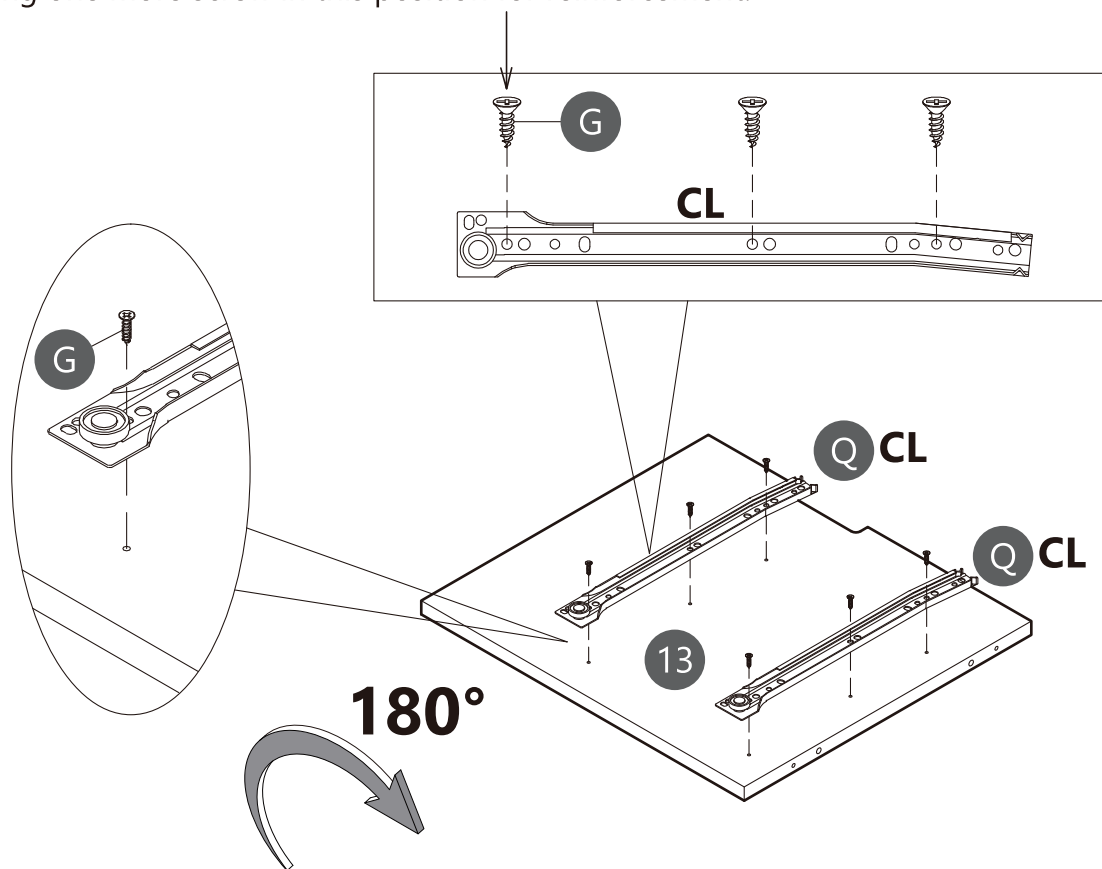


Using Screws (G) to assemble Slide (CR) to Board (13).

Screwing one more screw in this position for reinforcement.

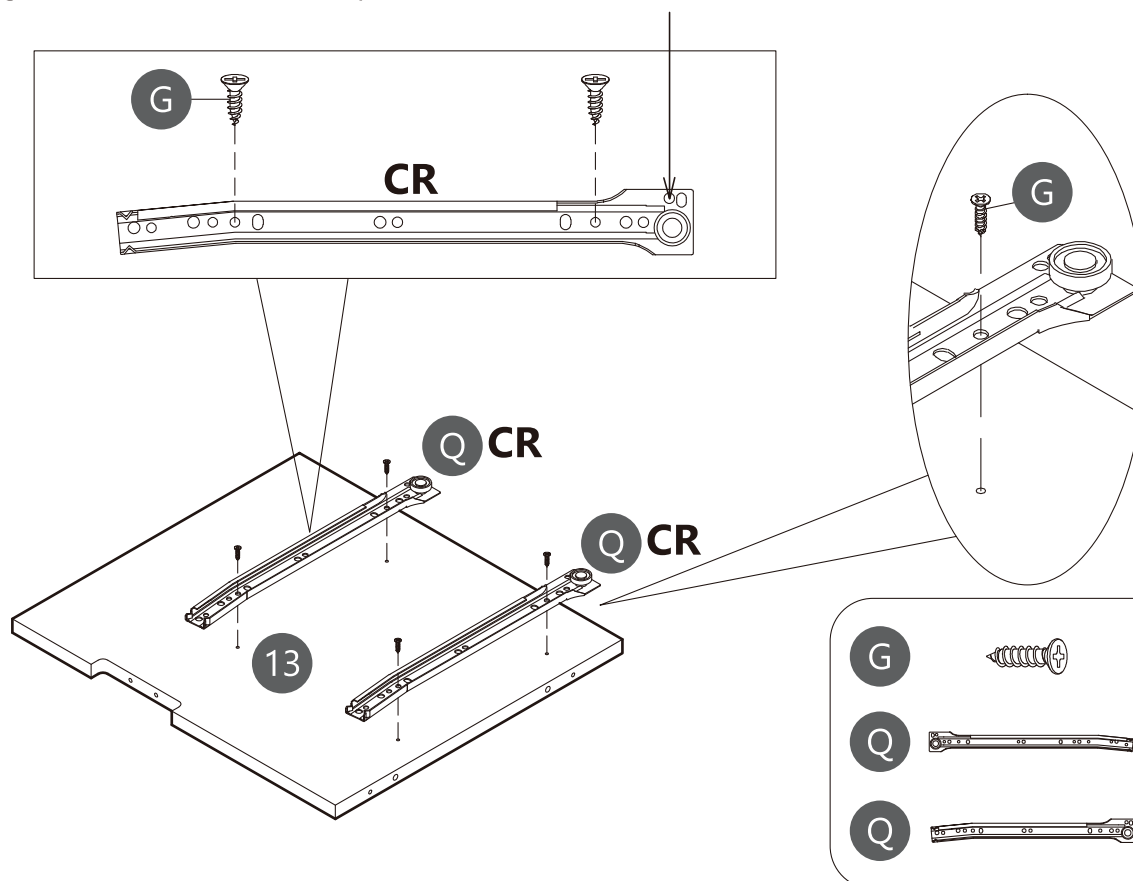

Display. Non-installation steps


Reference to the completion of the installation:
checking the position of the slides and screws in the board.

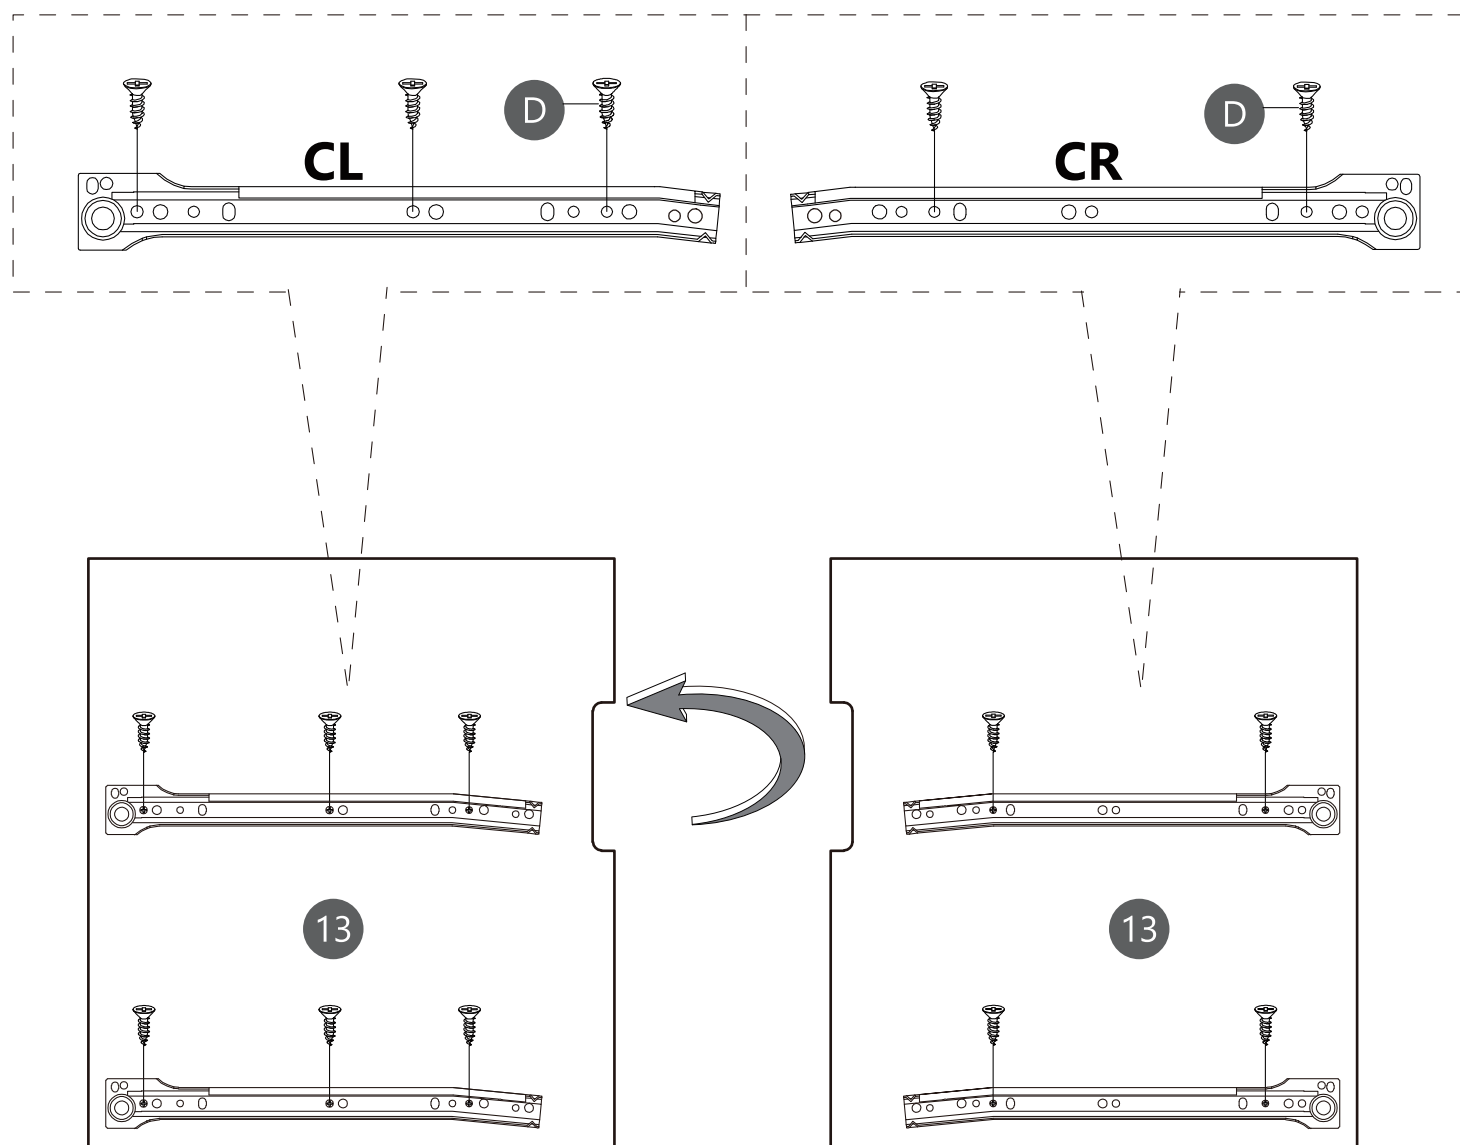

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.


Step 8

Inserting Wooden Dowel (C) into Board (10&12), then attach Board (13) to Board (10&12).
Using Screws(D)secure Board (10&12) to Board (13).

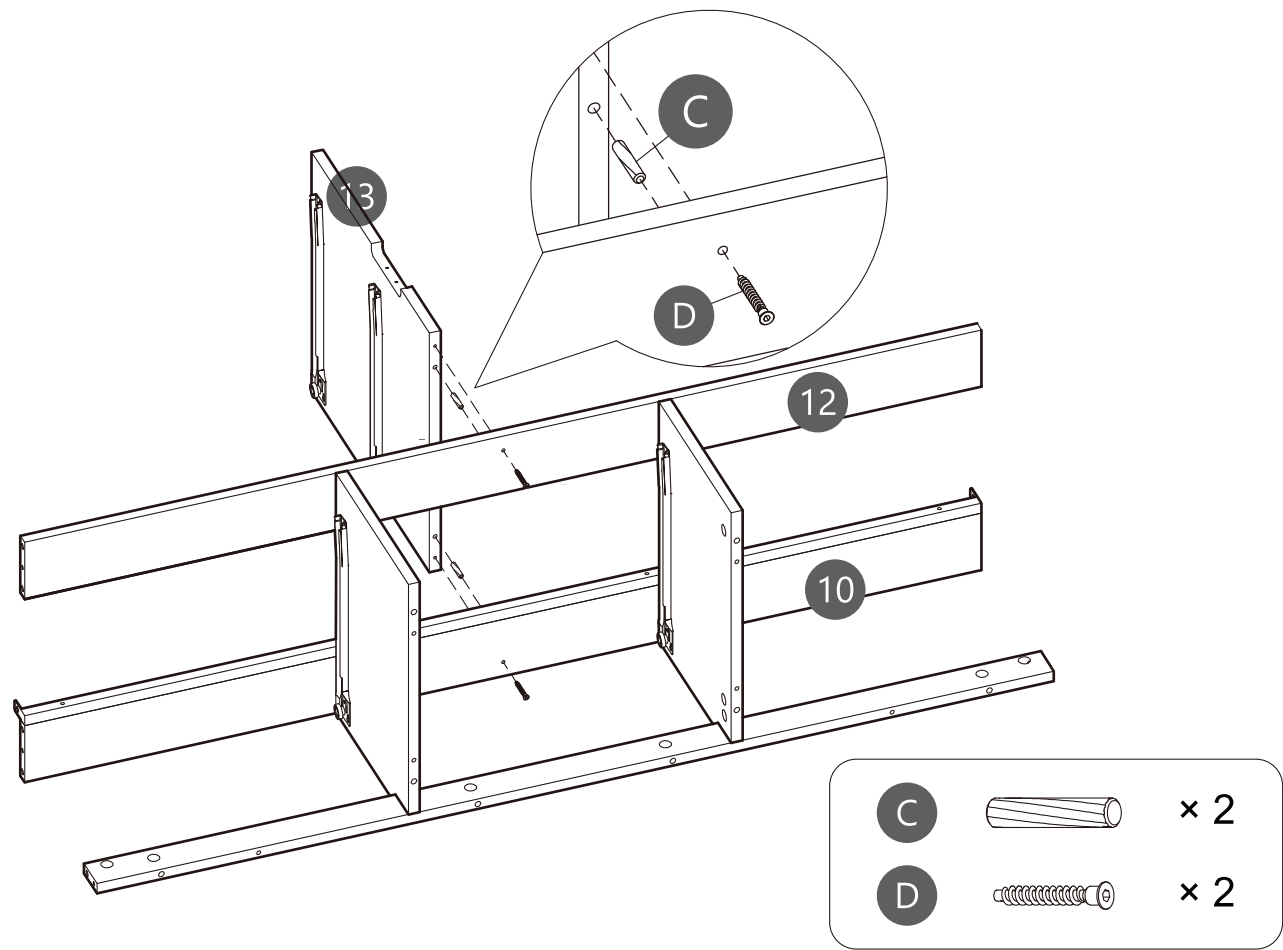


Step 9

Securing Cam Bolt (B) into Board (6).

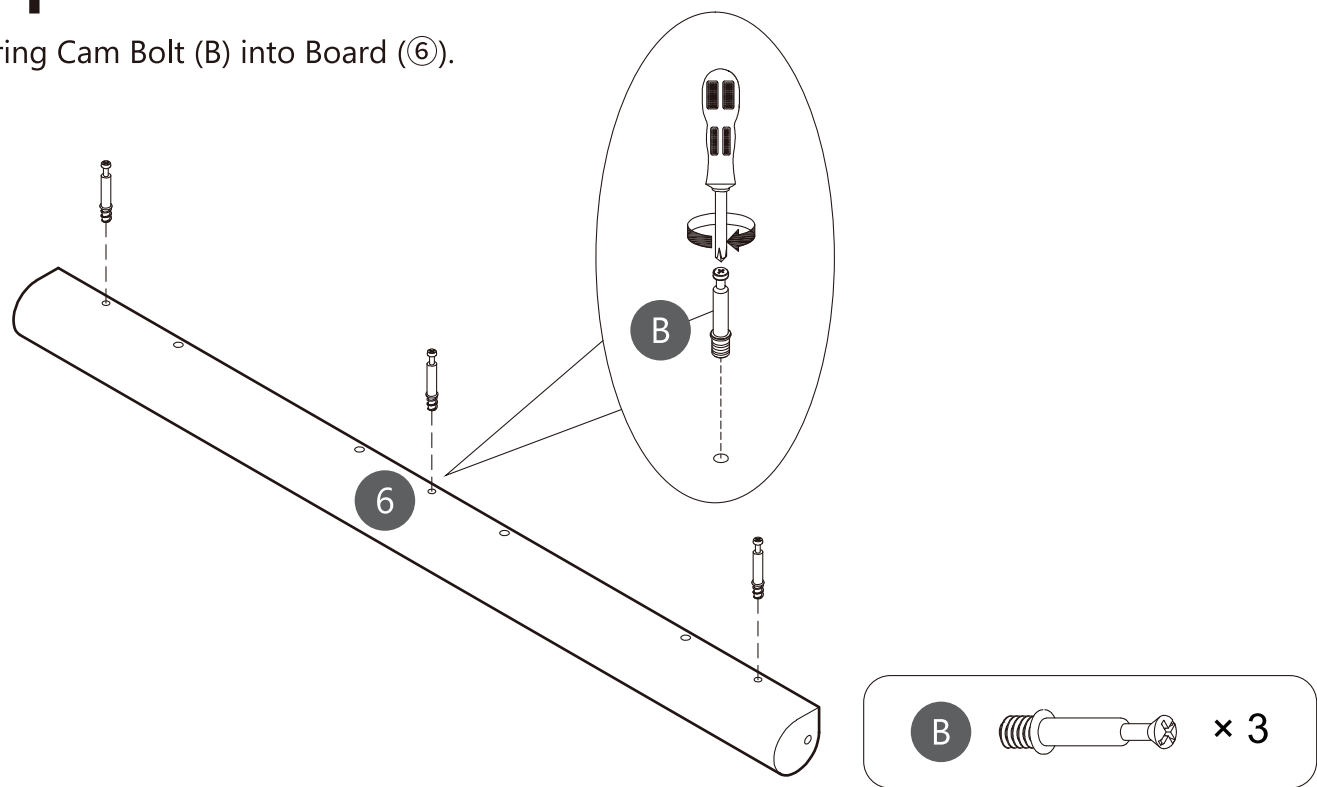


Step 10

Inserting Wooden Dowel (C) into Board (⑥), then attach Board (⑥) to Board (④).
Using Cam Lock (A) secure Board (⑥) to Board (④).

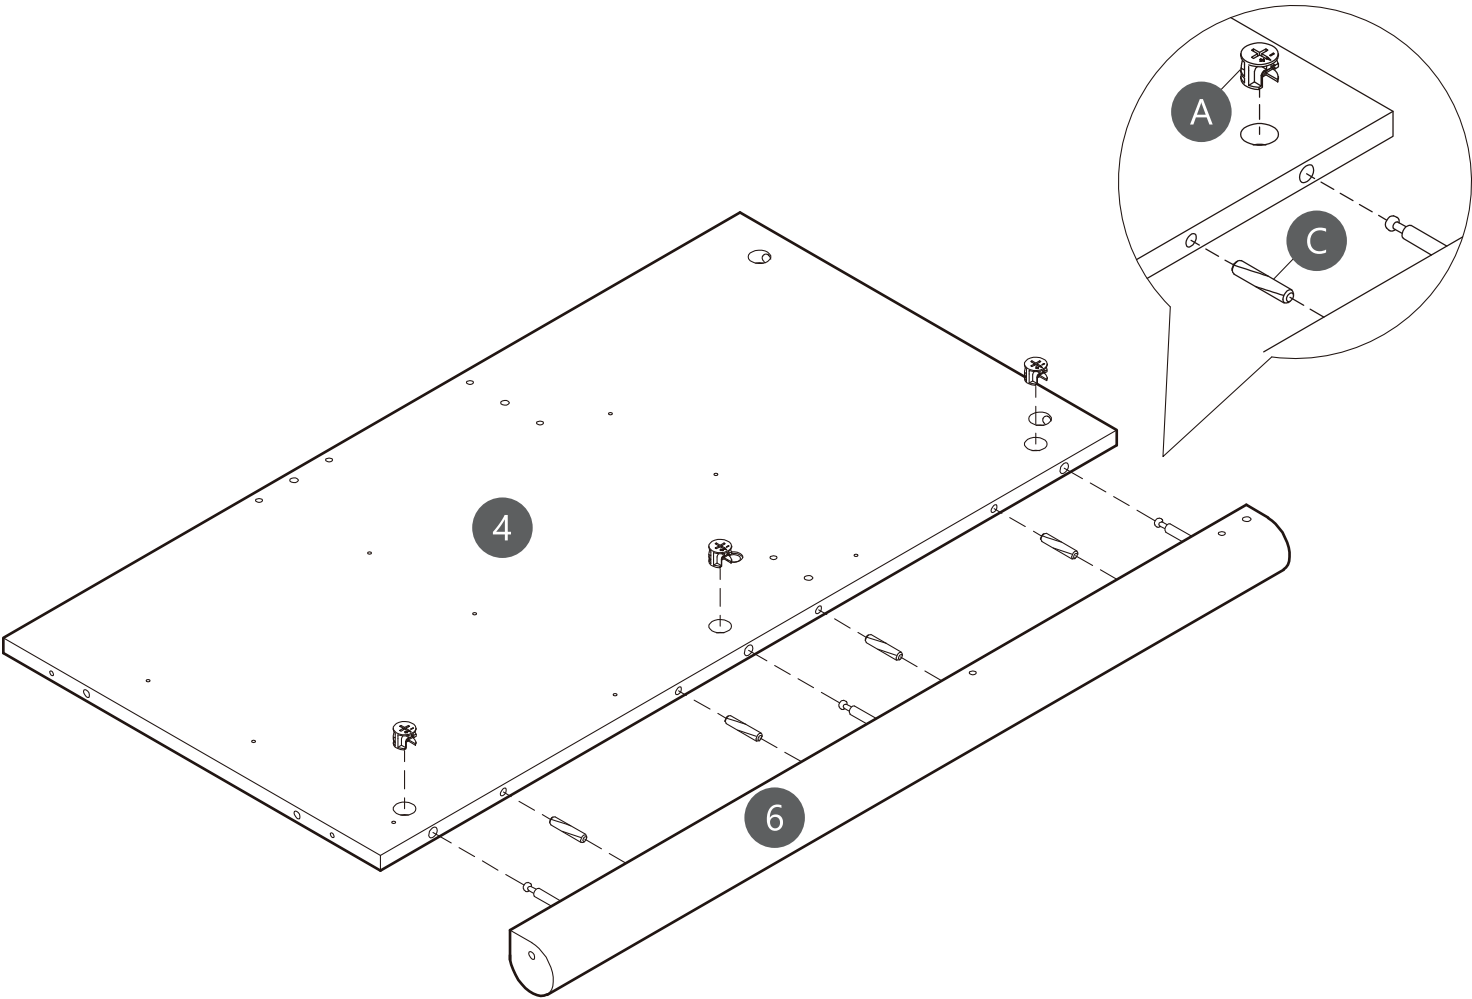


A		× 3
C		× 4

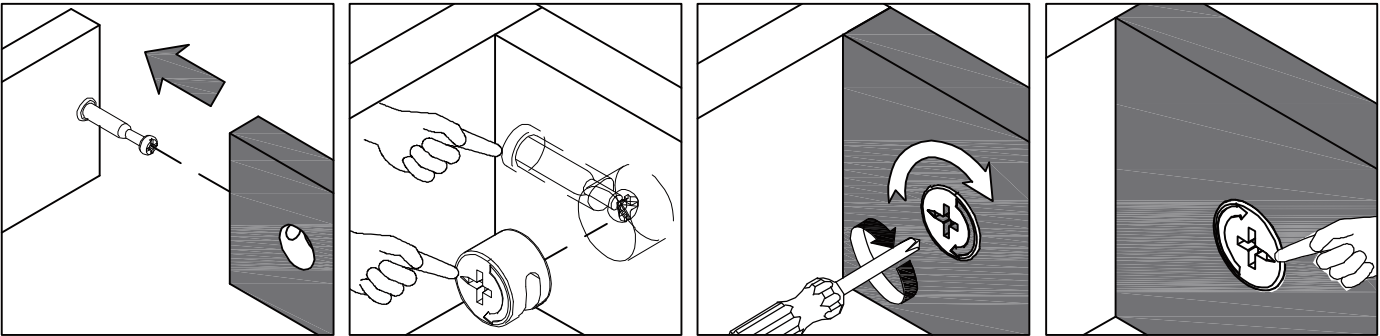

Step 11

Using Screws (G) to assemble Slide (CR) to Board (④).

Screwing one more screw in this position for reinforcement.

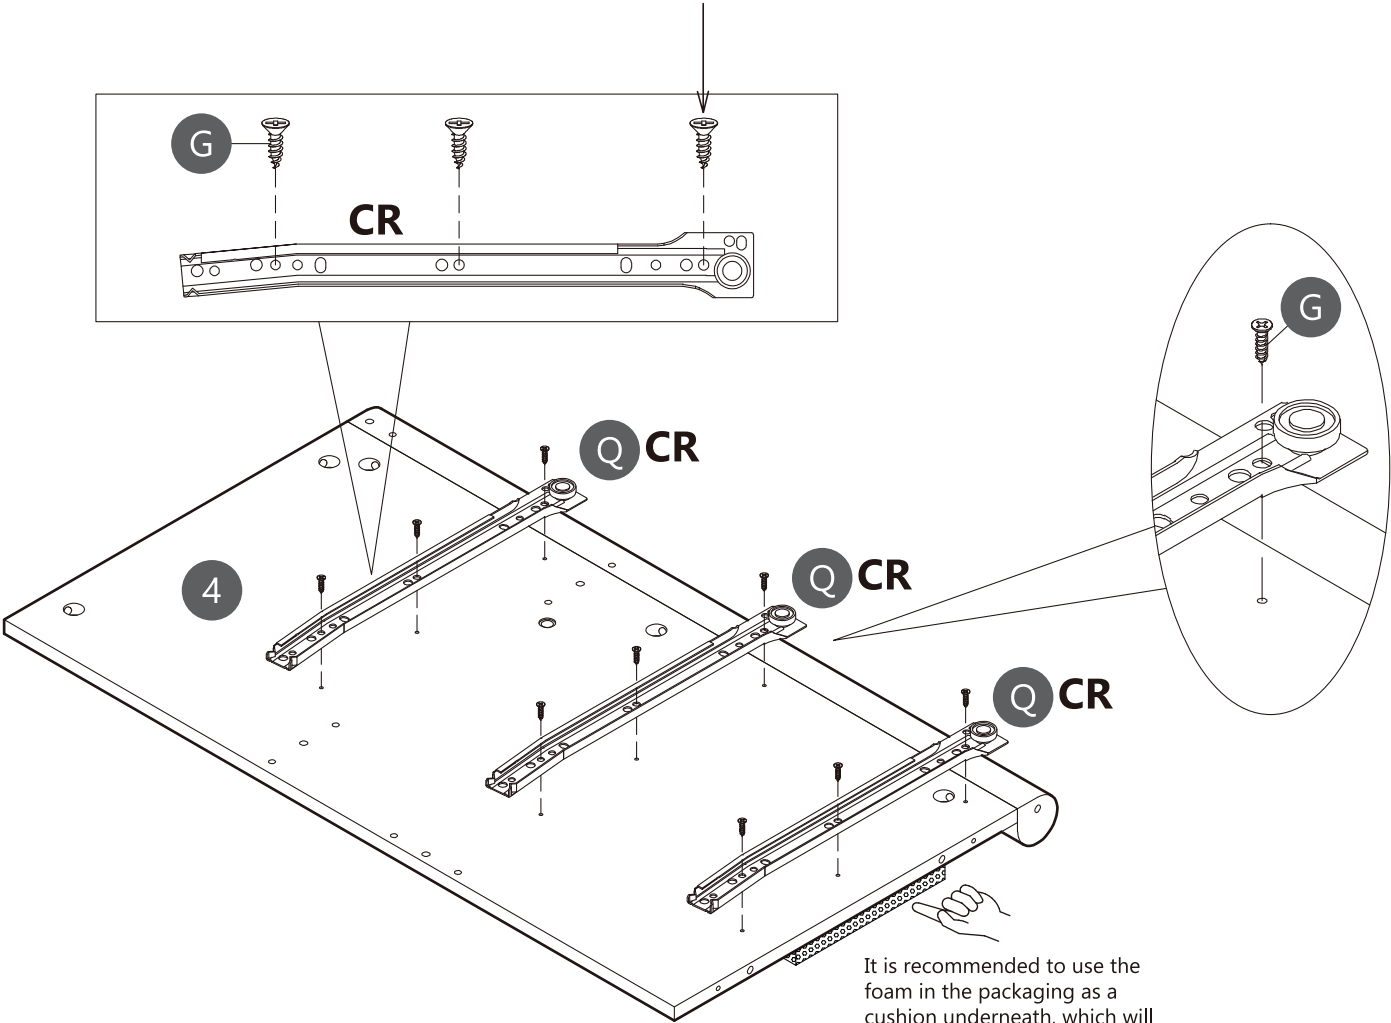


It is recommended to use the foam in the packaging as a cushion underneath, which will make it easier to install the rail.


G		× 9
Q		CR x 3

Display. Non-installation steps

Reference to the completion of the installation:
checking the position of the slides and screws in the board.

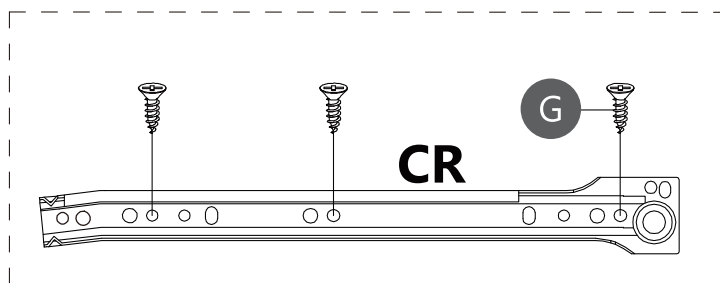


Please make sure the pre-drilled holes are on the top.

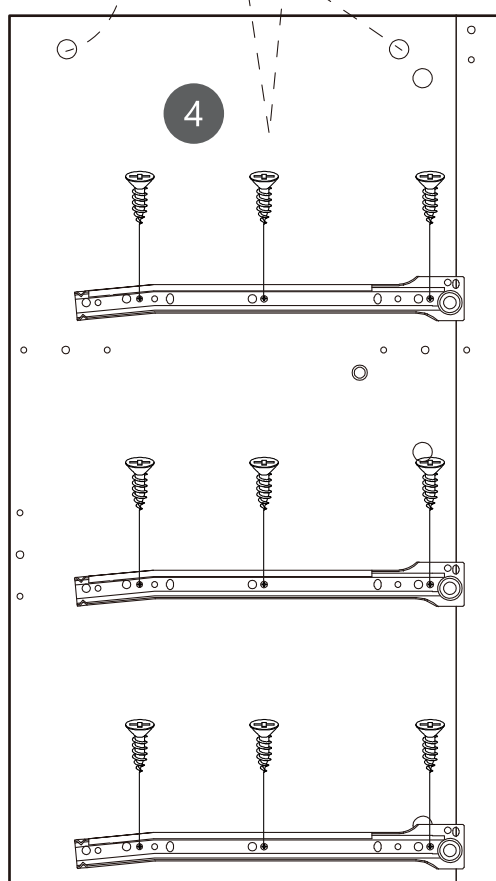

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 12


Securing Cam Bolt (B) into Board (④).

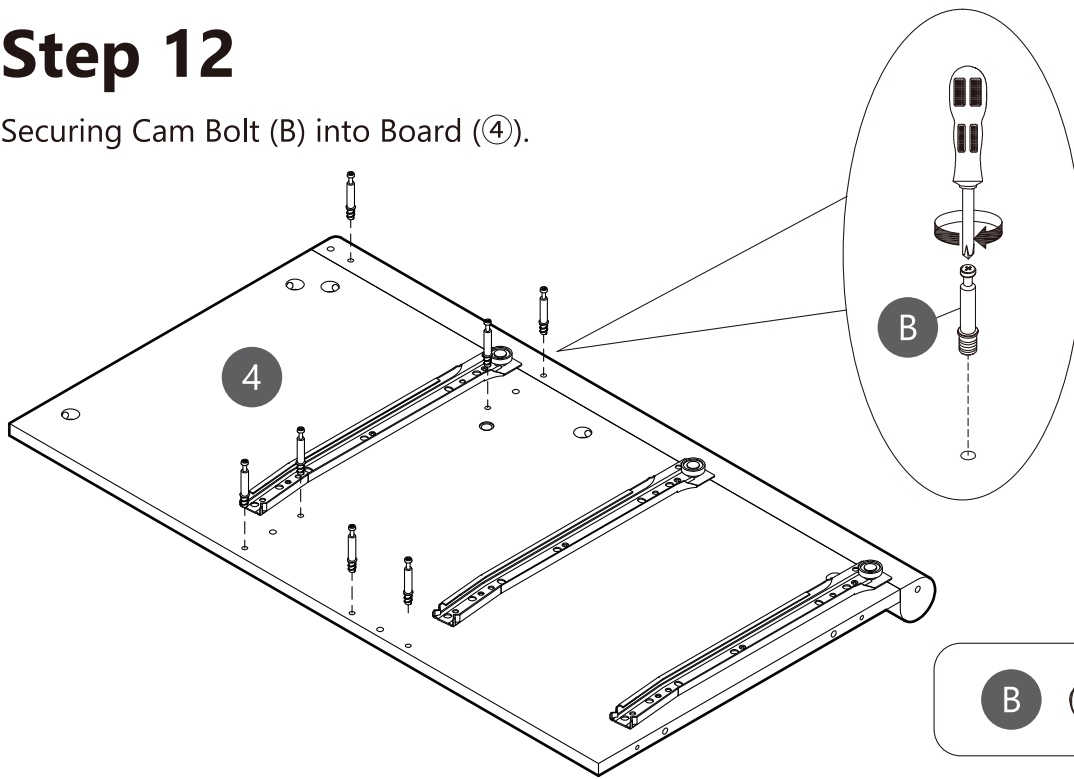





B × 7

Step 13

Inserting Wooden Dowel (C) into Board (④), then attach Board (④) to Board (⑨&⑩&⑫).
Using Cam Lock (A) secure Board (④) to Board (⑨&⑩&⑫).
Using Screws (J) to secure Steel Pipe (⑪) to Board (④).

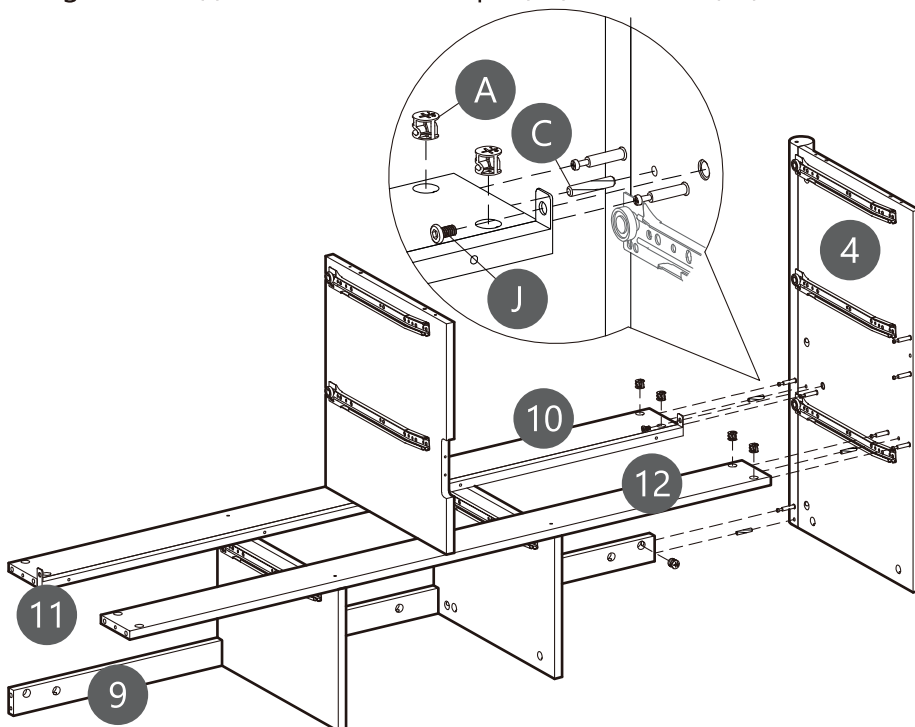


A × 5
C × 3
J × 1

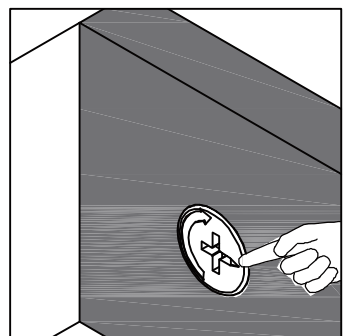
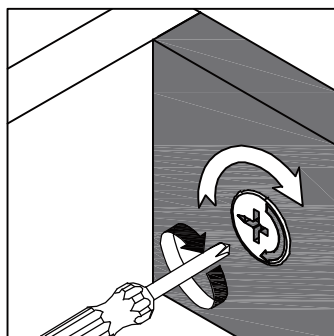
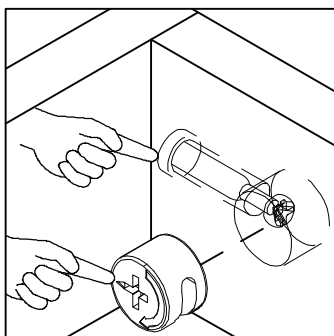
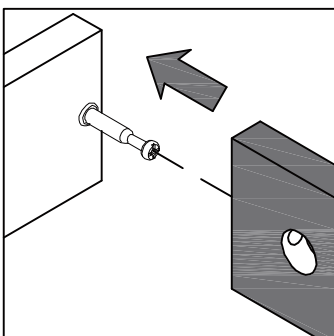


Step 14

Inserting Wooden Dowel (C) into Board (④).
Attach Board (⑭) to Board (④). Using Cam Lock (A) secure Board (⑭) to Board (④).


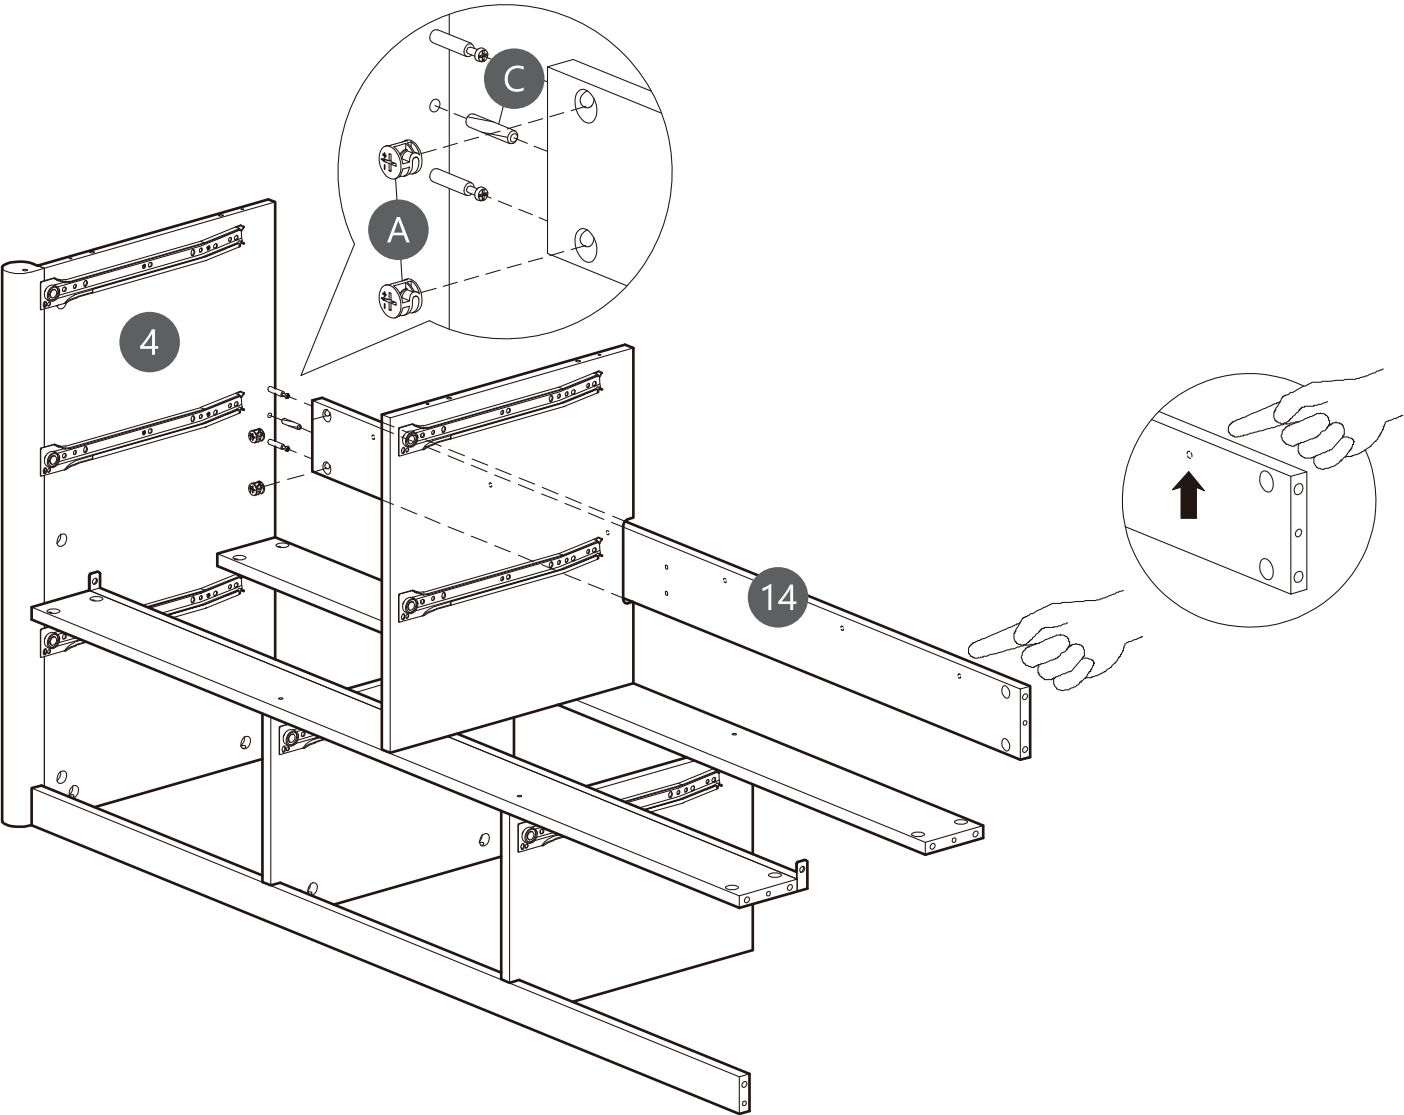


A		× 2
C		× 1

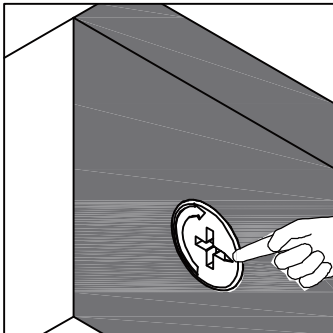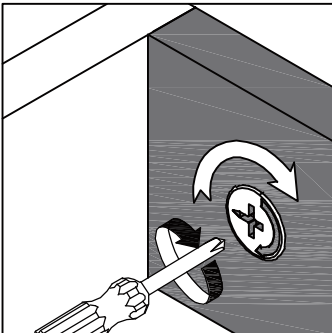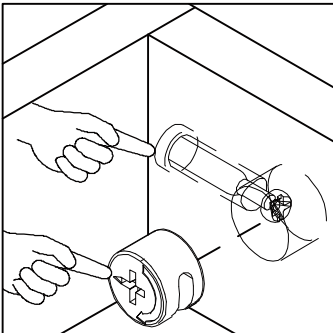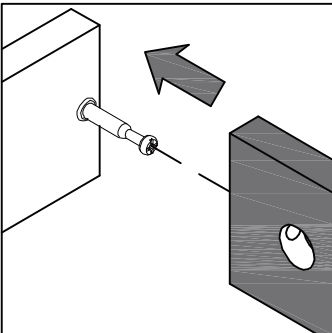



Step 15

Using Screws (D) to lock Board (13&14).

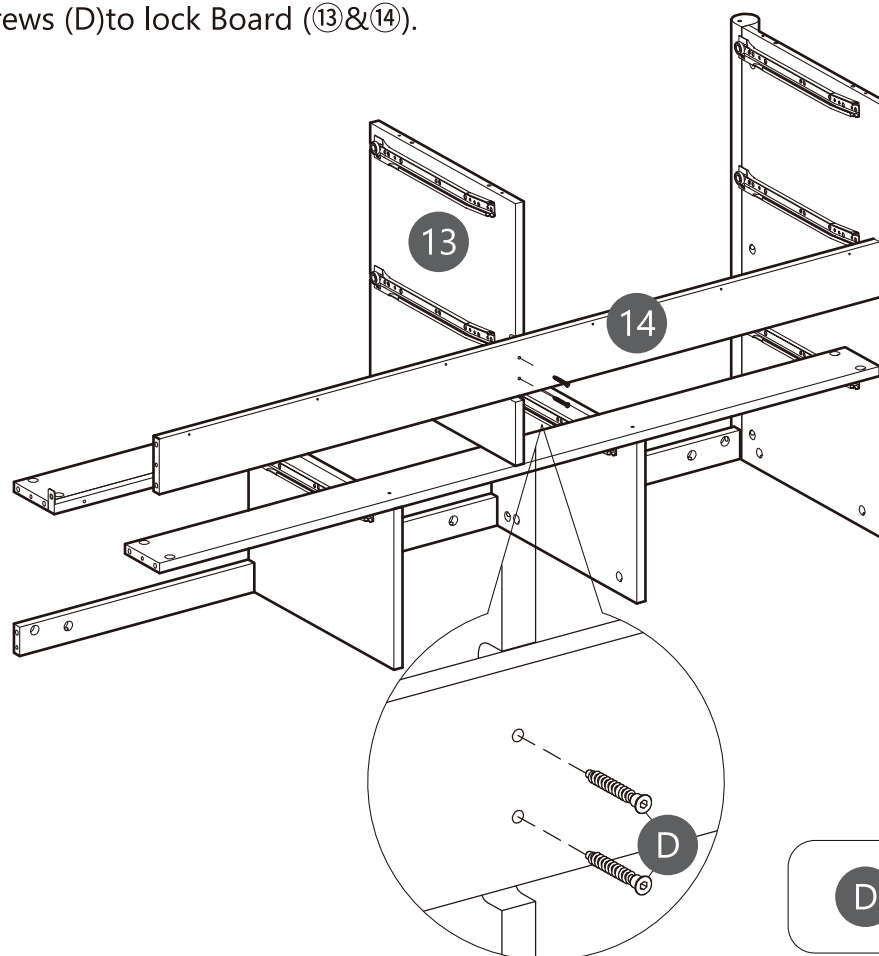


Step 16

Securing Cam Bolt (B) into Board (5).

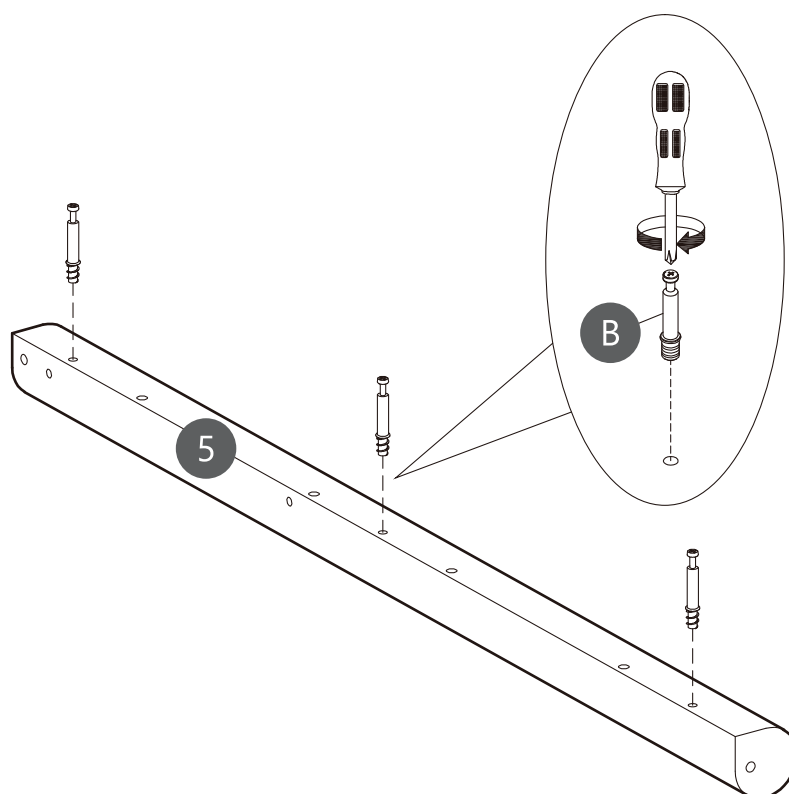


Step 17

Inserting Wooden Dowel (C) into Board (⑤), then attach Board (⑤) to Board (③).
Using Cam Lock (A) secure Board (⑤) to Board (③).

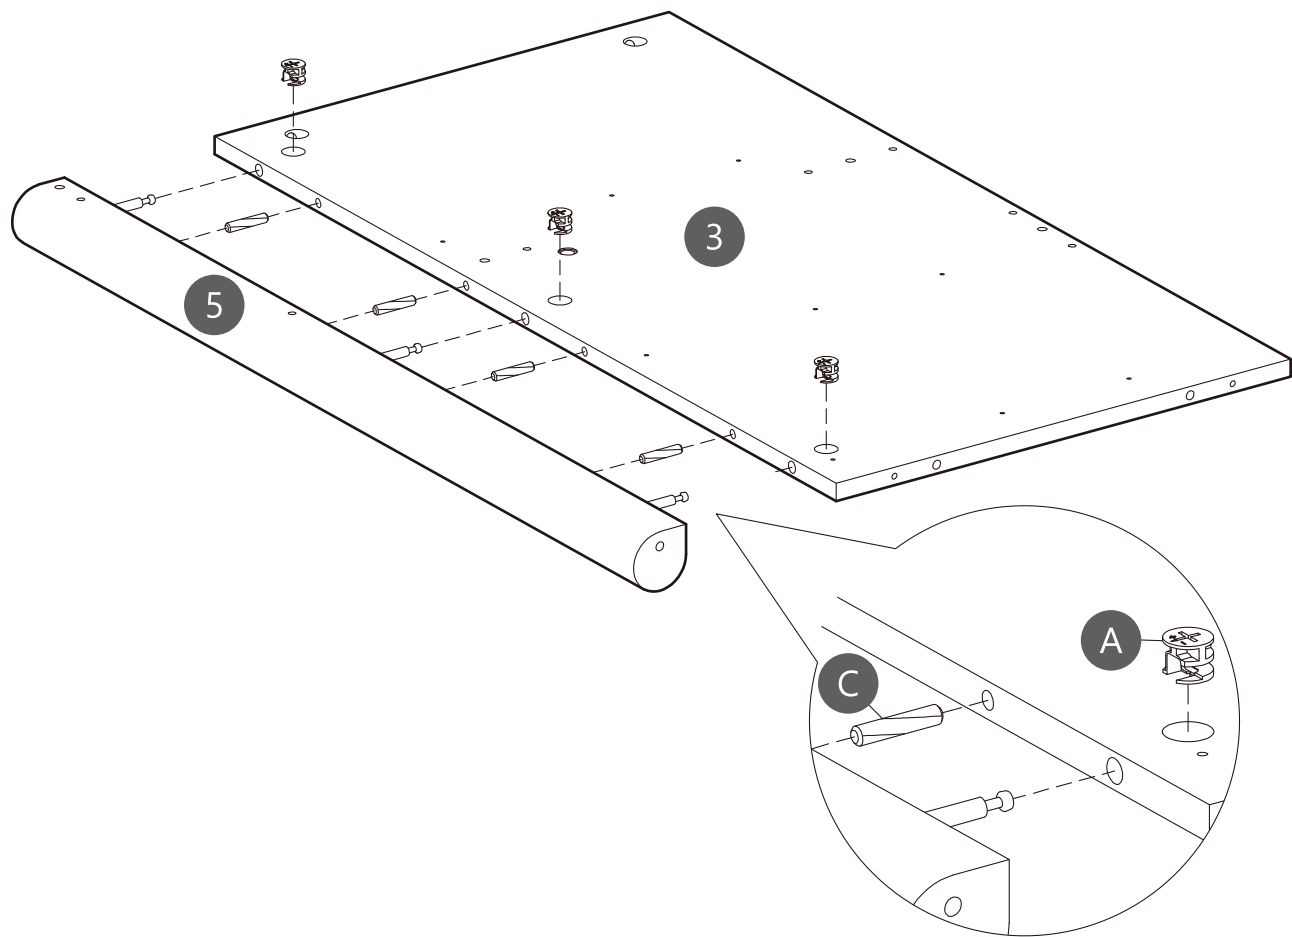


A		× 3
C		× 4

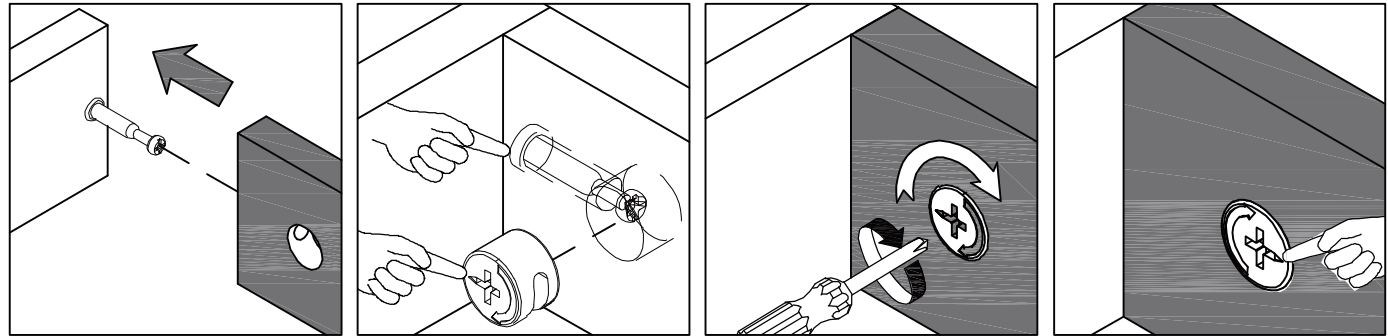

Step 18


Using Screws (G) to assemble Slide (CL) to Board (③).

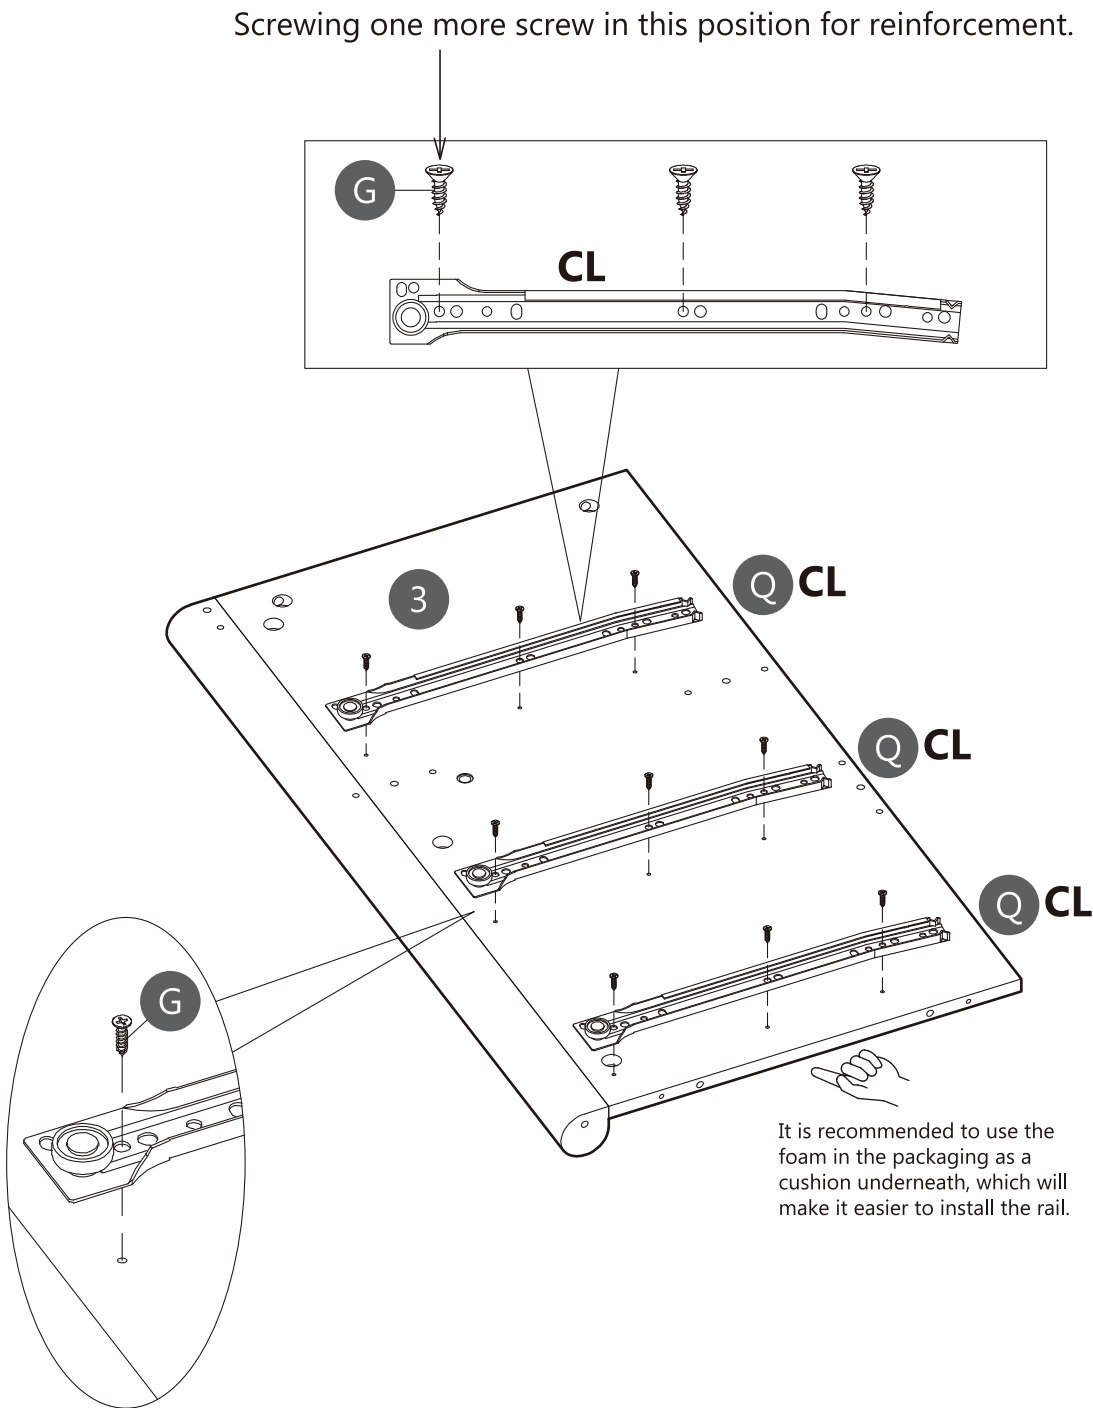


G		× 9
Q		CL x 3

Display. Non-installation steps

Reference to the completion of the installation:
checking the position of the slides and screws in the board.

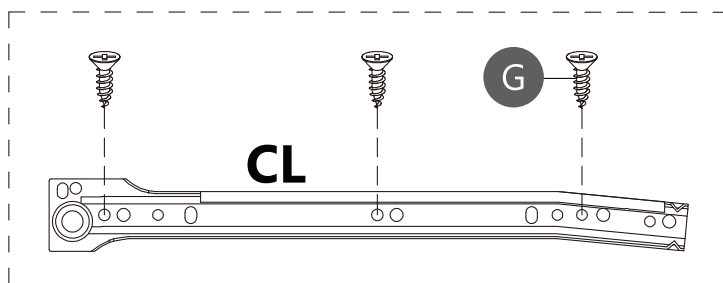


Please make sure the pre-drilled holes are on the top.

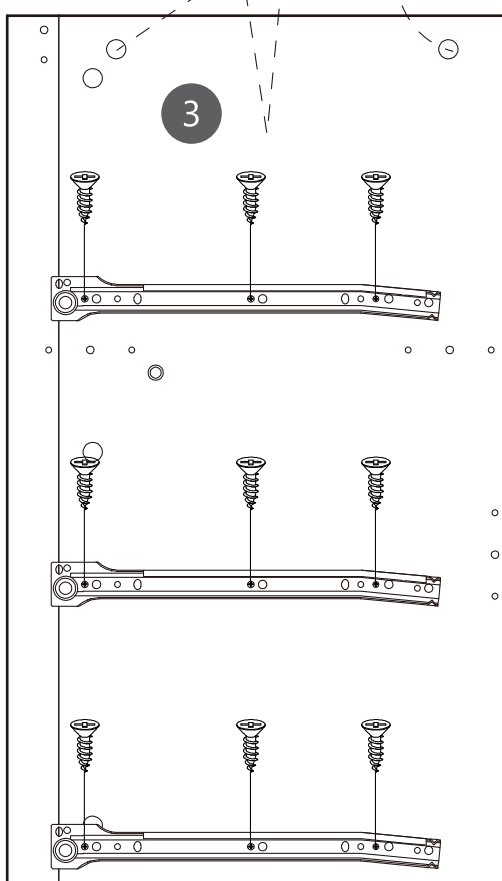

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 19

Securing Cam Bolt (B) into Board (③).

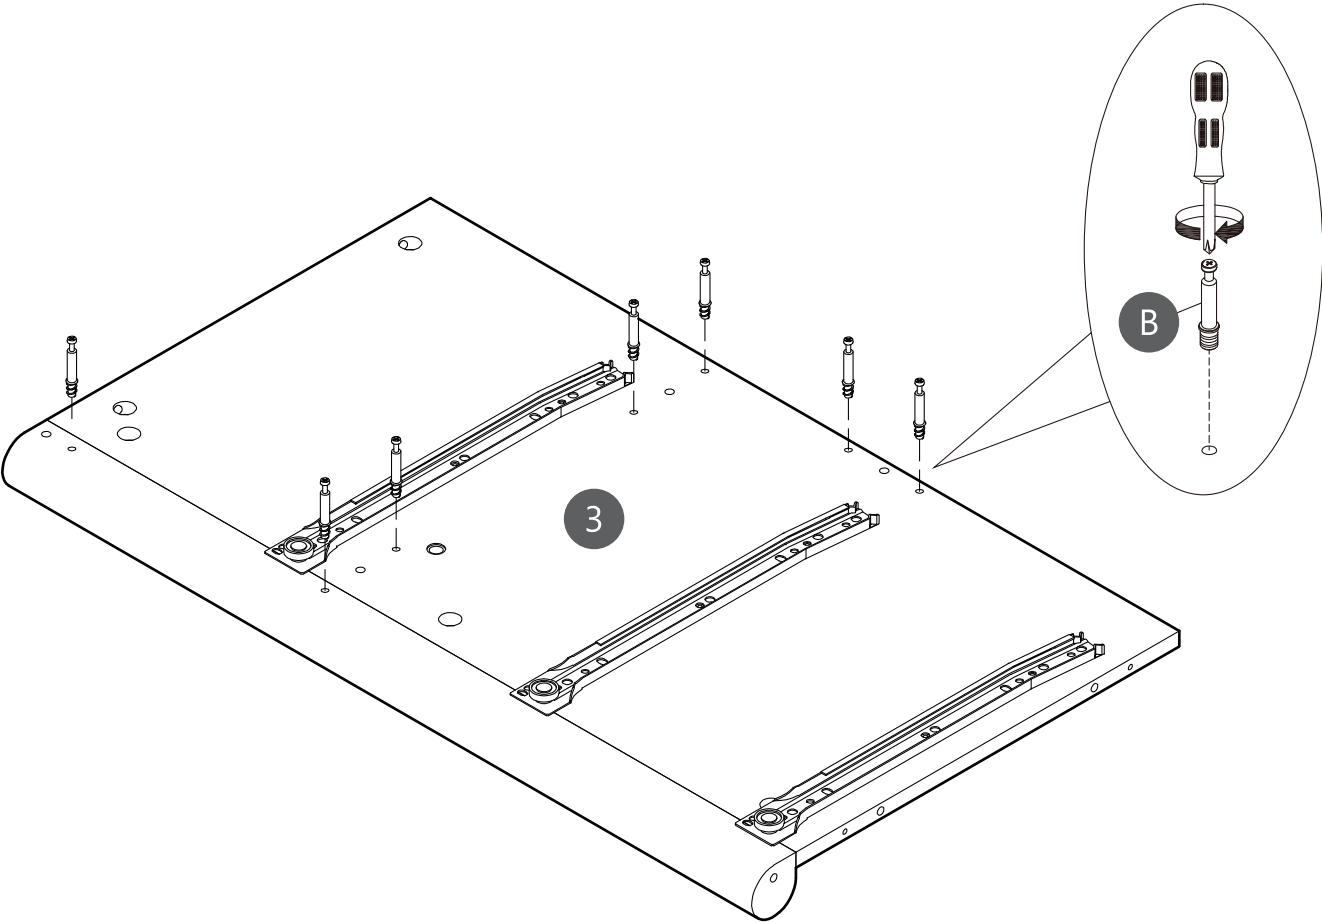


B

A detailed line drawing of a cam bolt, showing its hexagonal head with a central slot and its threaded shaft.





× 7

Step 20

Inserting Wooden Dowel (C) into Board (③), then attach Board (③) to Board (⑨&⑩&⑫&⑭).
Using Cam Lock (A) secure Board (③) to Board (⑨&⑩&⑫&⑭).
Using Screws (J) to secure Steel Pipe (⑪) to Board (③).

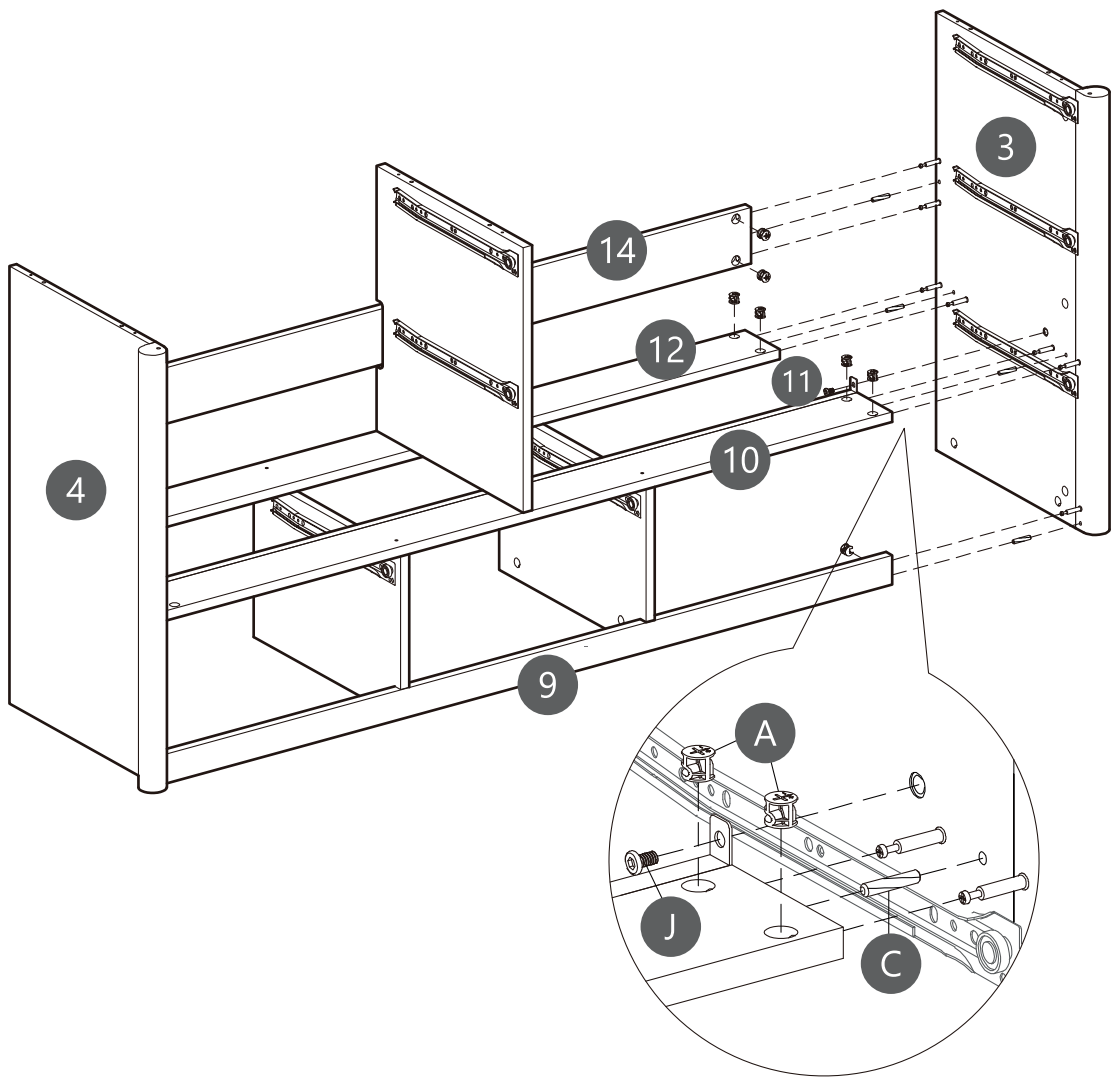


A		× 7
C		× 4
J		× 1

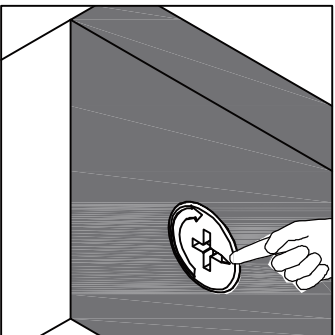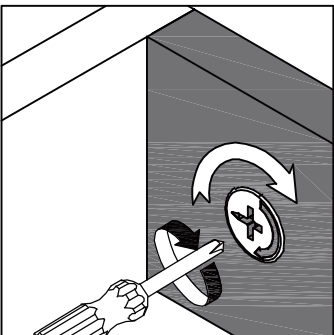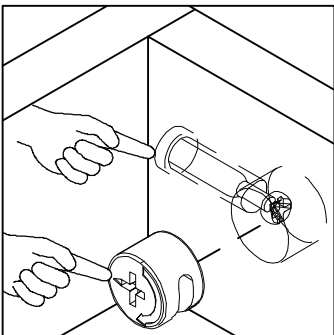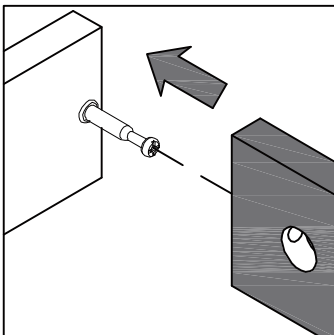


Step 21

Securing Cam Bolt (B) into Board (②).

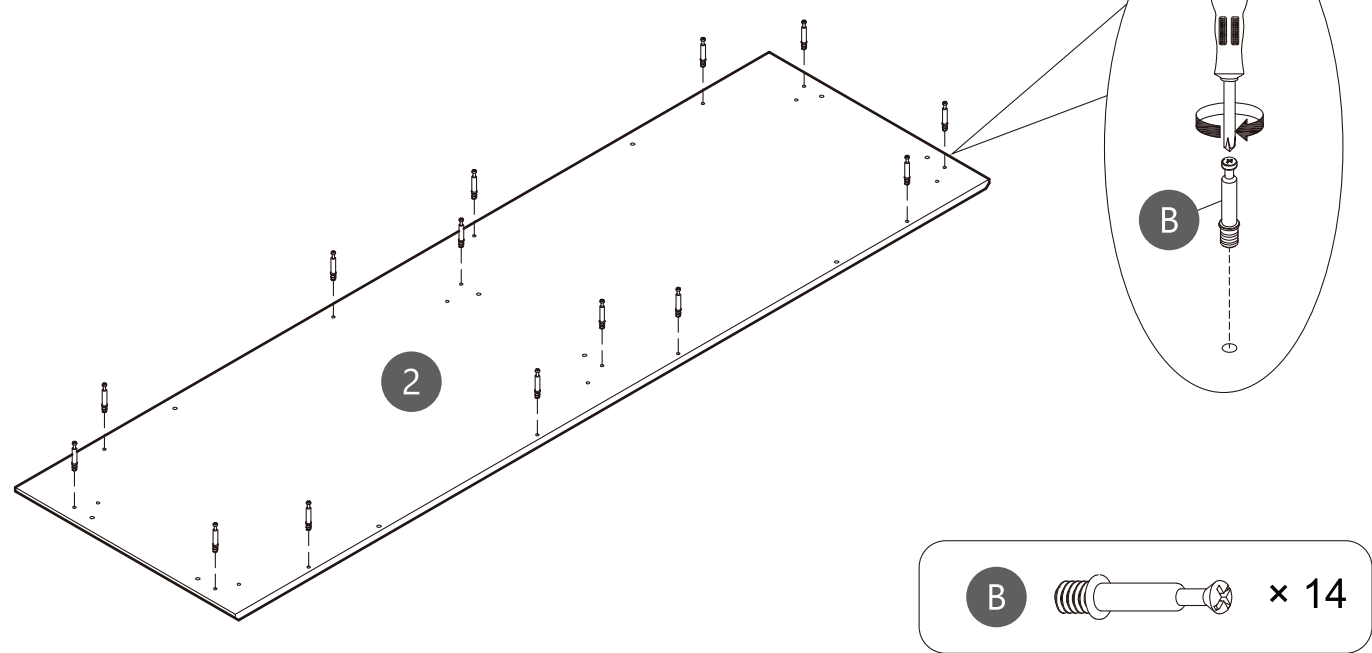


Step 22

Inserting Wooden Dowel (C) into Board (③&④&⑬).
Using Screws (D) secure Board (②) to Board (③&④&⑬).

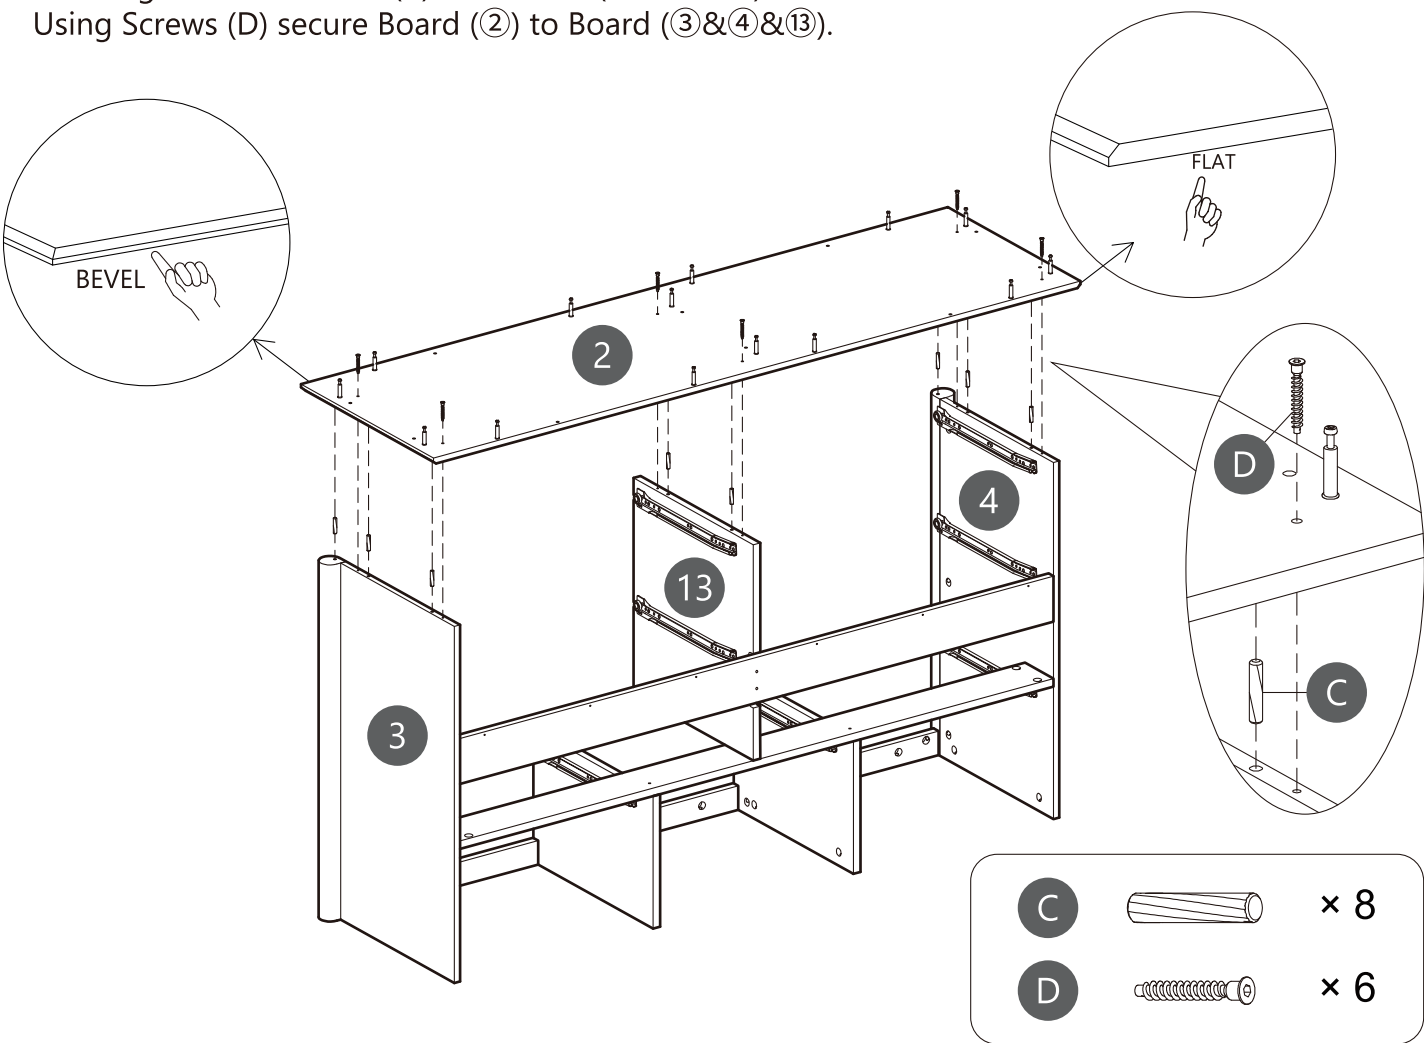



Step 23

Securing Cam Bolt (B) into Board (15&17&18&19).

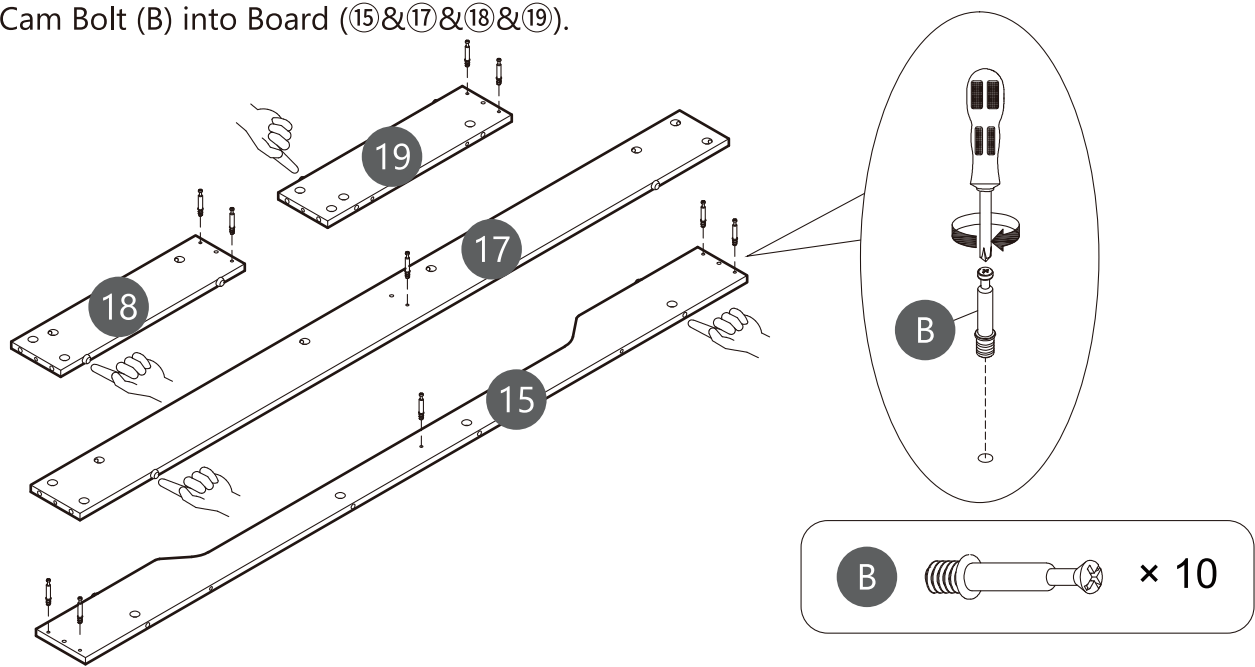


Step 24

Inserting Wooden Dowel (C) into Board (17), then attach Board (16&18&19) to Board (17).
Using Cam Lock(A)secure Board (16&18&19) to Board (17).

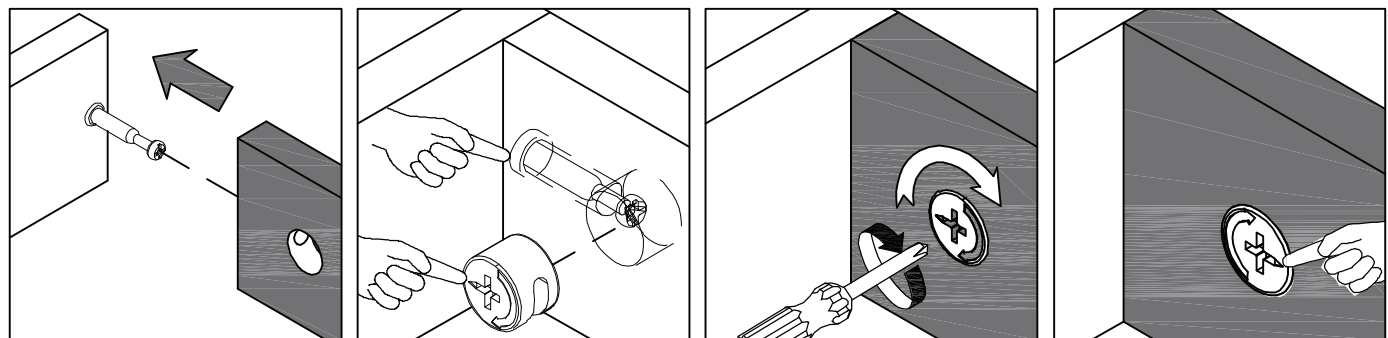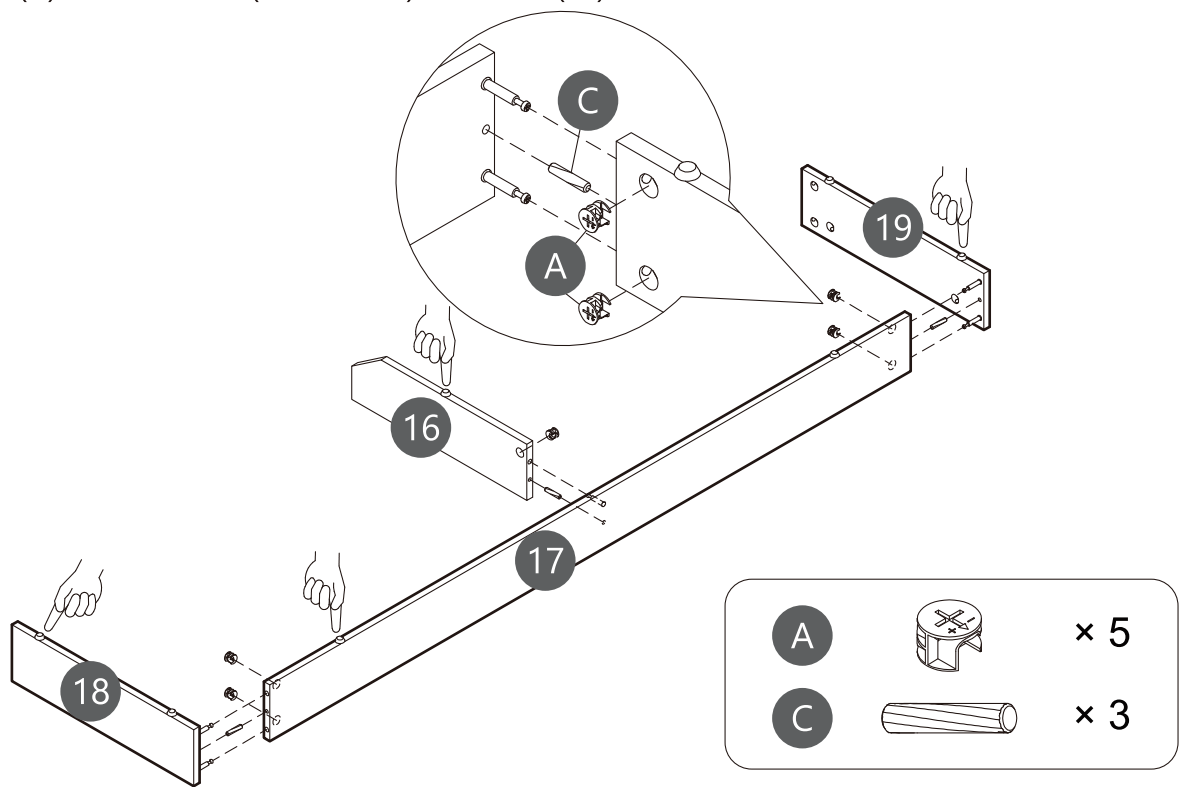


Step 25

Inserting Wooden Dowel (C) into Board (18&19), then attach Board (15) to Board (16&18&19).
Using Cam Lock(A)secure Board (15) to Board (16&18&19).

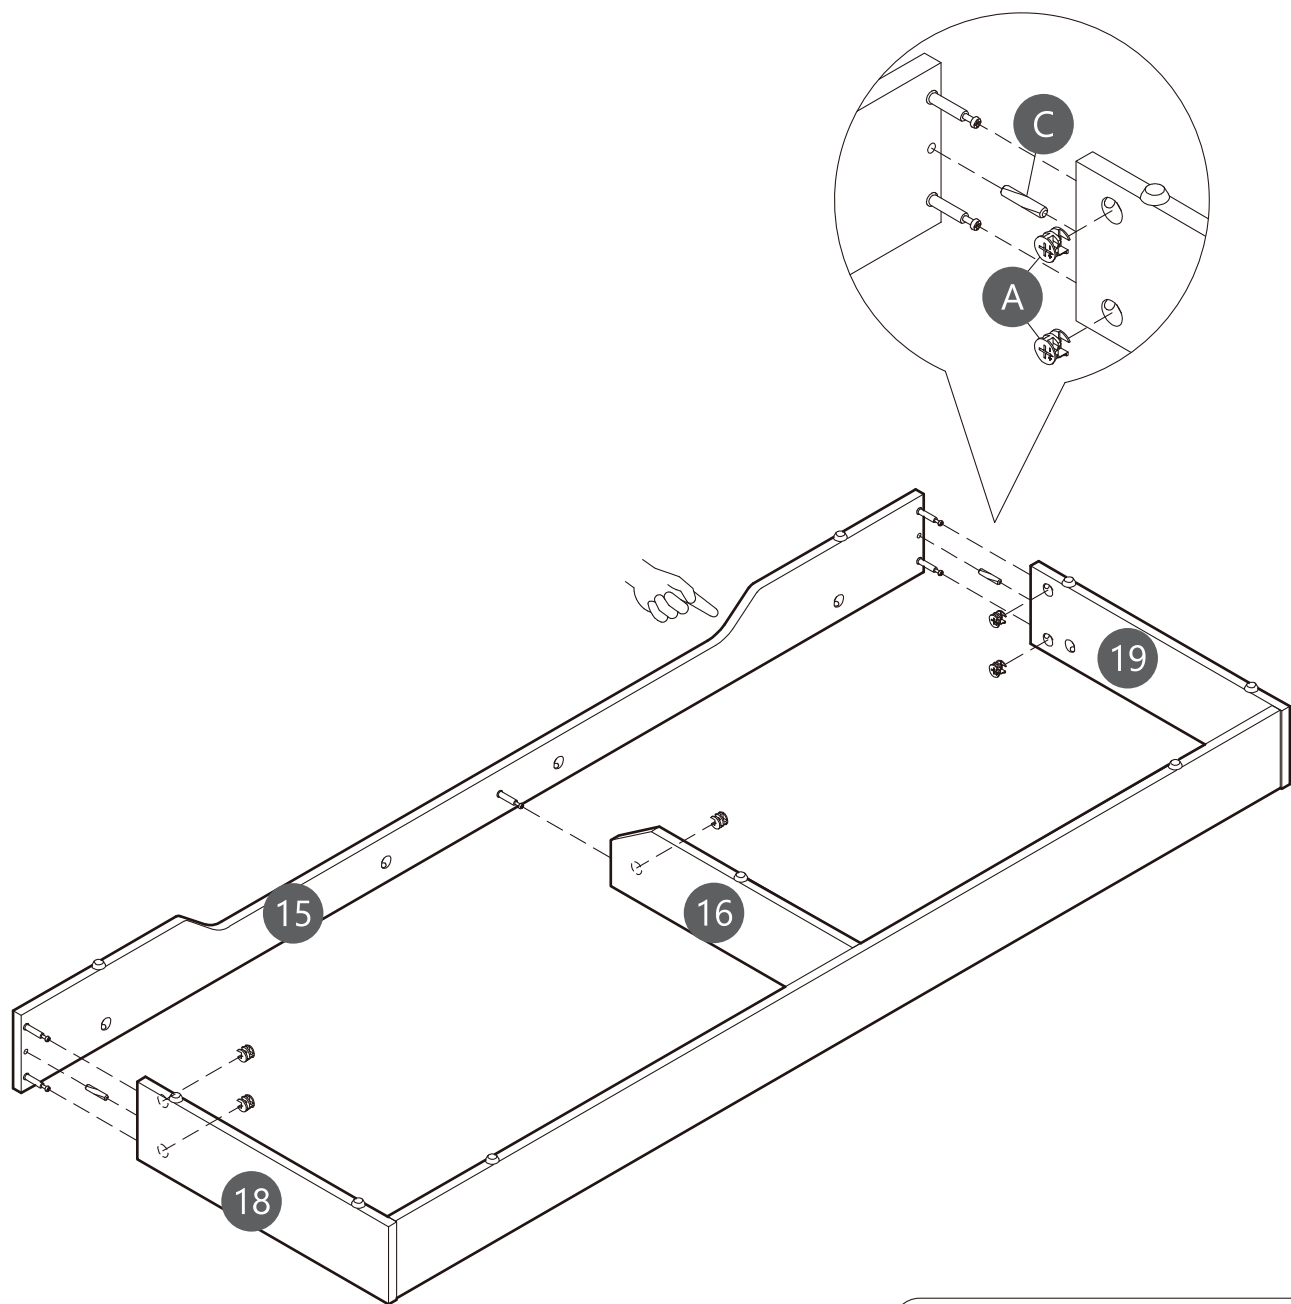


A		× 5
C		× 2

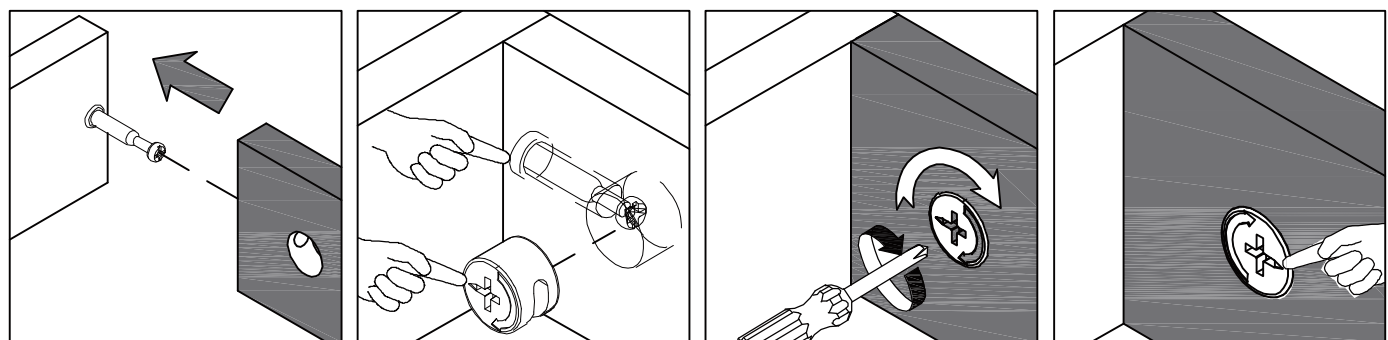


Step 26

Inserting Wooden Dowel (C) into Board (2), then attach Board (15&17&18&19) to Board (2).
Using Cam Lock (A) secure Board (15&17&18&19).

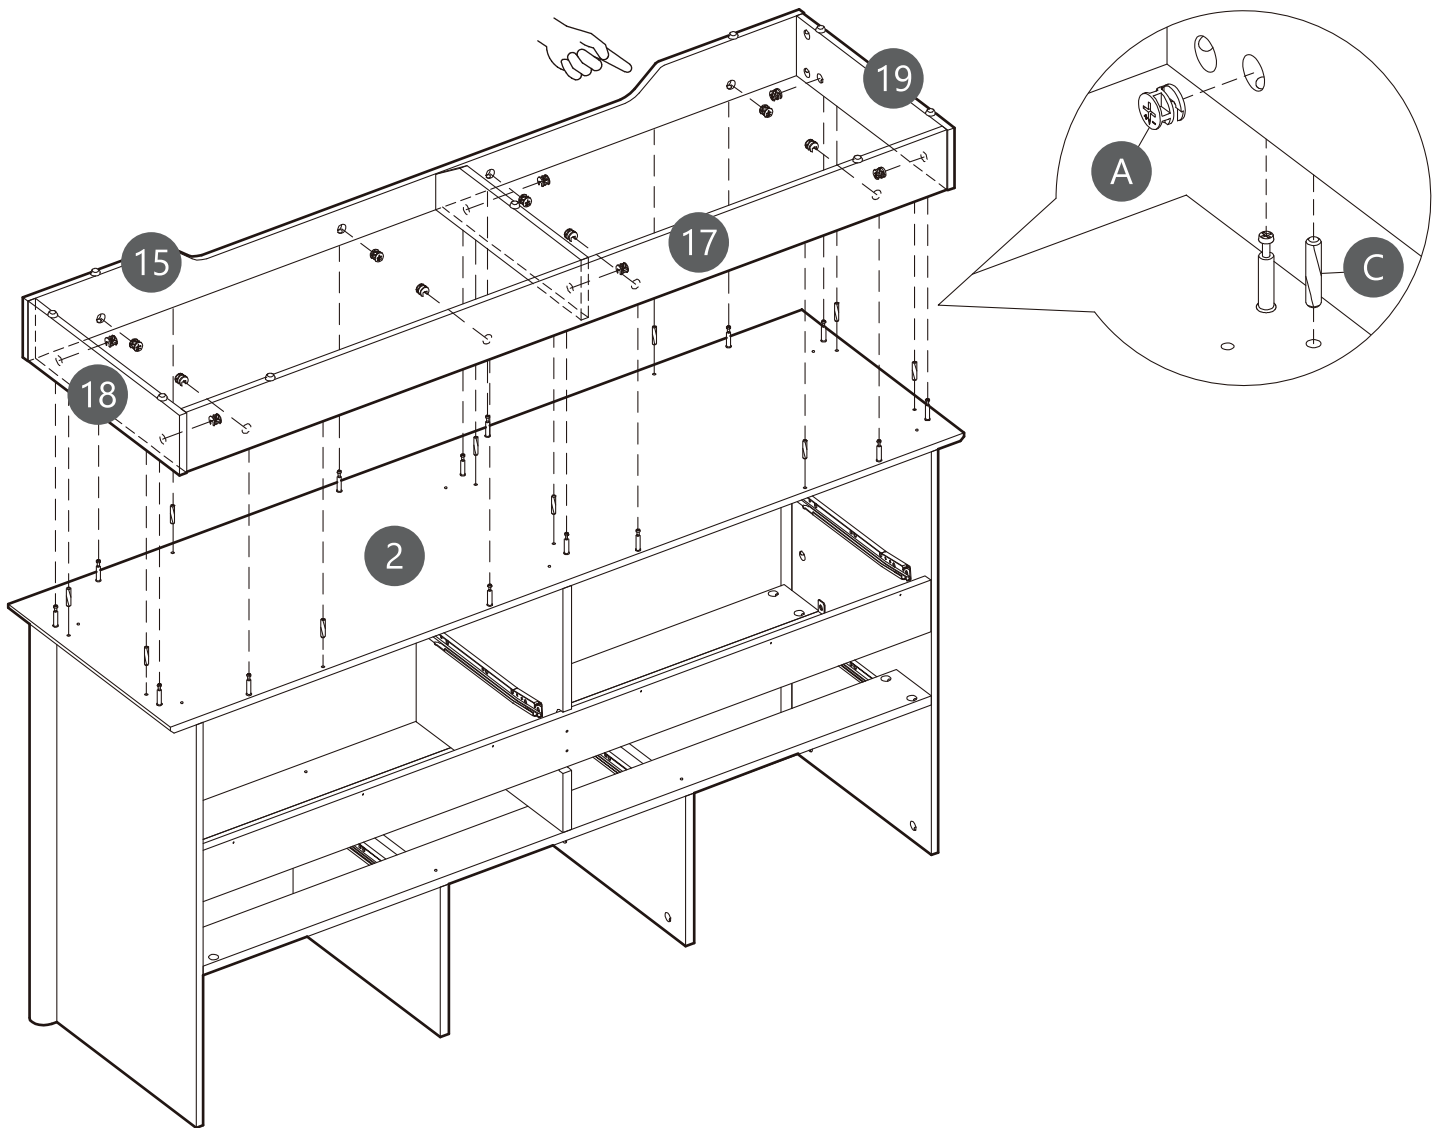


A		× 14
C		× 10

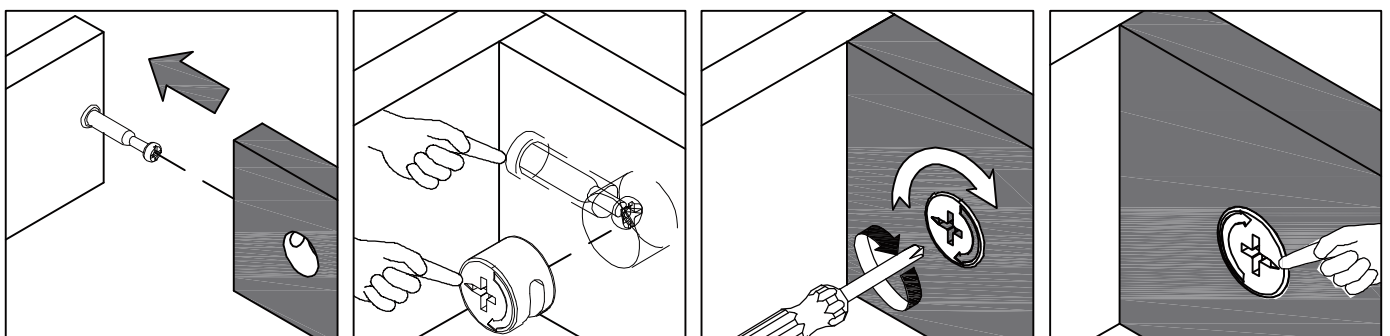



Step 27

Securing Cam Bolt (B) into Board (①).

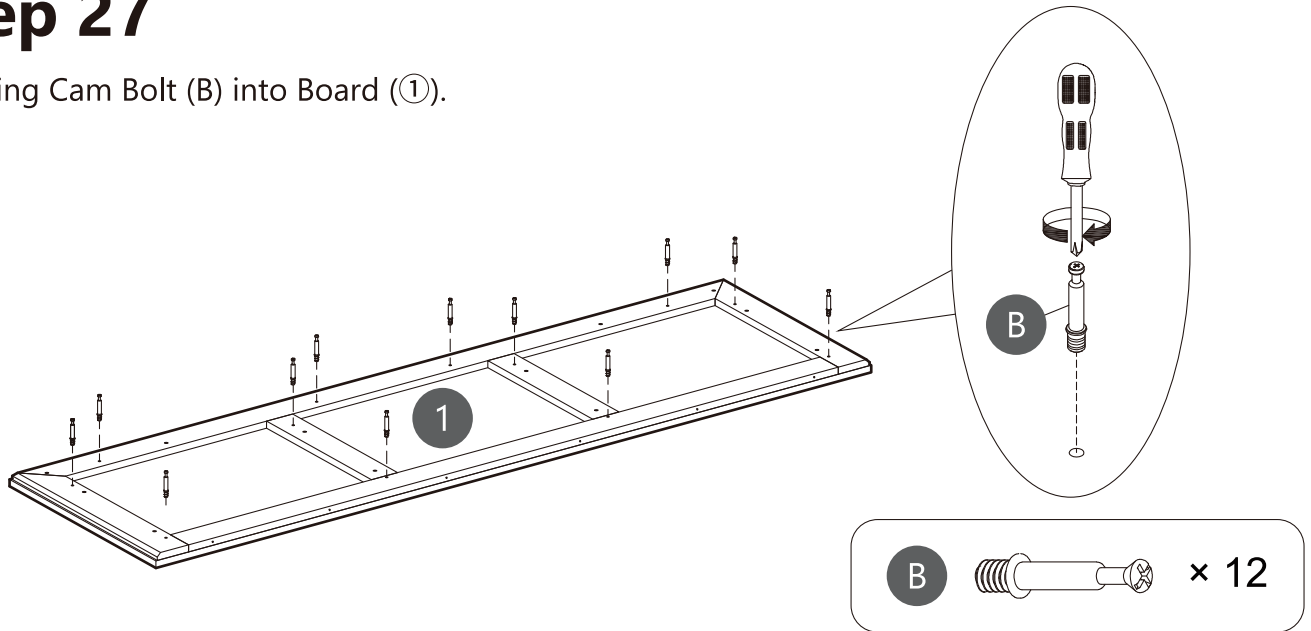


Step 28

Inserting Wooden Dowel (C) into Board (③&④&⑦&⑧).
Using Cam Lock(A)secure Board (①) to Board (③&④&⑦&⑧).

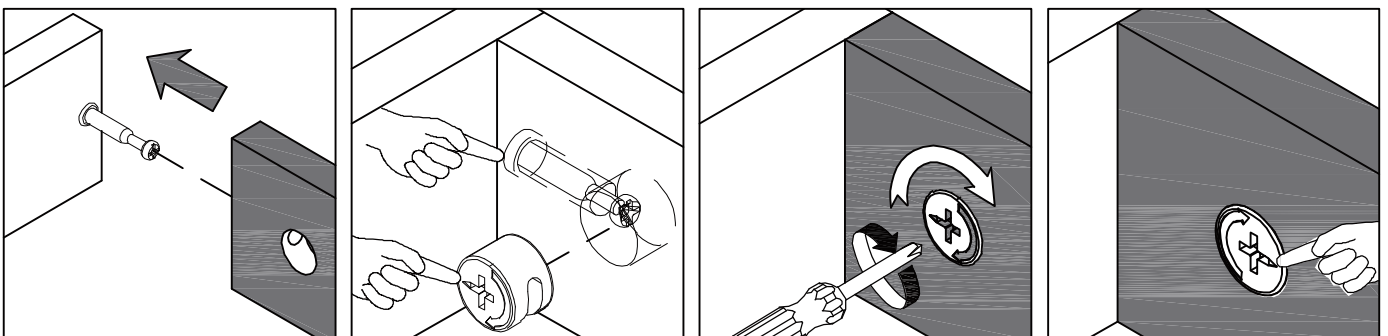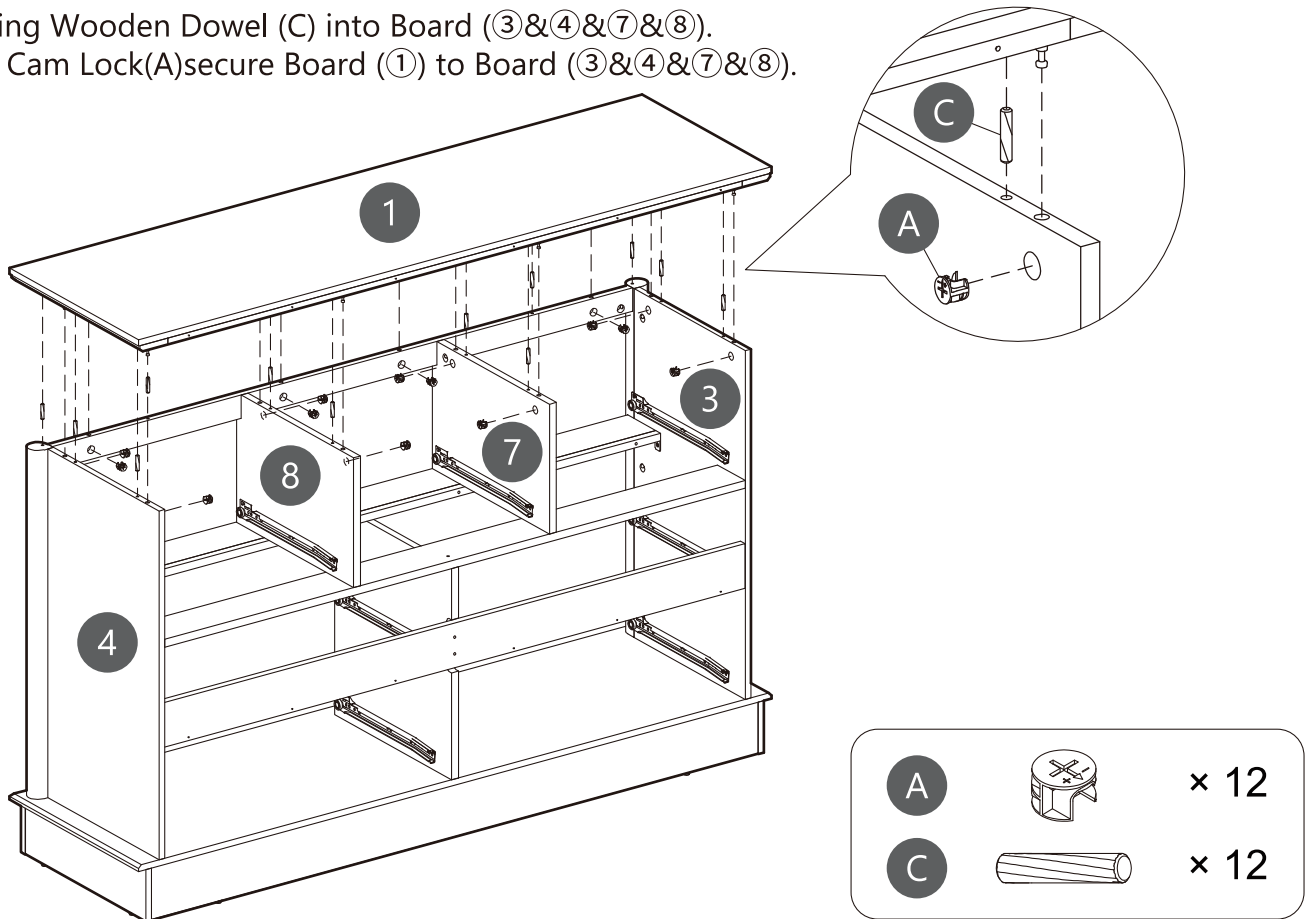

Step 29


Using Screws (H) through Anti-tipping Belt (K) to assemble Back Panels (20&21) to the main body.

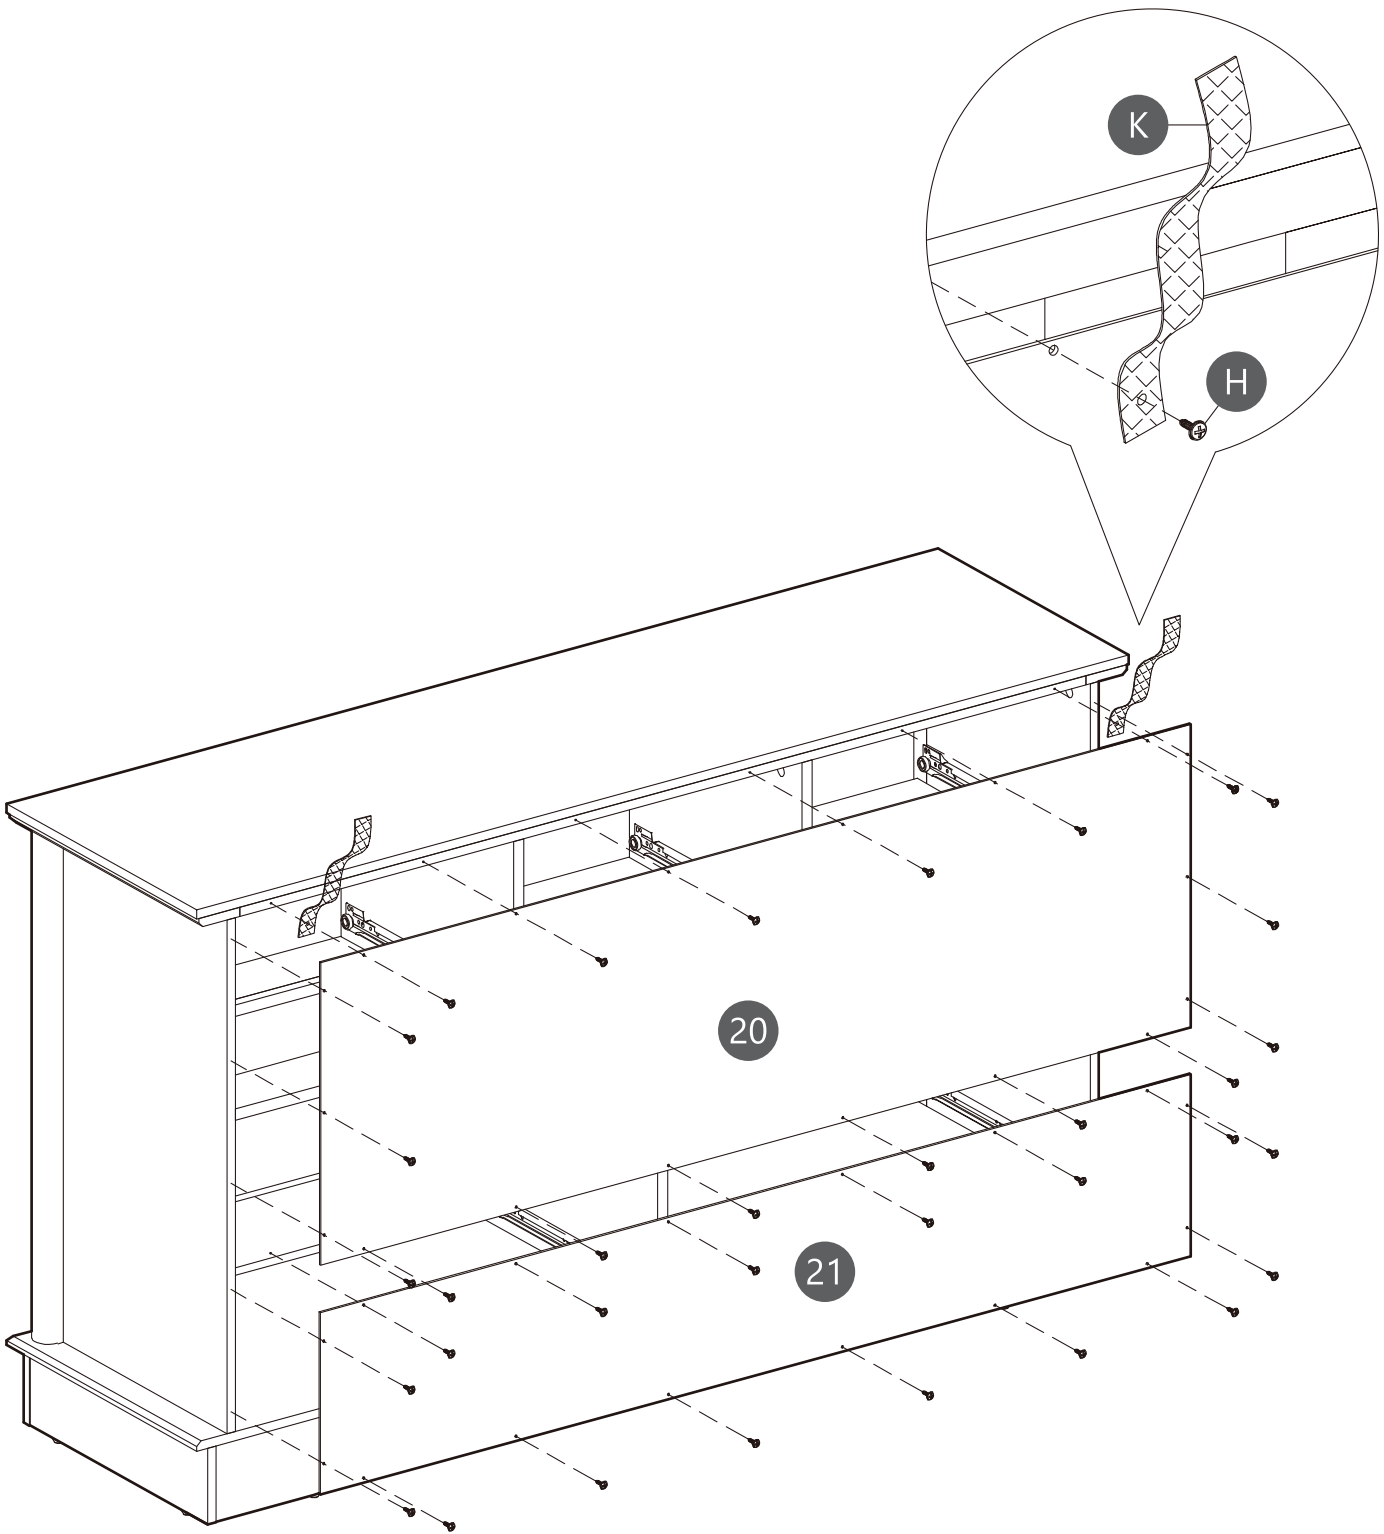

H		× 34
K		× 2



Step 30

Securing Cam Bolt (B) into Board (22).

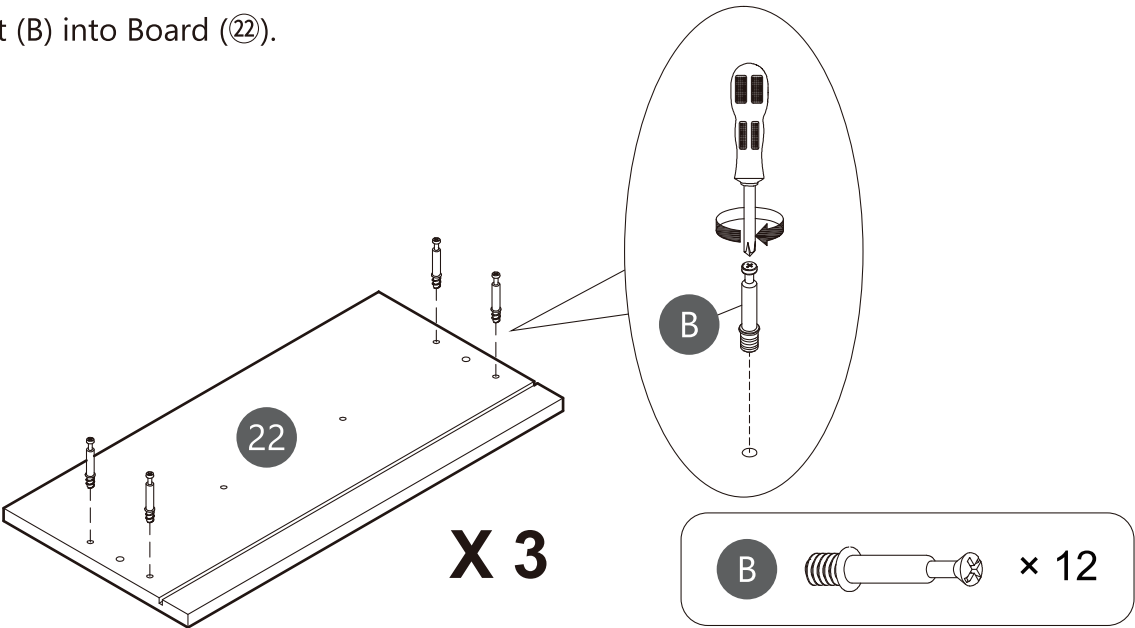


Step 31

Inserting Wooden Dowel (C) into Board (22).
Using Cam Lock(A)secure Board (24&25) to Board (22).

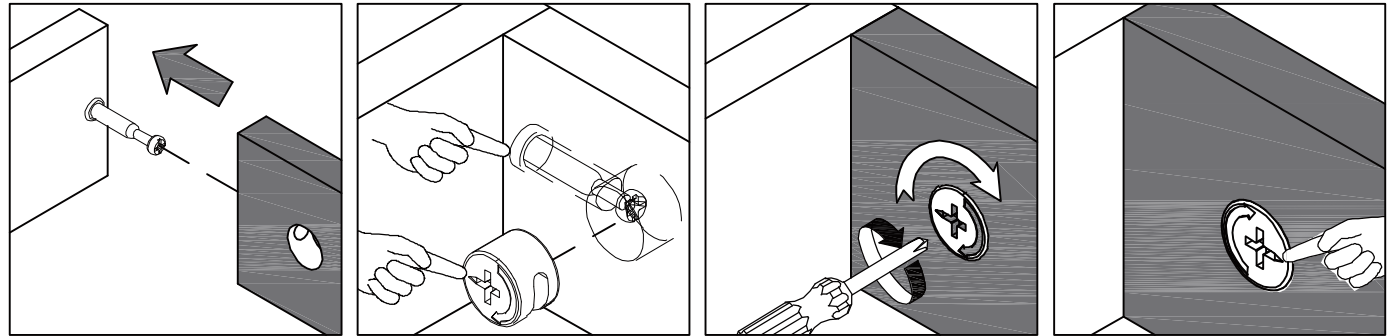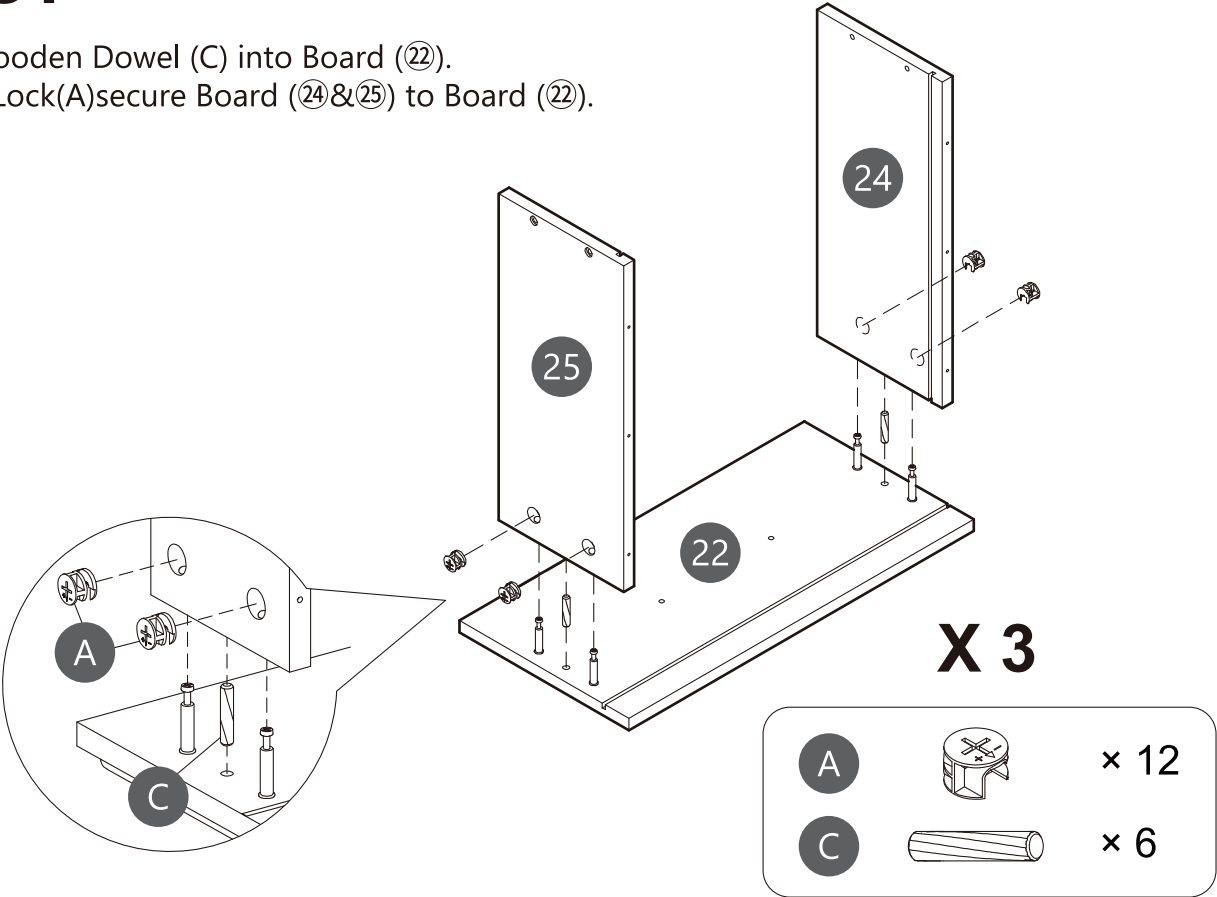


Step 32

Sliding drawer bottom panels (29) into grooves.

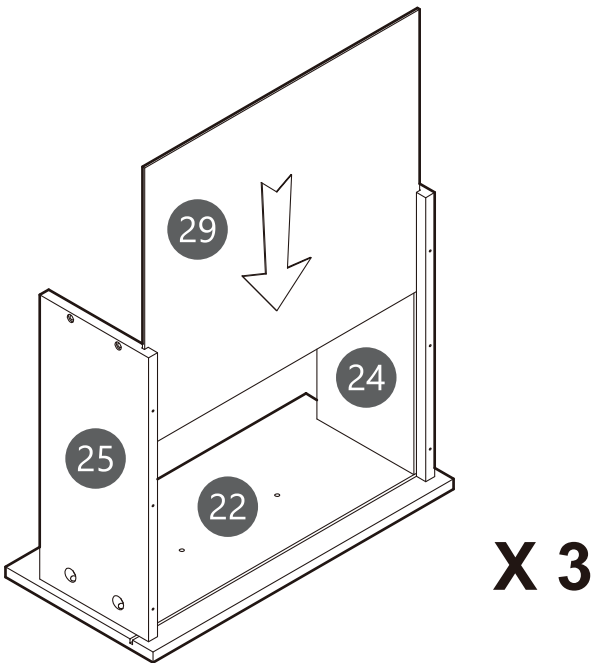

Step 33

Using Screws (M) to assemble Board (27) to the Board (24&25).

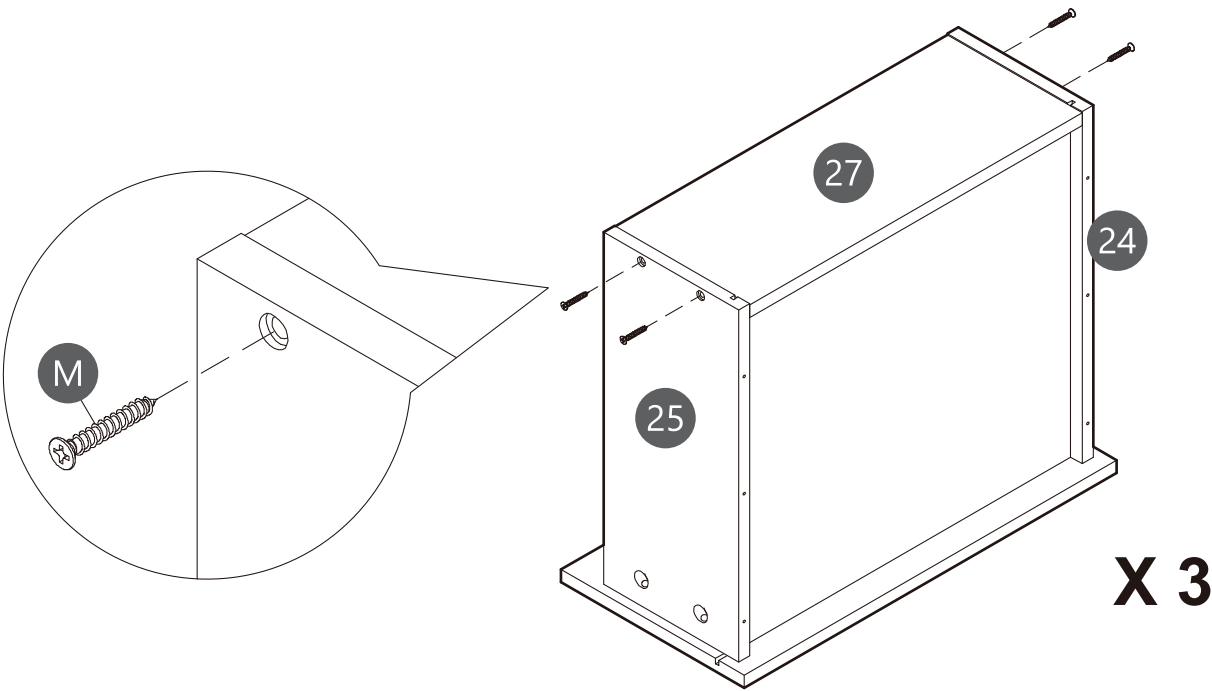


M



× 12



Step 34

Securing Cam Bolt (B) into Board (23).

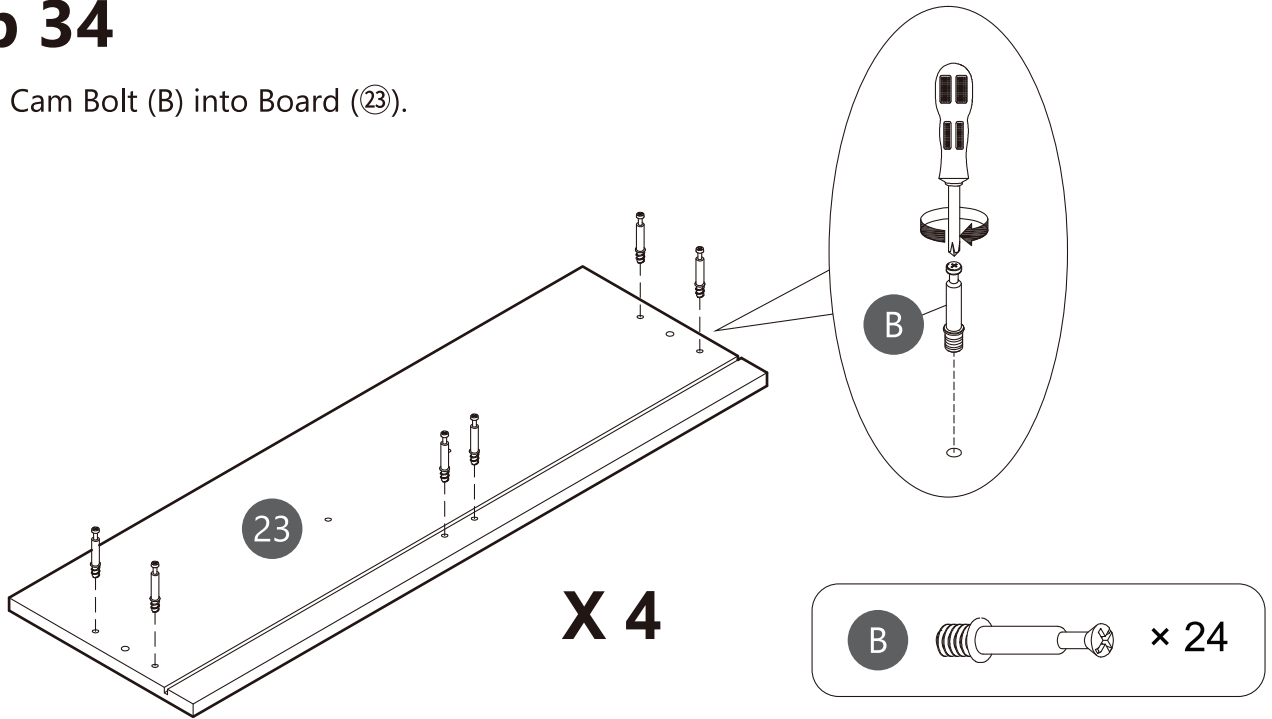


Step 35

Inserting Wooden Dowel (C) into Board (23).
Using Cam Lock(A)secure Board (24&25&26) to Board (23).

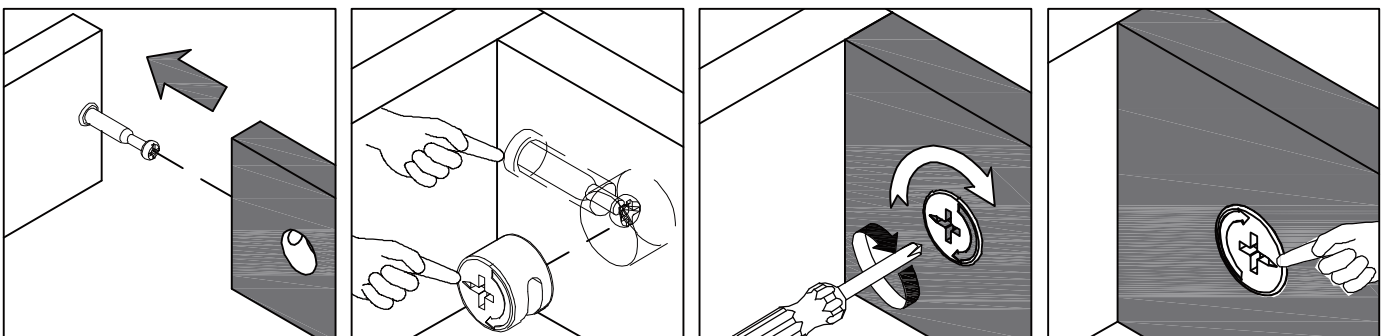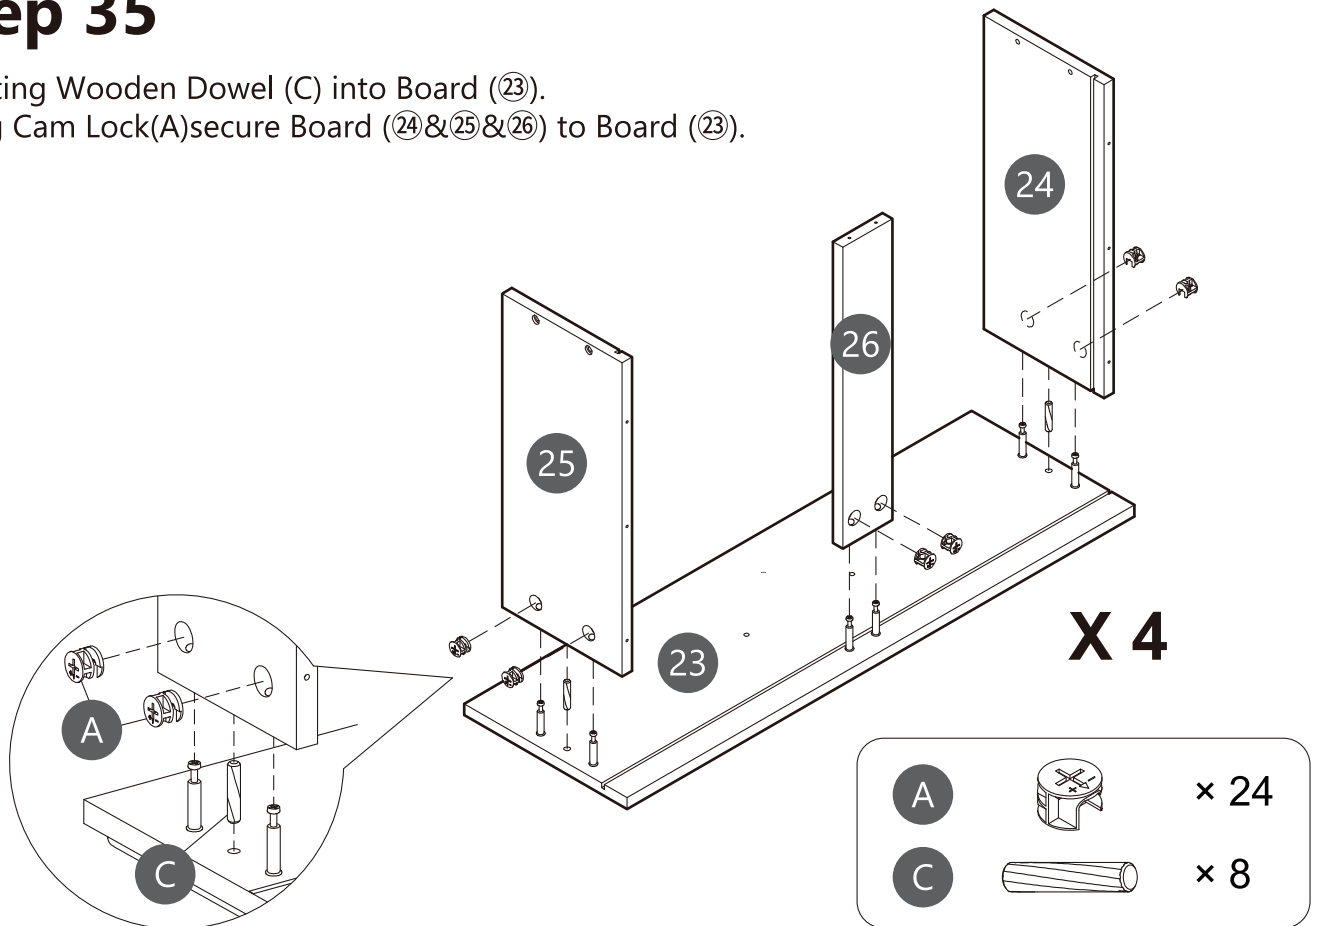


Step 36

Sliding drawer bottom panels (30) into grooves.

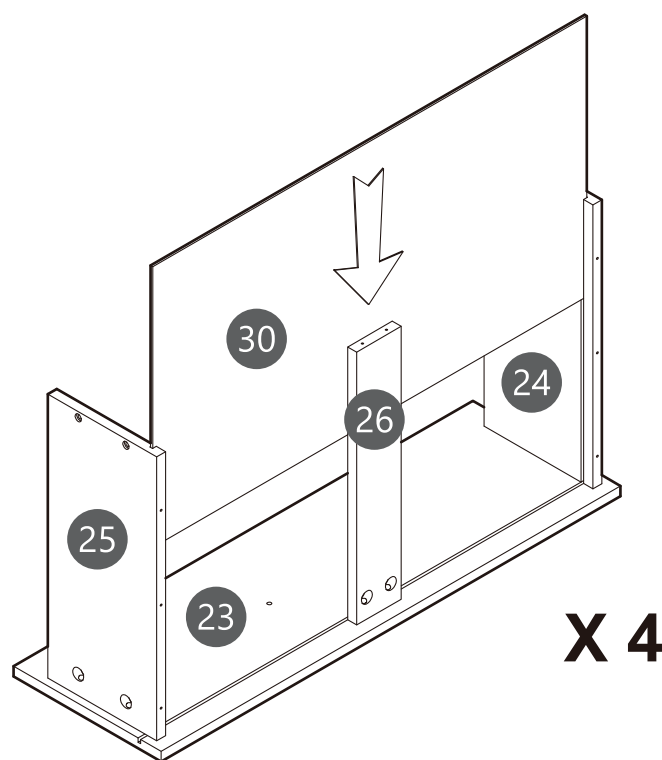

Step 37

Using Screws (M) to assemble Board (28) to the Board (24&25&26).

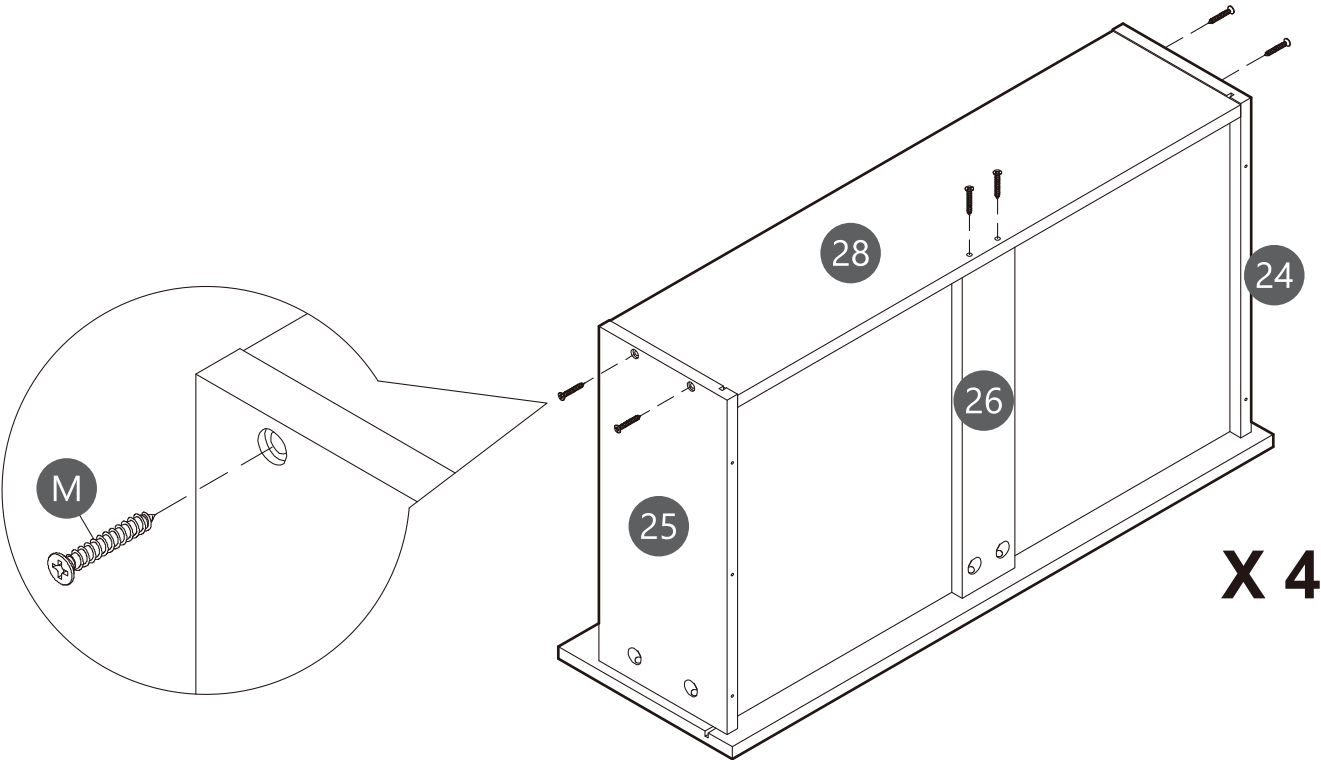


M



× 24

Step 38


Using Screws (F) to assemble Handle (E) to the Board (23).

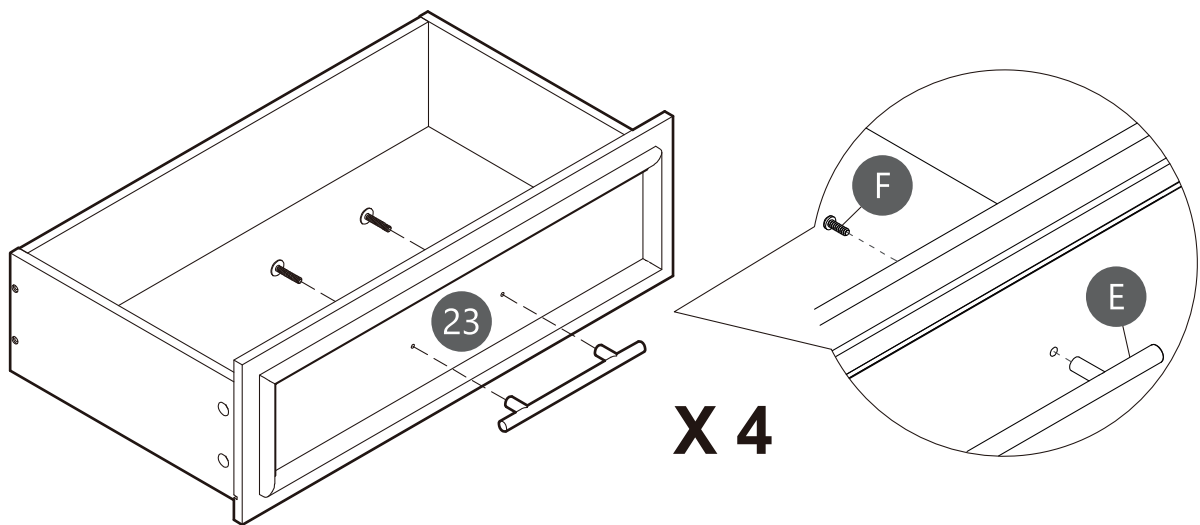

E		× 4
F		× 8

Step 39


Using Screws (F) to assemble Handle (E) to the Board (22).

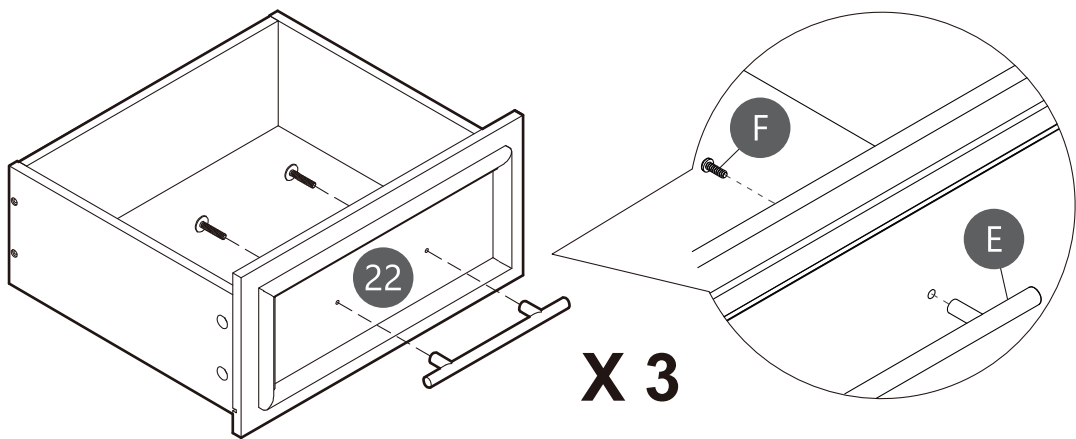

E		× 3
F		× 6


Step 40

Using Screws (G) to assemble Slide (DL) to Board (24).
Using Screws (G) to assemble Slide (DR) to Board (25).

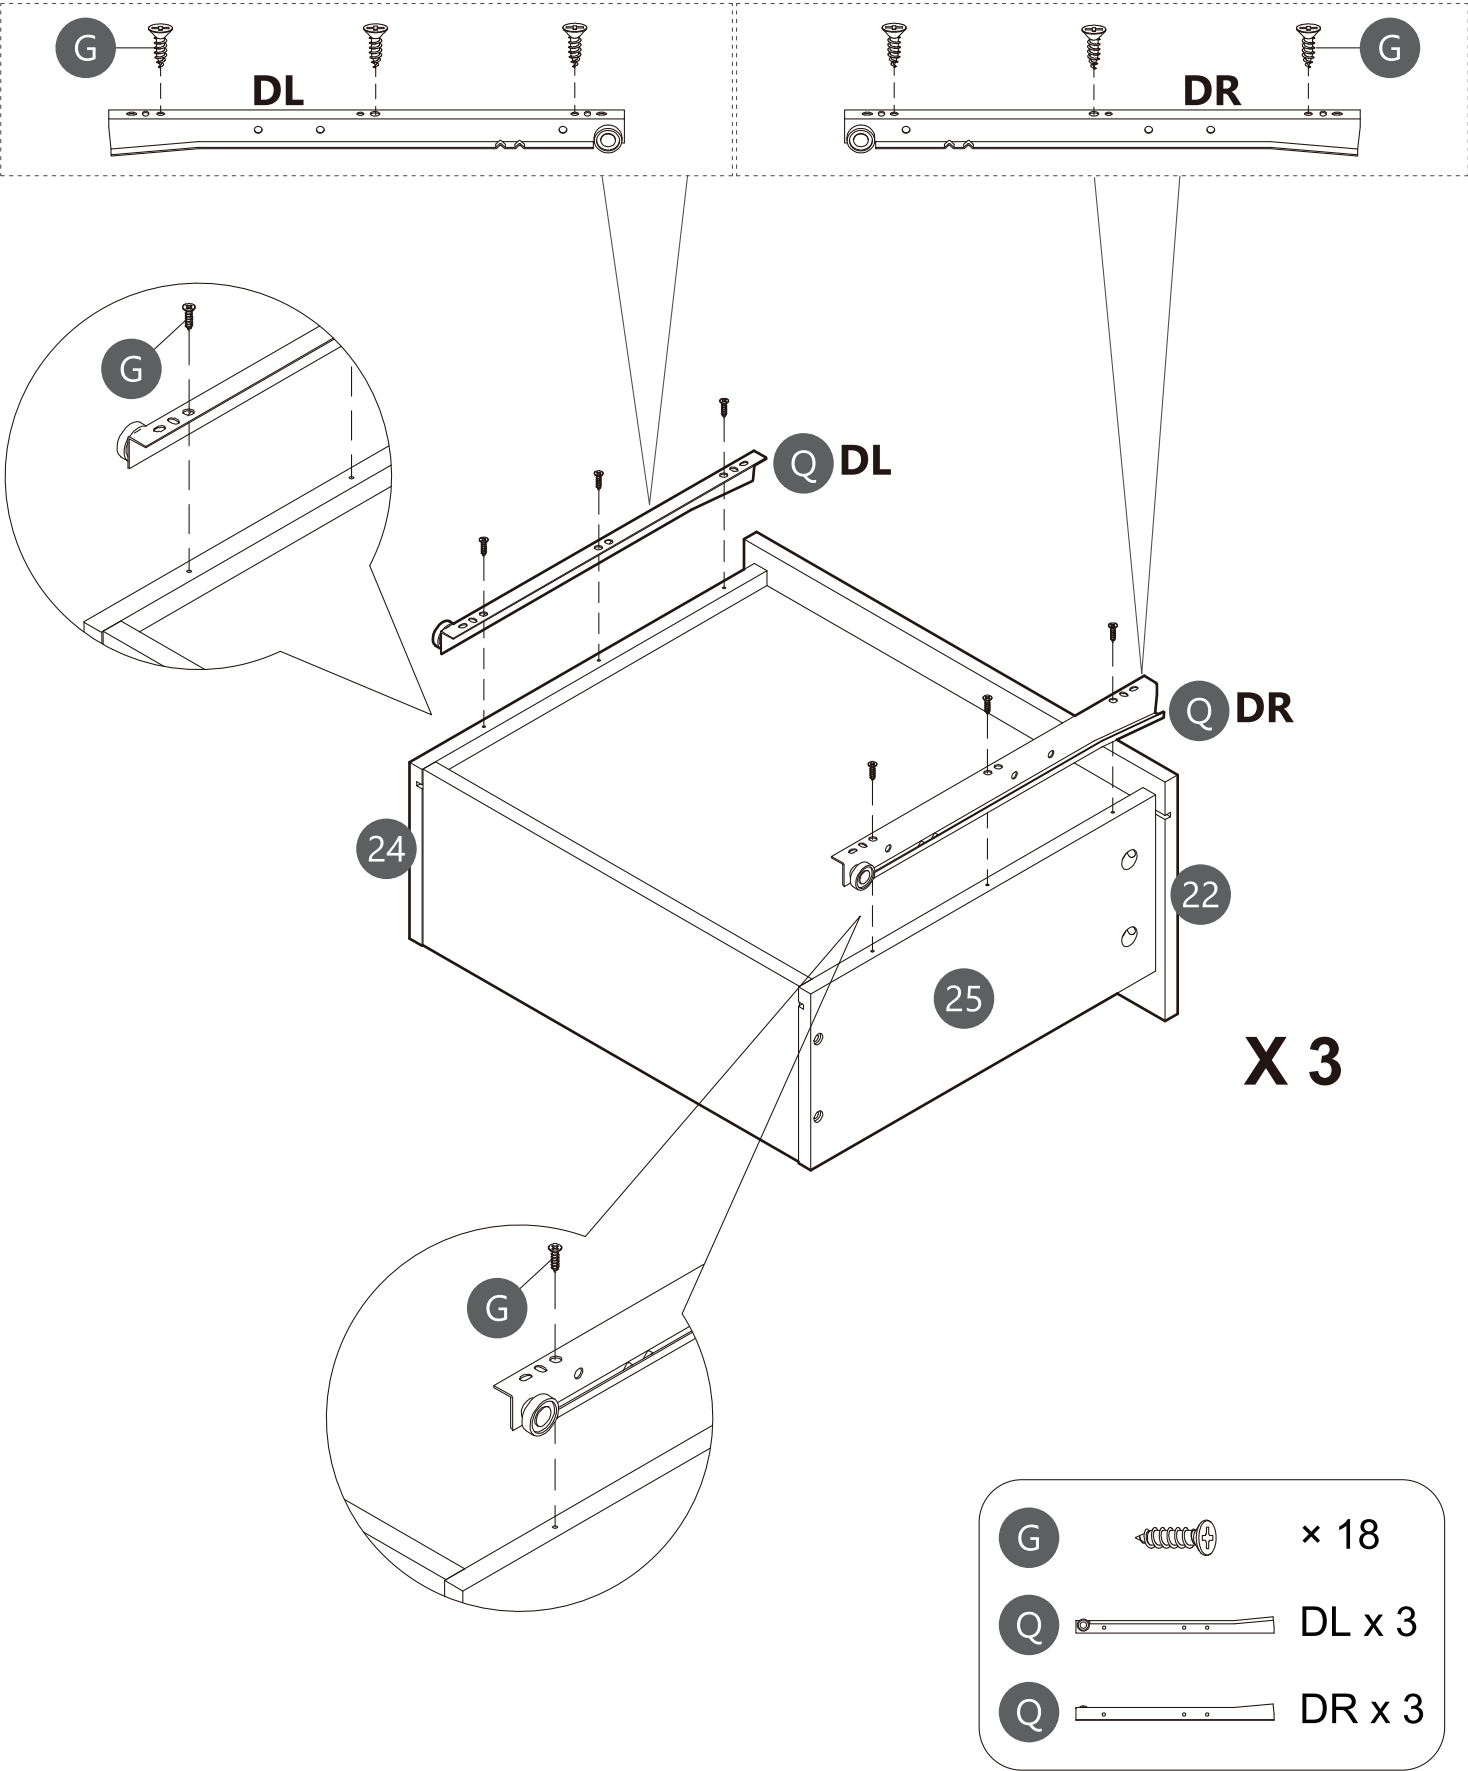

Step 41

Using Screws (G) to assemble Slide (DL) to Board (24).
Using Screws (G) to assemble Slide (DR) to Board (25).

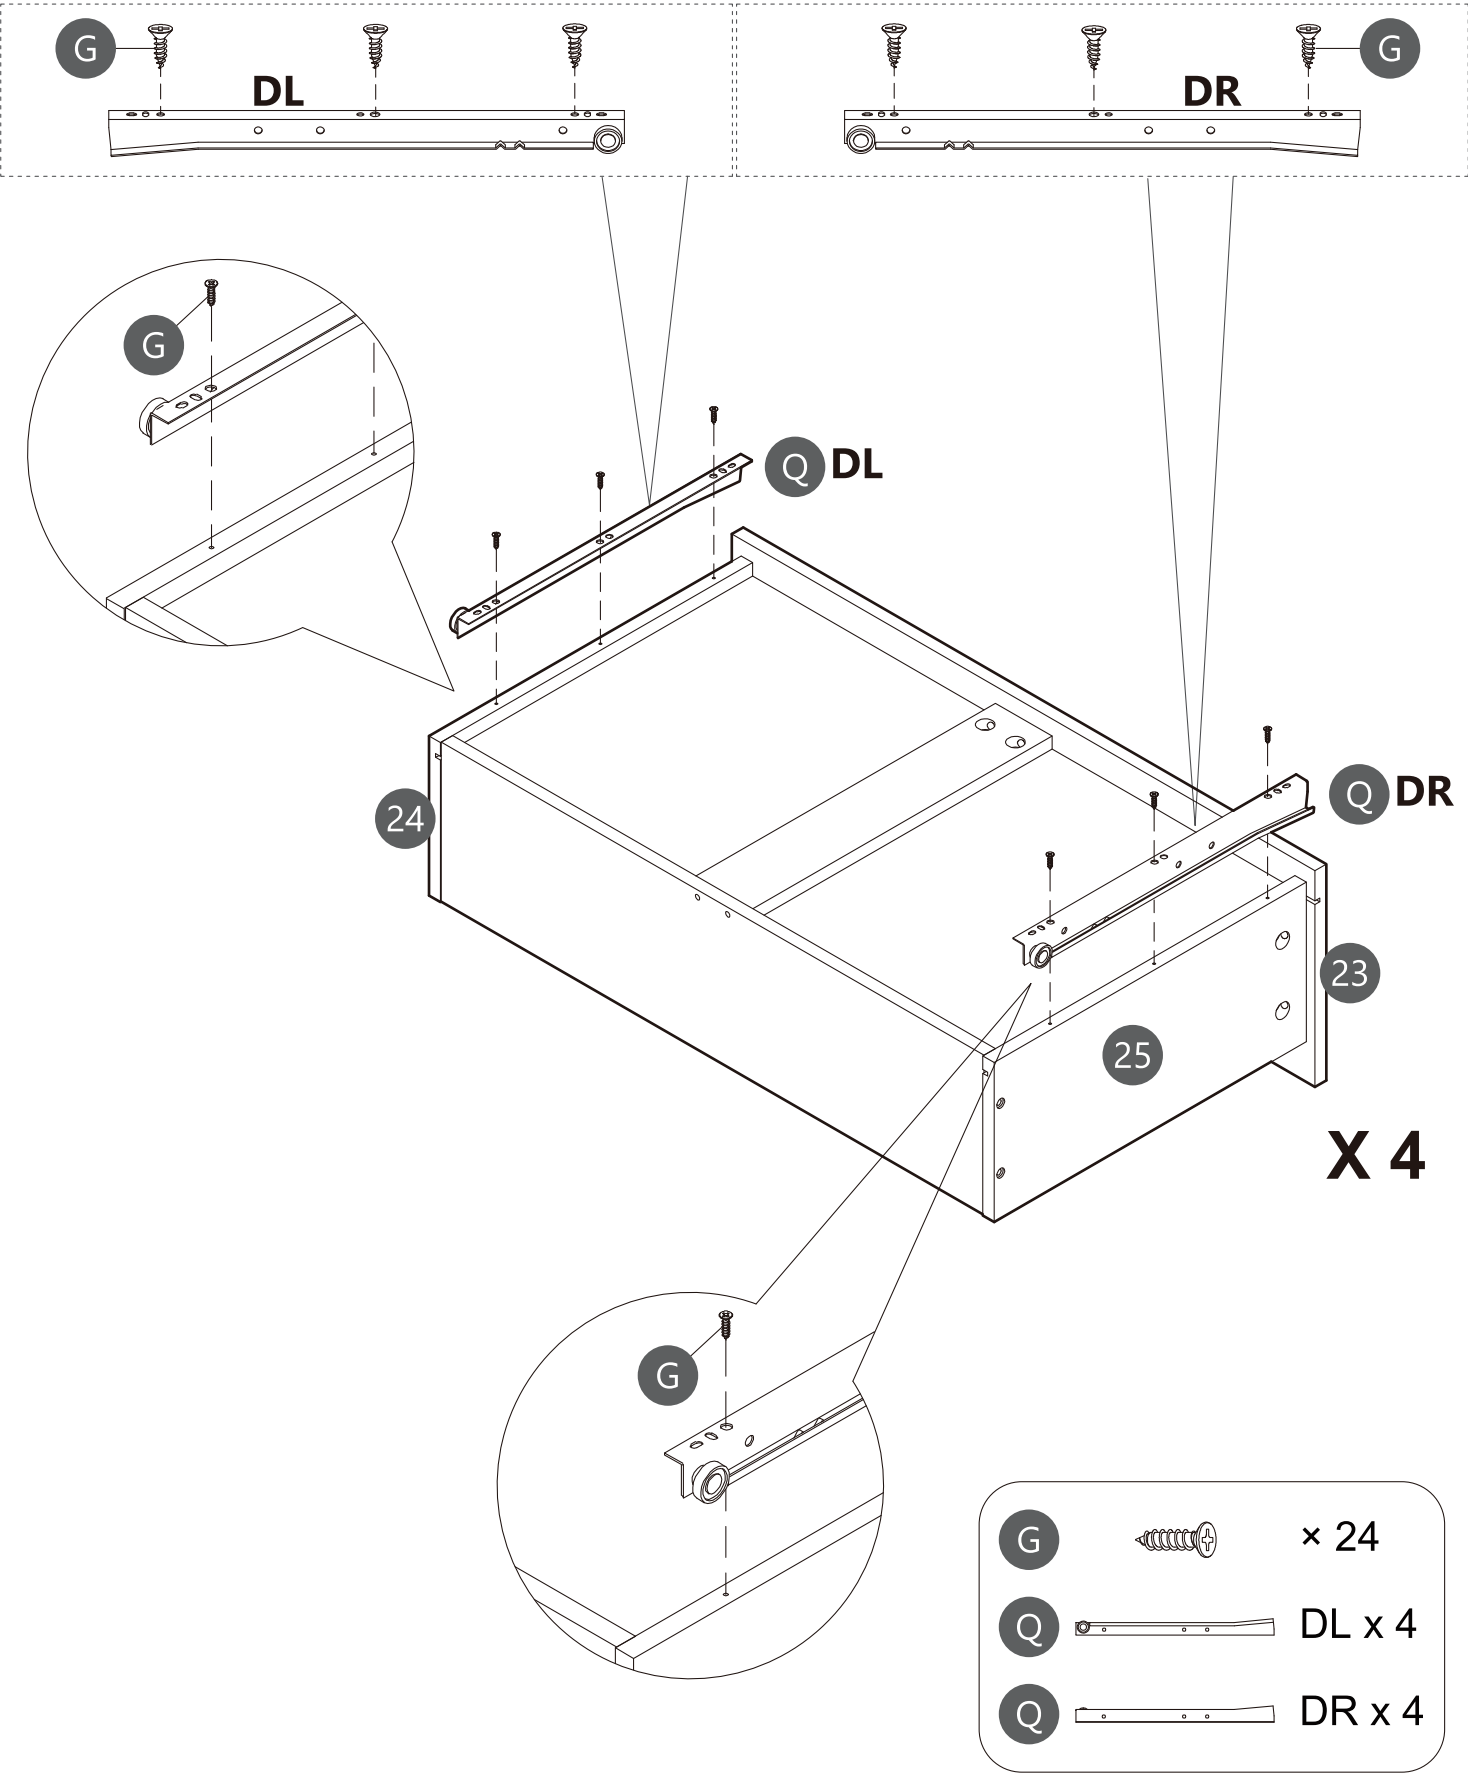


Step 42

Assembled the drawers as per diagram.


Pay attention to the ORDER of the drawers.

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

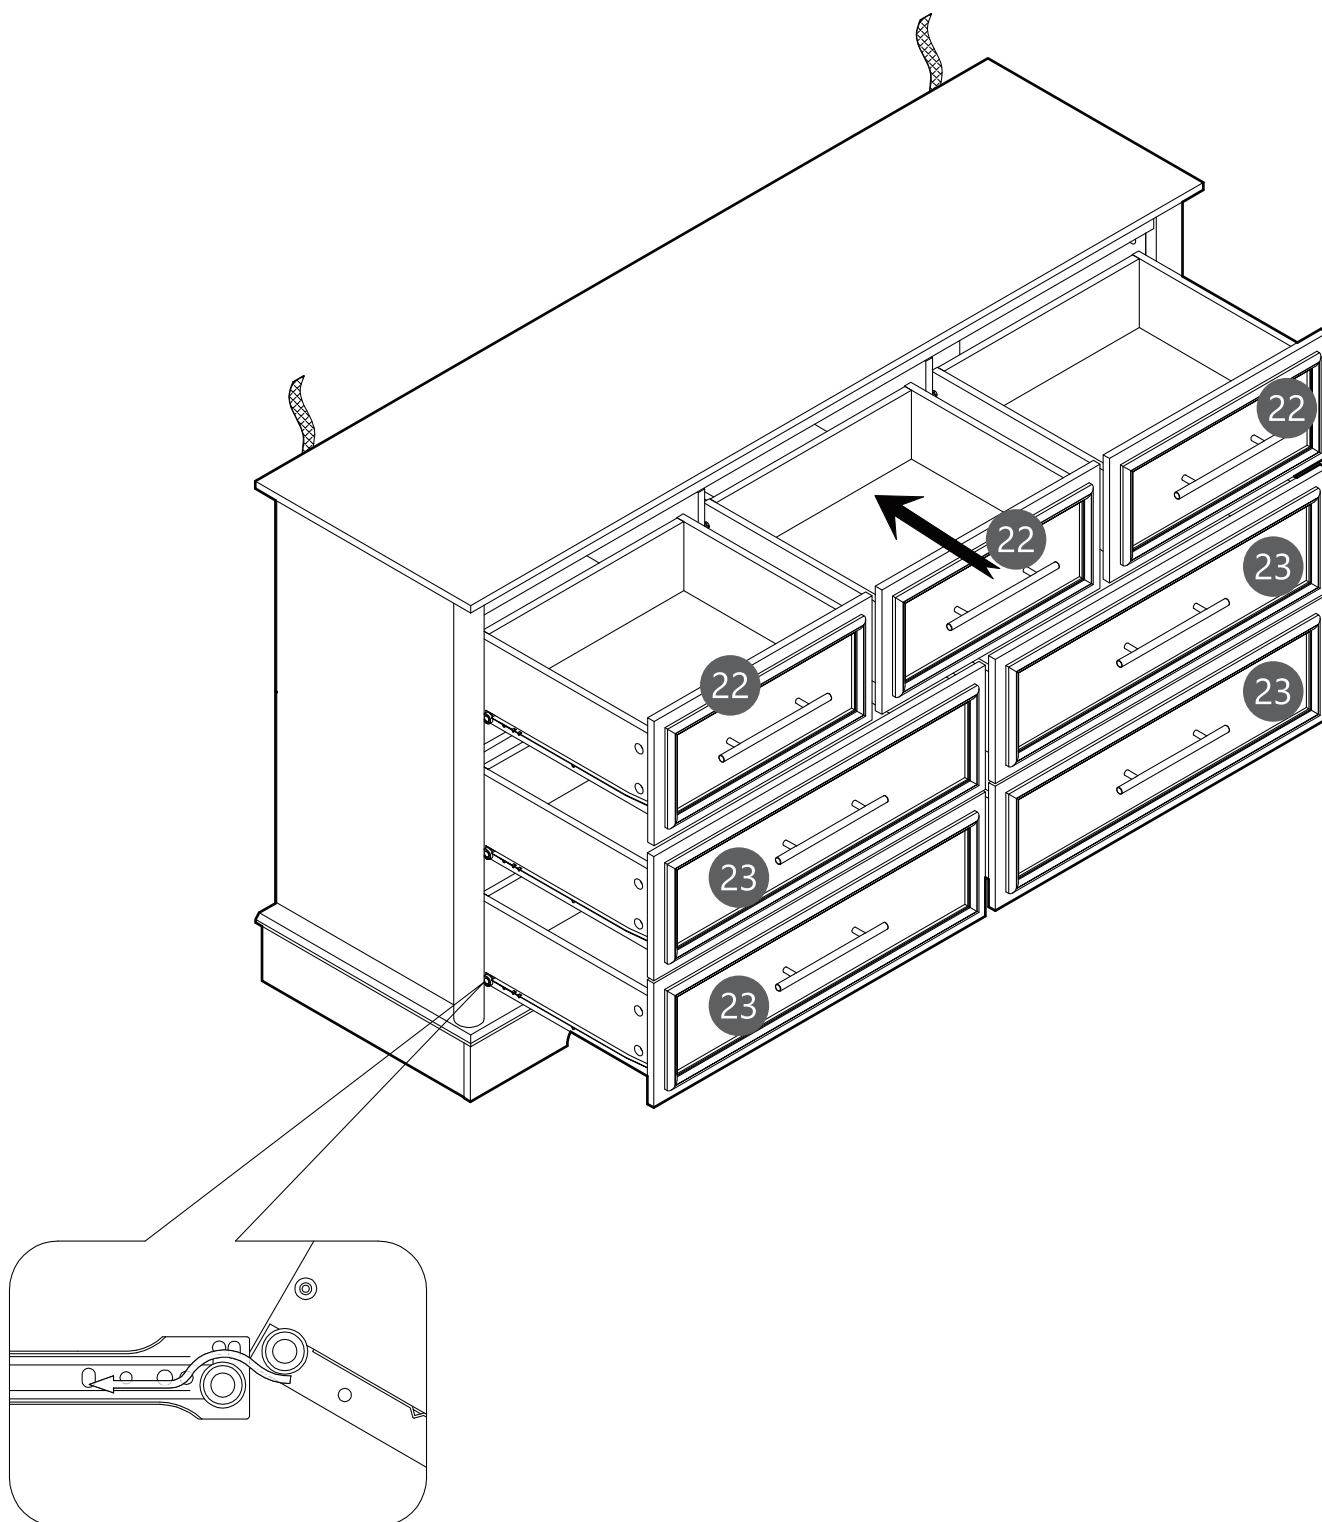


Step 43

Drill 2 holes in the wall and Hammer the (L) in.

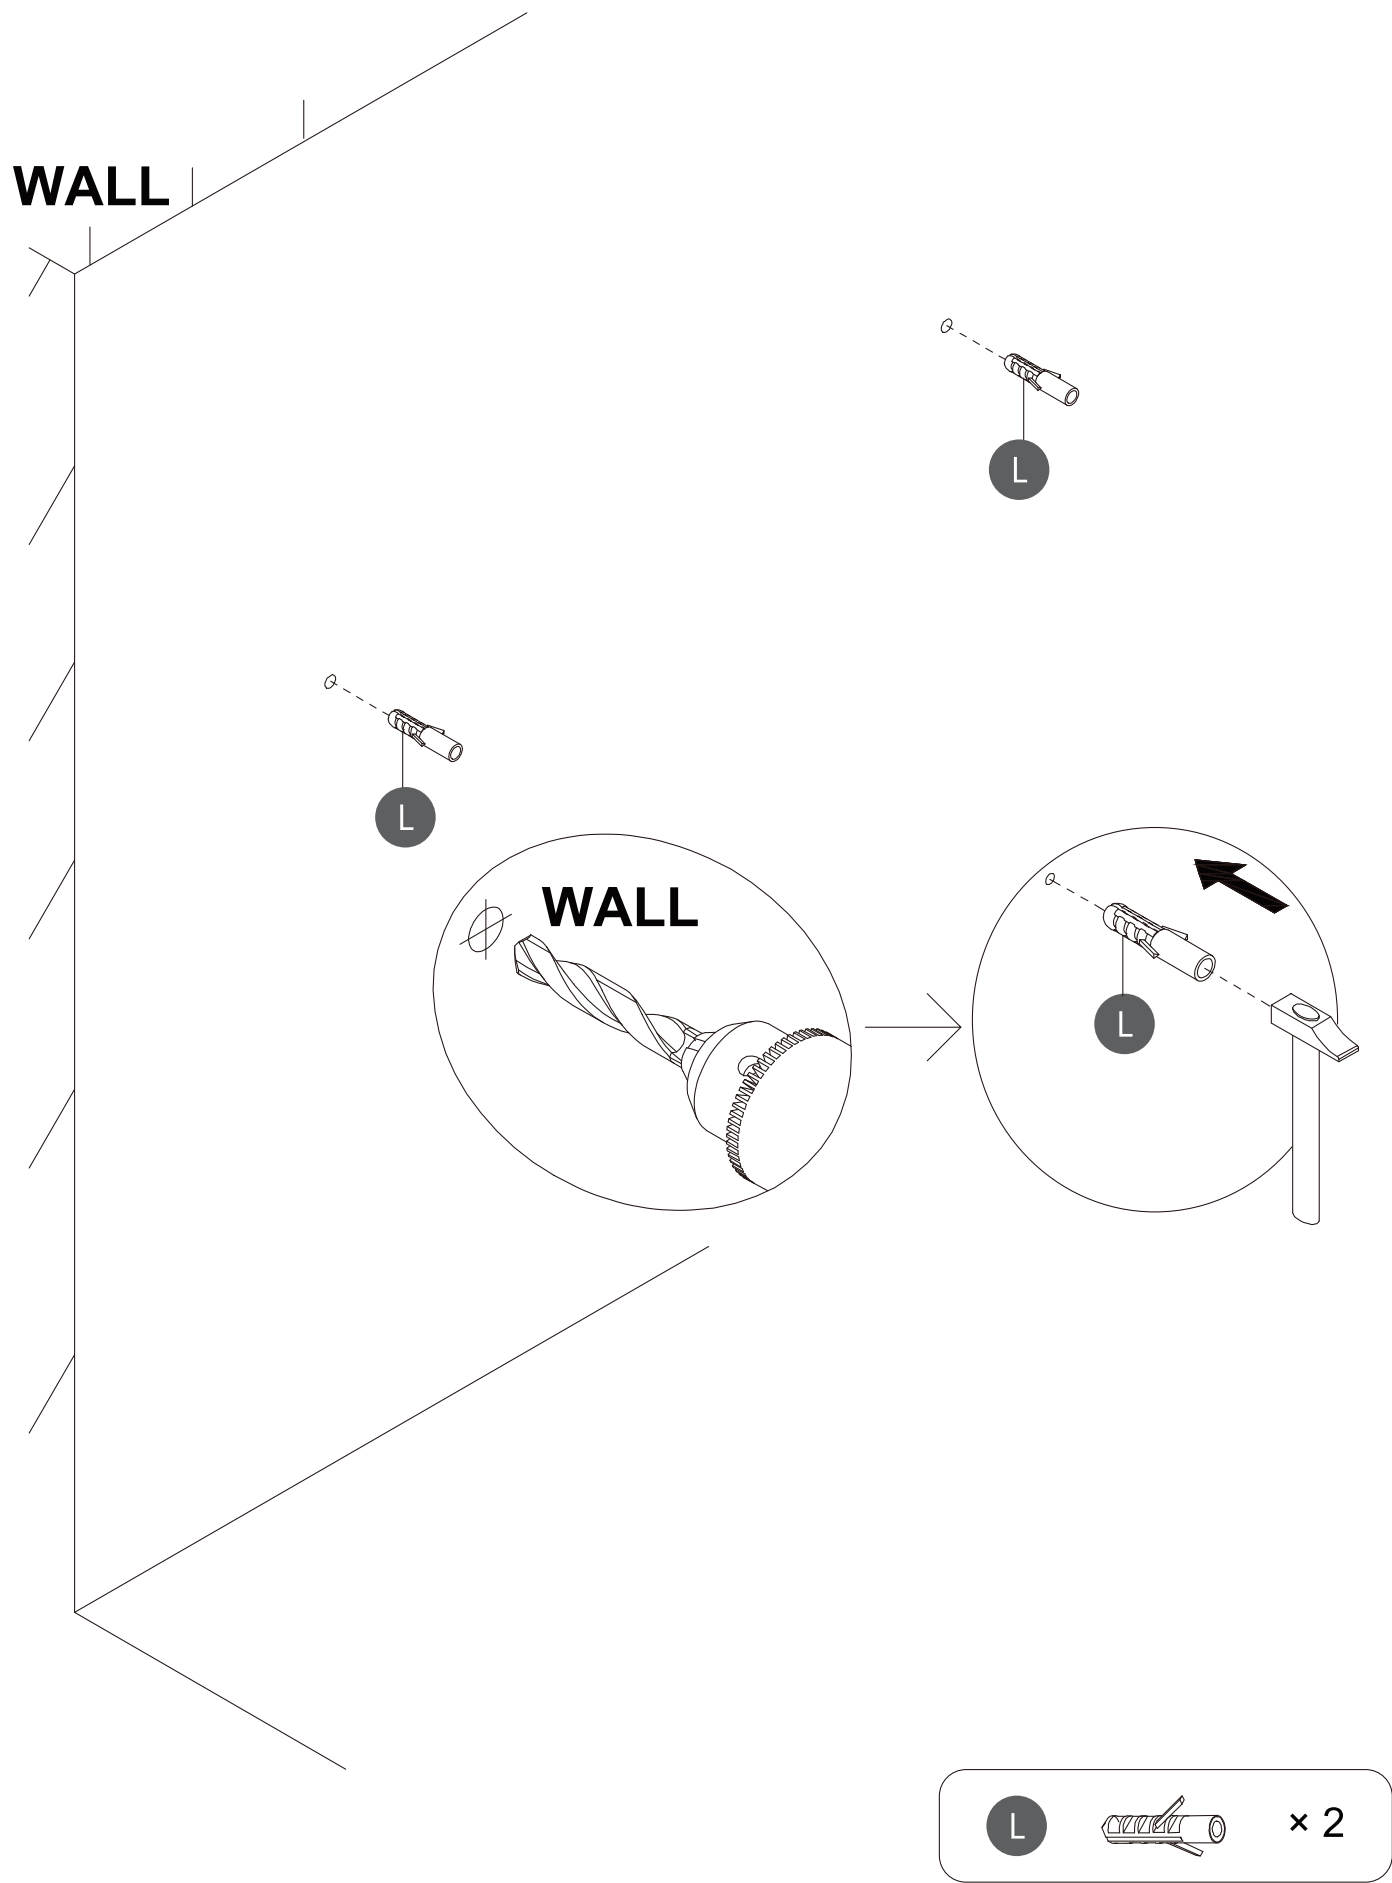

Step 44

Using Screw (M) attach Anti-tipping Belt into Nut (L) to wall.

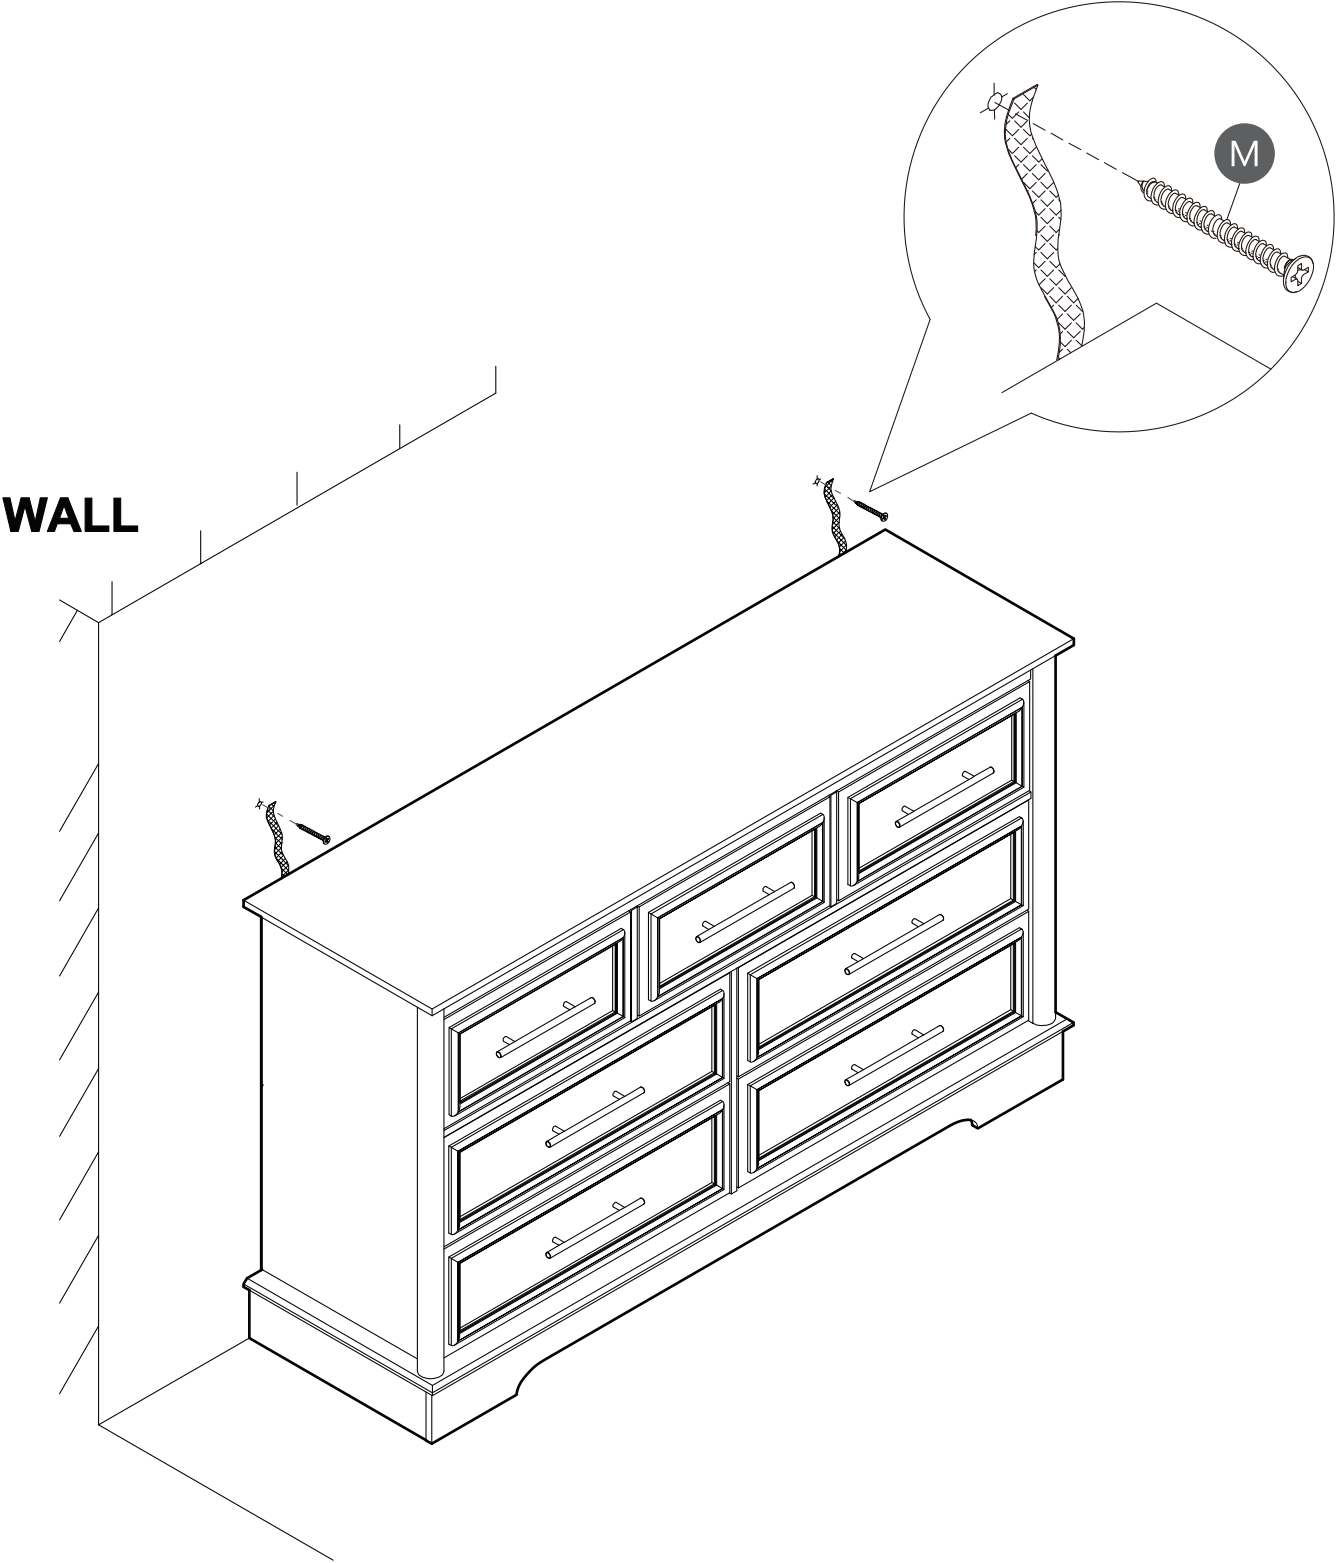

M



× 2