























Assembly Instruction

Decorate your home, Brighten wonderful life
















Plate number


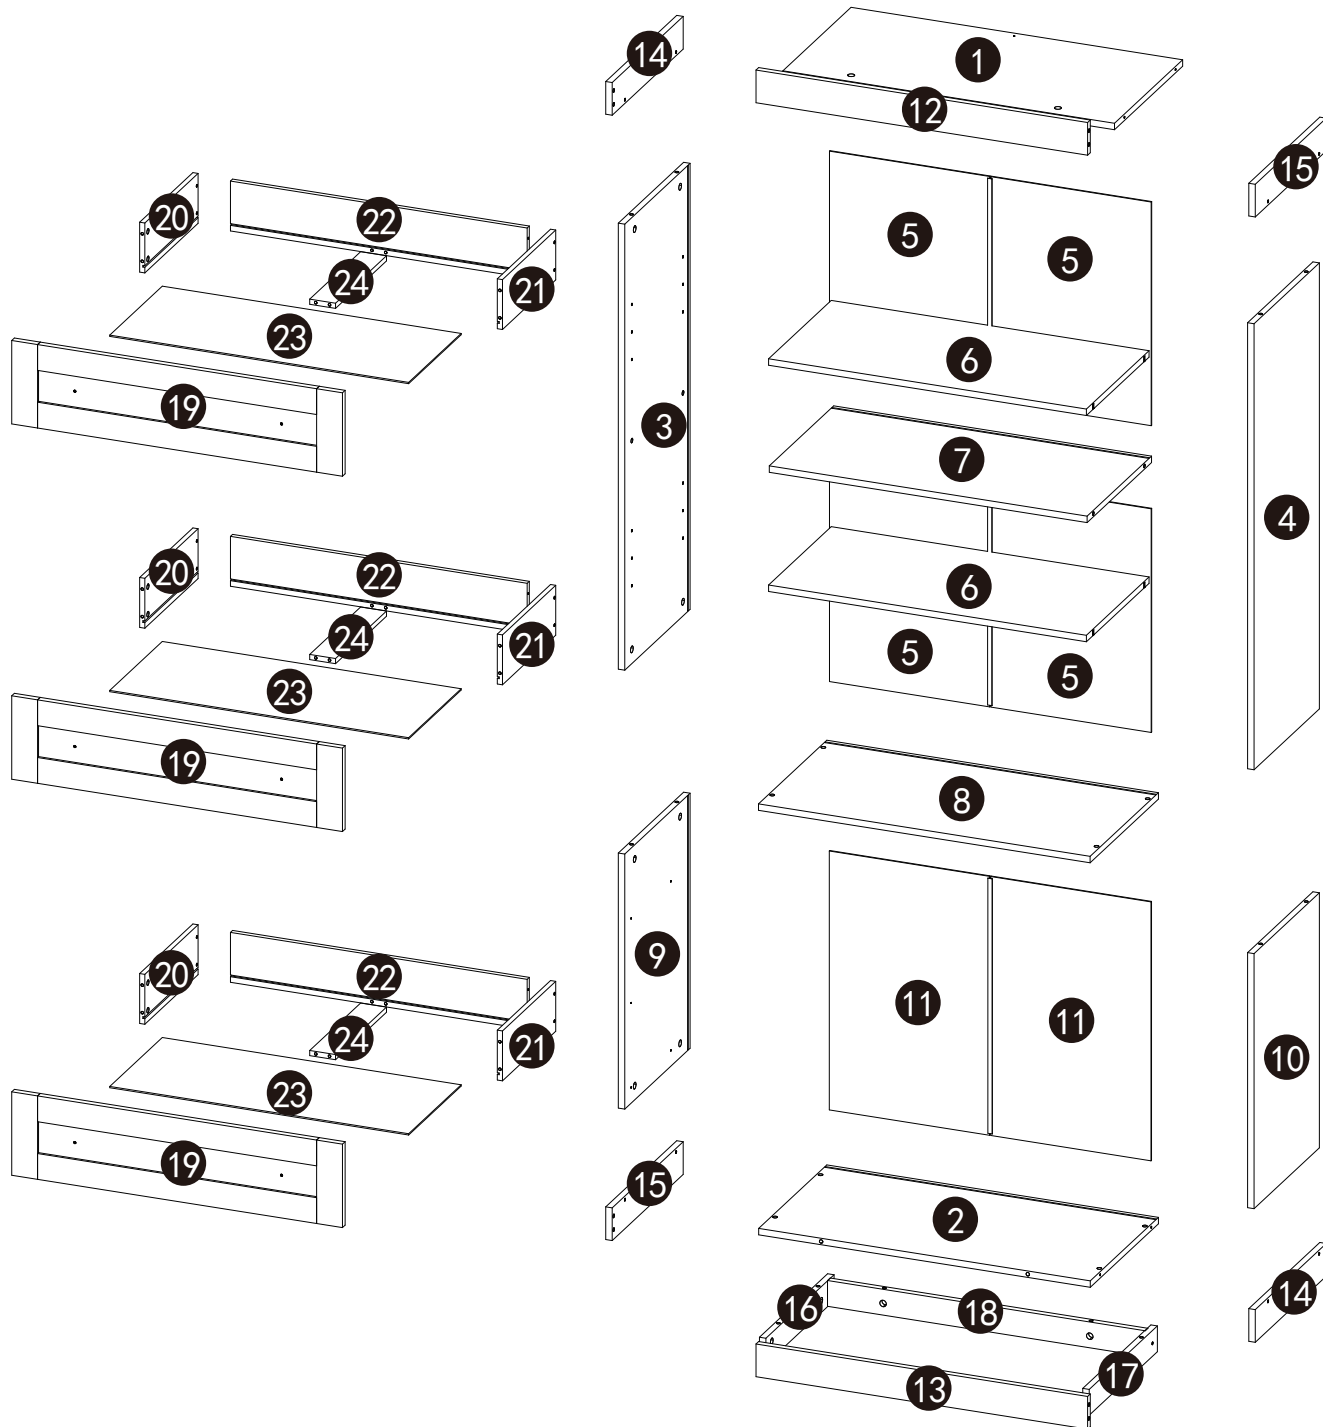


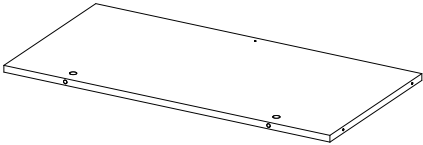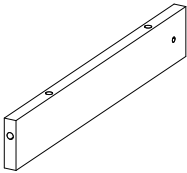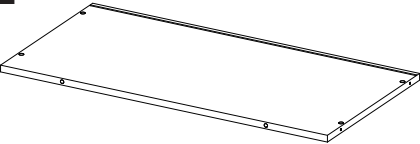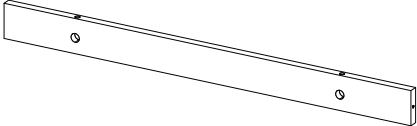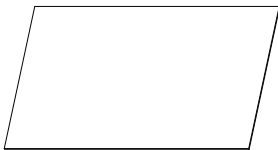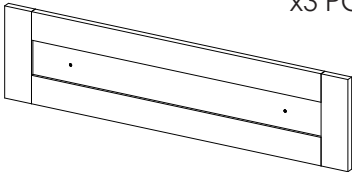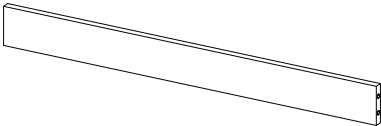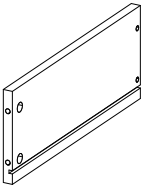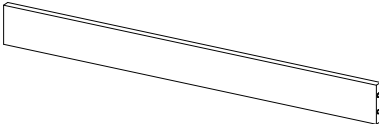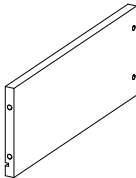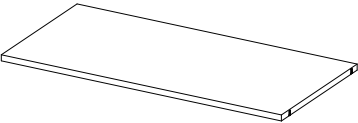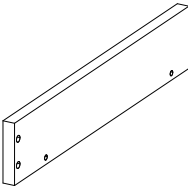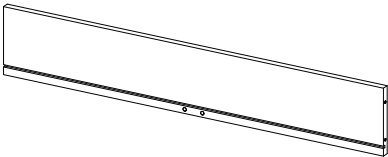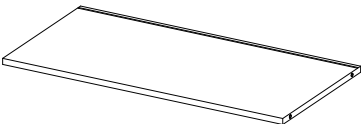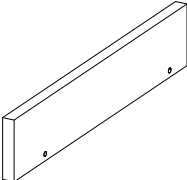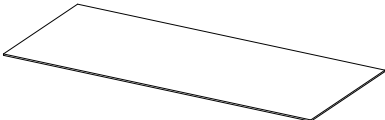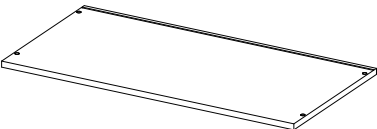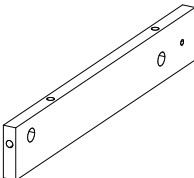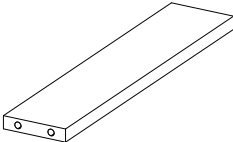Unit: (mm) PARTS LIST		
1  x1 PC	9  x1 PC	17  x1 PC
2  x1 PC	10  x1 PC	18  x1 PC
3  x1 PC	11  x2 PC	19  x3 PC
4  x1 PC	12  x1 PC	20  x3 PC
5  x4 PC	13  x1 PC	21  x3 PC
6  x2 PC	14  x2 PC	22  x3 PC
7  x1 PC	15  x2 PC	23  x3 PC
8  x1 PC	16  x1 PC	24  x3 PC

ACCESSORIES LIST

Unit: (mm)

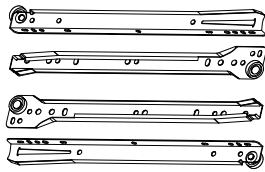

A 6x40 x32 PC 	B 15x11 x32 PC 	C 12 inches x3 PC 
D 8x40 x8 PC 	E M3.5x14 x13 PC 	F M5x40/#3 x22 PC/x1 PC 
G Ø12x5 x12 PC 	H M4x8 x6 PC  	J 6x25 x12 PC 
K 12x10 x12 PC 	L 21mm x24 PC 	M 511mm x2 PC 
N 593mm x1 PC 	O M4x50/8x40 x1 PC  	P M3x14 x24 PC  
Q 6x40 x12 PC 	R M3x12 x12 PC 	S 21x12 x8 PC  

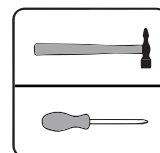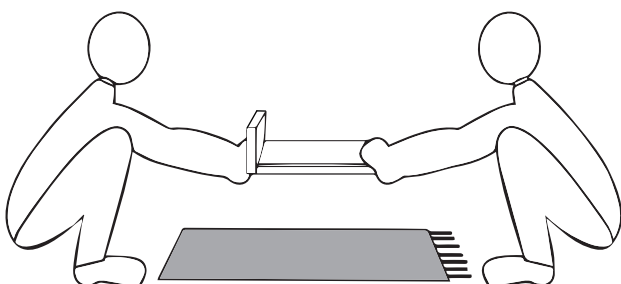

INSTALLATION INSTRUCTION







STEP1

Installation method of three in one rod and buckle

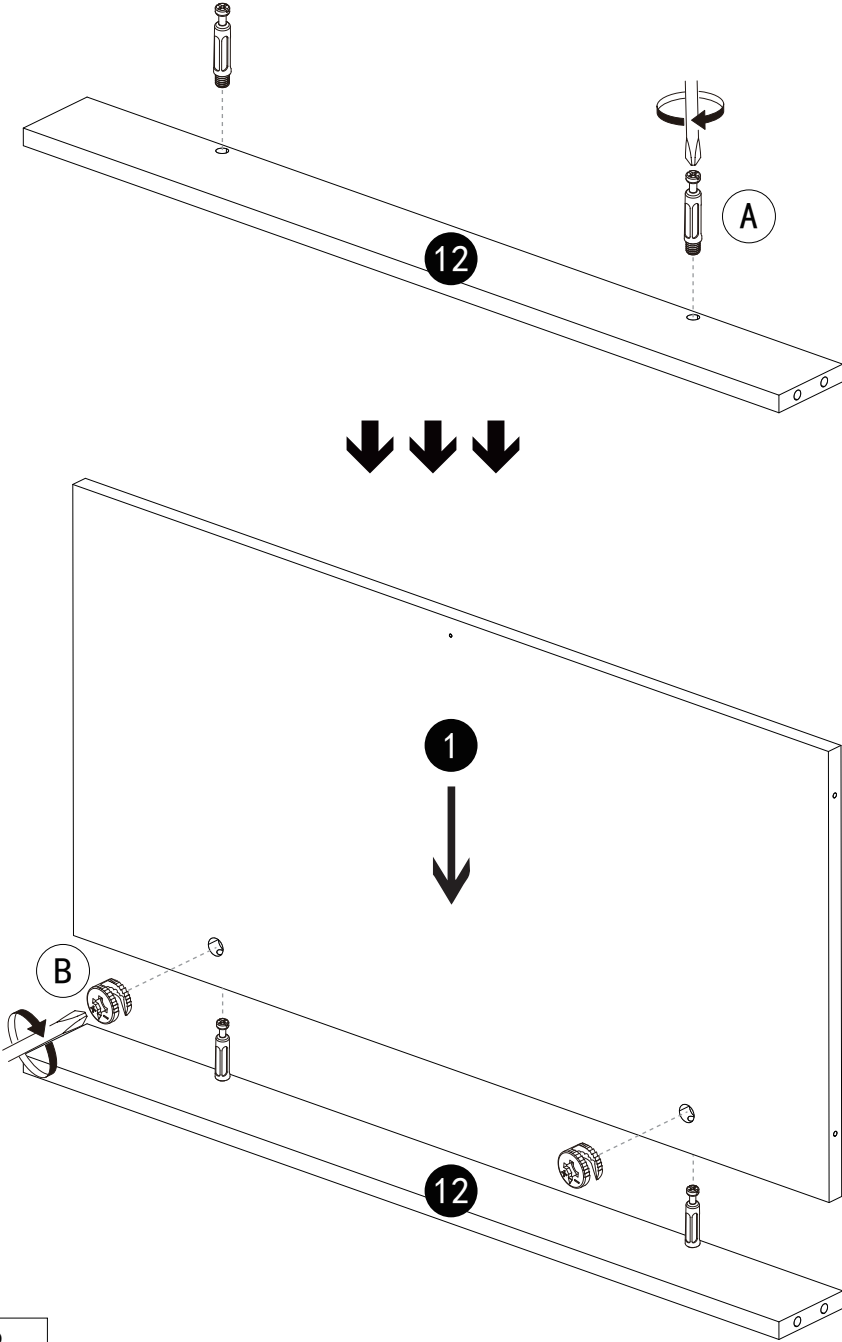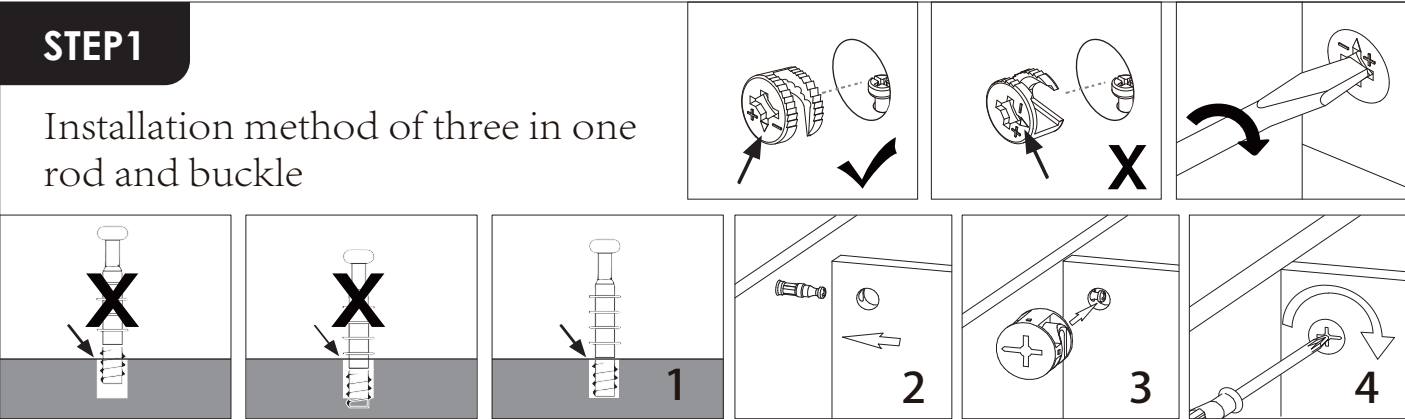

A		x2
B		x2

STEP2

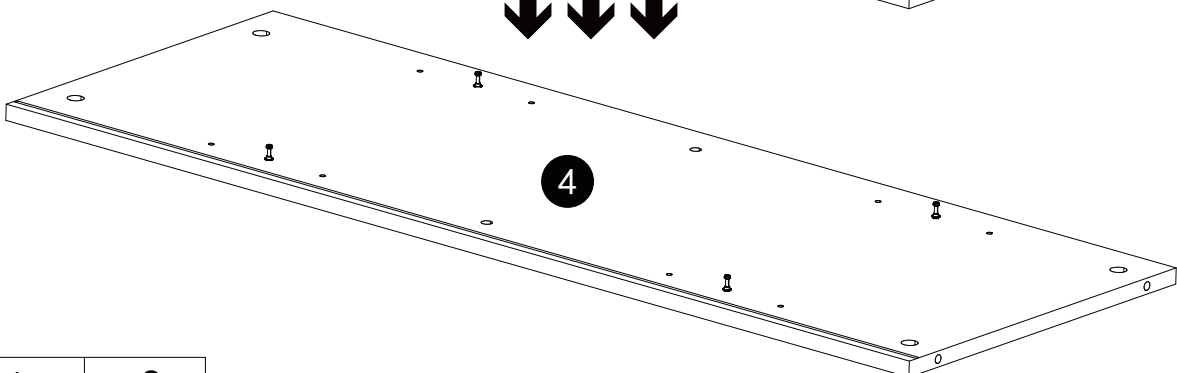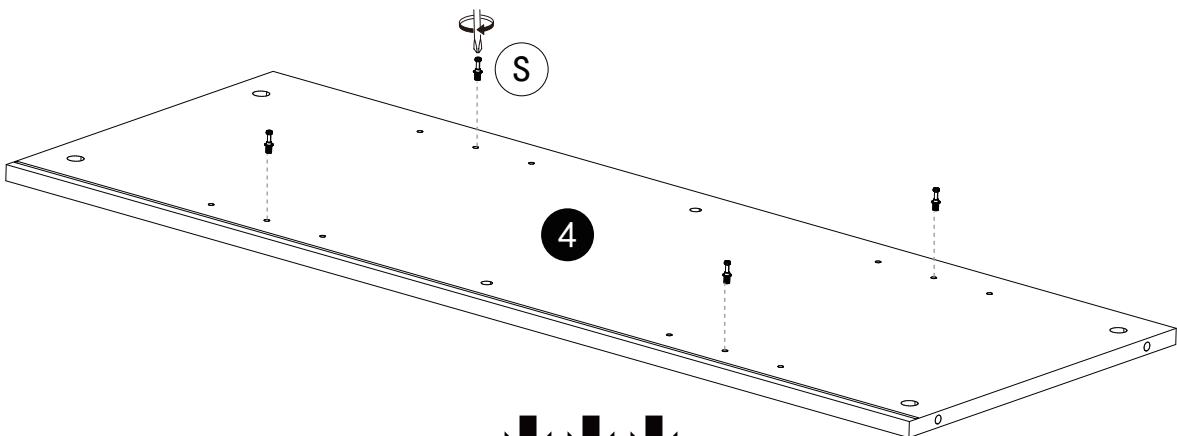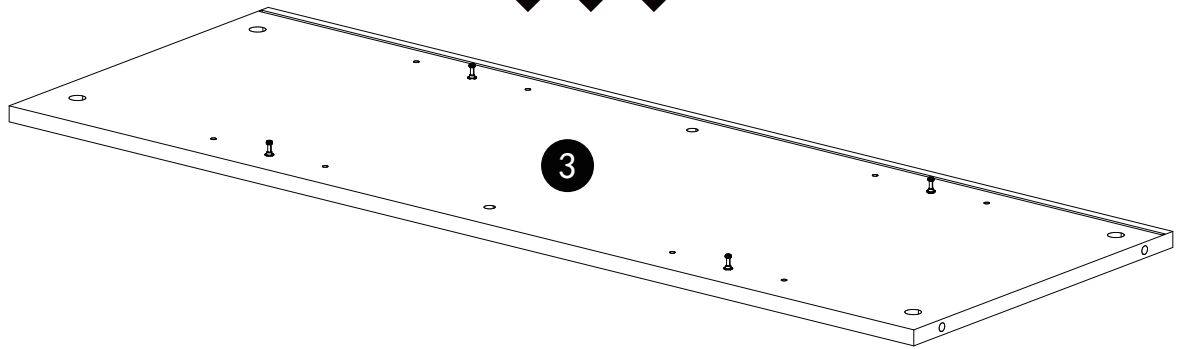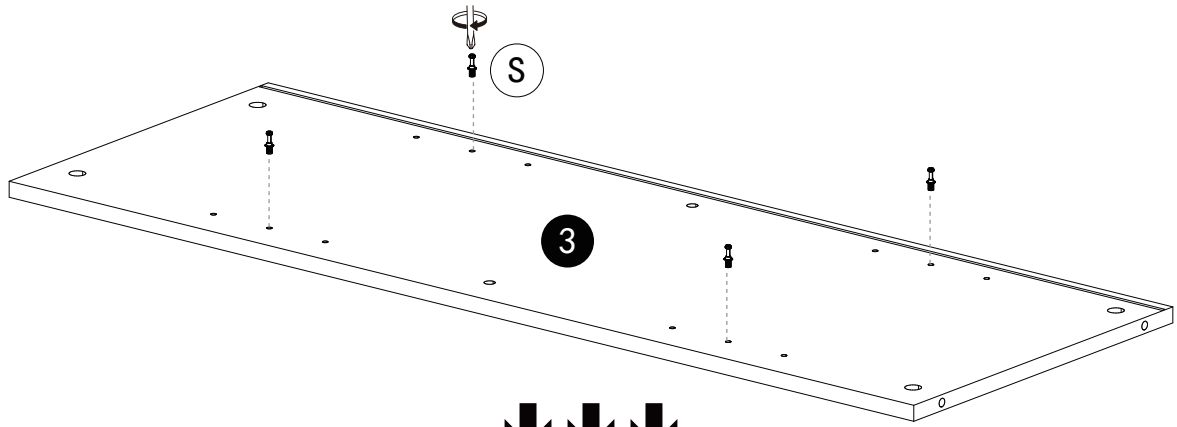
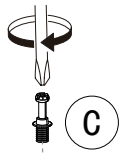


S





x8

STEP 3

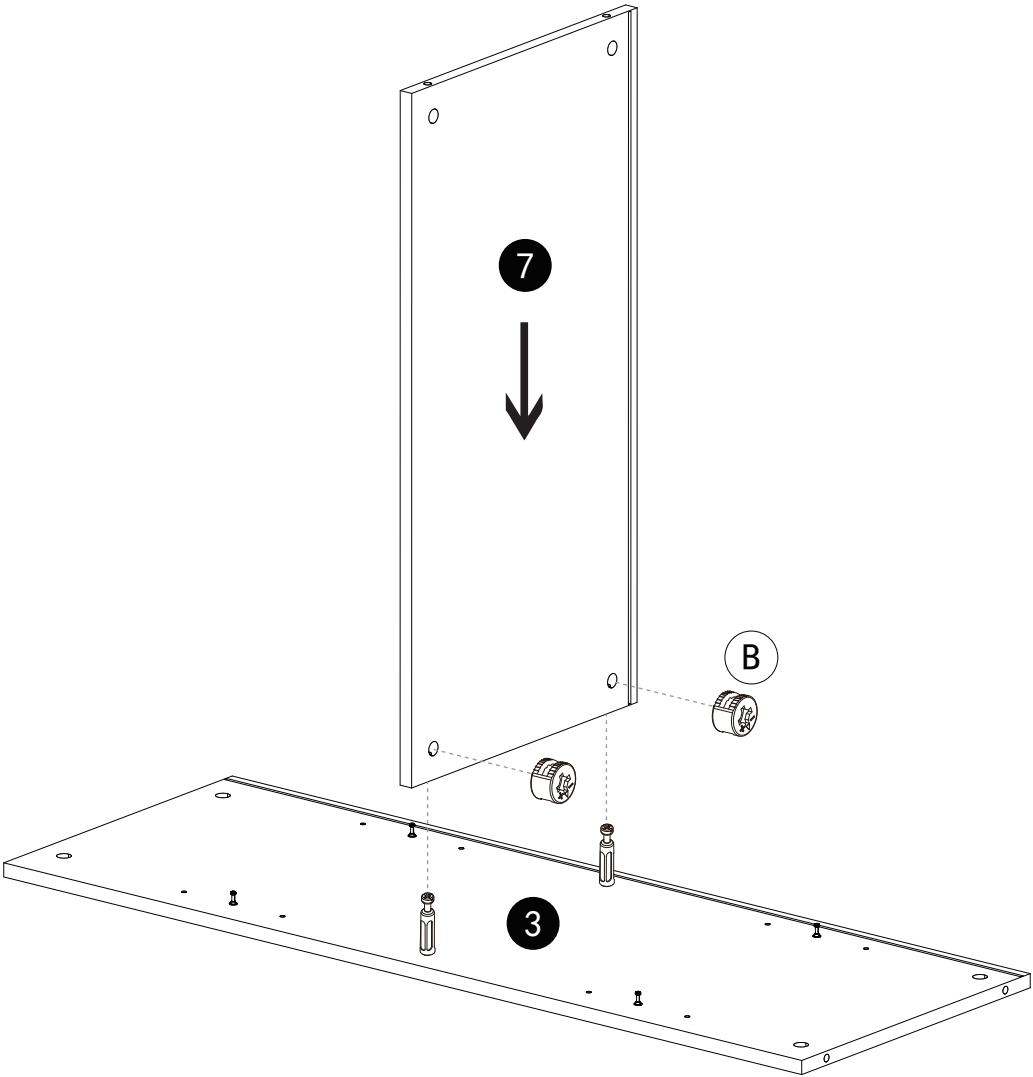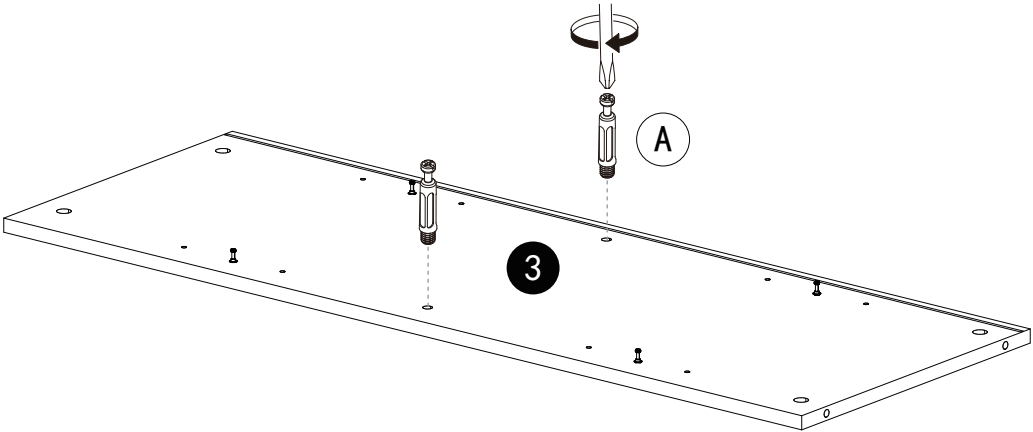



A		x2
B		x2

STEP4

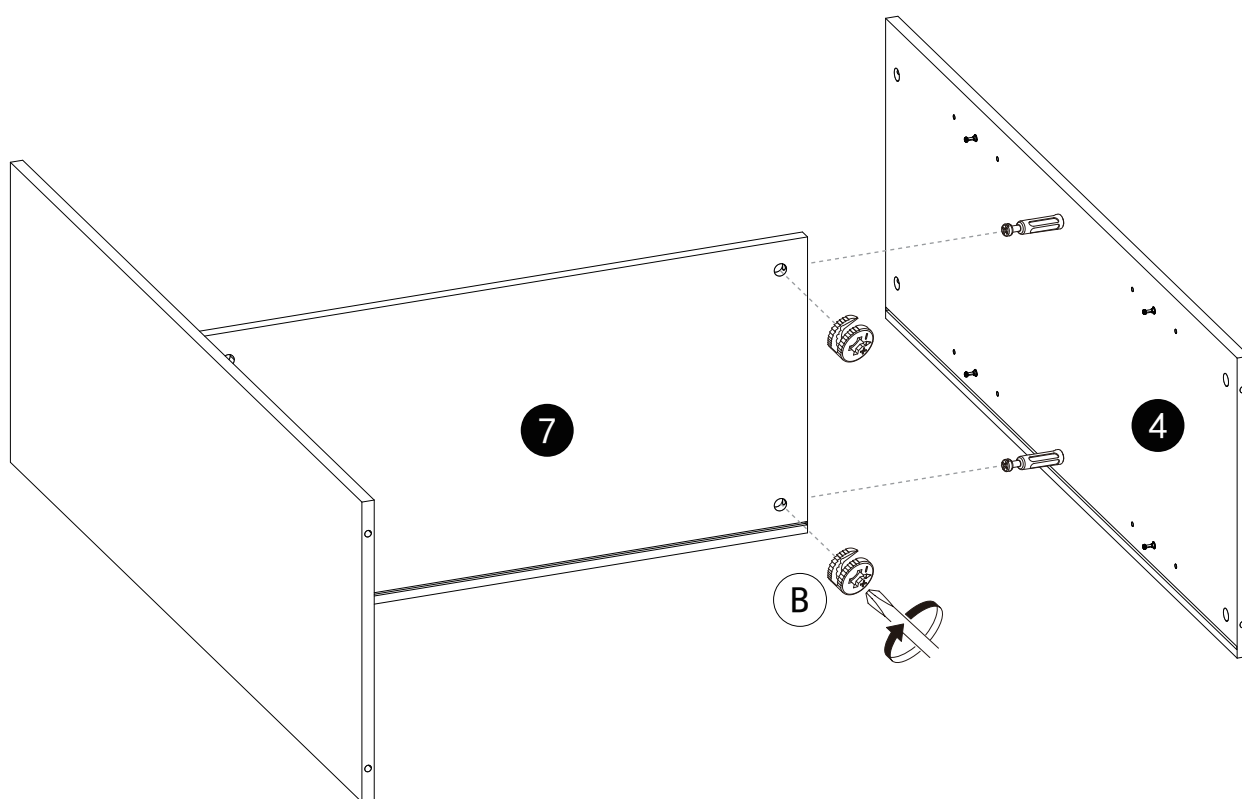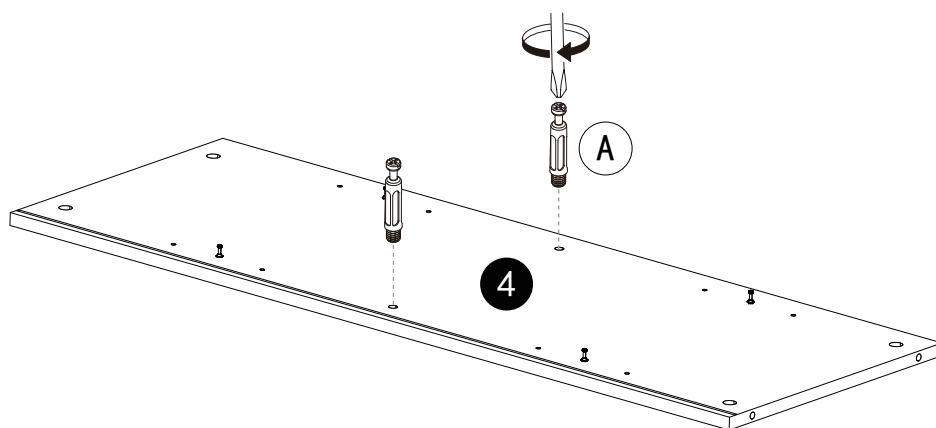



A		x2
B		x2

STEP5

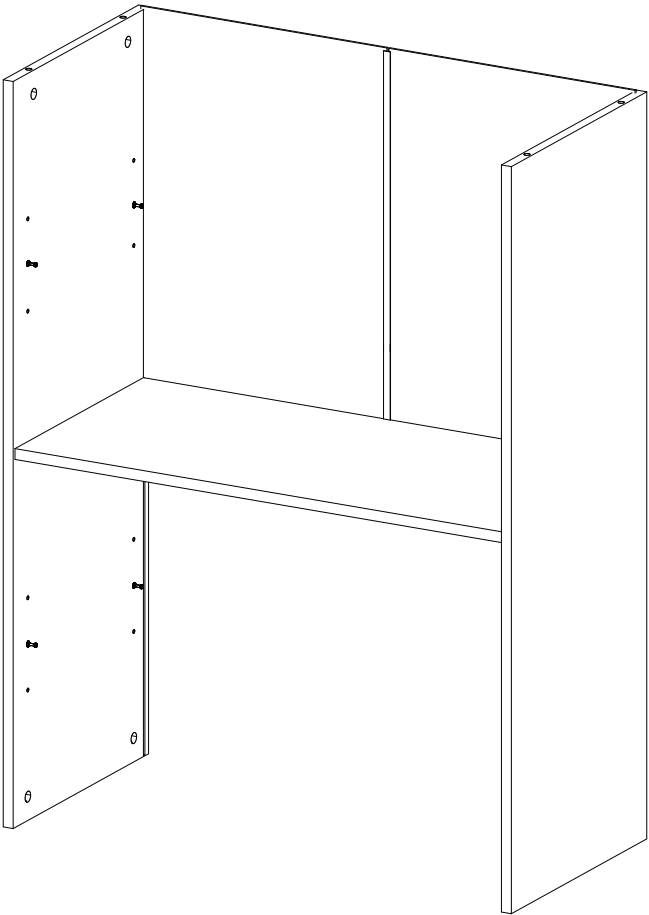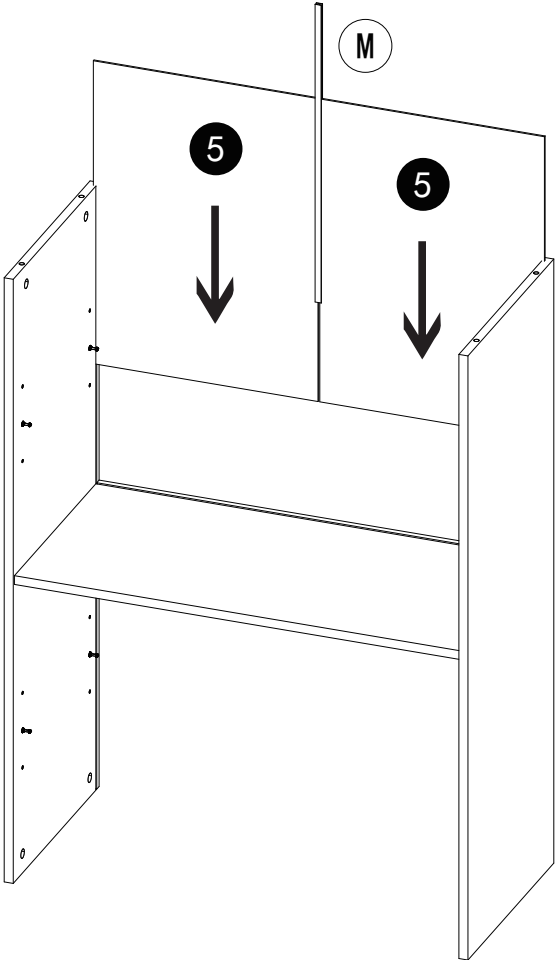

M		x1
---	---	----


STEP 6

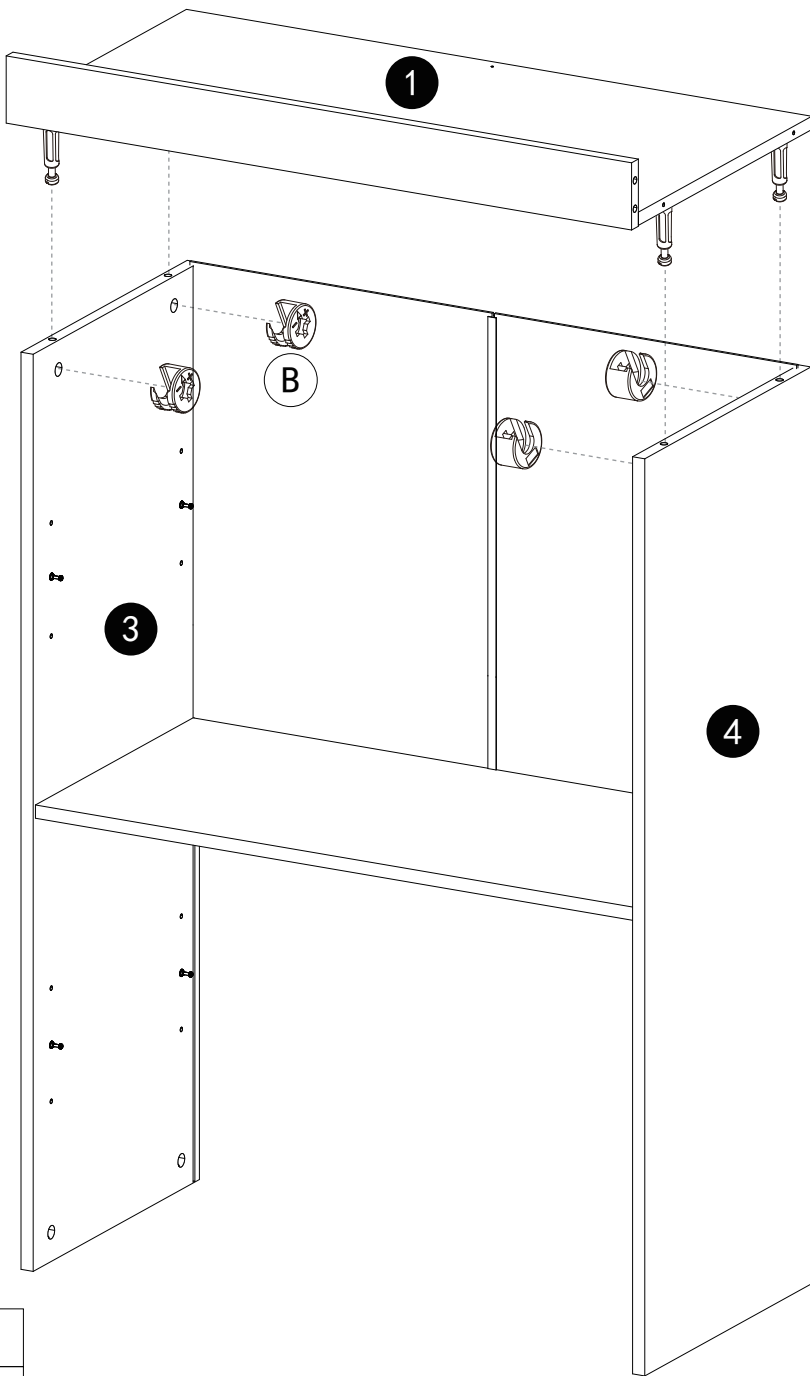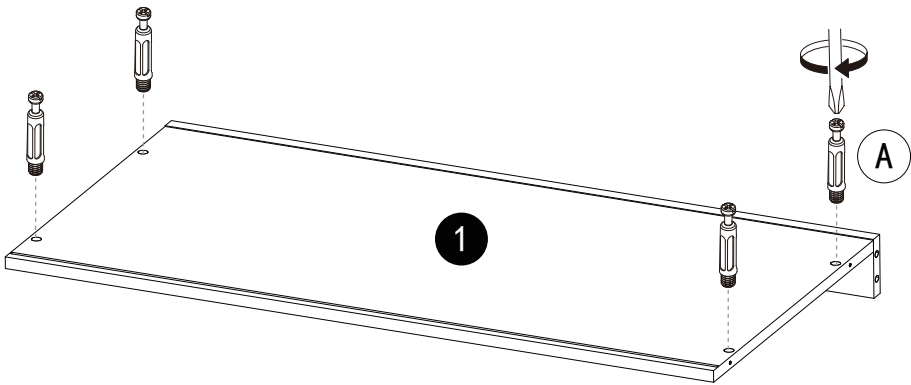


A		x4
B		x4

STEP 7




1

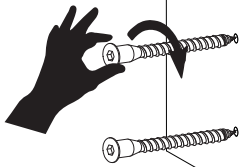

2

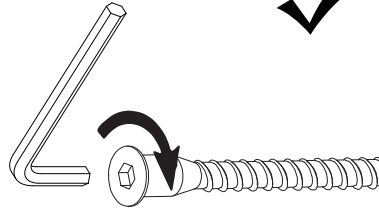

X

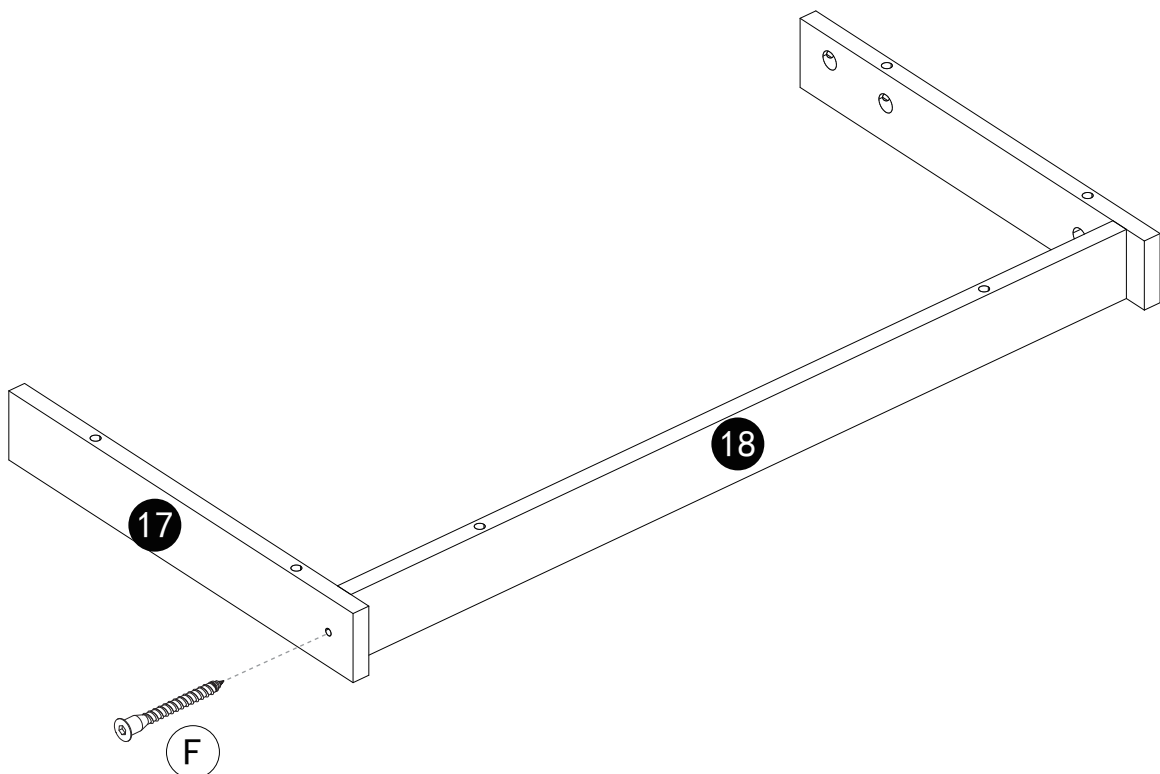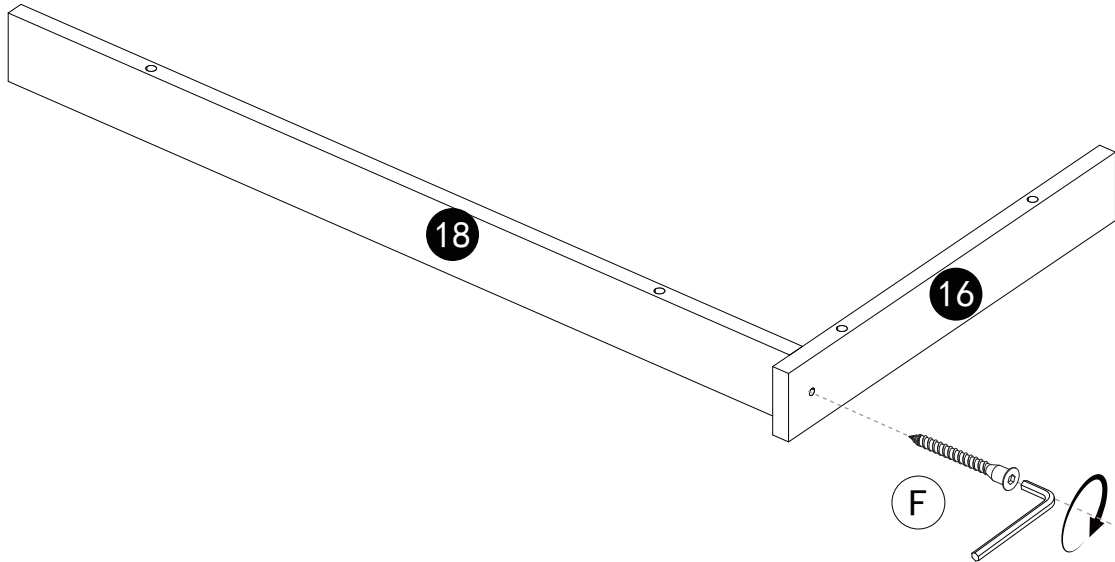
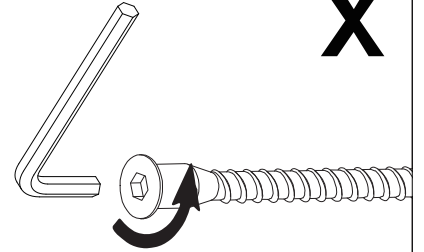


F




x2

STEP8

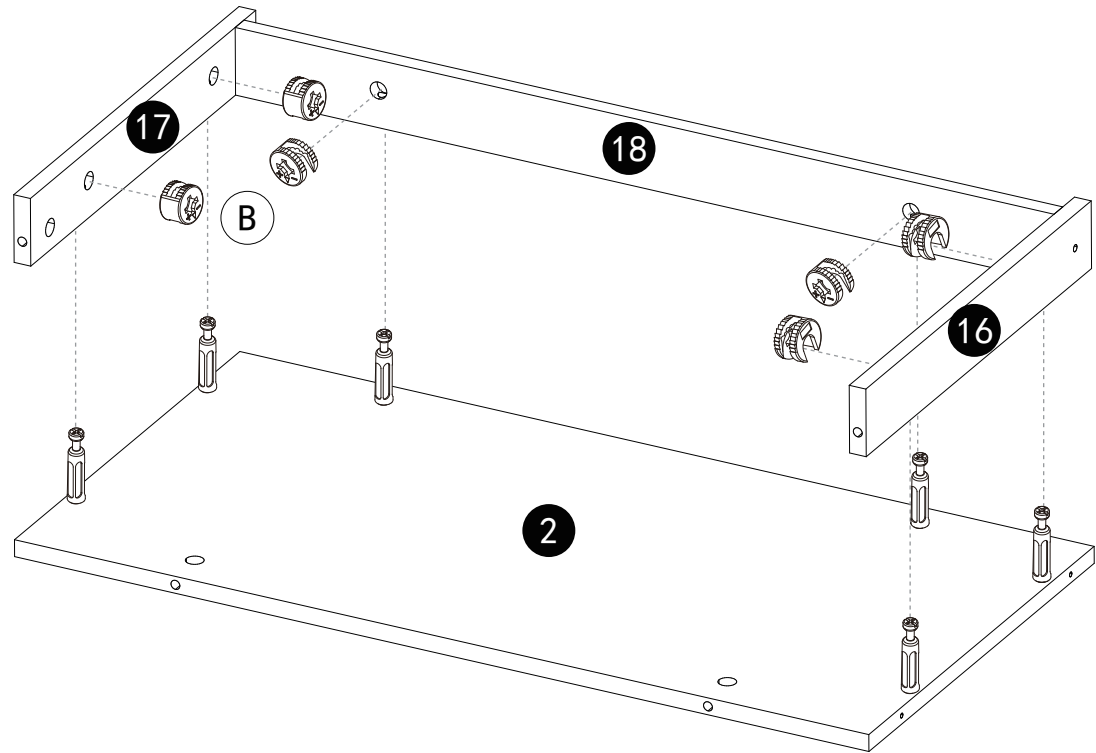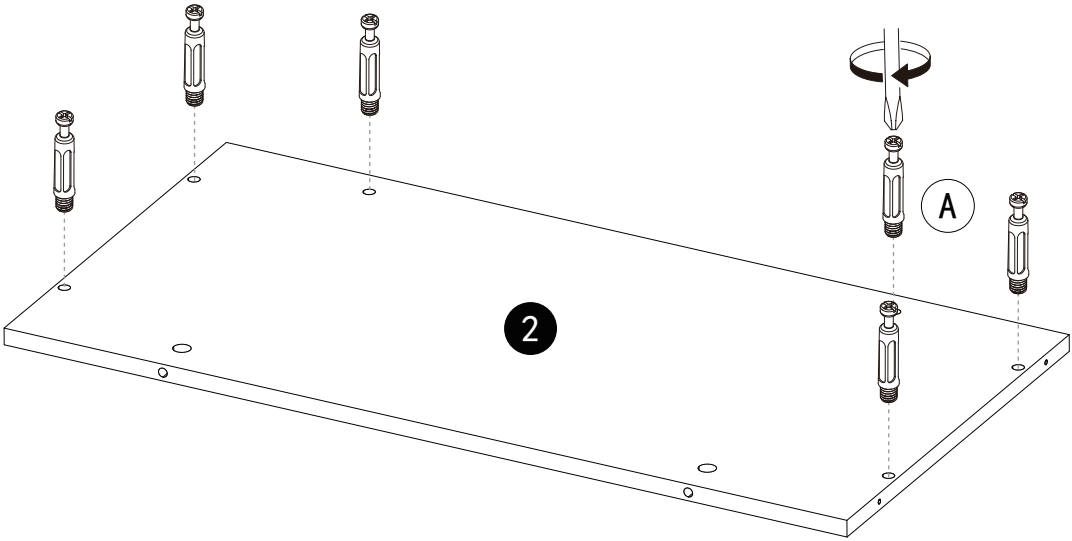



A		x6
B		x6

STEP 9

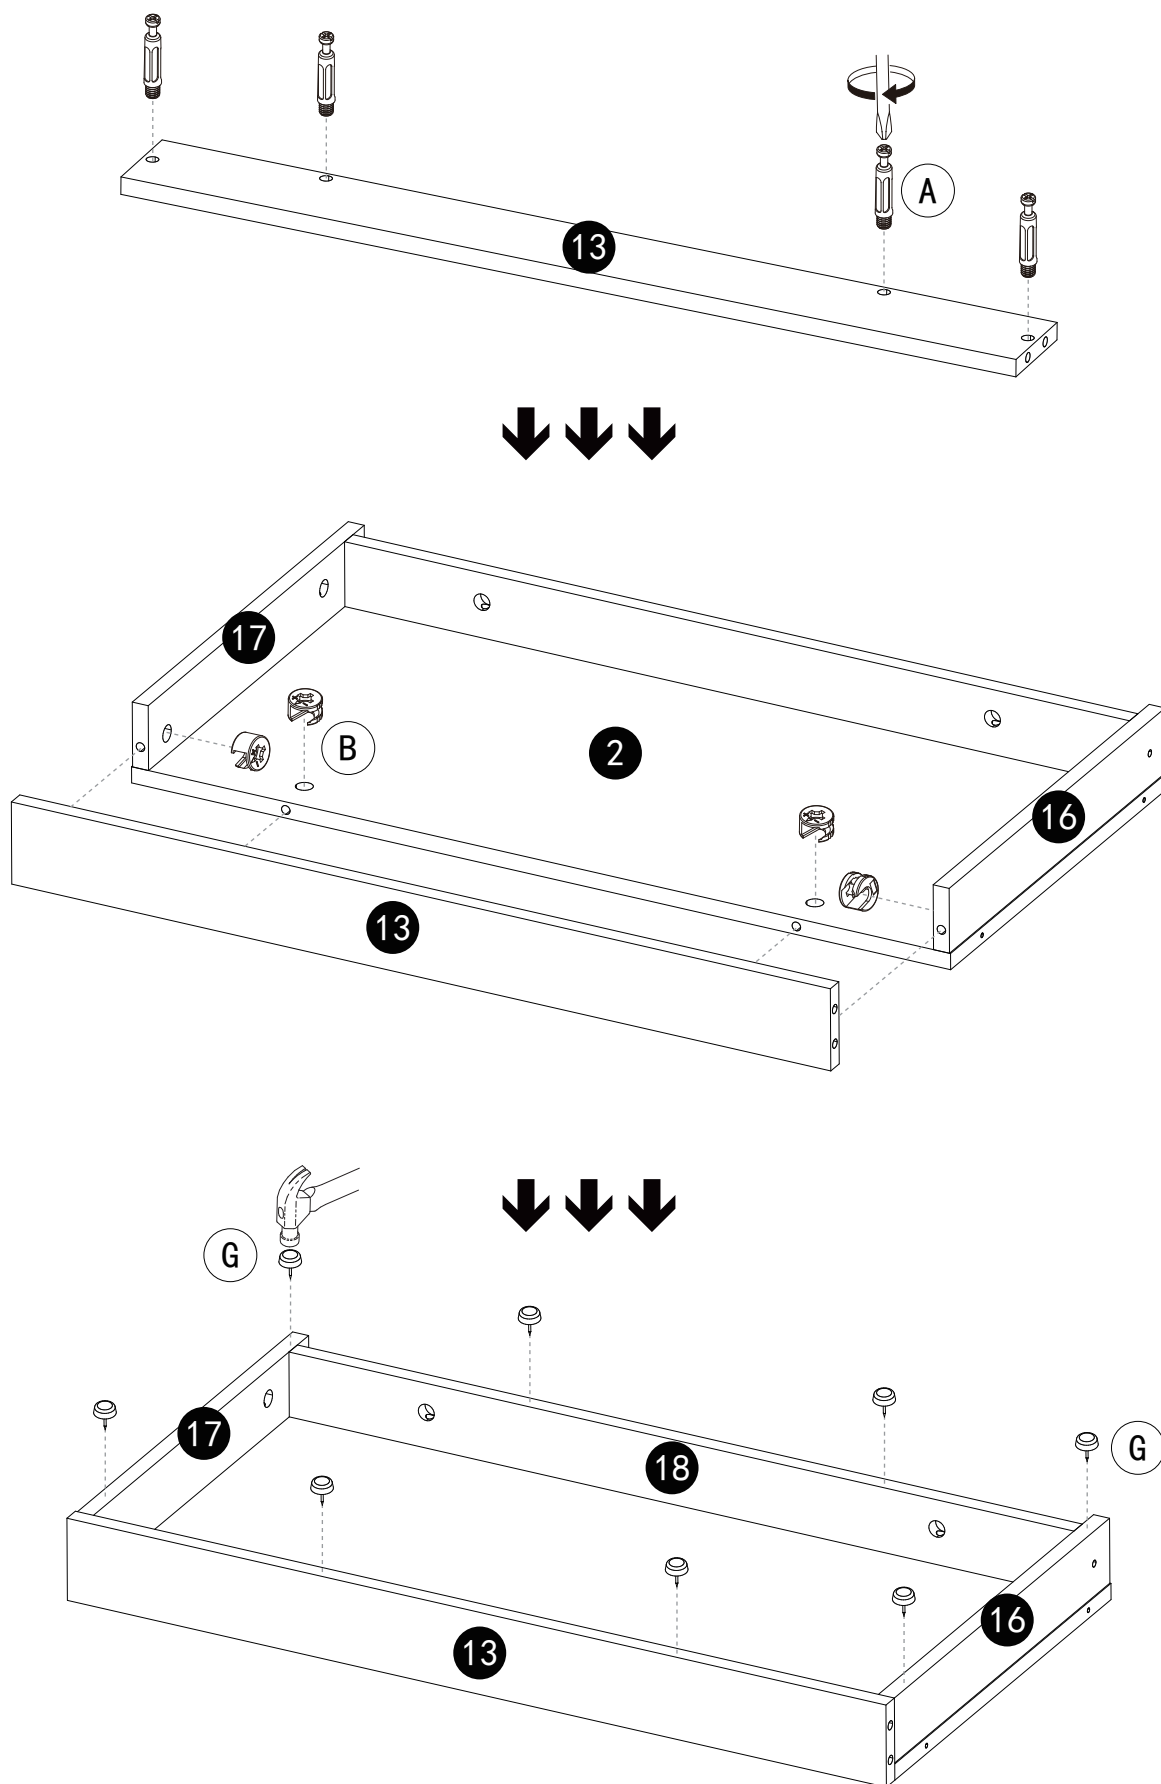



A		x4			
B		x4	G		x8

STEP 10

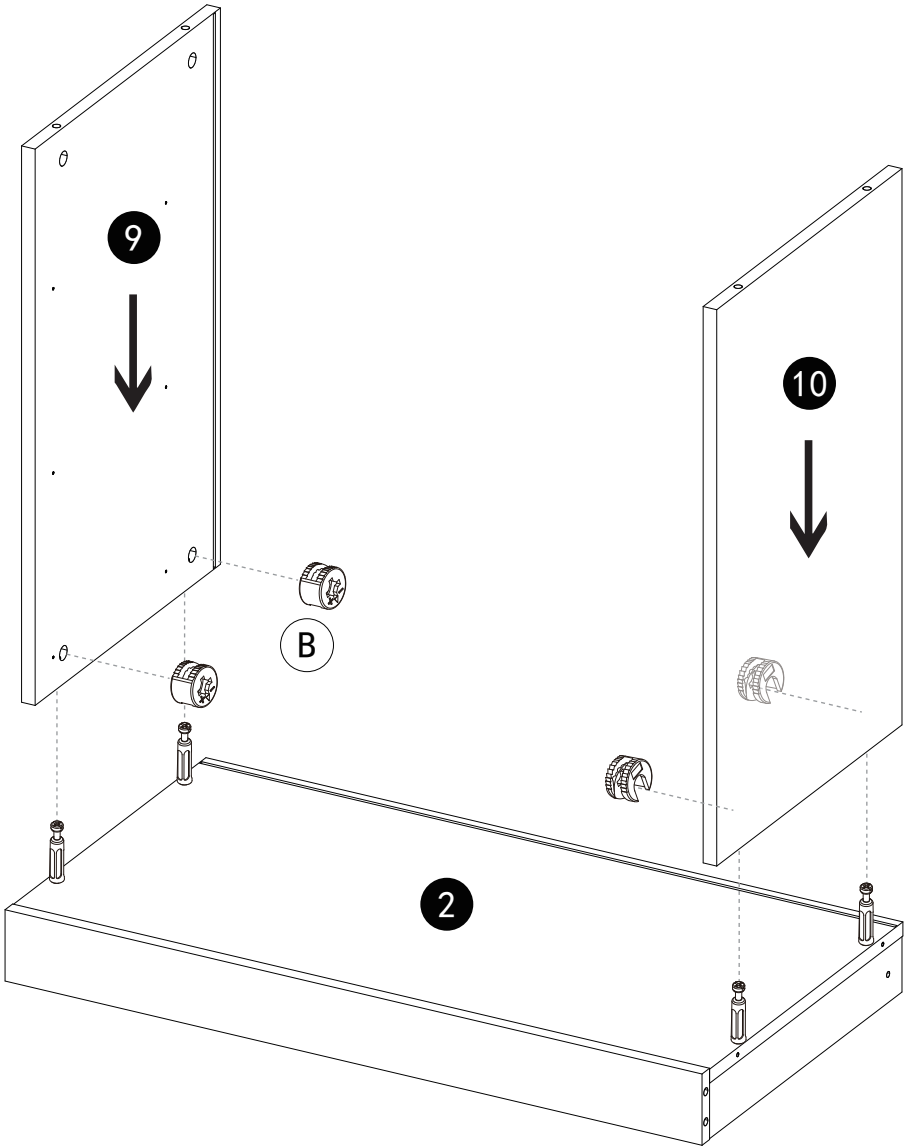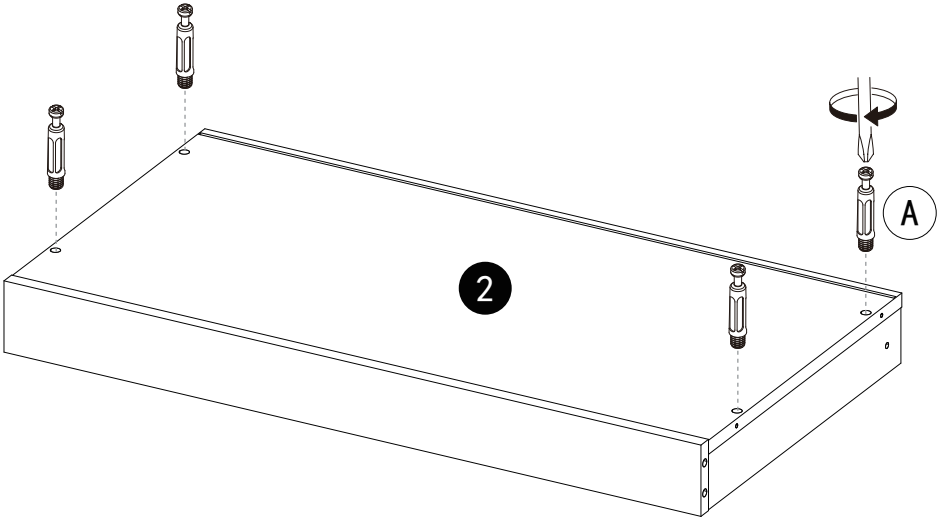



A		x4
B		x4

STEP 11

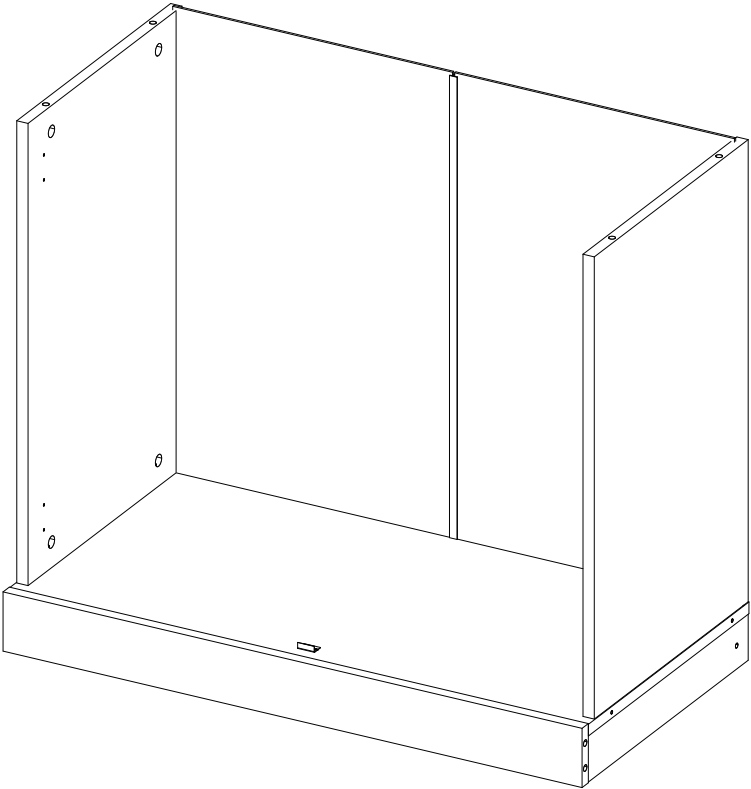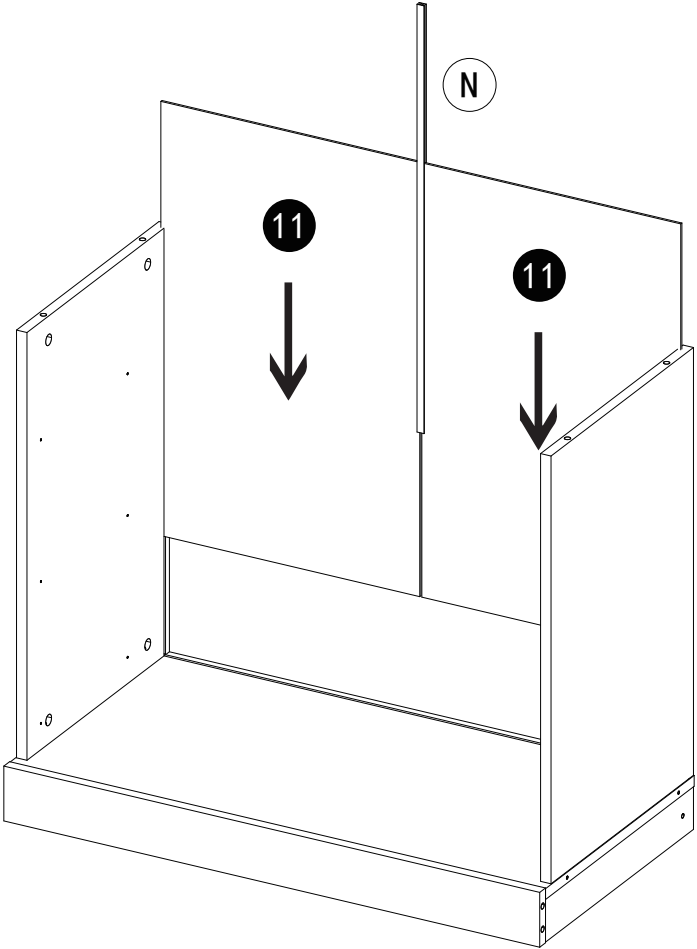



N		x1
---	---	----

STEP 12

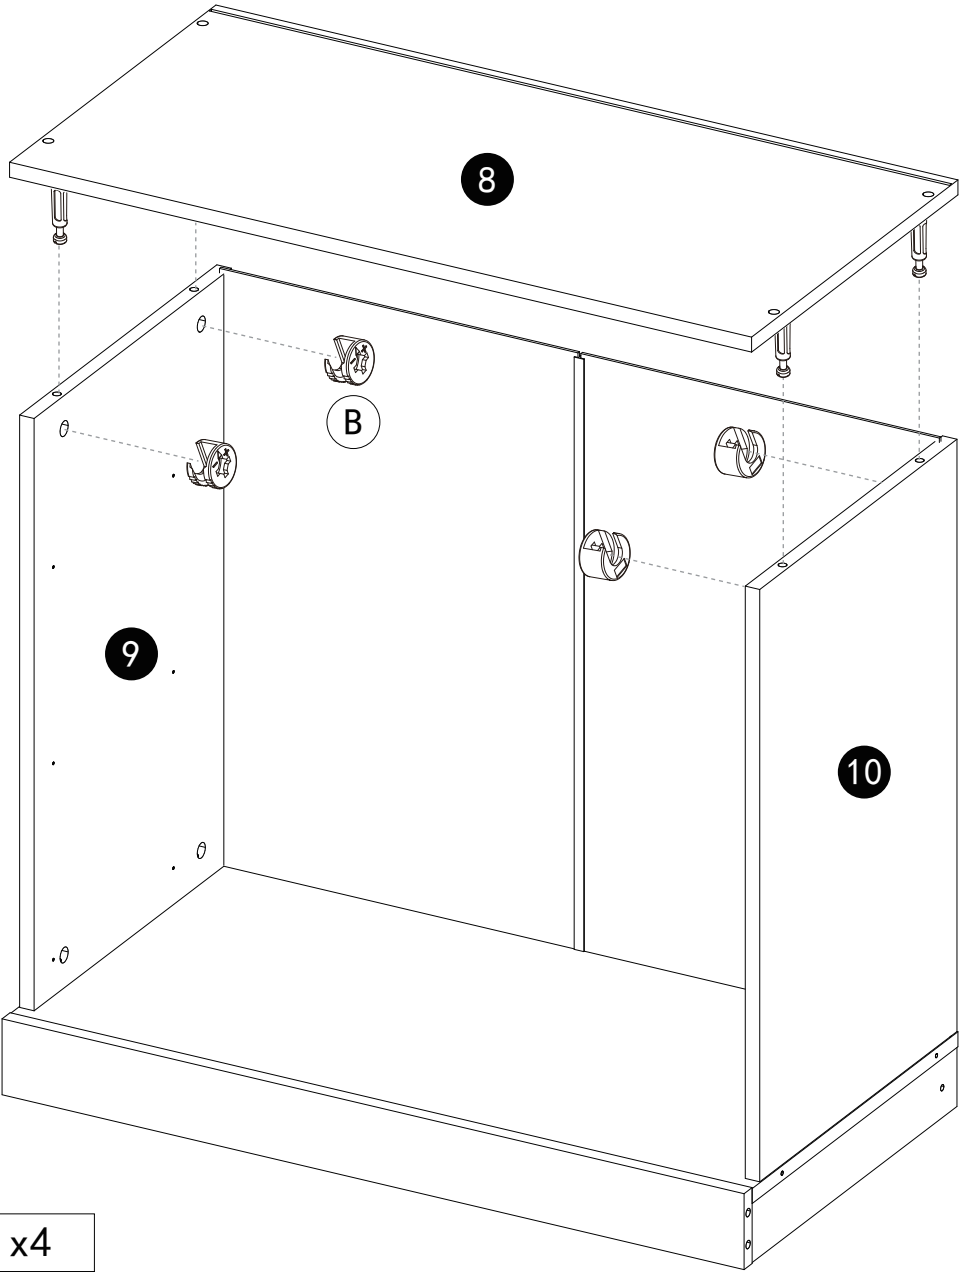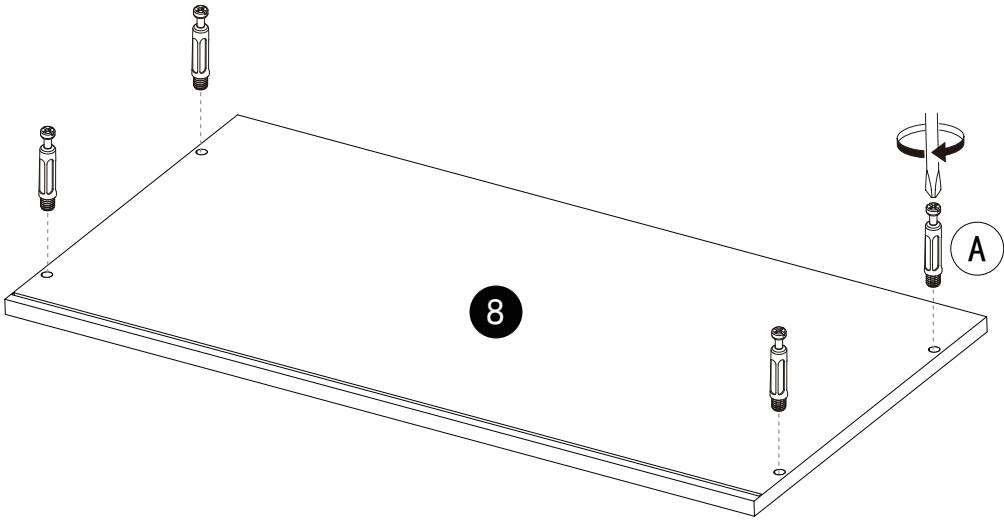







A		x4
B		x4

STEP 13

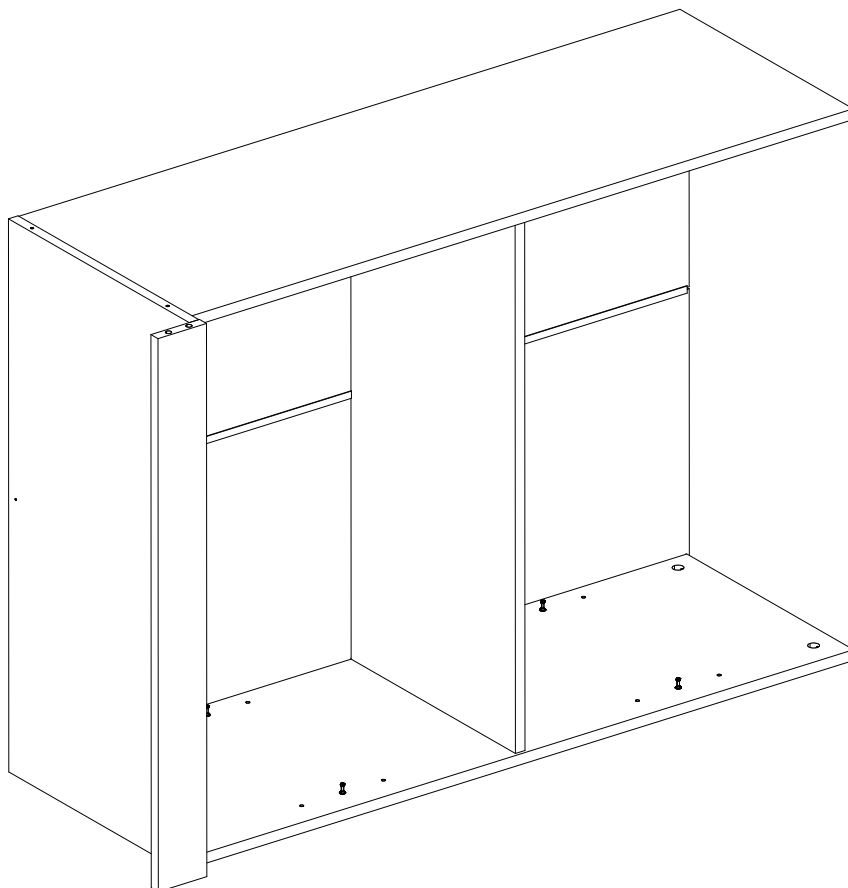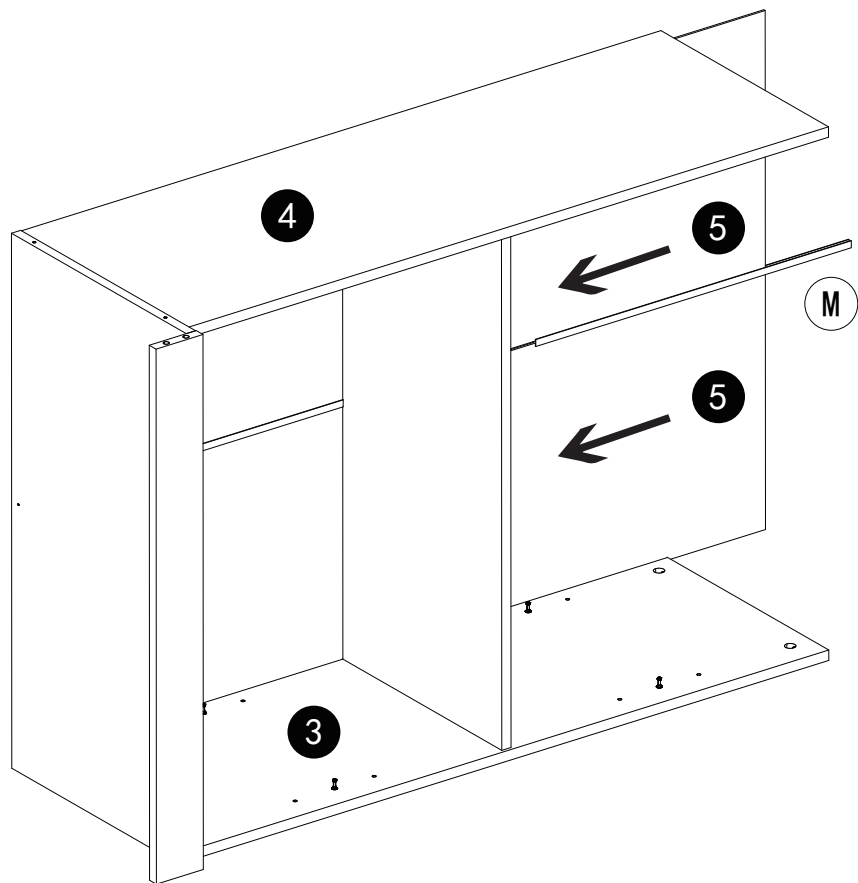



M		x1
---	---	----

STEP 14

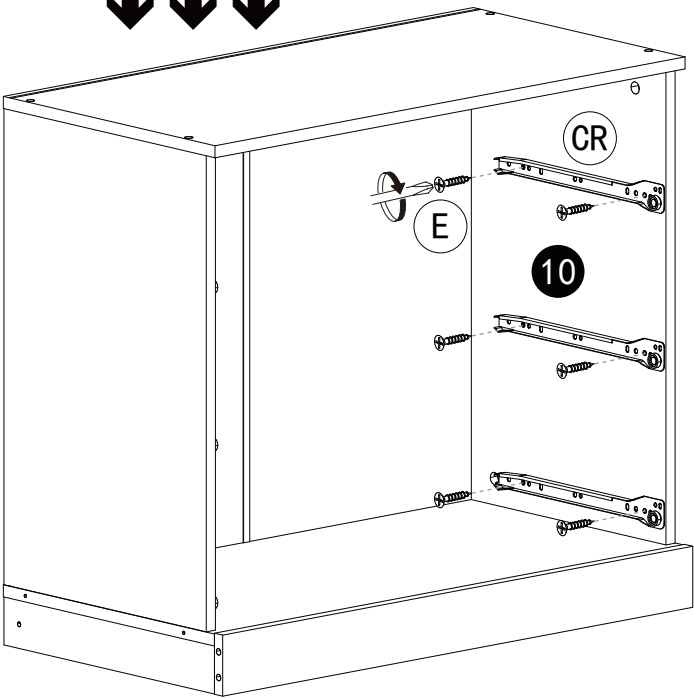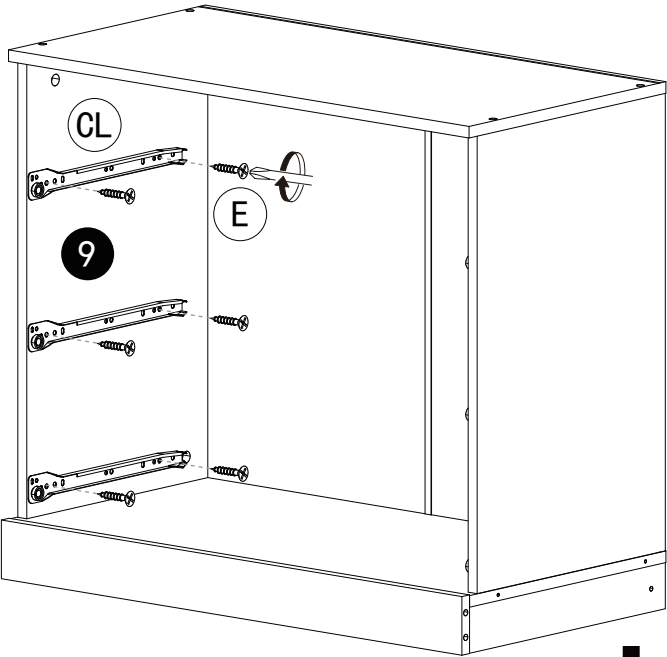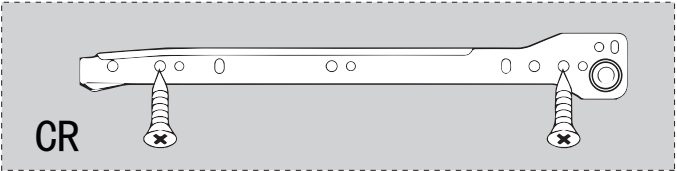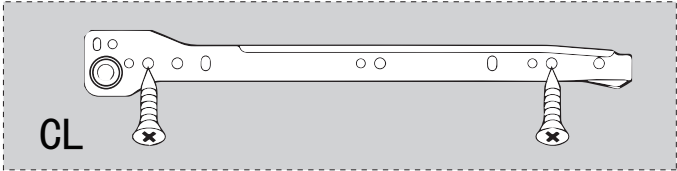


CL		x3
CR		x3
E		x12

STEP 15



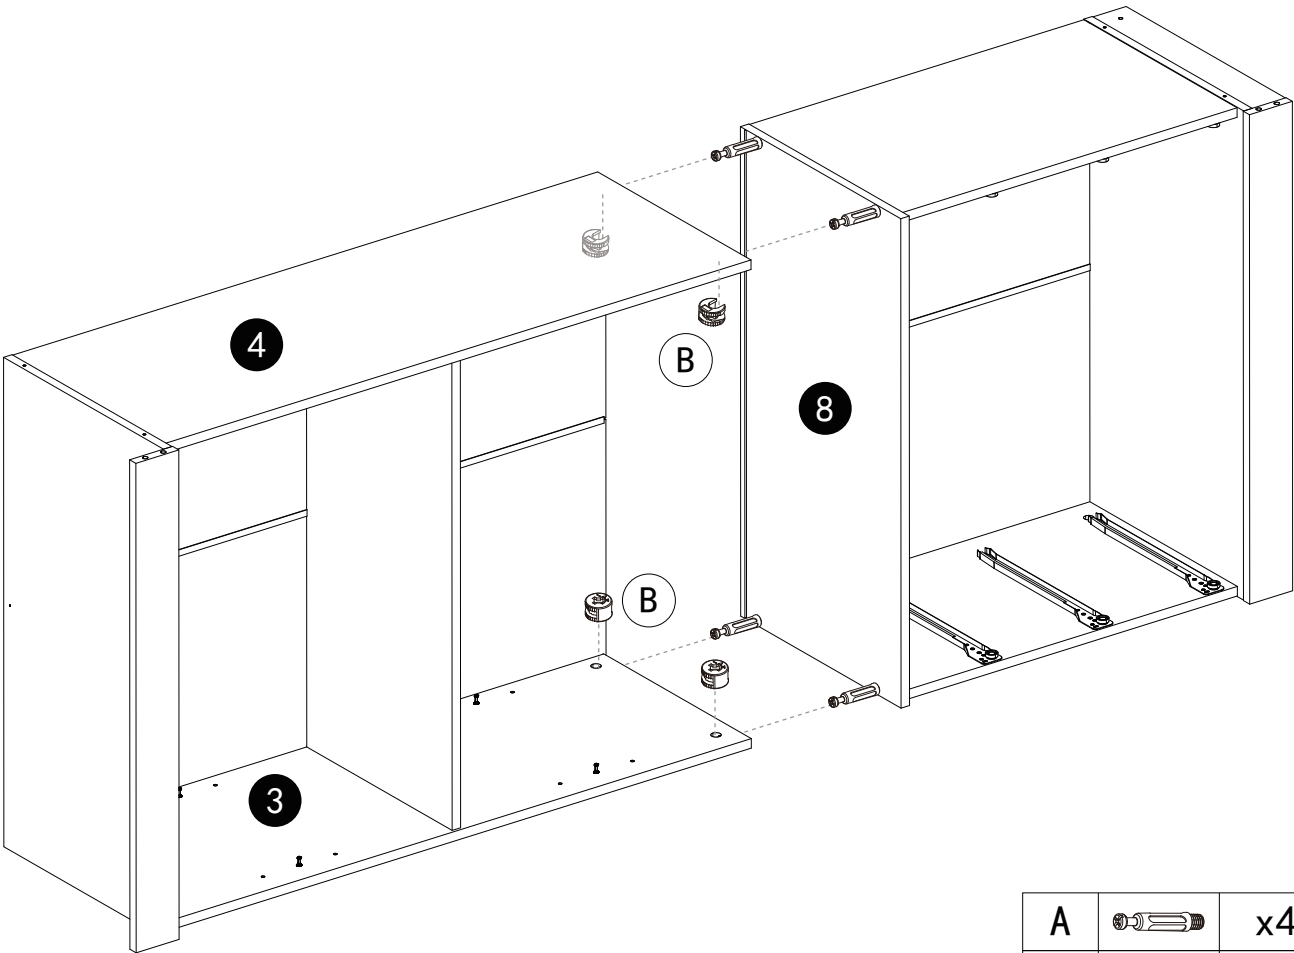
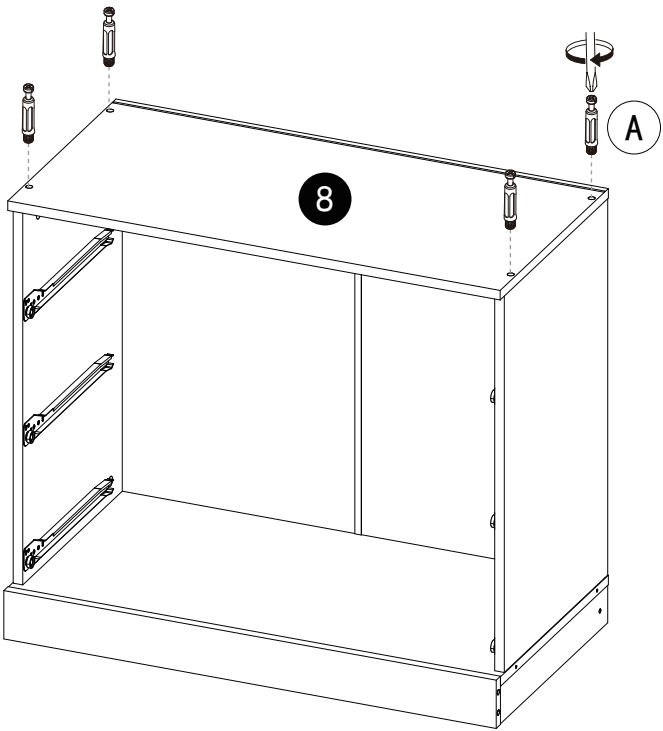


A		x4
B		x4

STEP 16

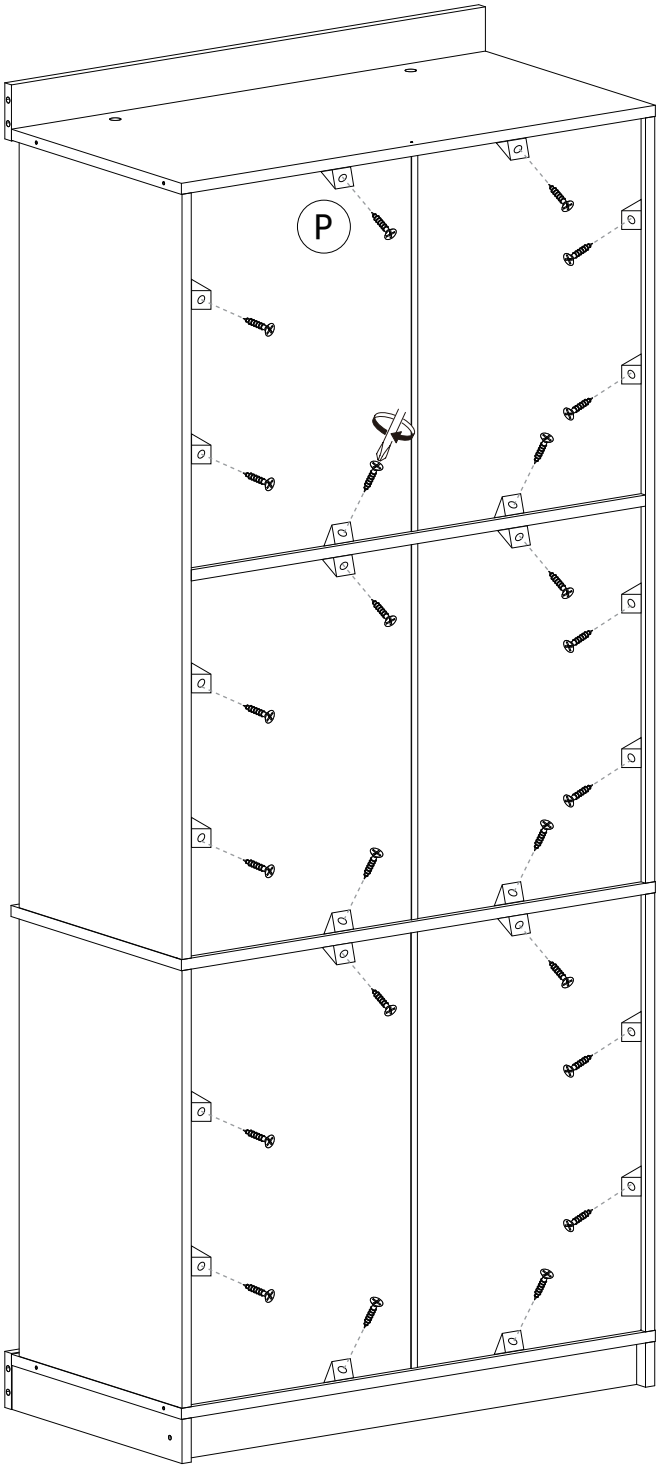

P   x24

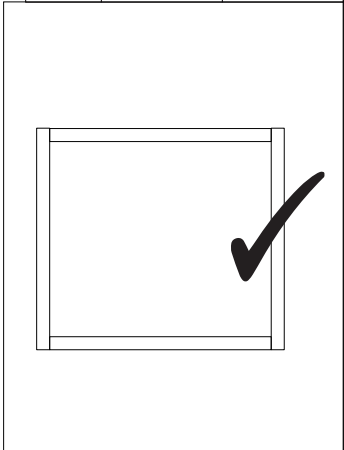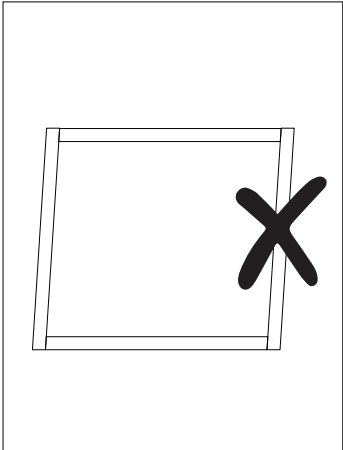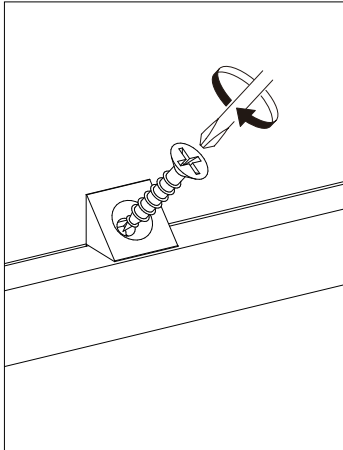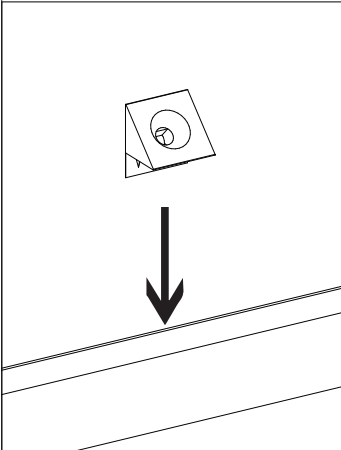

STEP17


1

2

X



X

✓

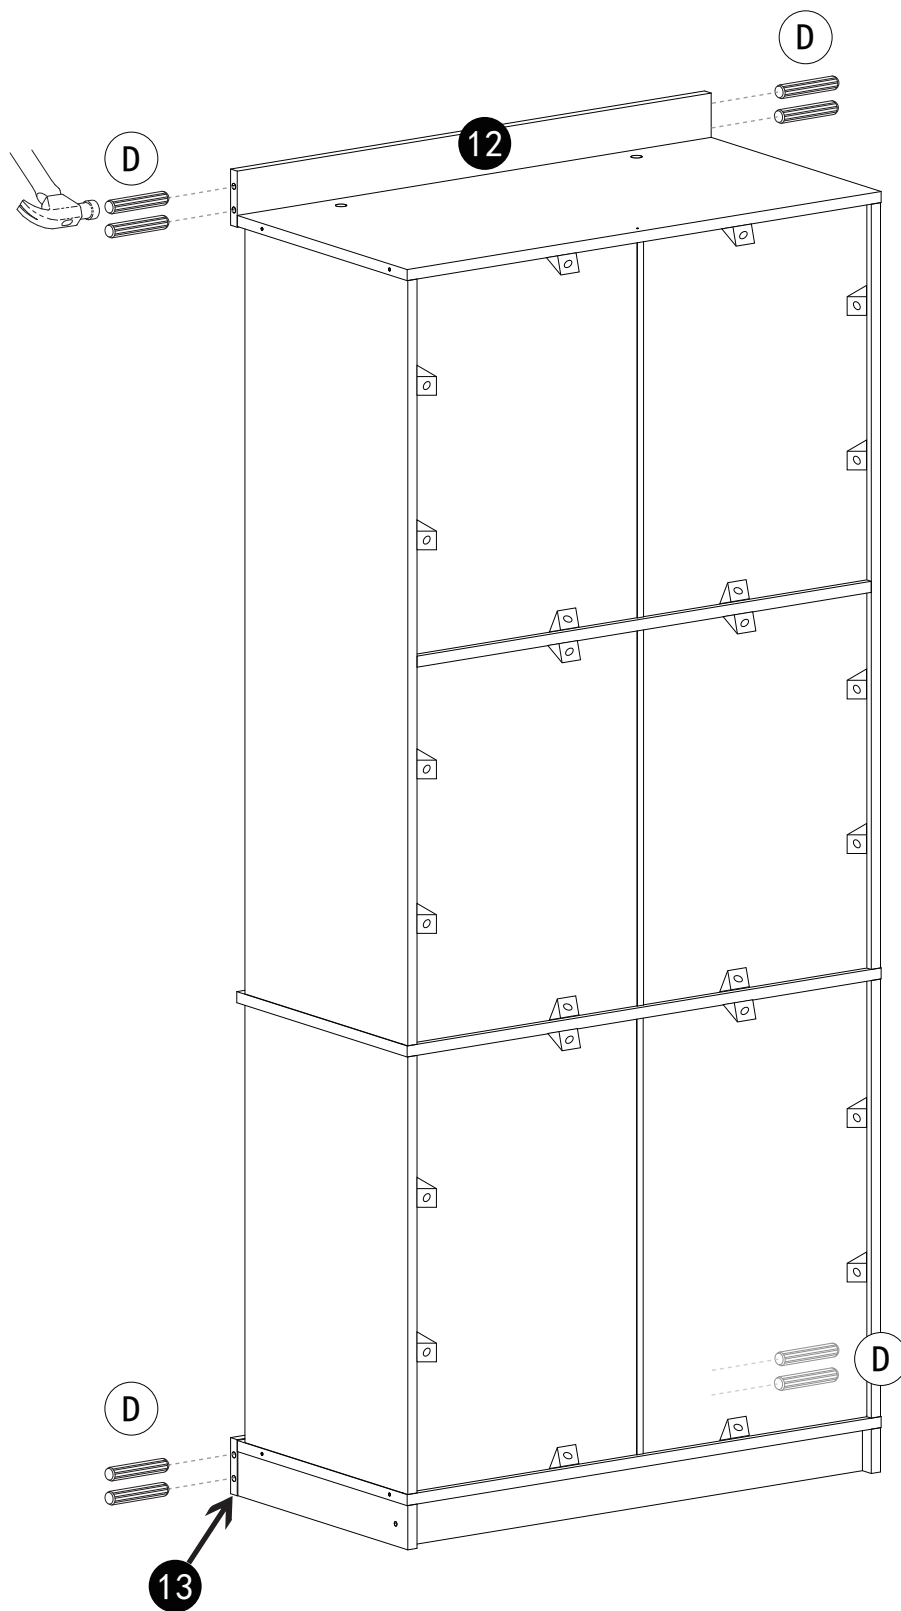

D		x8
---	--	----

STEP 18

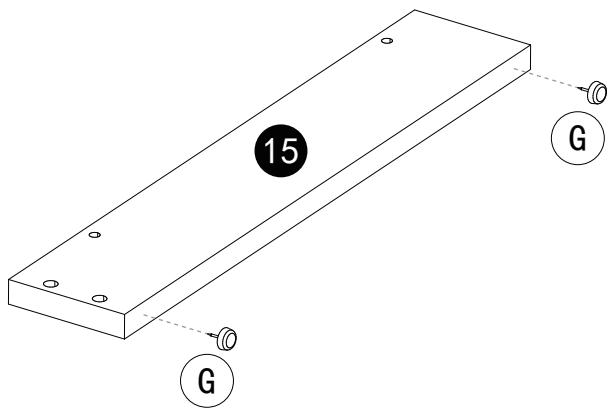
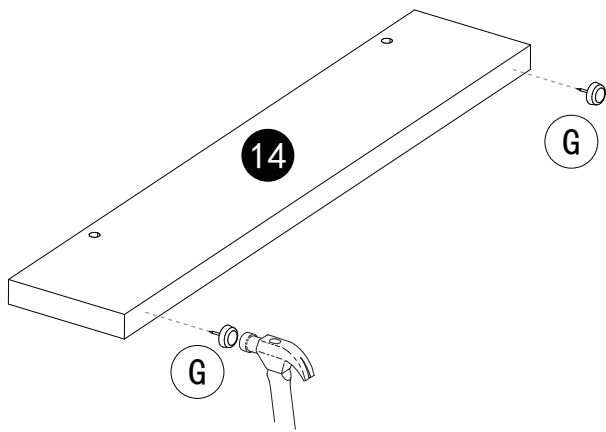


G



x4

Note: Plates 14 and 15 with G fittings installed are installed under the cabinet, while plates 14 and 15 without G fittings are installed above the cabinet.

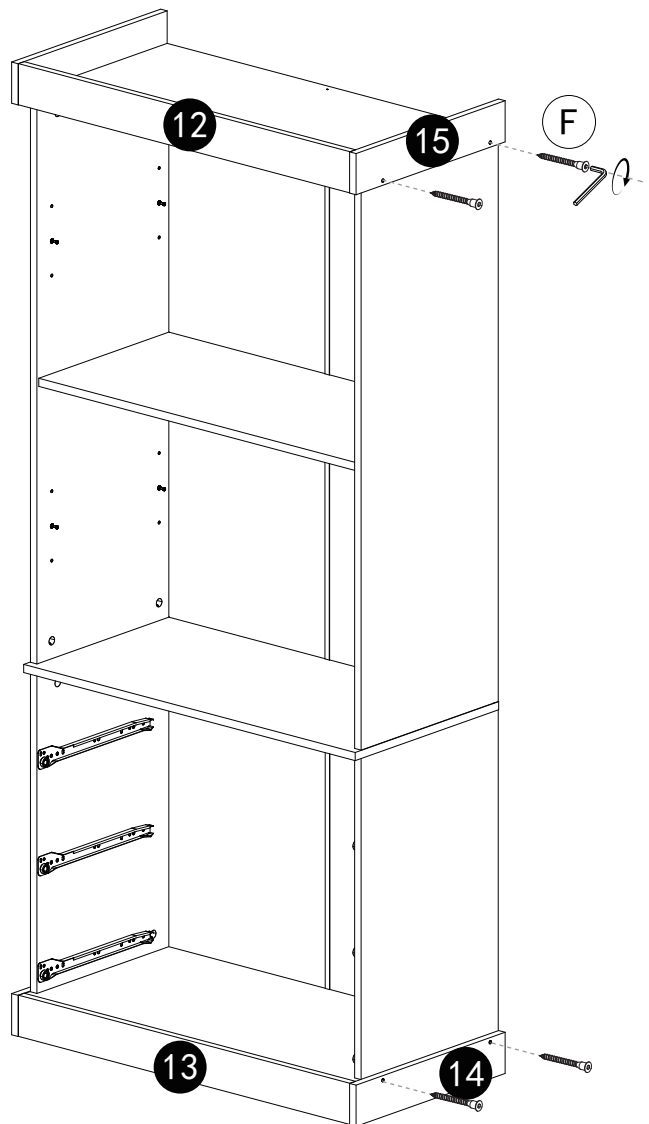
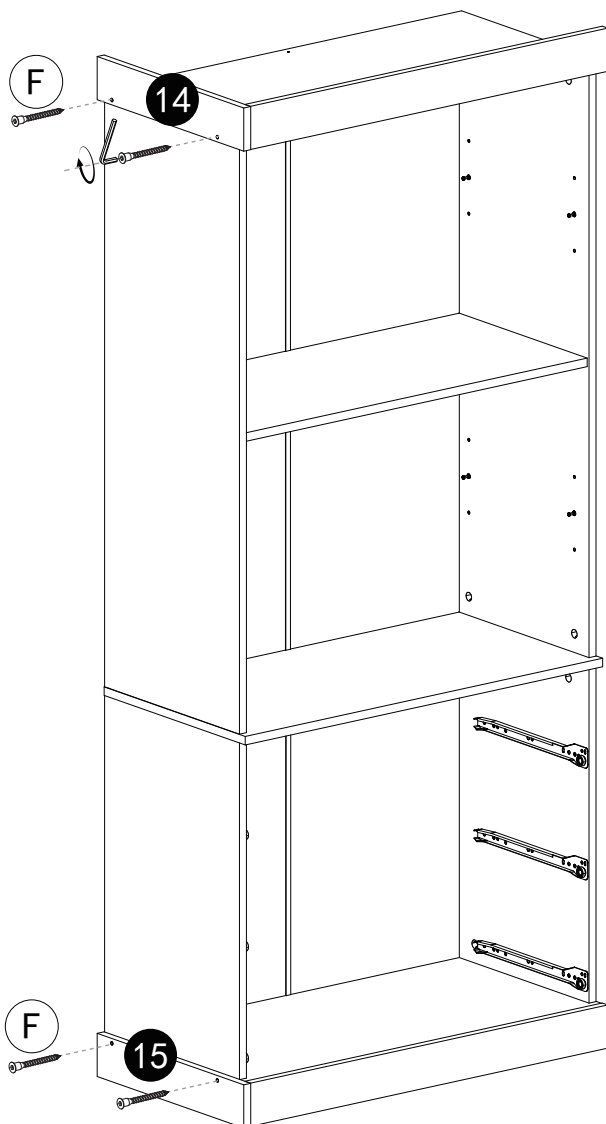


F





x8

STEP 19

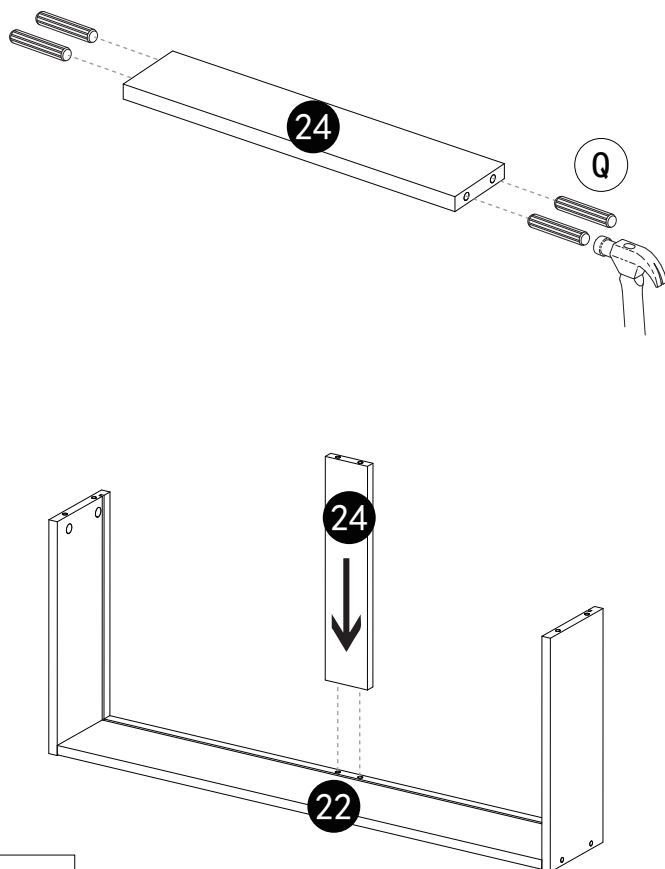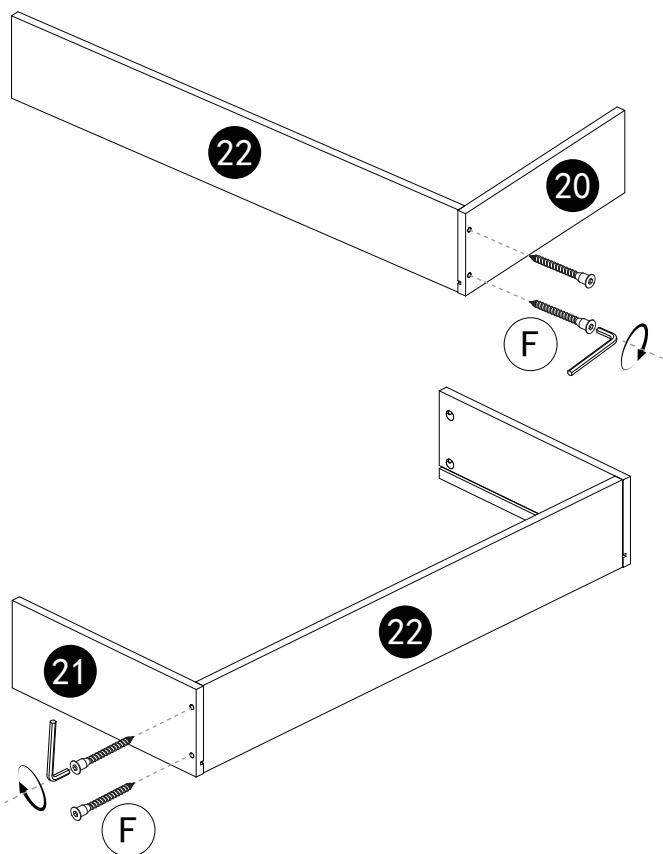


X3

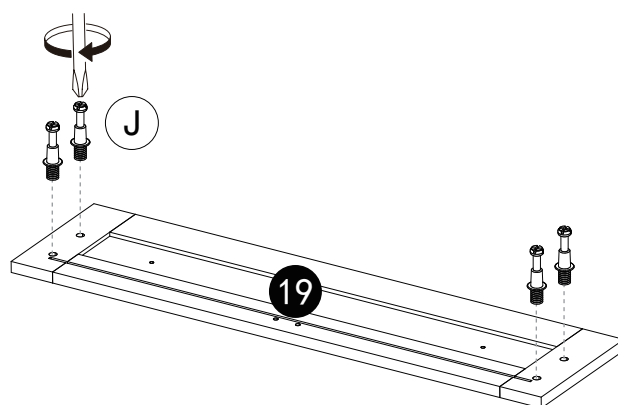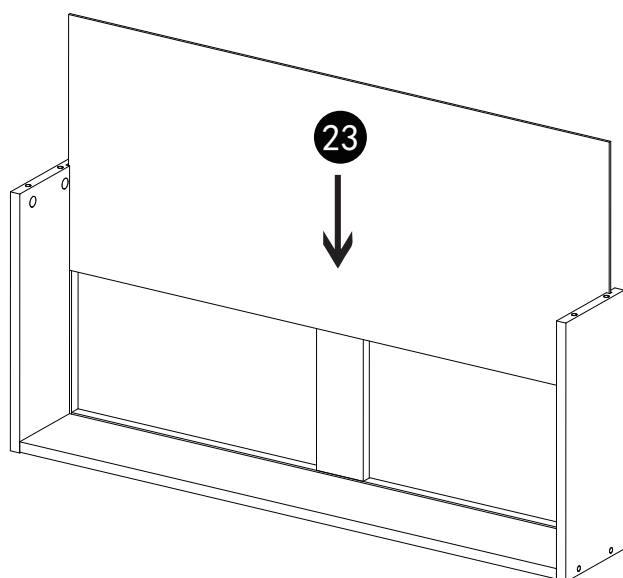

	J		x12
Q		x12	F  x12

STEP20

X3

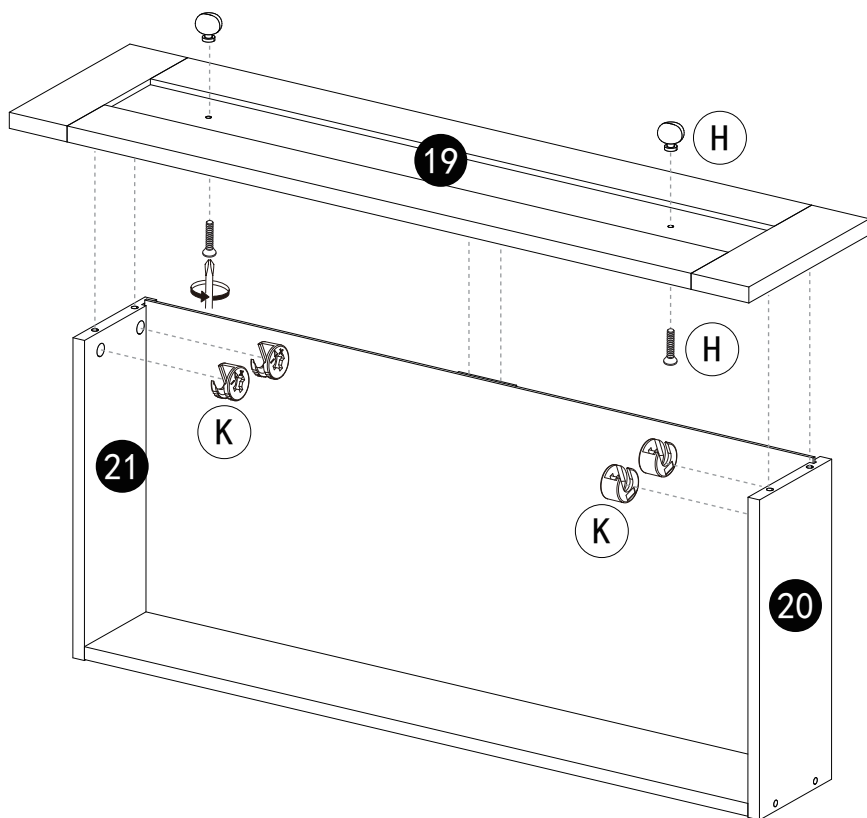


DL





DR

X3


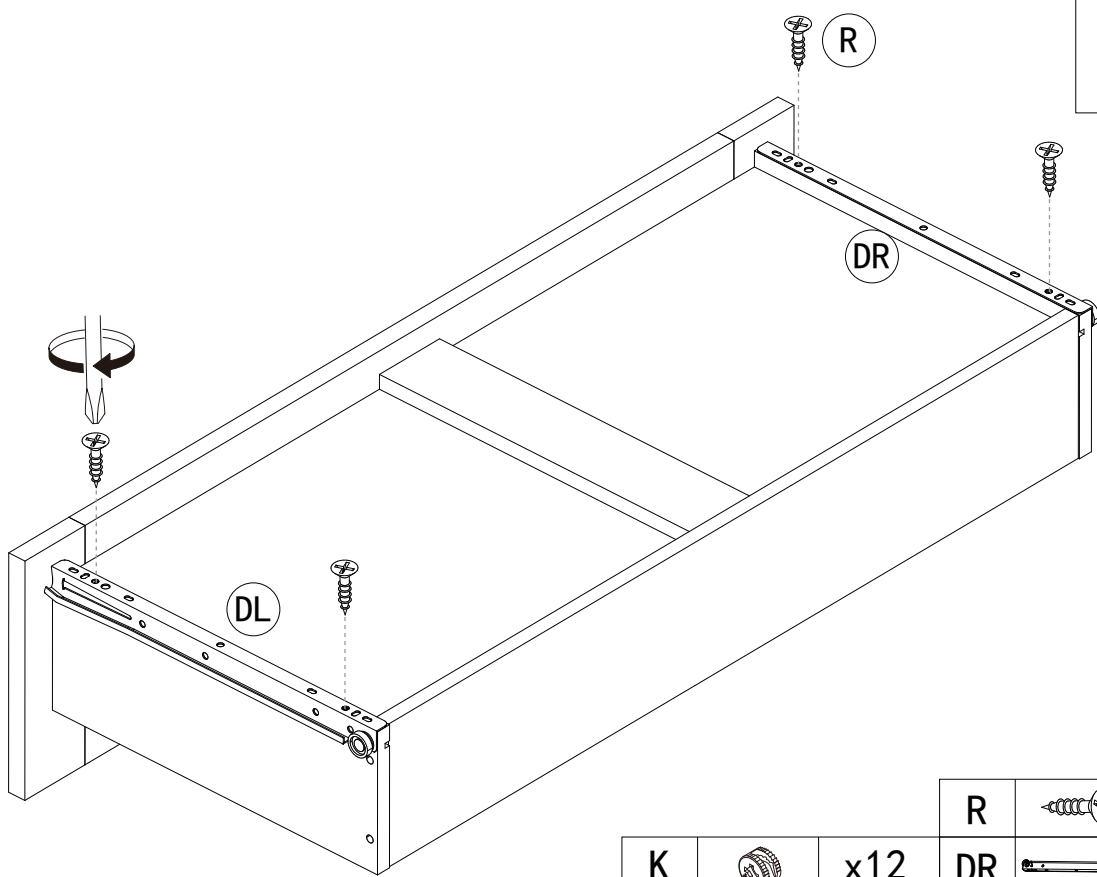



R		x12
K		x12
H		x6
DR		x3
DL		x3

STEP21

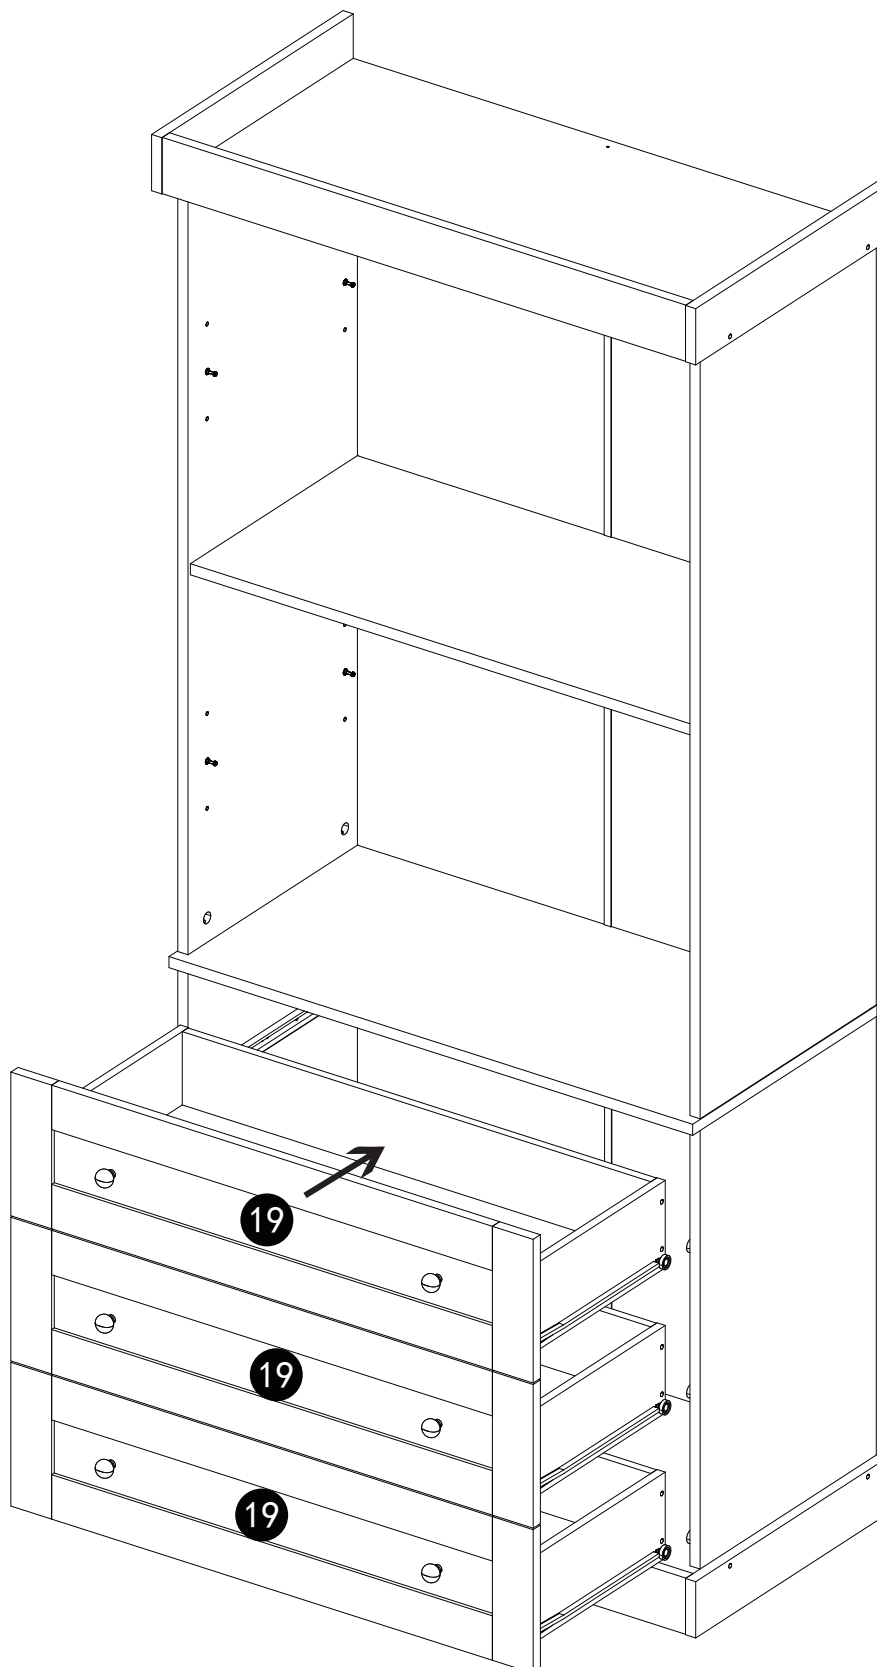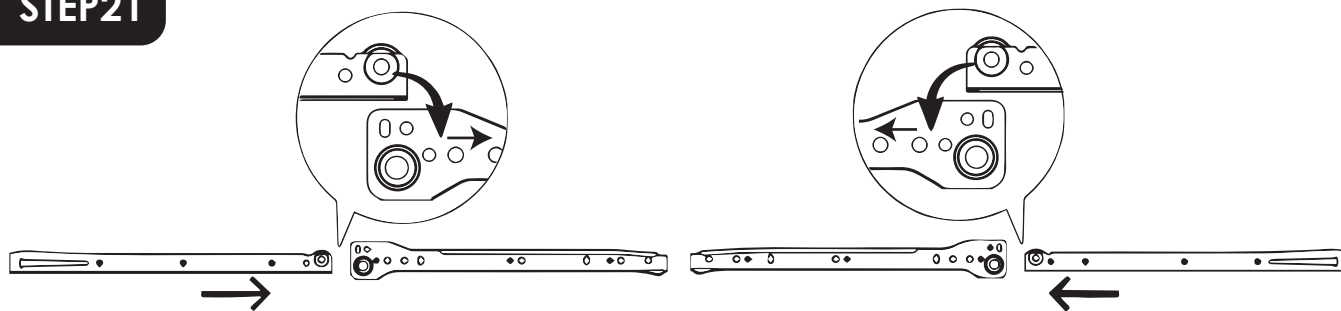


STEP 22

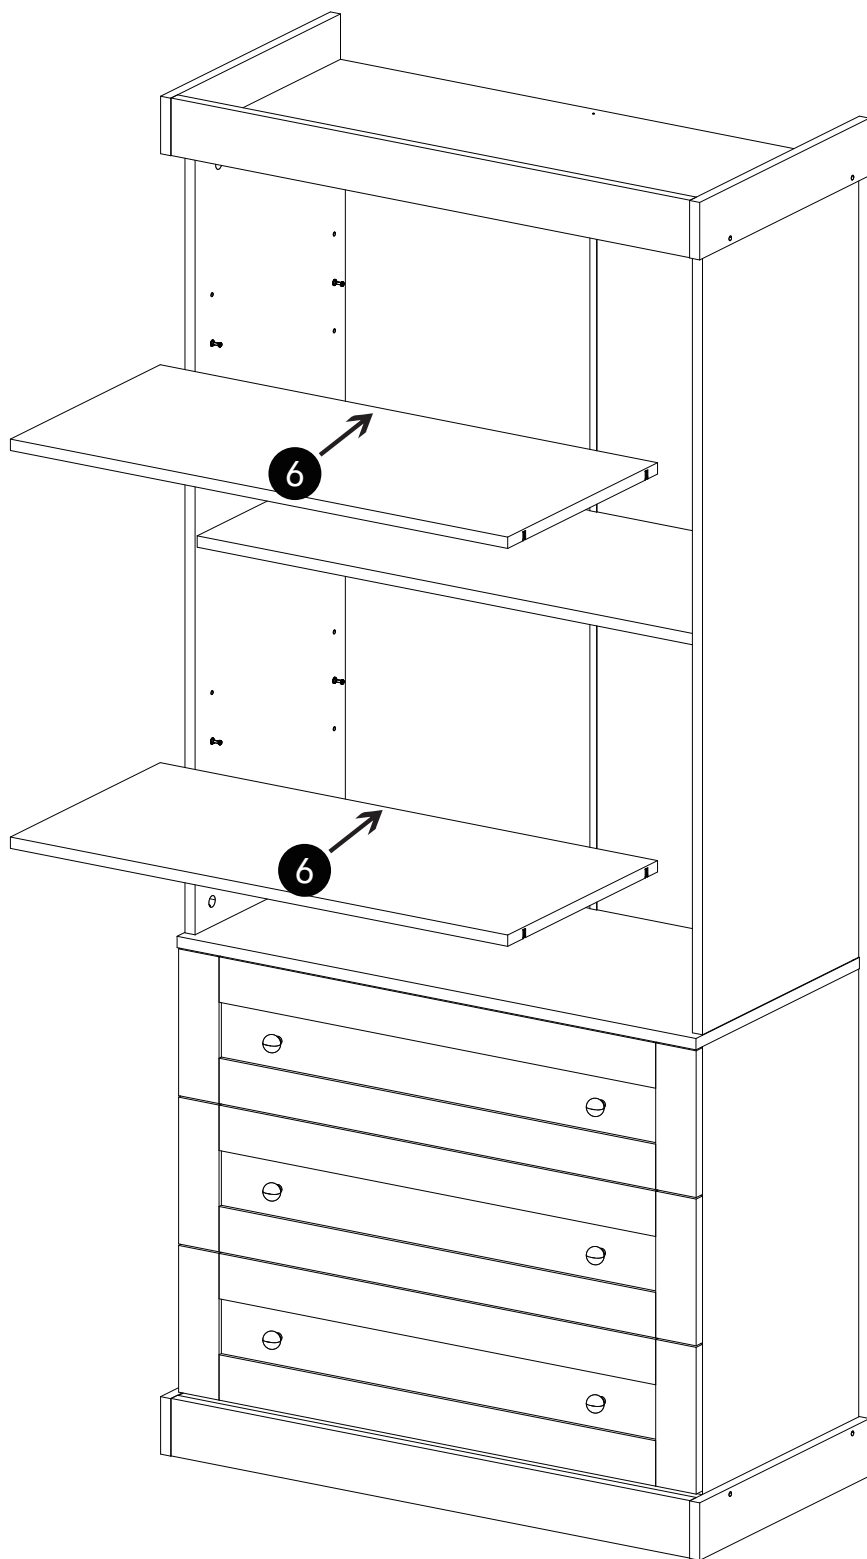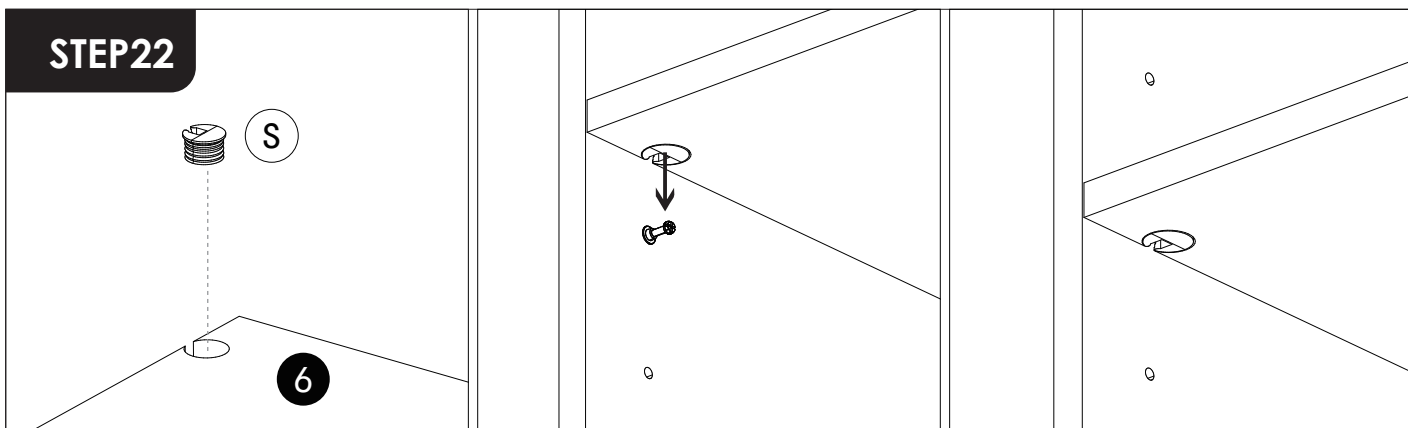

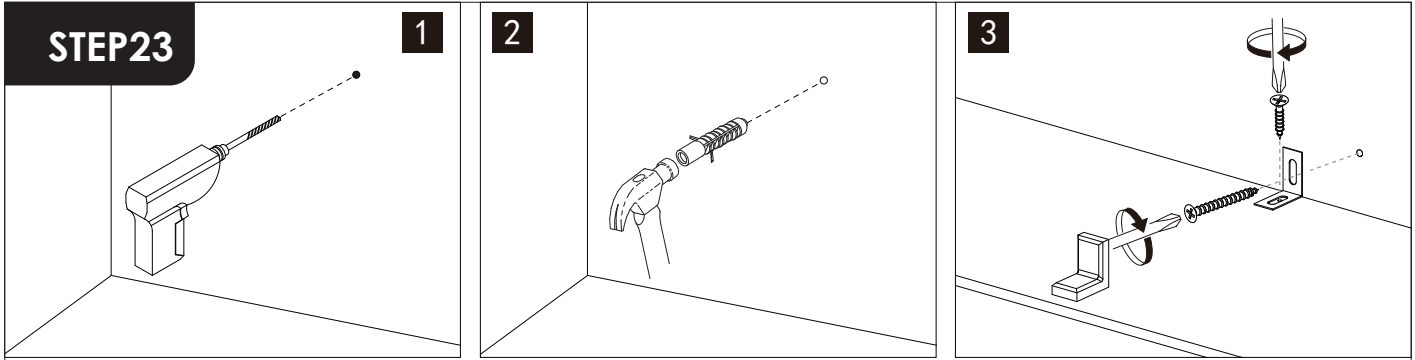


Note: If you buy two cabinets to be combined together, please do not install this step.

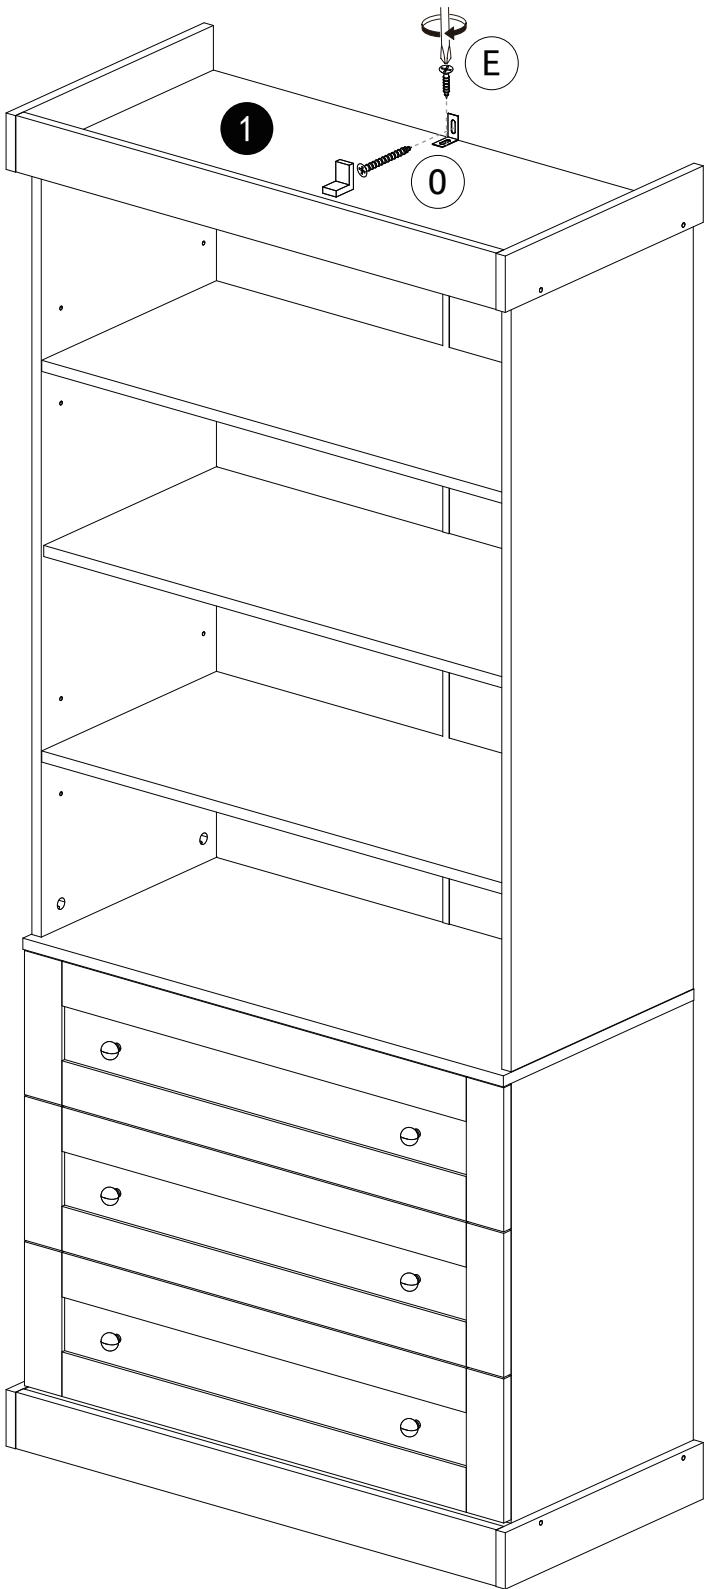


E		x1
0		x1

STEP 24

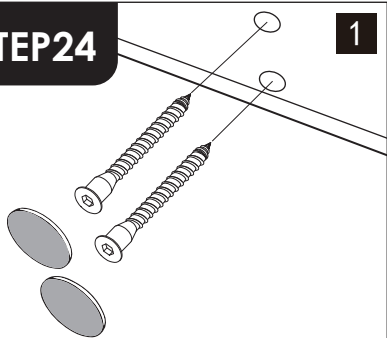


1

2

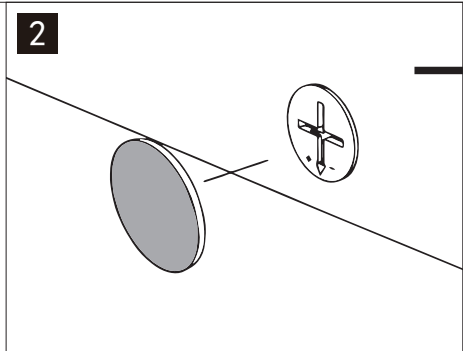

Add L fittings to all exposed holes on the front of the product

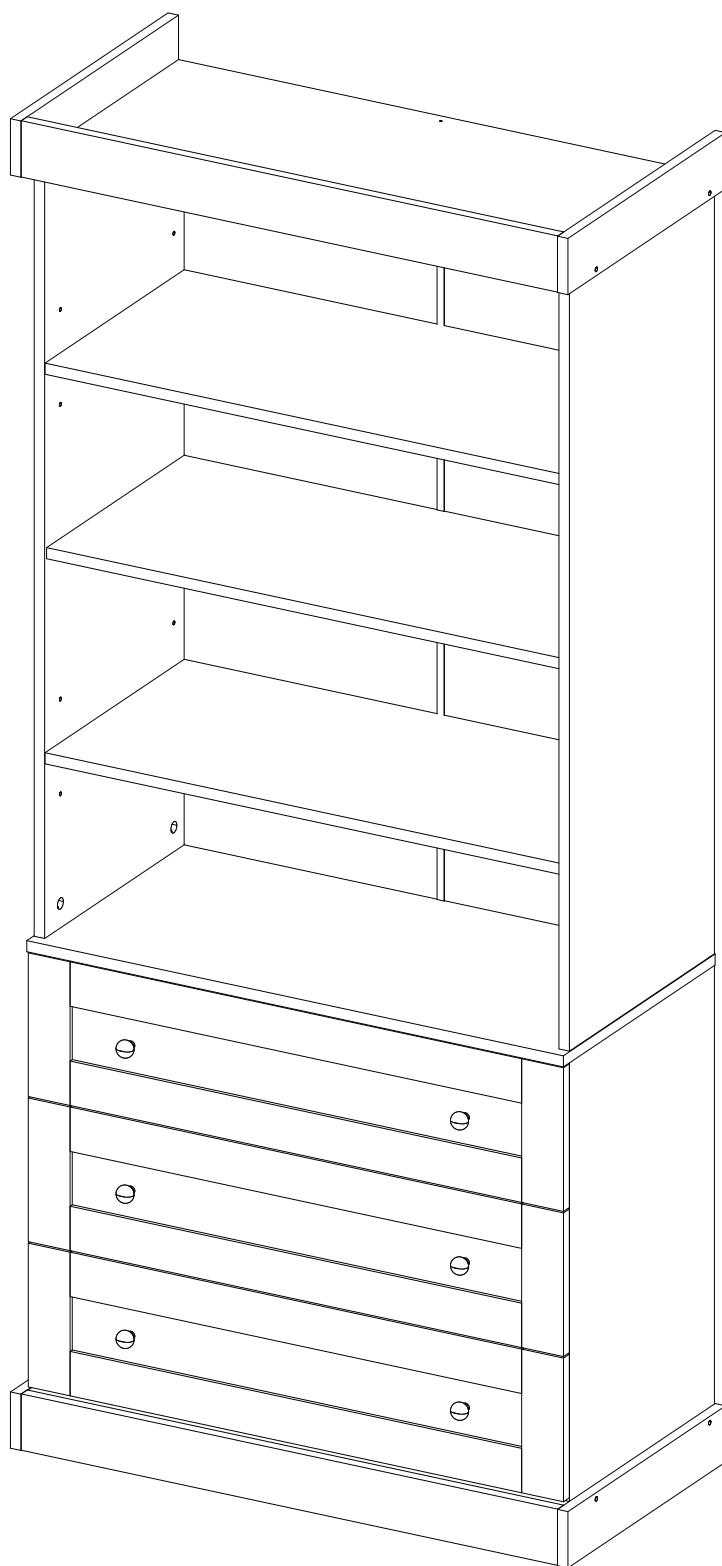

L



x24