




80093 Product Installation Instructions

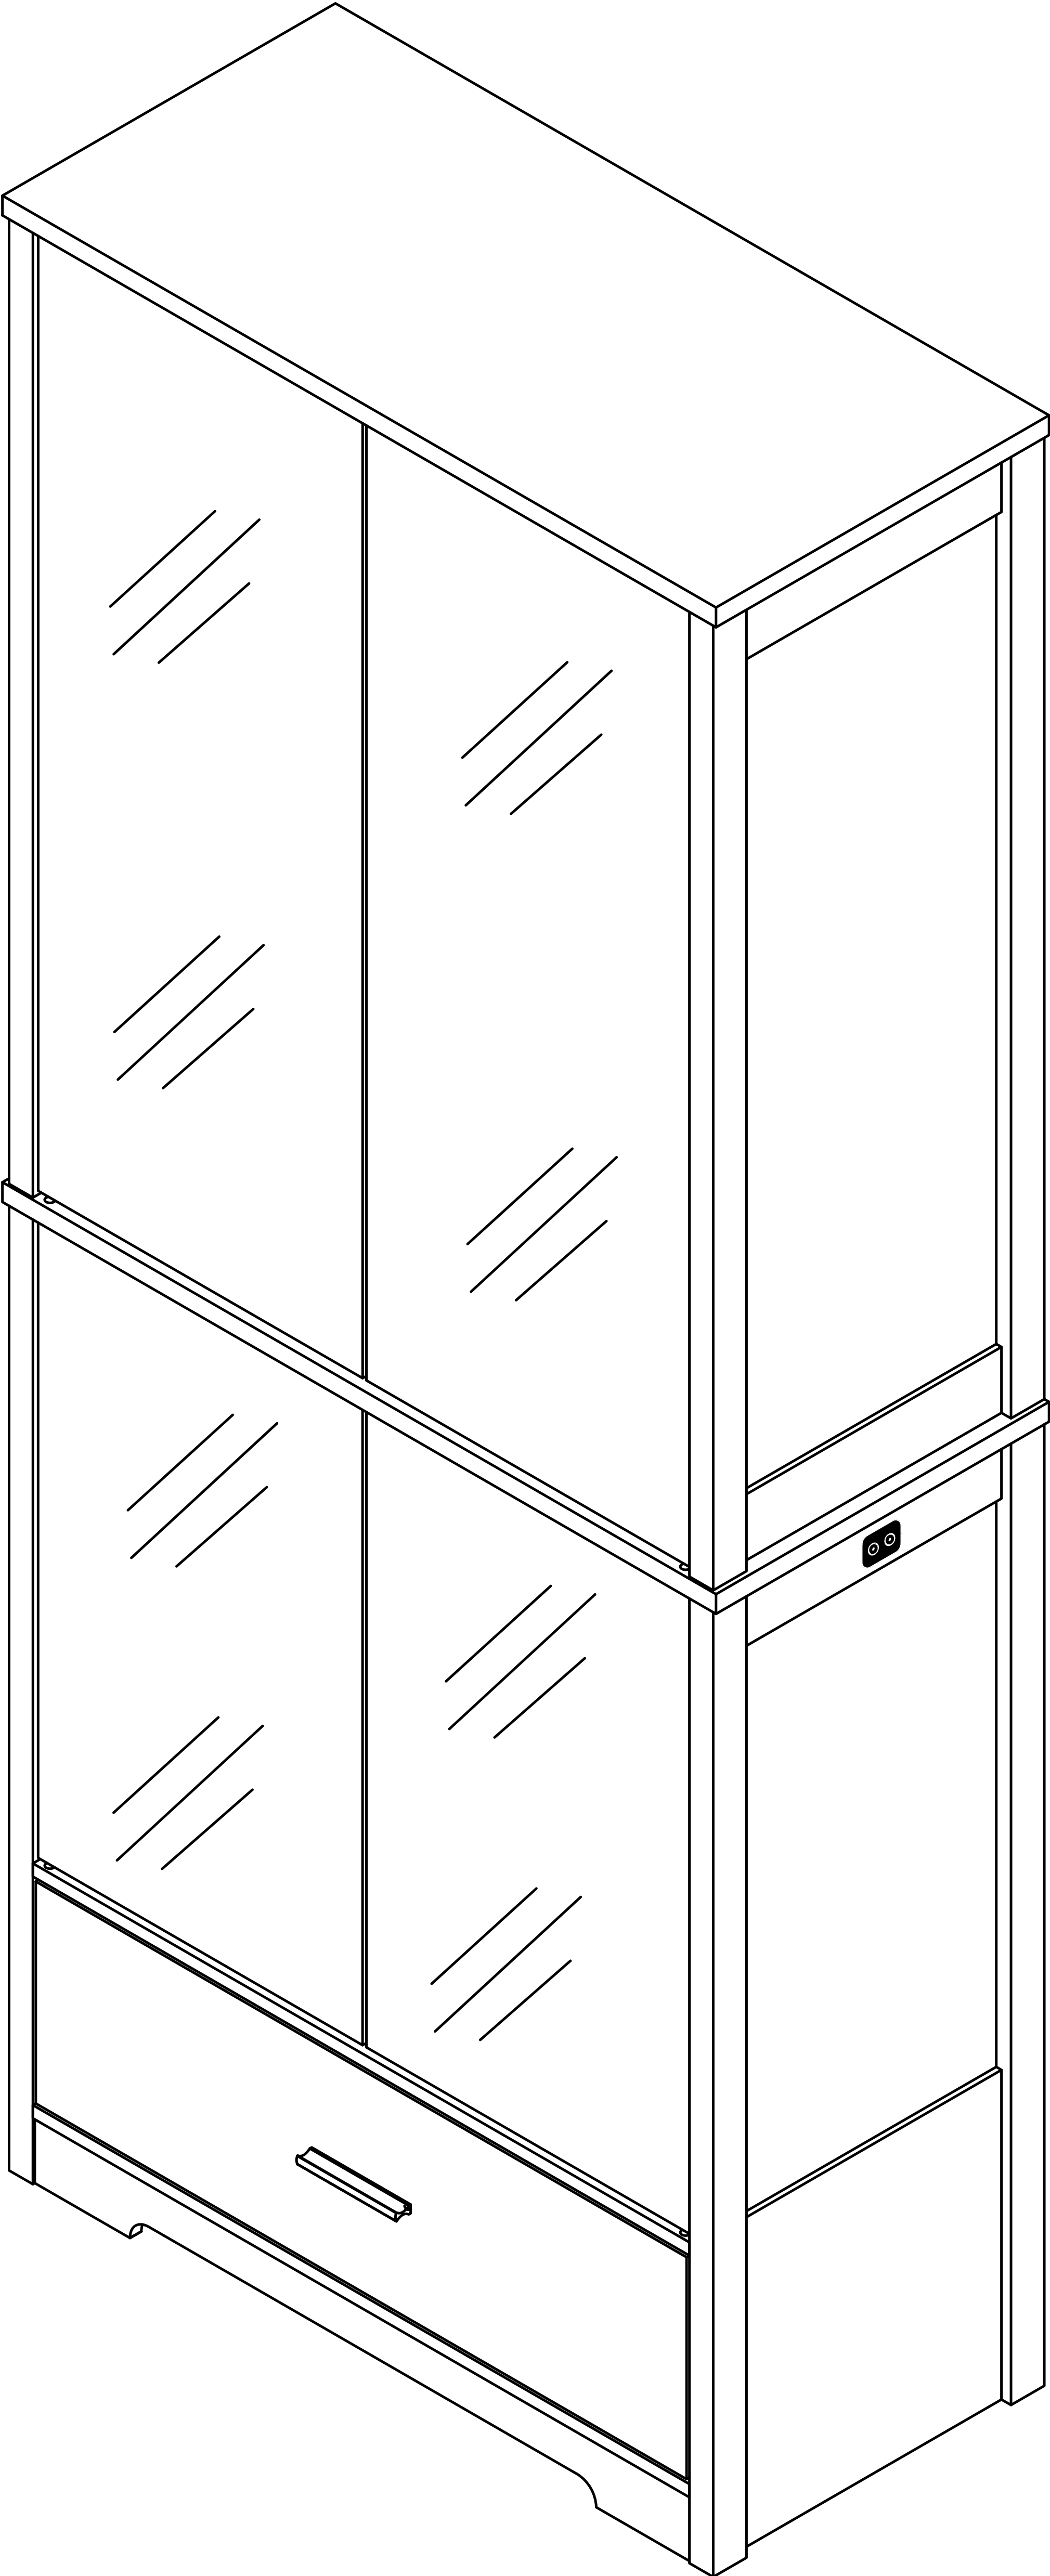


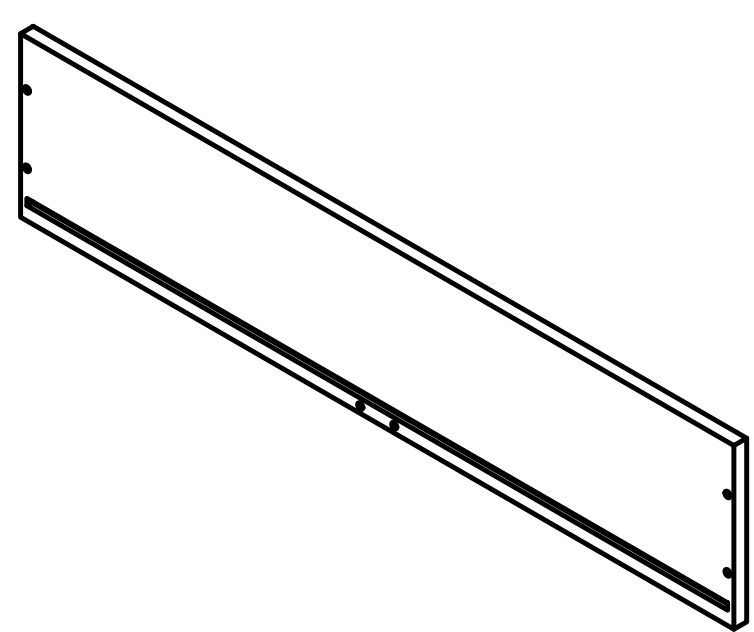


Ax1

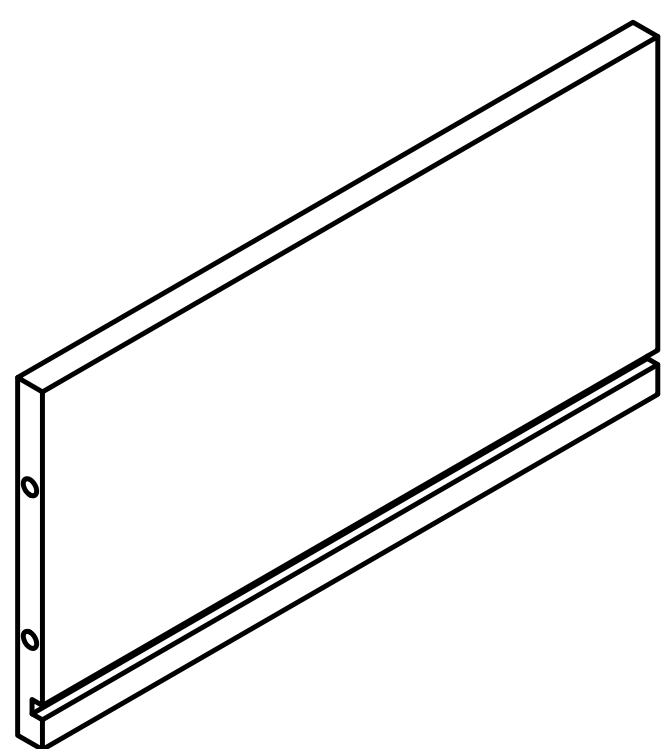


Bx2

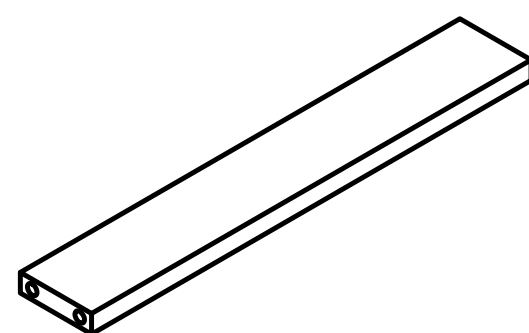


Cx1

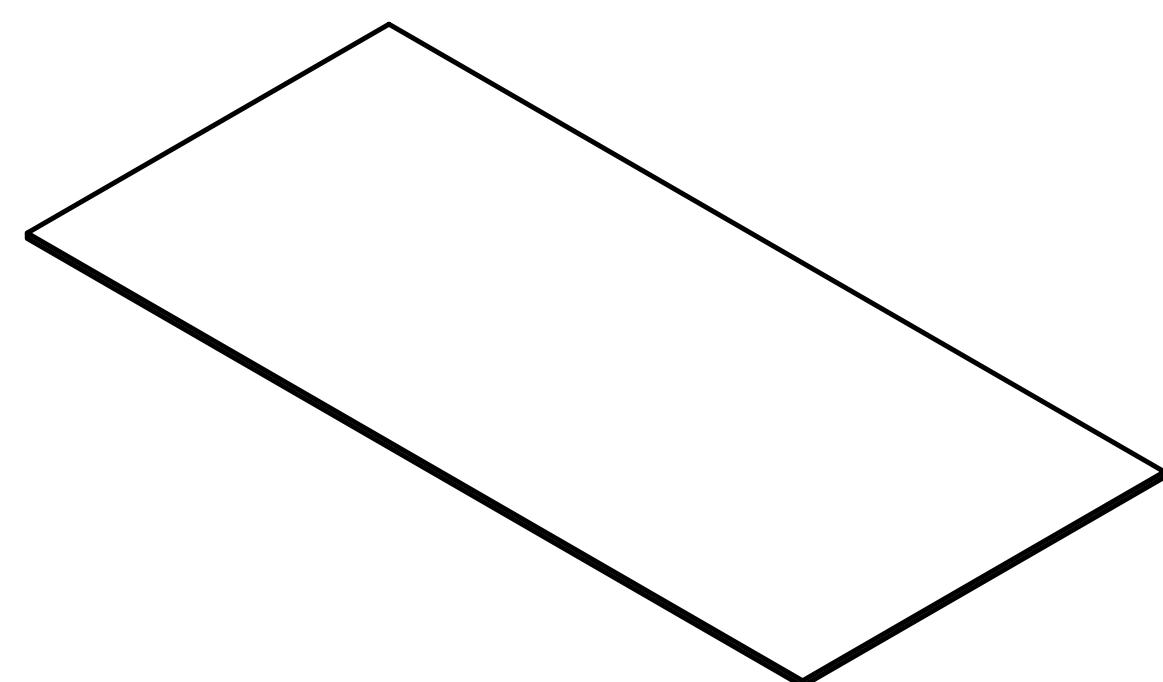


Dx1

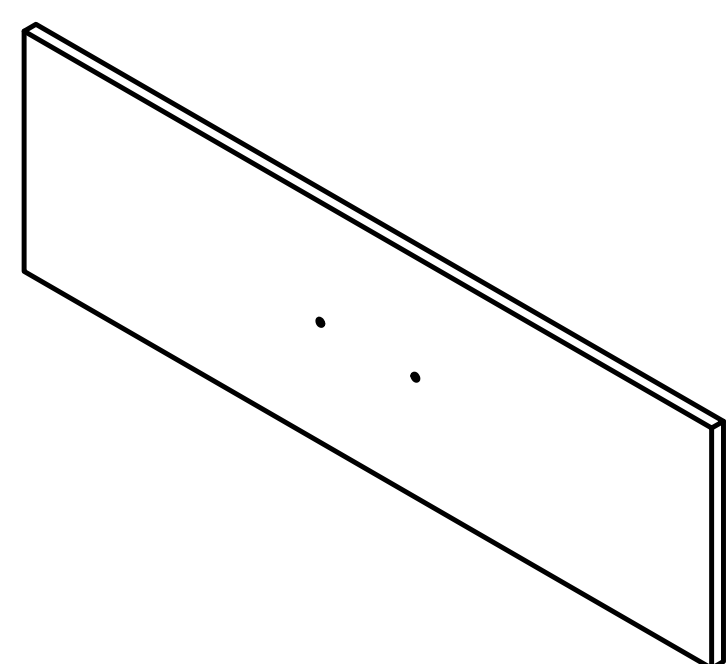


Ex1

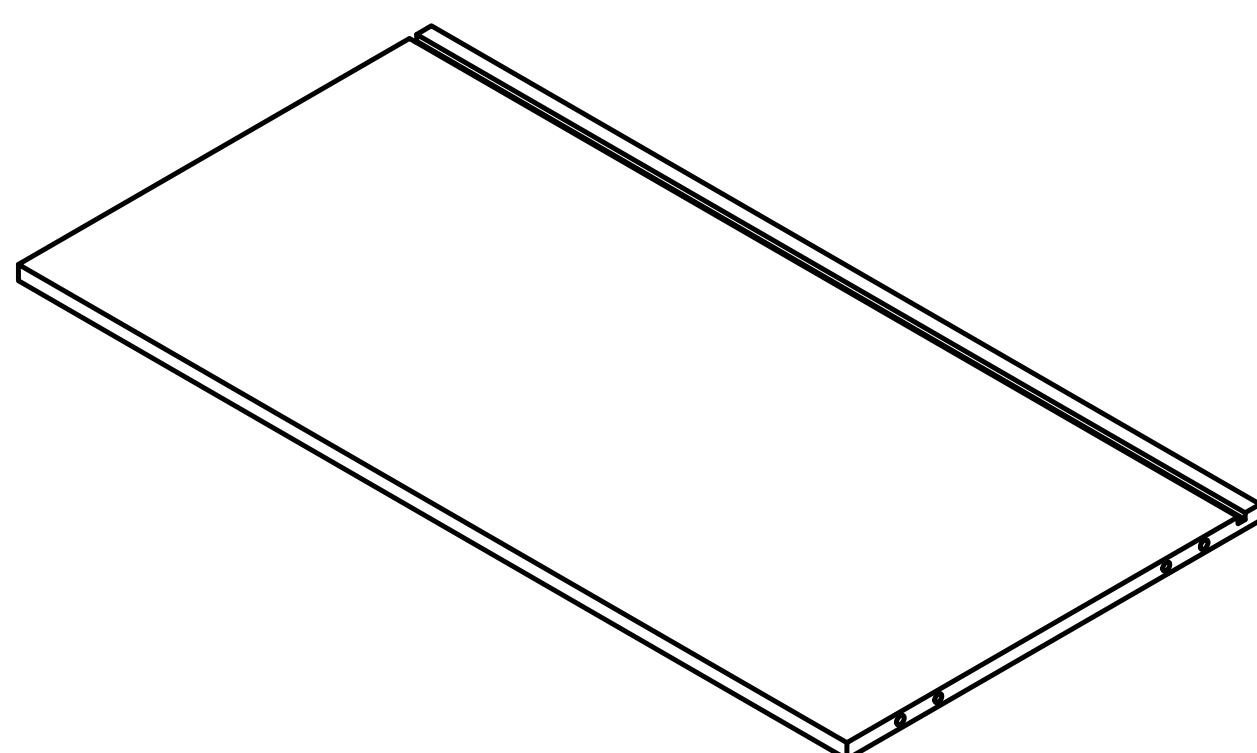


Fx1

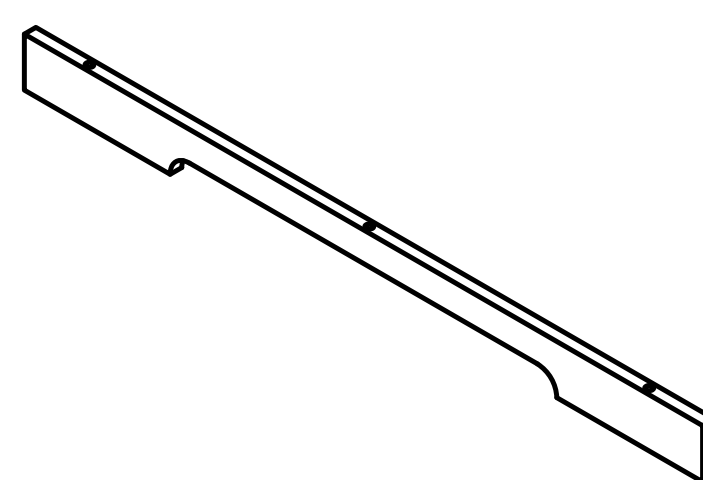


Gx1

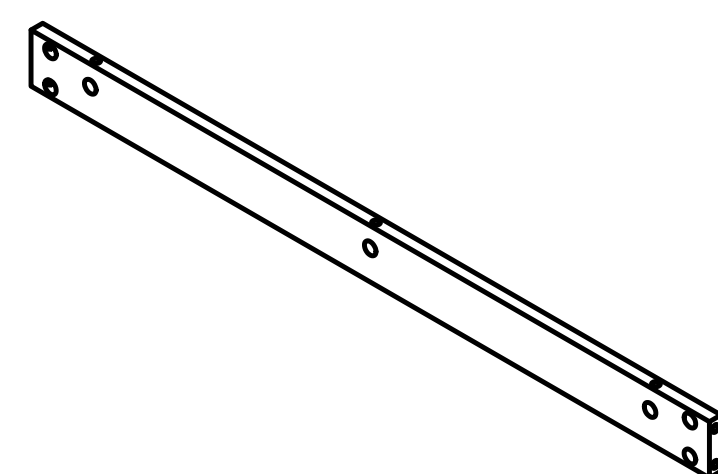


Hx1

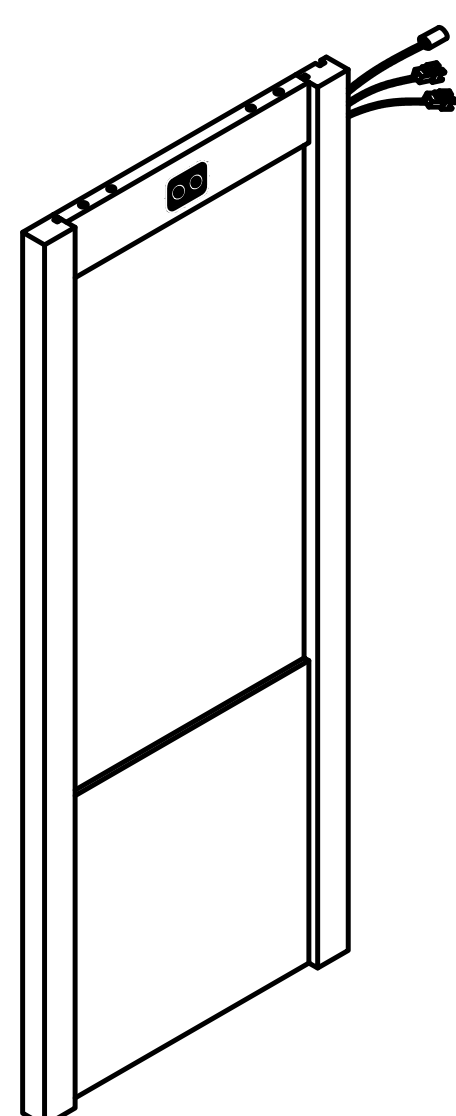


Ix1

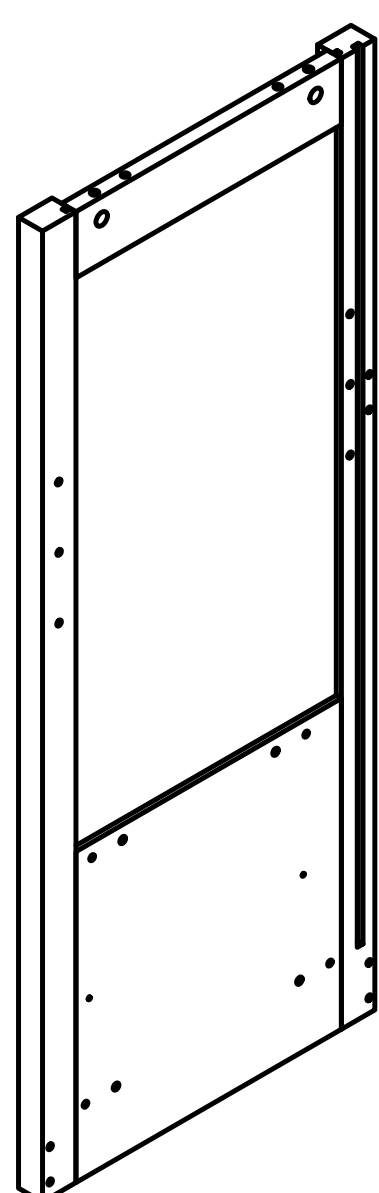


Jx1

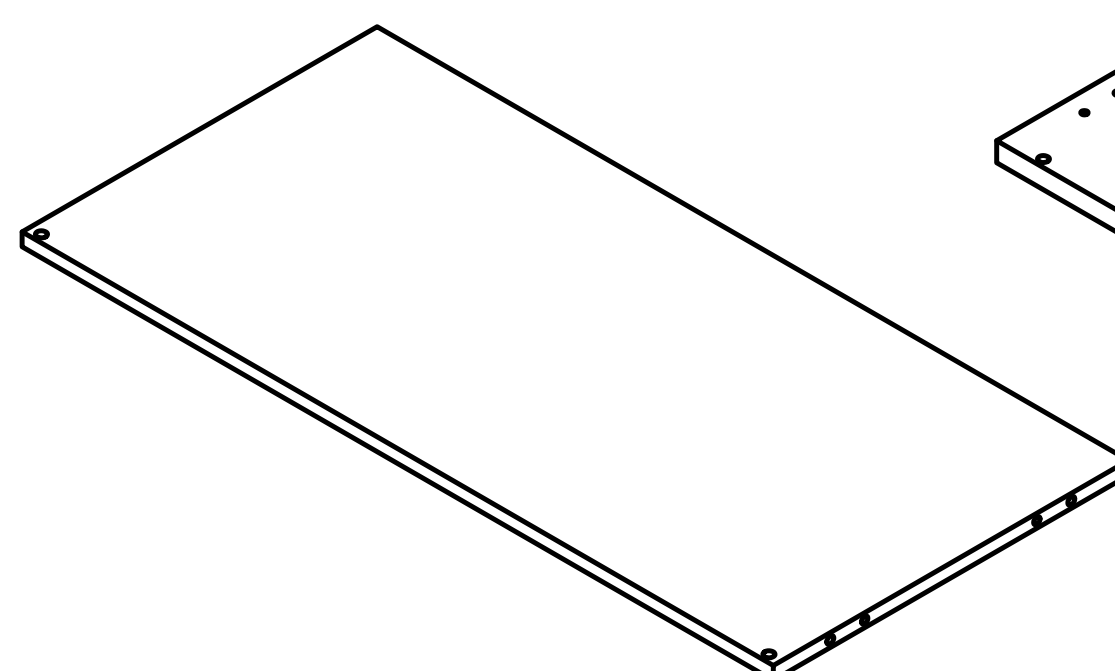


Kx1

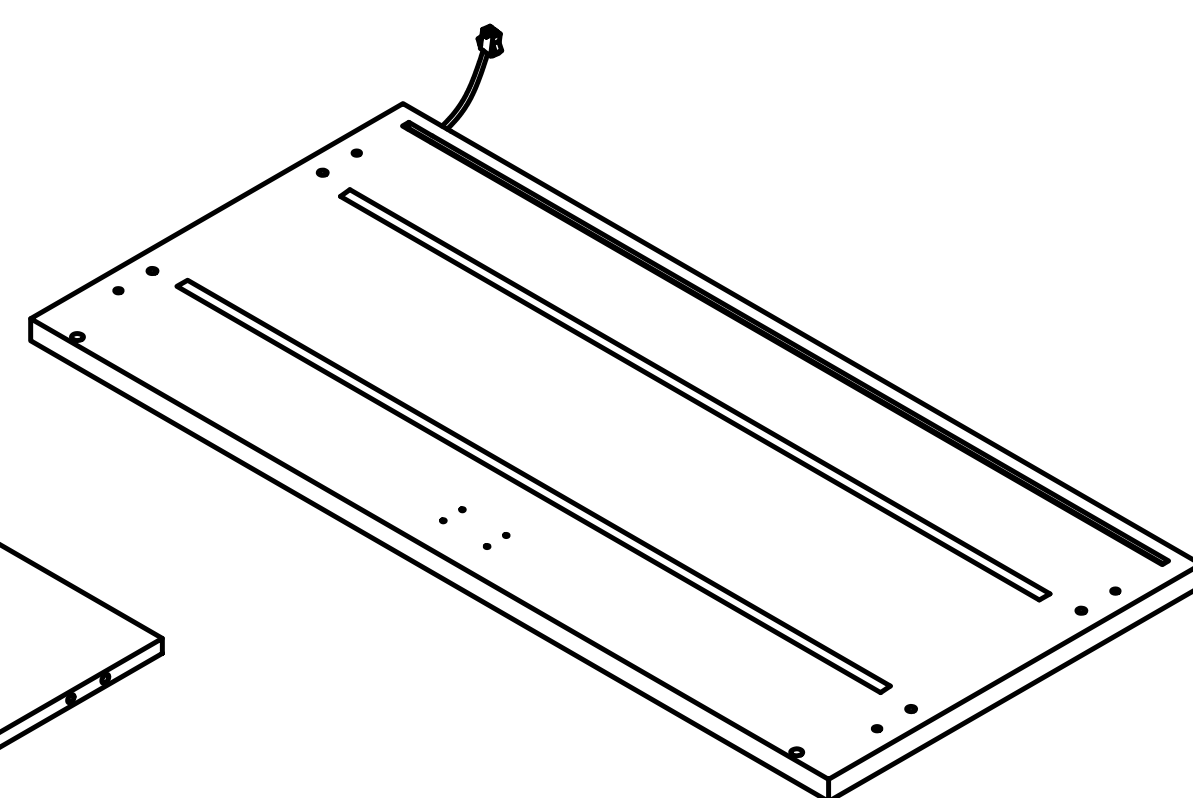


Lx1

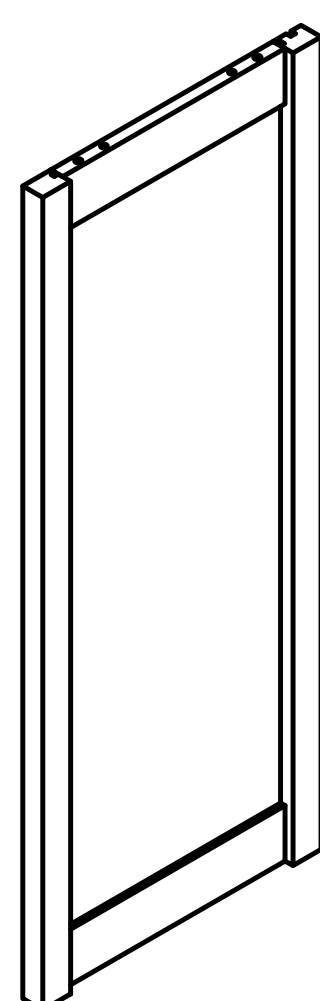


Mx2

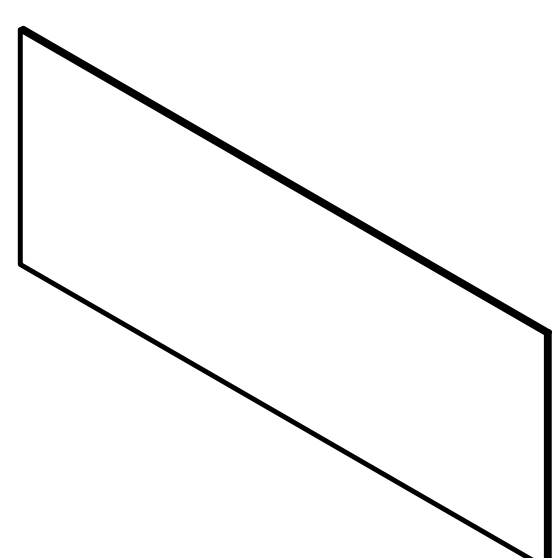


Nx3

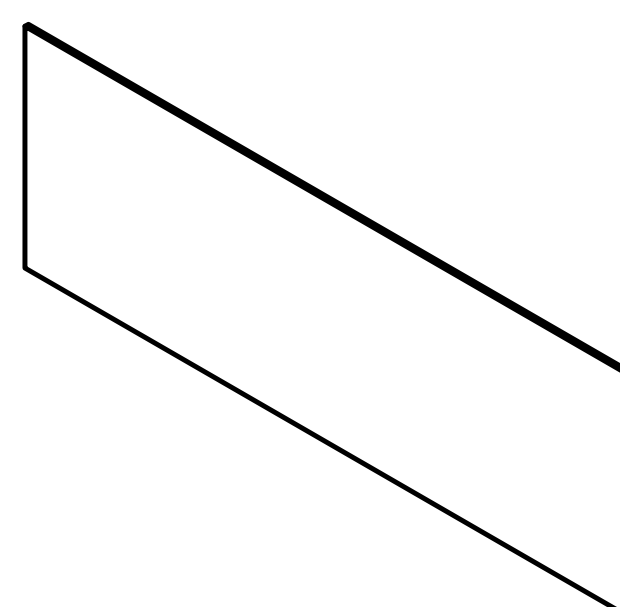


Ox3

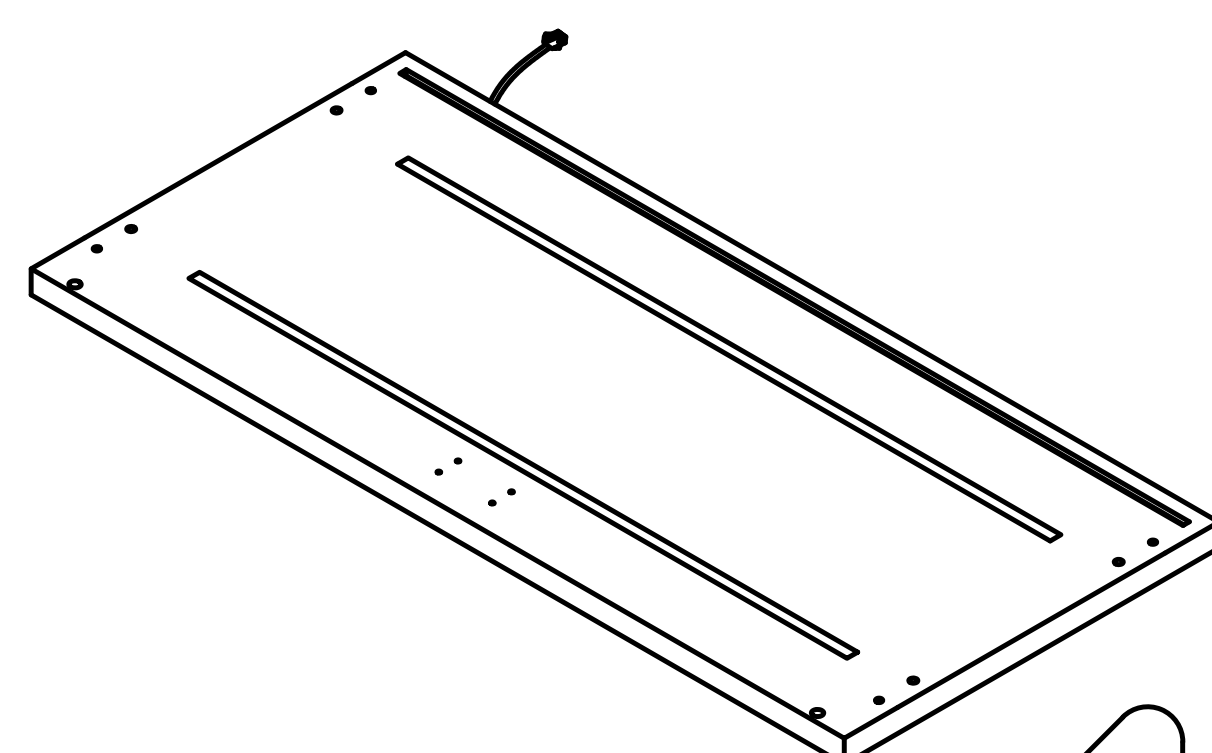


Px1

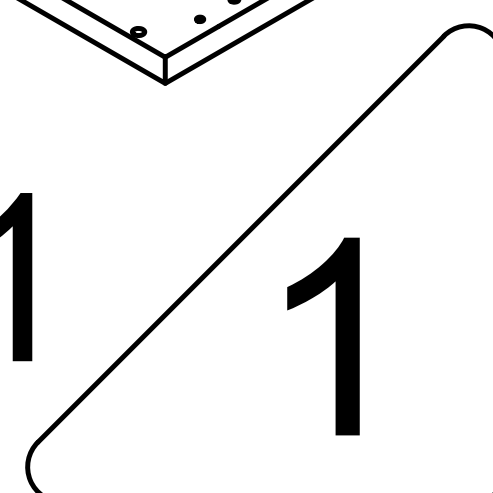


1

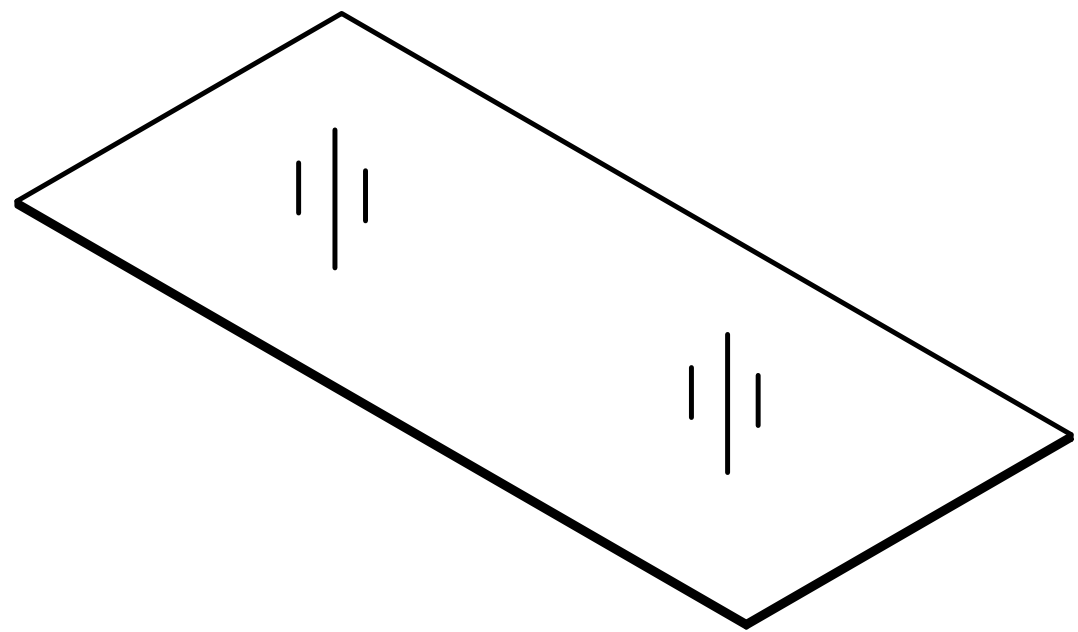


Qx3

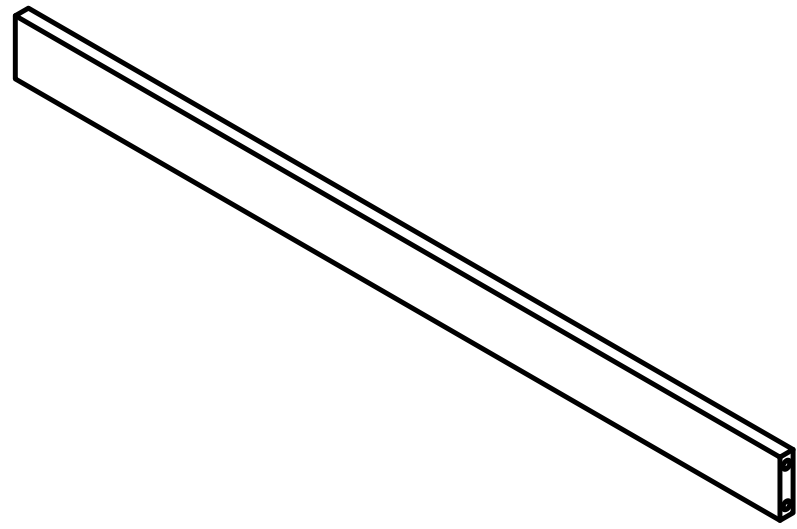




















Rx2

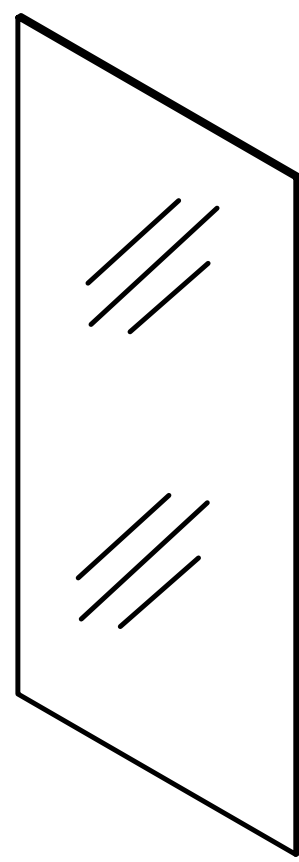


Sx2




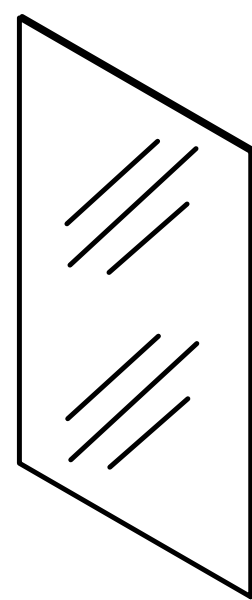



Tx2

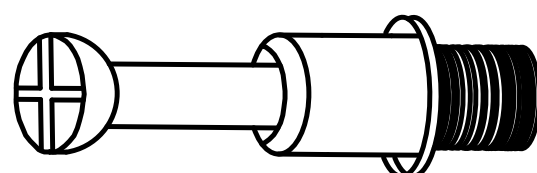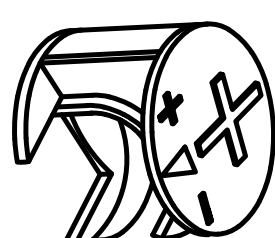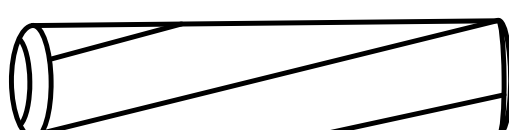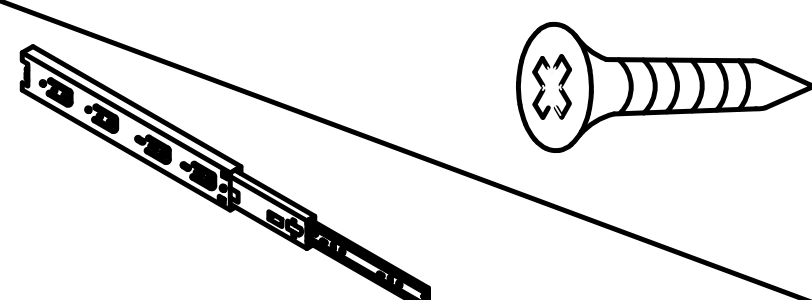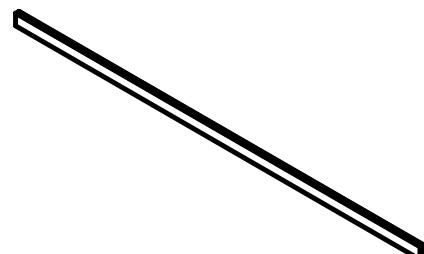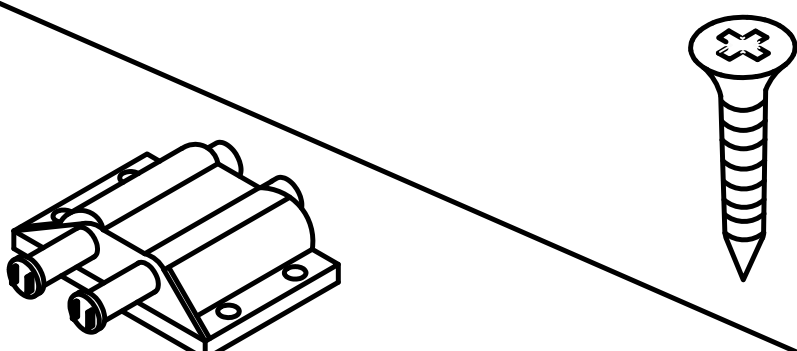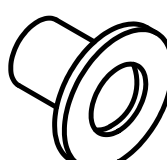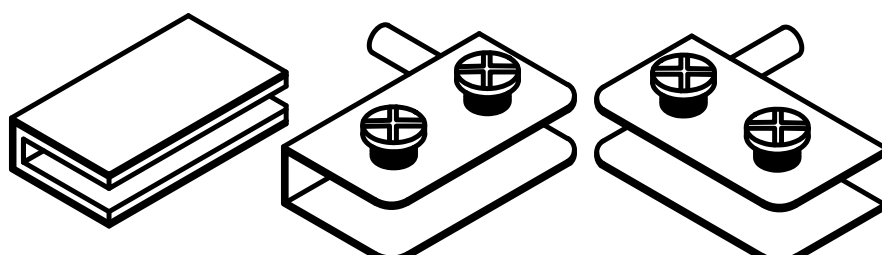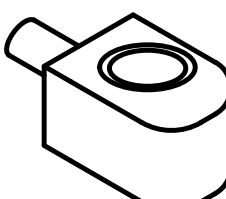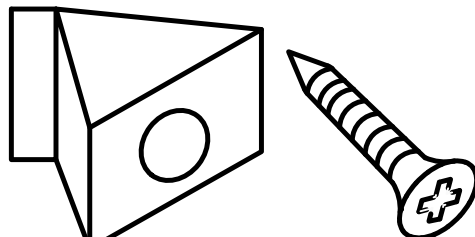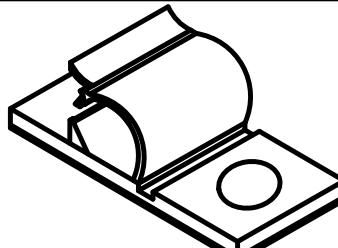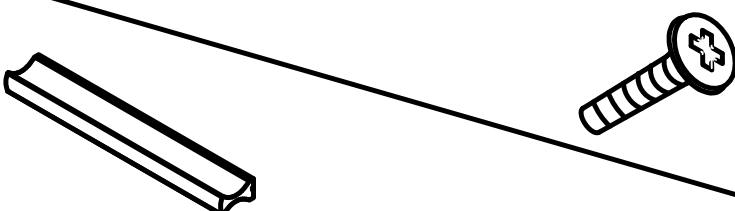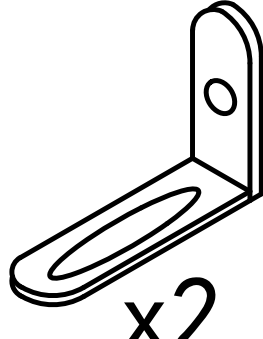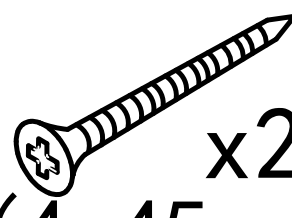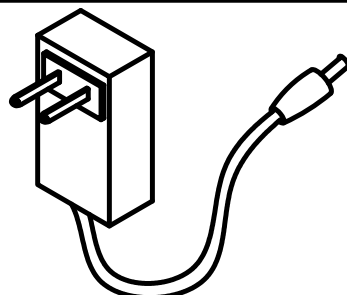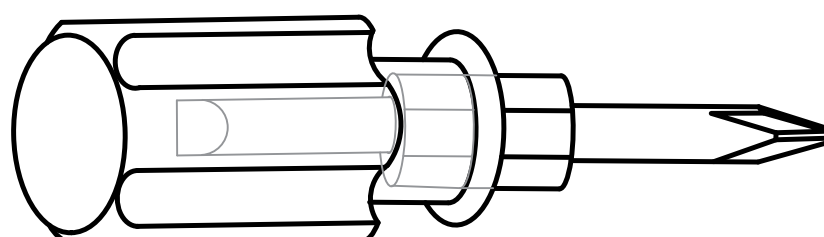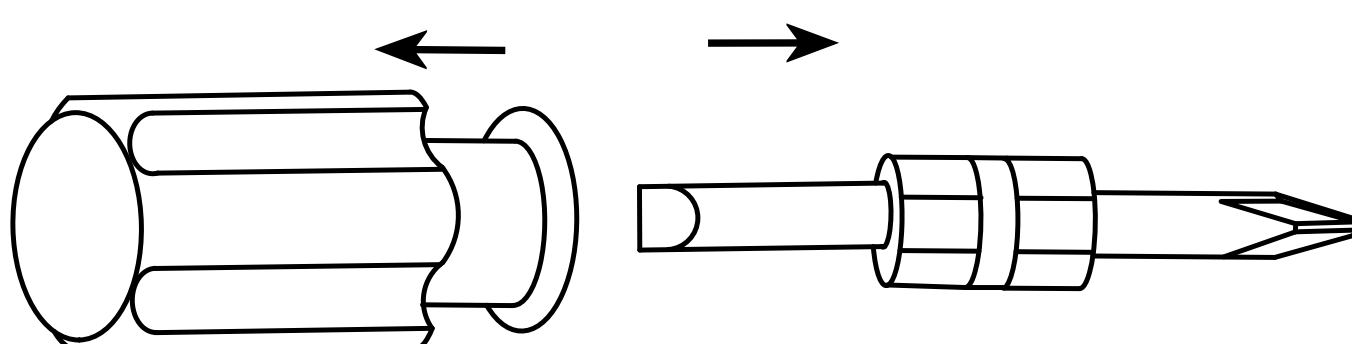Accessories list			
①		Two in one screw (6x28mm)	54pcs +5pcs
②		Two in one nut (10x12mm)	54pcs +5pcs
③		Wood chipping (6x30mm)	20pcs +2pcs
④		Guide & Screw(29cm) (3x12mm)	12pcs 2pcs +3pcs
⑤		Backboard card strip(688mm)	4pcs
⑥		Rebound device & Screw (3x16mm)	8pcs 2pcs +1pcs
		Rubber ring	8pcs
		Iron sheet & Hinge	4pcs
⑦		Laminate support nail	12pcs +1pcs
⑧		Fixing clip & screw (3x16mm)	16pcs +2pcs
⑨		Wire clamp	1pcs
⑩		Handle & screw (4x16mm)	1pcs 2pcs
⑪	Anti Fall Hardware  x2  x2  x2 (3. 5x14mm)  x2 (4x45mm)  x4		
⑫		Non-slip pads (50x10)	6pcs
	AC/DC Adapter (12V 3. 0A)		1pcs
Double-head screwdriver, use as required  1pcs  3			

Product structure decomposition

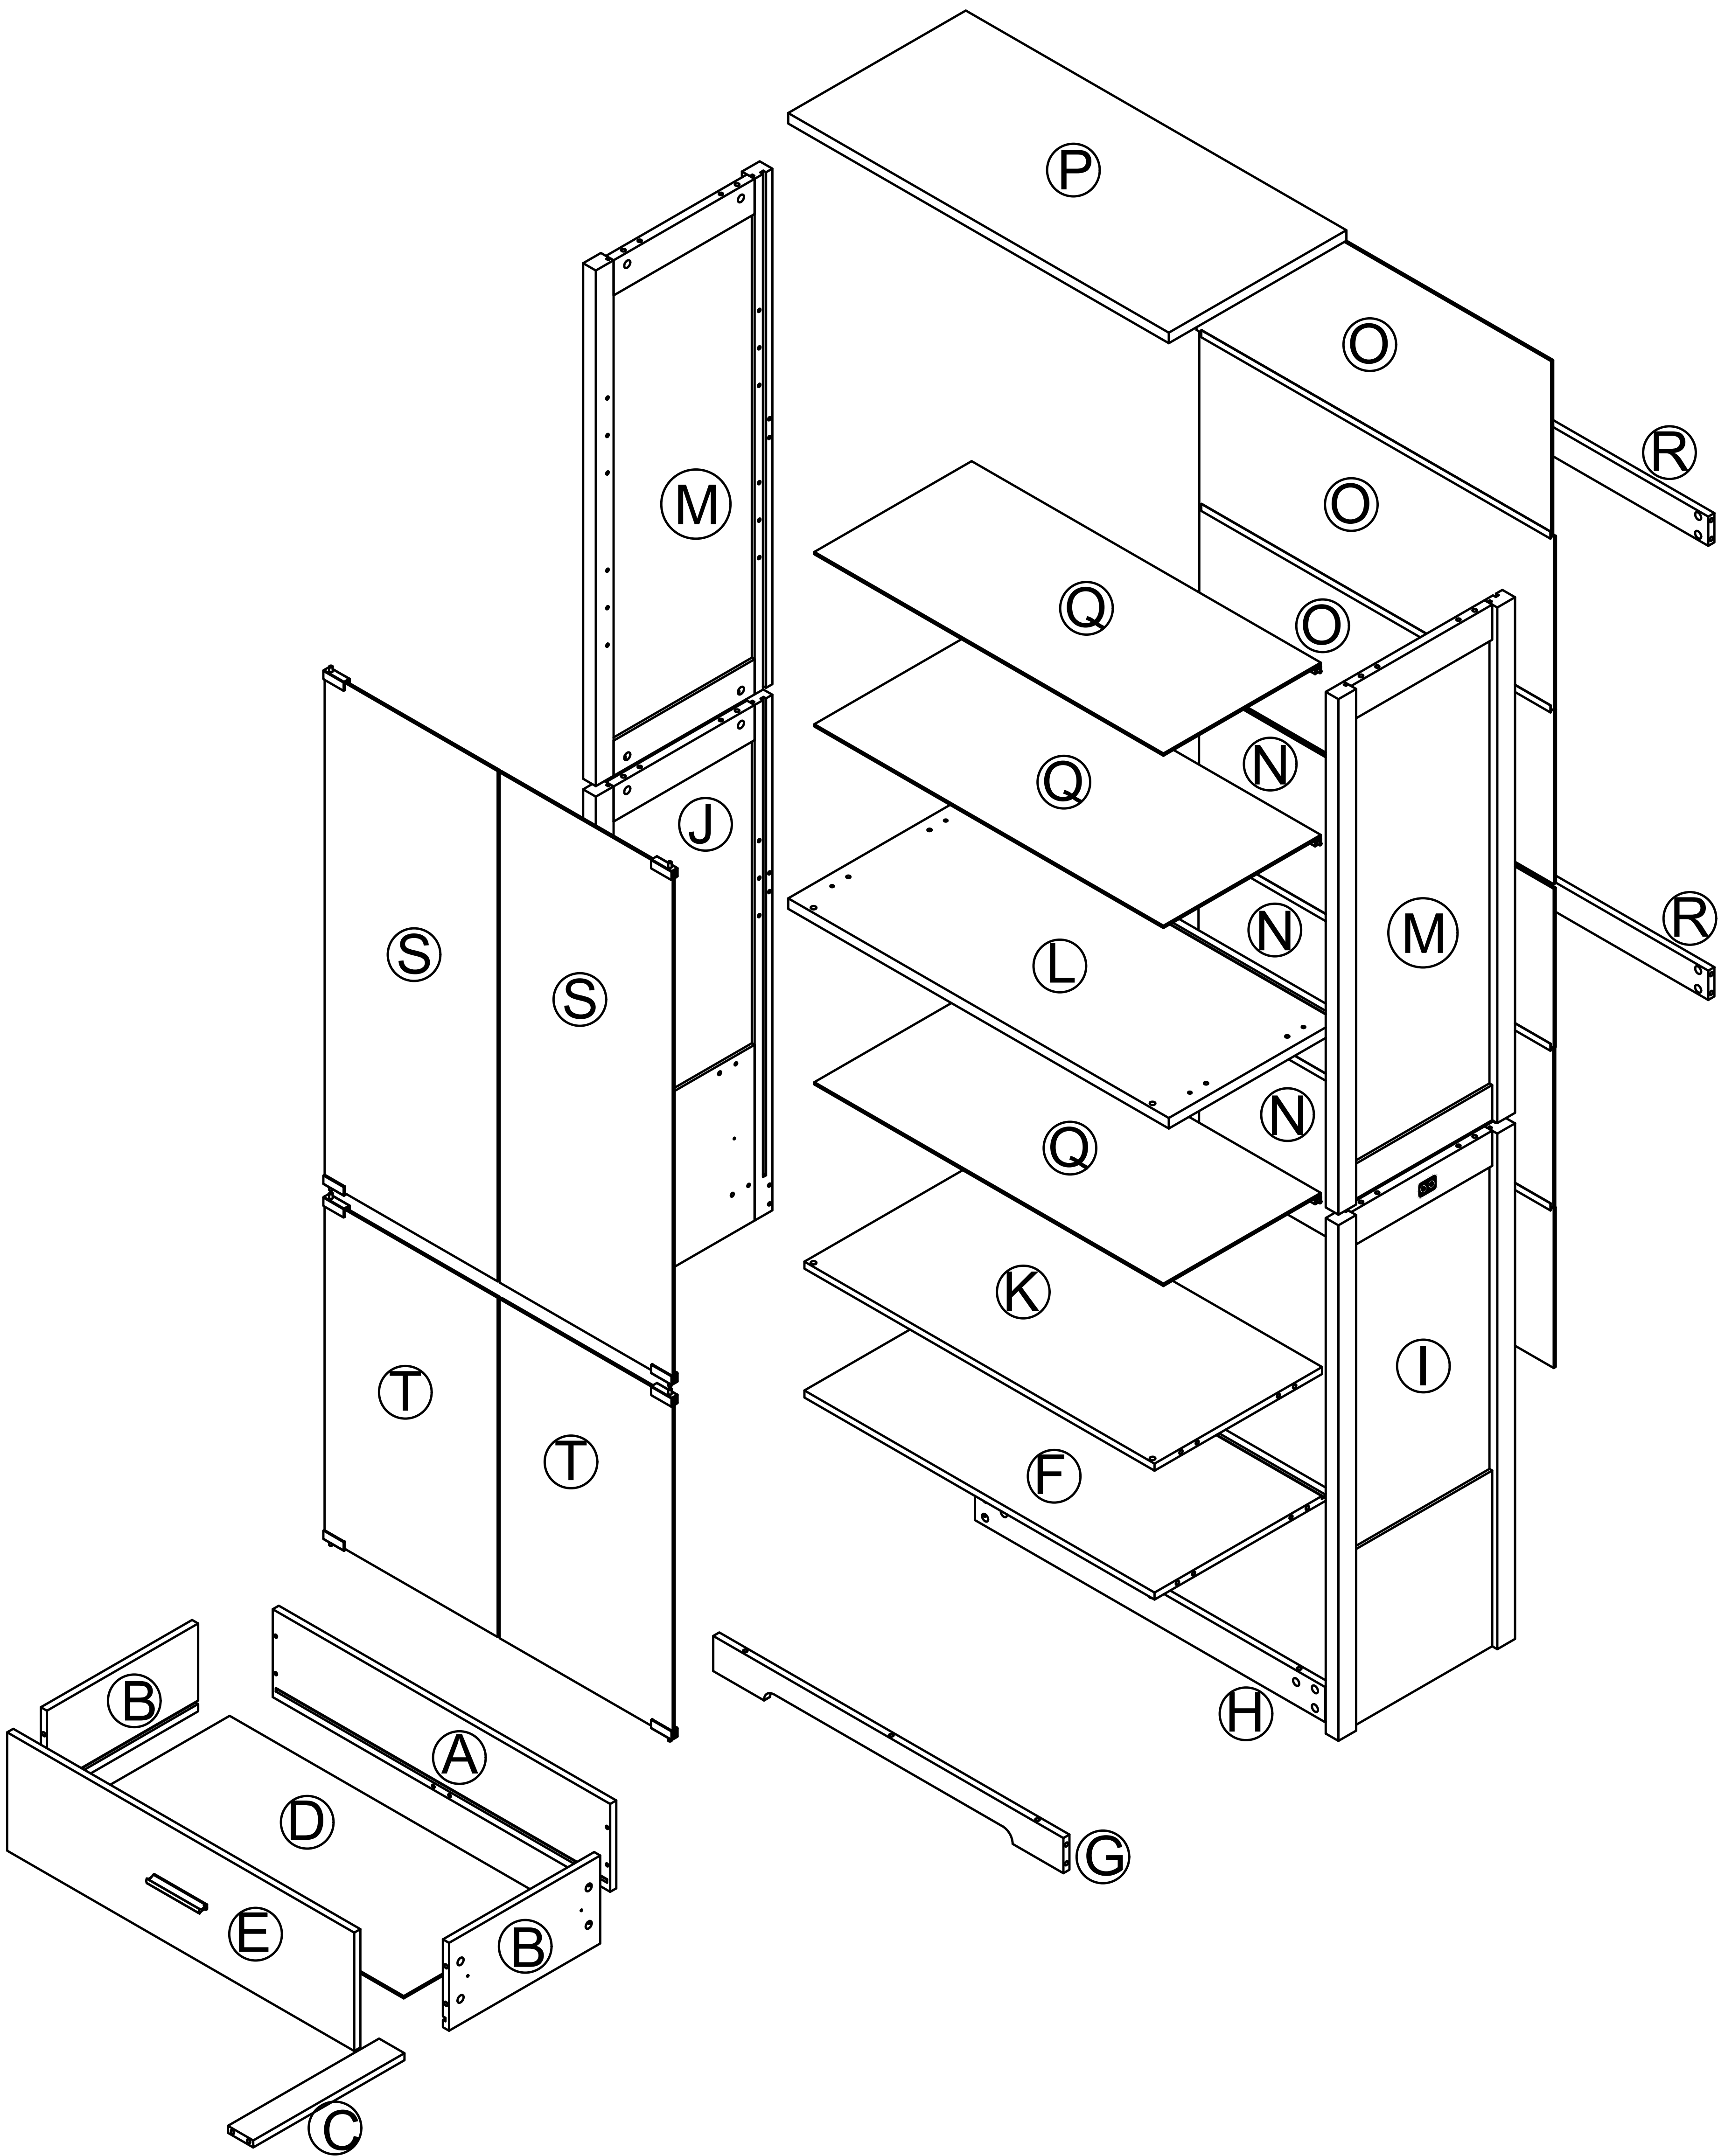


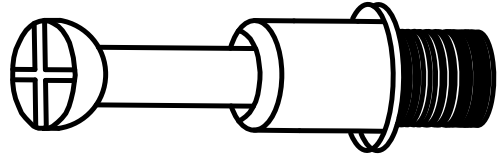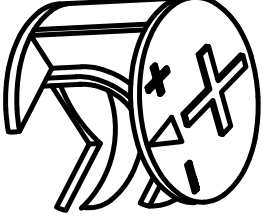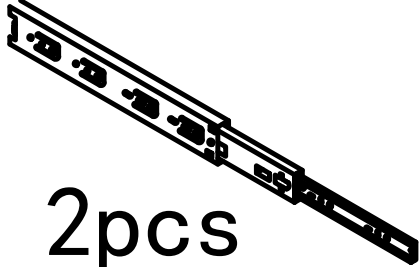1		12pcs	2		12pcs	4		2pcs		4pcs
10		1pcs		2pcs						

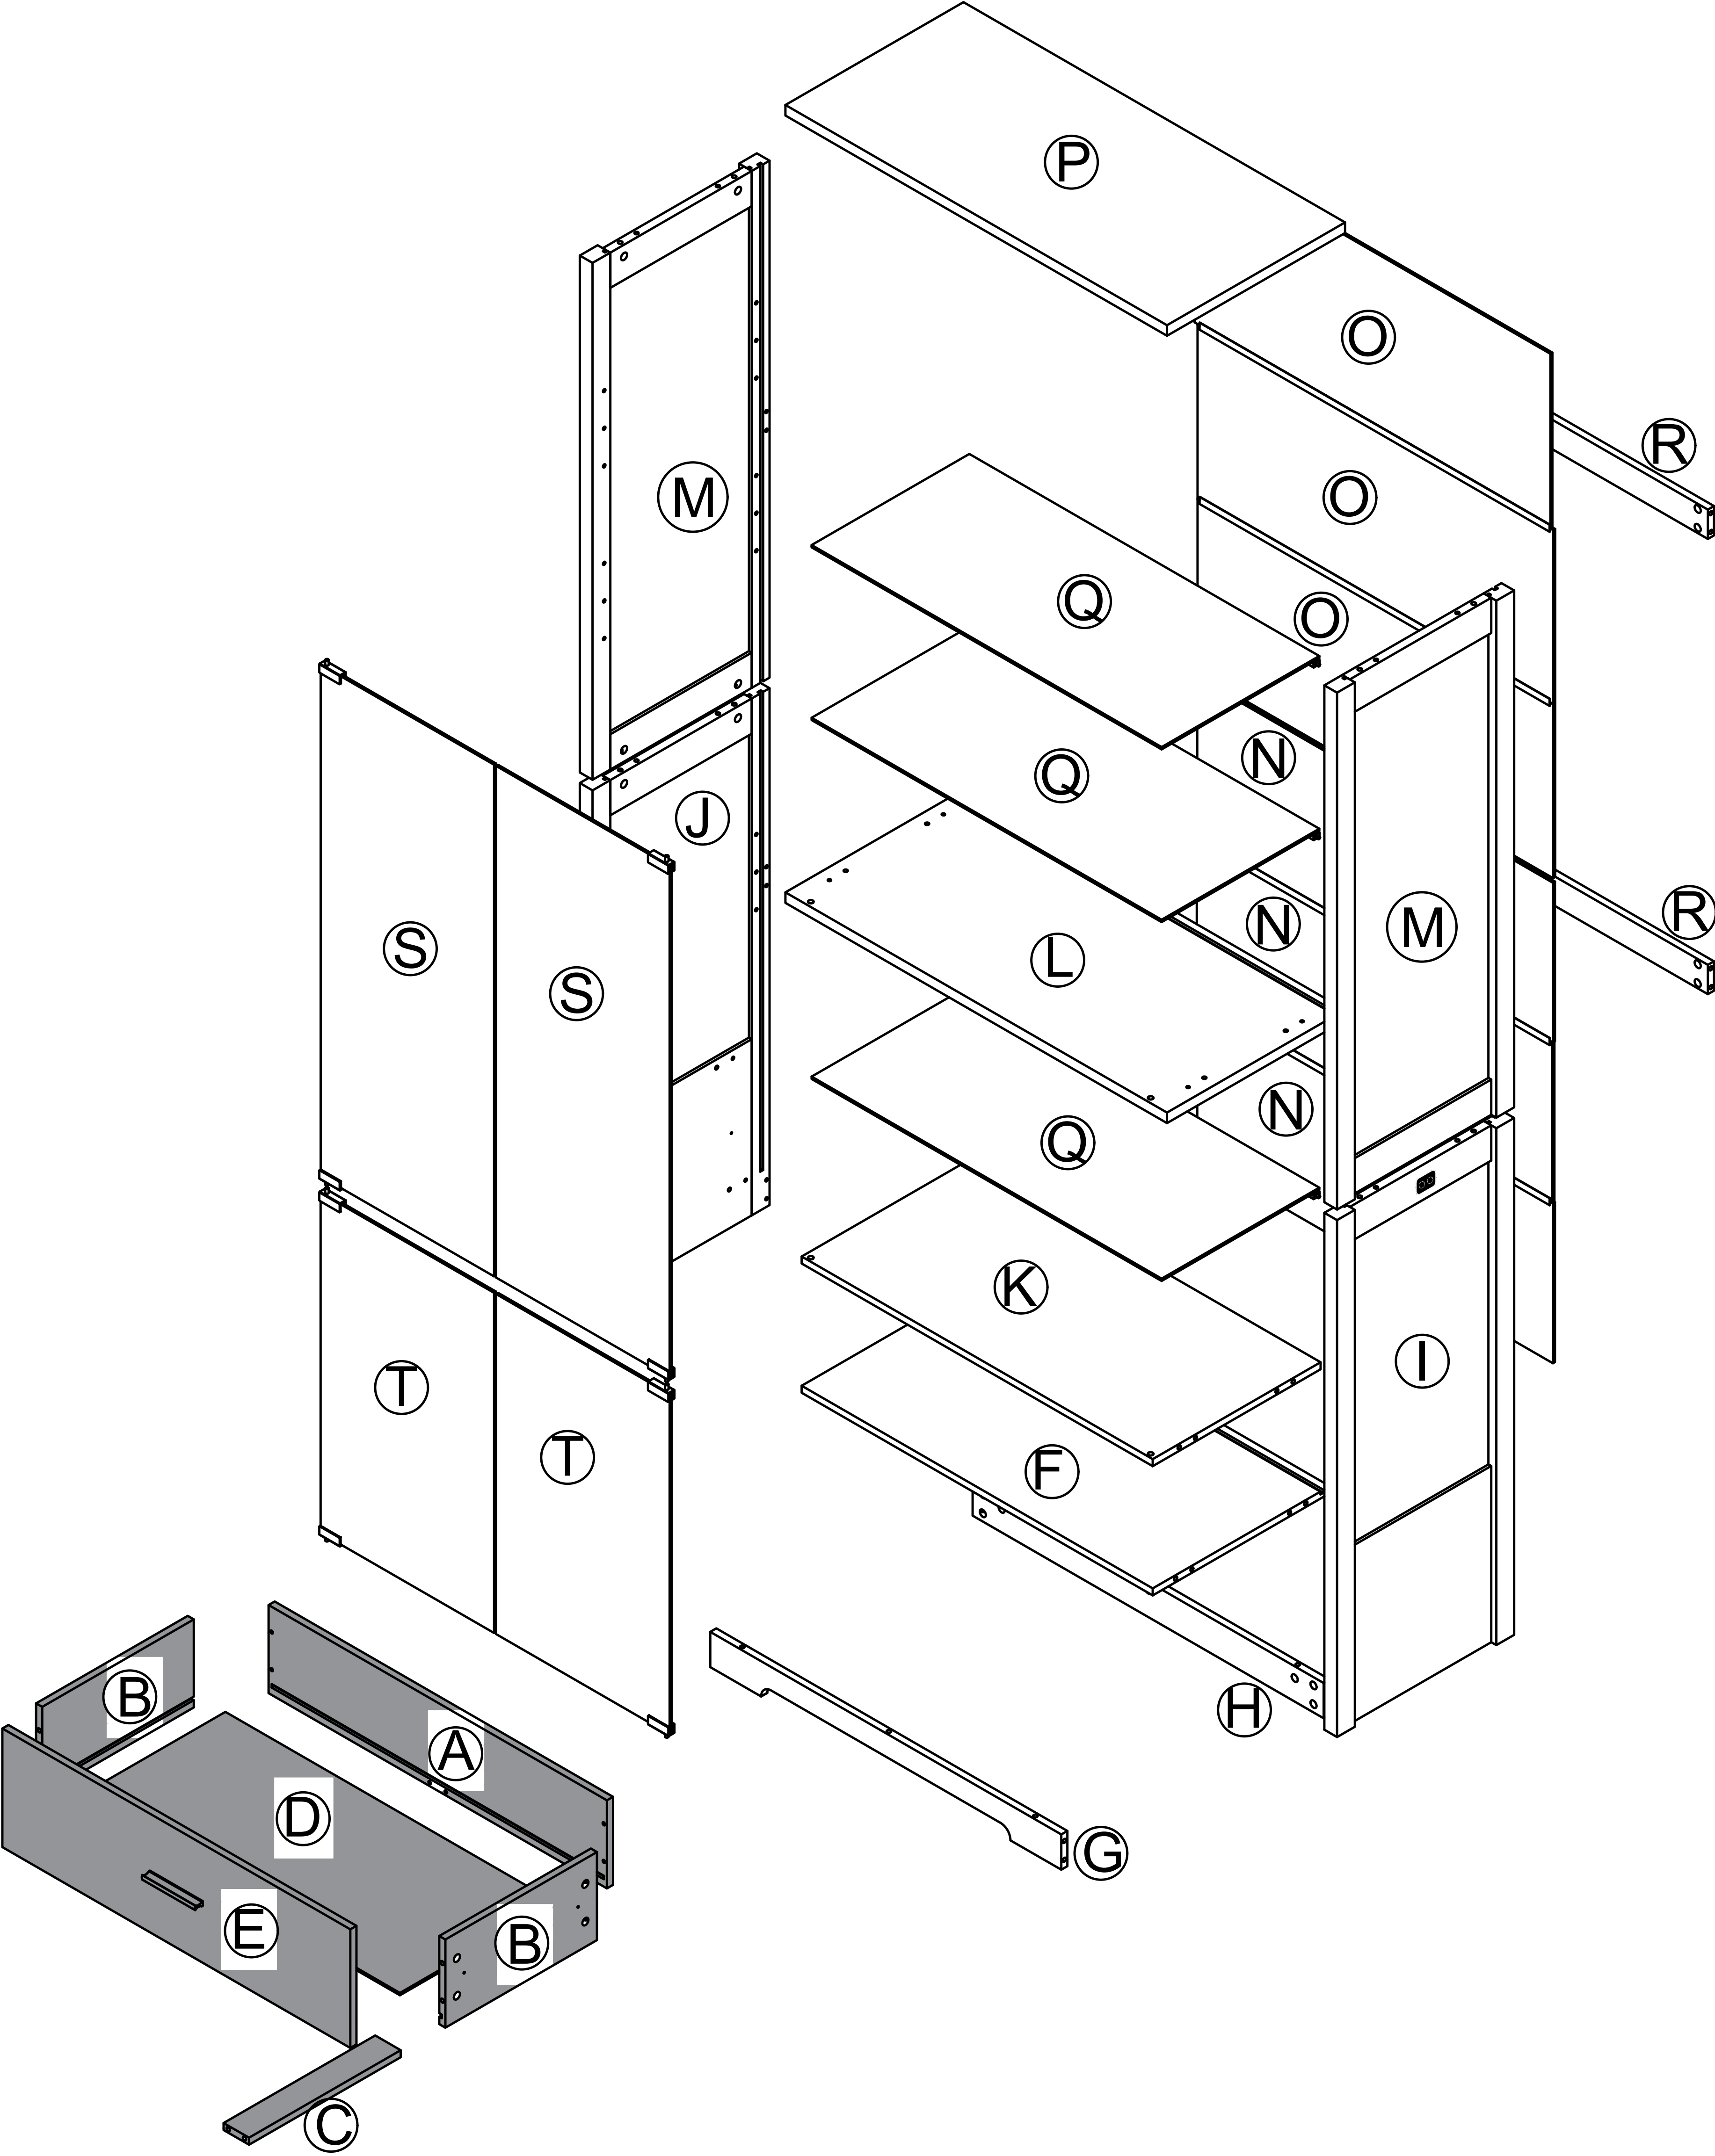


Use parts ① and ②



Step1

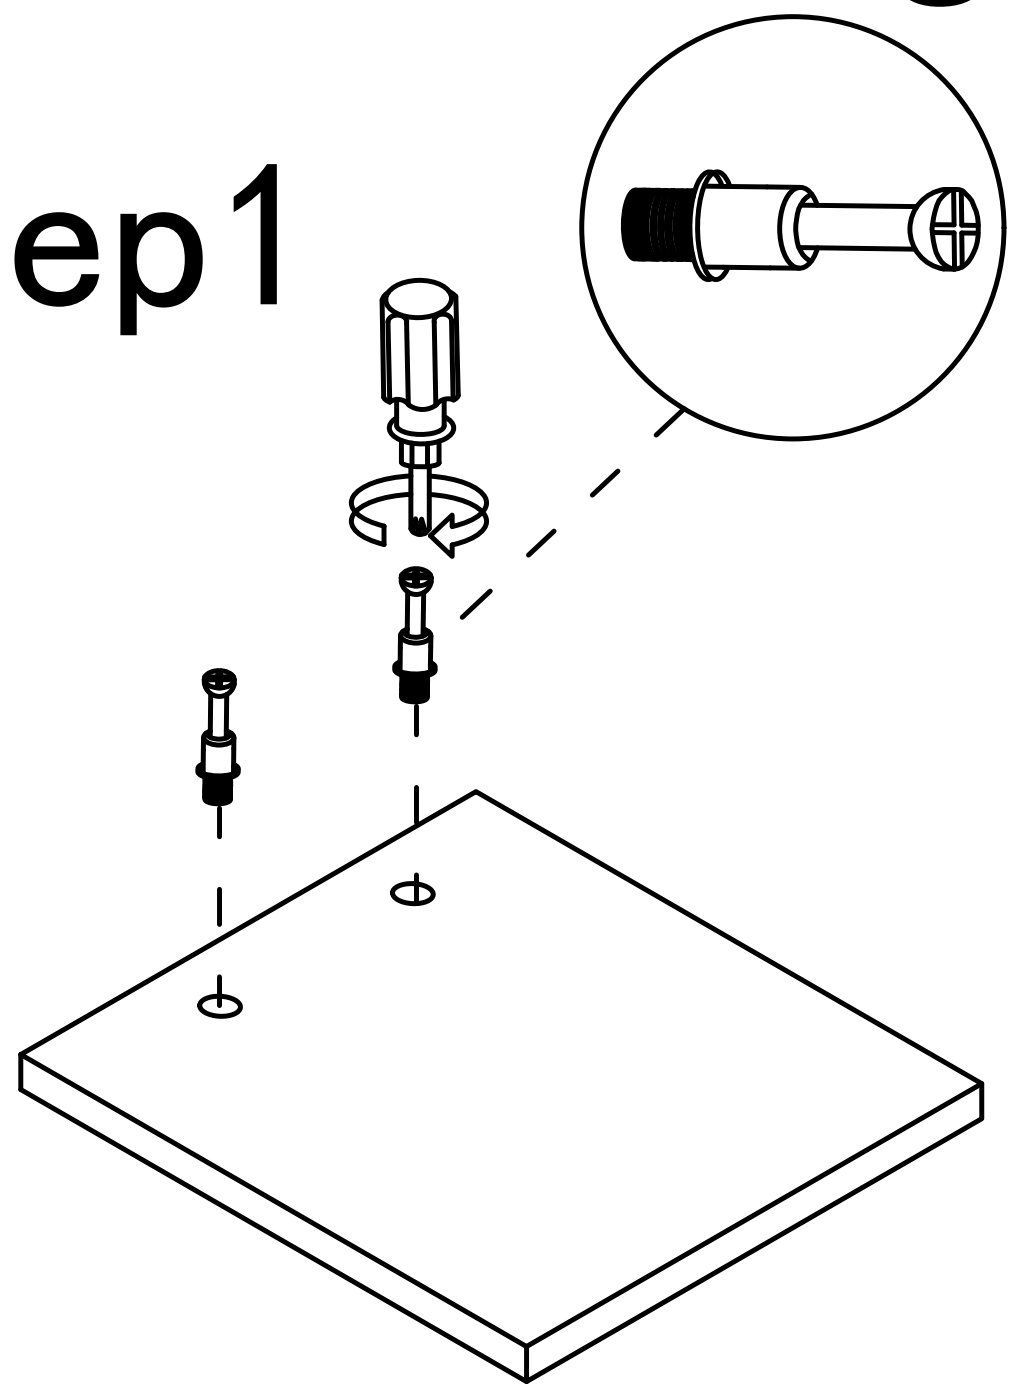


Step2

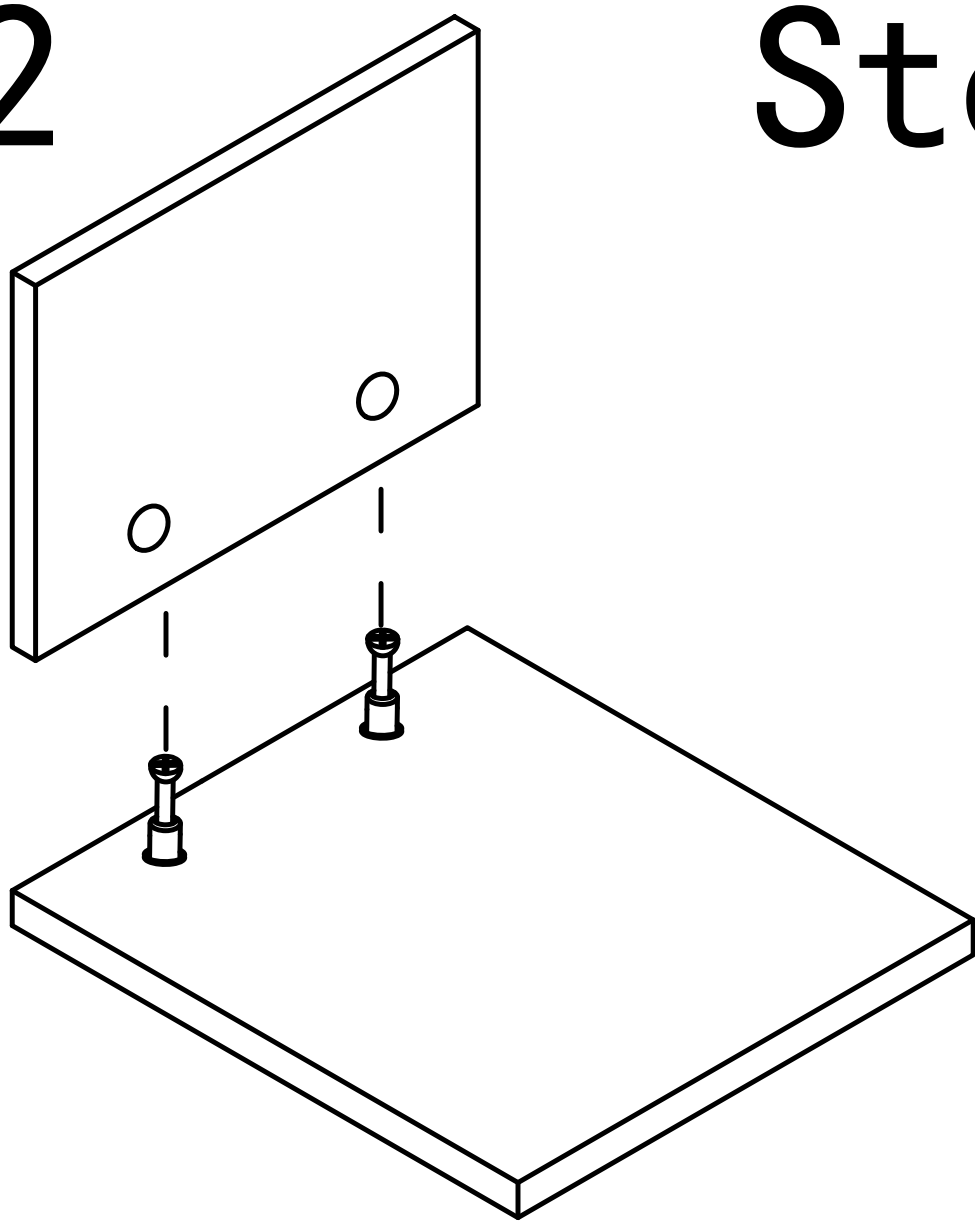

Step3

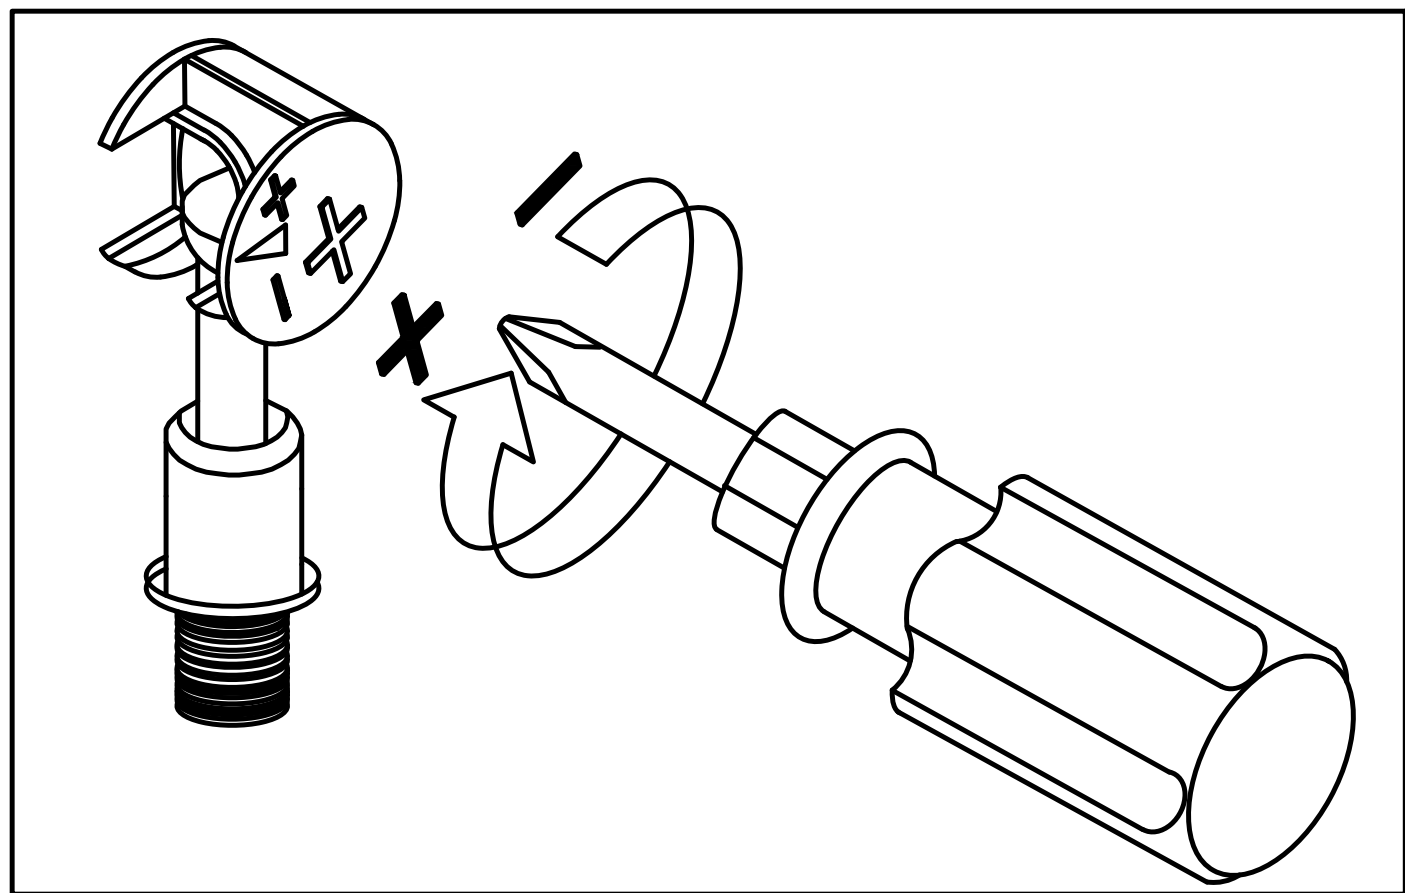
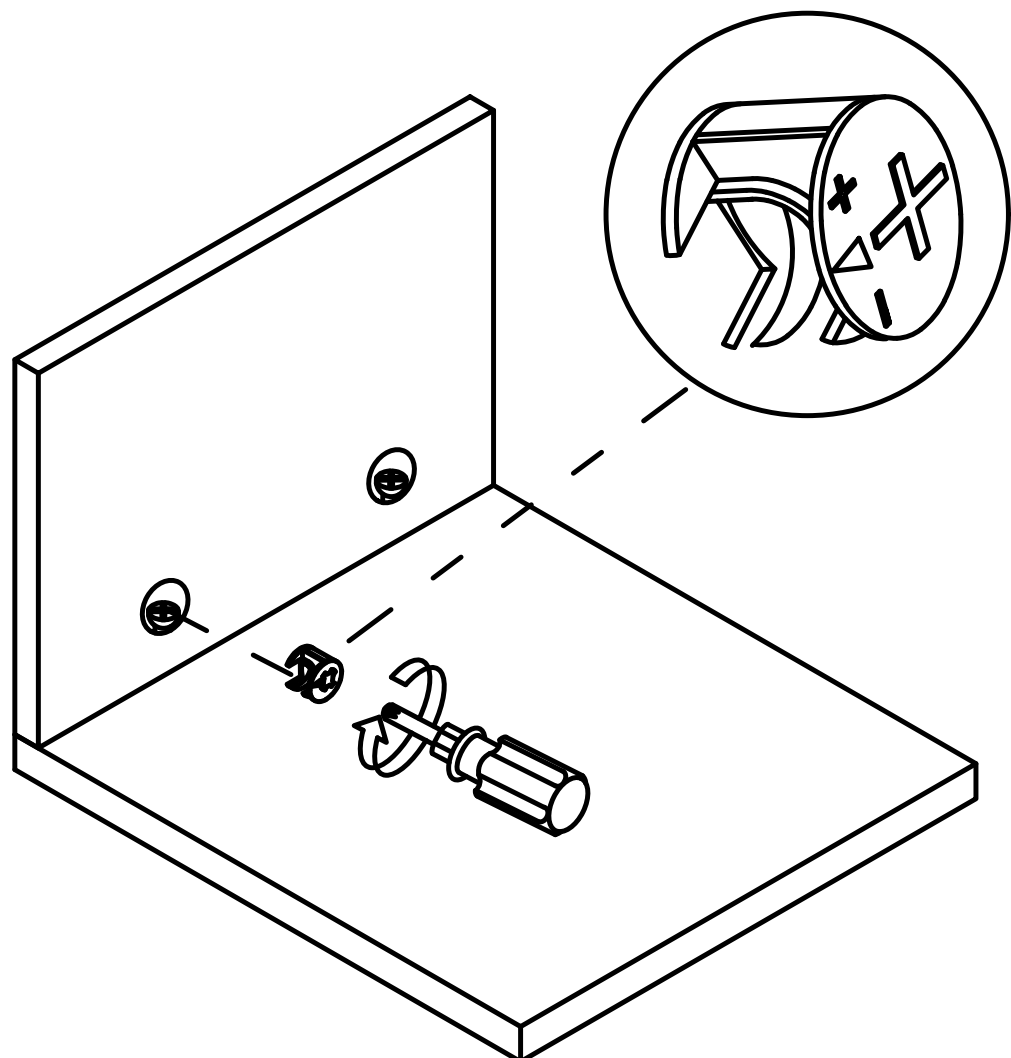


Use a screwdriver to lock in the direction of the "+" sign

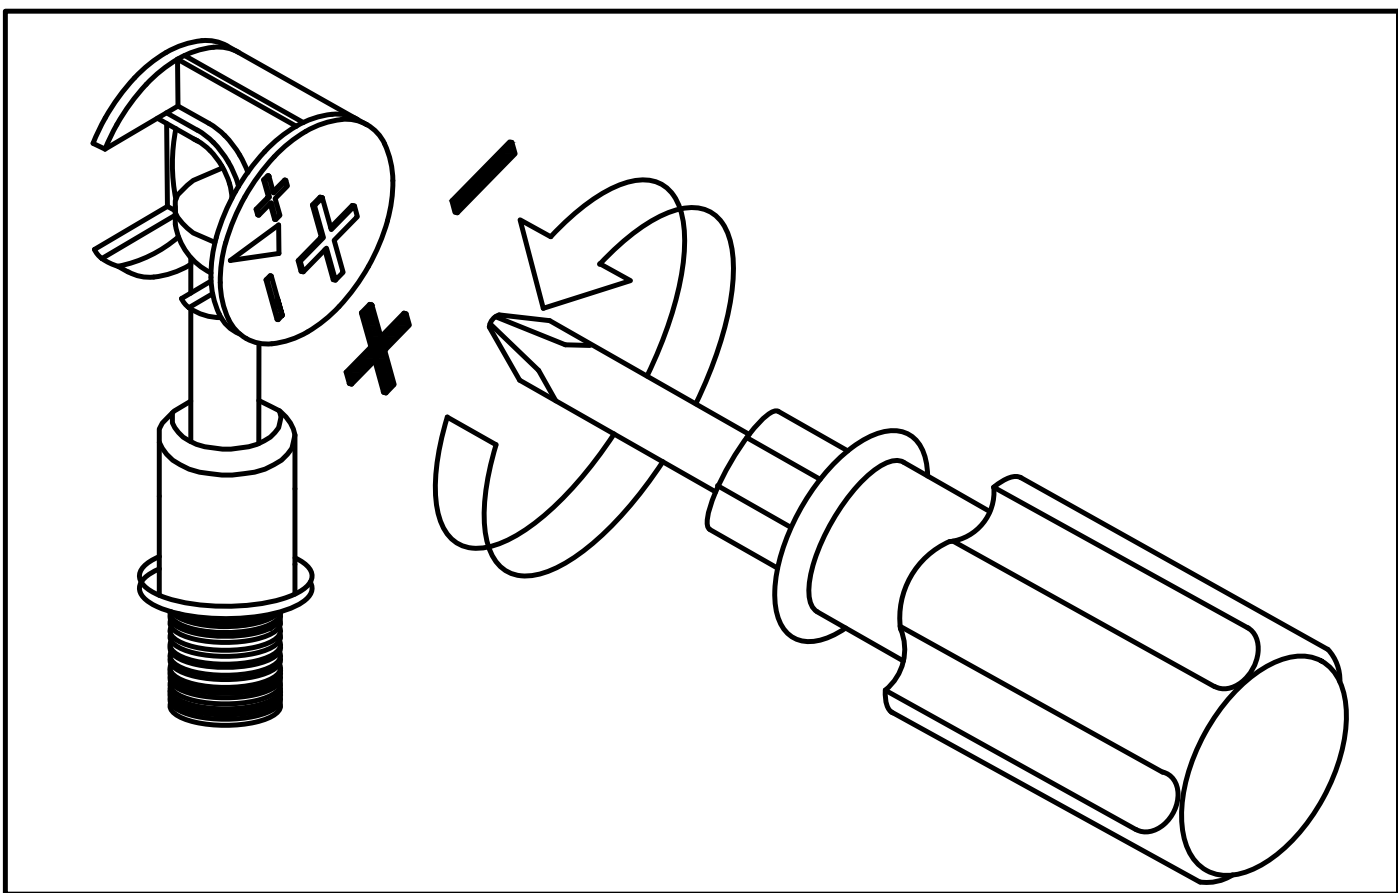


Disassemble along the direction of "-" sign


Step 1

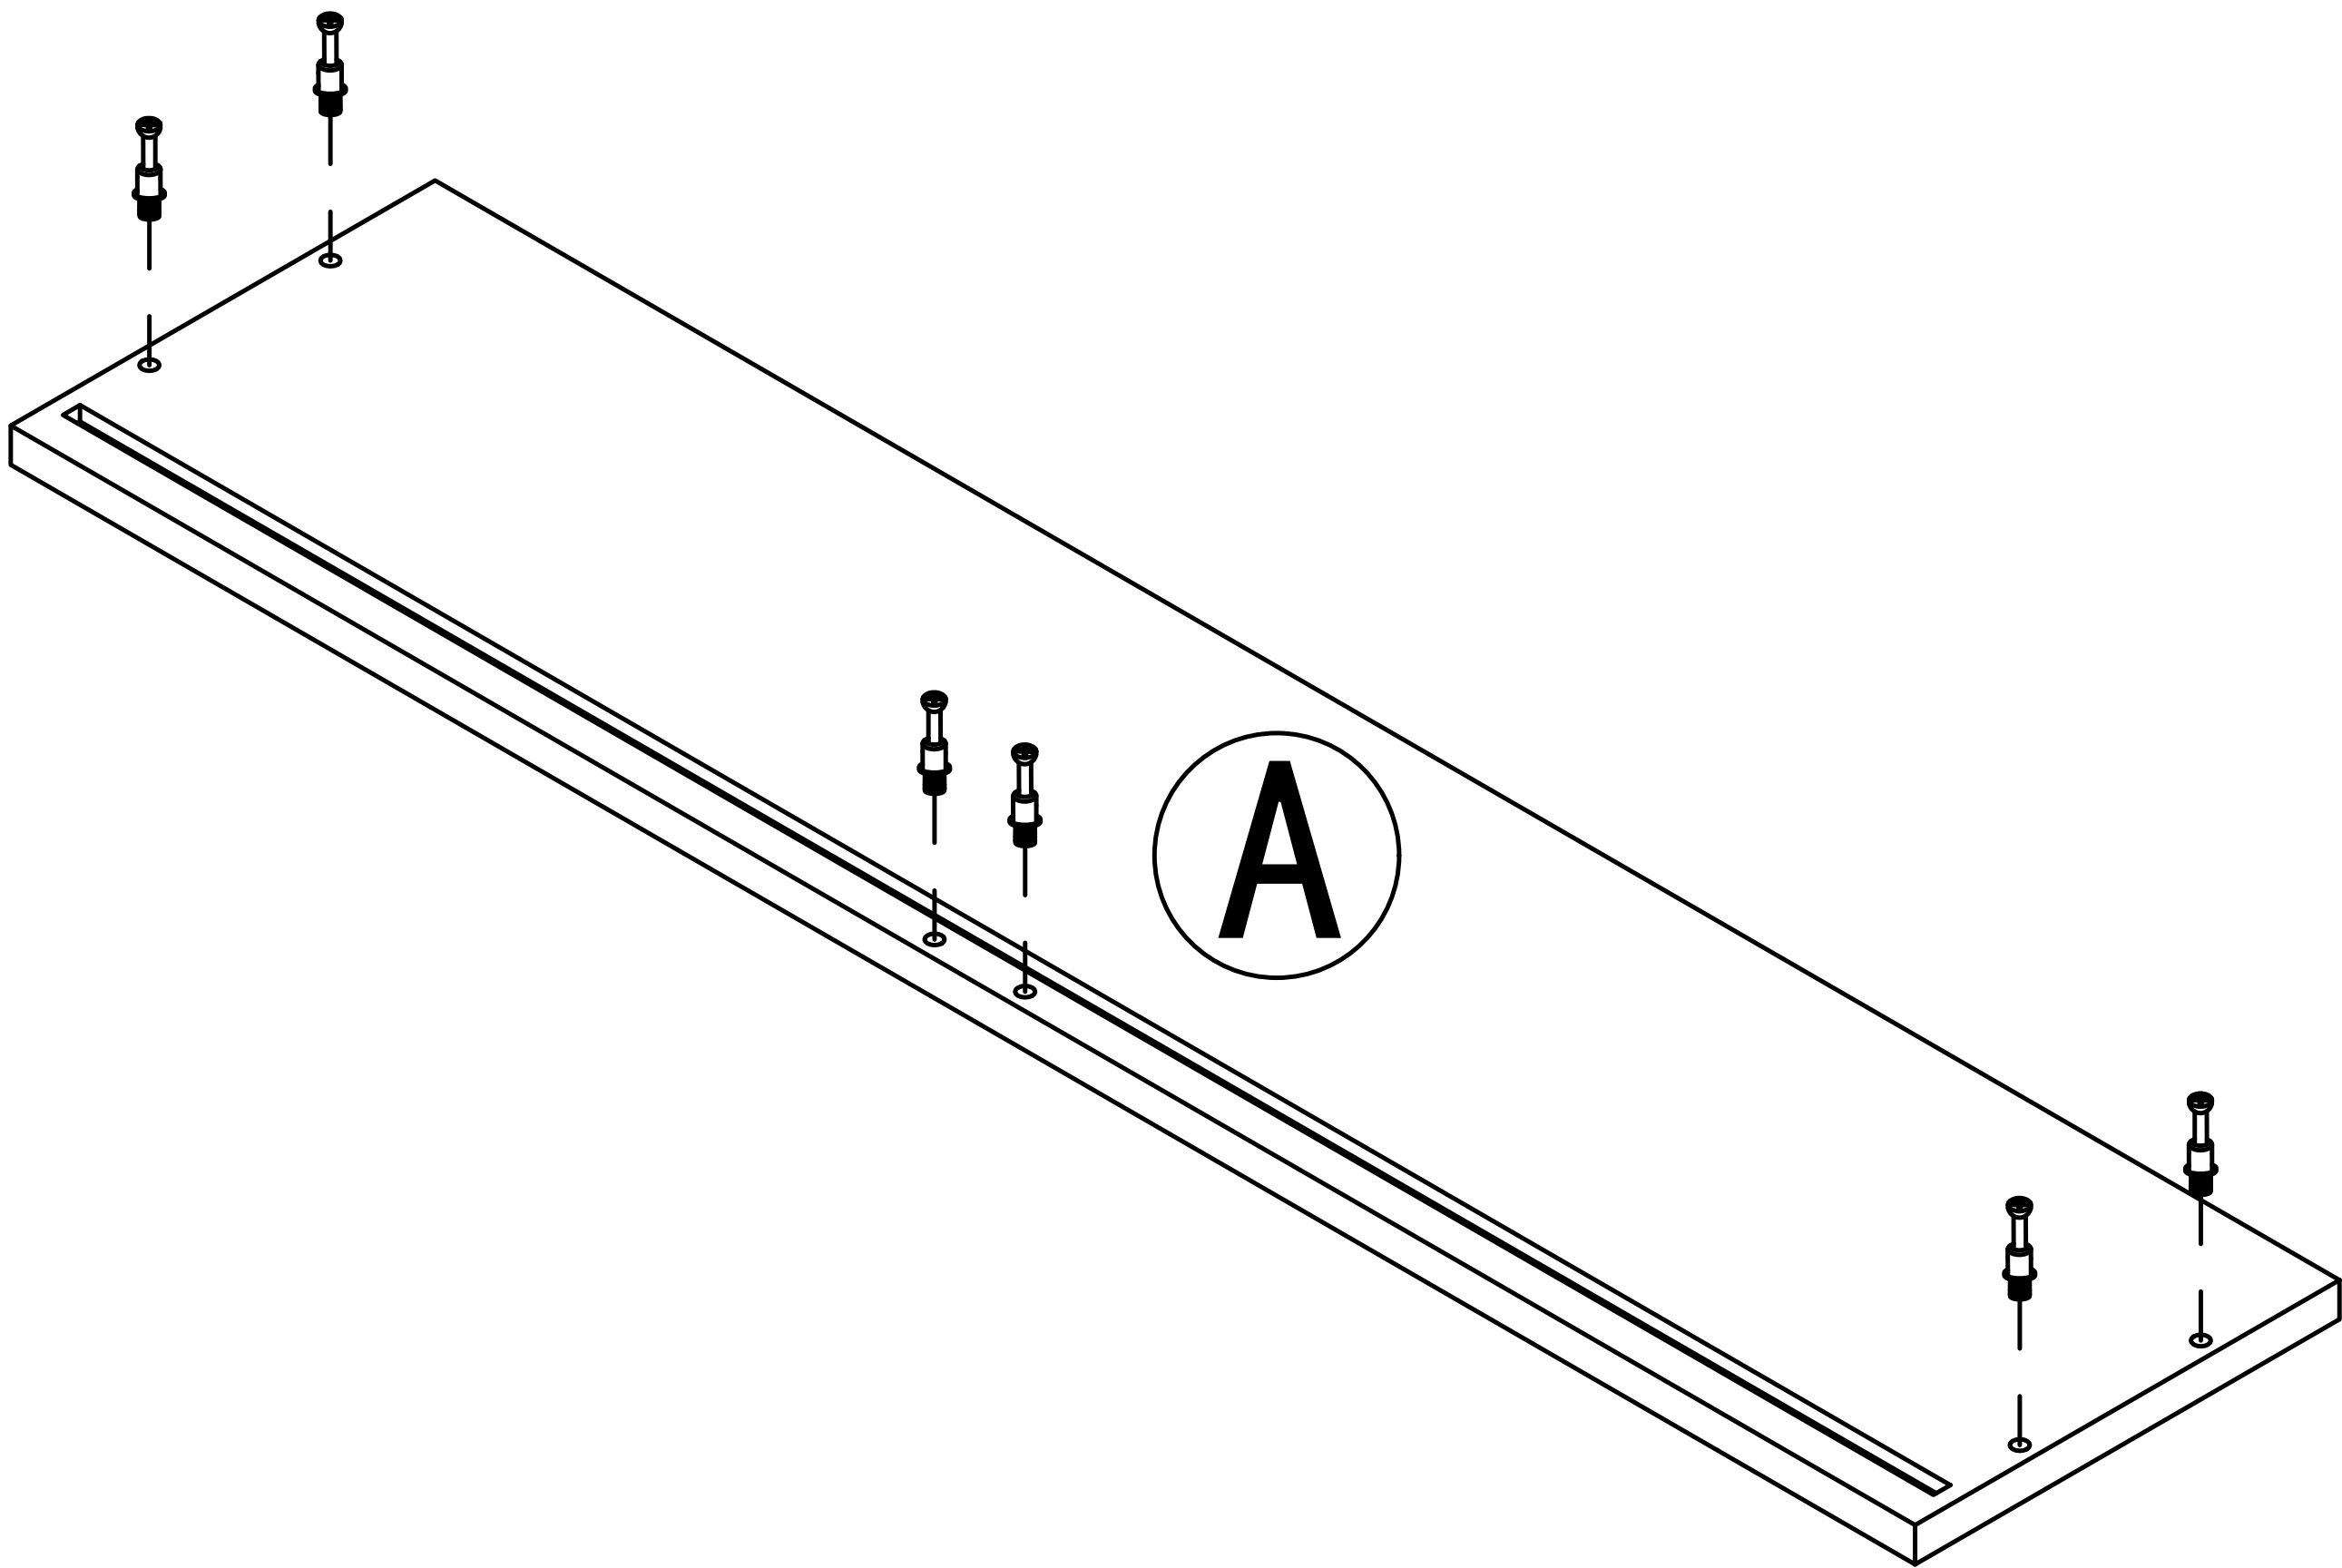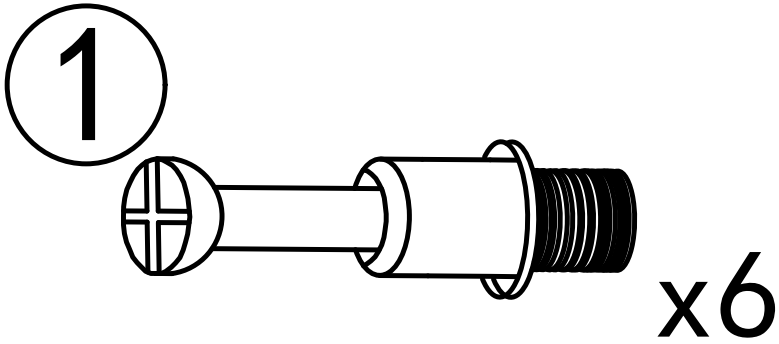


Step 2

2

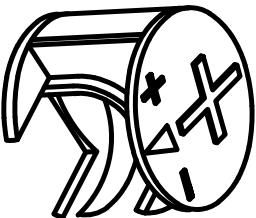 x6

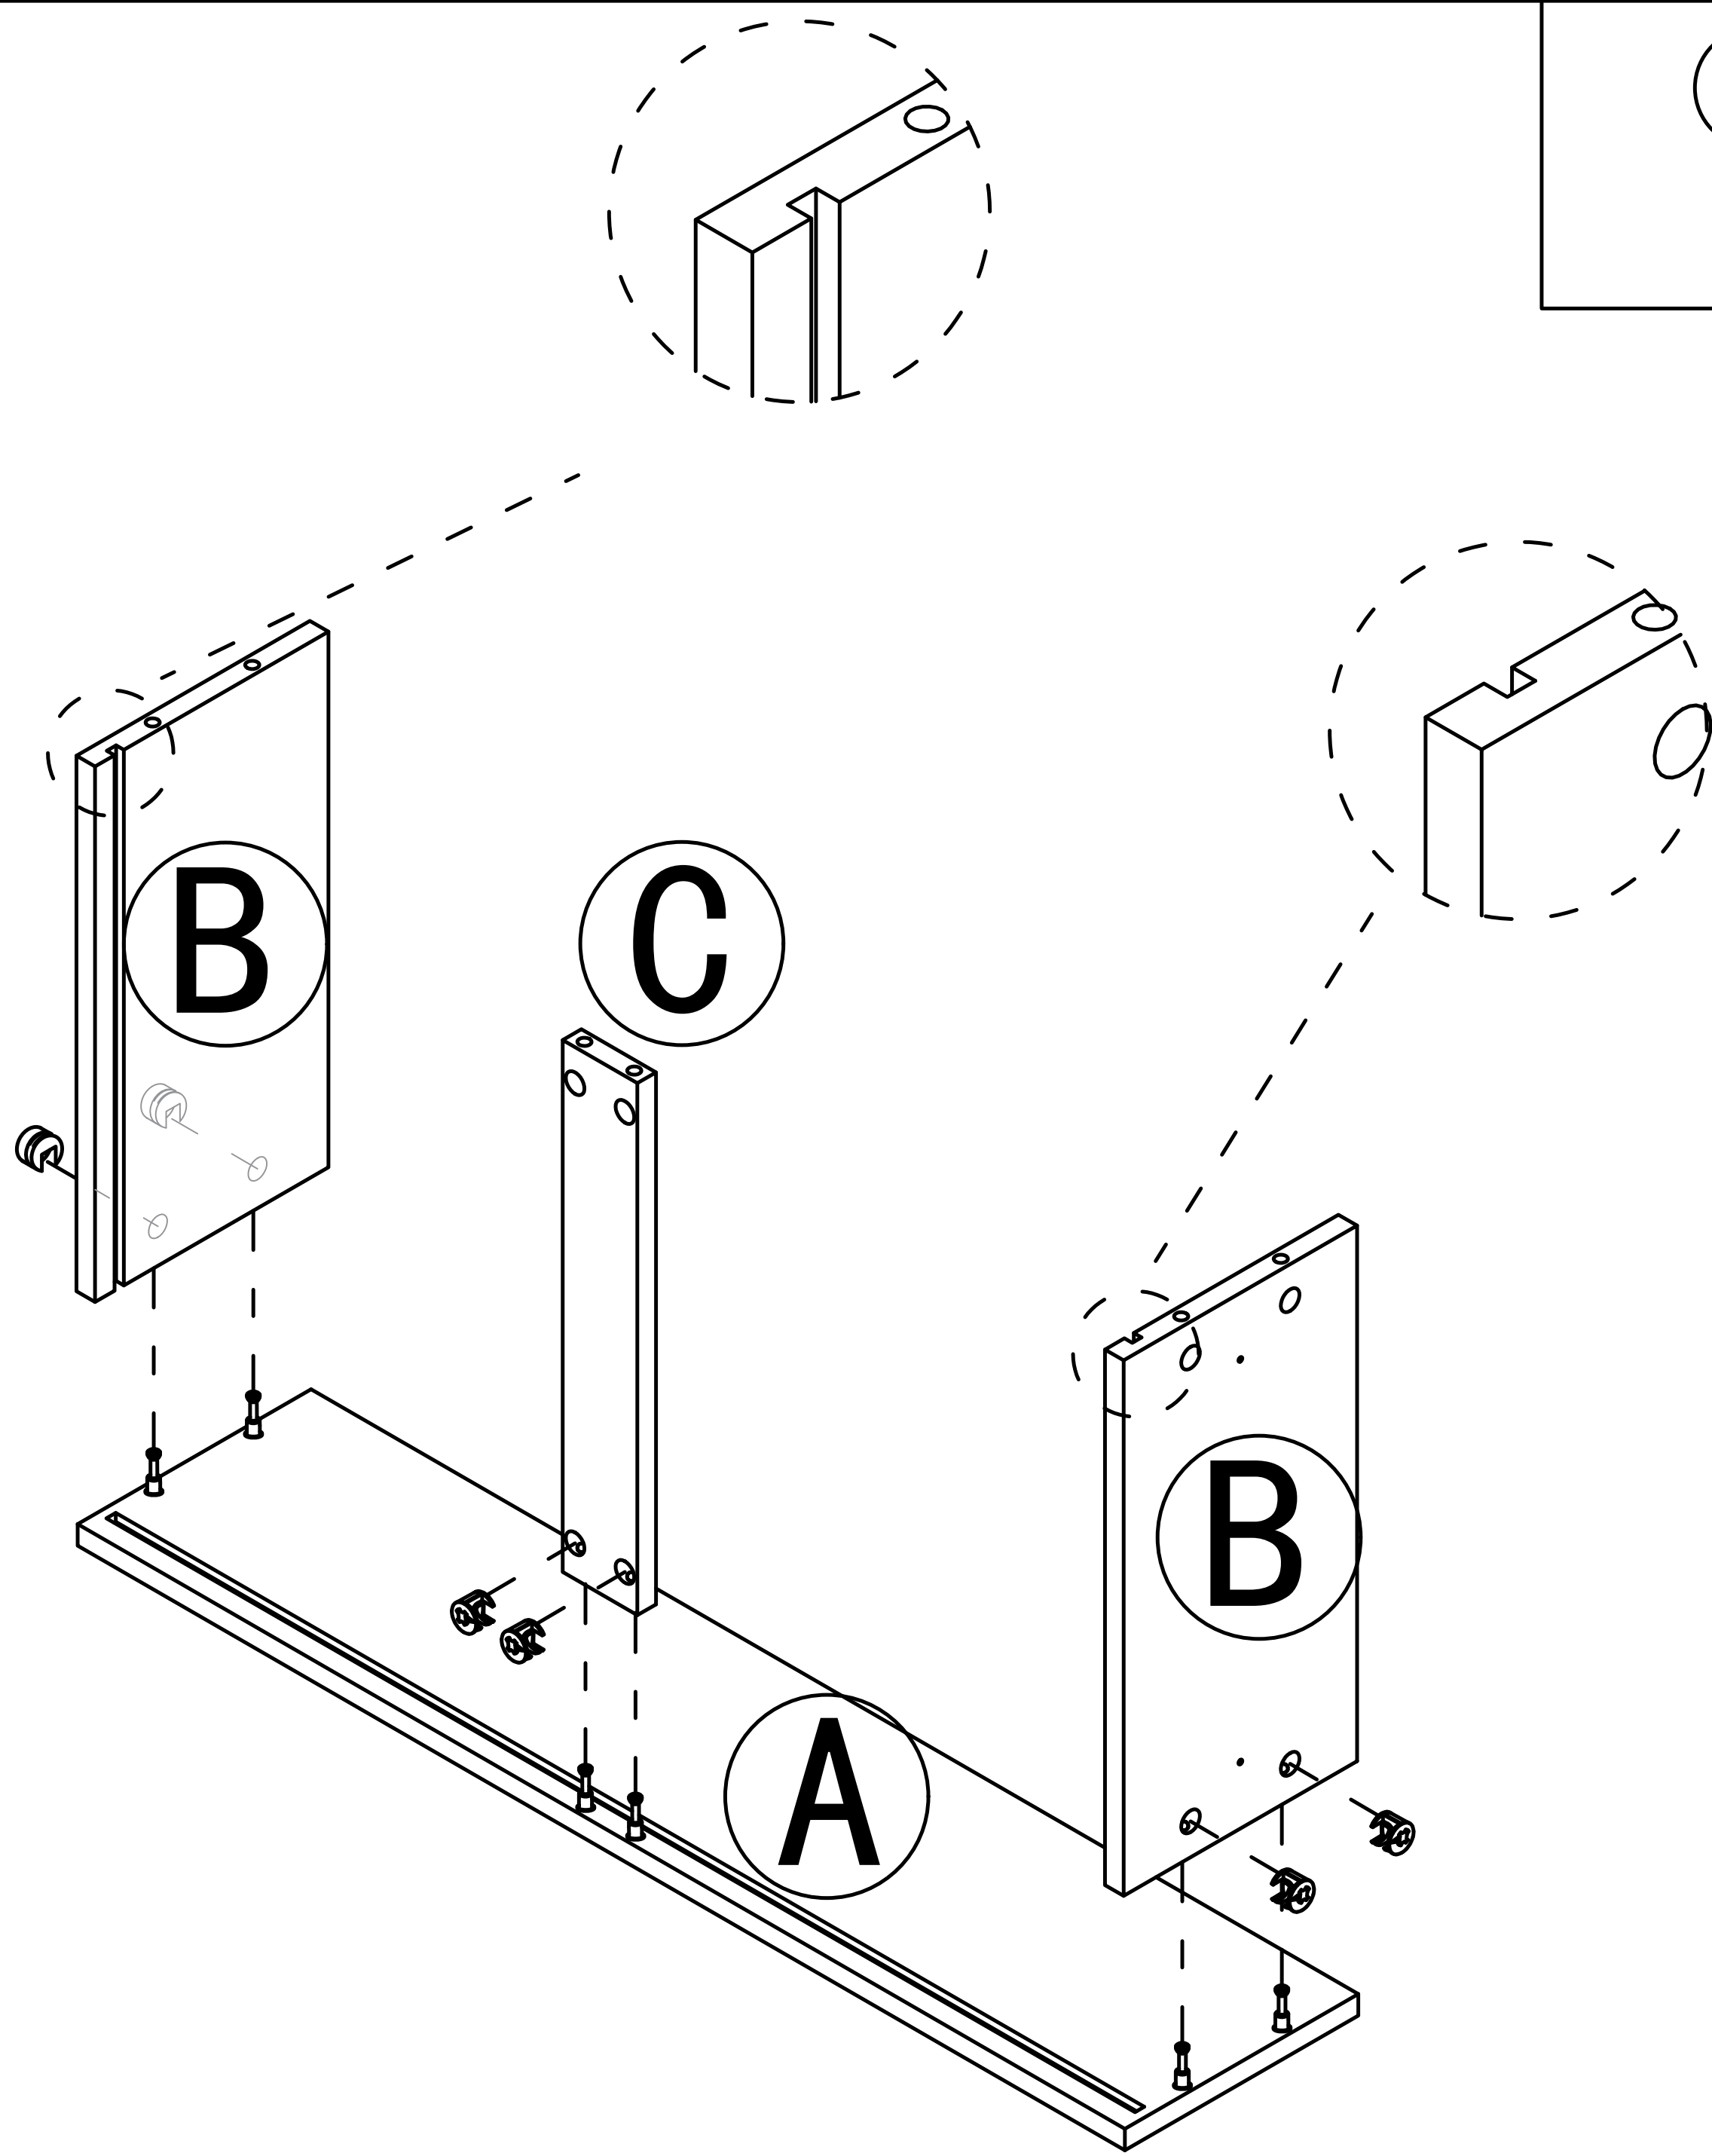


Step 3

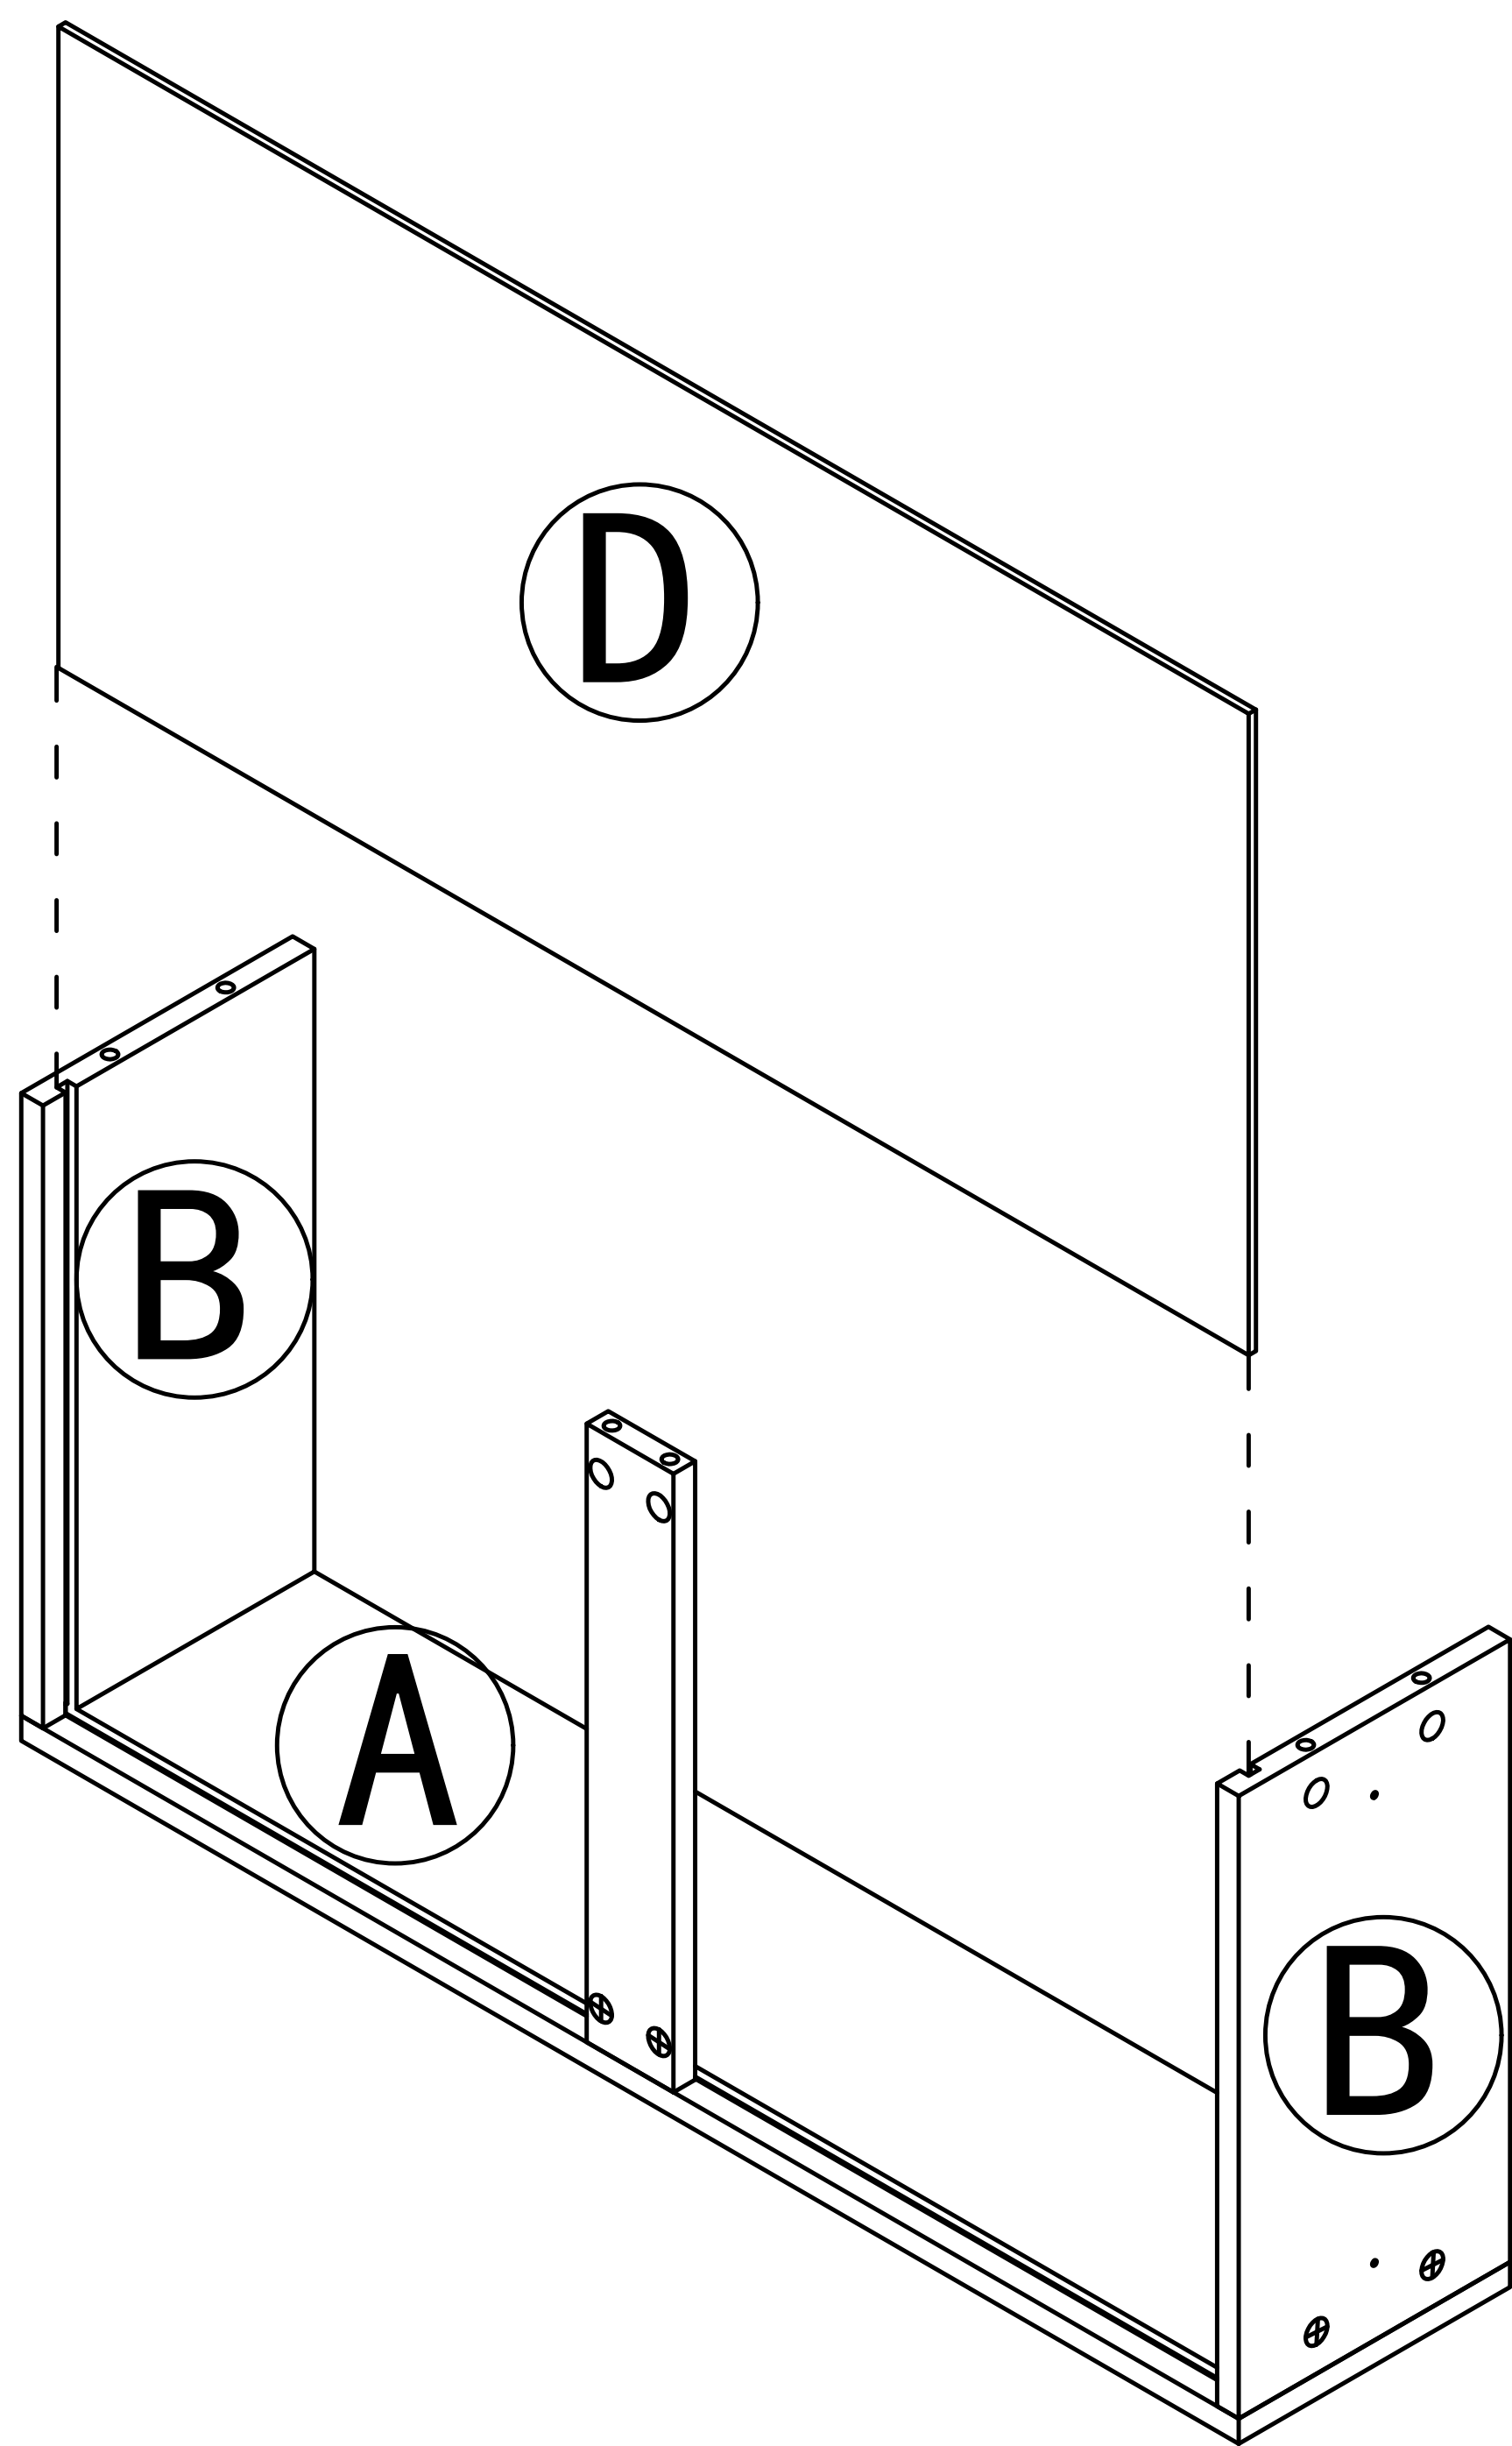


Step 4

- 1

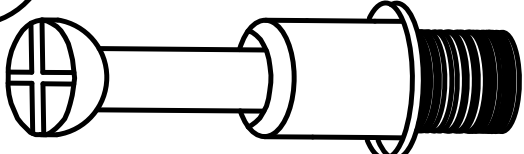


x6
- 10

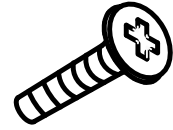


1pcs
- 

2pcs

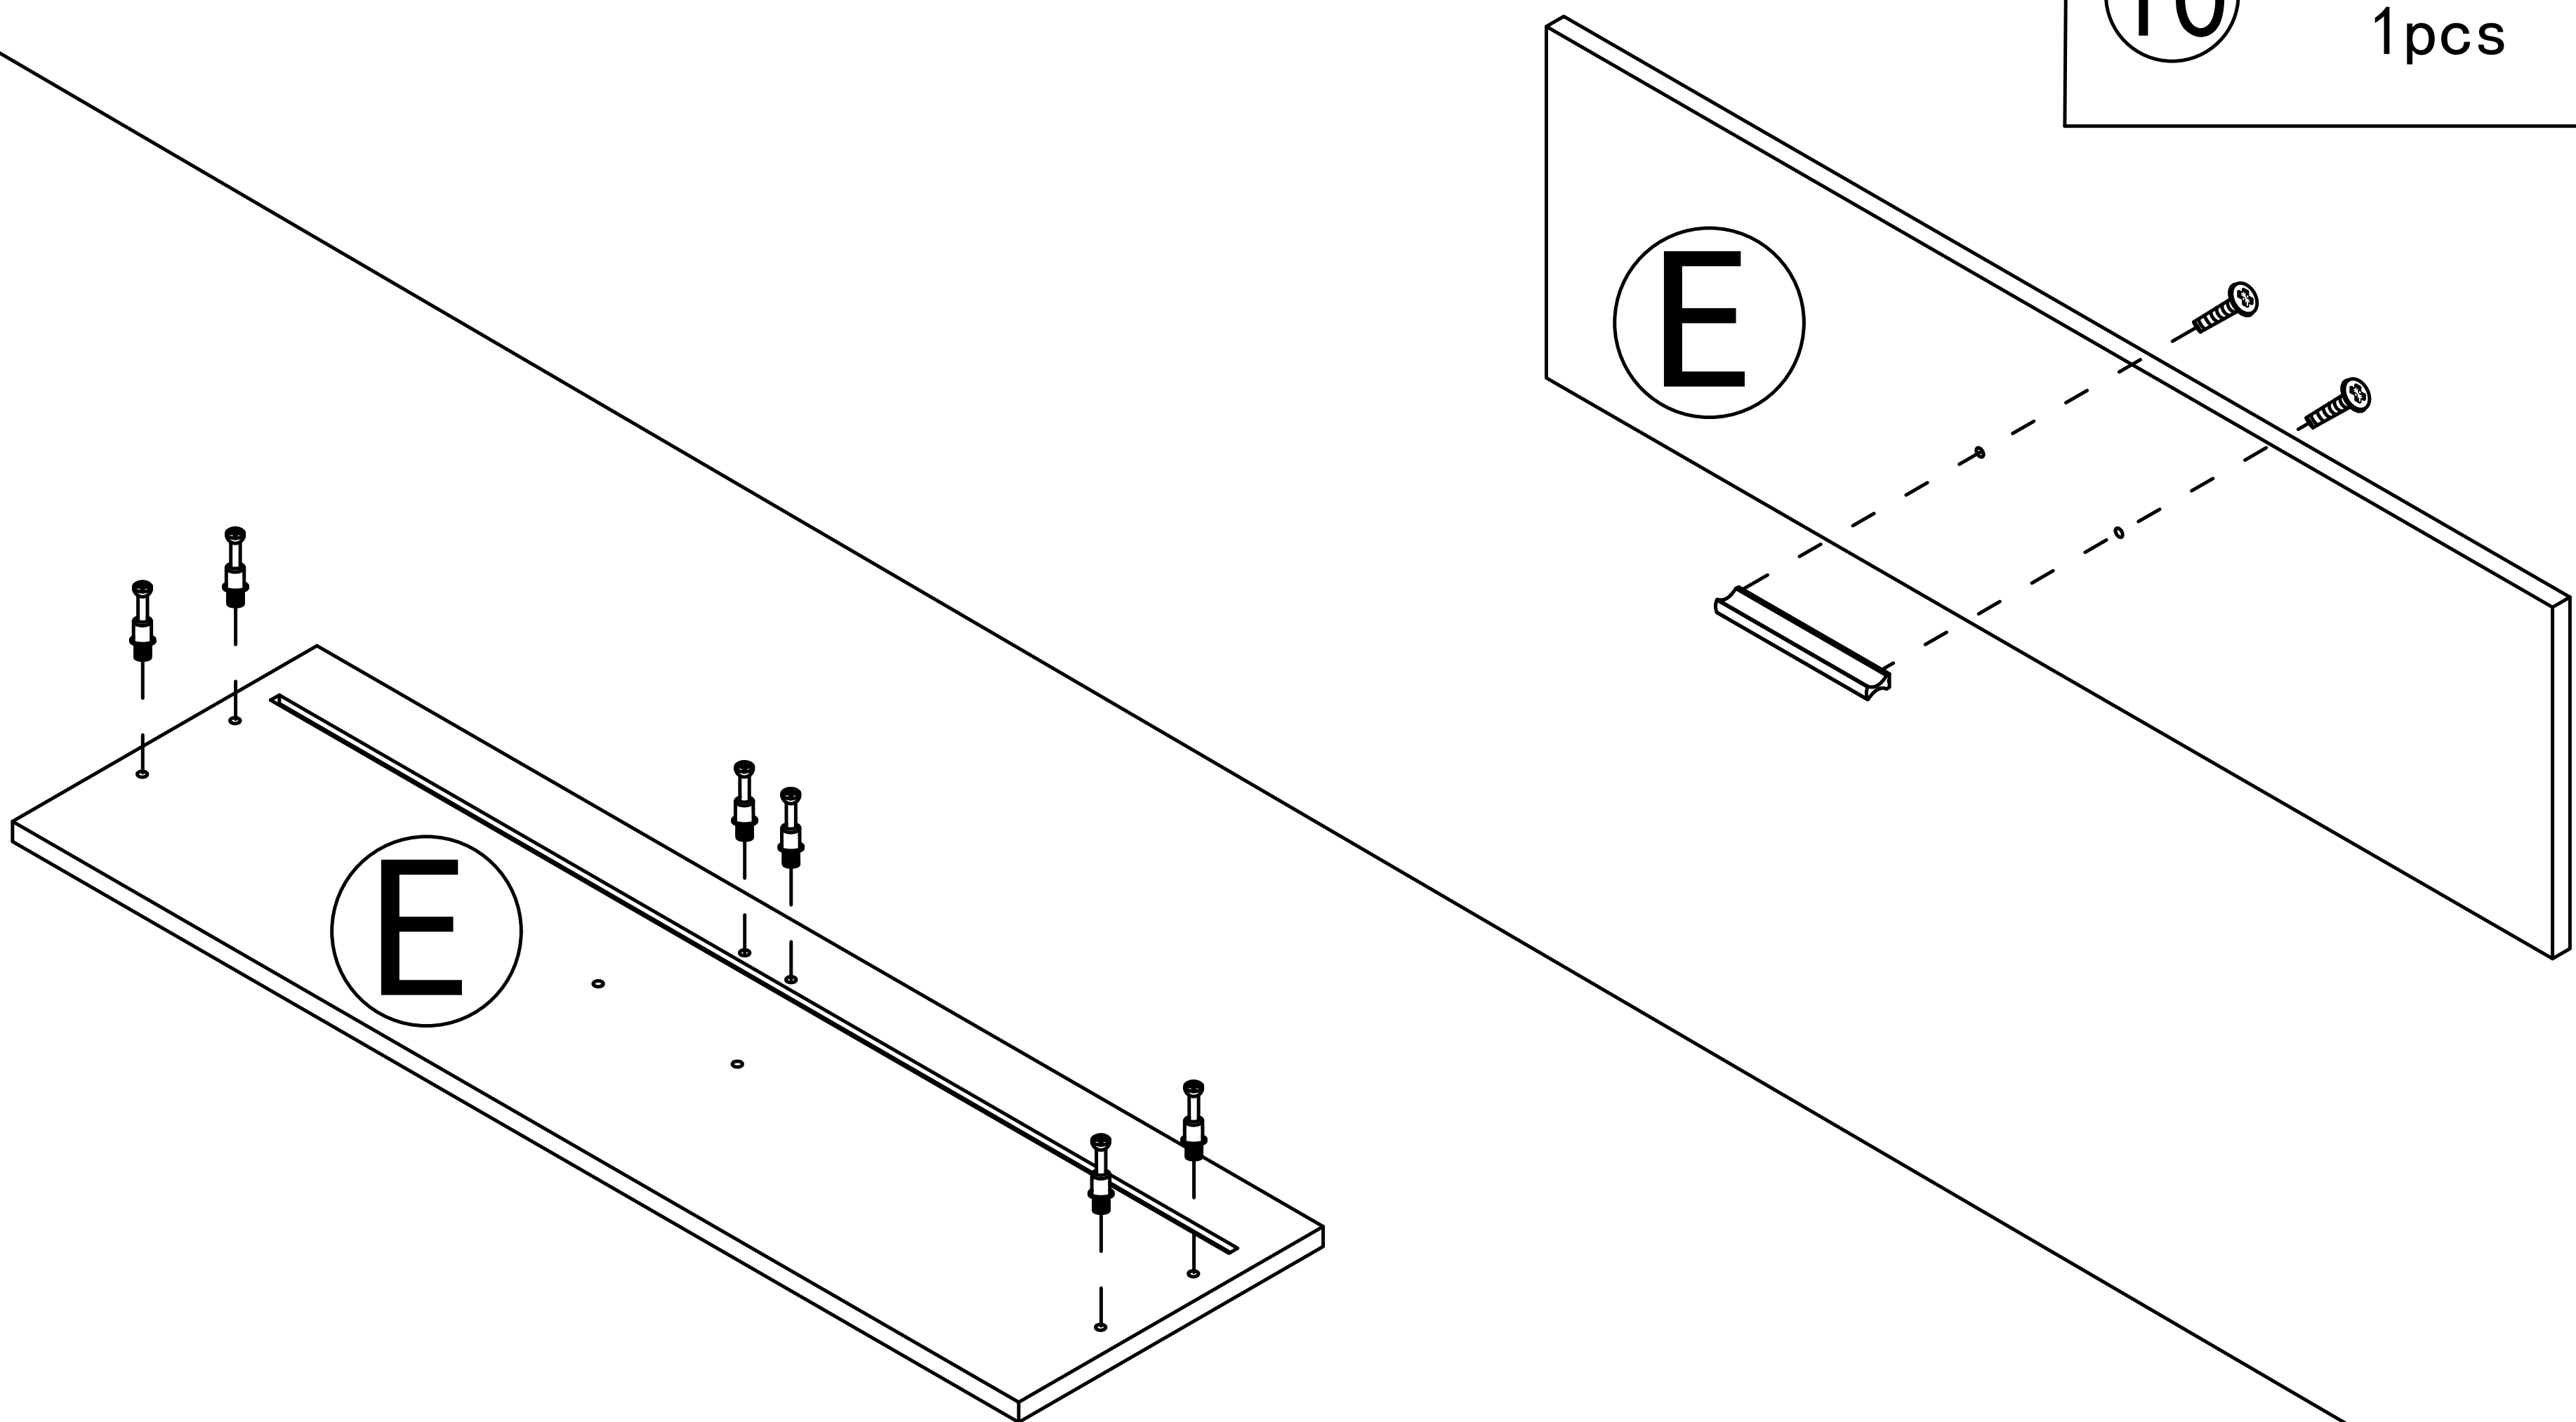


Step 5

- 2

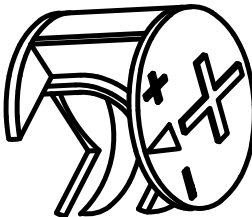


x6

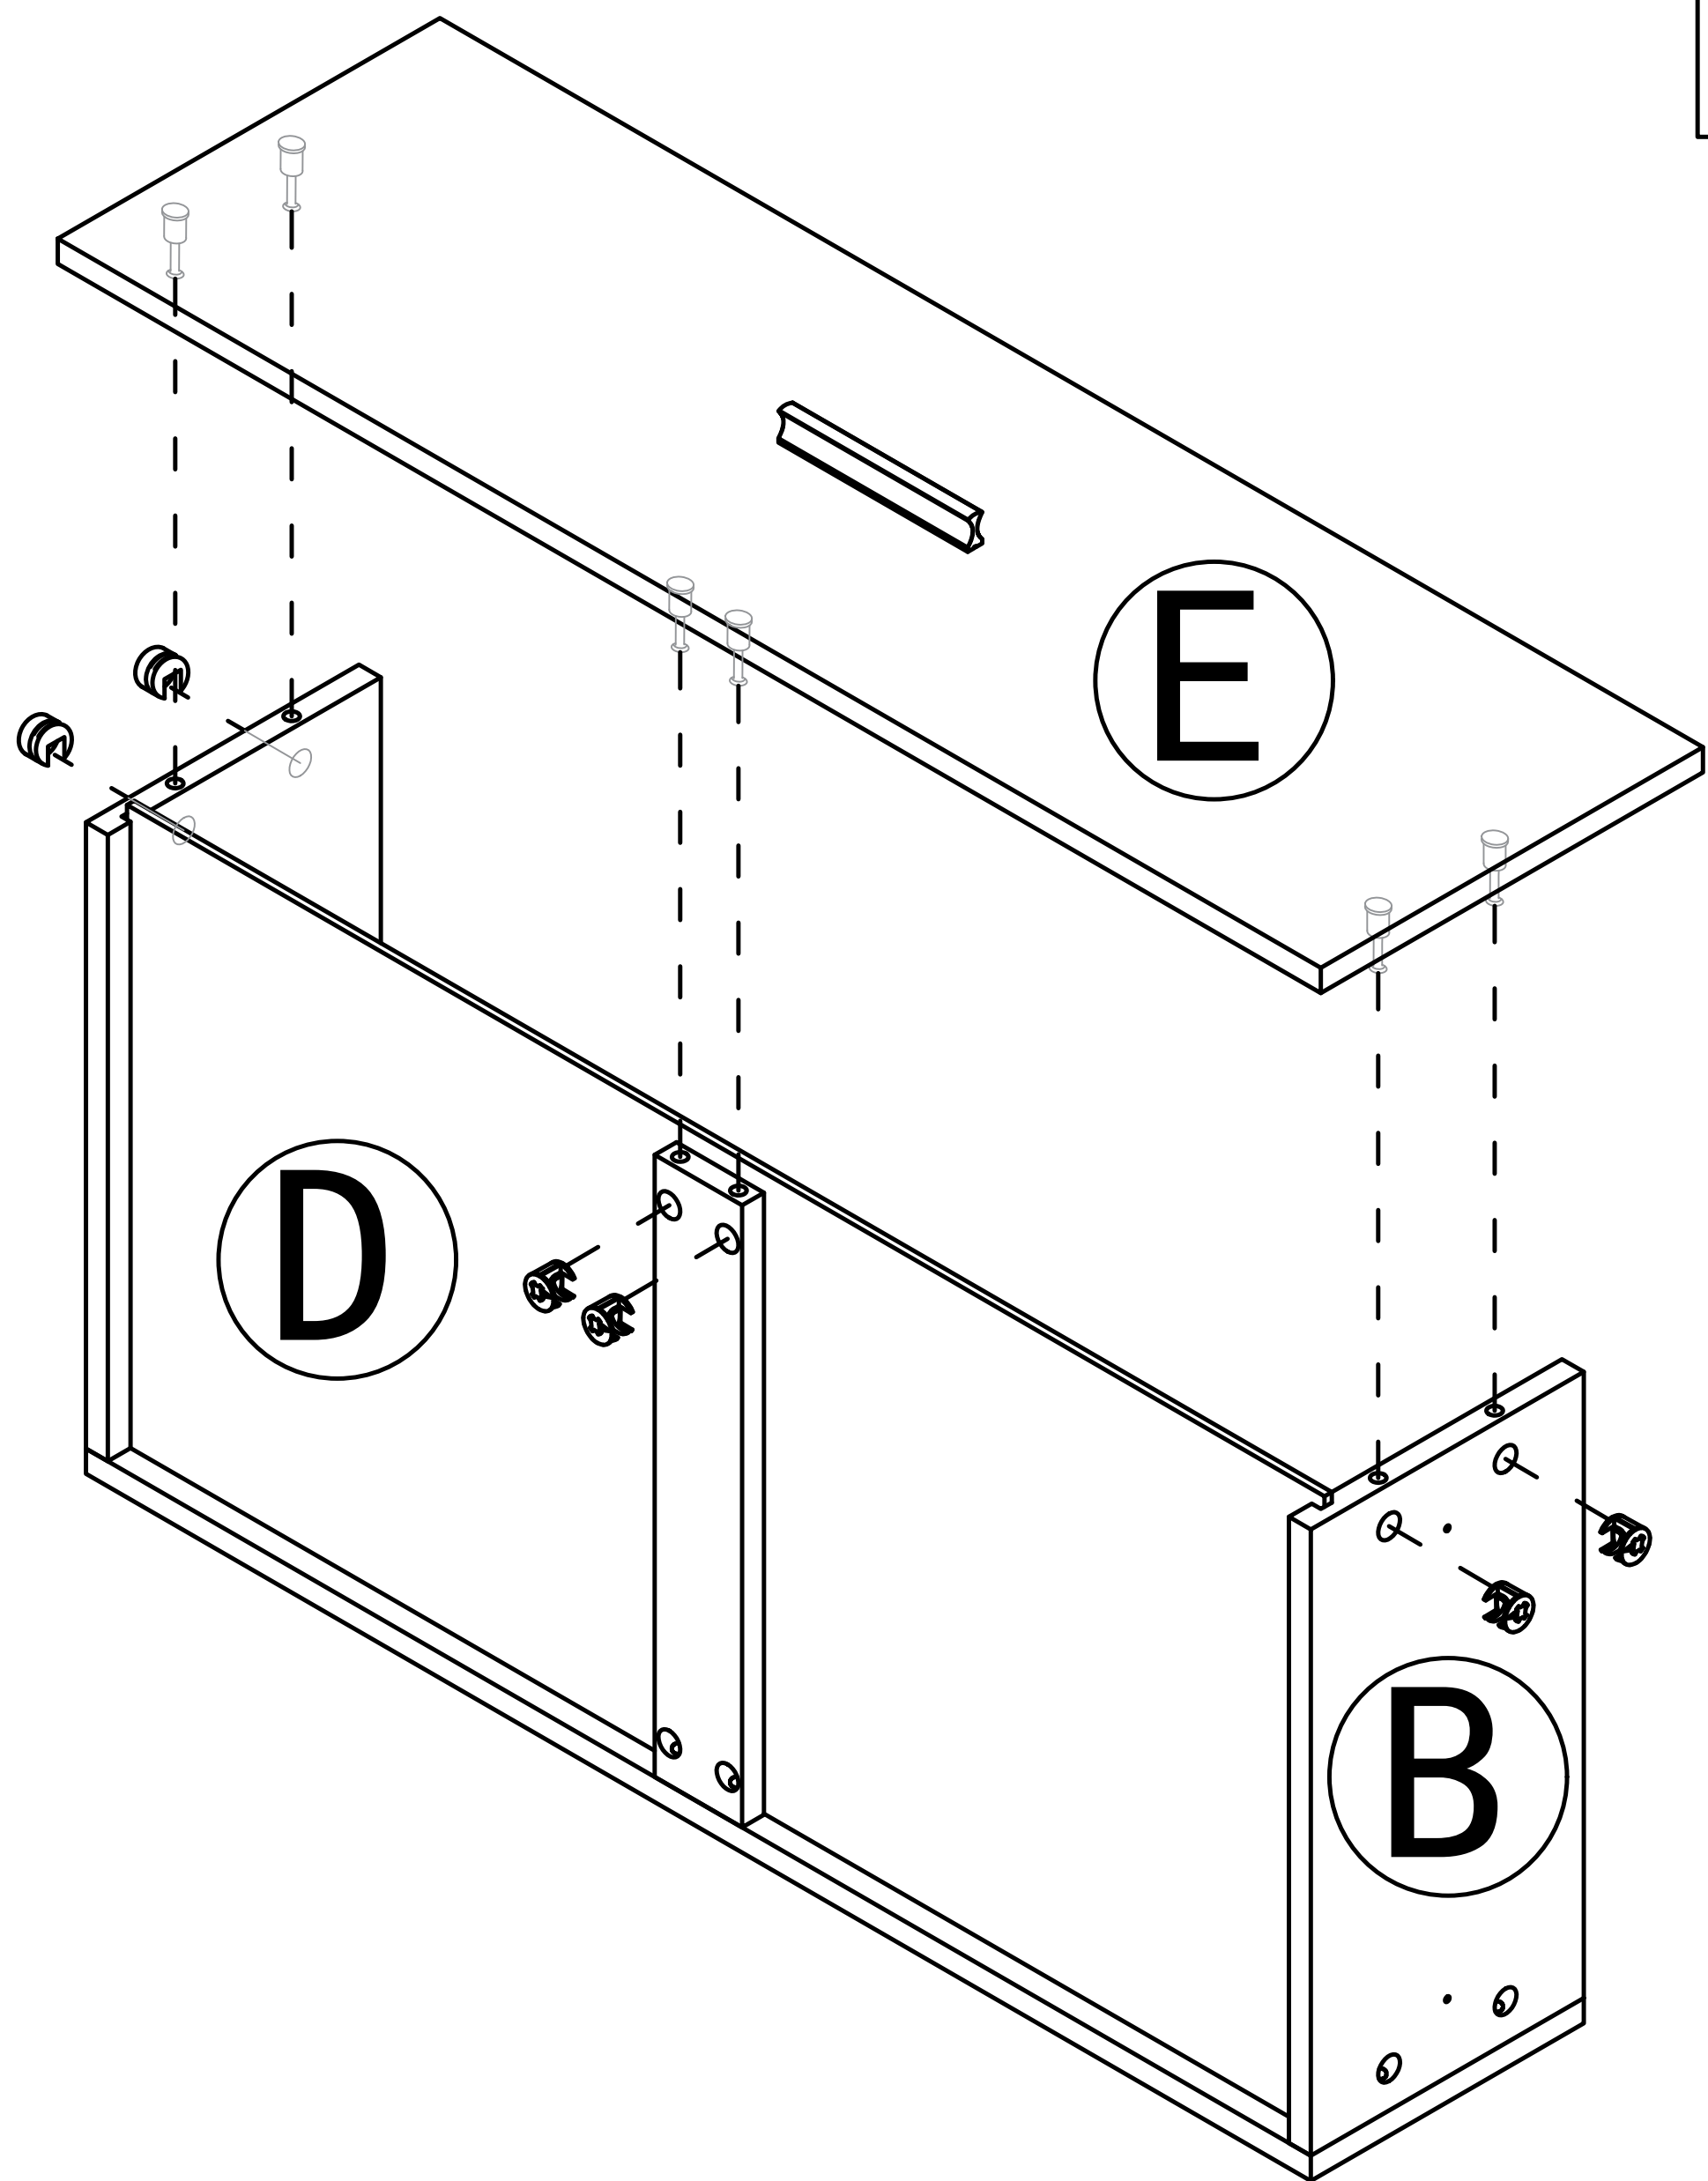


Use parts ④

Drawer rail breakdown diagram

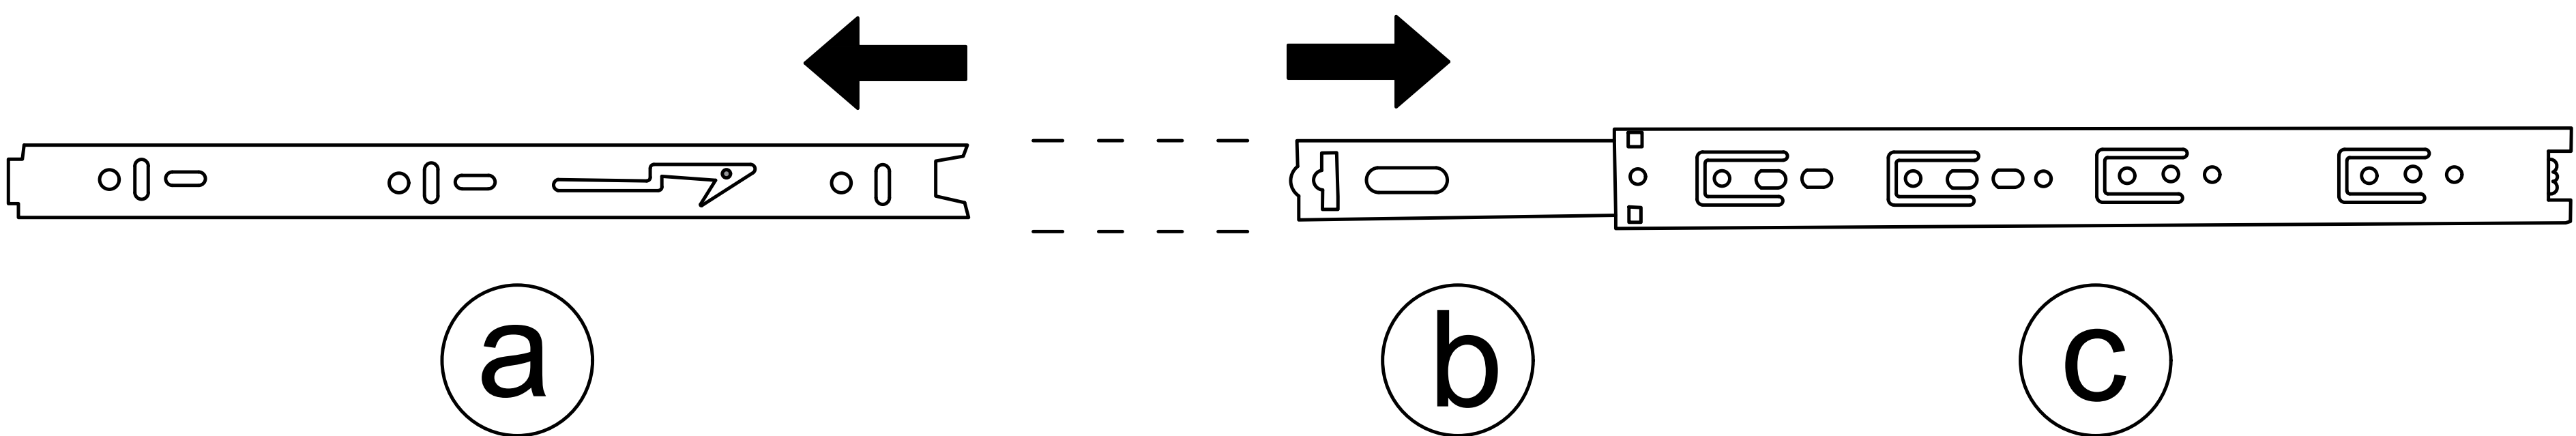


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

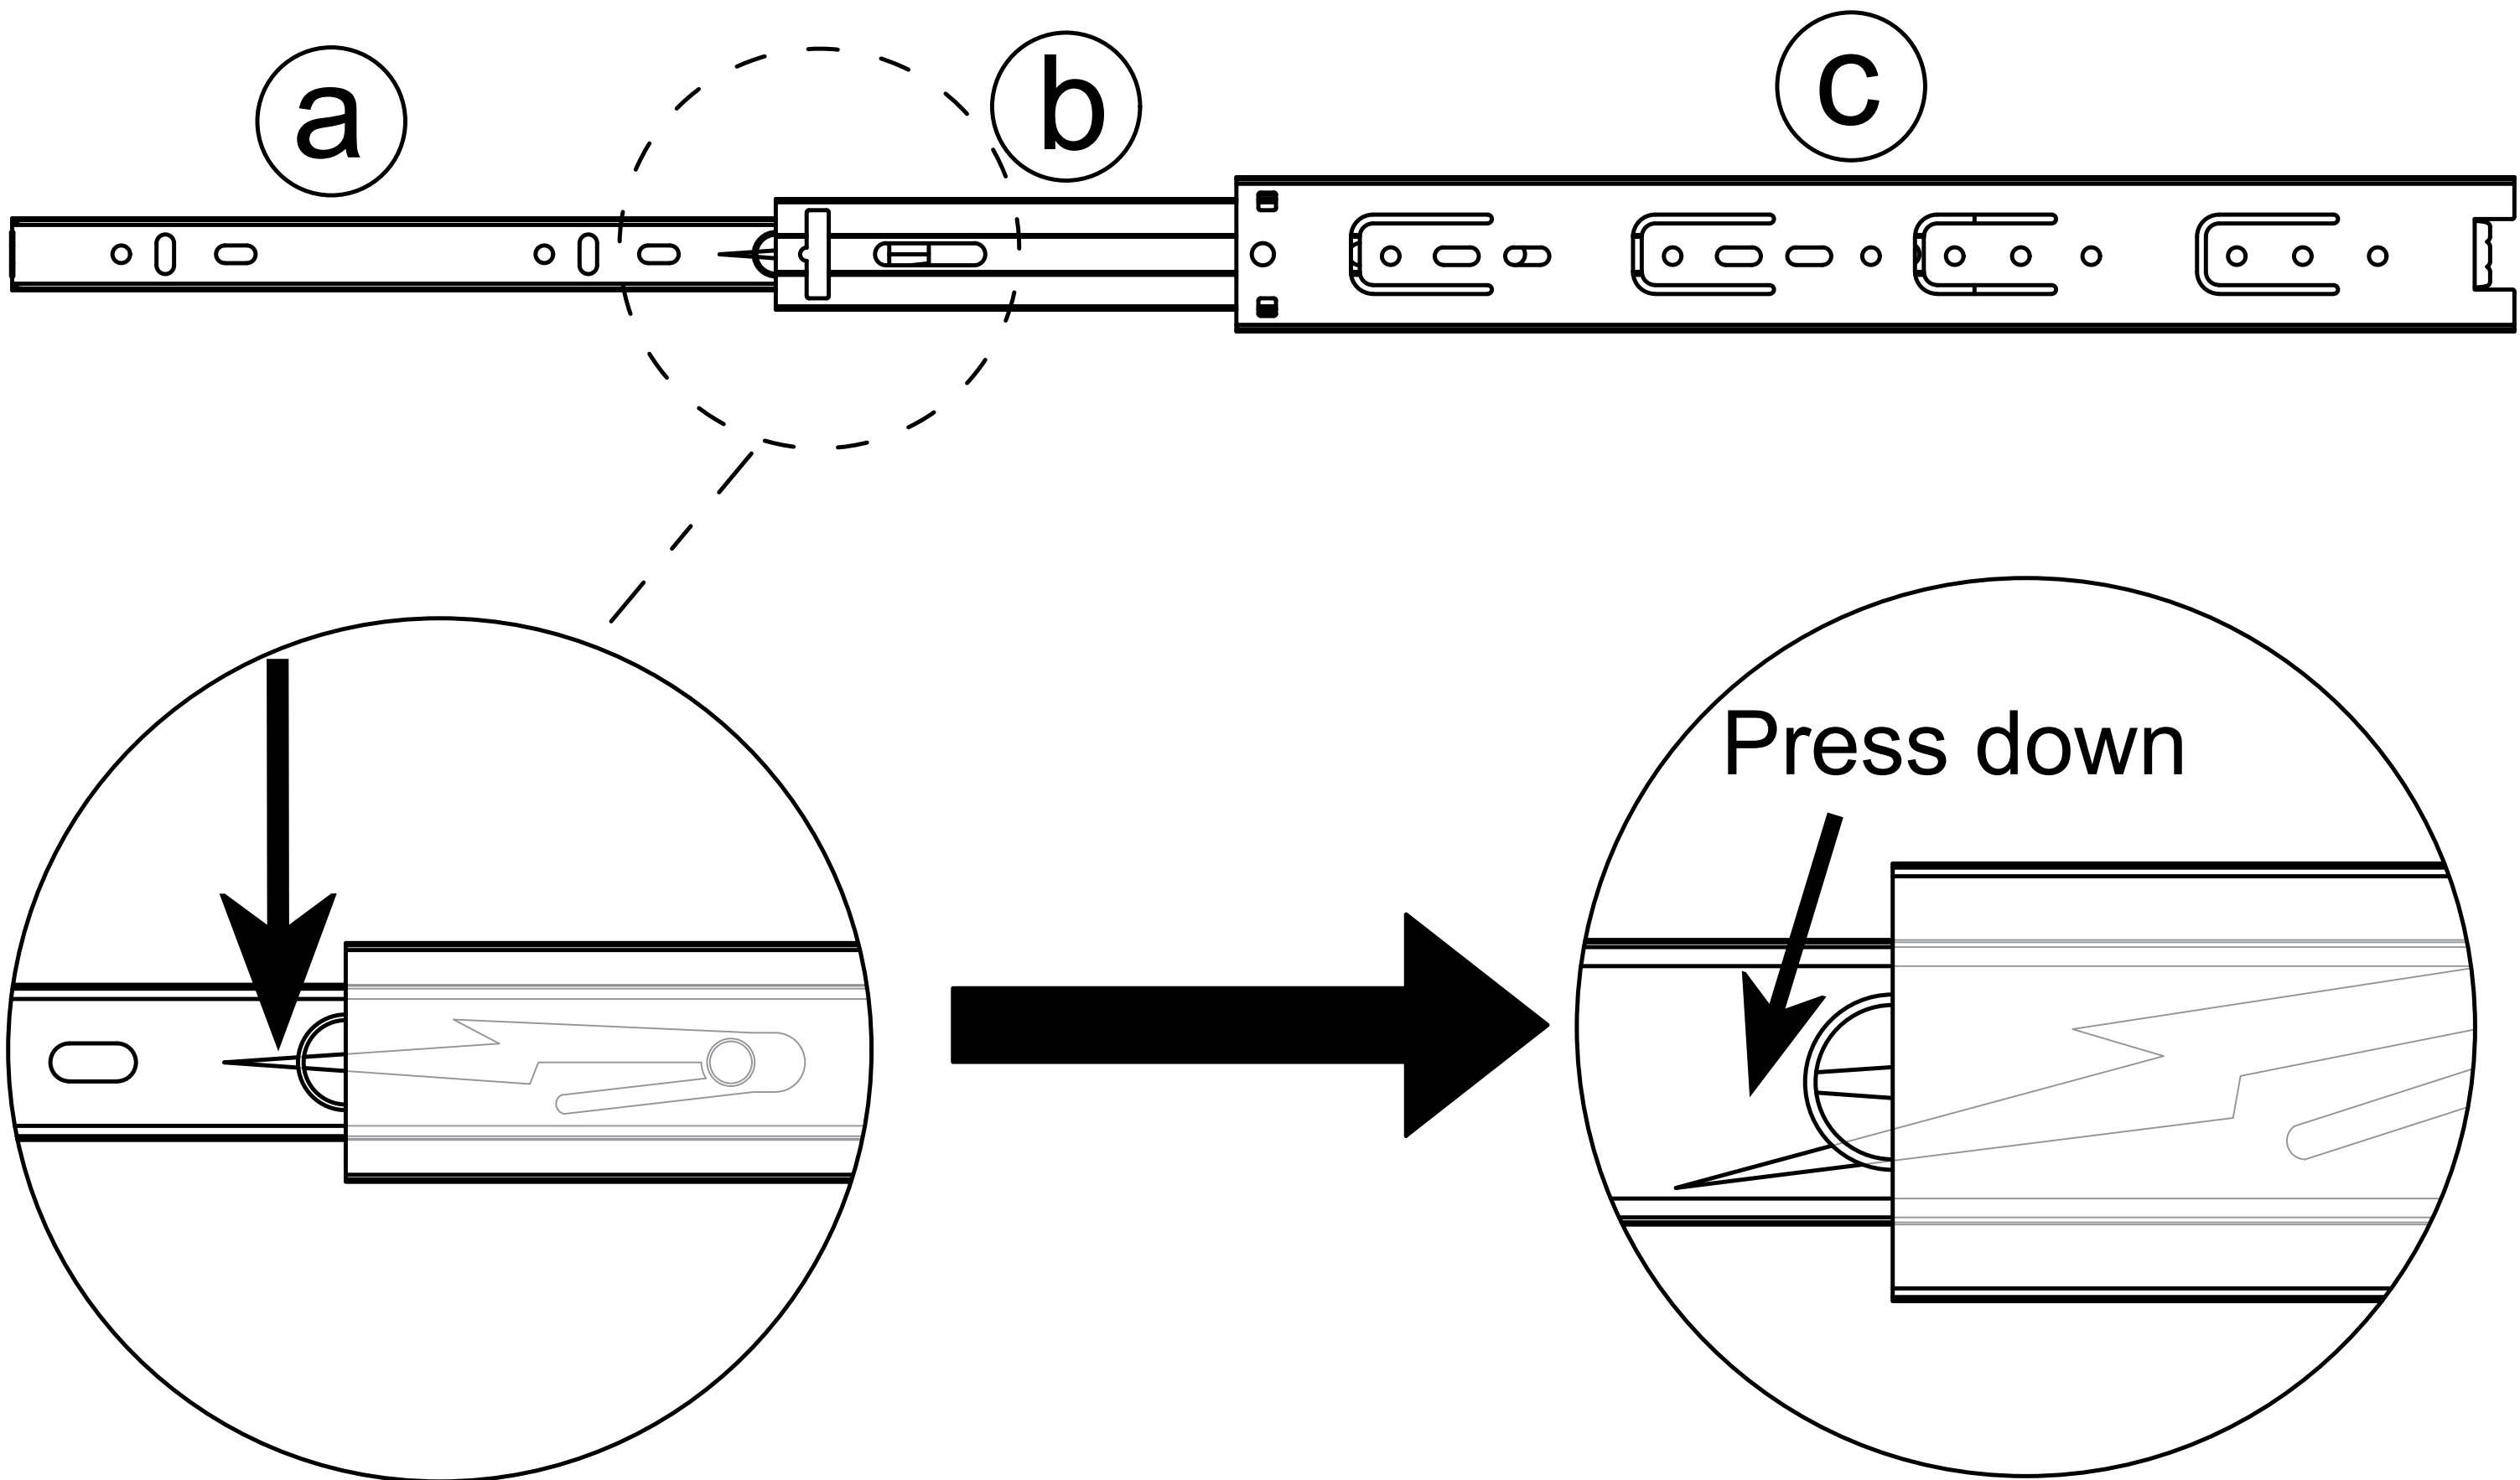


Step 2 : Press the nylon button and pull out (a).


Drawer rail decomposition completed schematic diagram













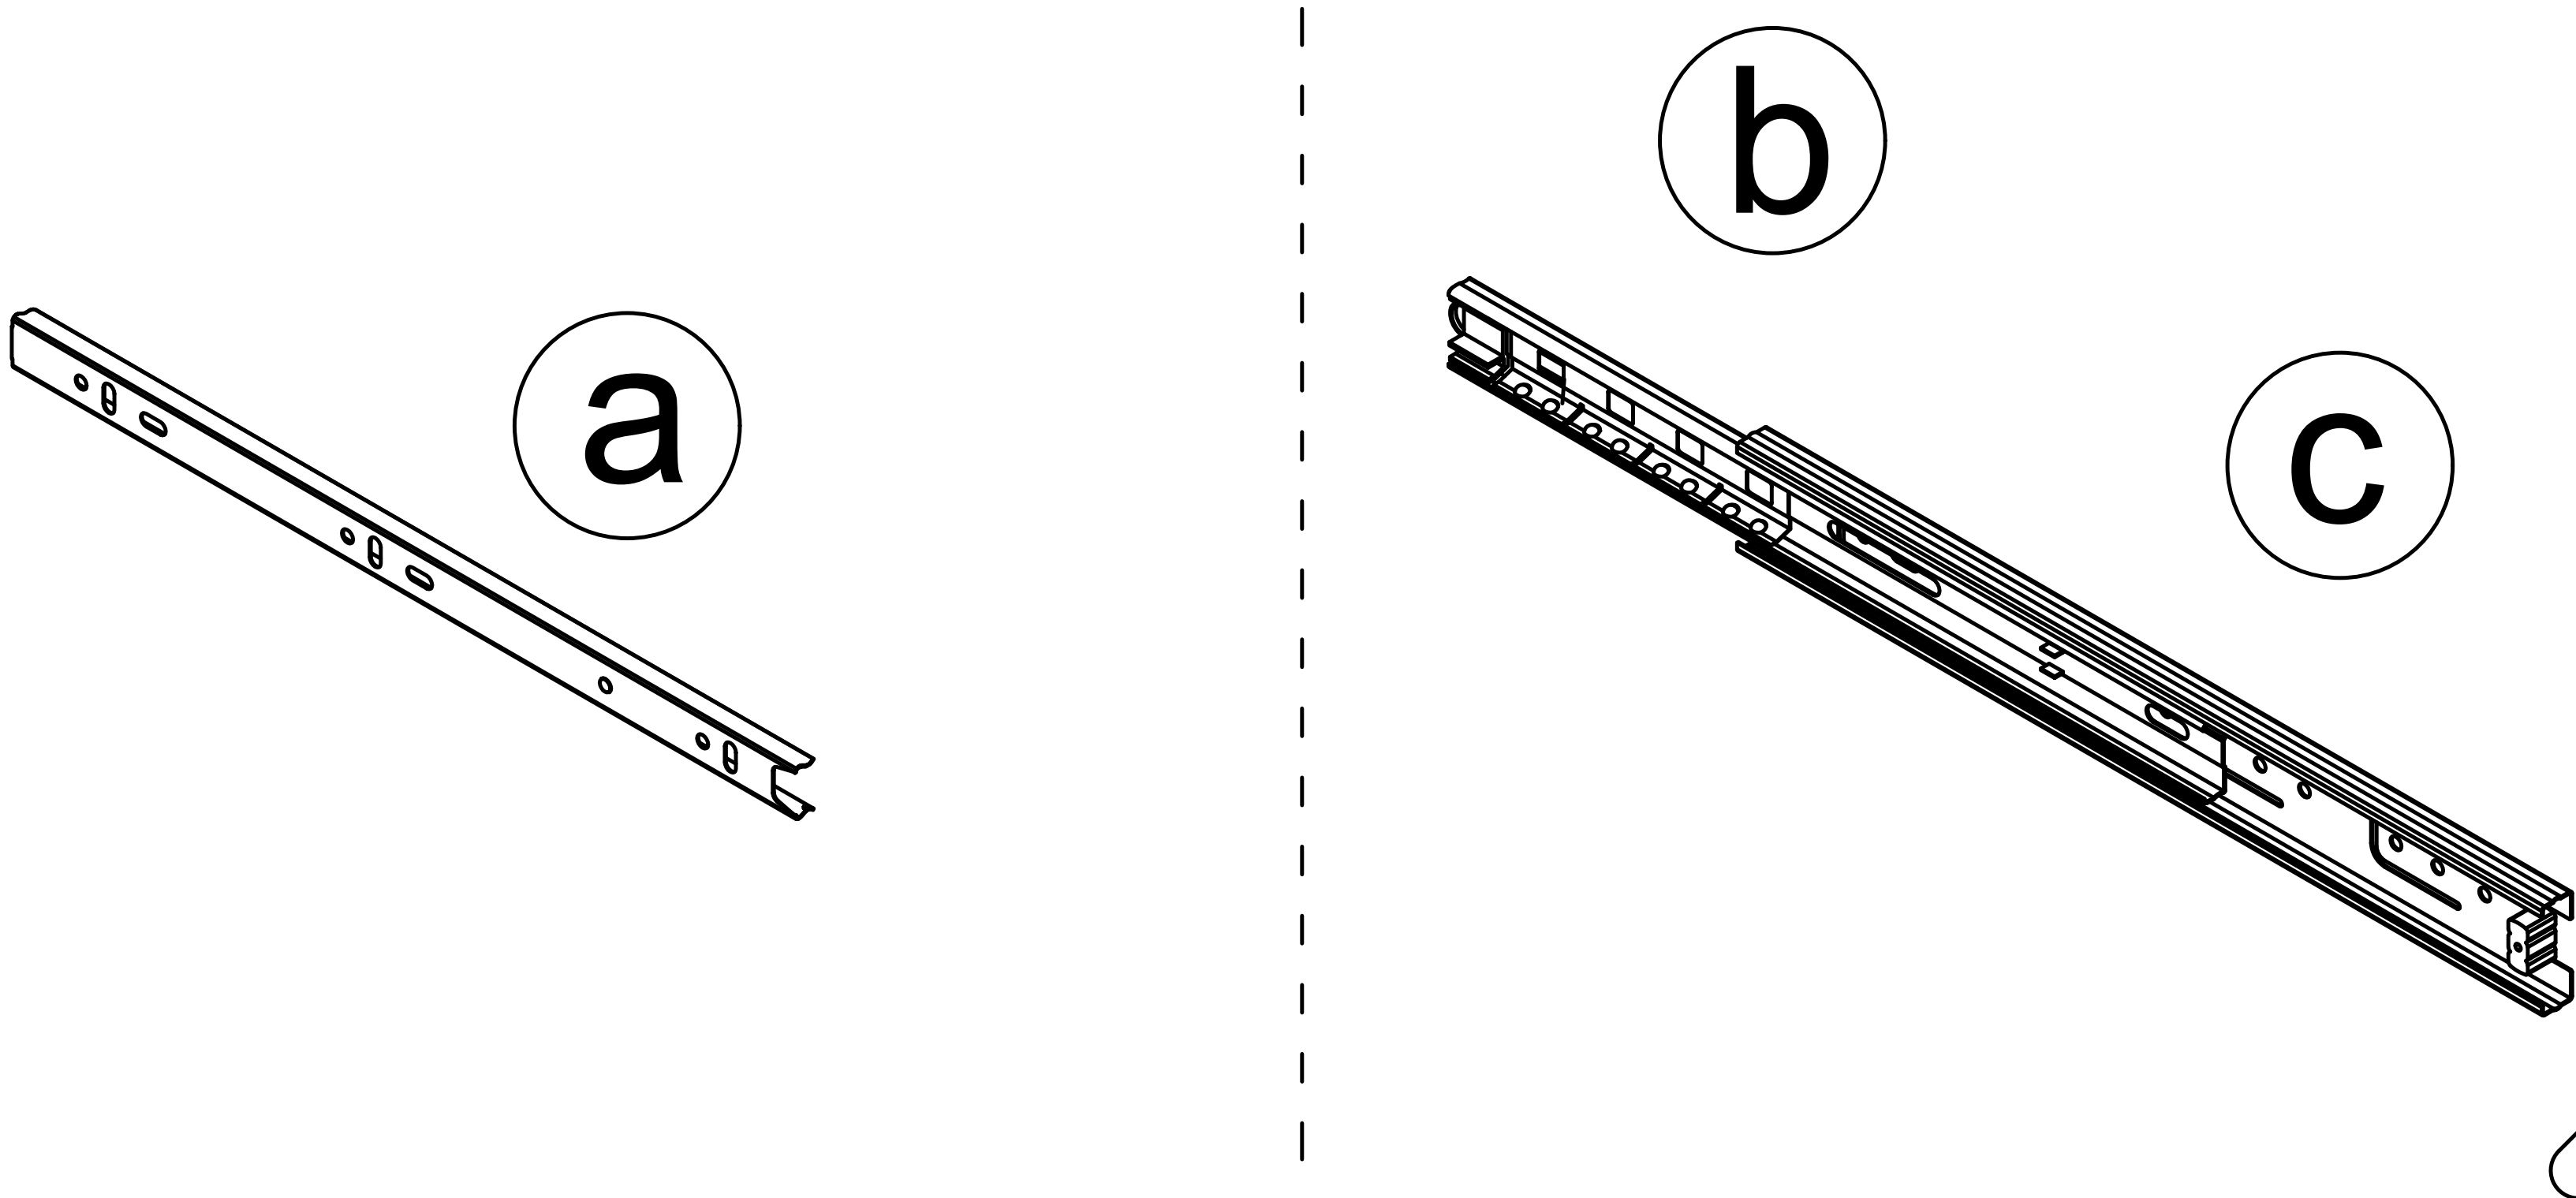



Step 6

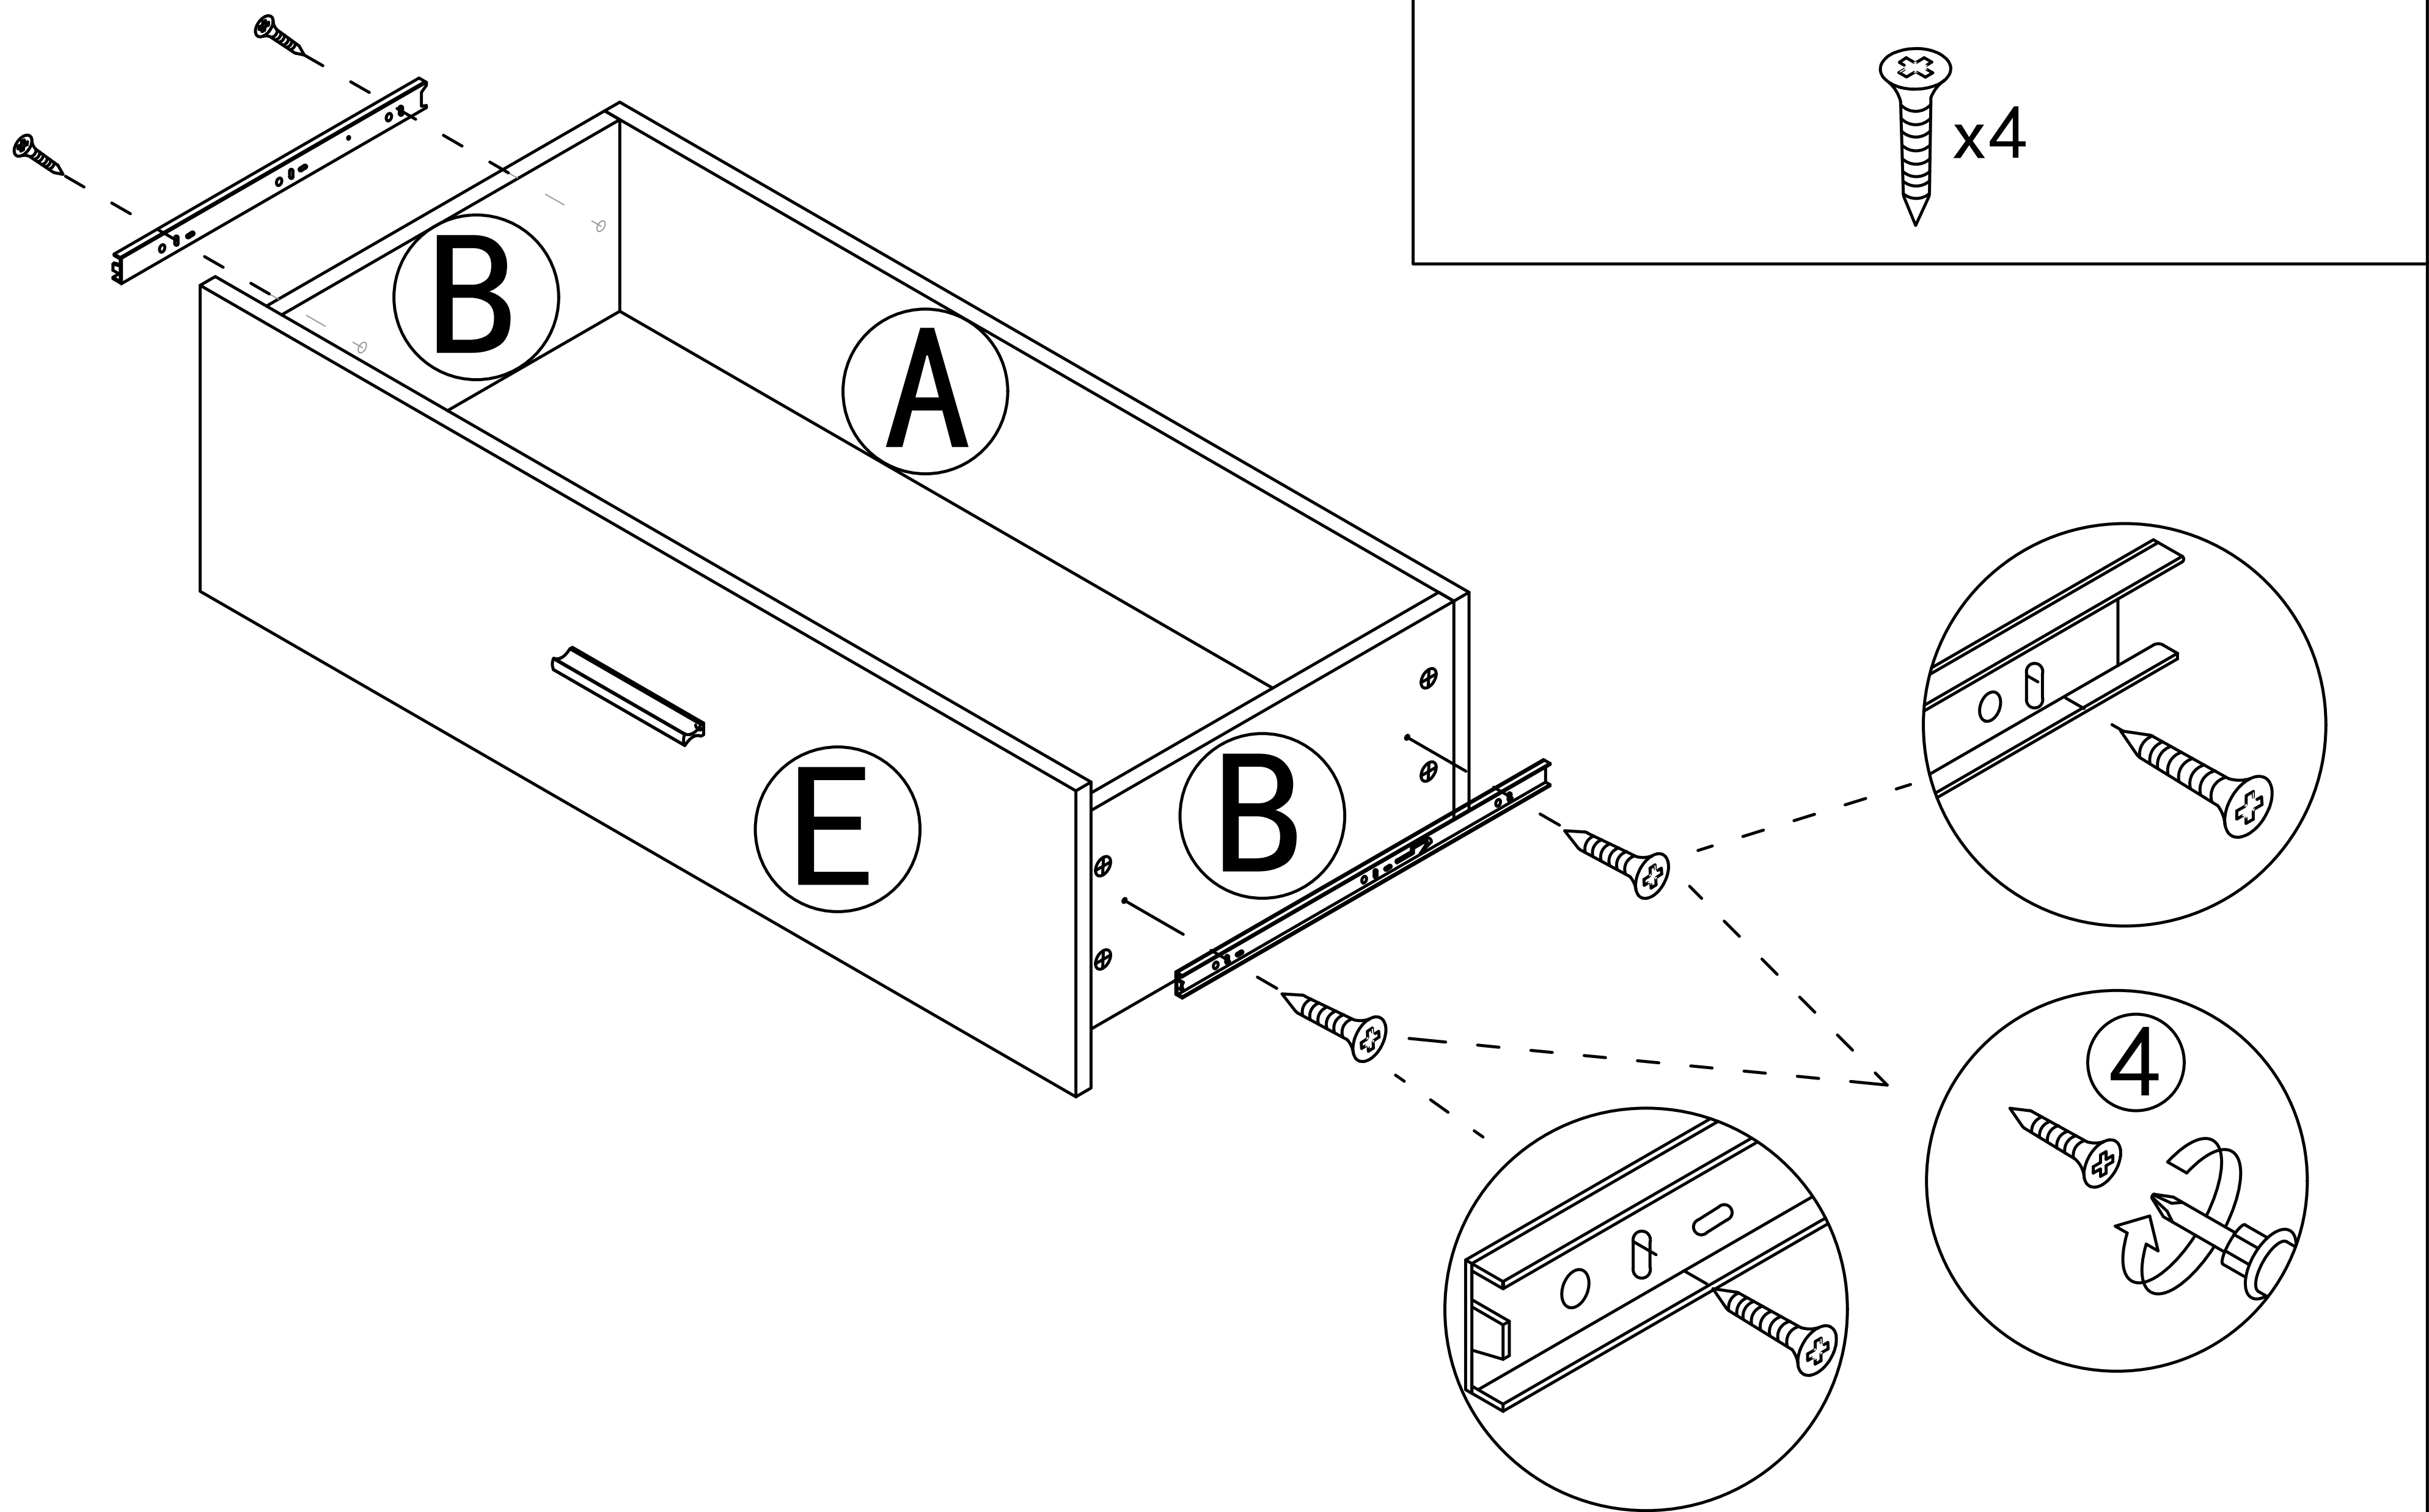



Step 7

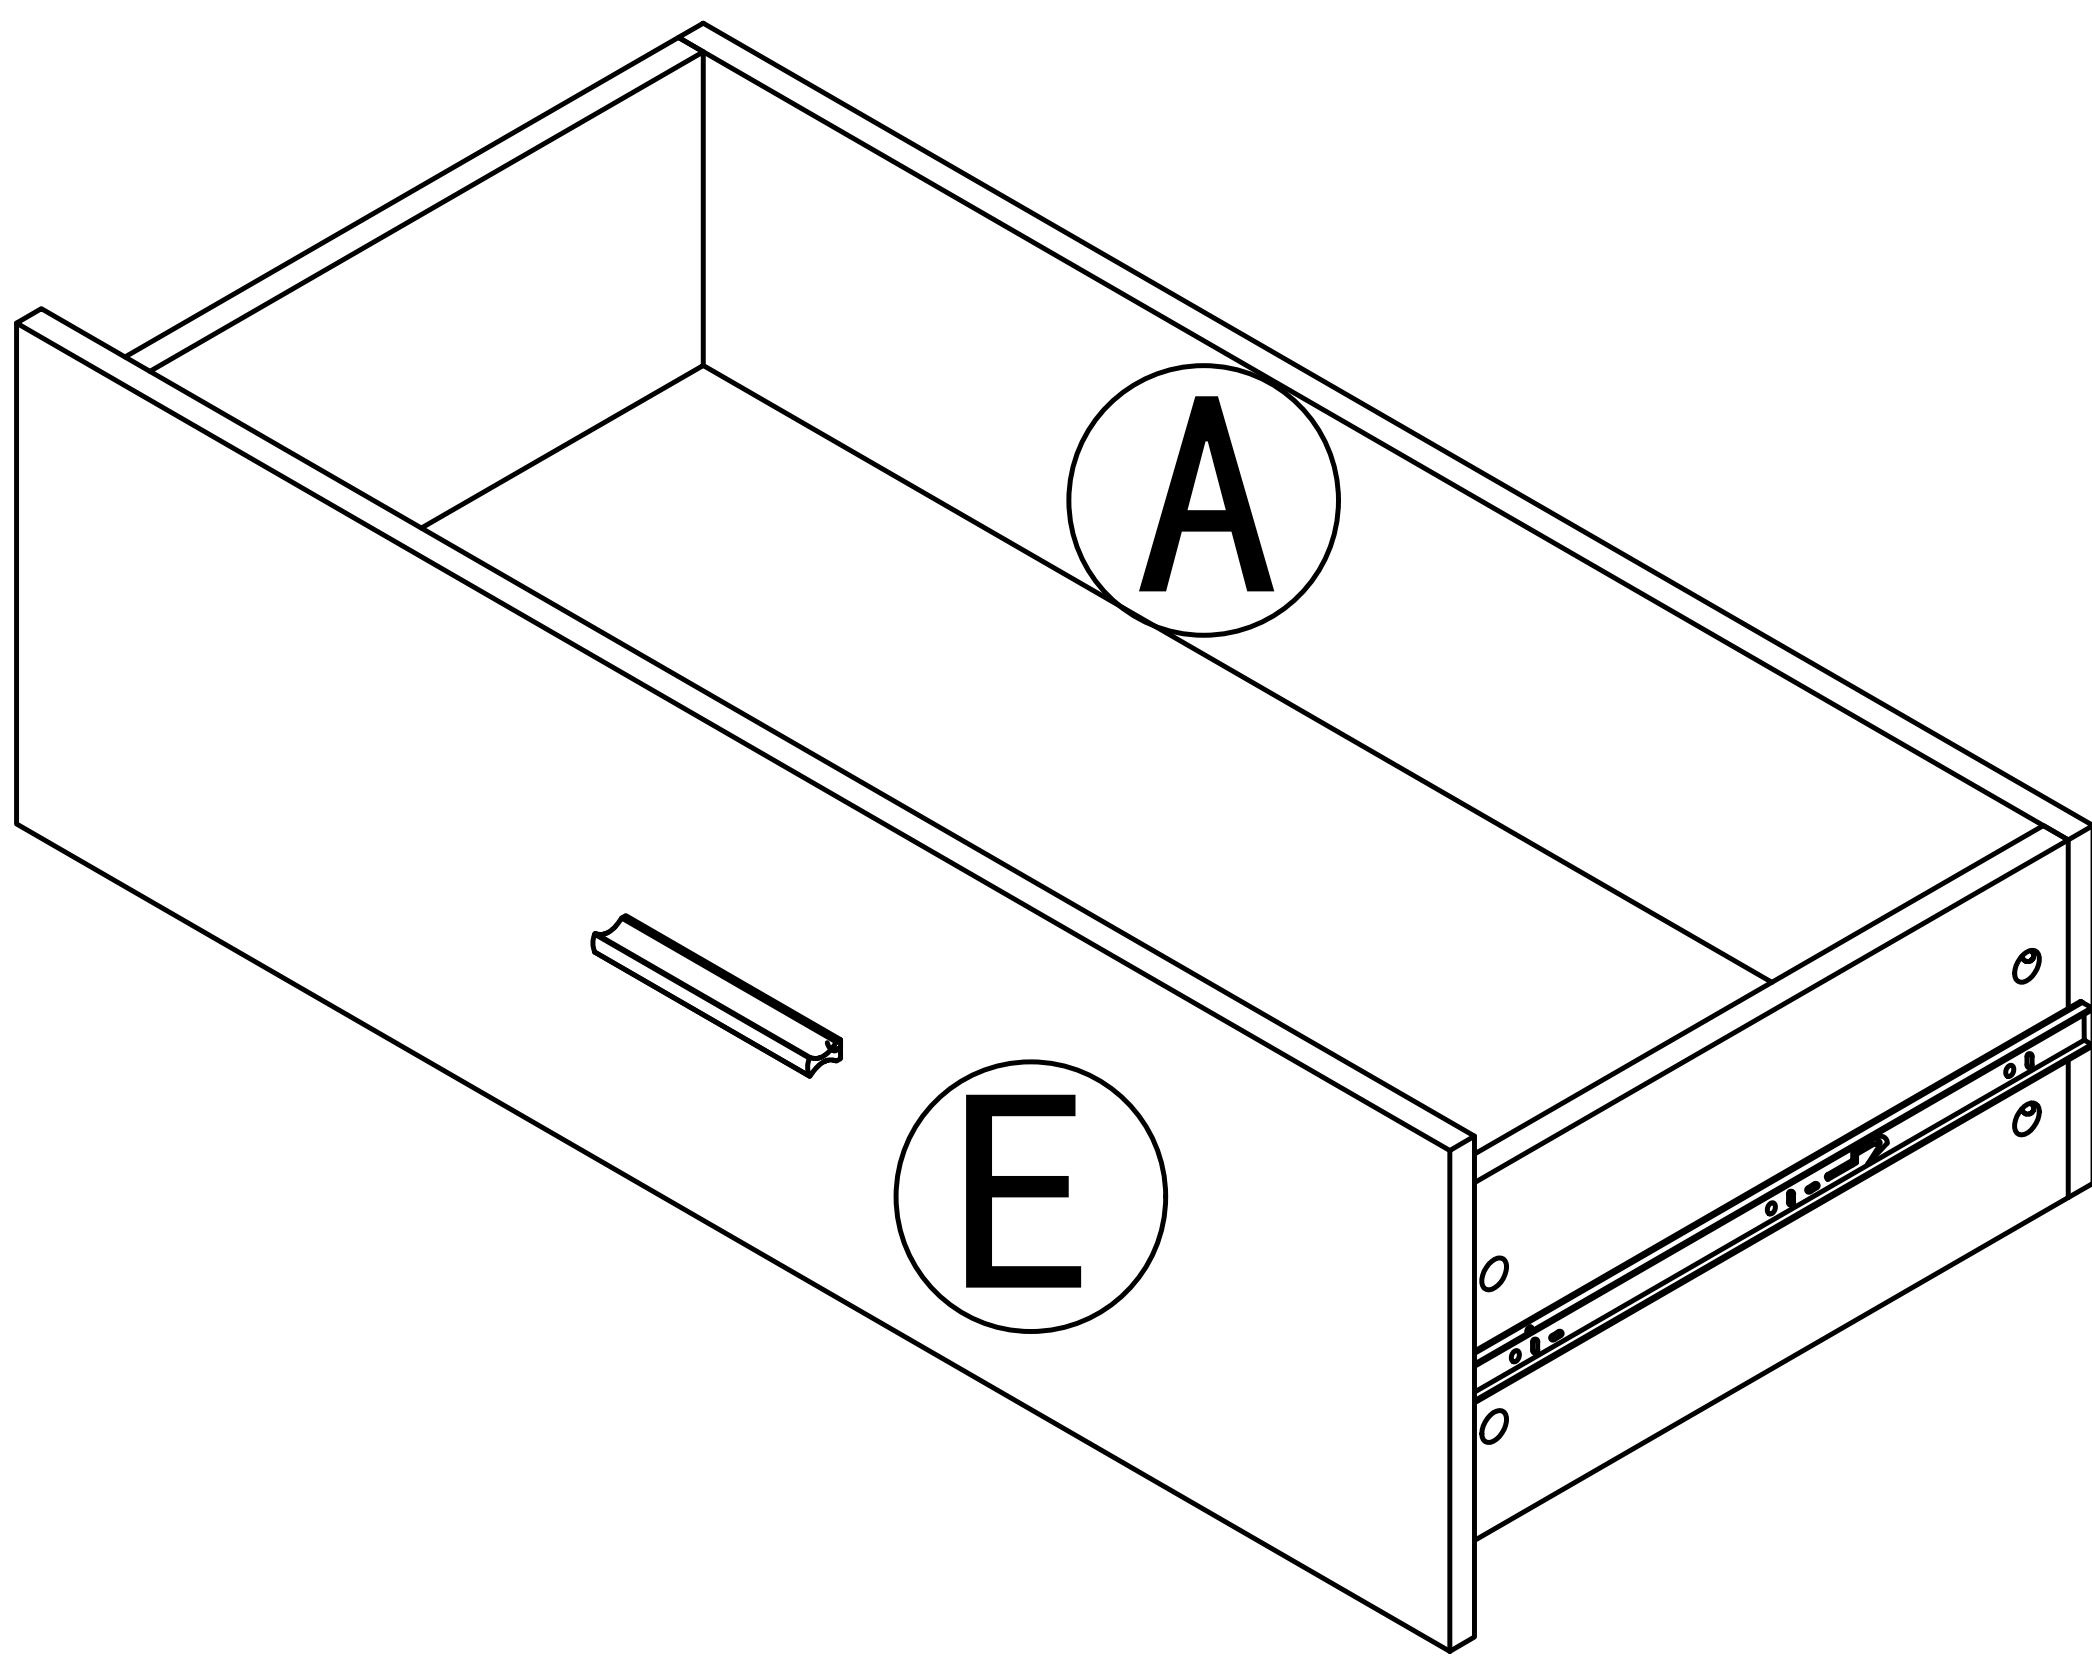

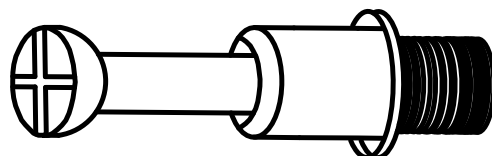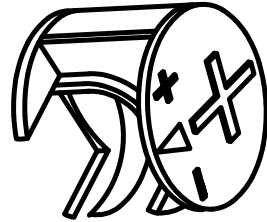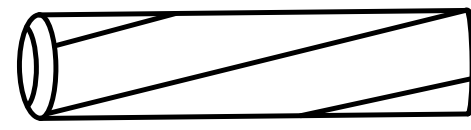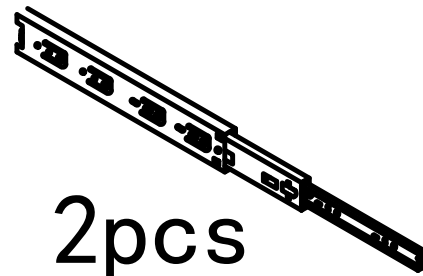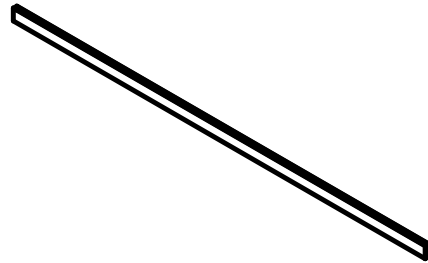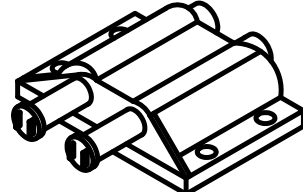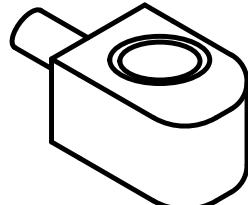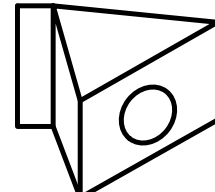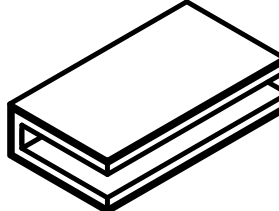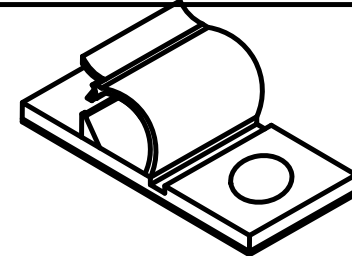
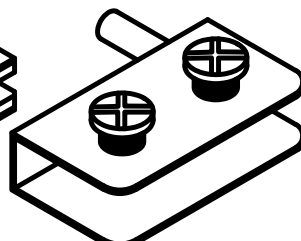
1		42pcs	2		42pcs	3	 x4
4	 2pcs	 6pcs	5		4pcs	6	 x2  x8
7	 x12	8		  x16	 x4		
9	 x1			 x4			
12	 x6						

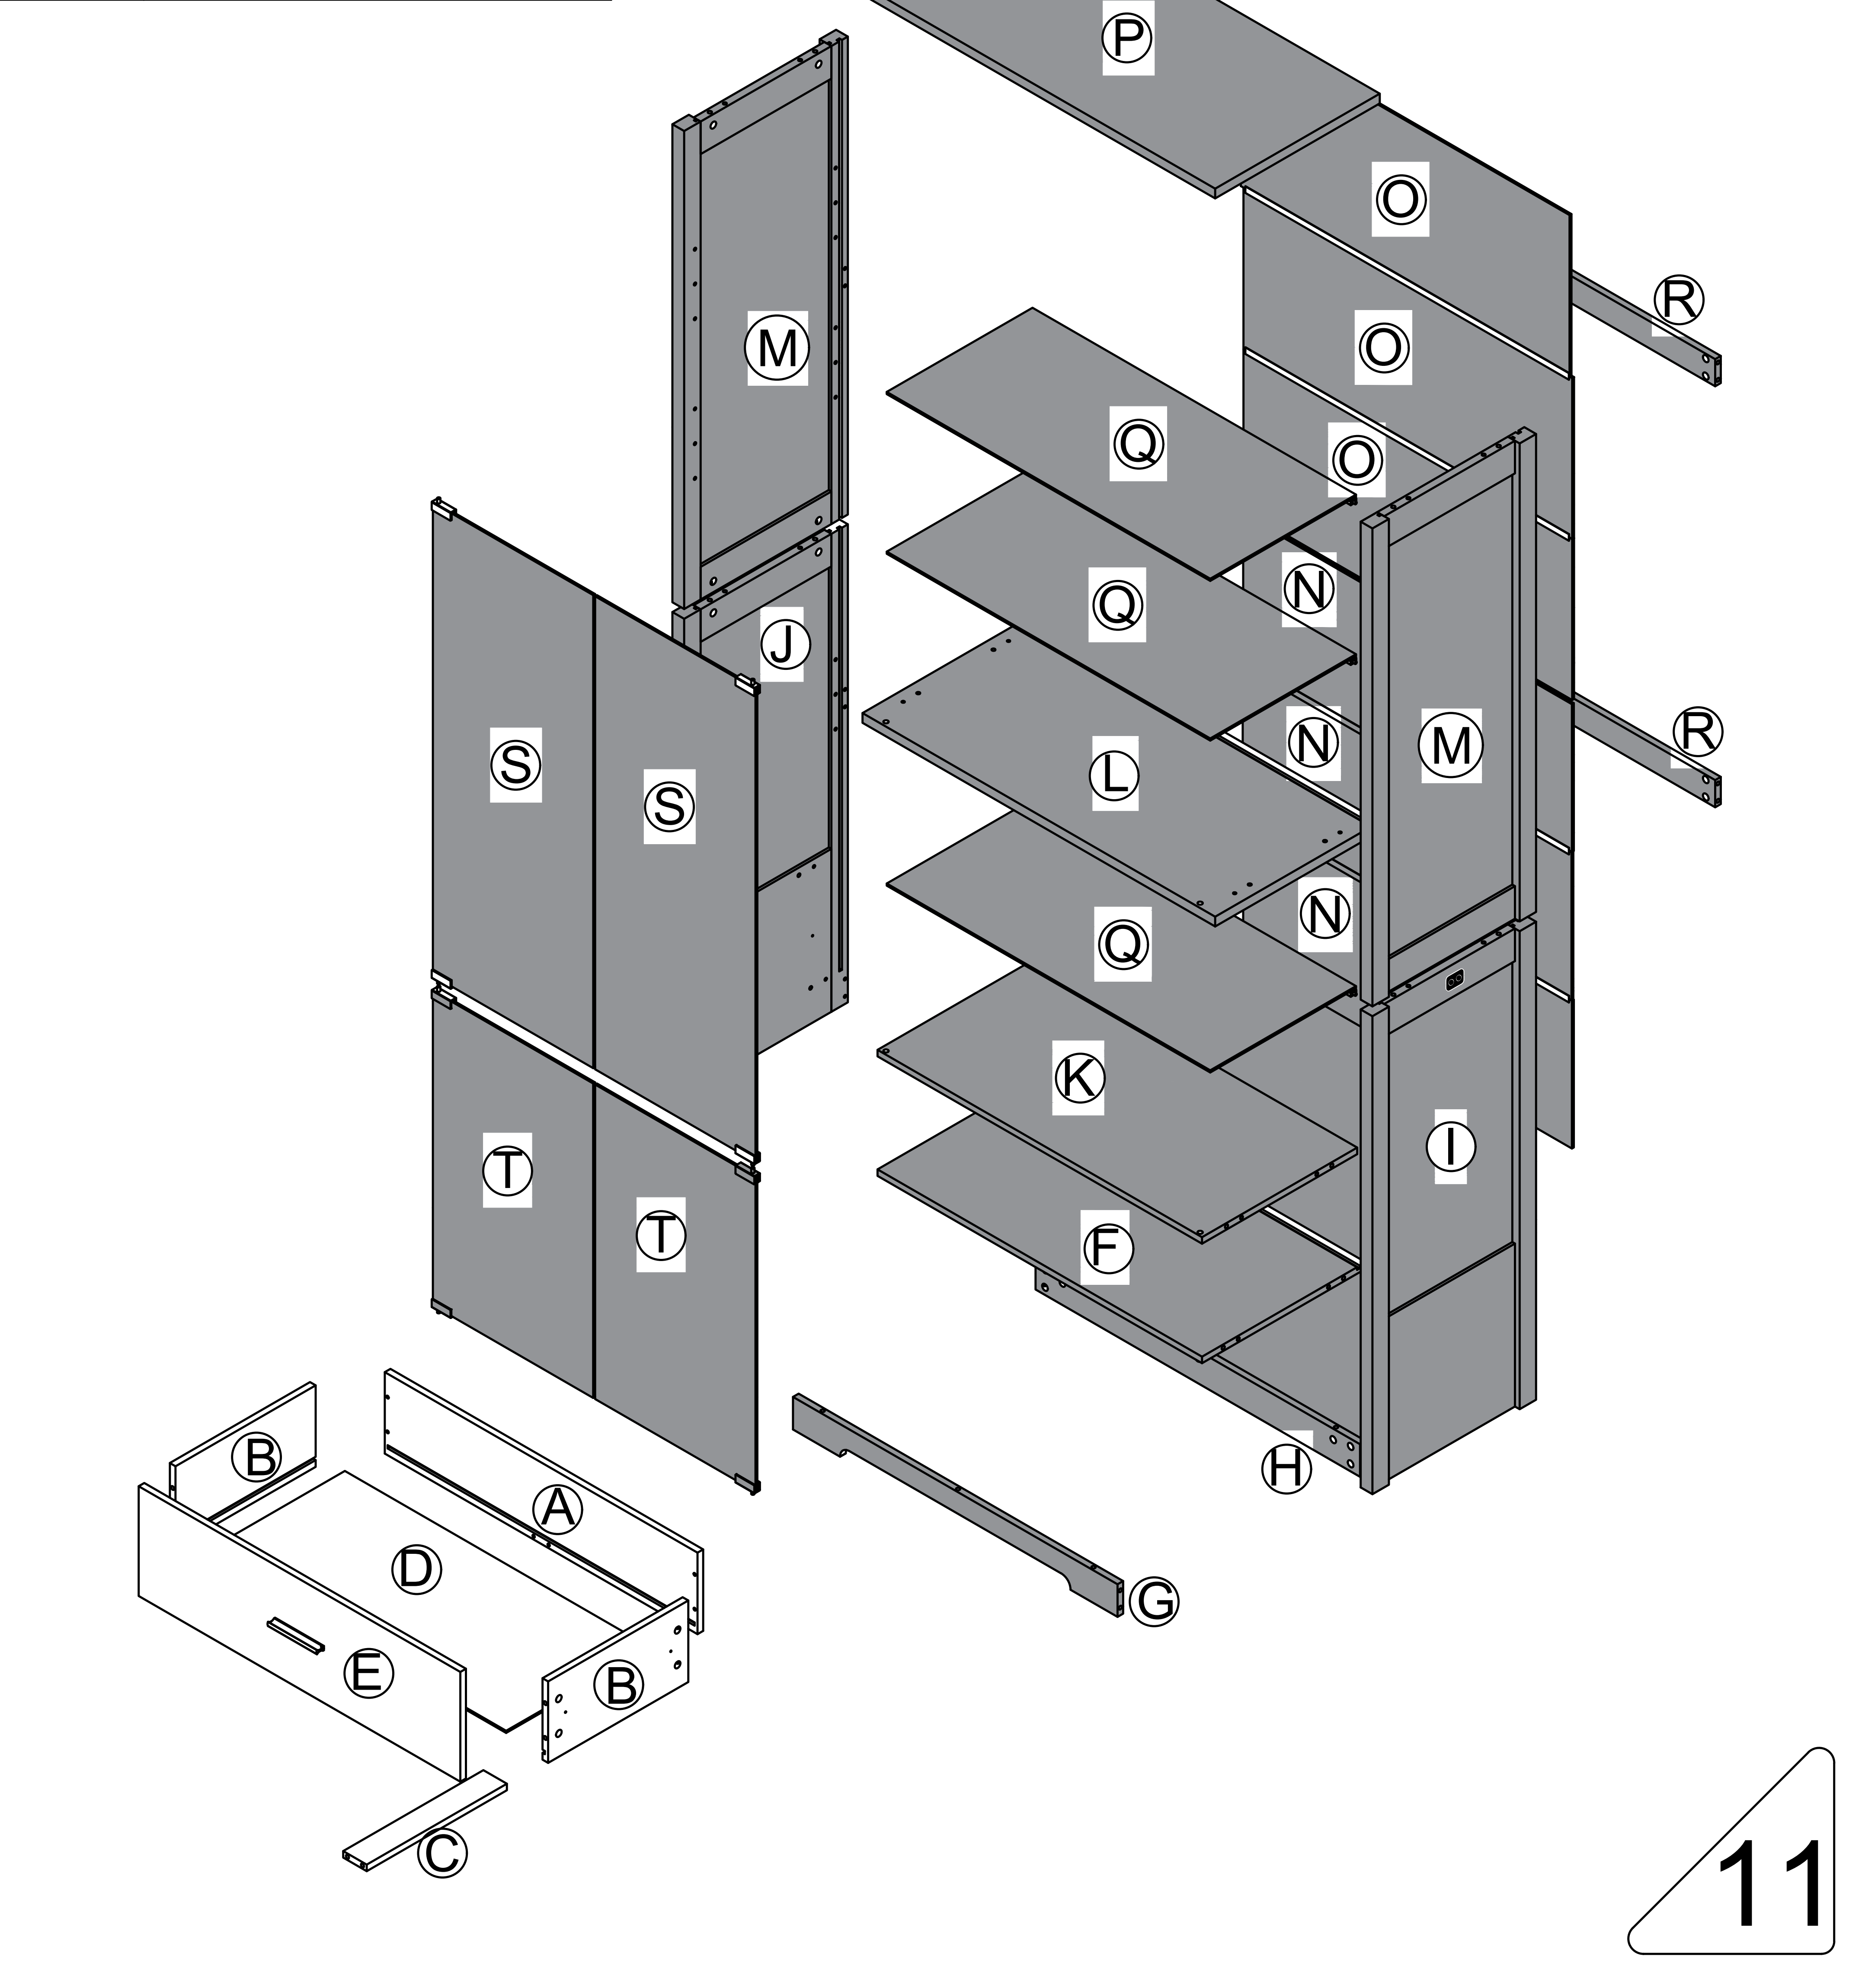

Step 8

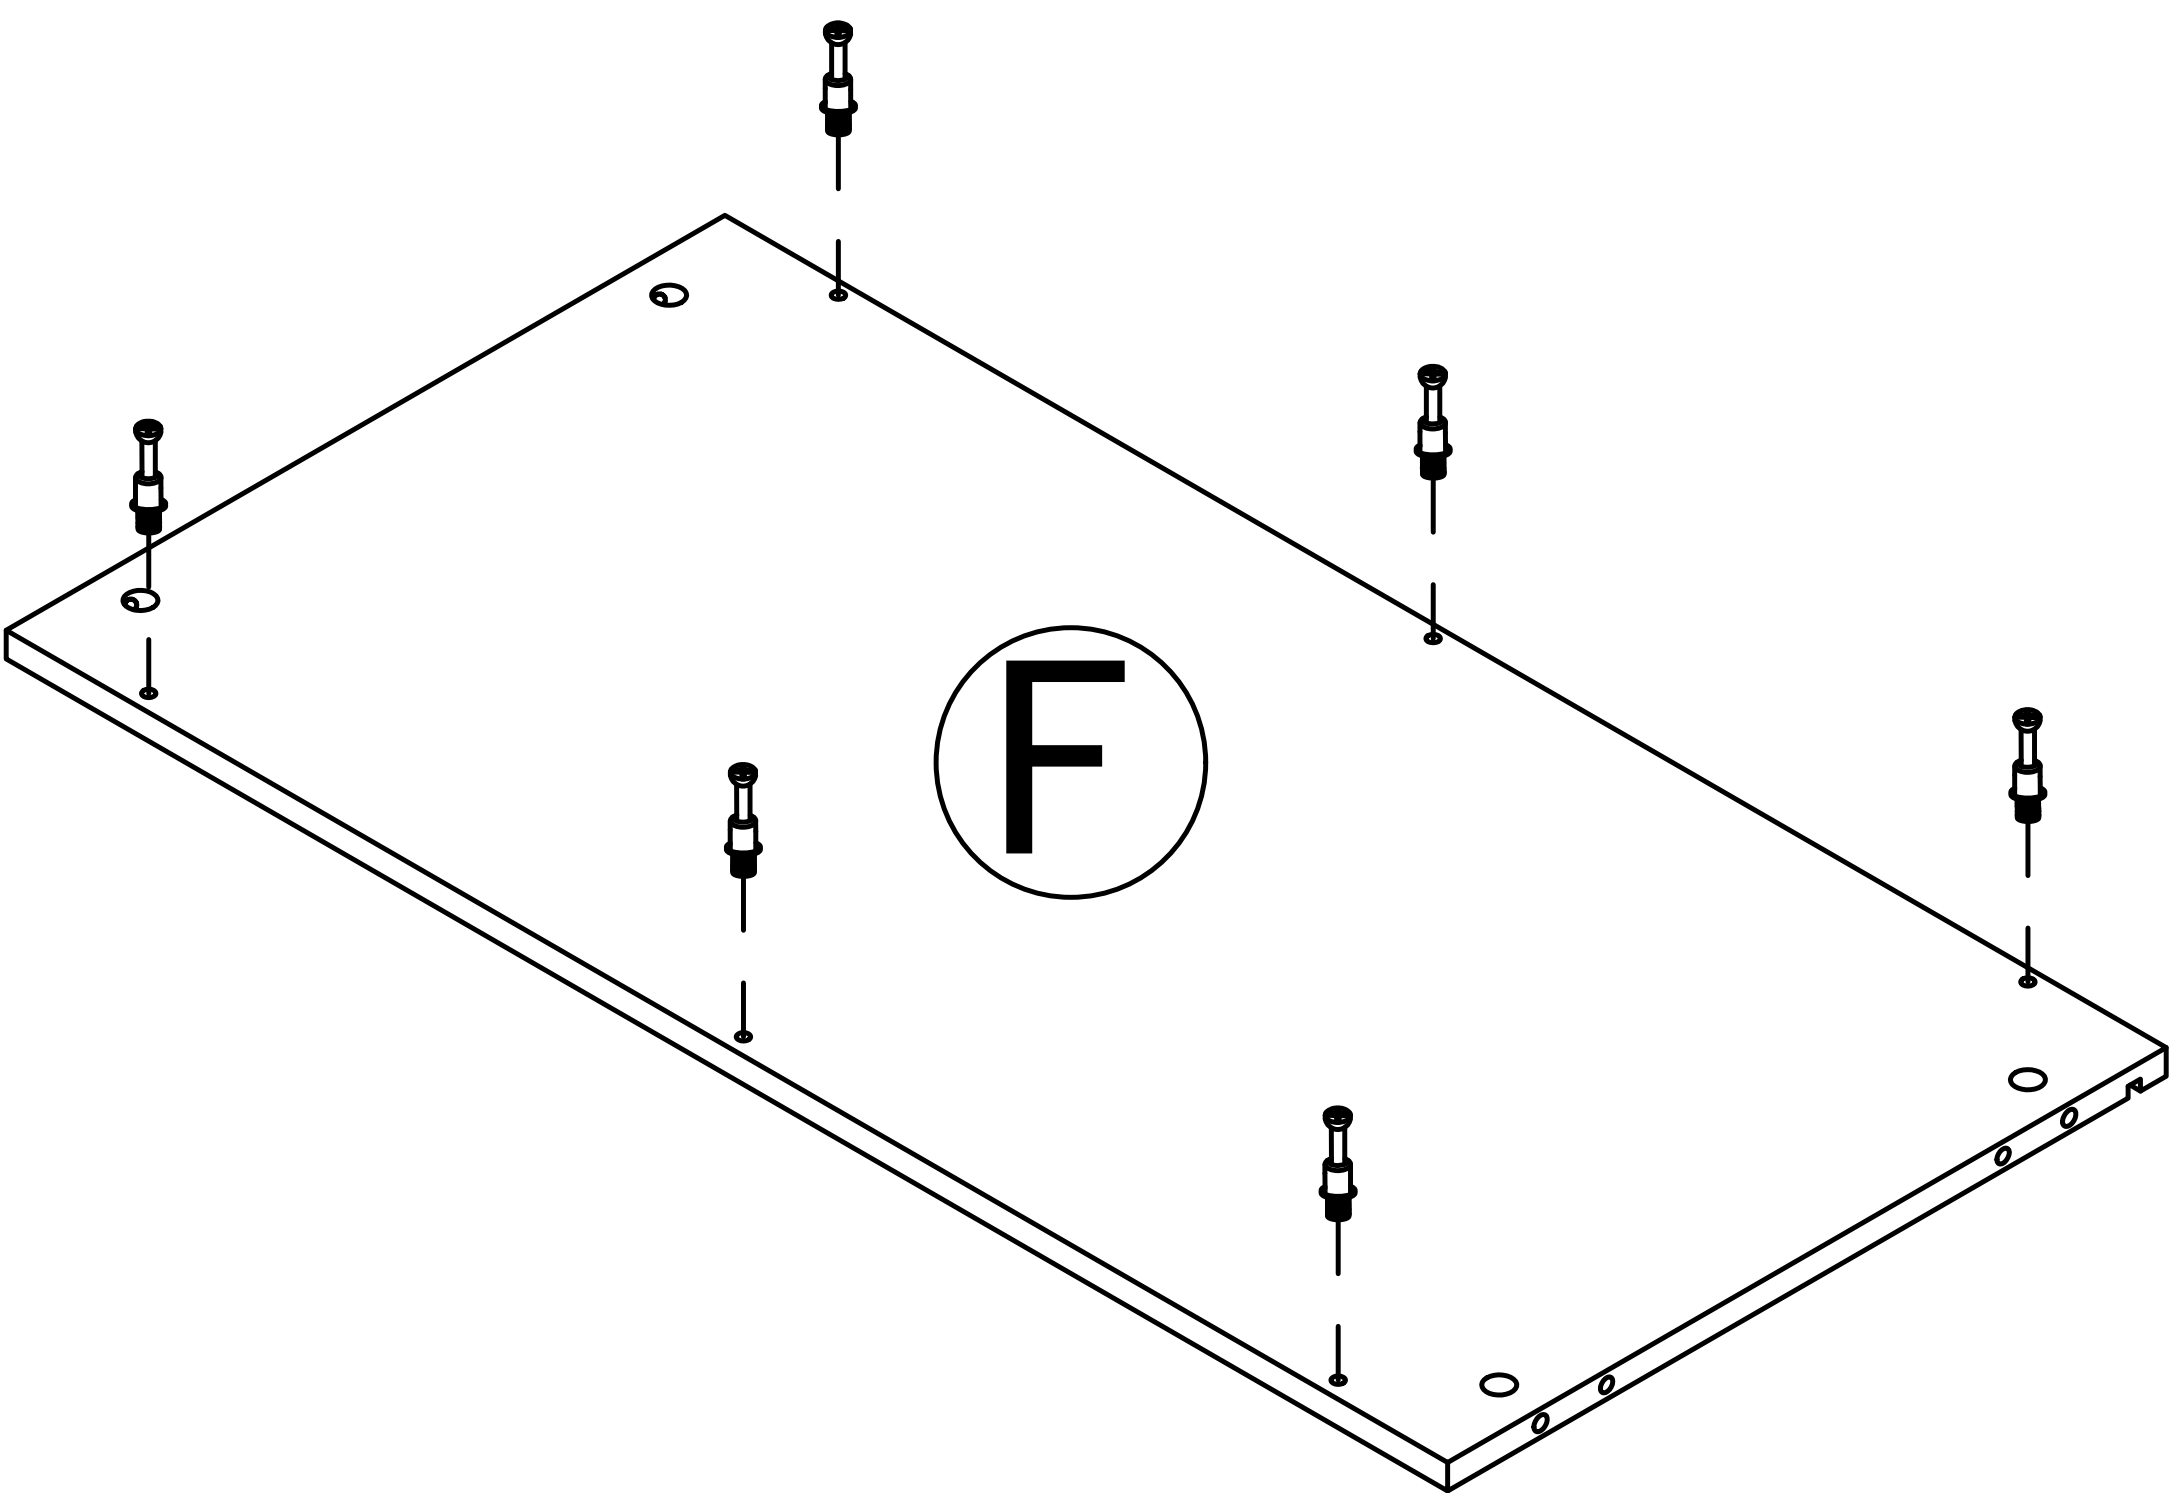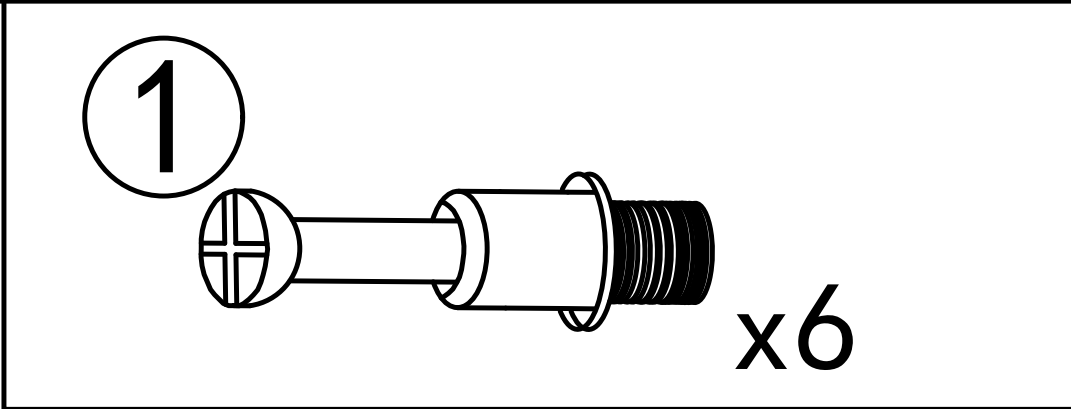



Step 9

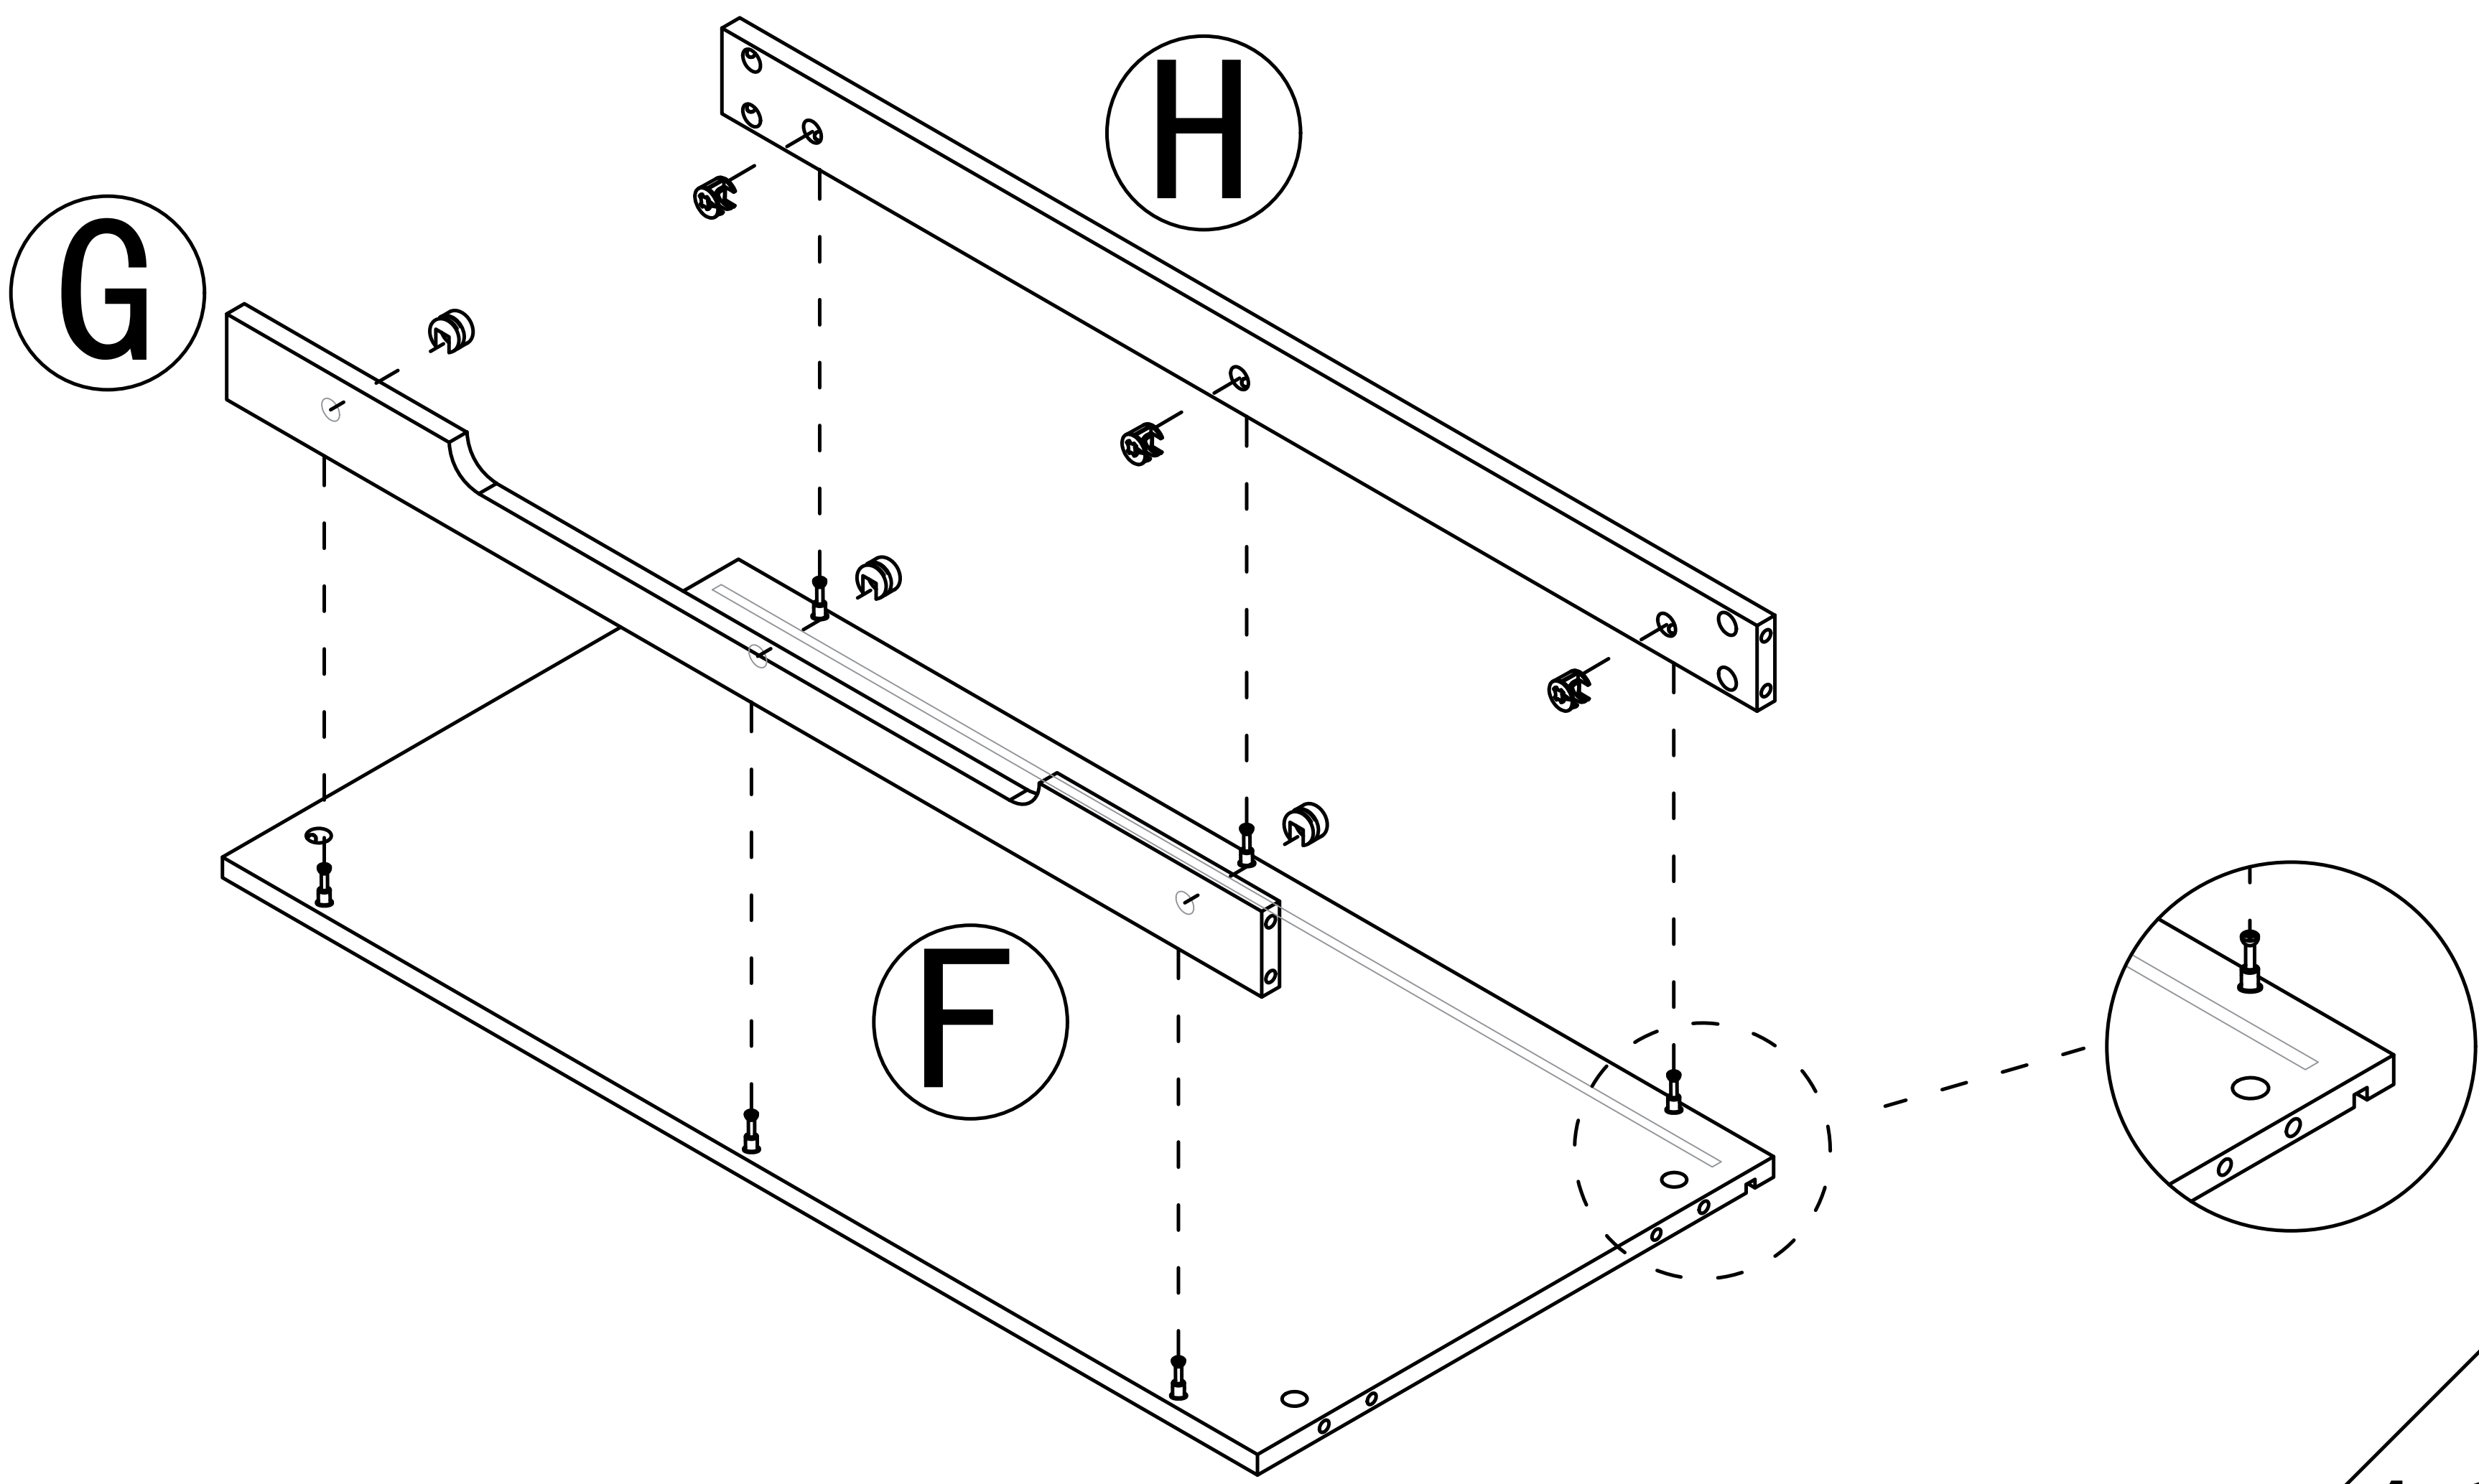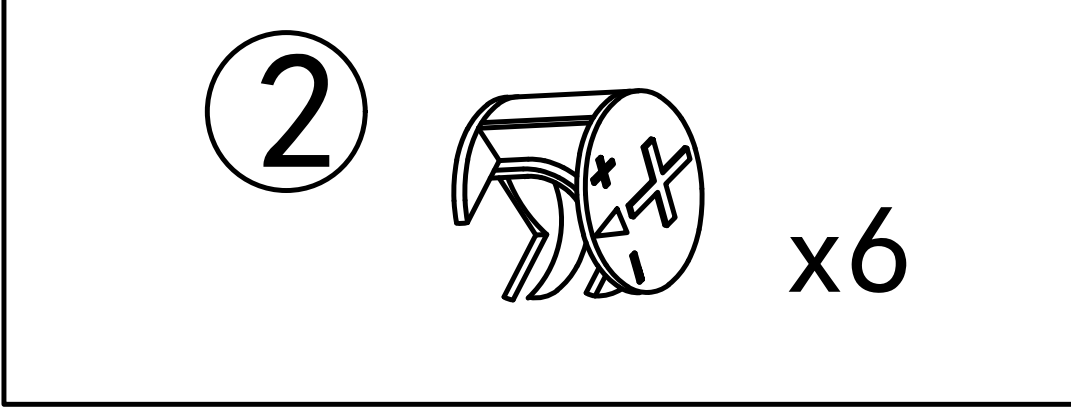

Pay attention to the position of the back slot.



Step 10

This hole is for strengthening fixed hole customers can choose to install according to their needs.

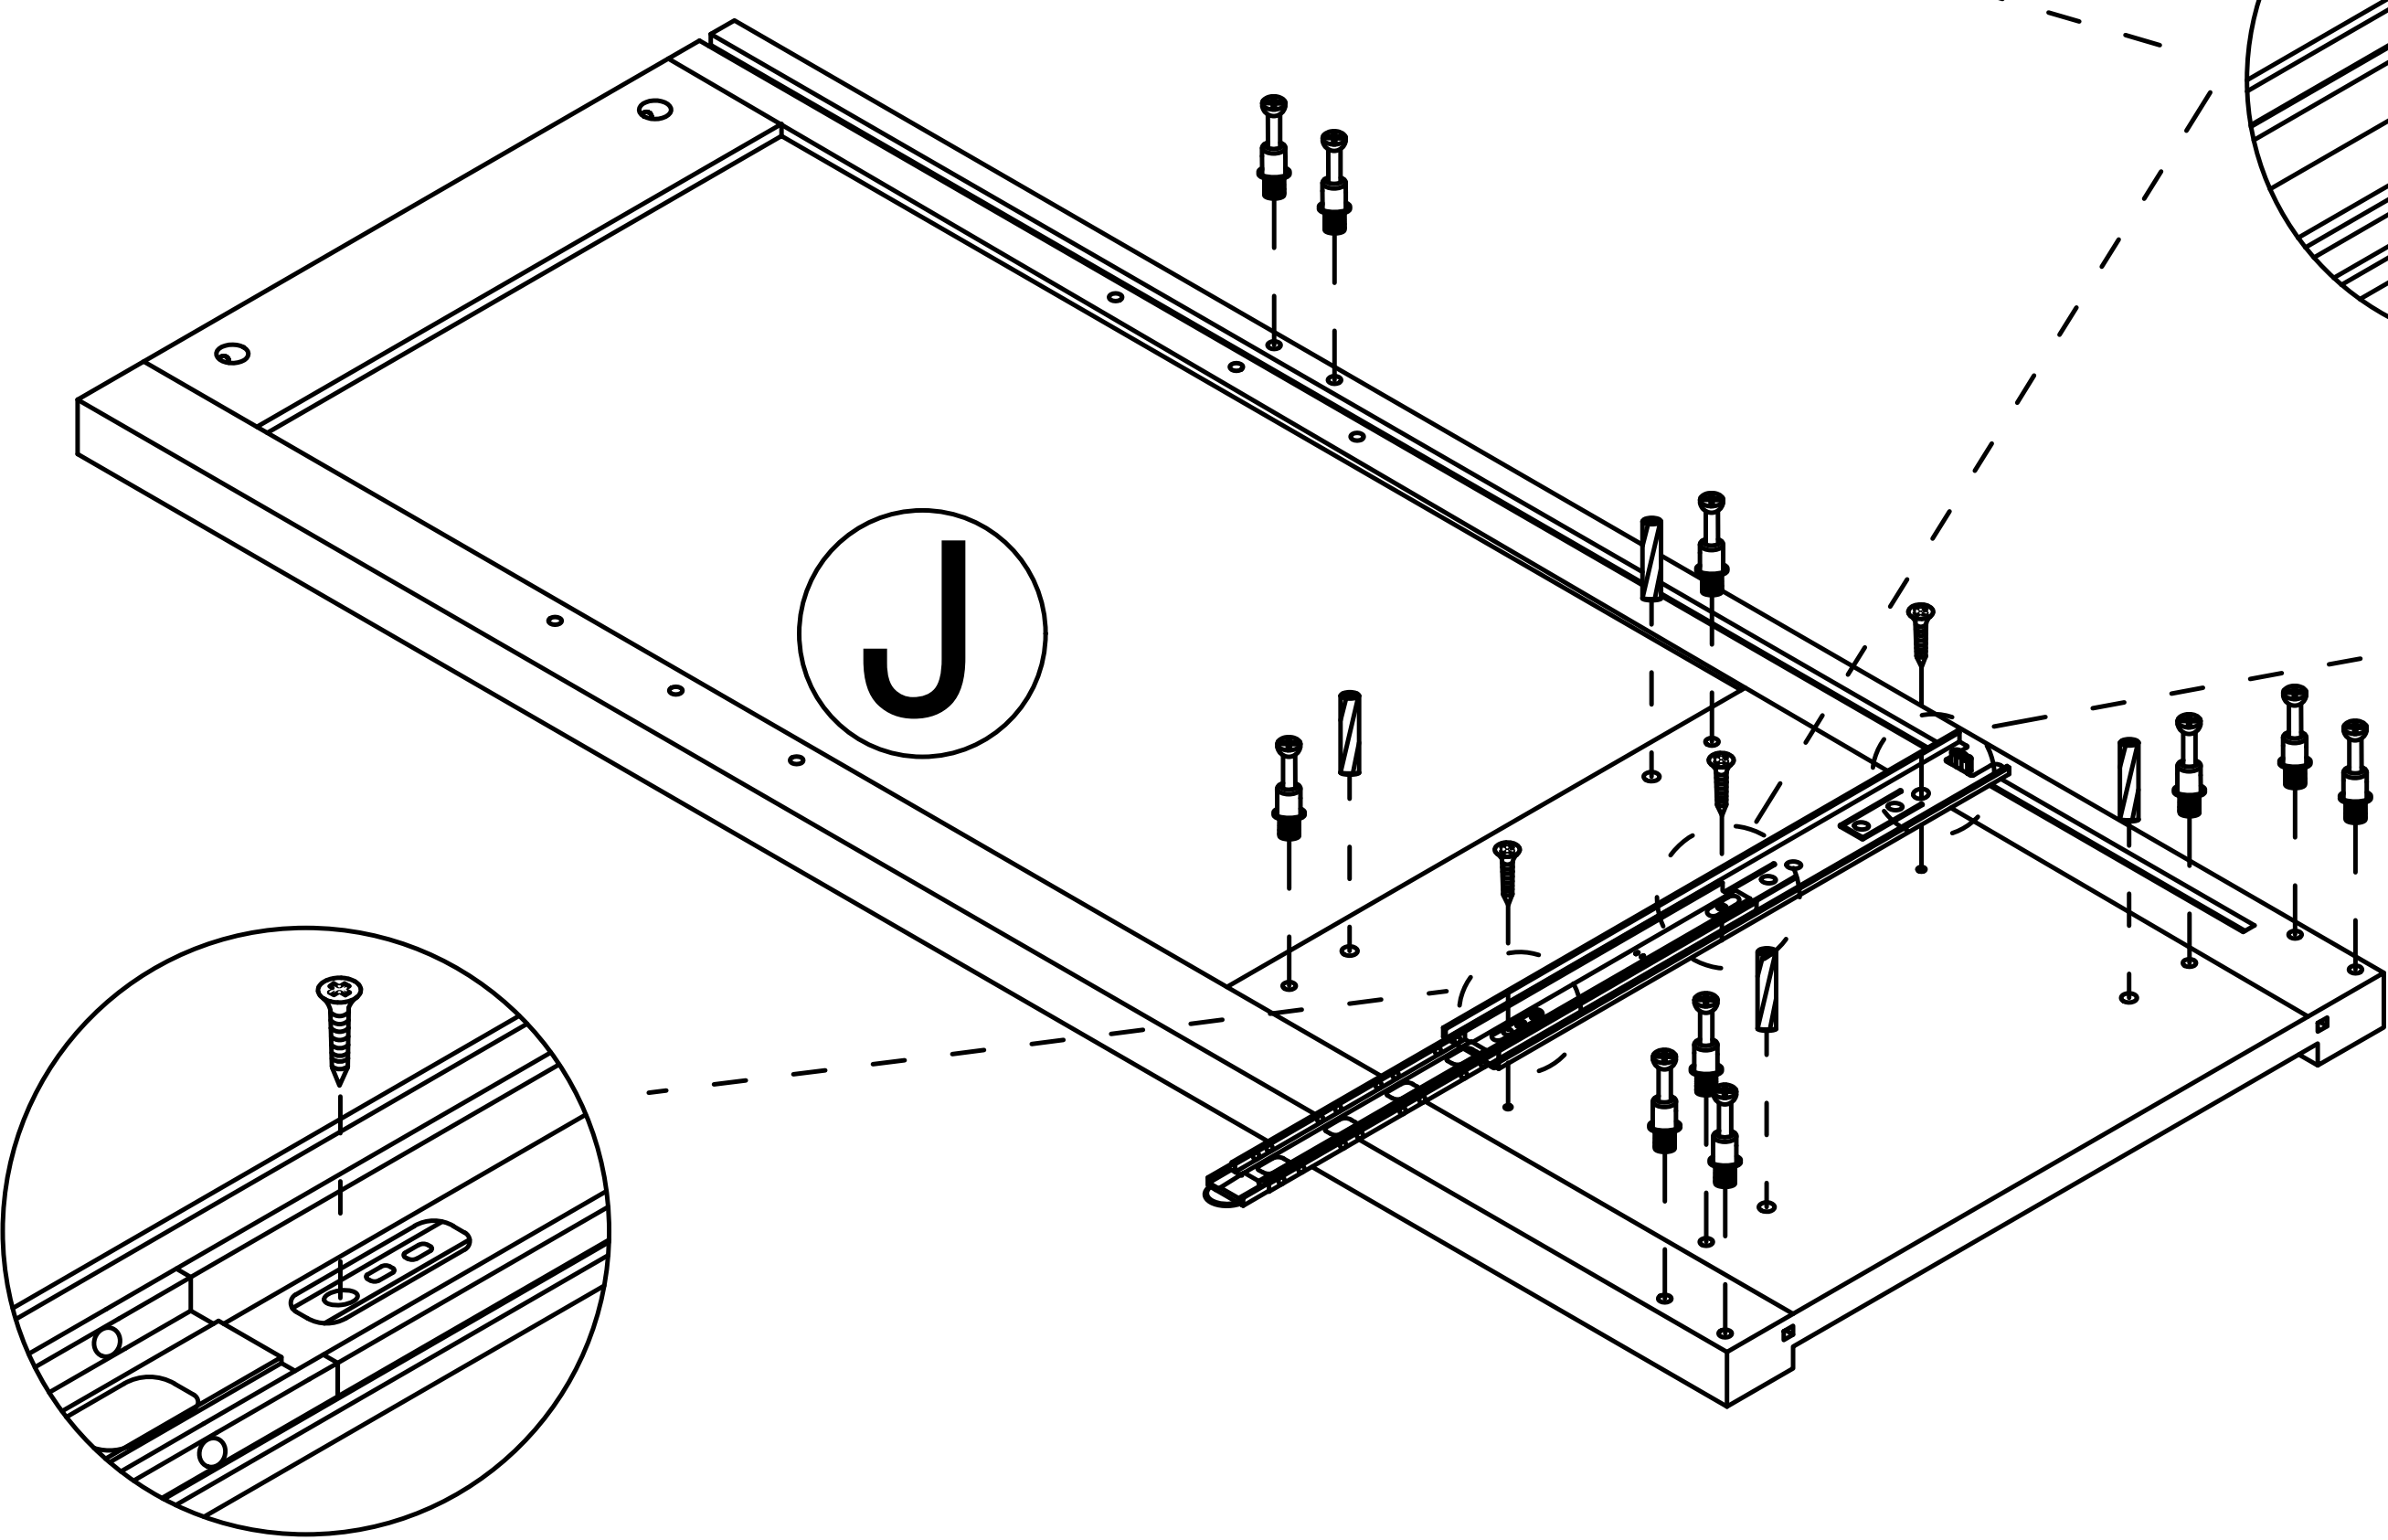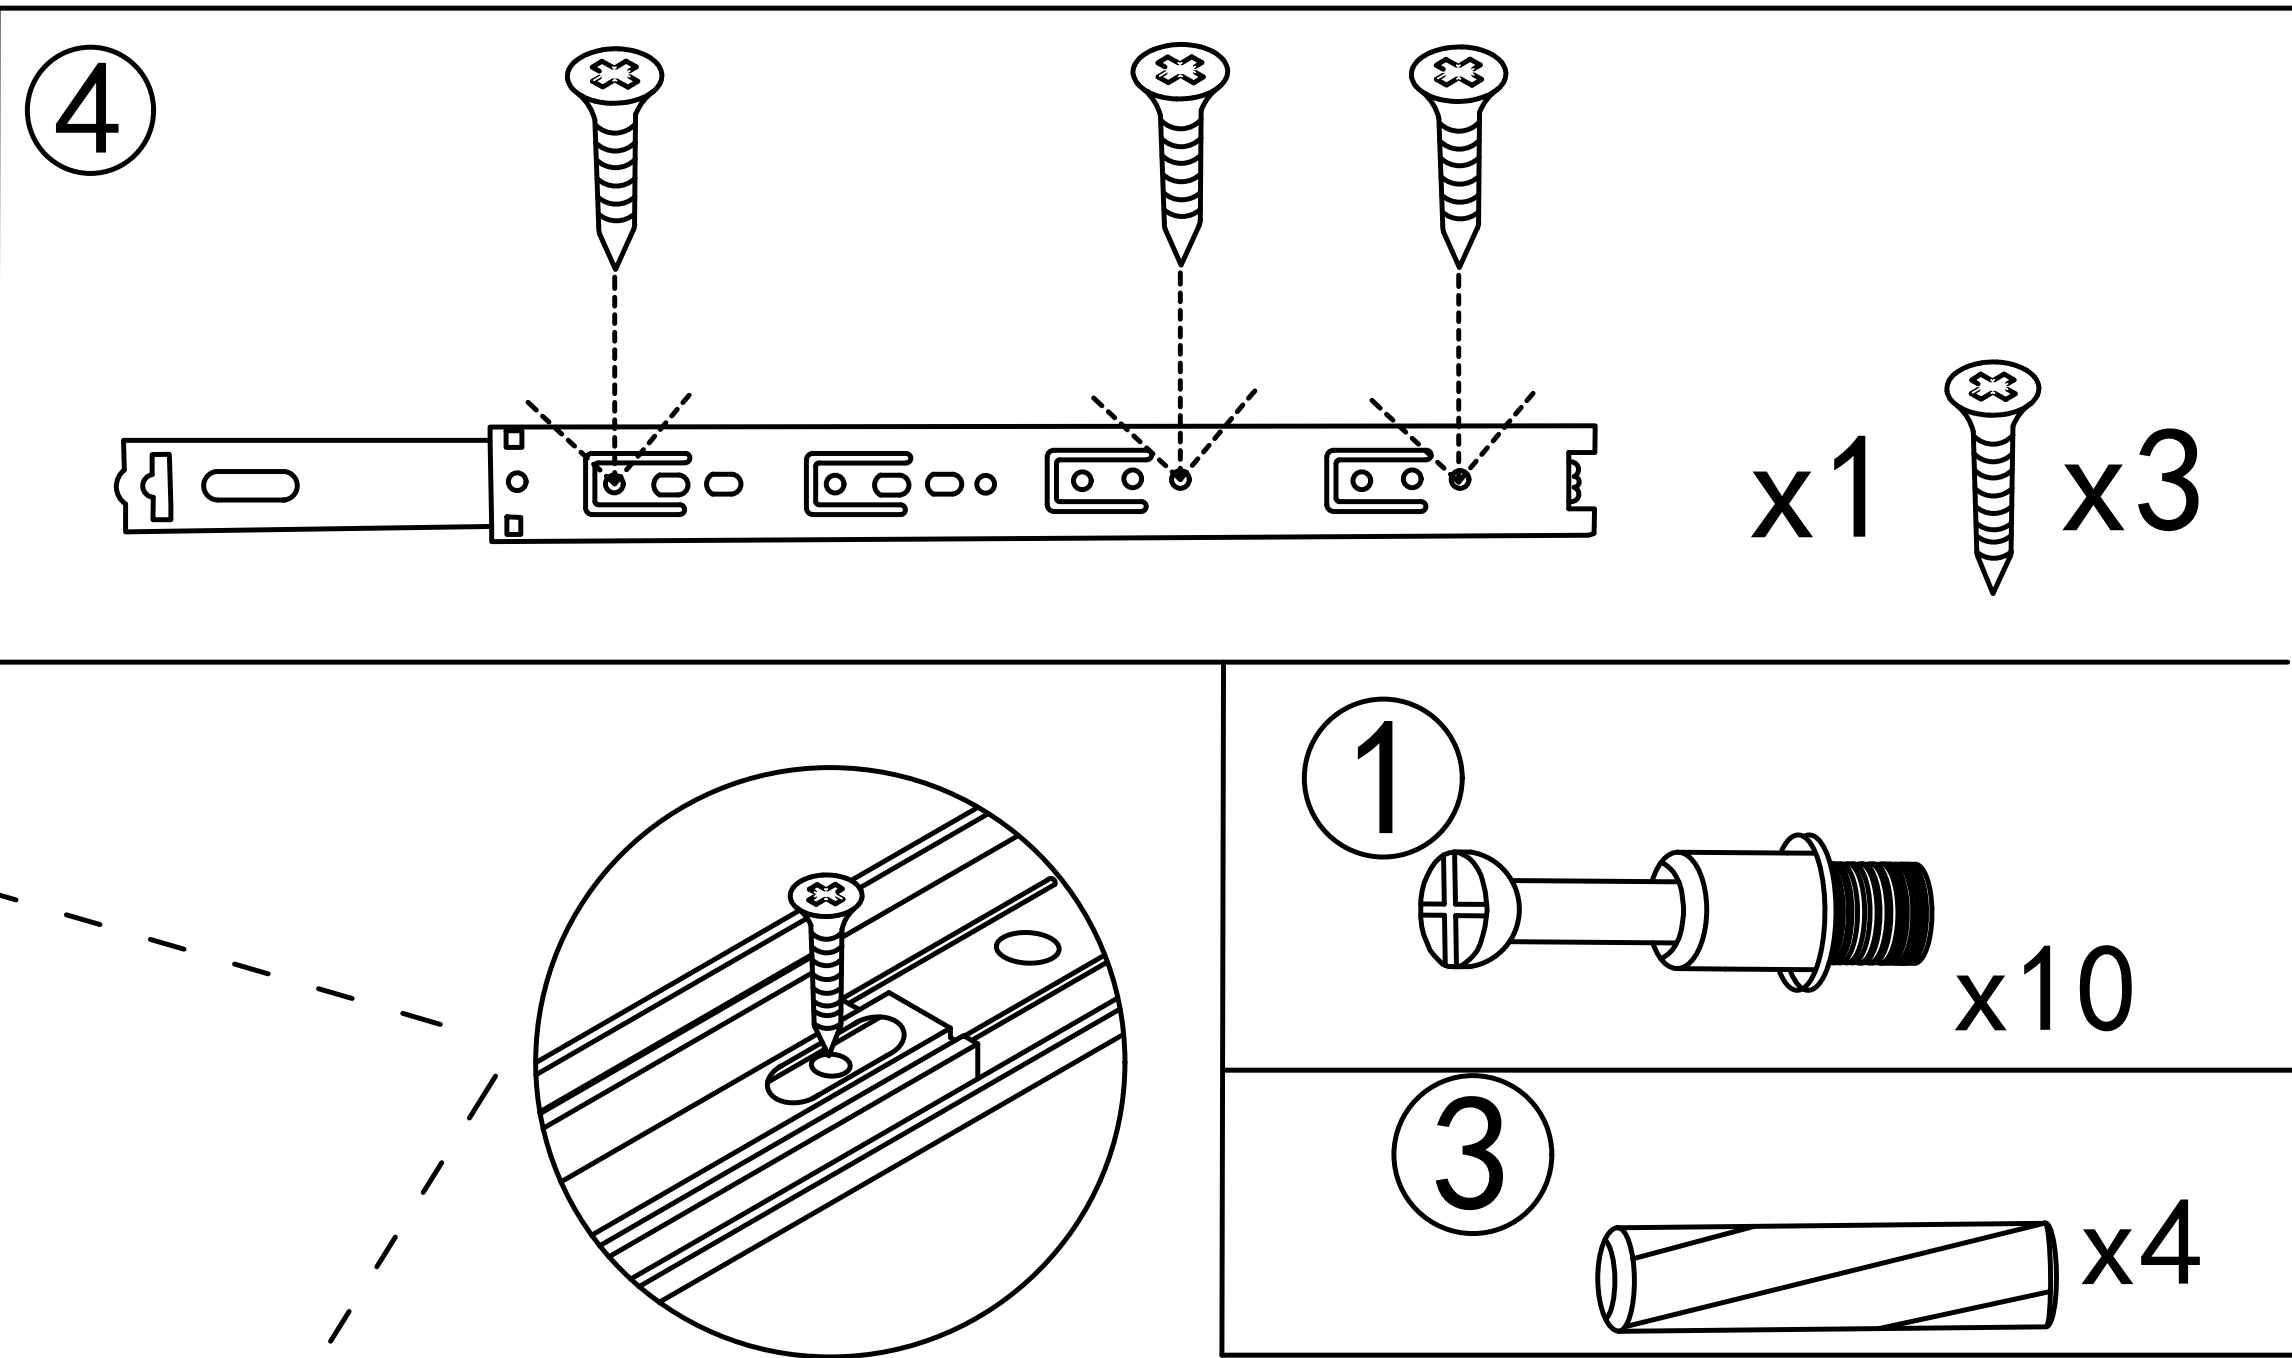



Step 11

This hole is for strengthening fixed hole customers can choose to install according to their needs.

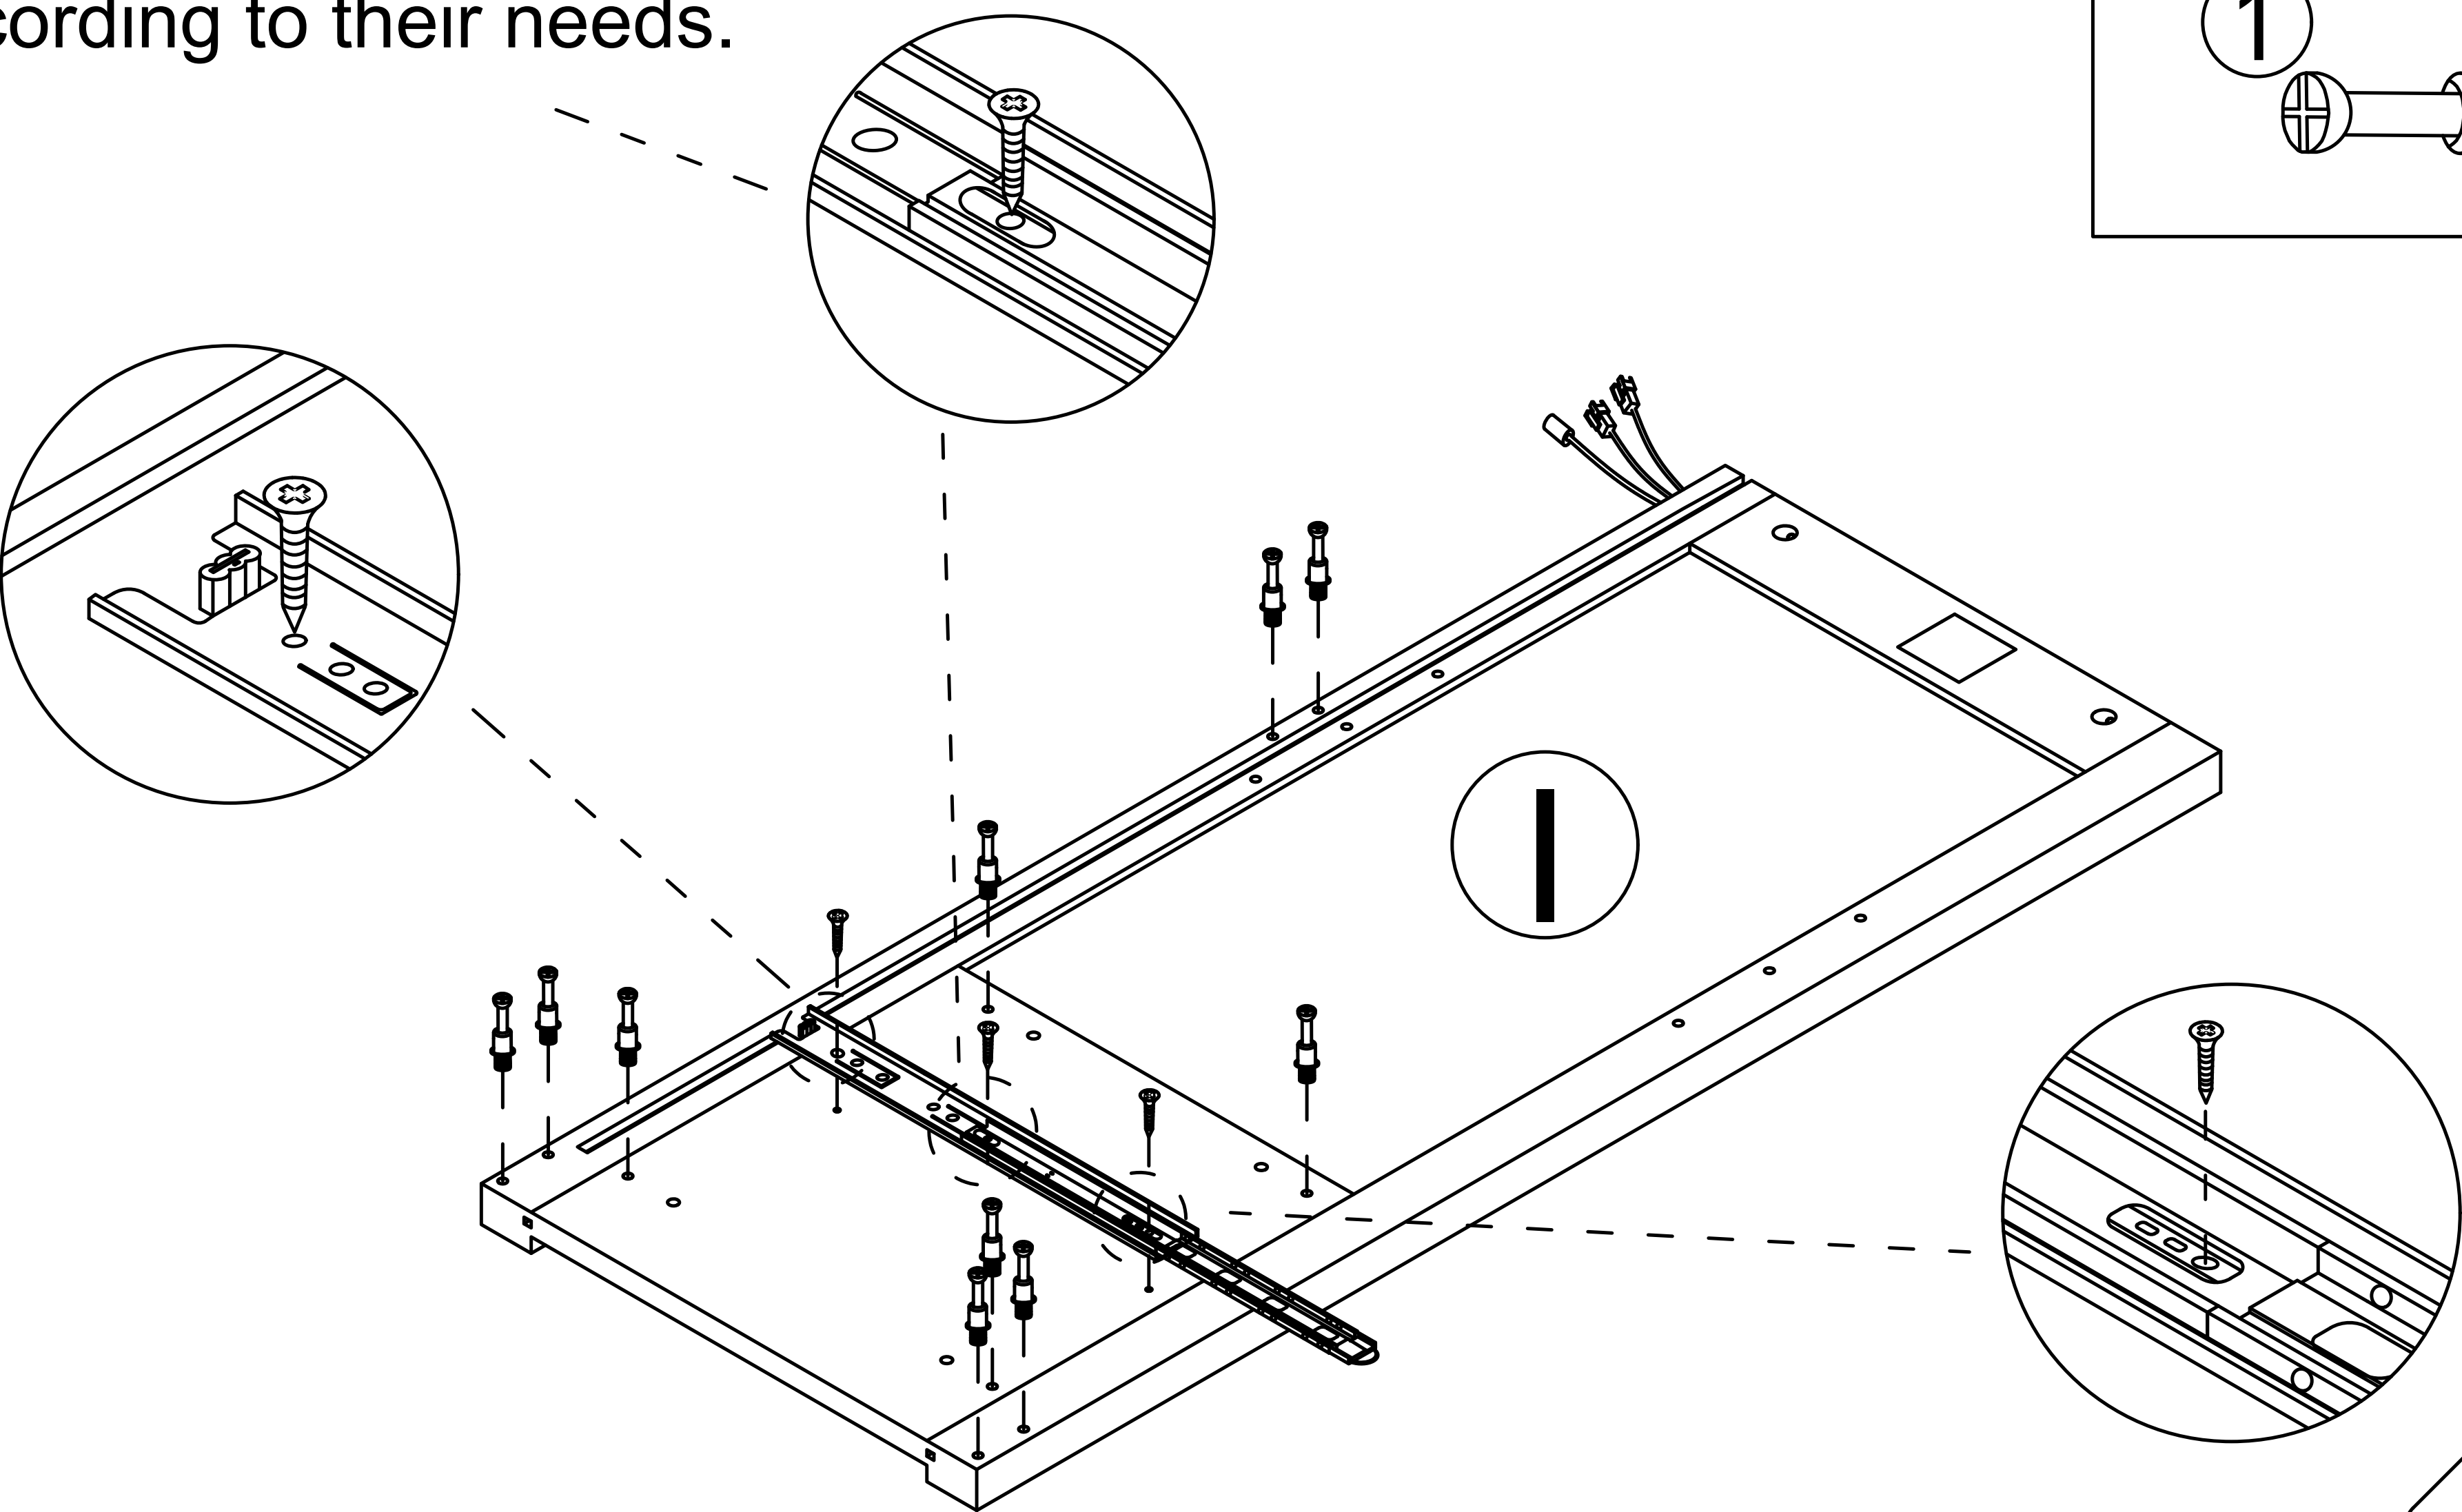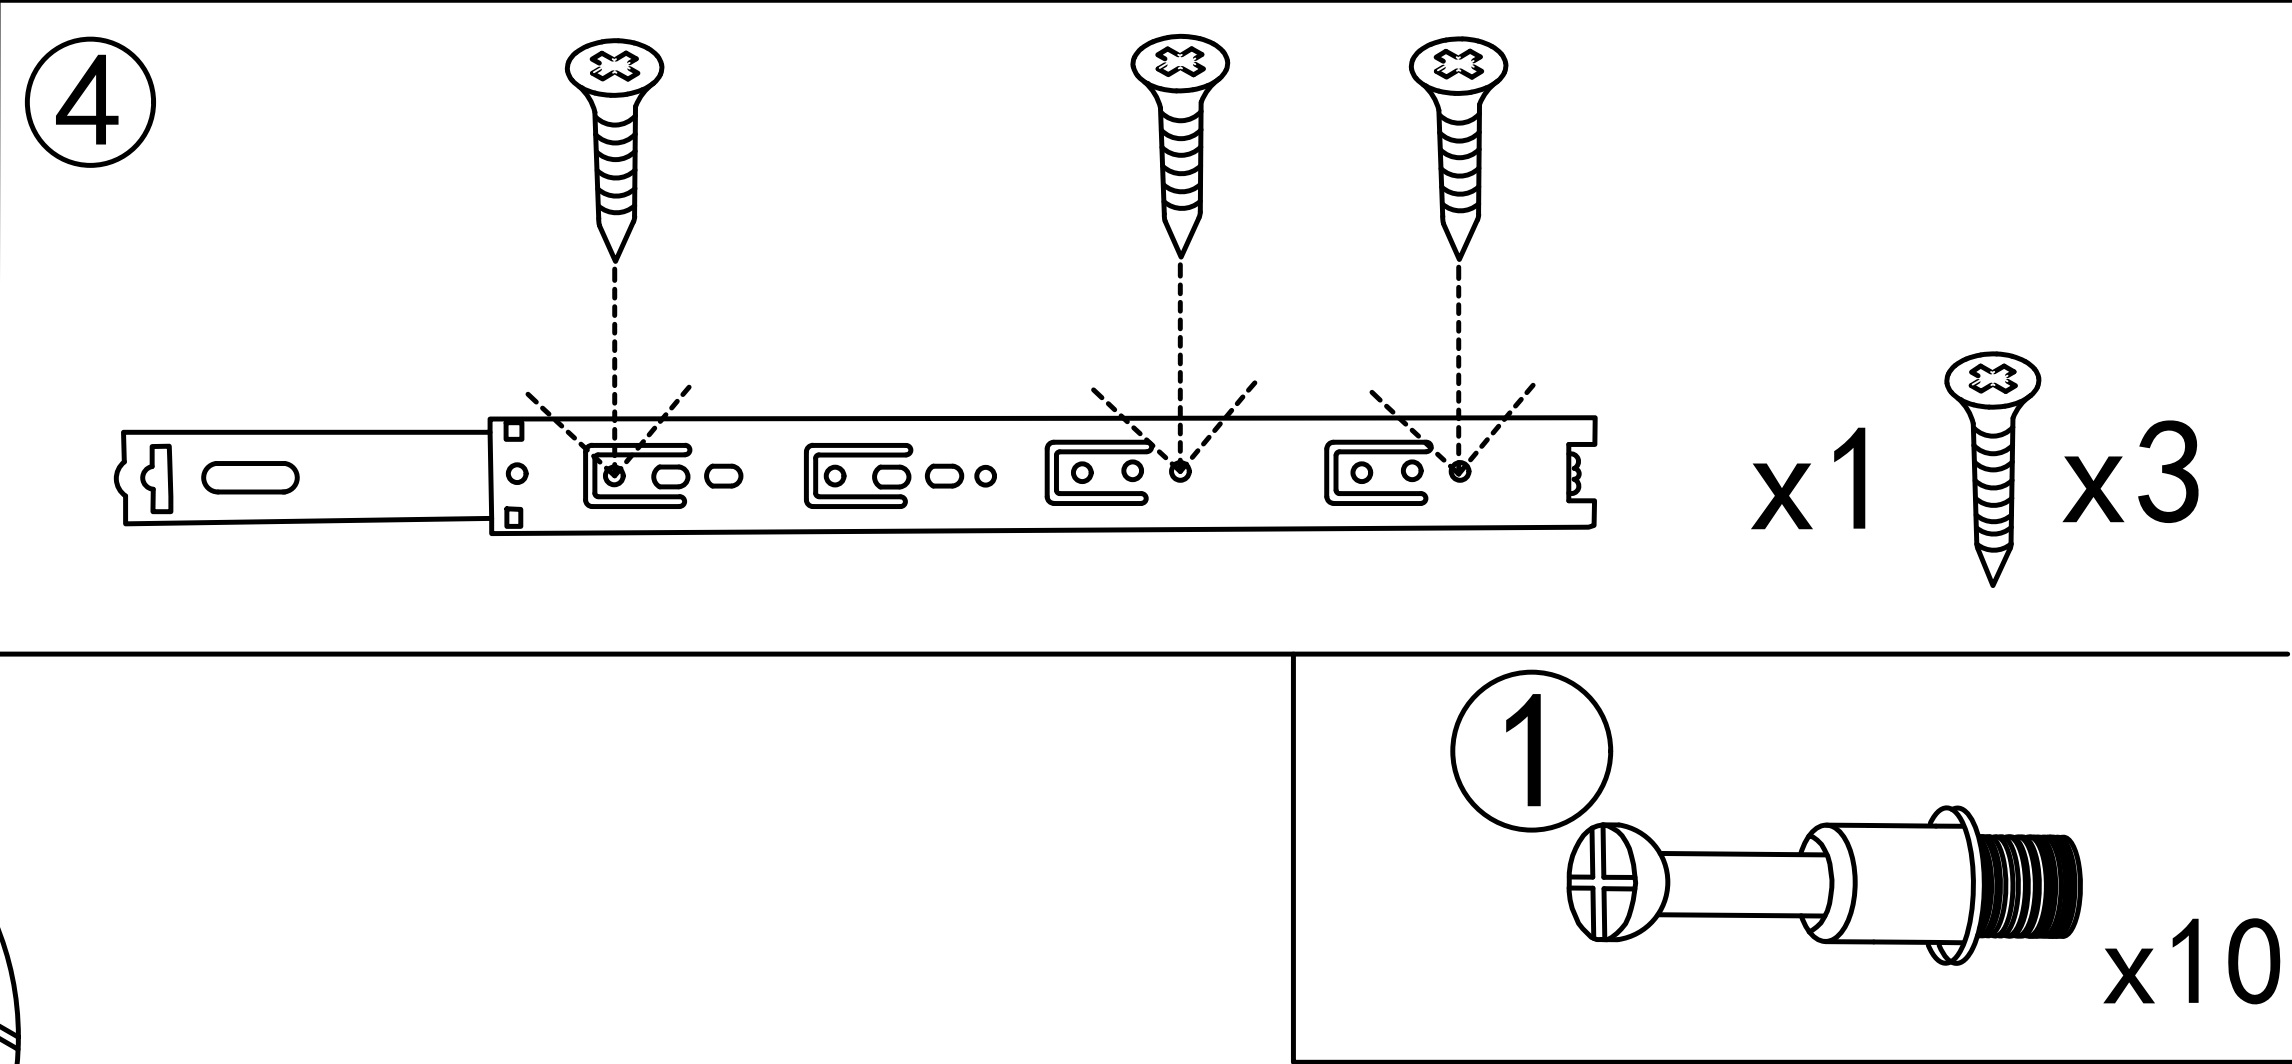

Step 12

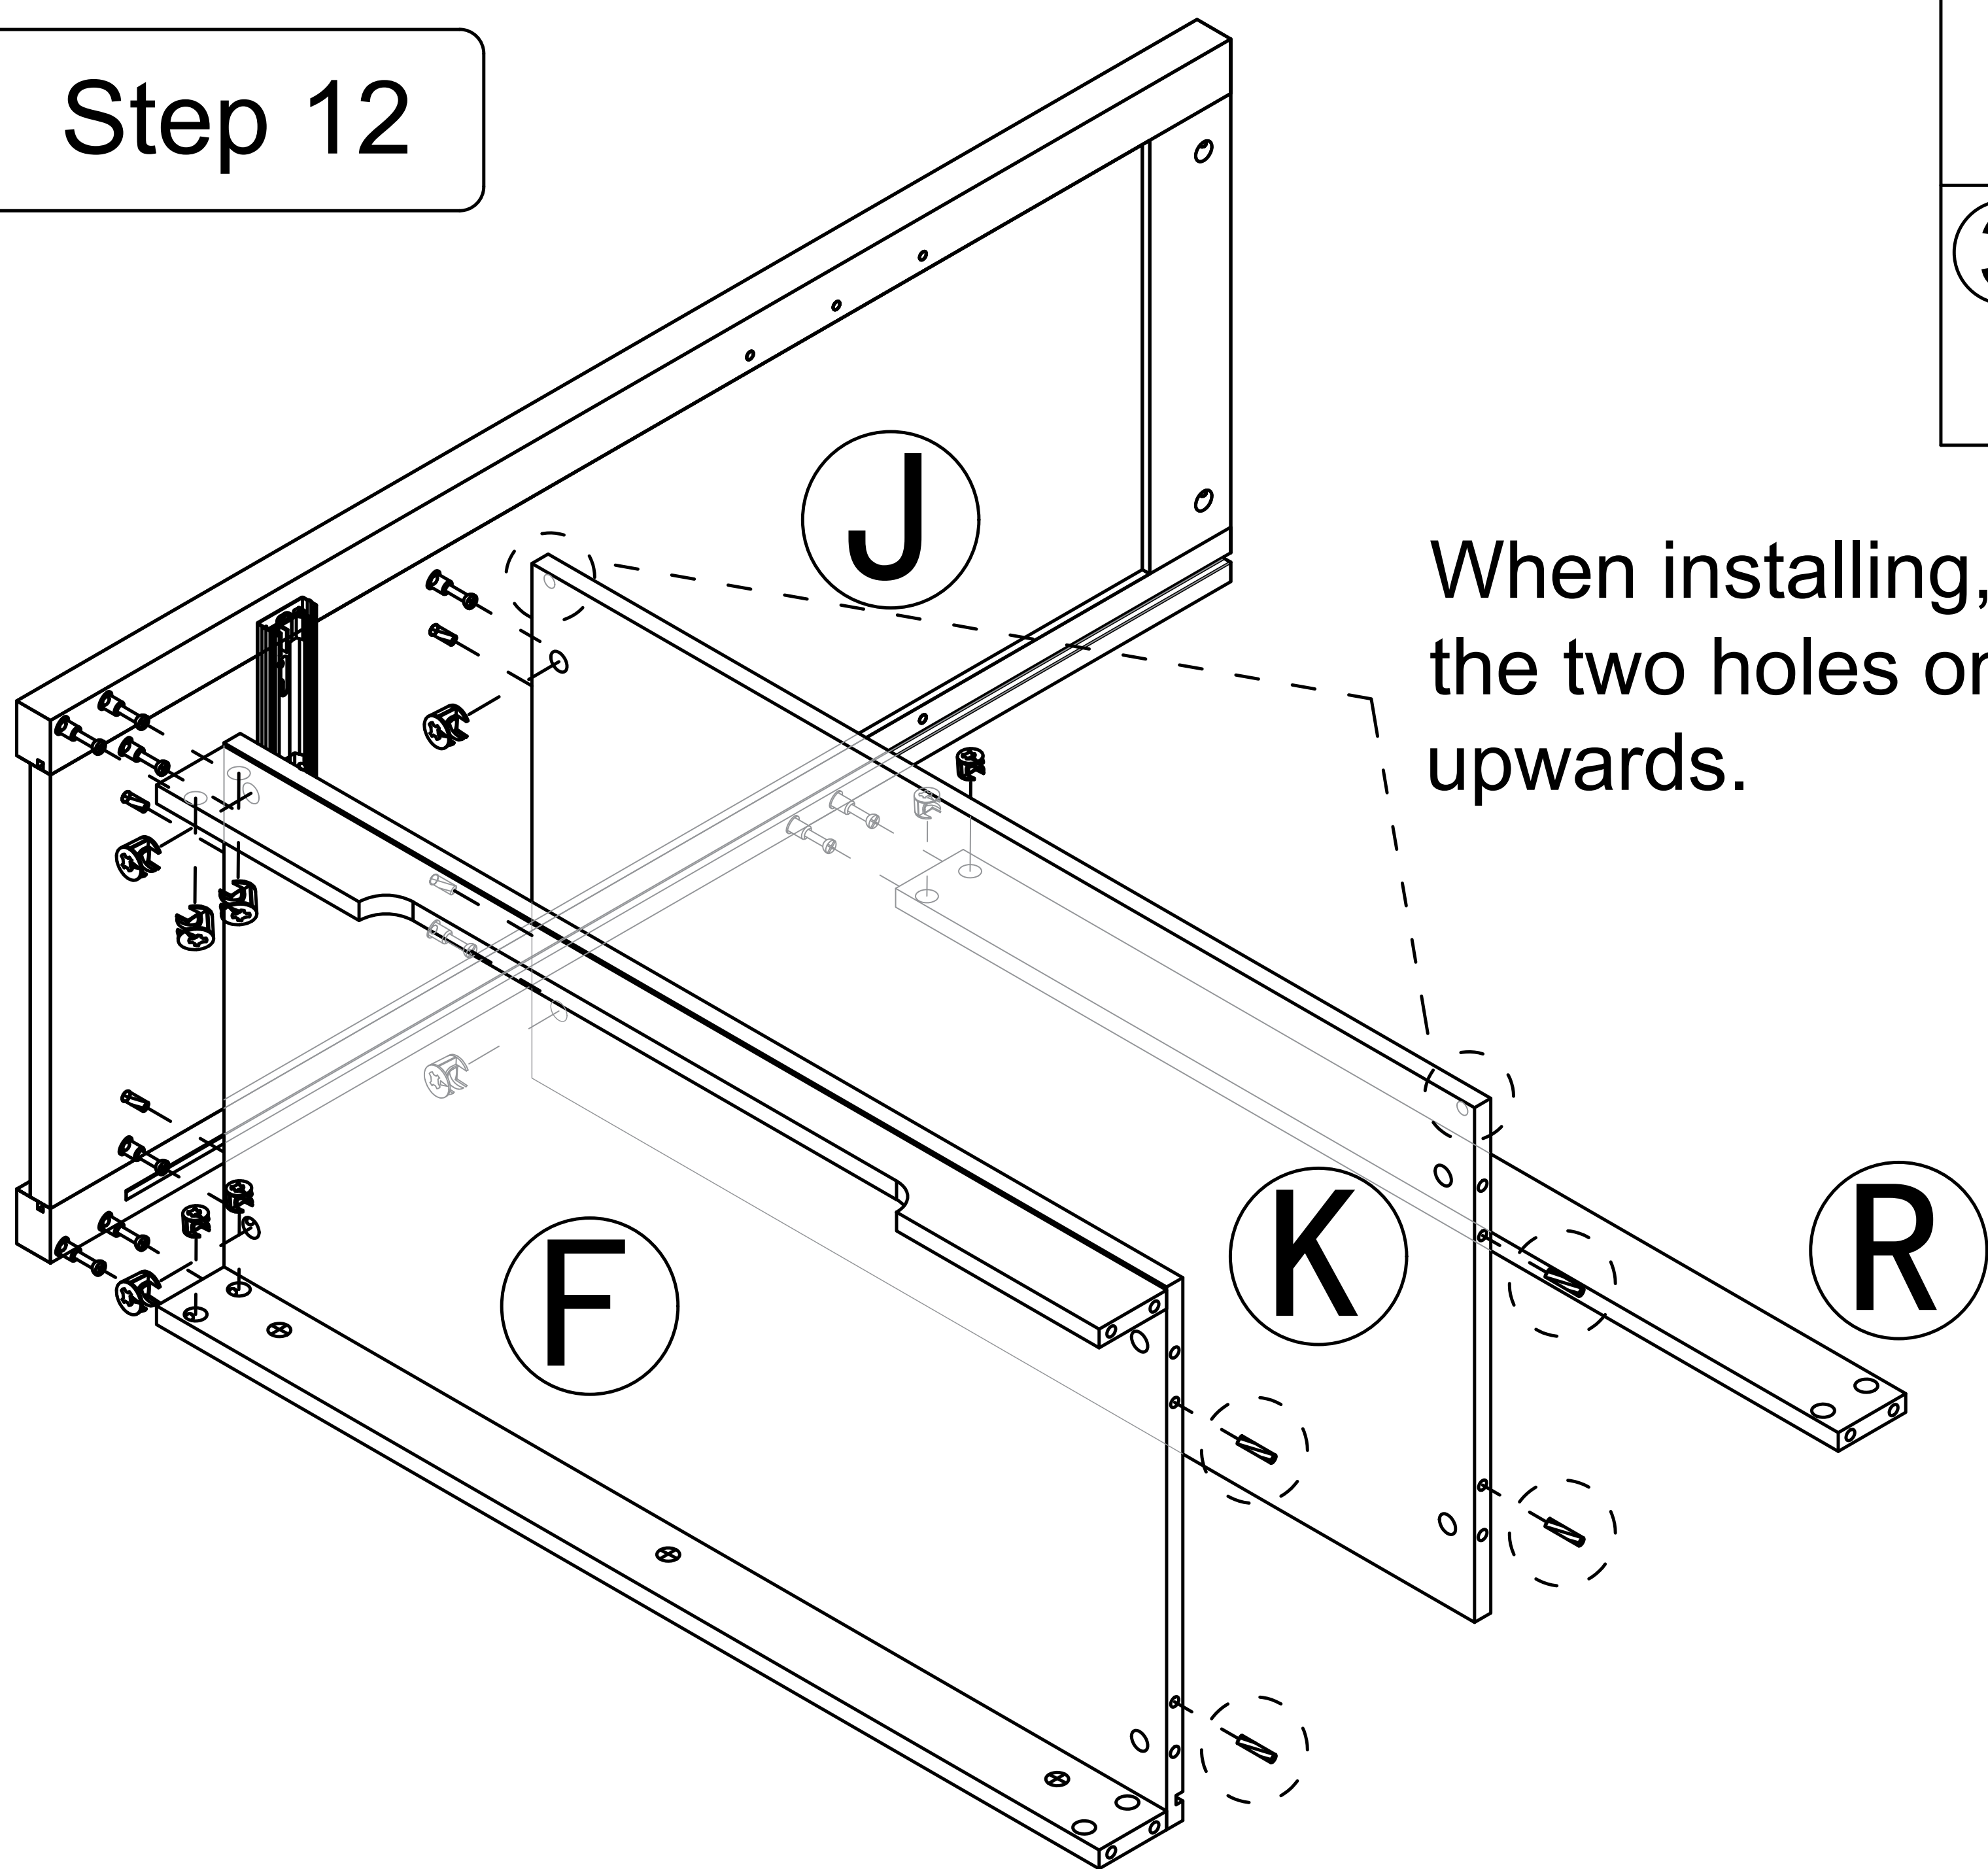


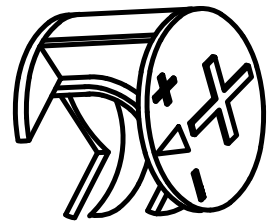
②  x10

③  x4

When installing, make sure that the two holes on the K plate face upwards.


Step 13

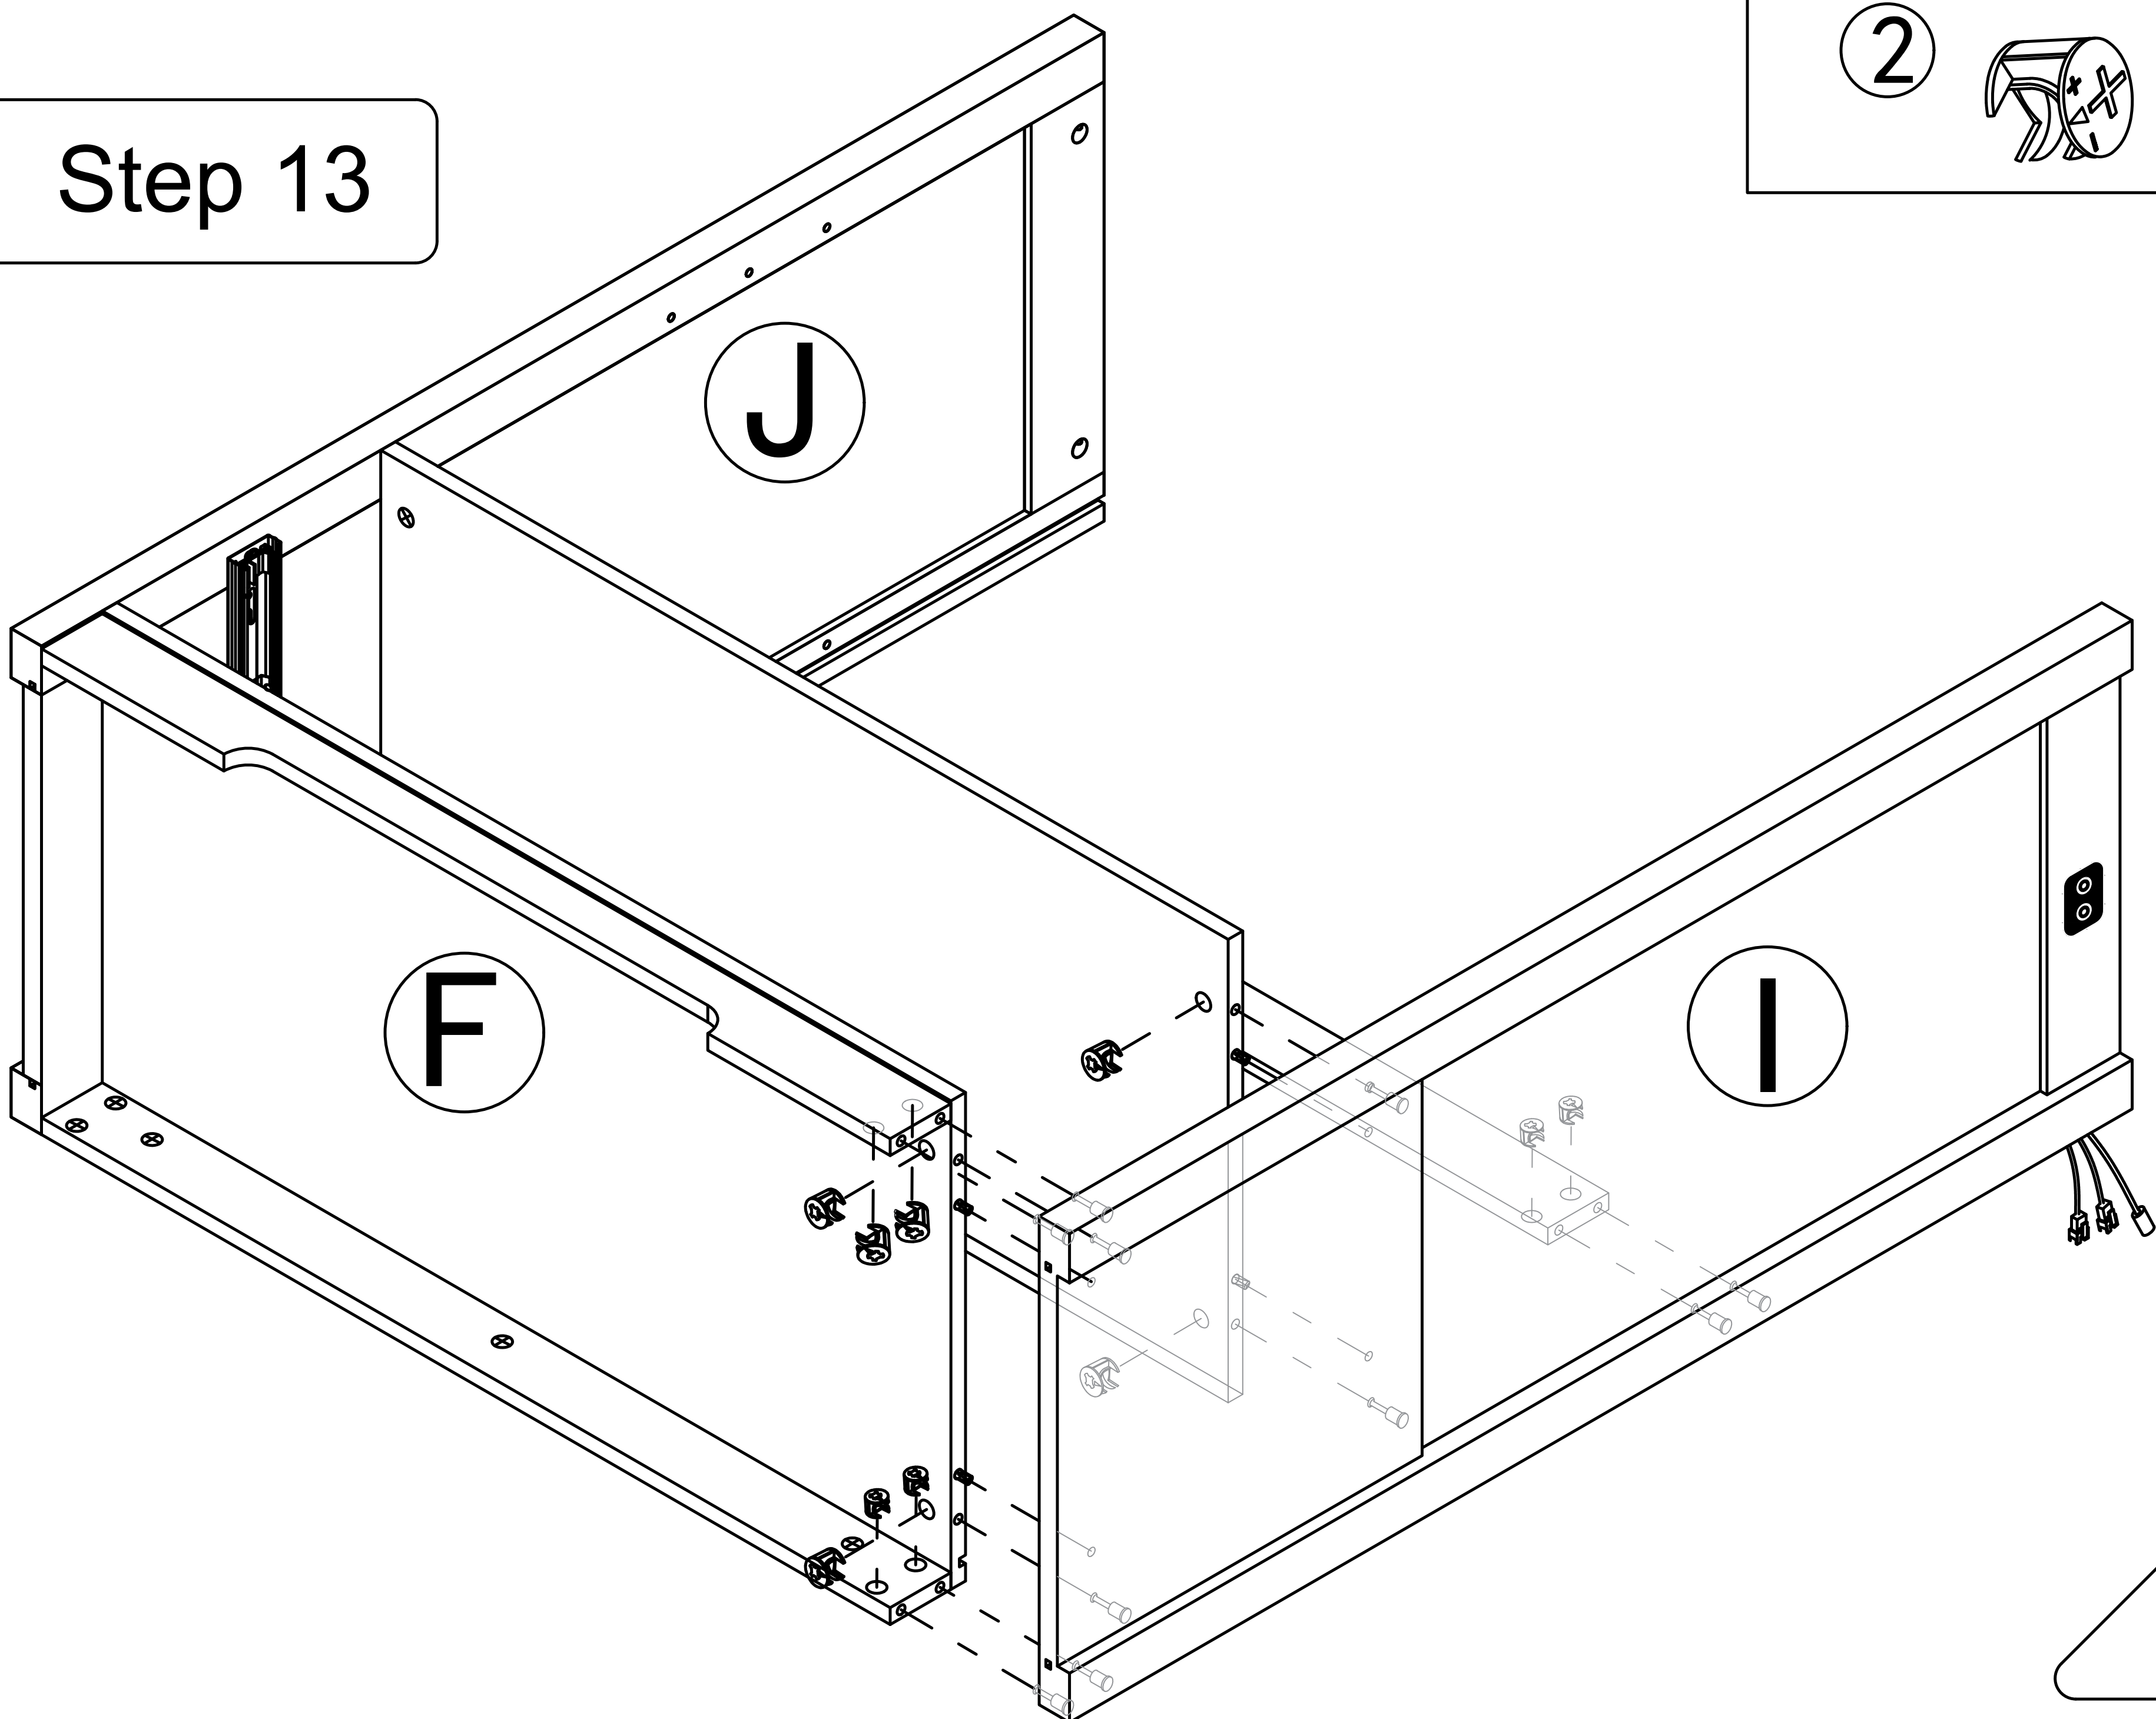

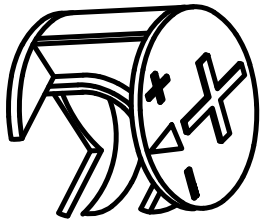②  x10


Step 14

12

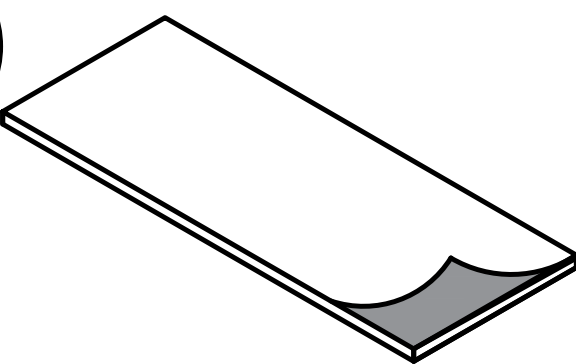




x6

Tear off release paper and stick the black foot pad on the board

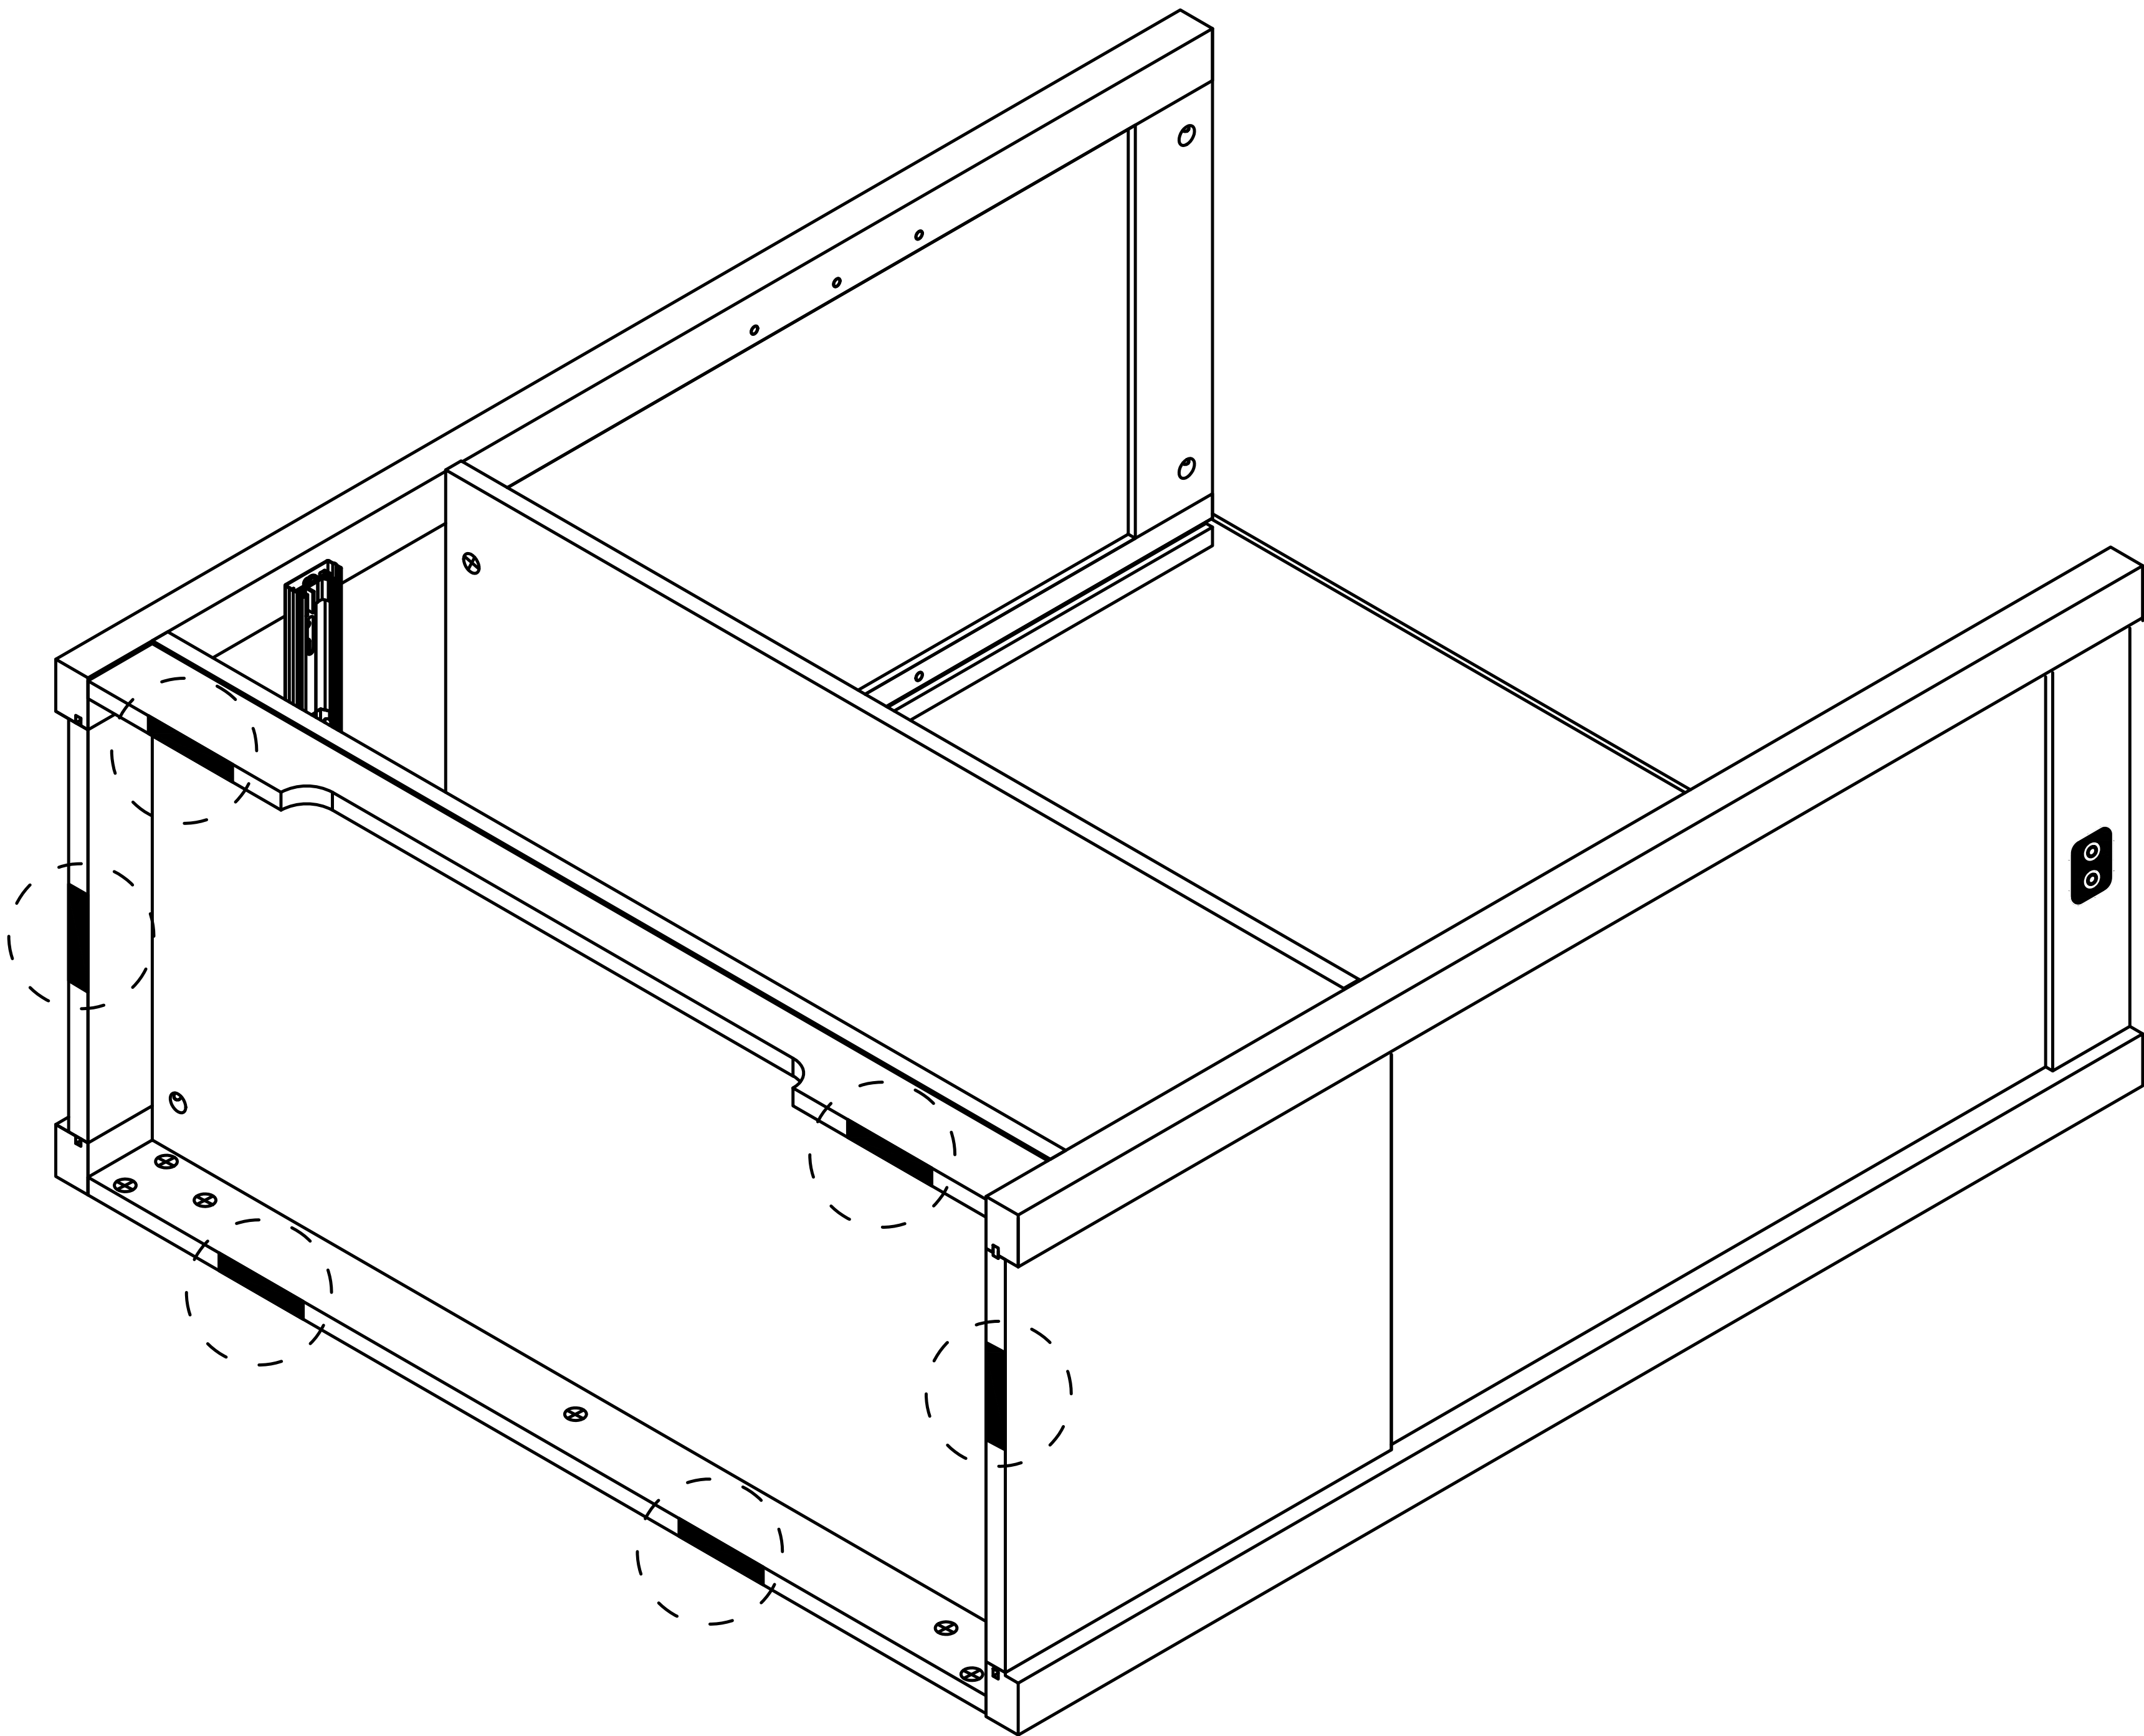


Step 15

5 x2

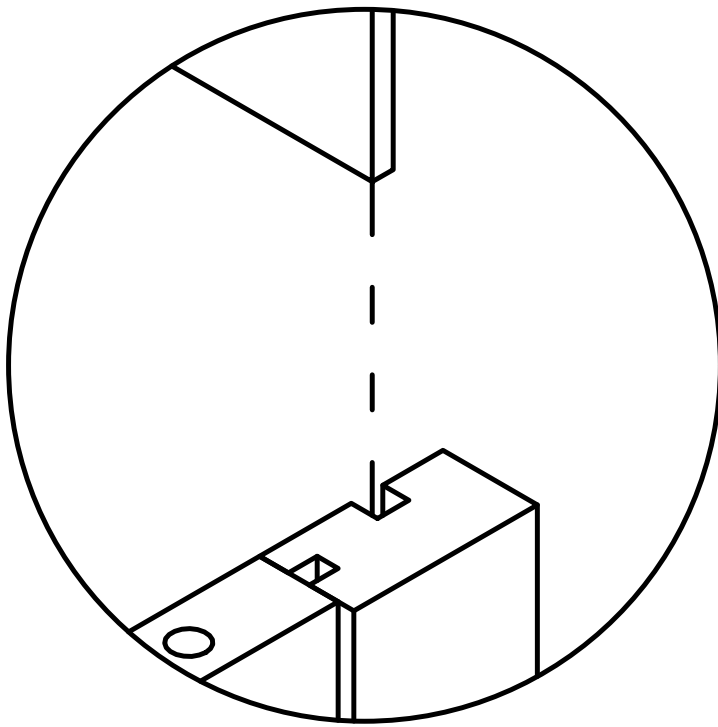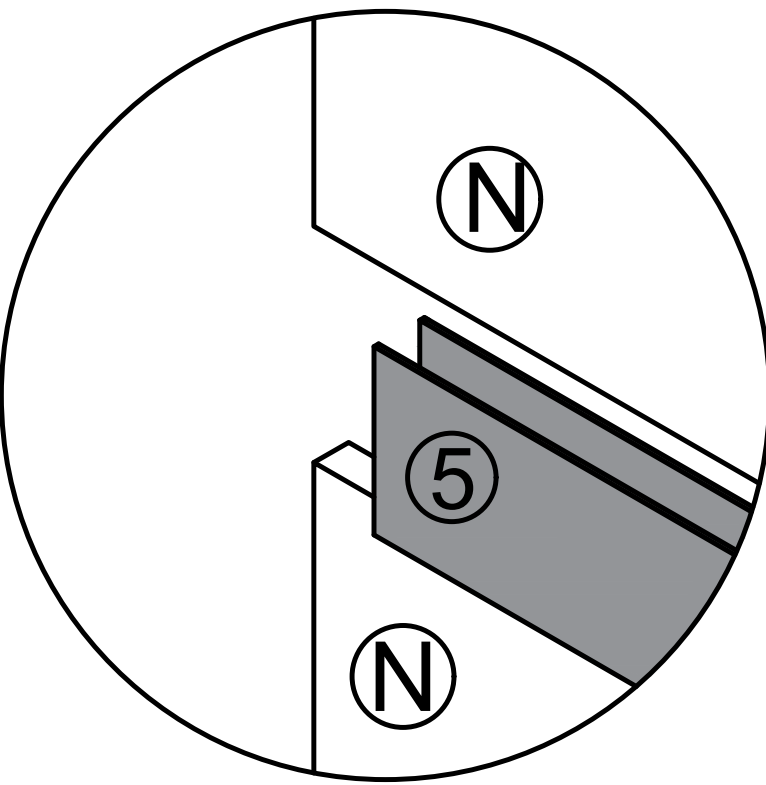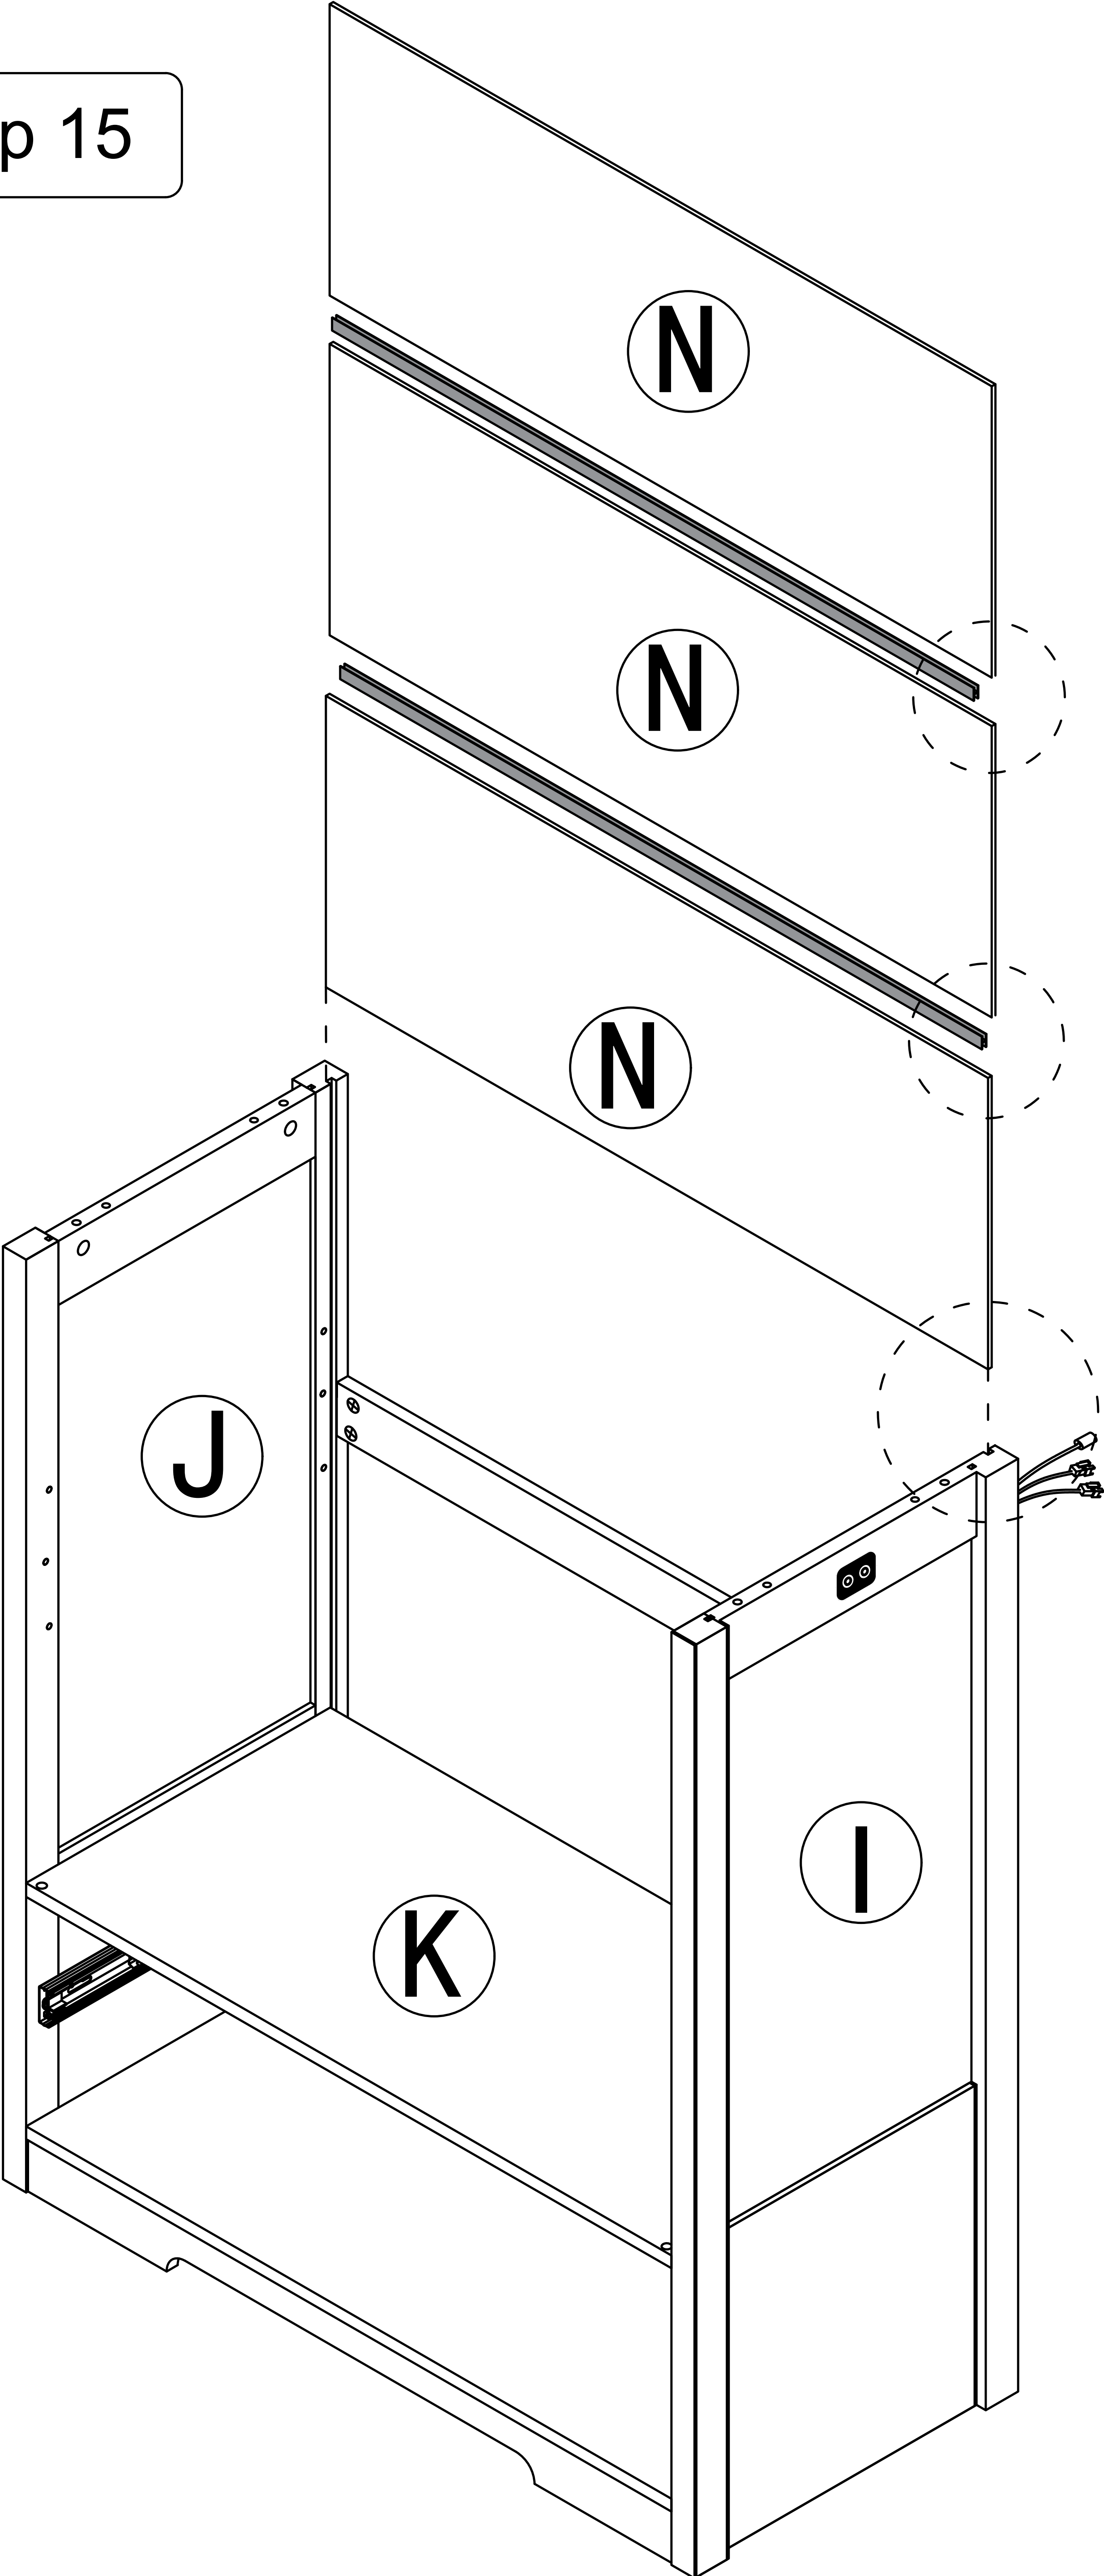


Step 16


- 1

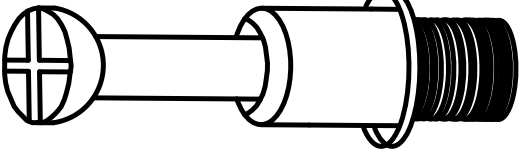


x4
- 6

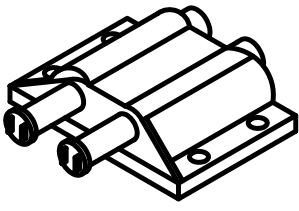

x1



x4

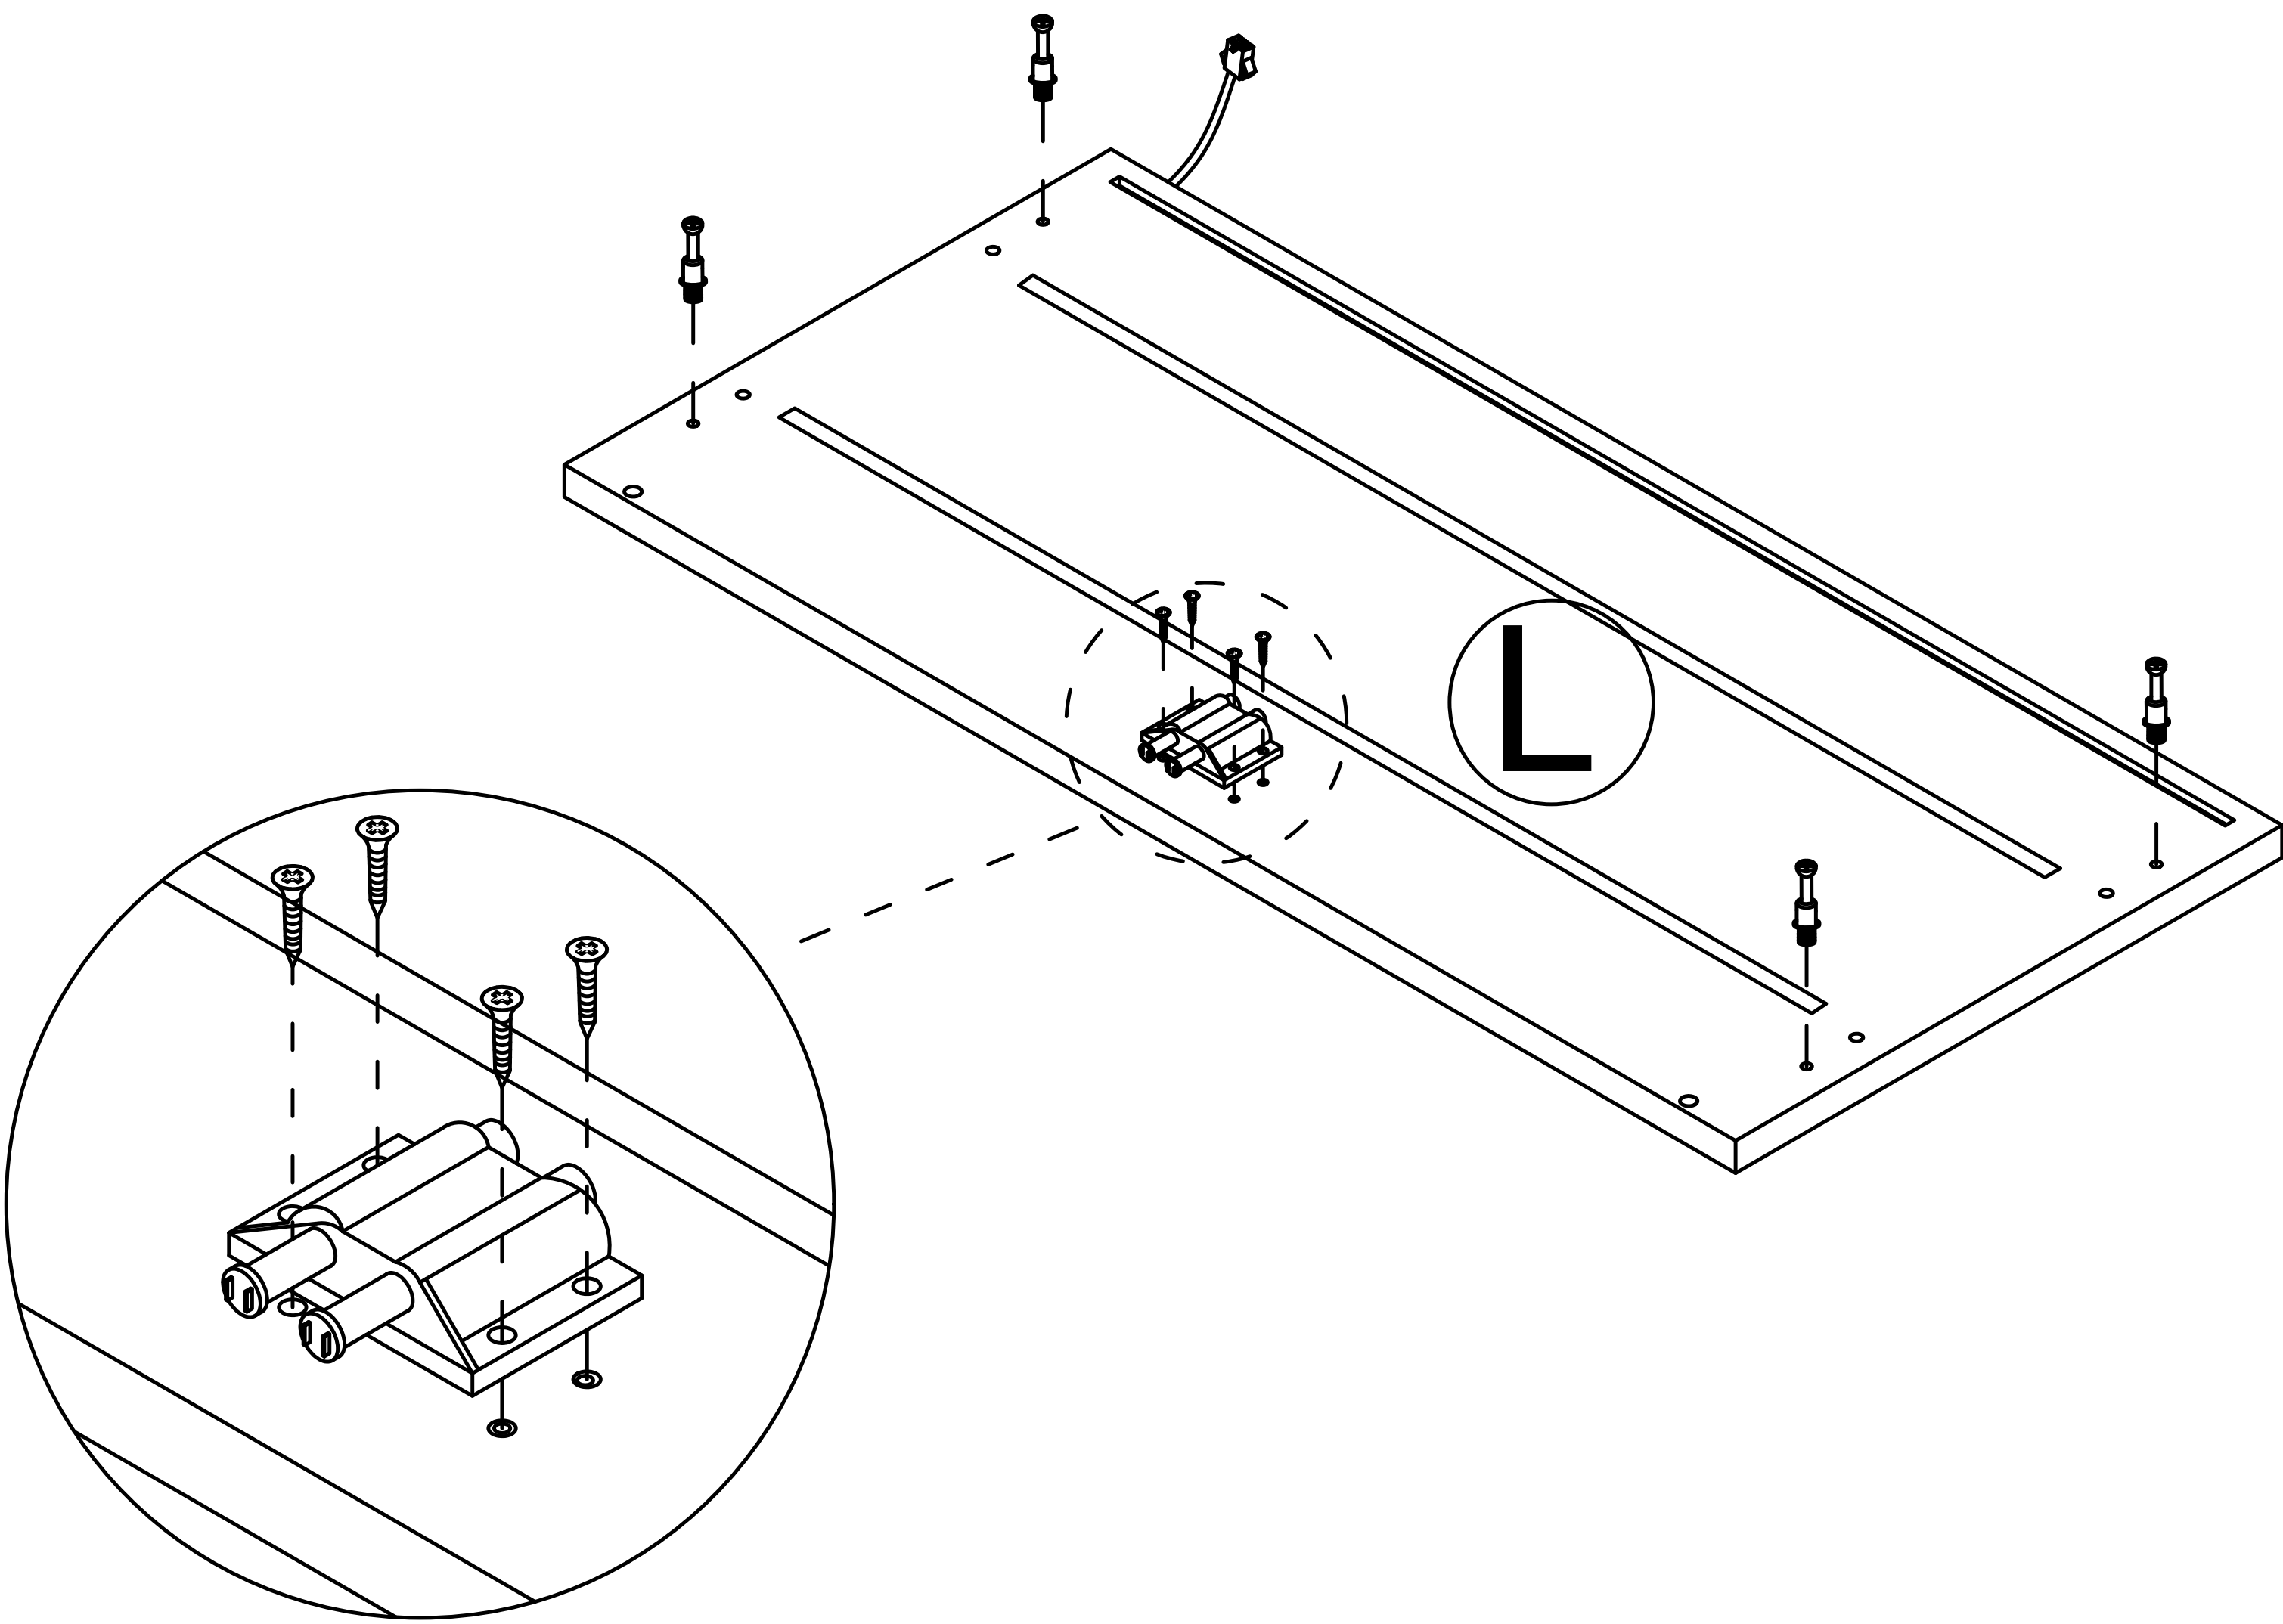


Step 17

- 3




x4

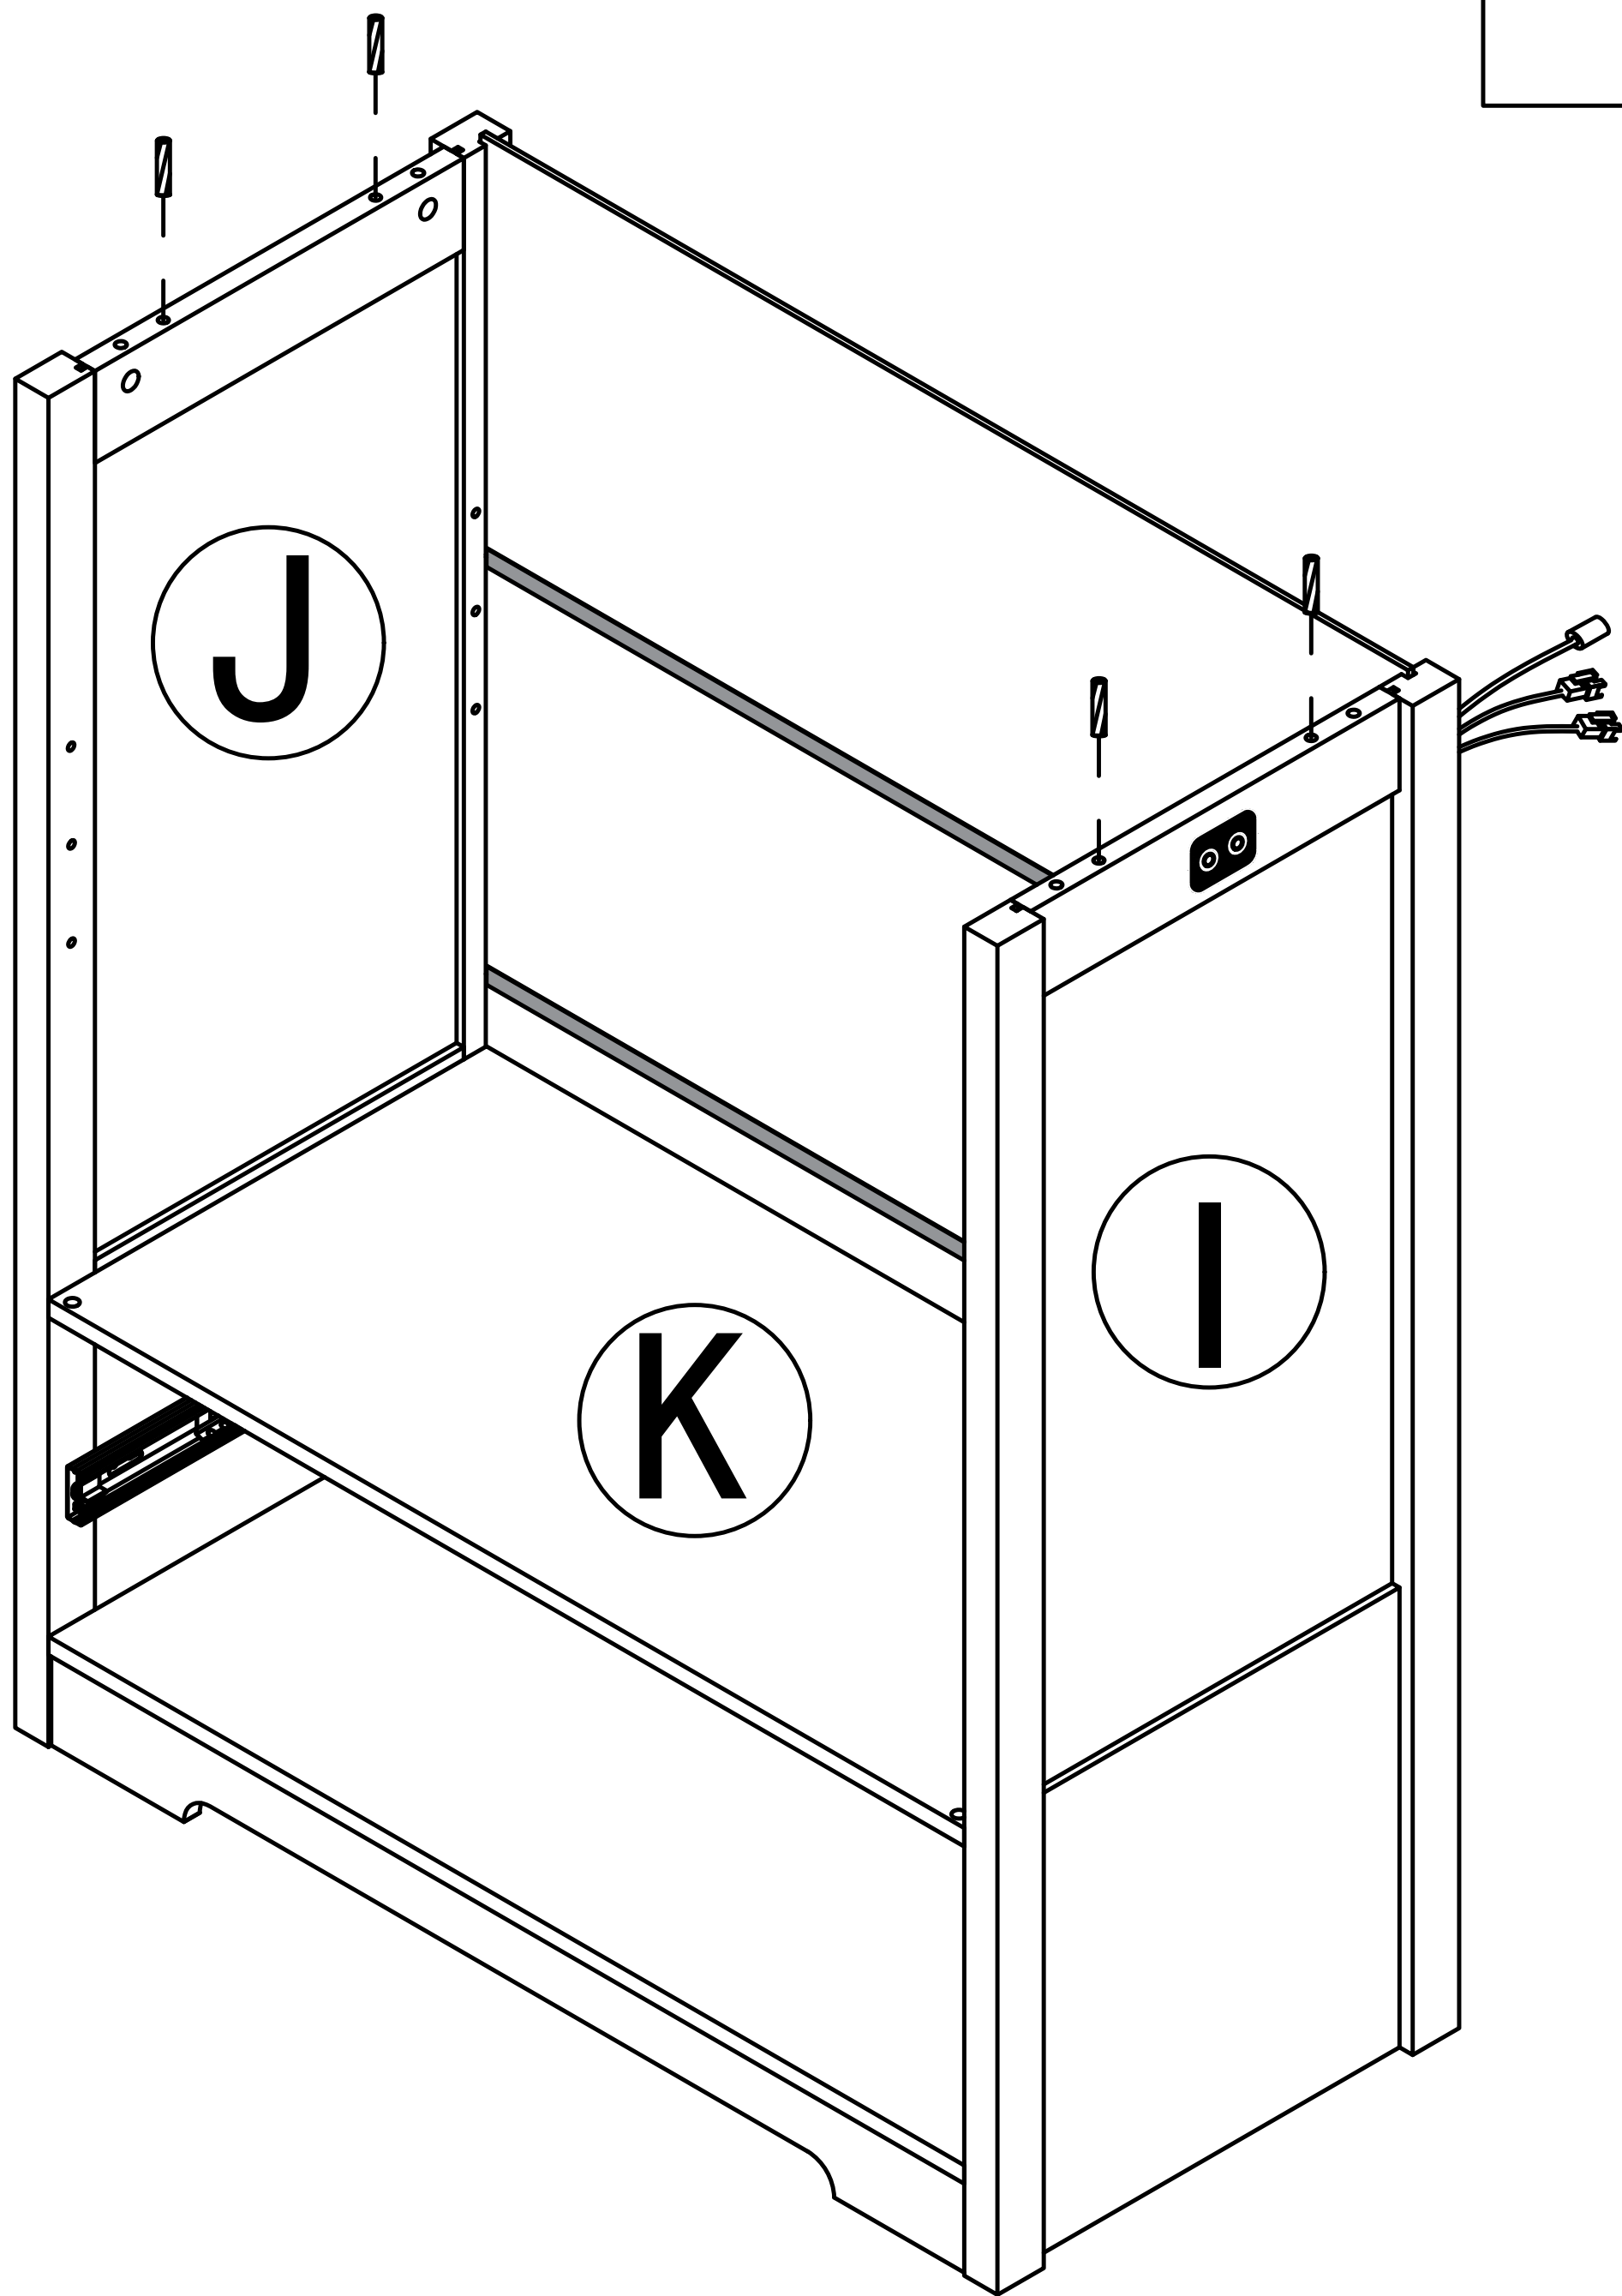


Step 18


2

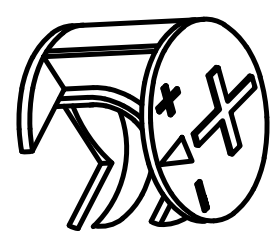


x4

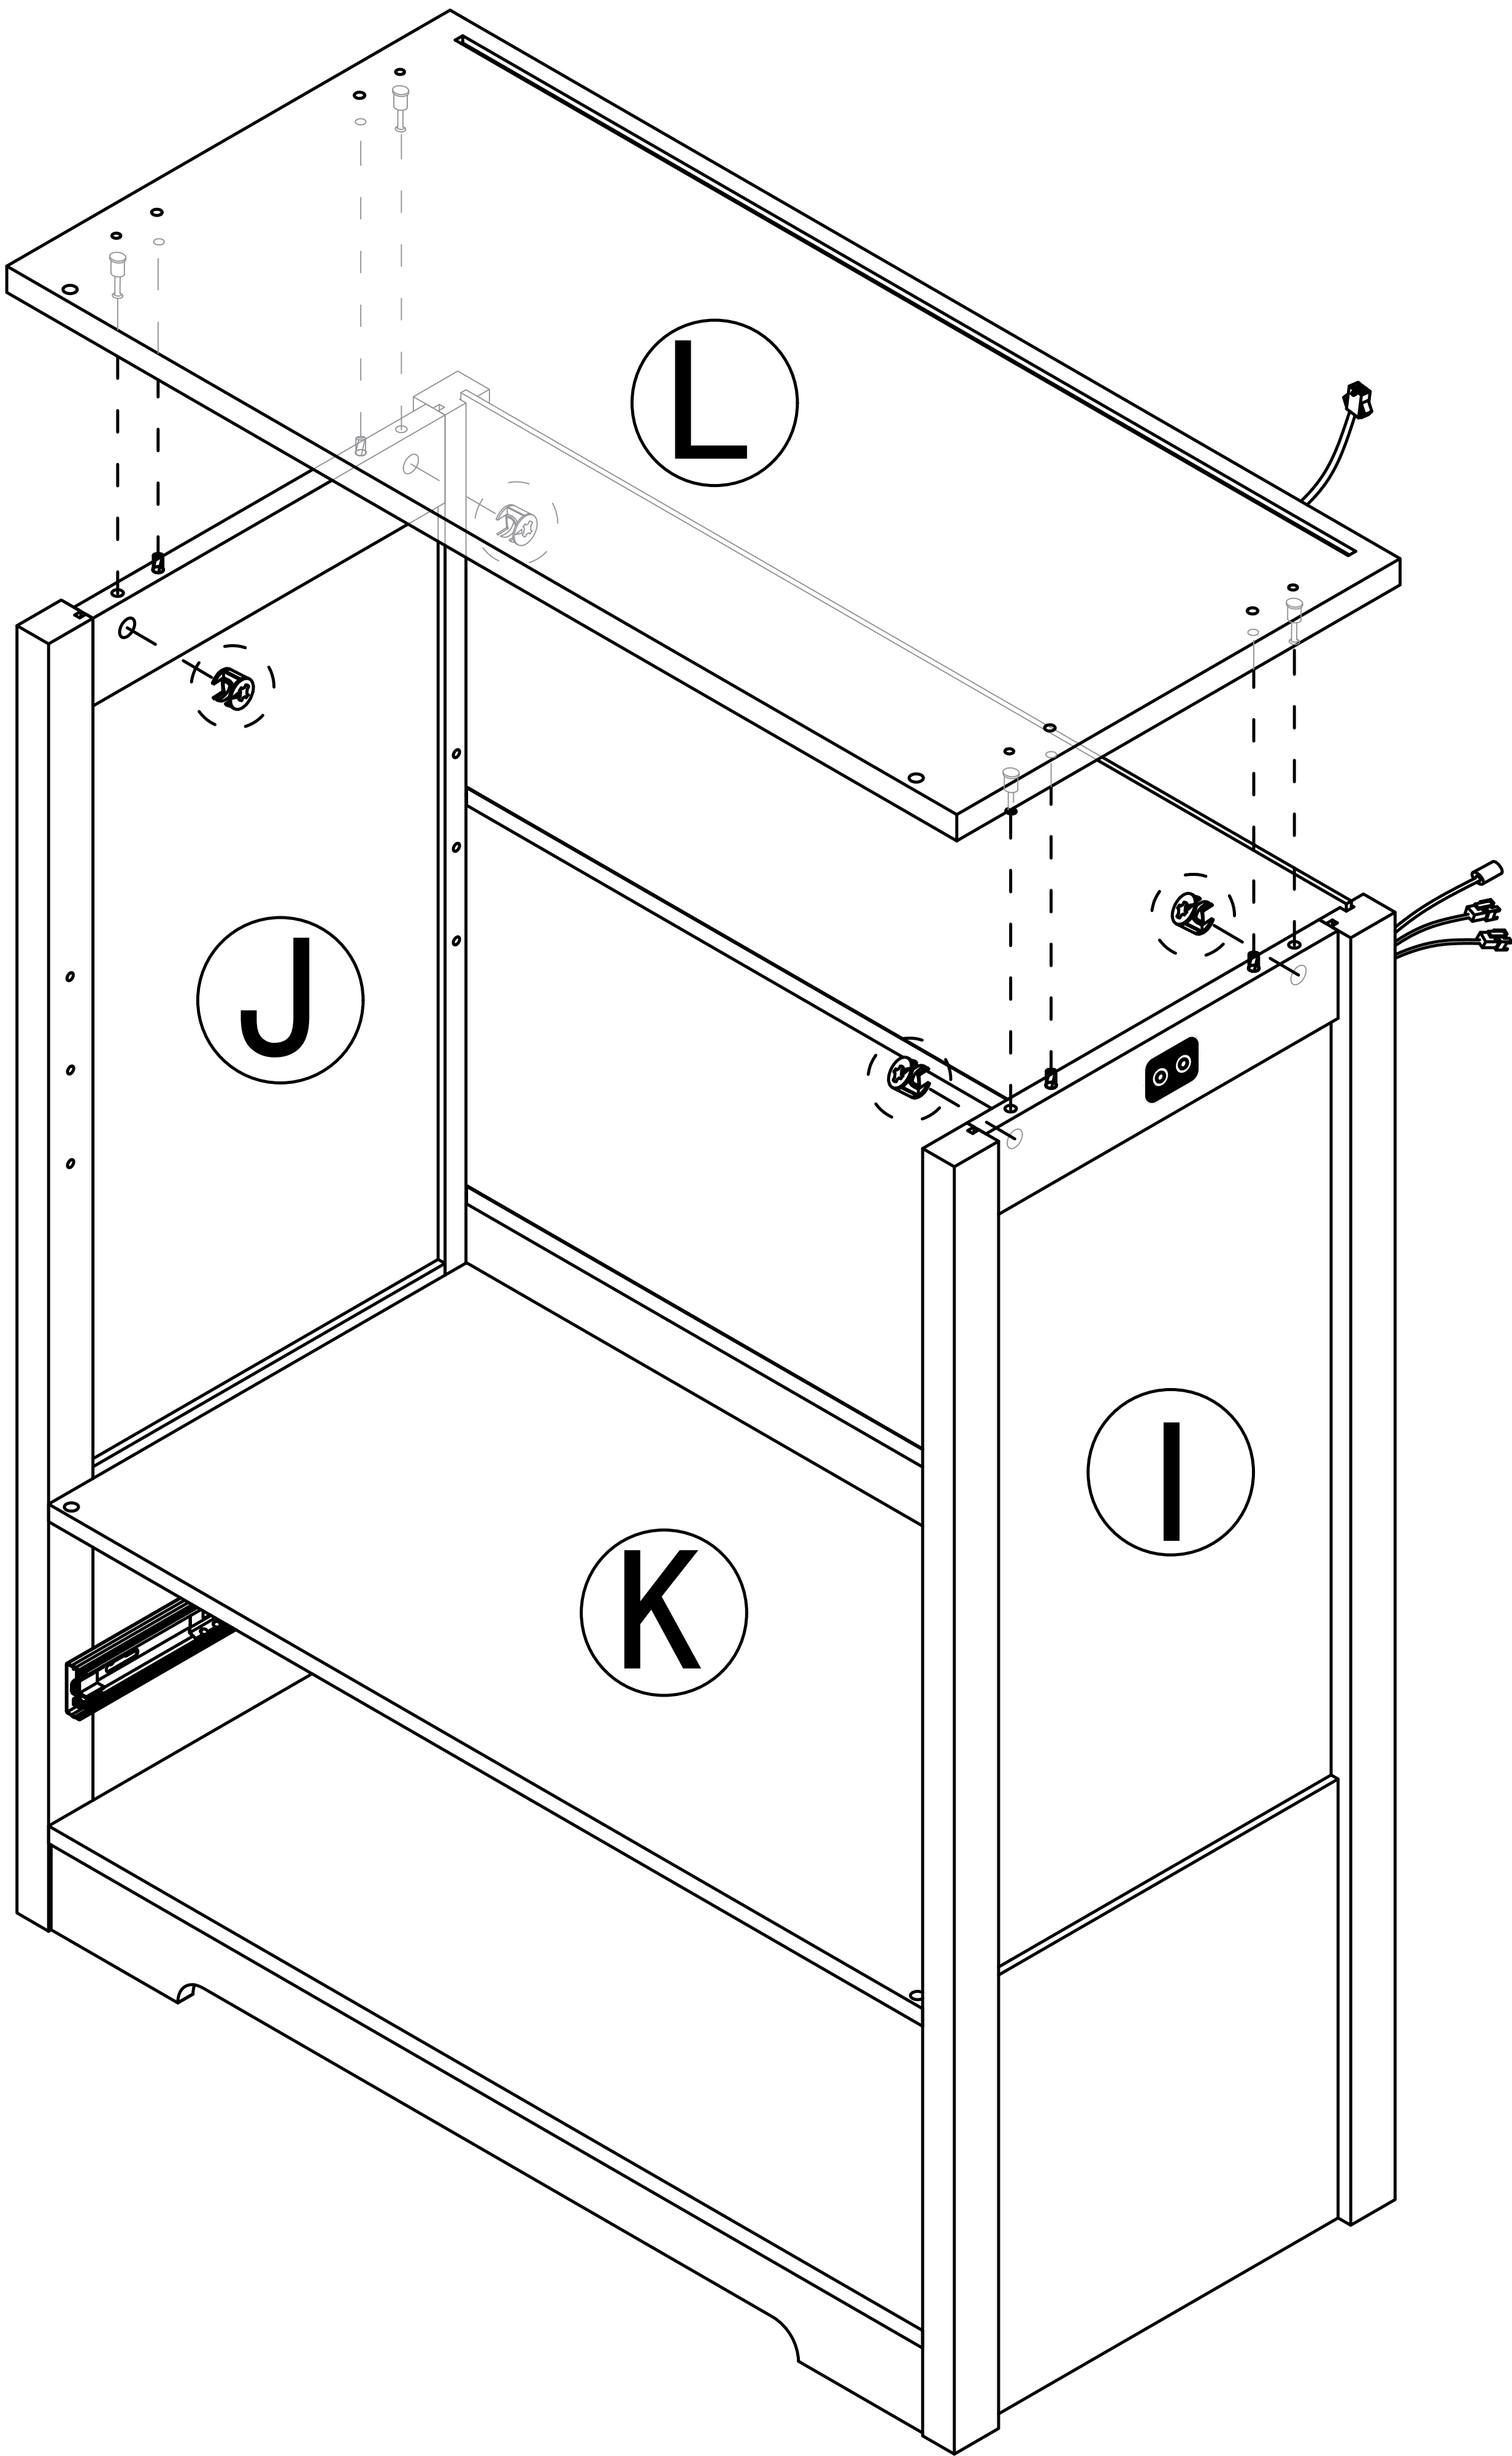



Step 19

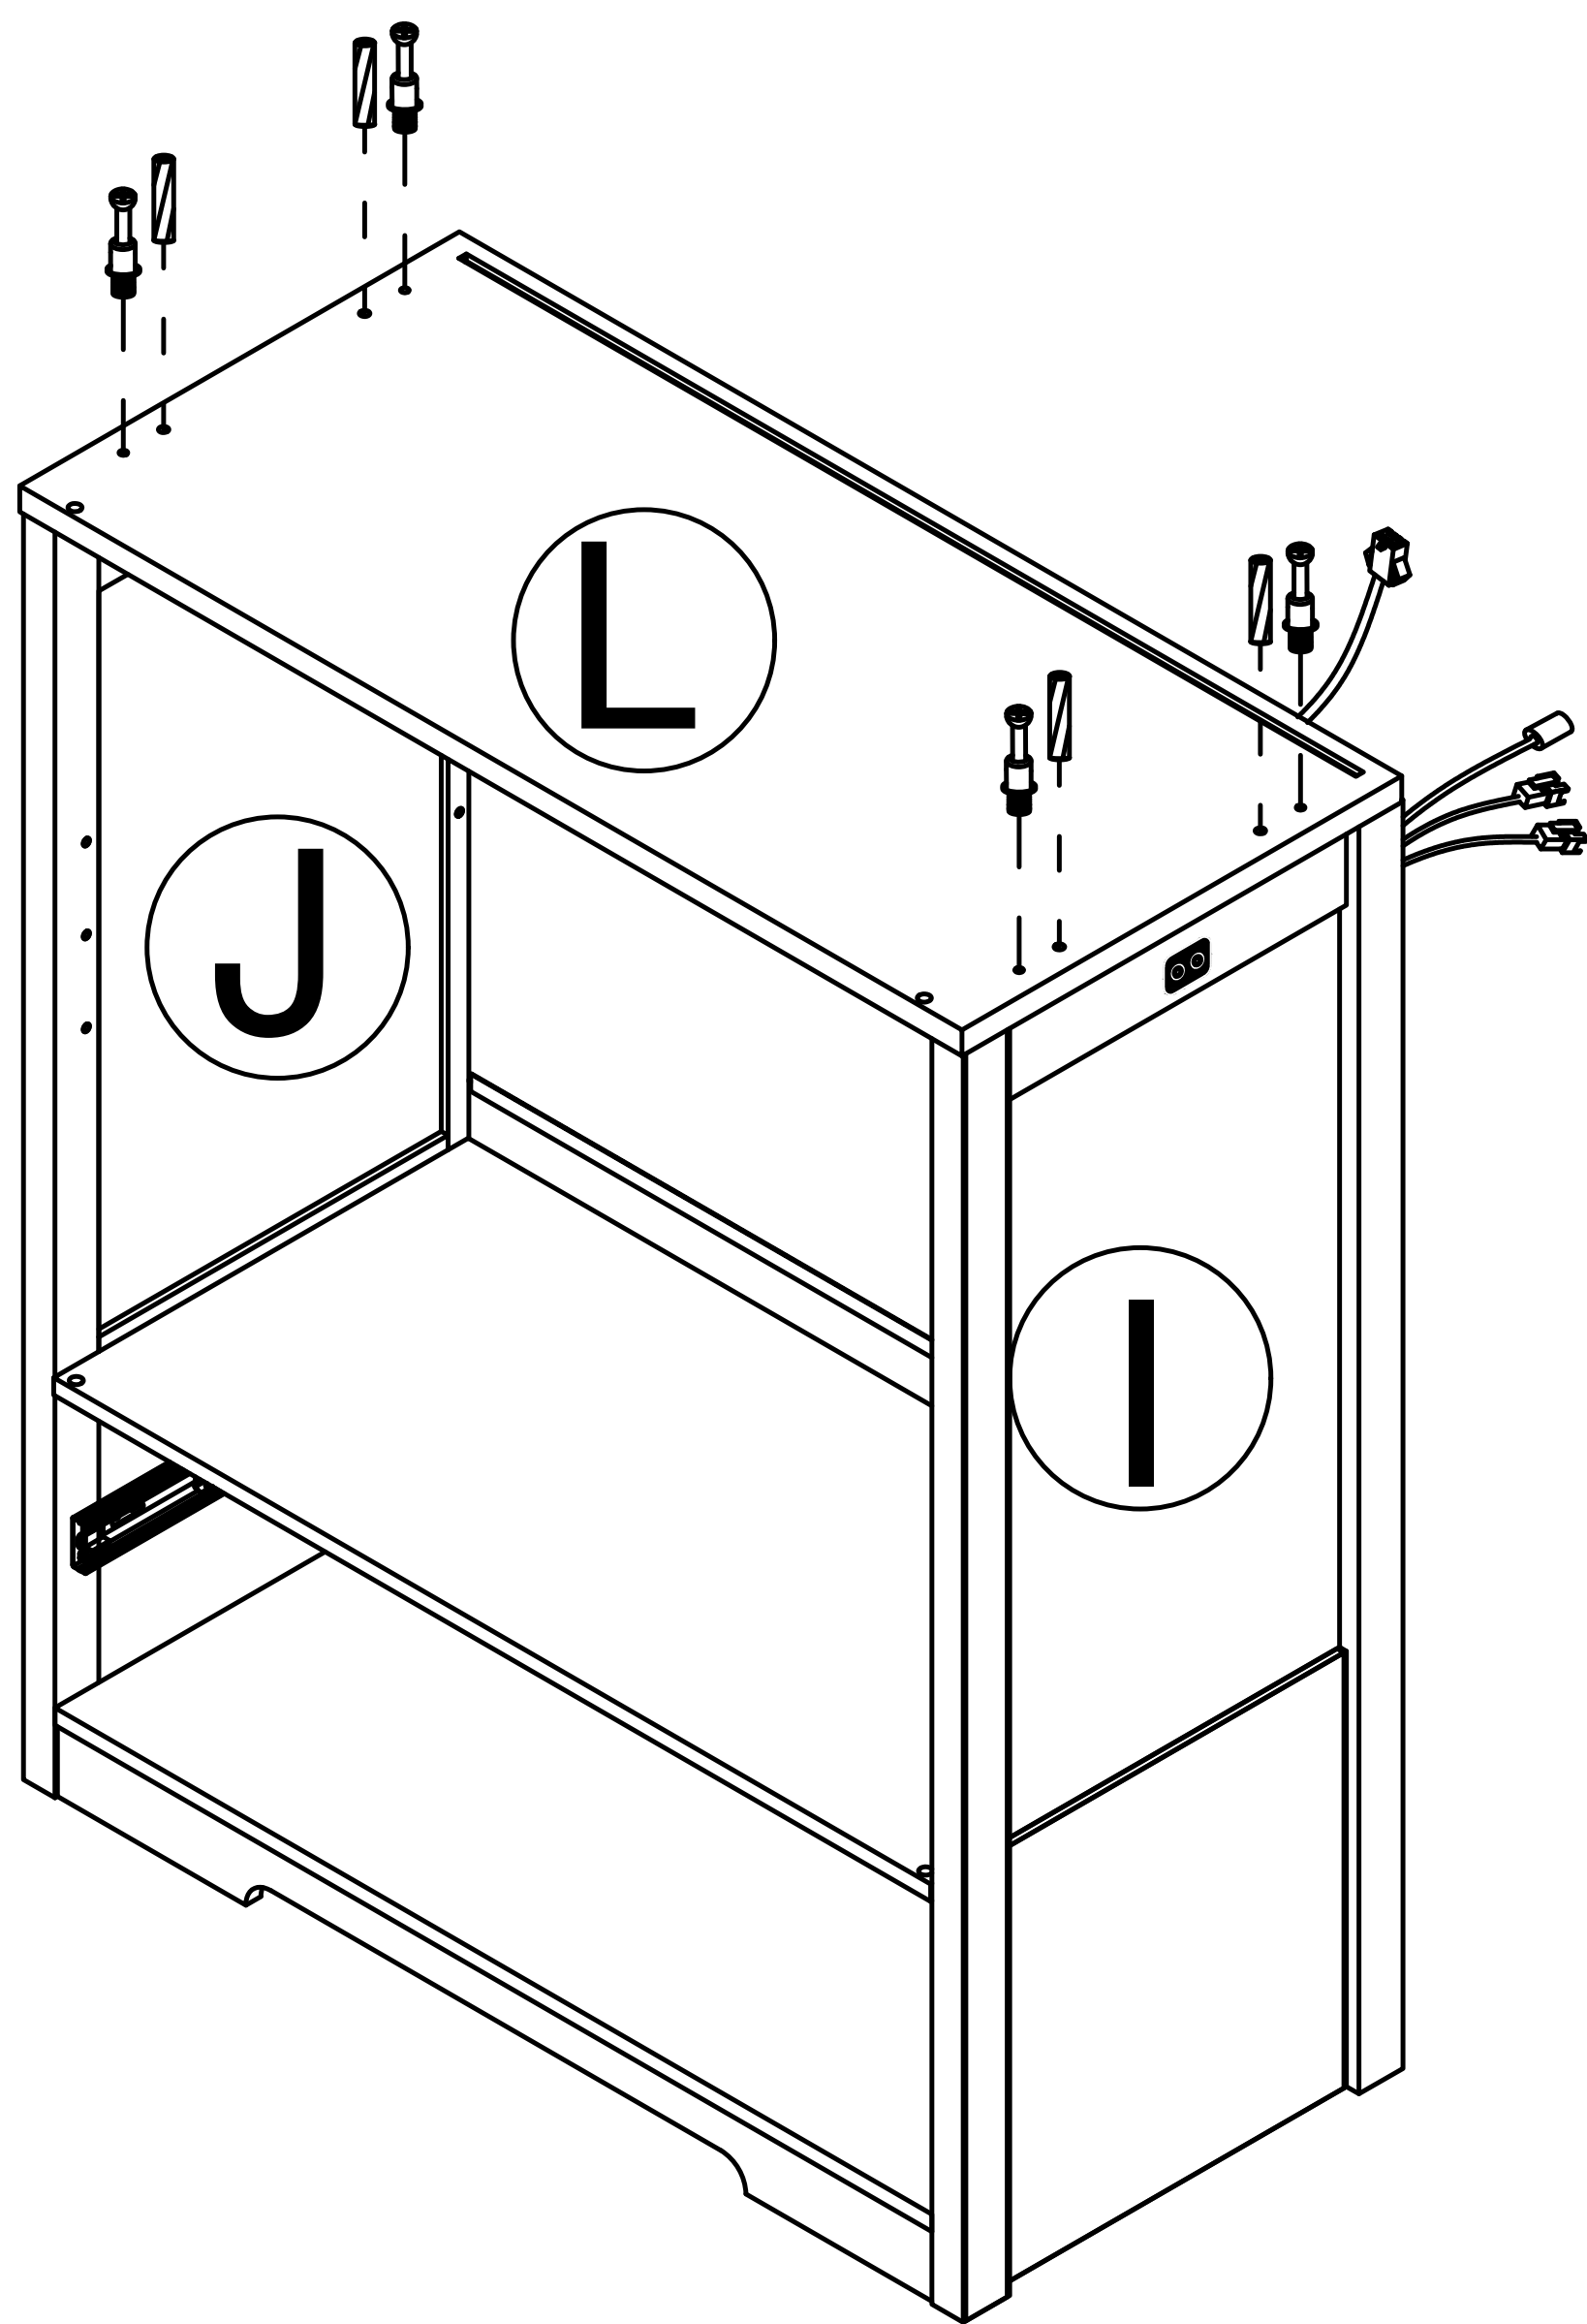

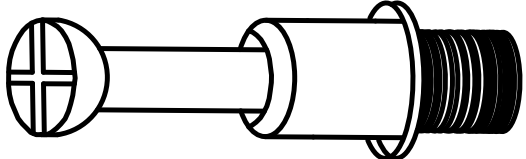- ①  x4
- ③  x4

Step 20

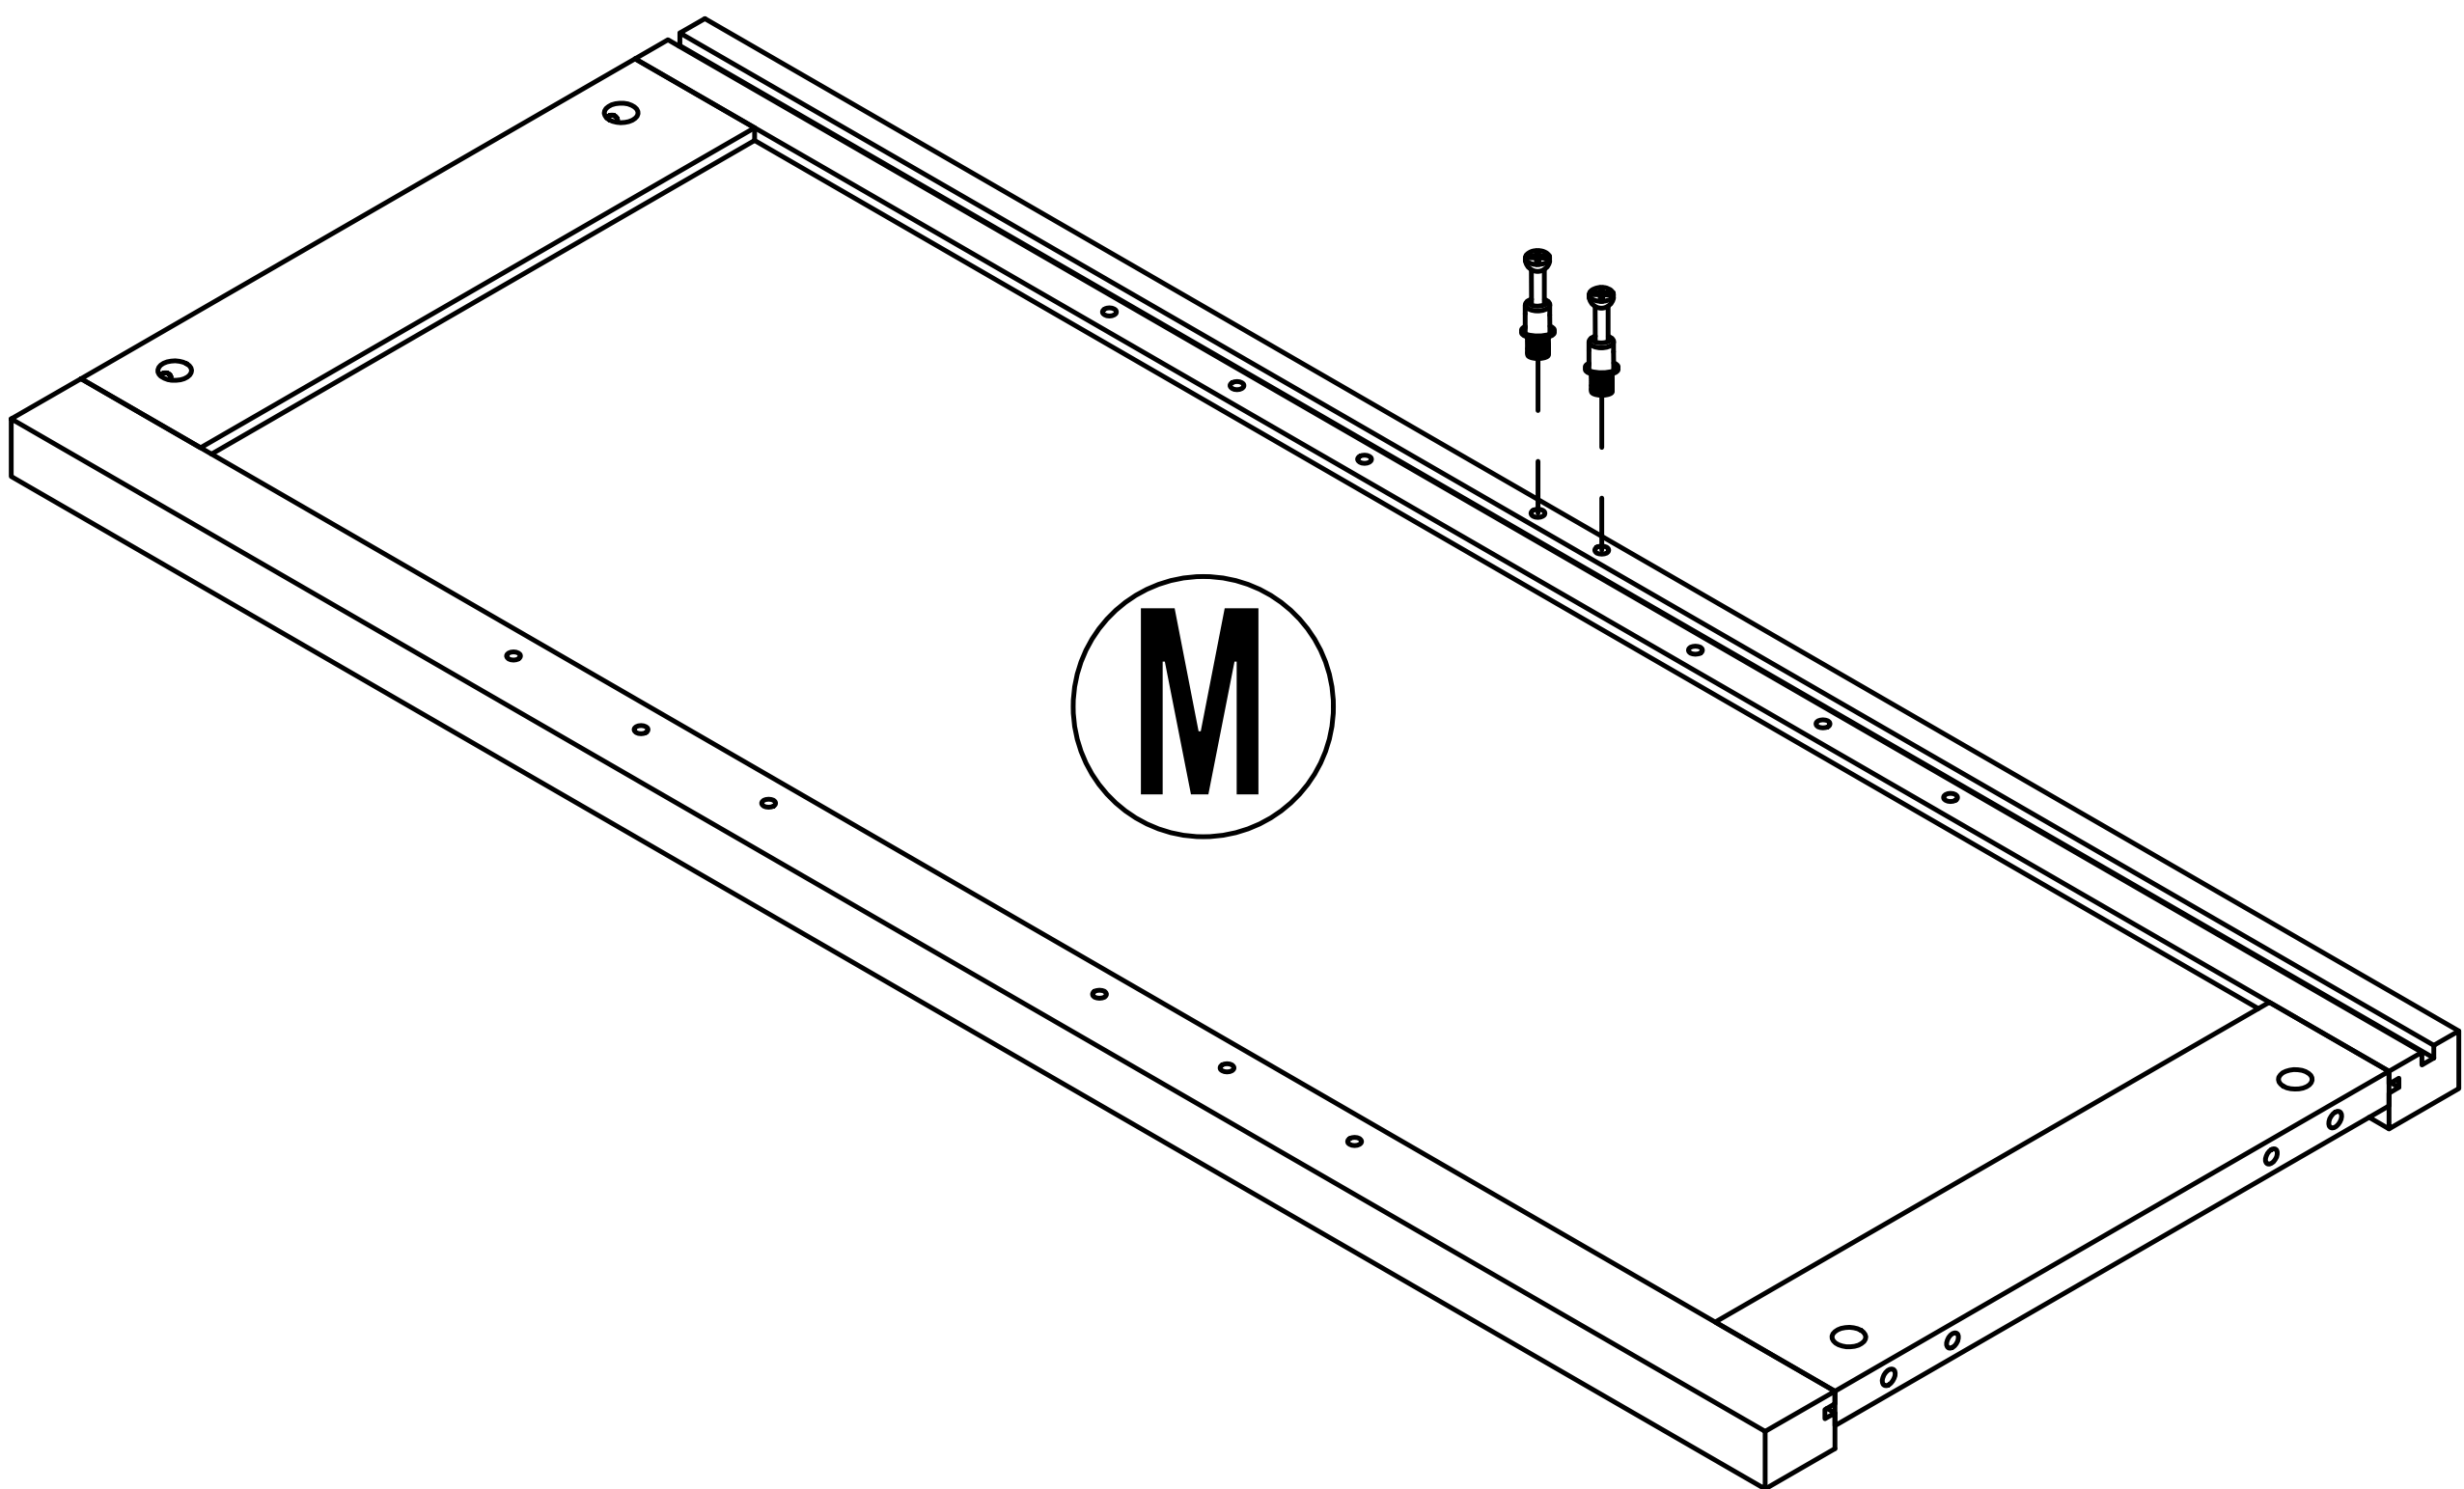


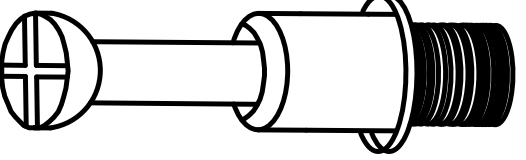
- ①  x4

x2

Step 21


2

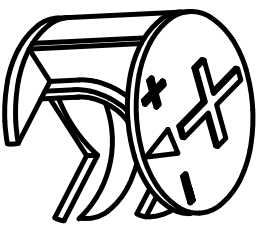 x2

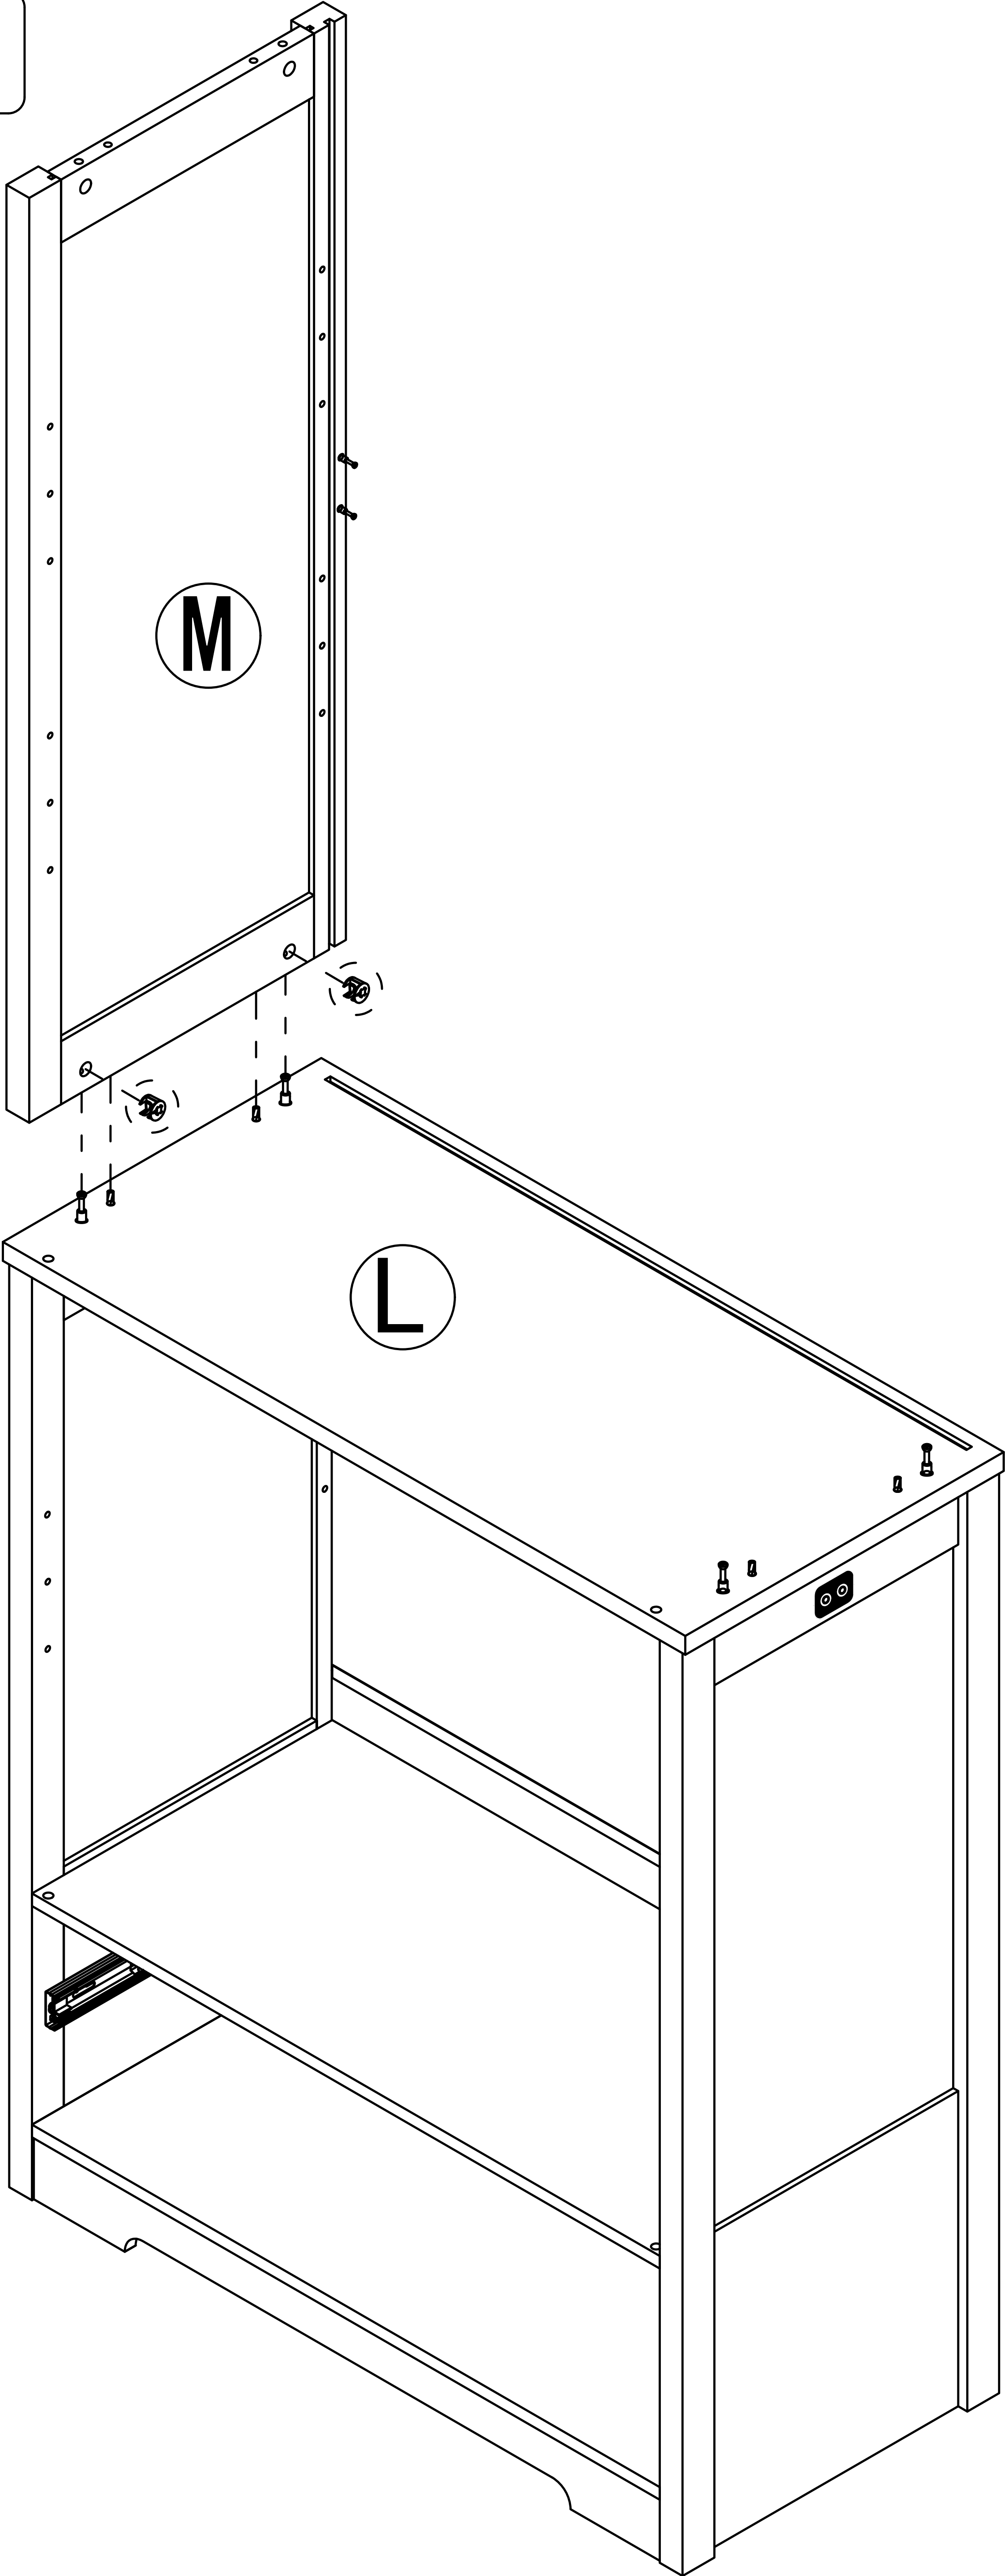


Step 22

Do not install the nuts on this side in this step.

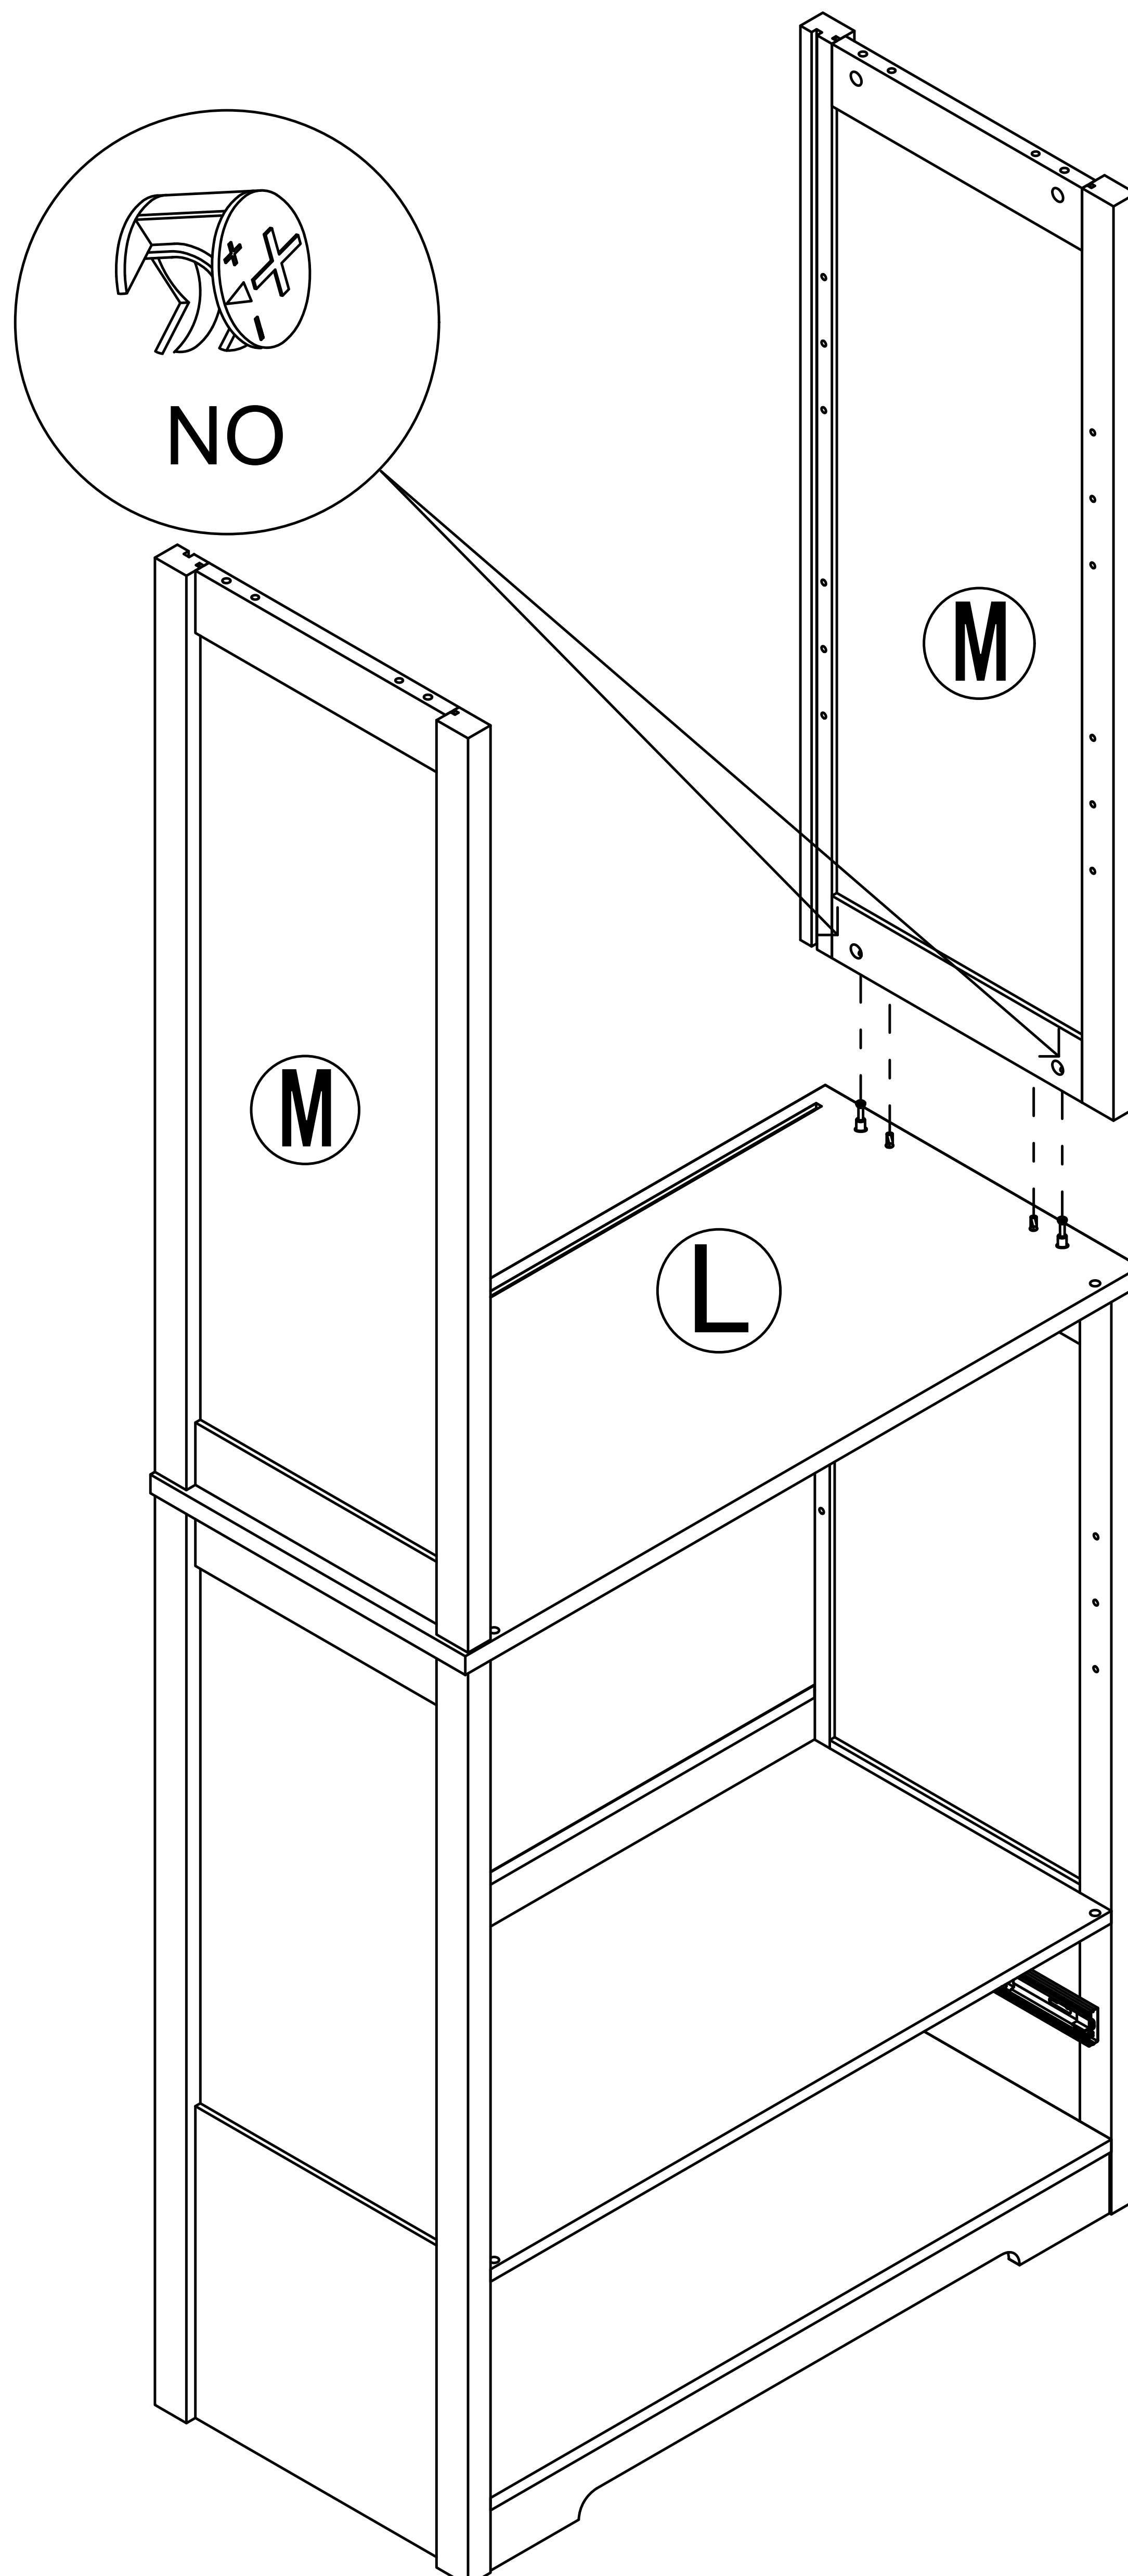




Step 23

2

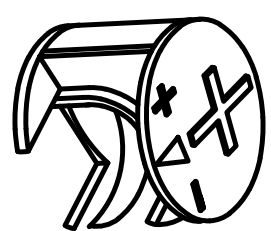


x4

Bend the M board slightly outward to facilitate the installation of the R board.

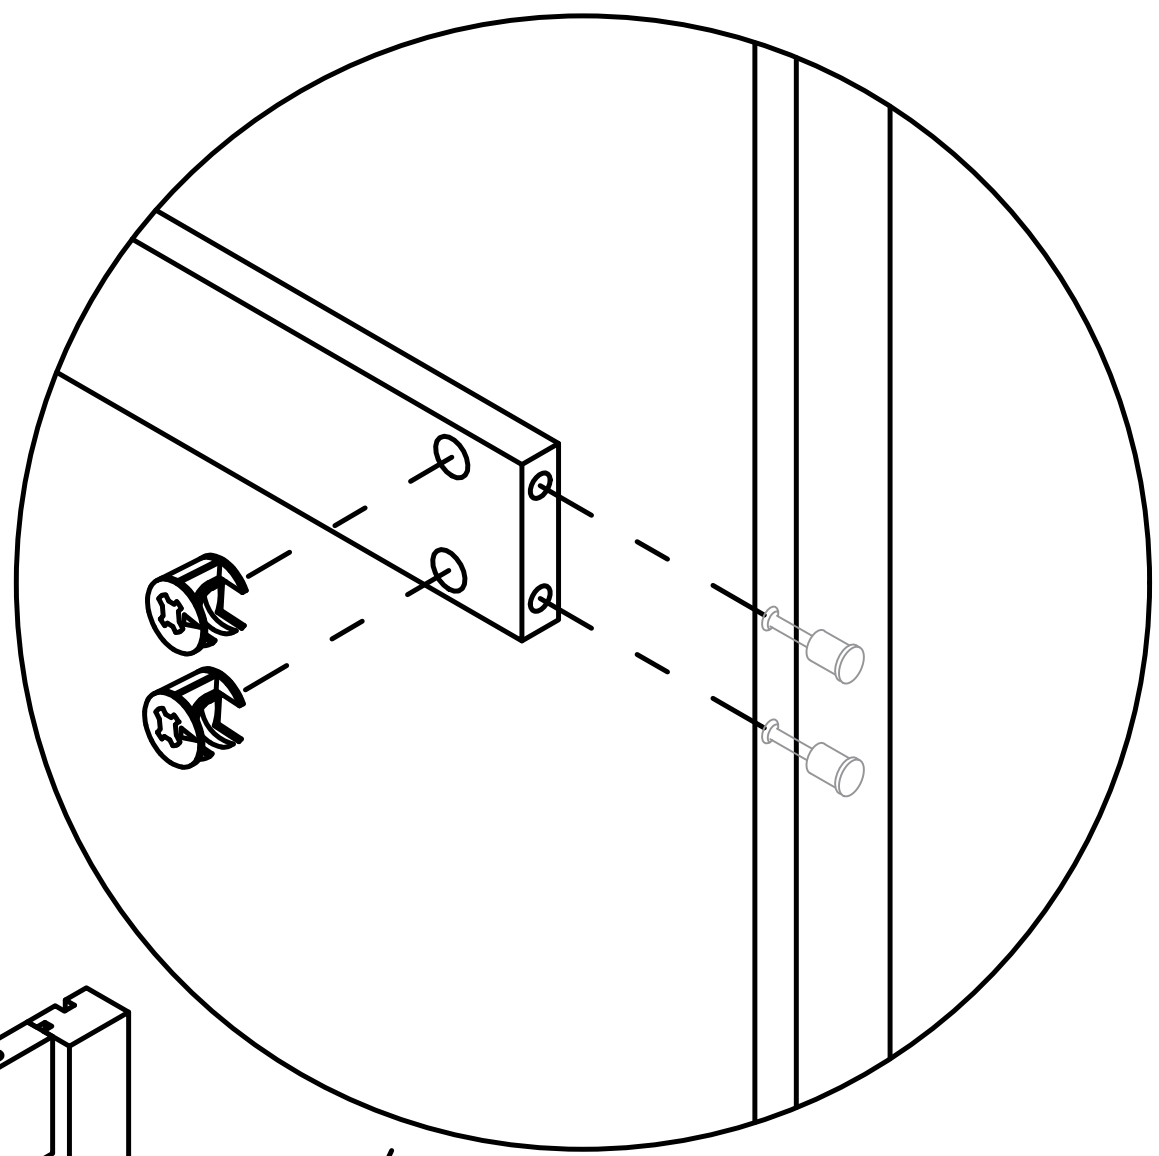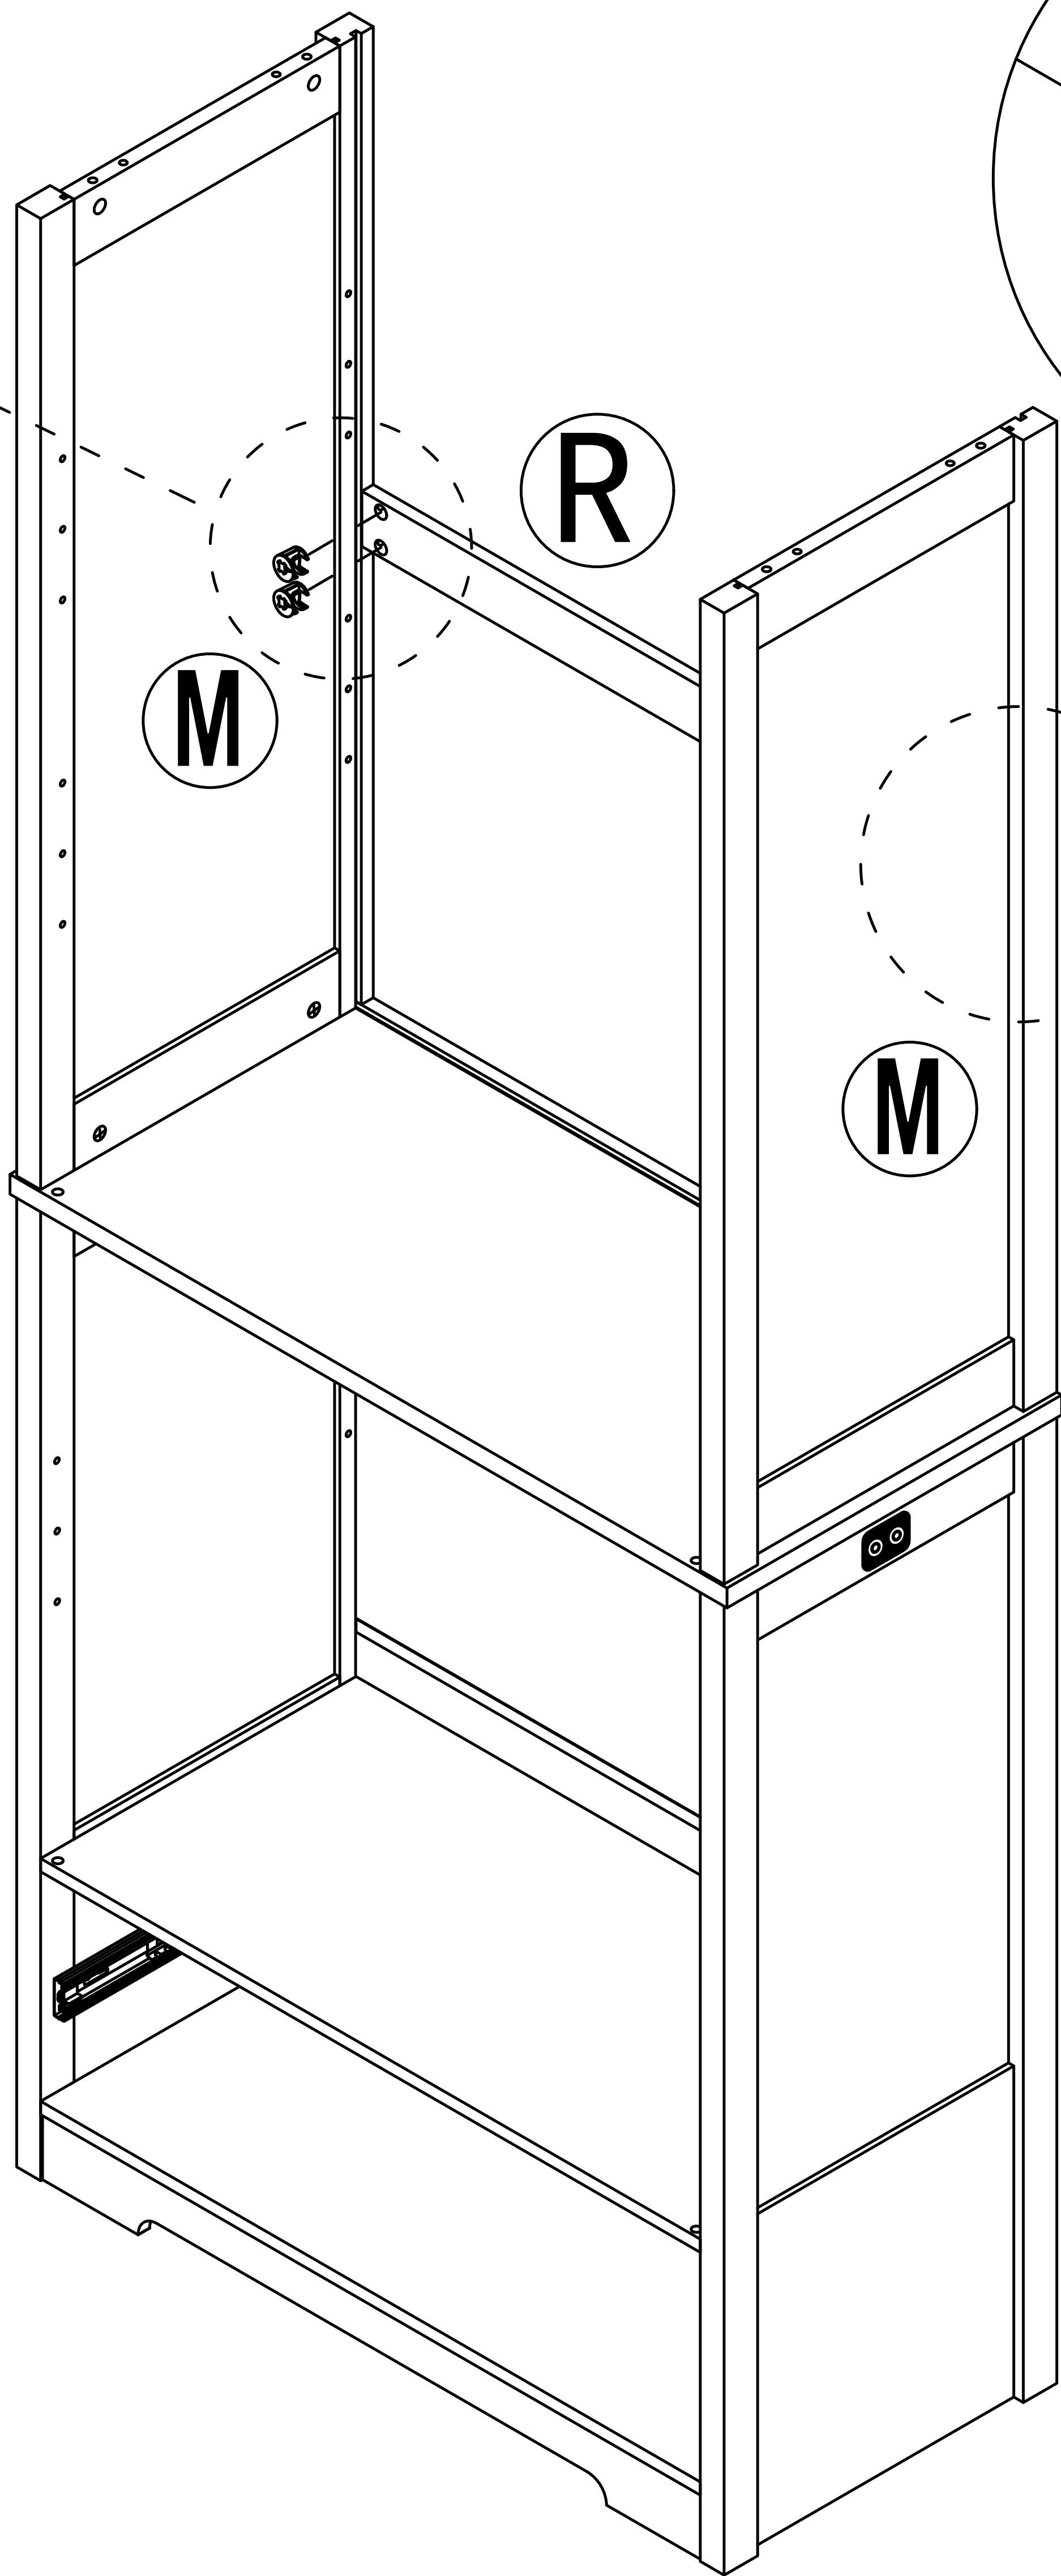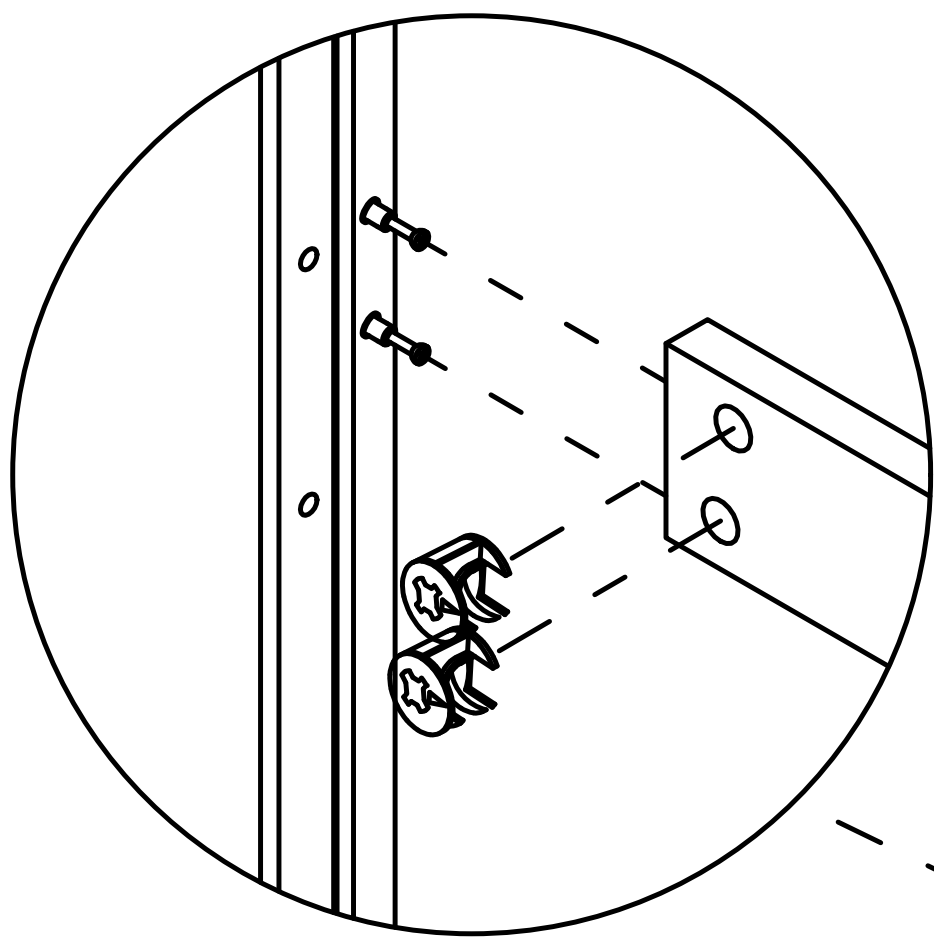


2

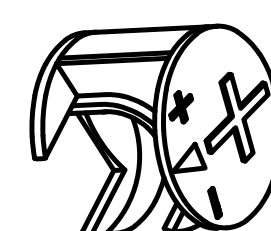


x2

Step 24

Finally, tighten this two-in-one nut.
Be sure to install the two-in-one nut
with the opening facing downwards
during the installation process.

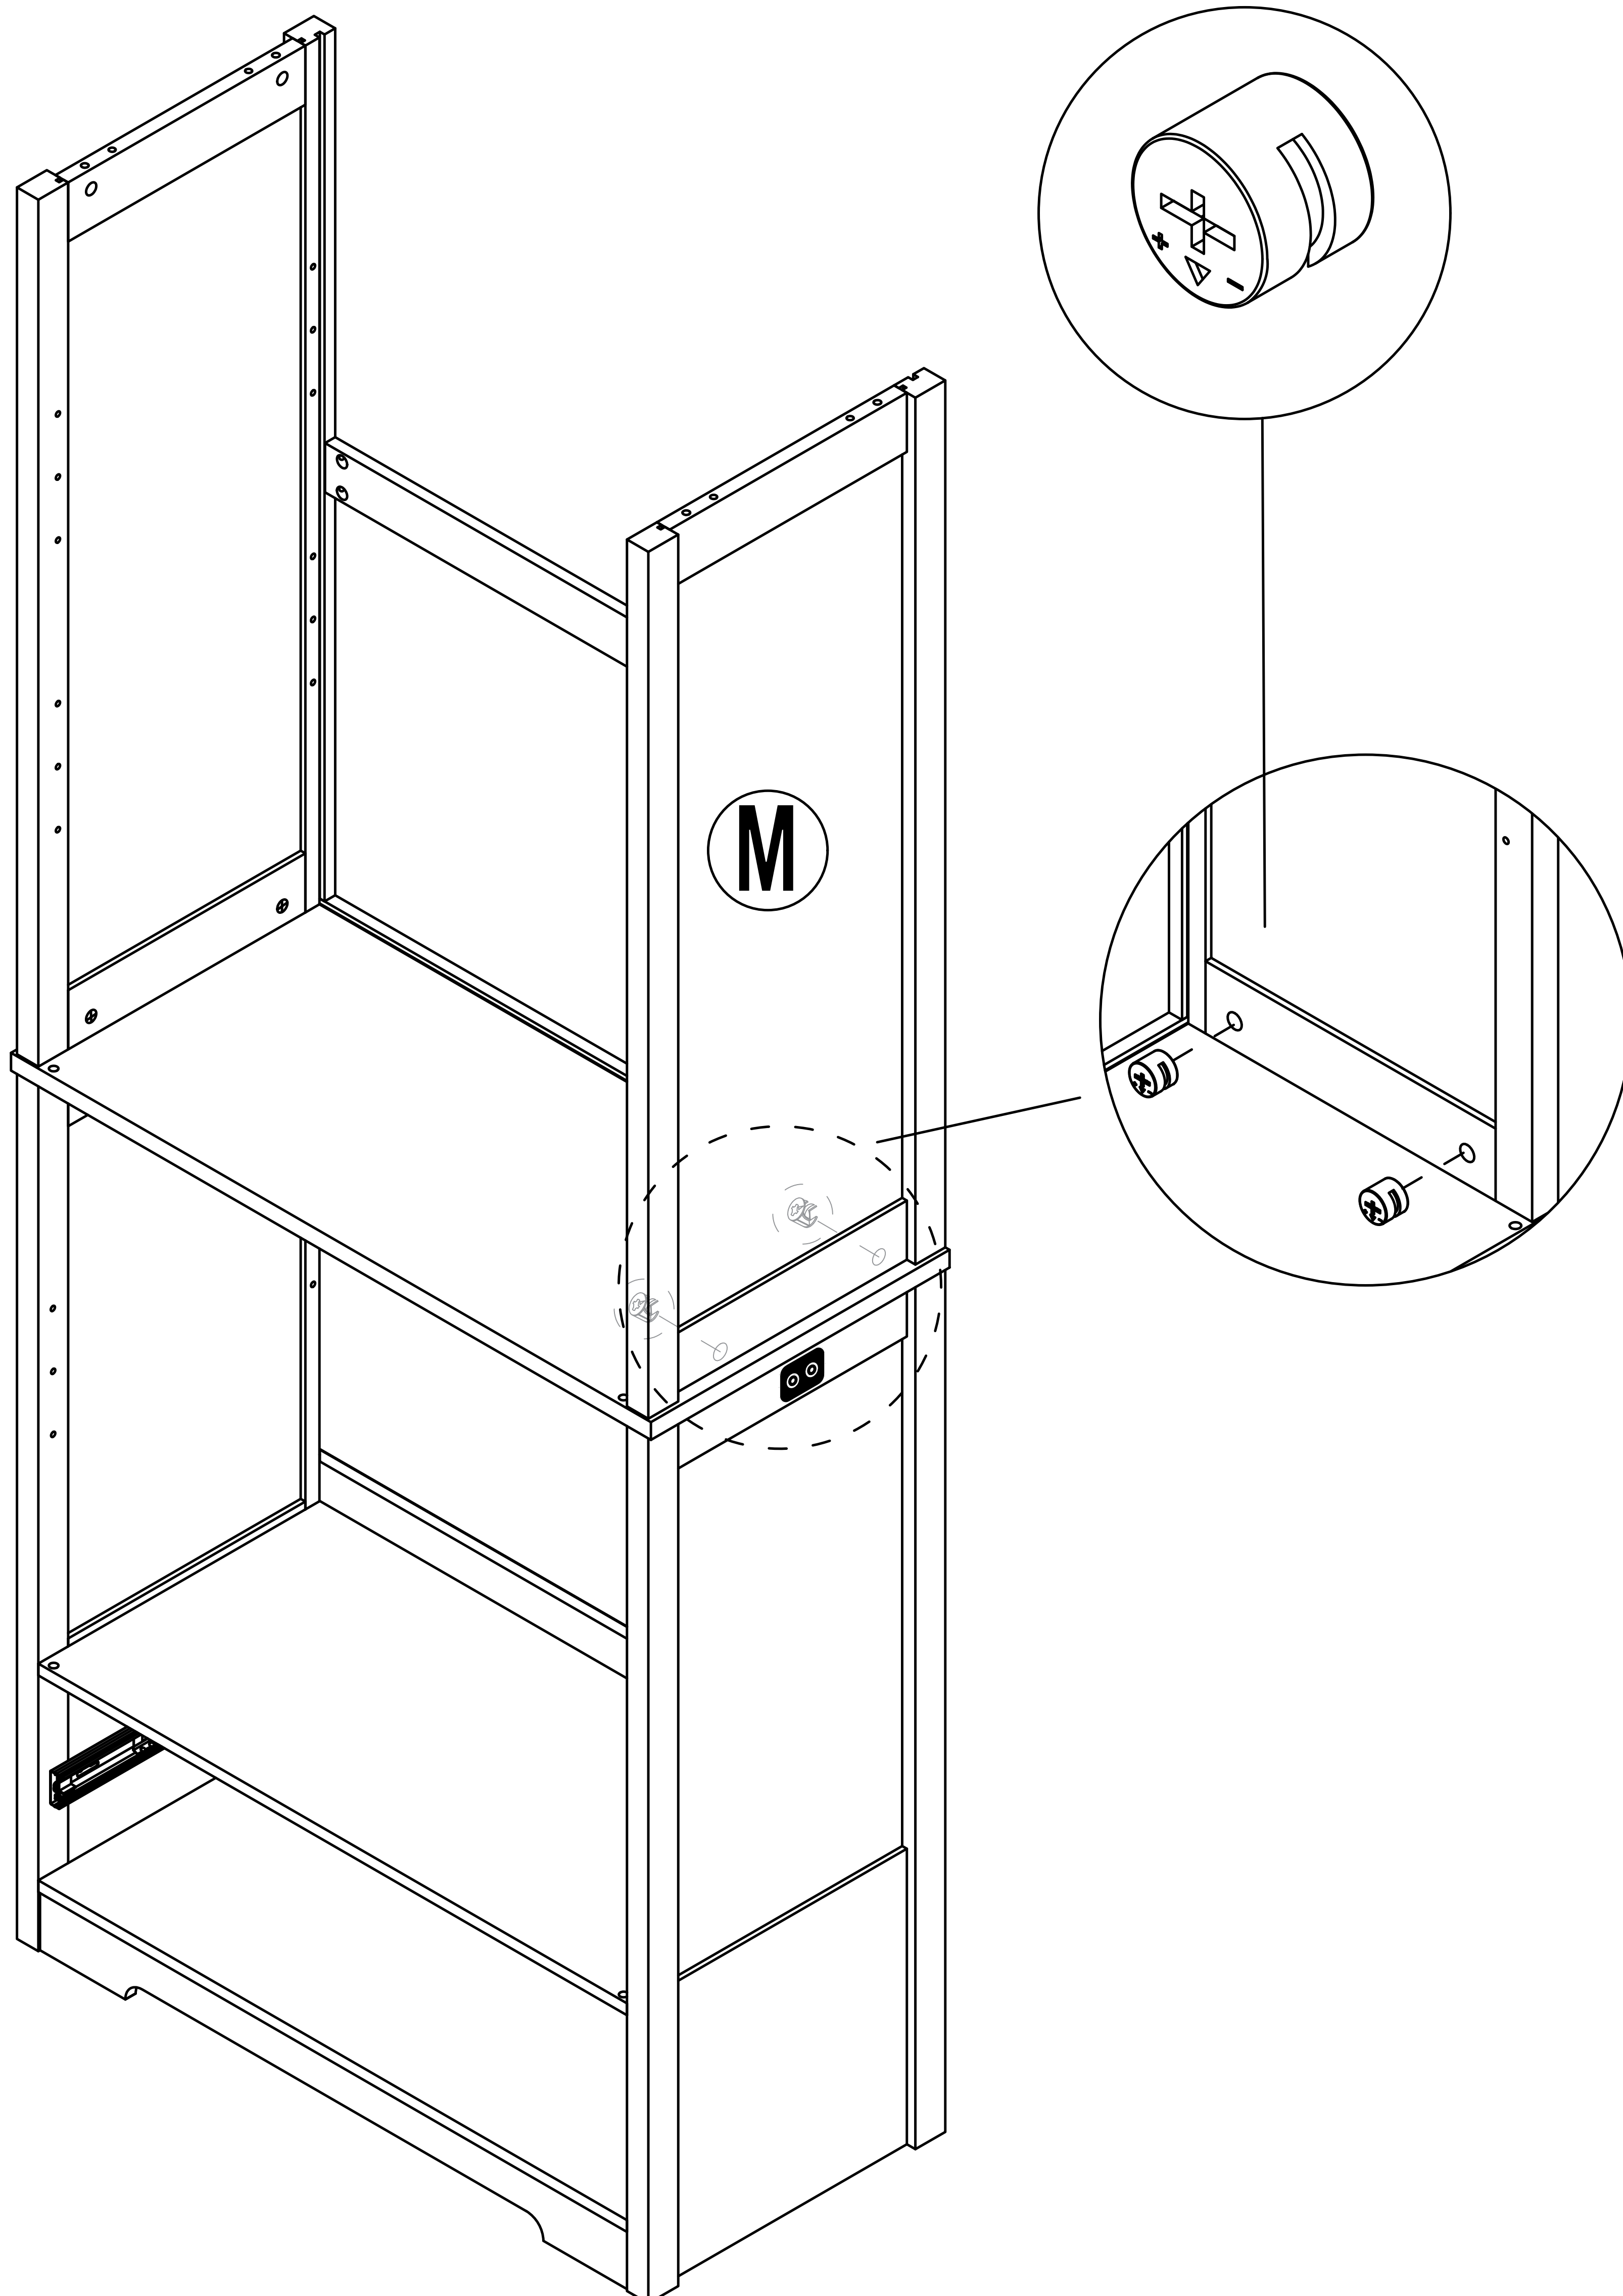


Step 25

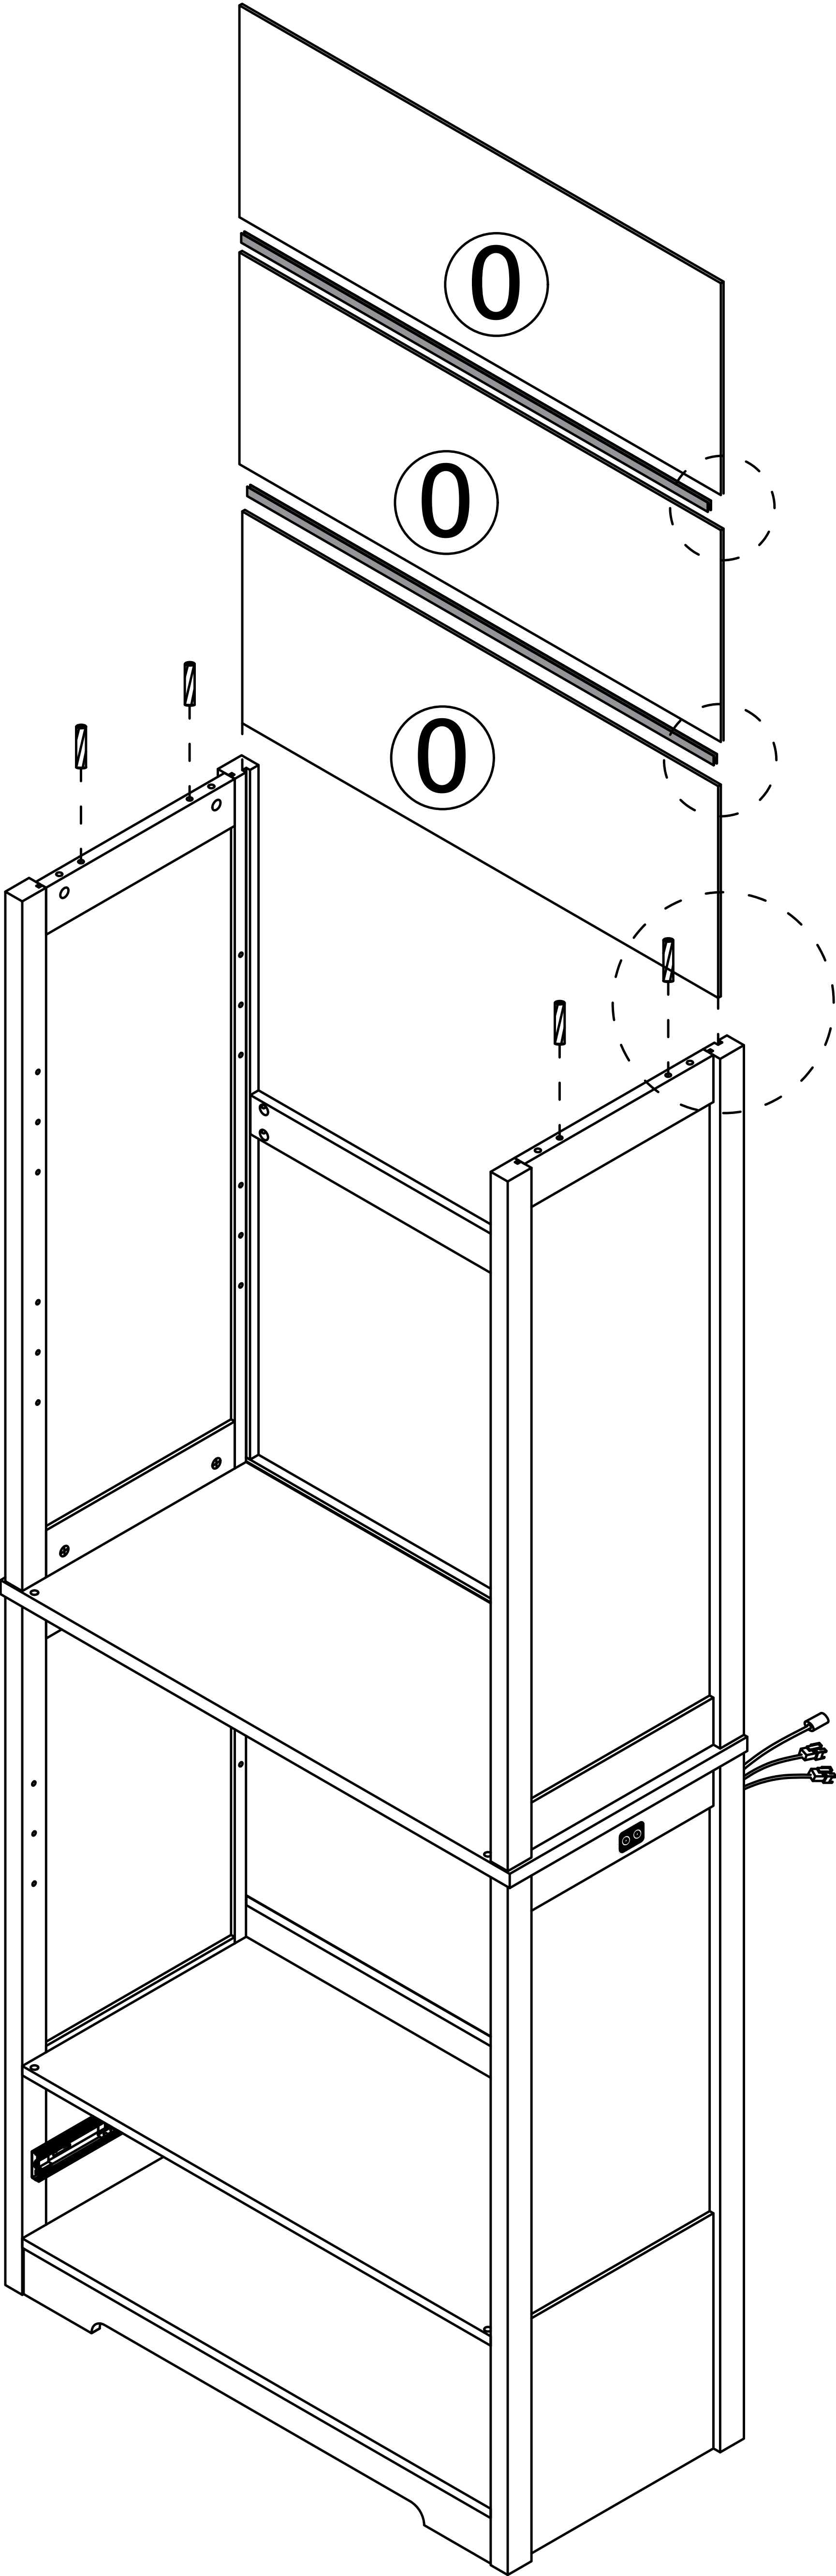



- 3



x4
- 5

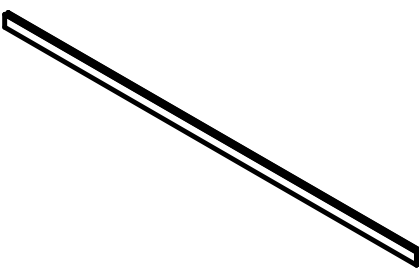


x2

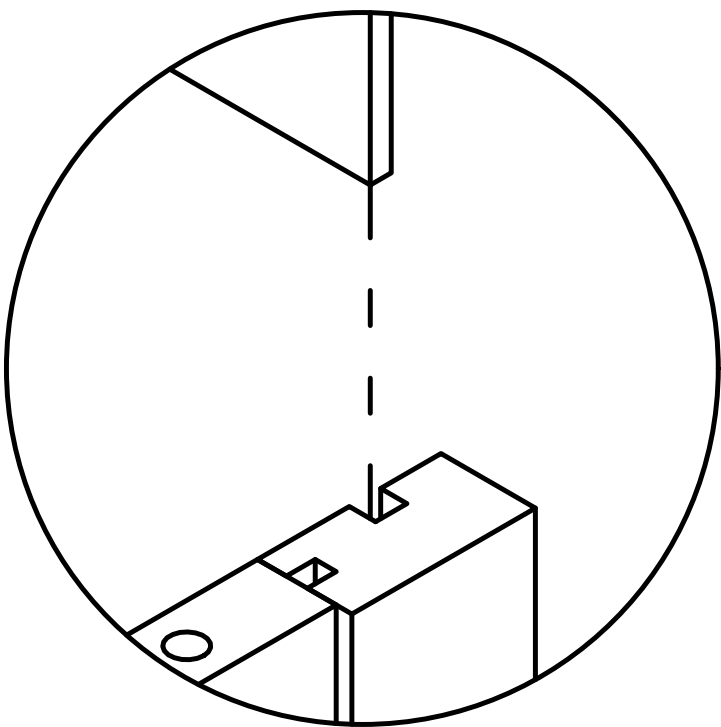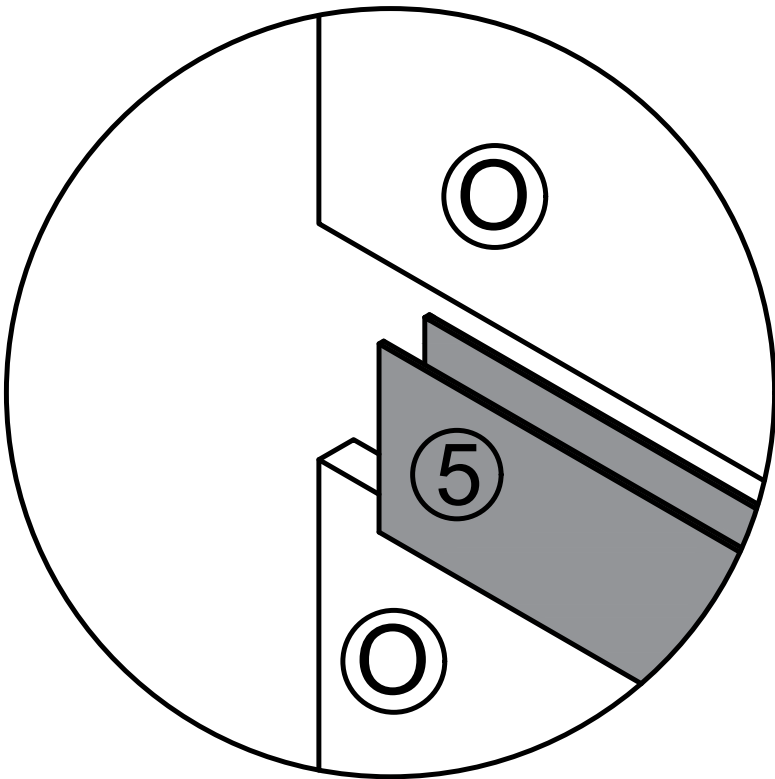



Step 26

- 1

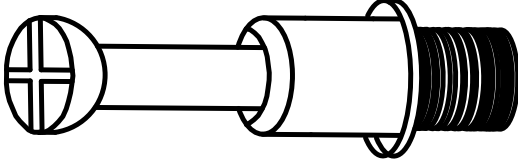


x4
- 6

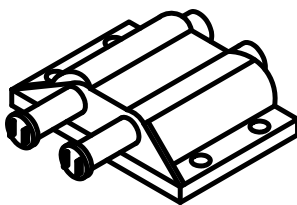


x1
- 

x4

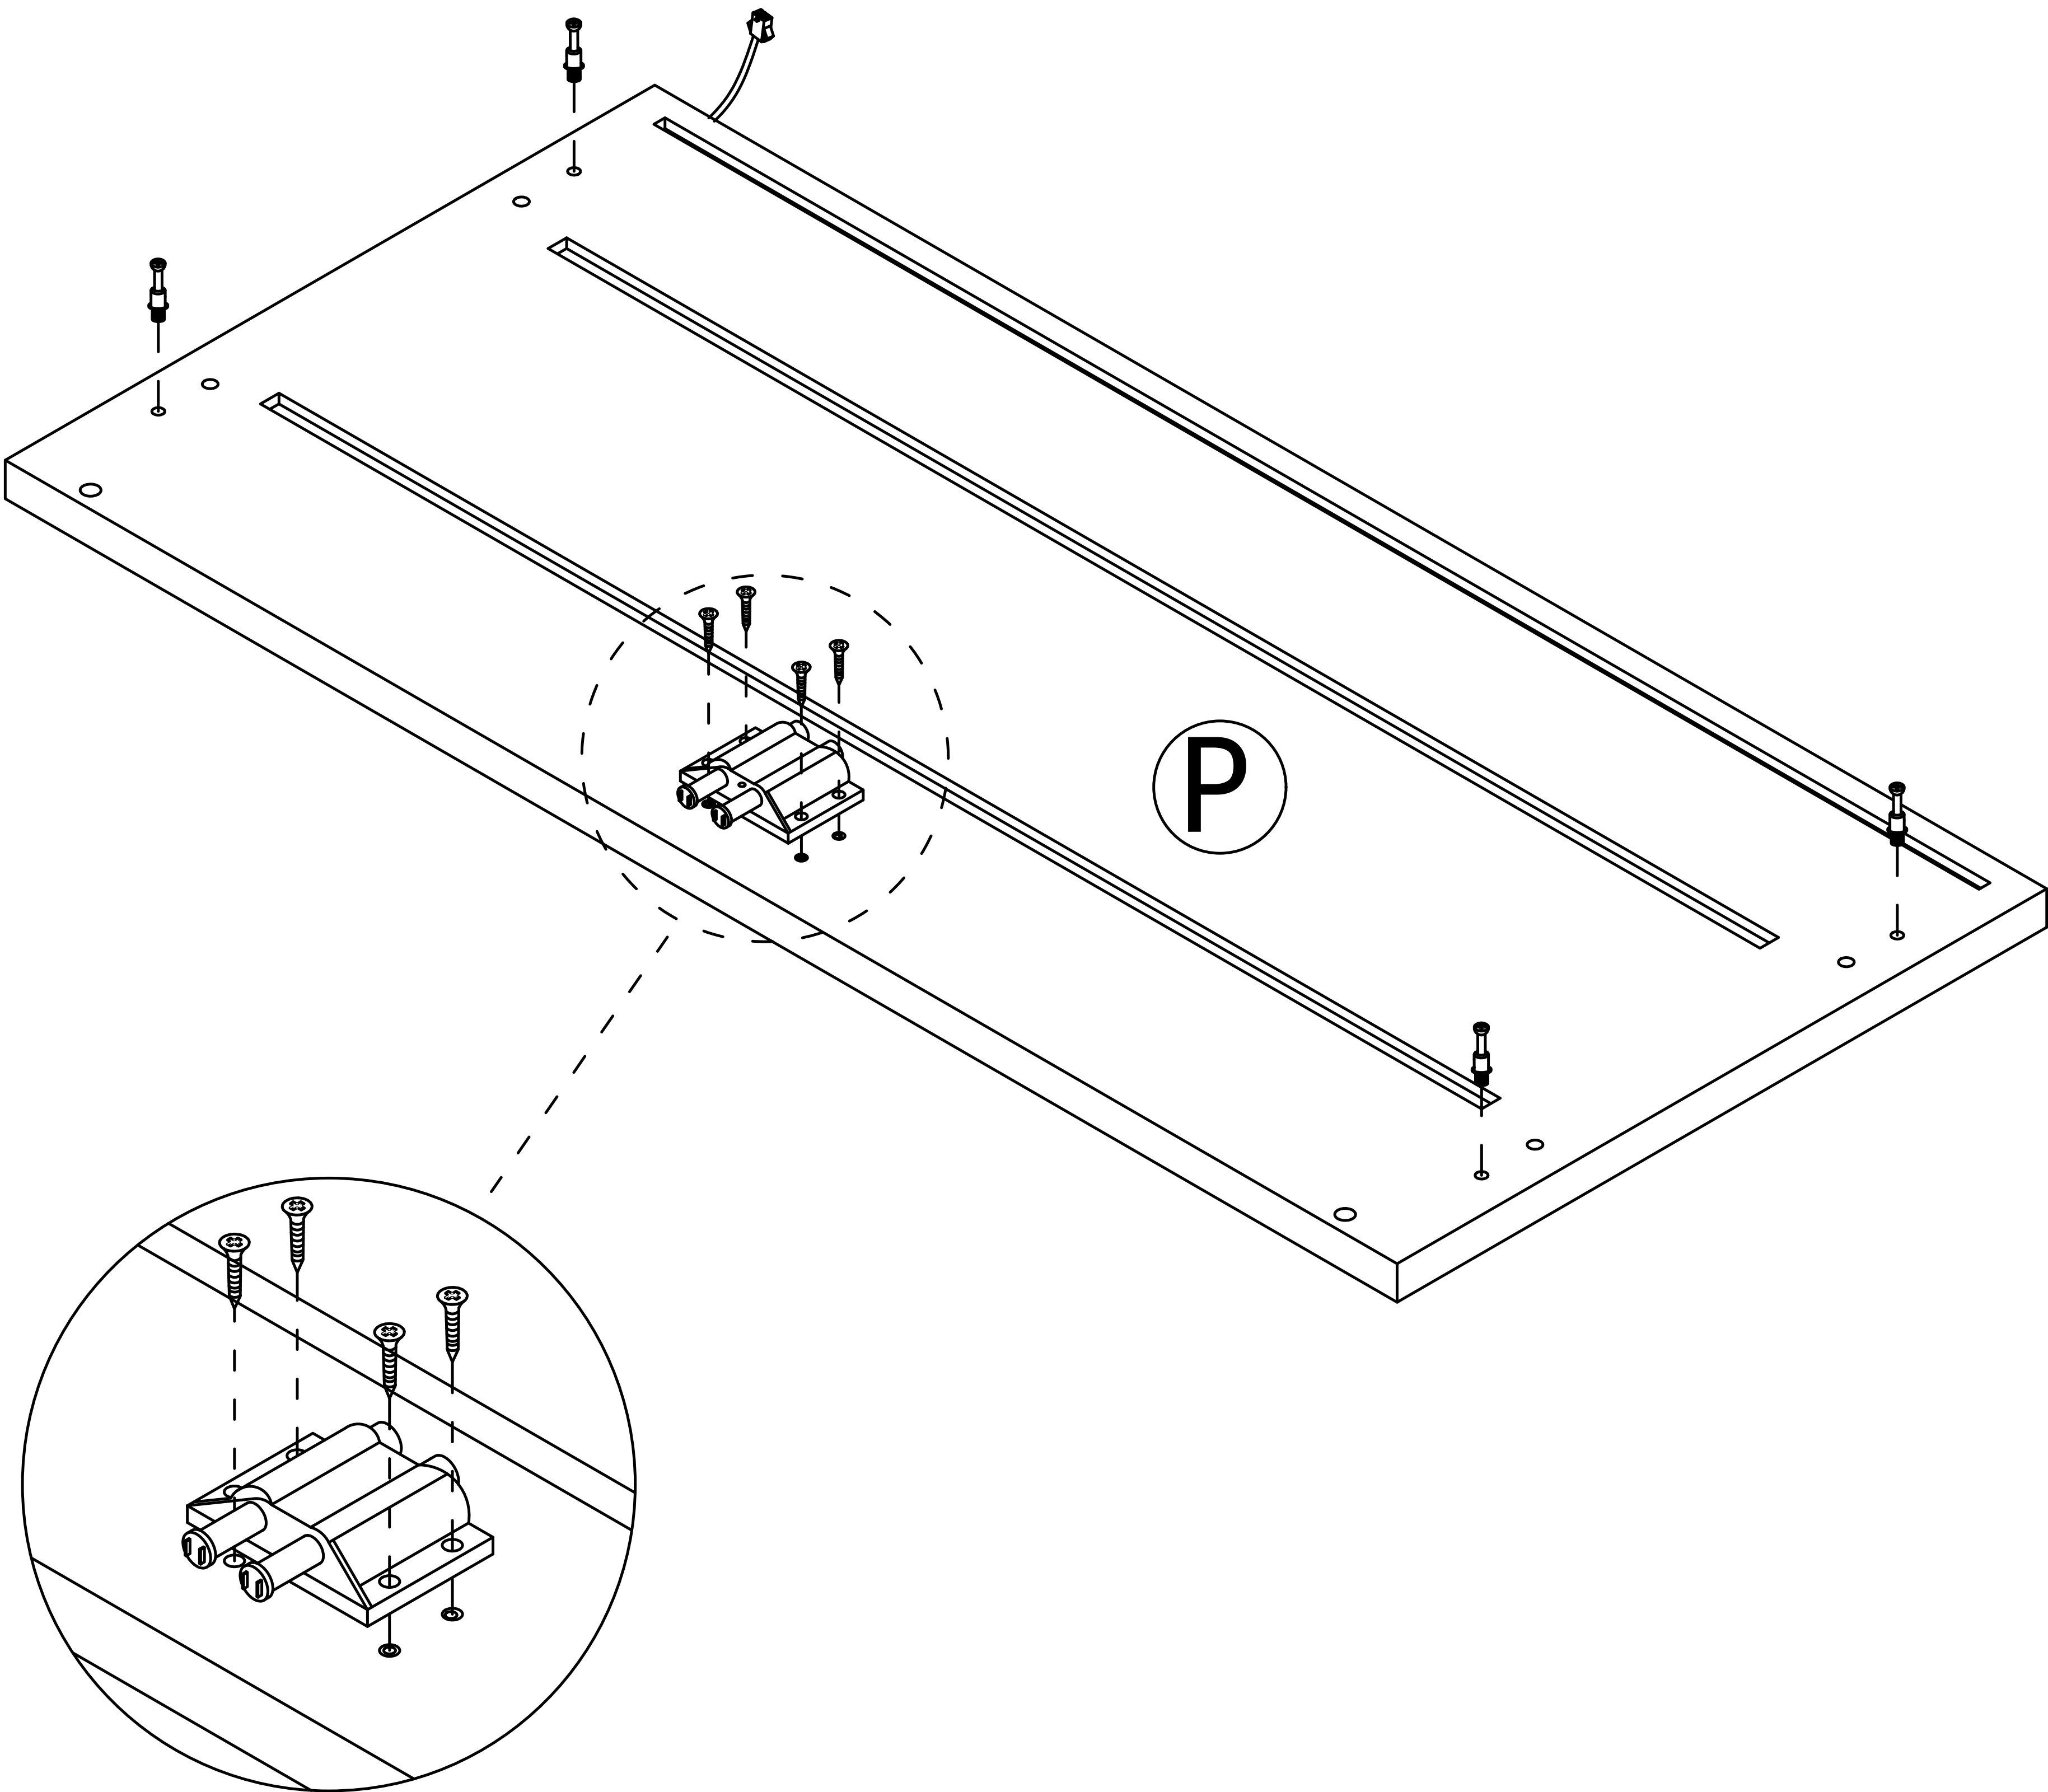


Step 27


2

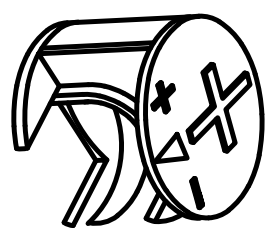

x4





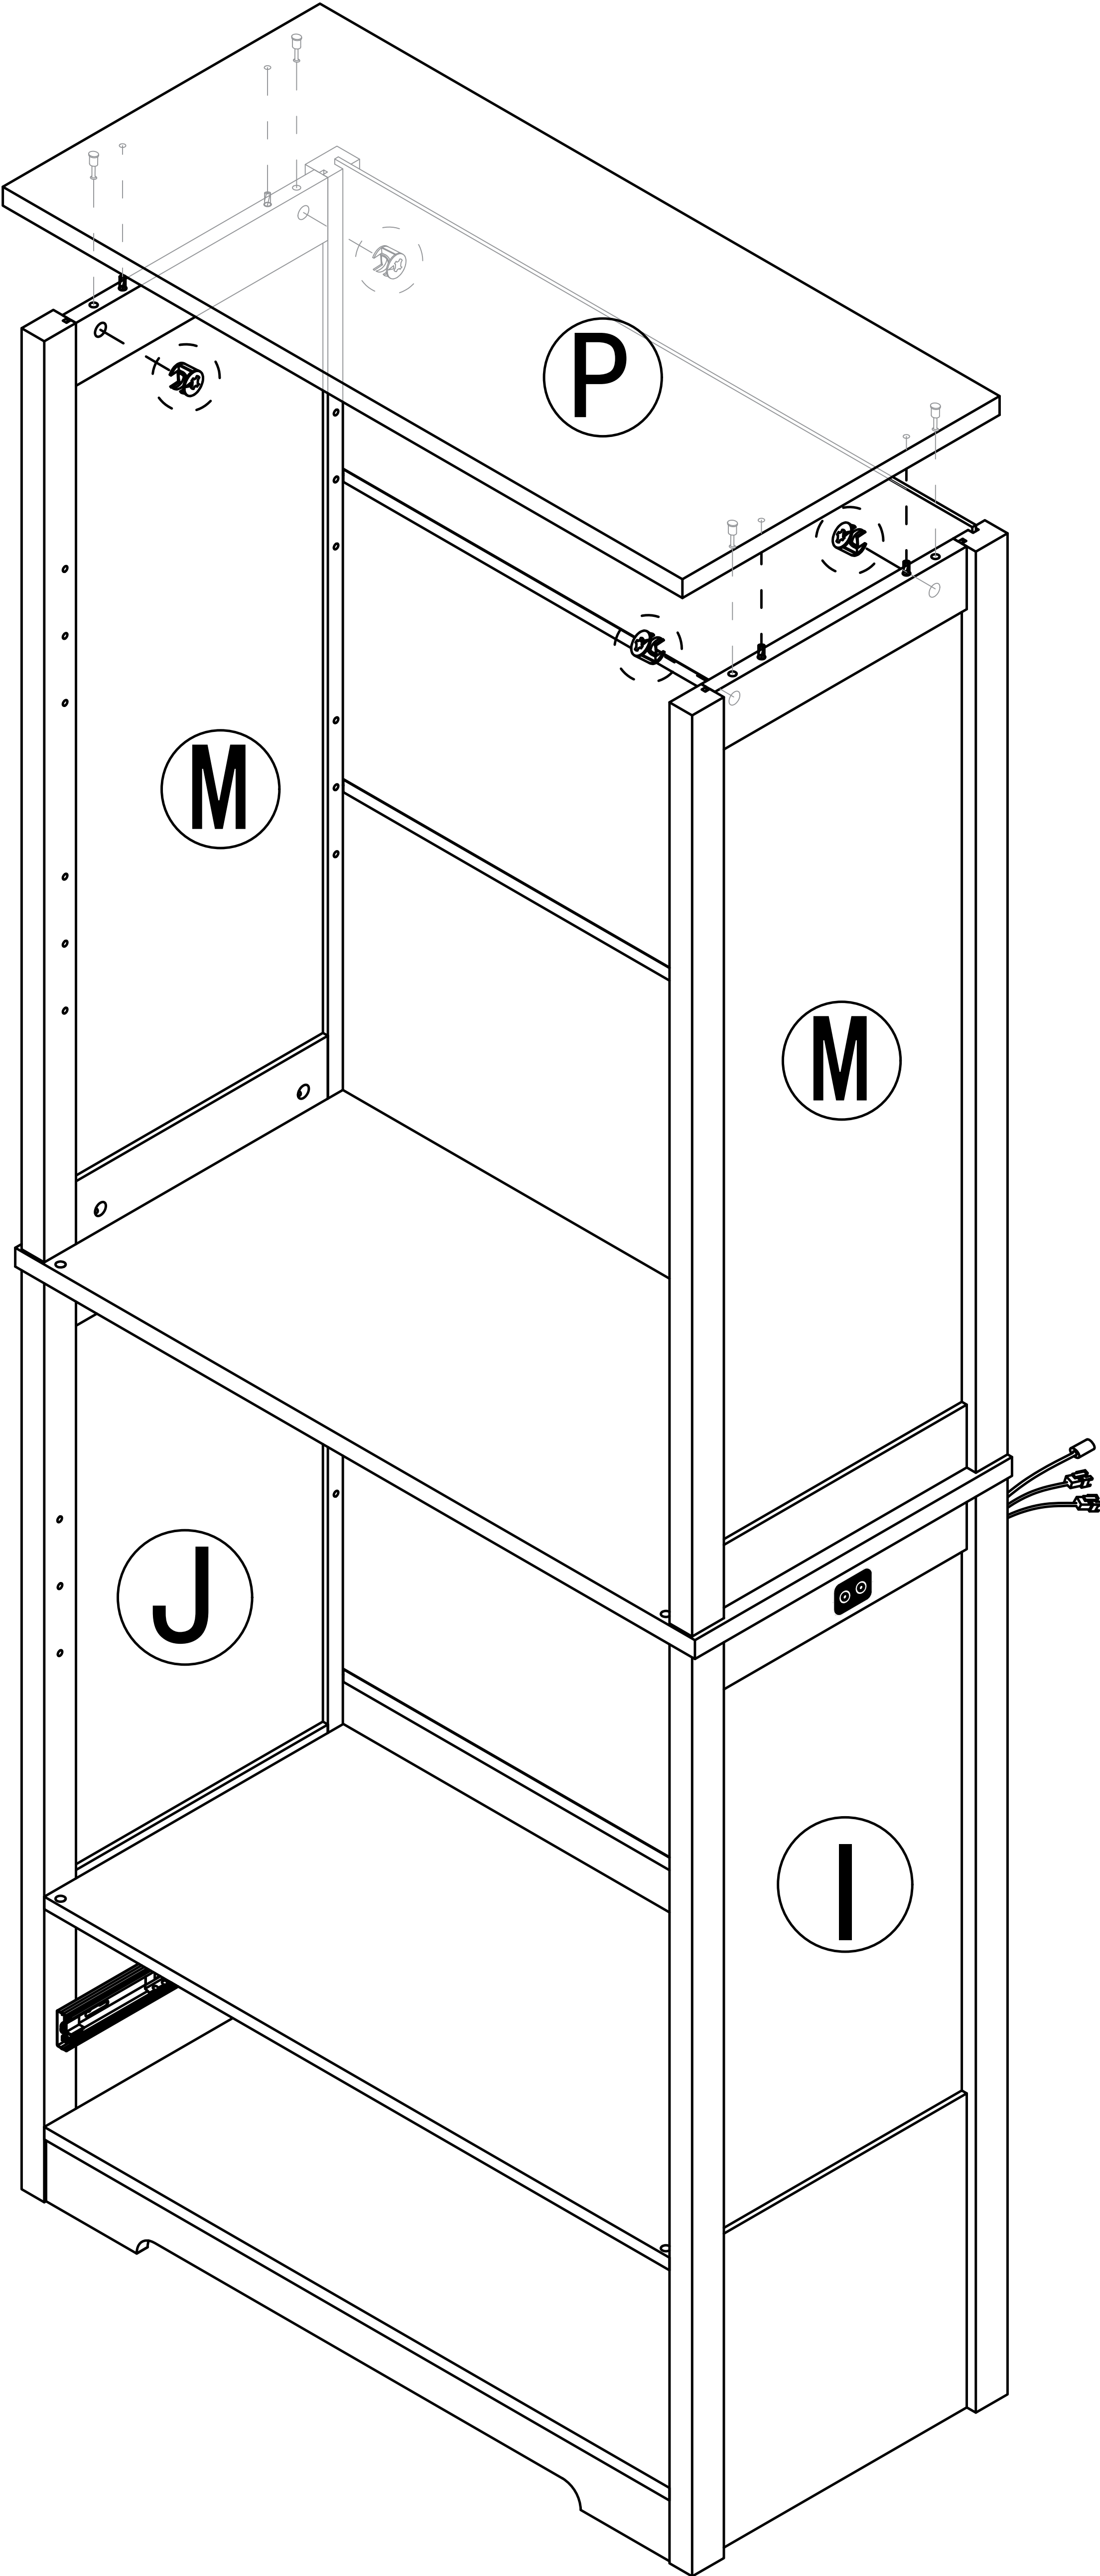


Step 28

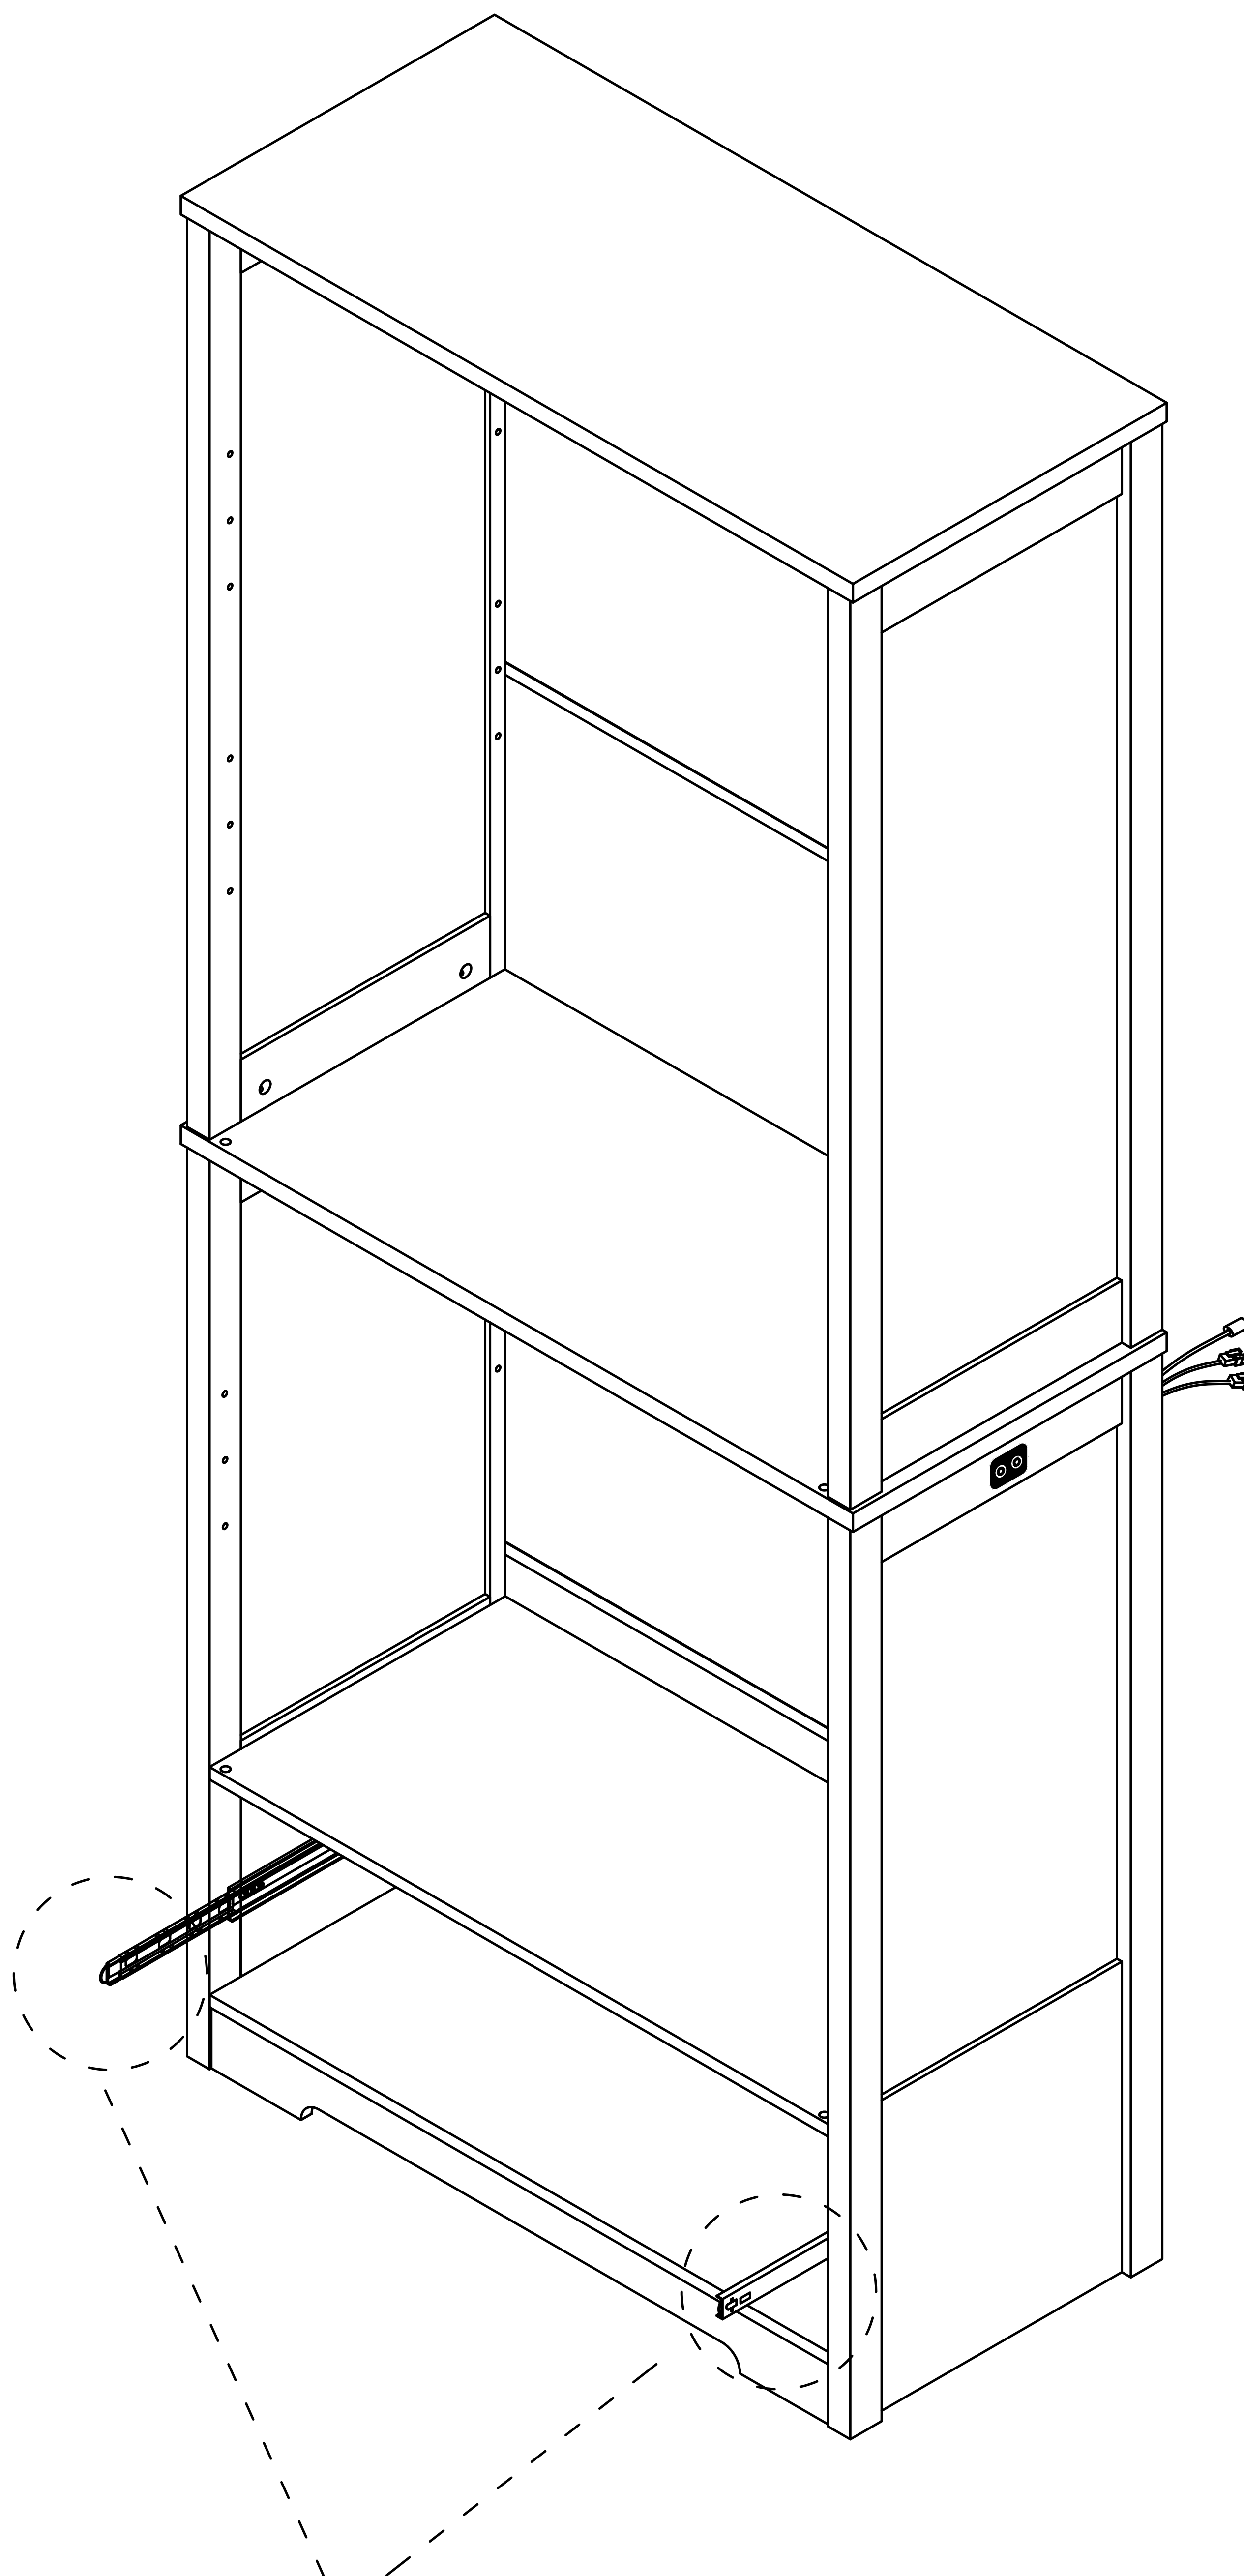

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 29

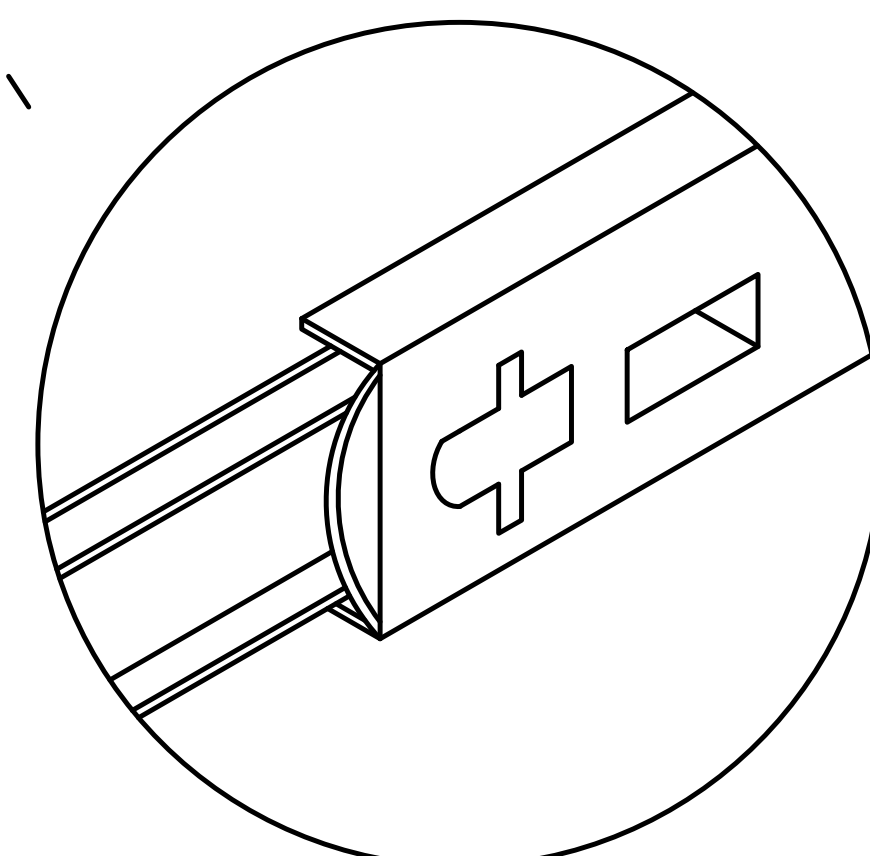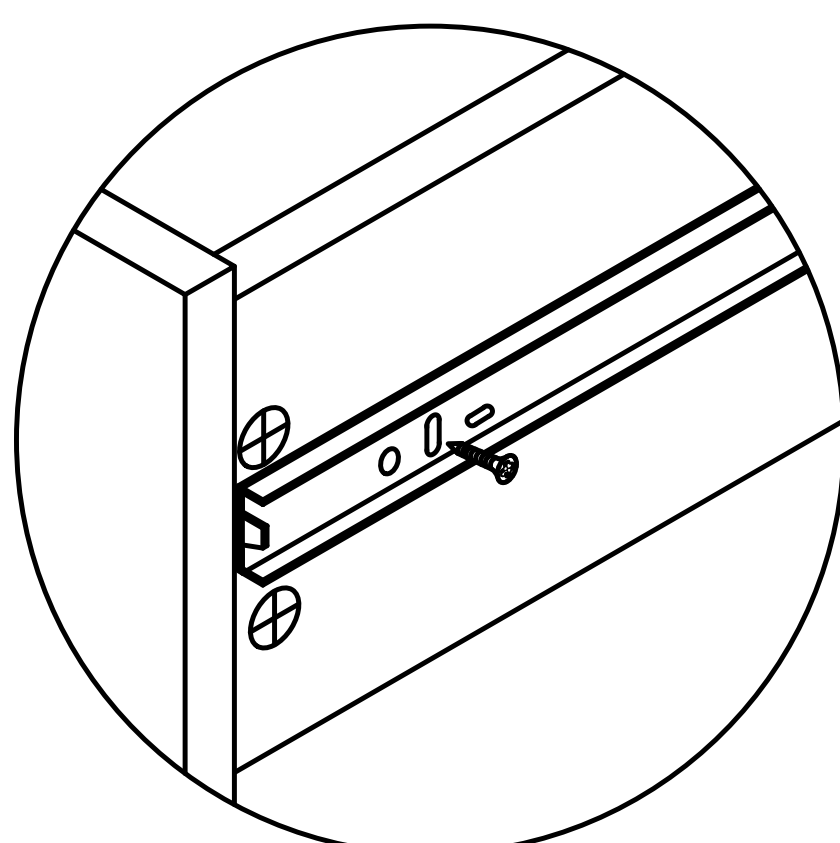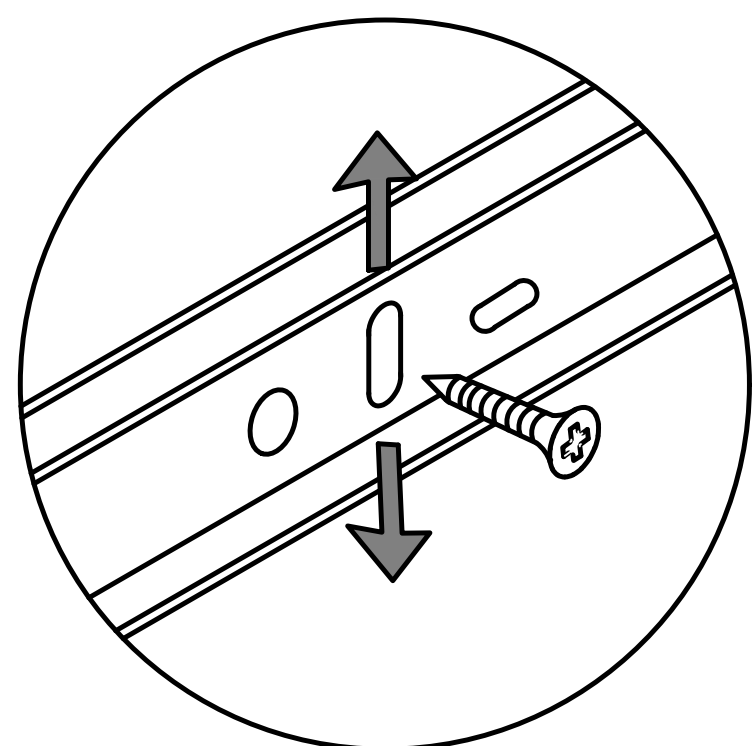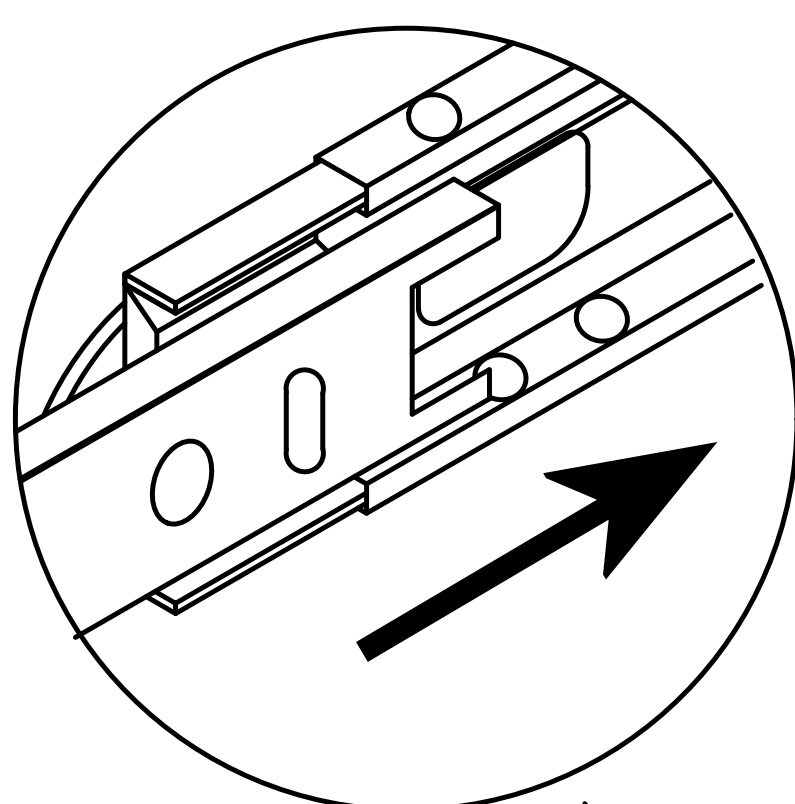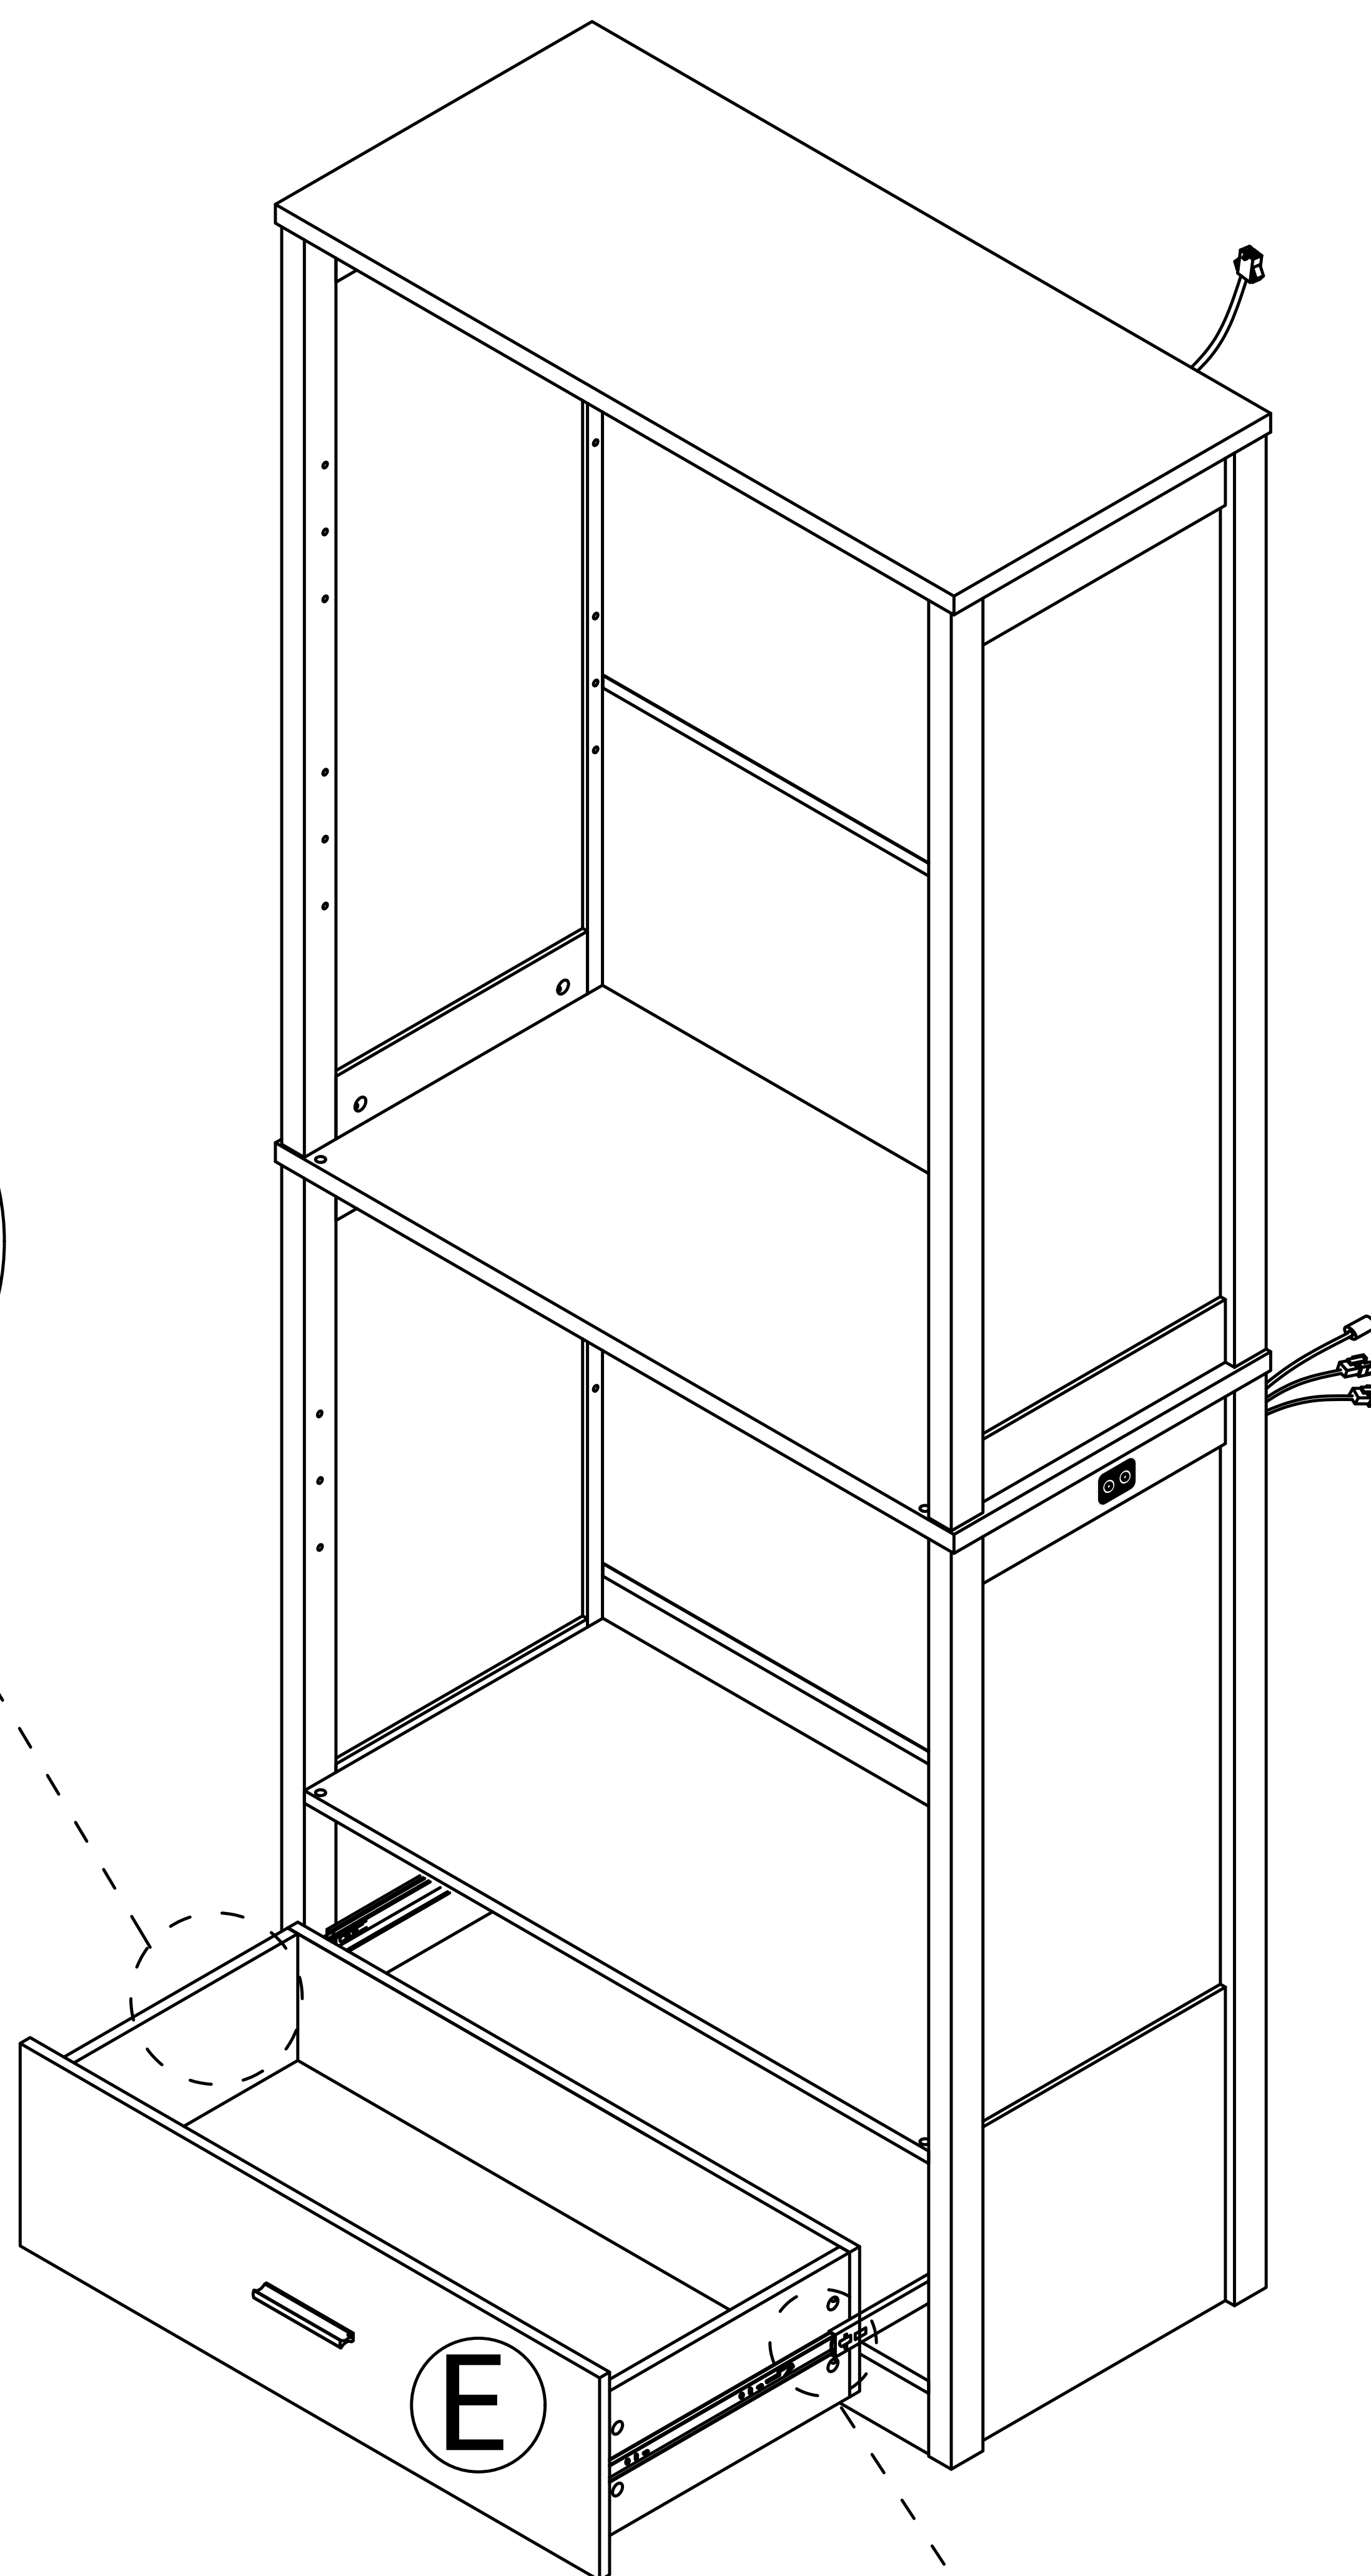


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 30


7

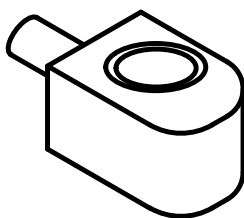

x12

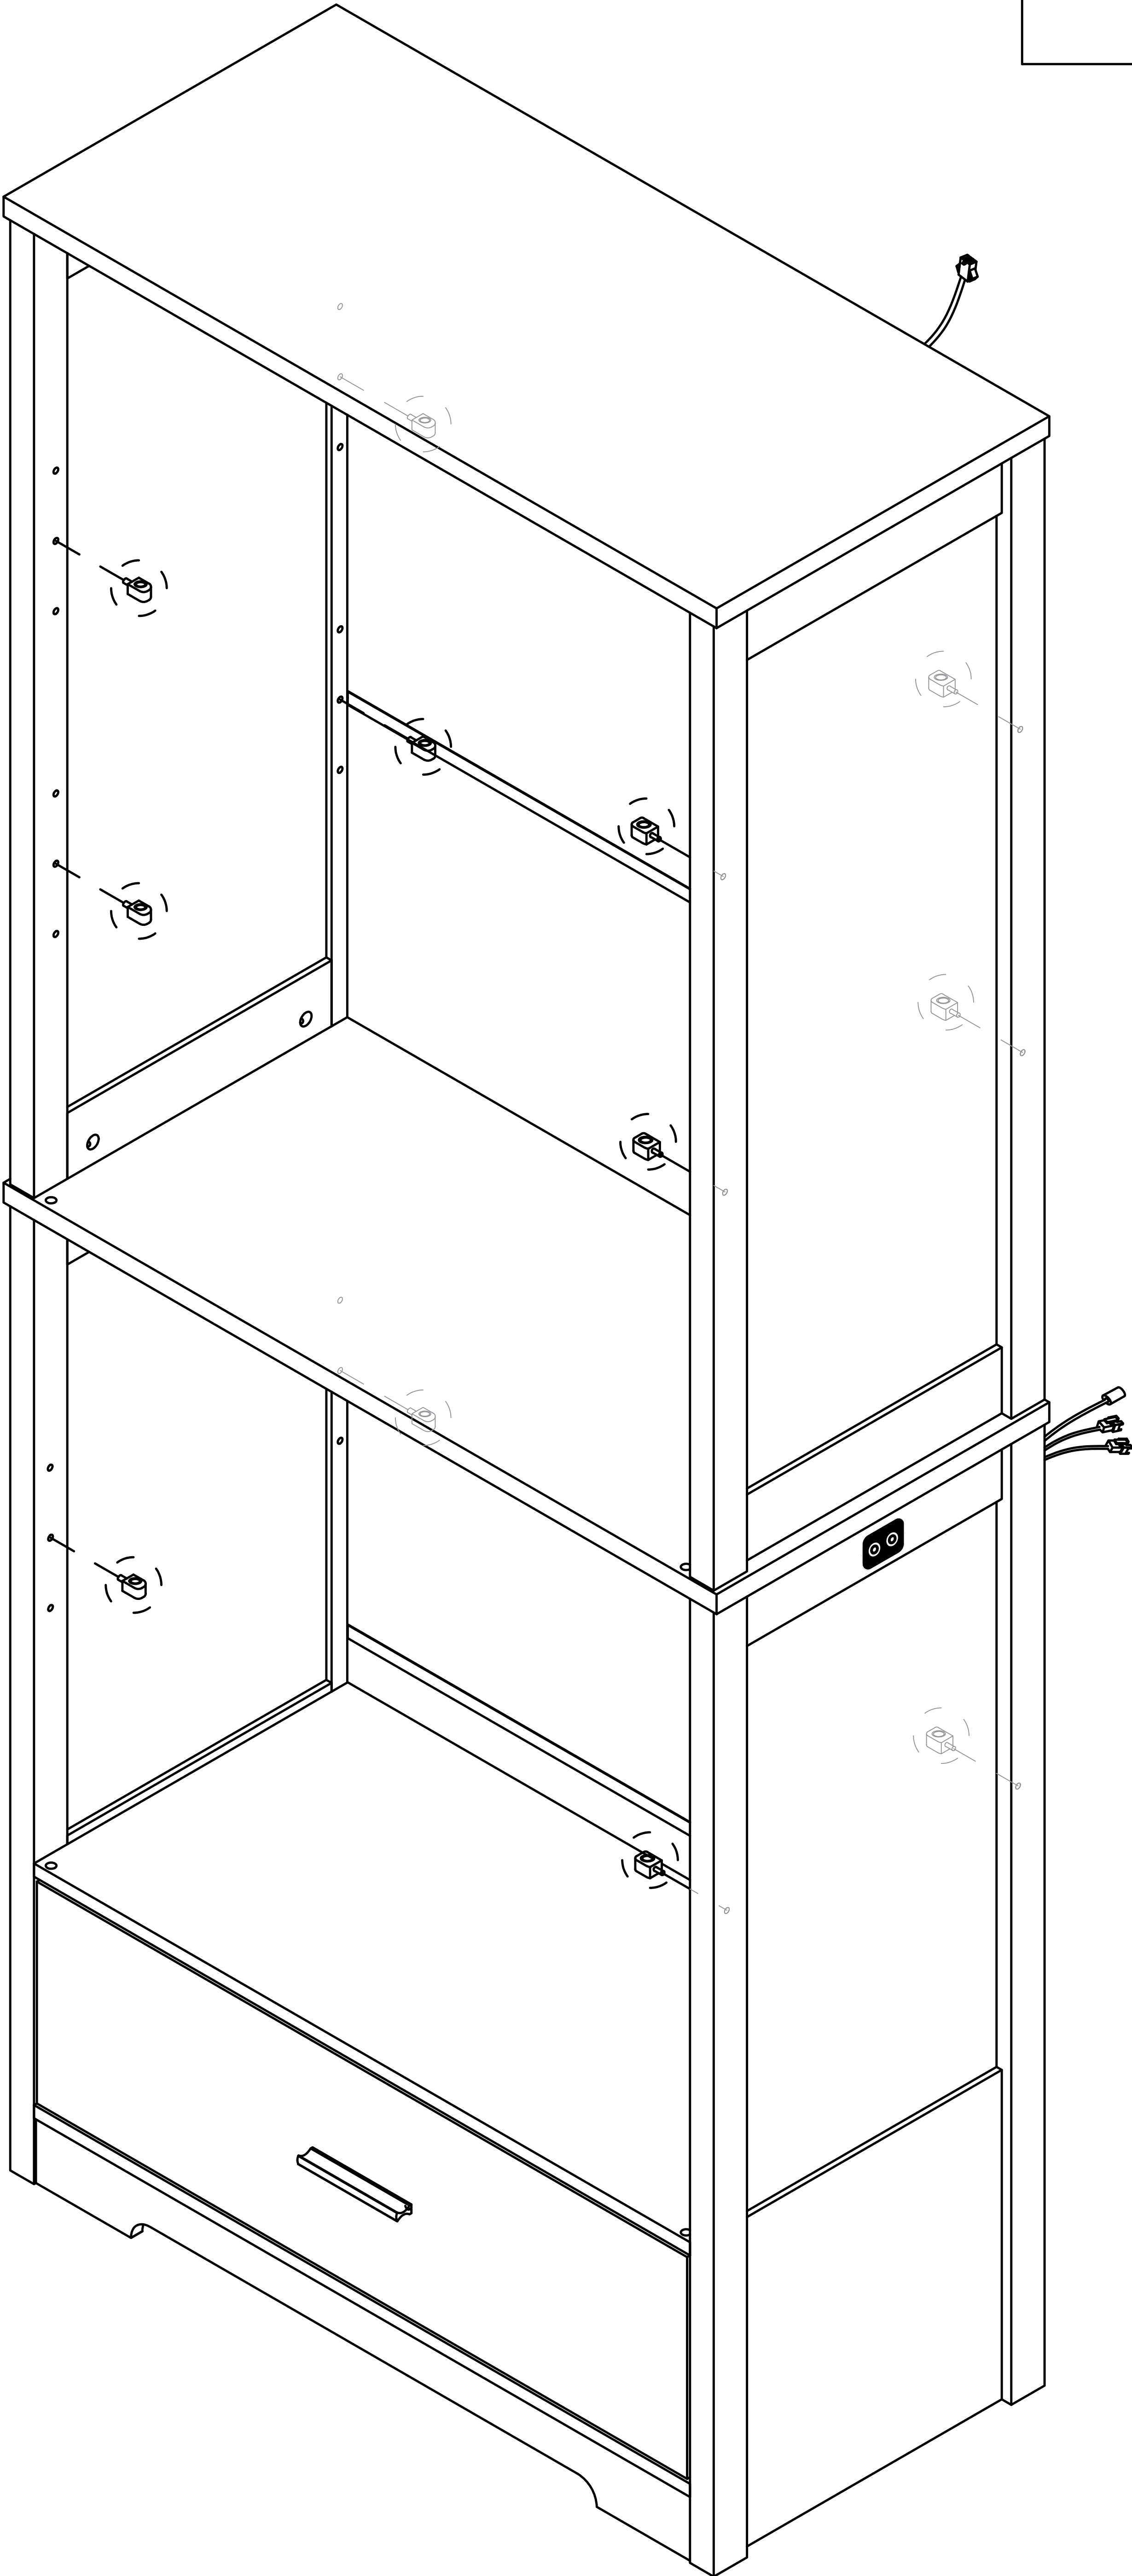


Step 31

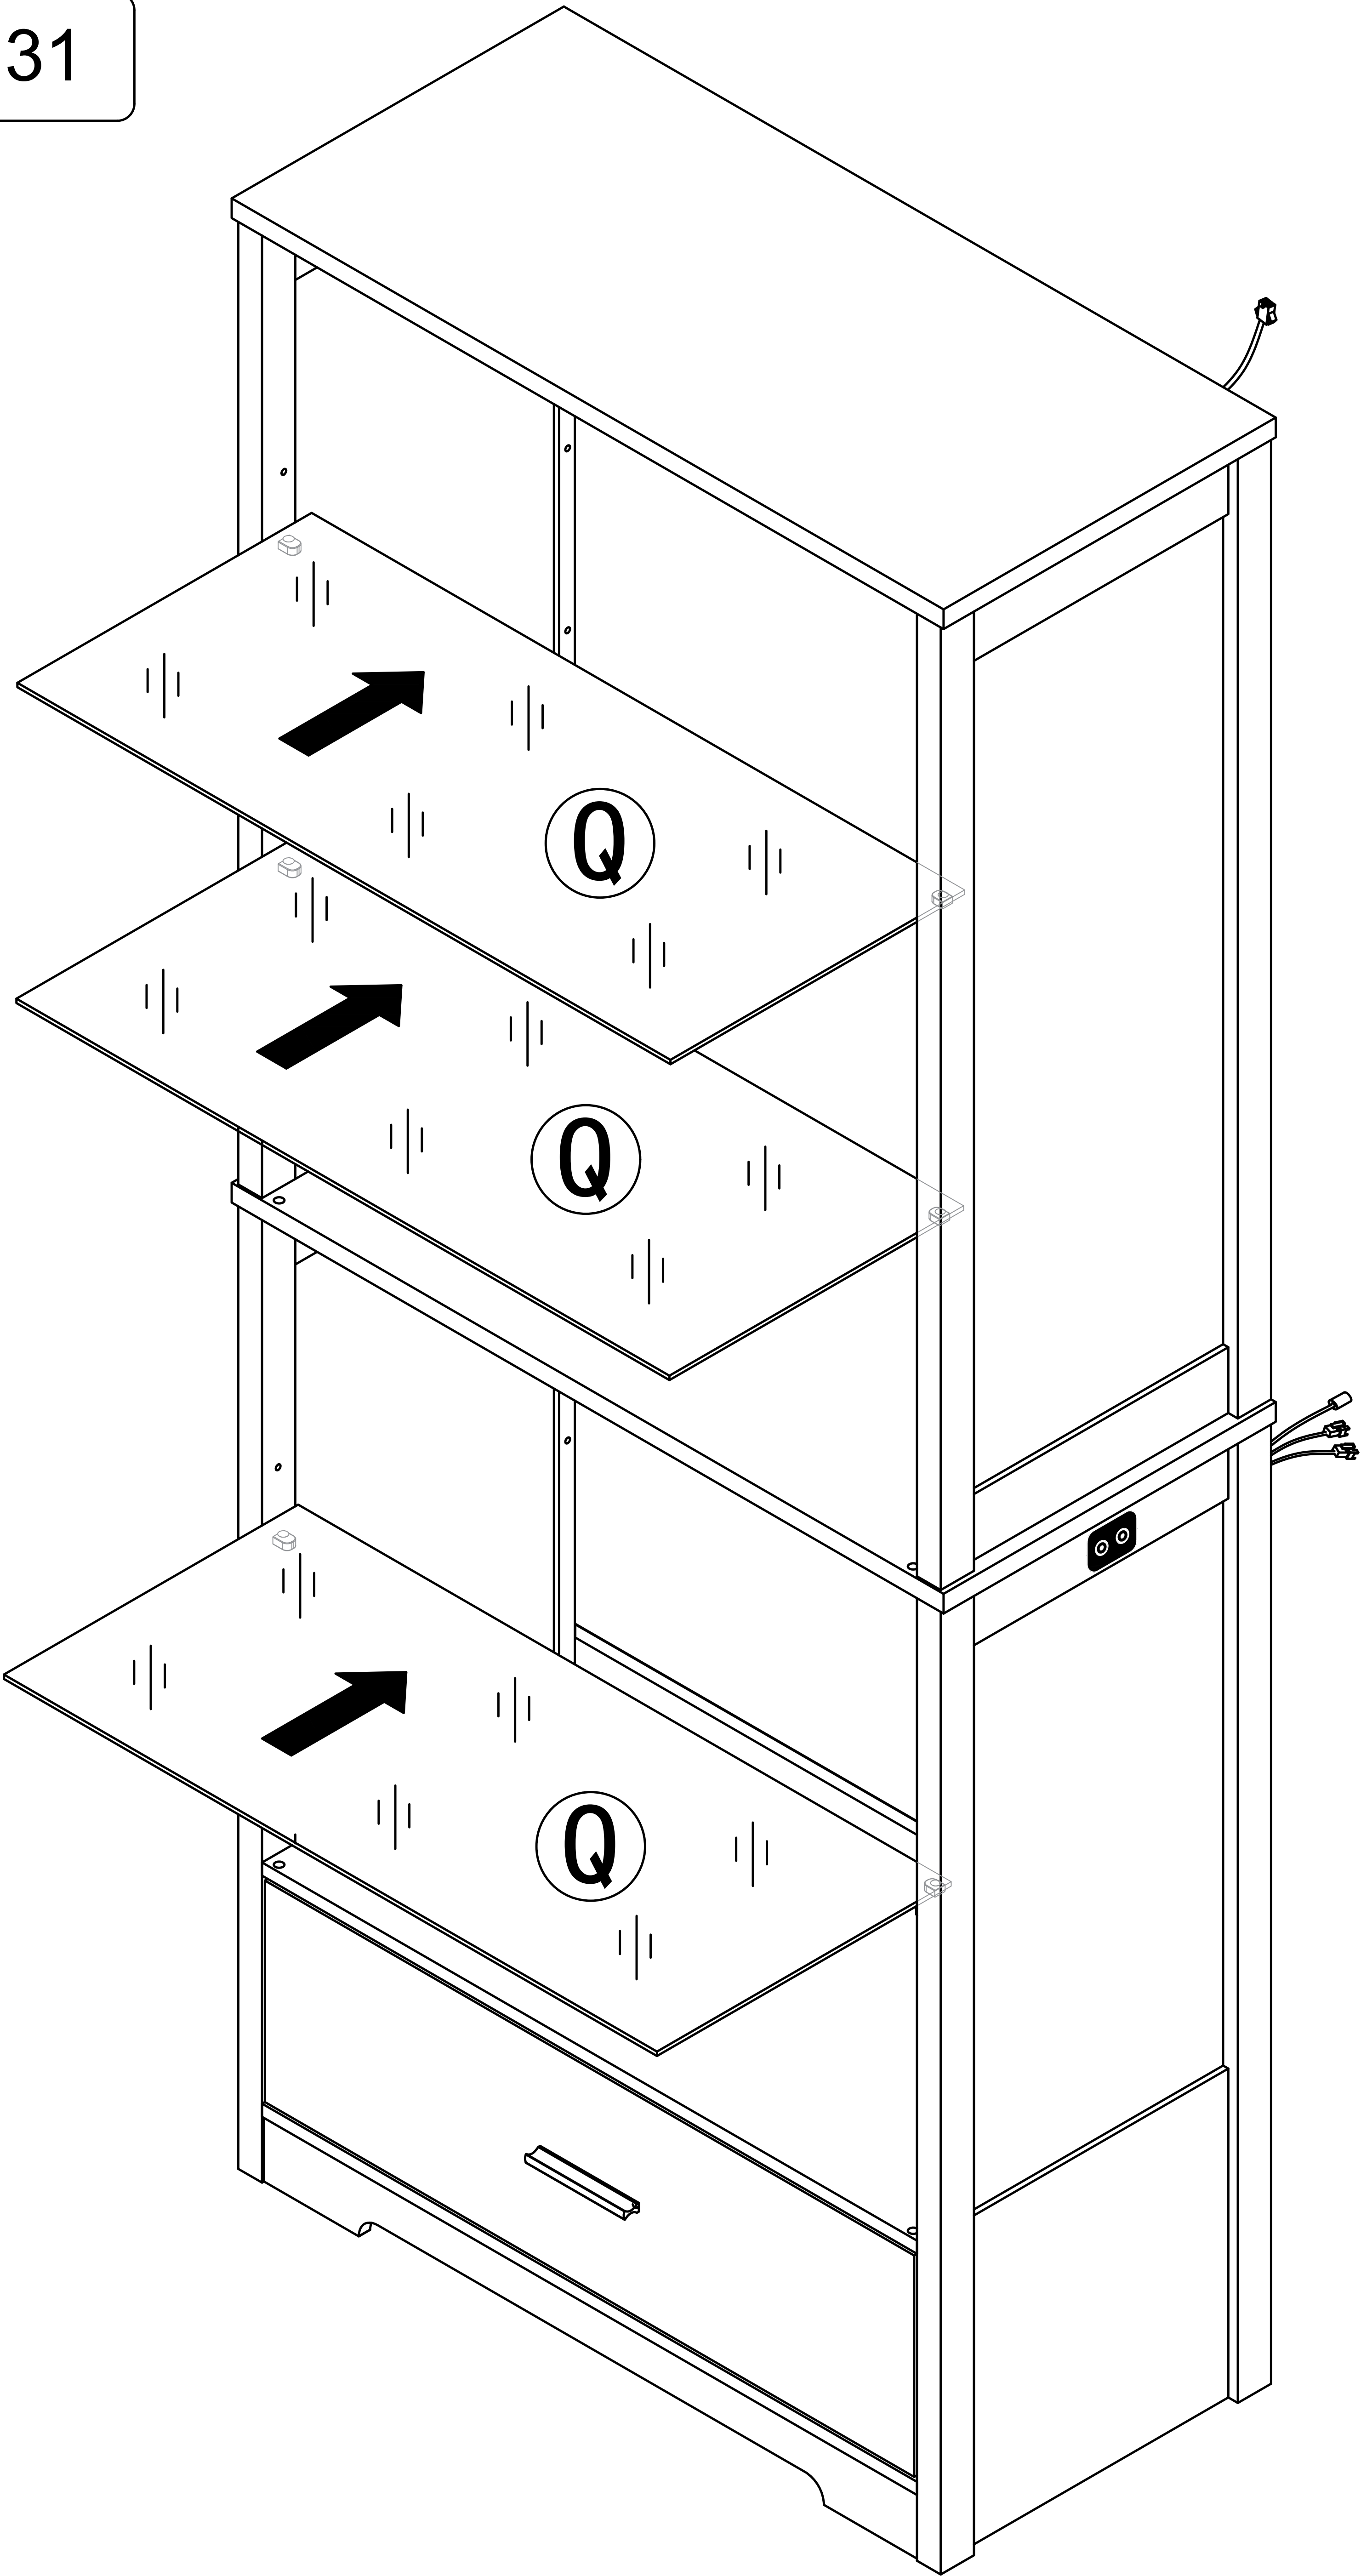


Step 32


First, completely unscrew the screws on the parts

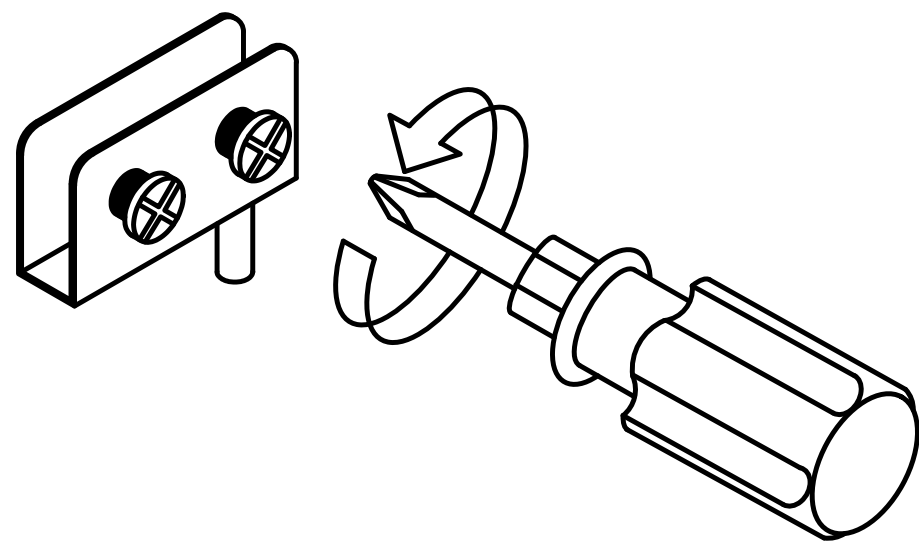


Then take out the black rubber pad from the inside of the part, and the white sponge remains unchanged inside the part.

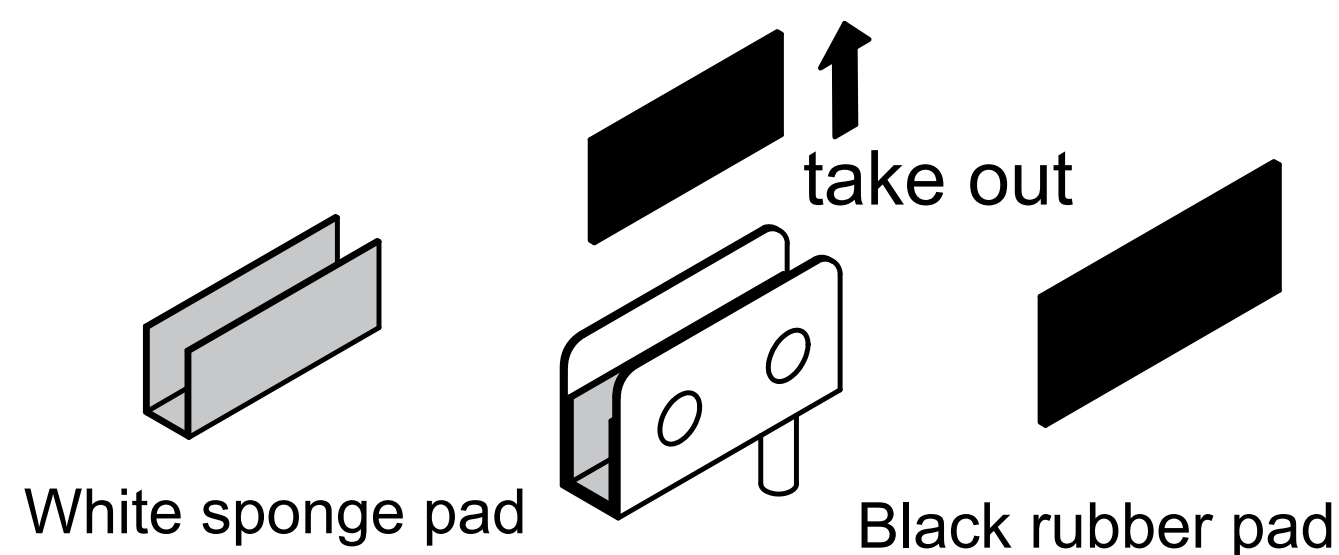


6

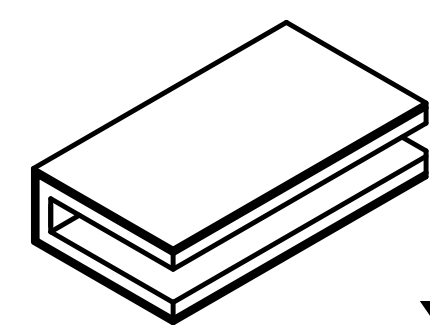

x1

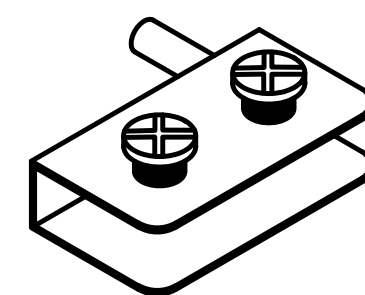



x1

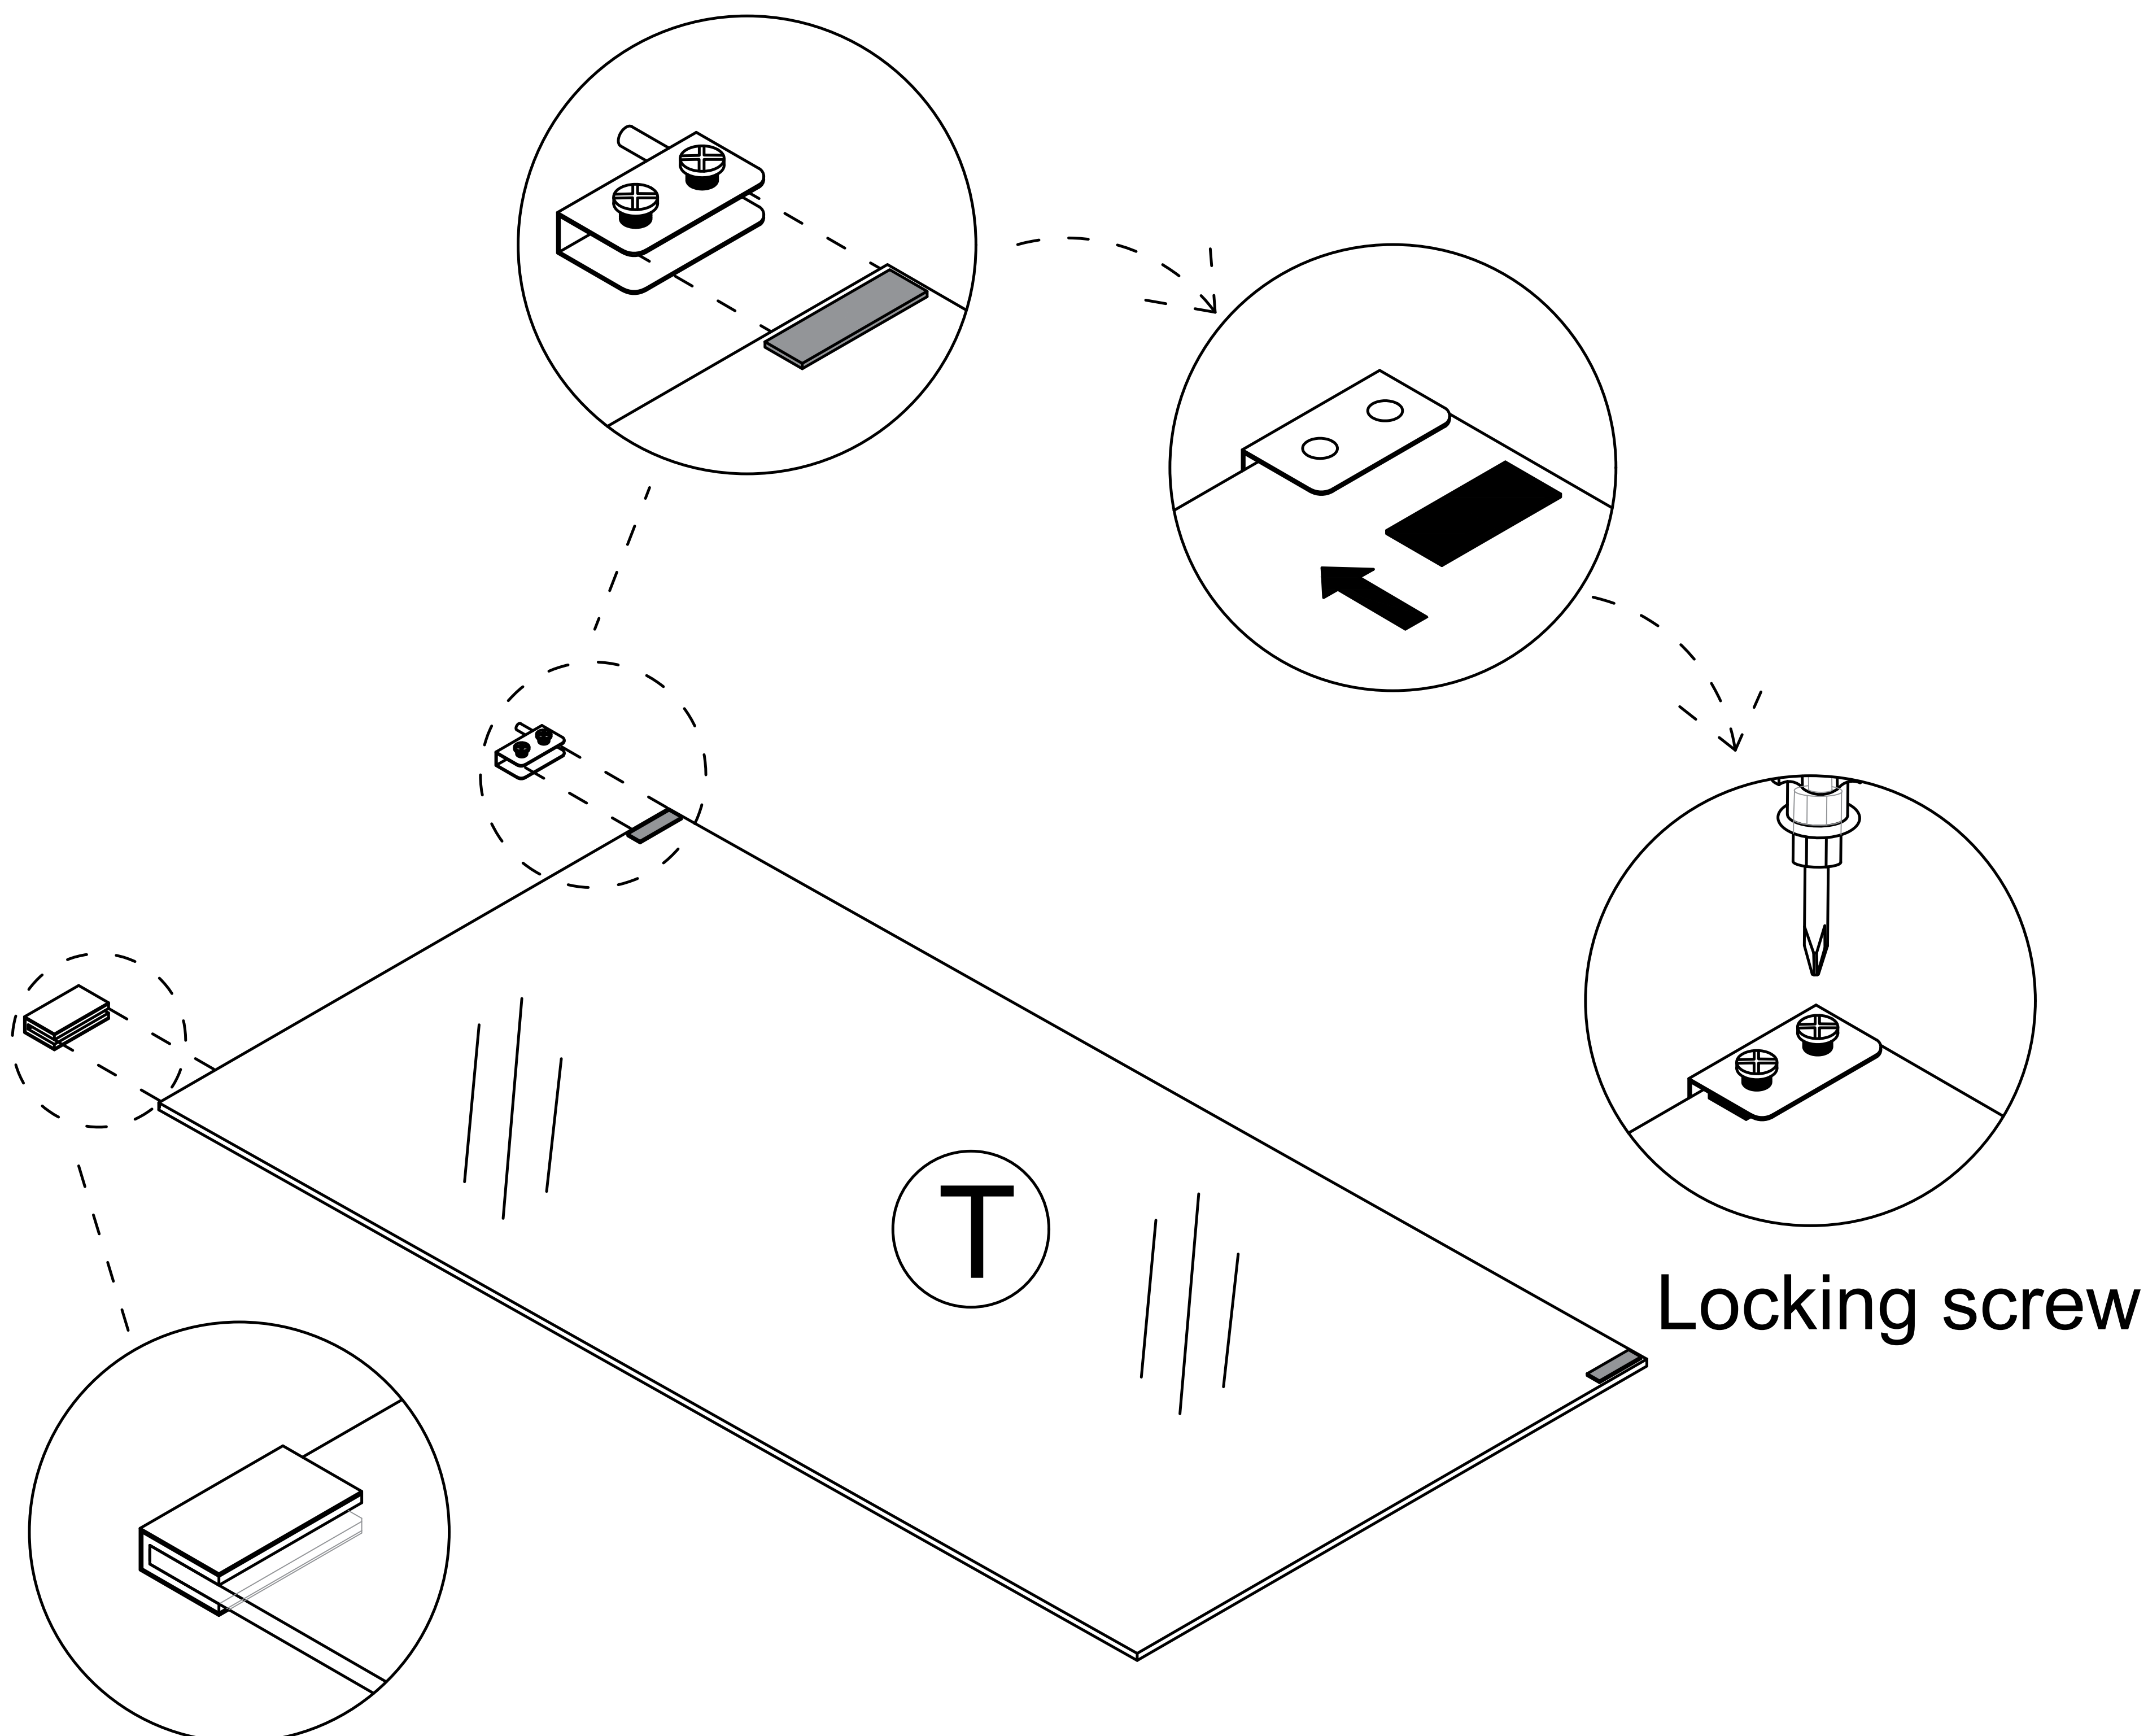

Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed





Step 33


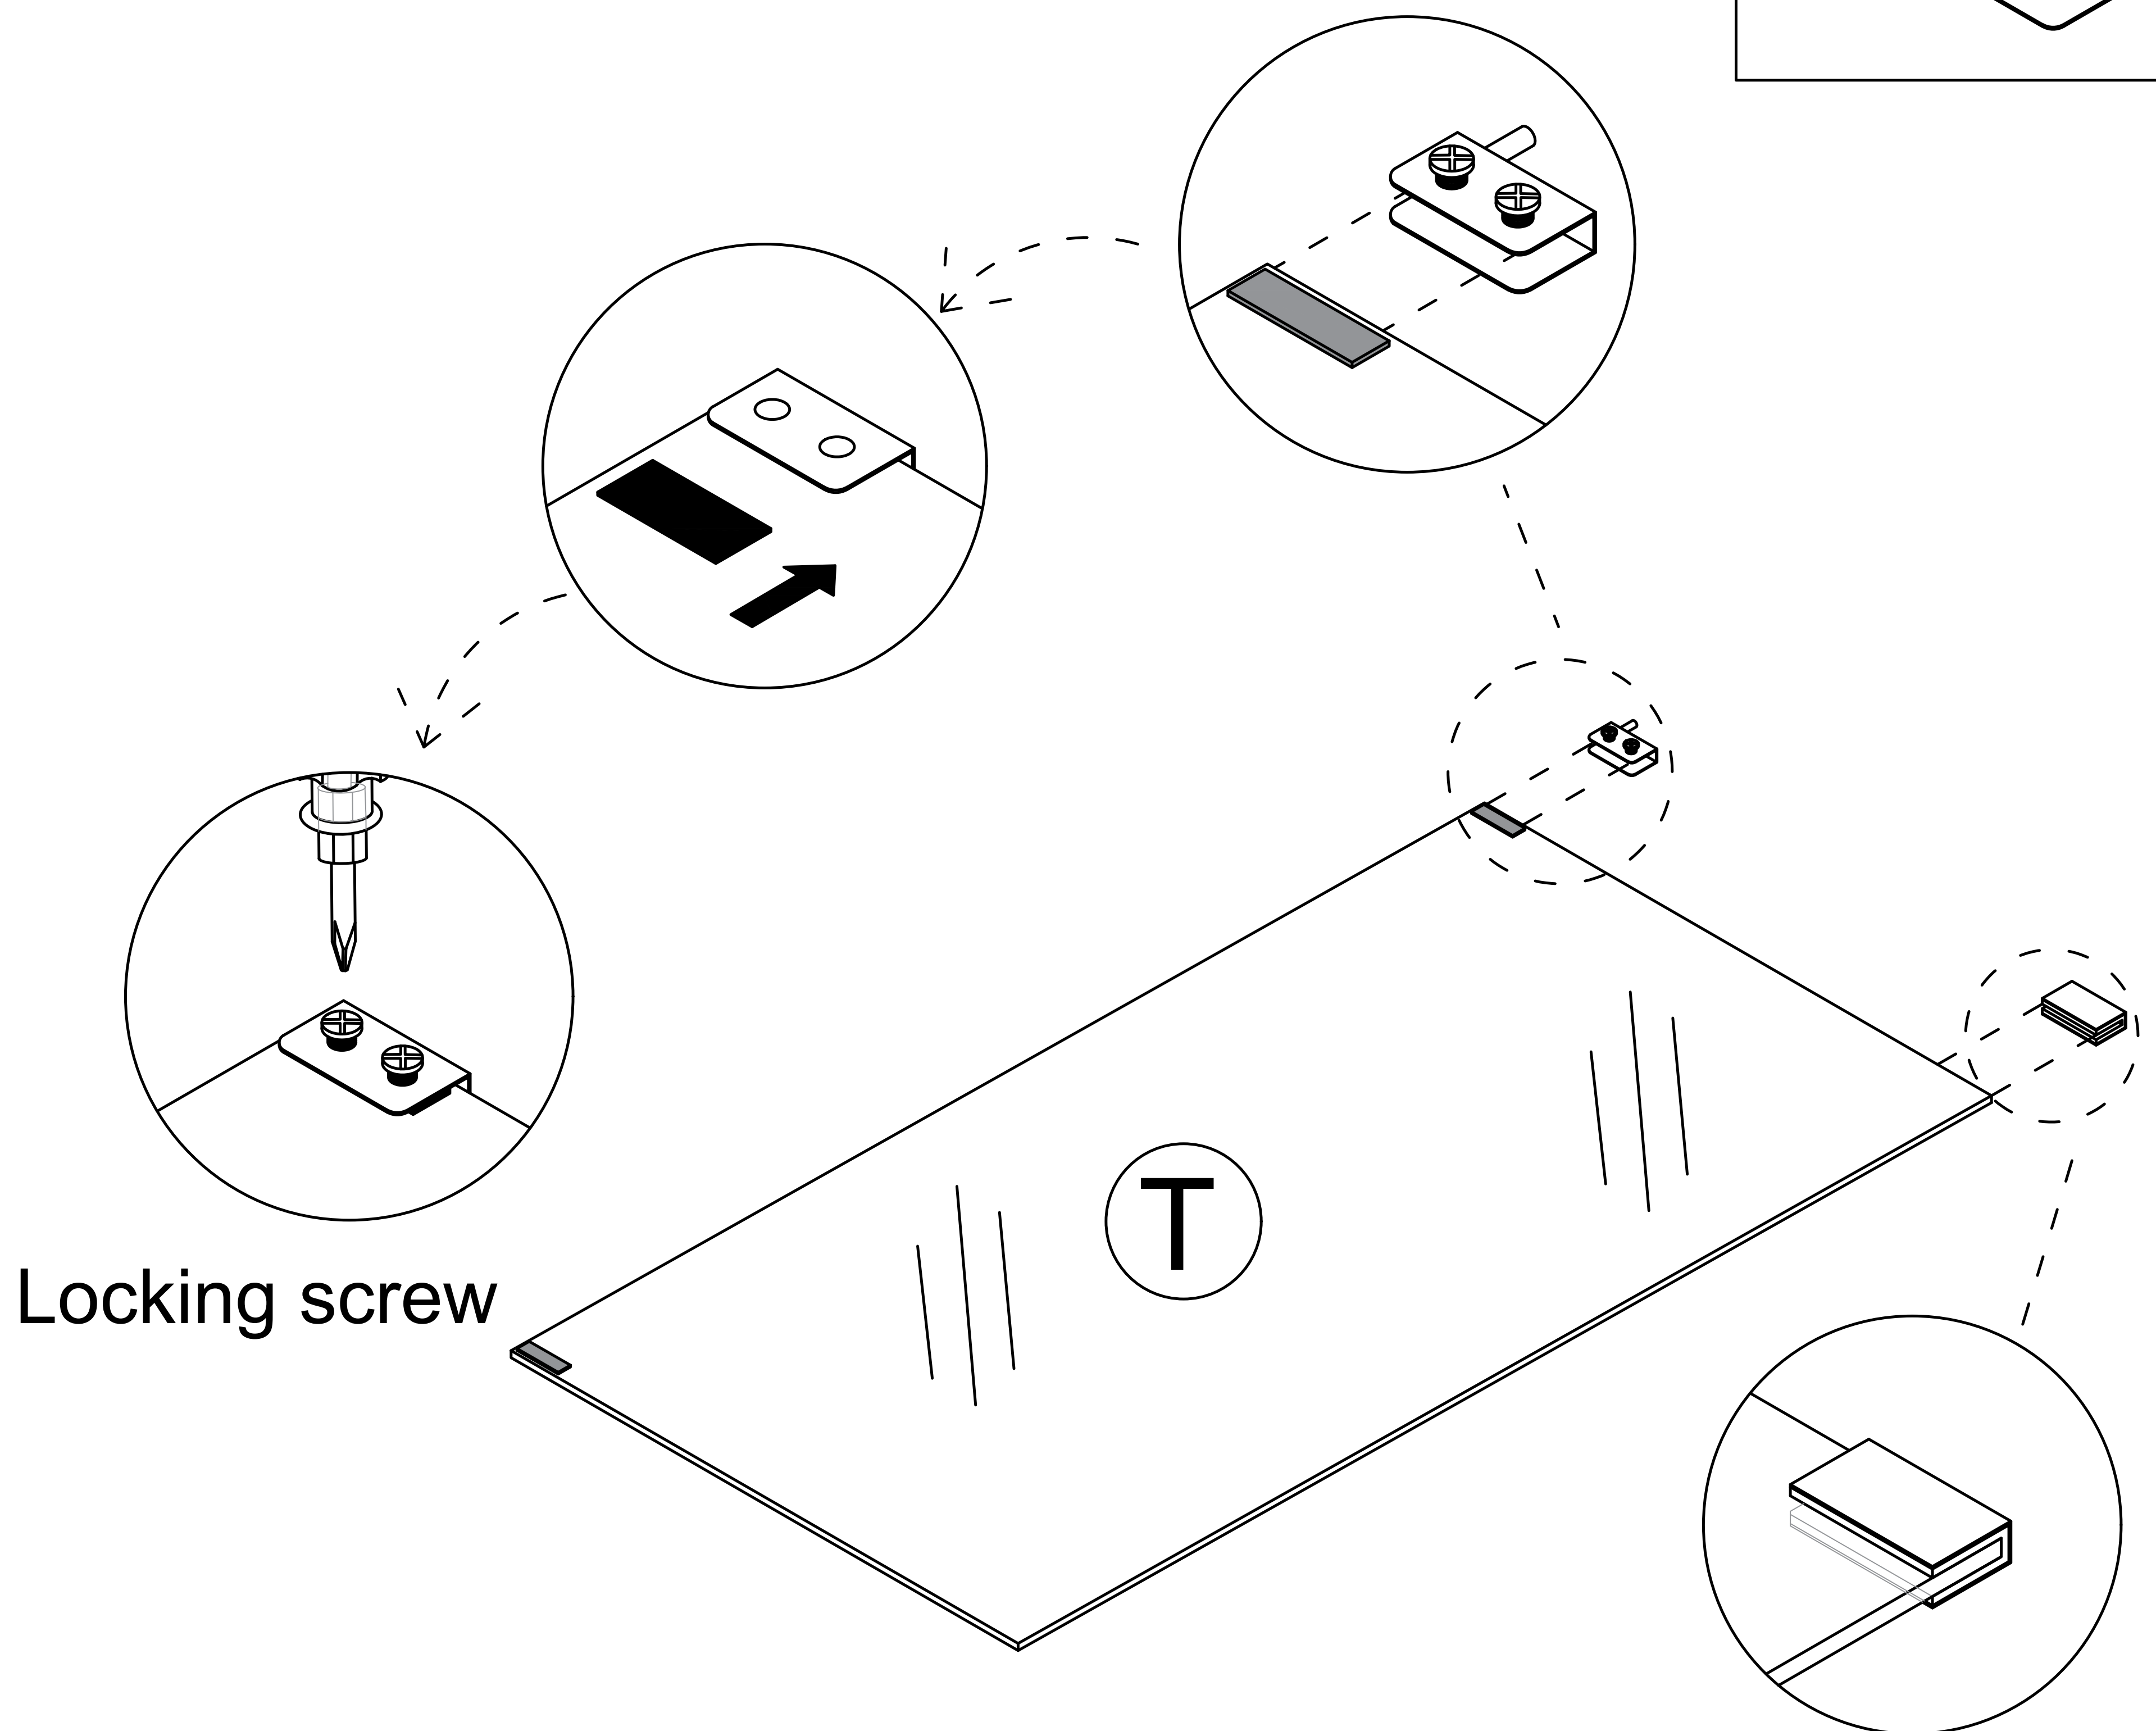
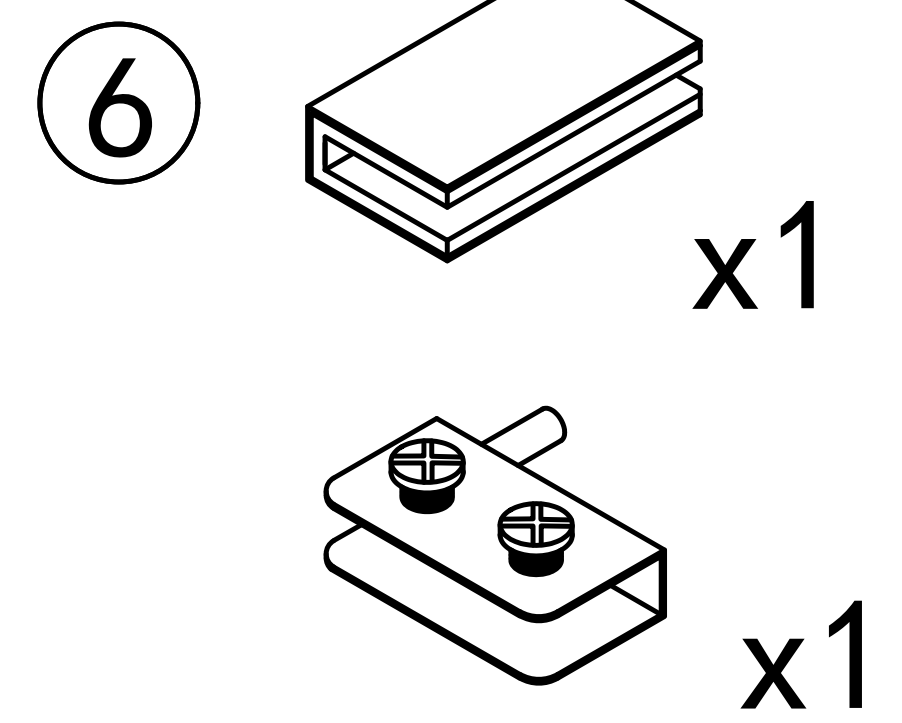


Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed


Step 34

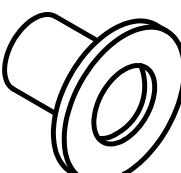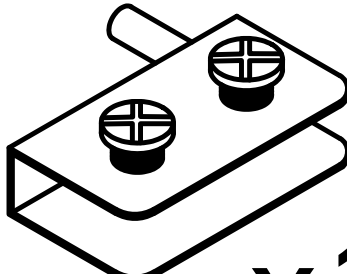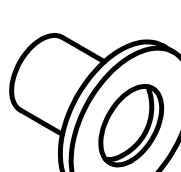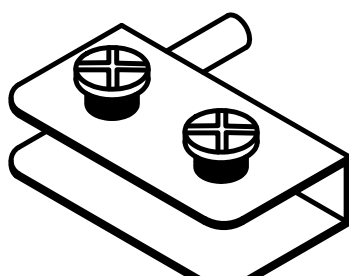6			x1
6			x1

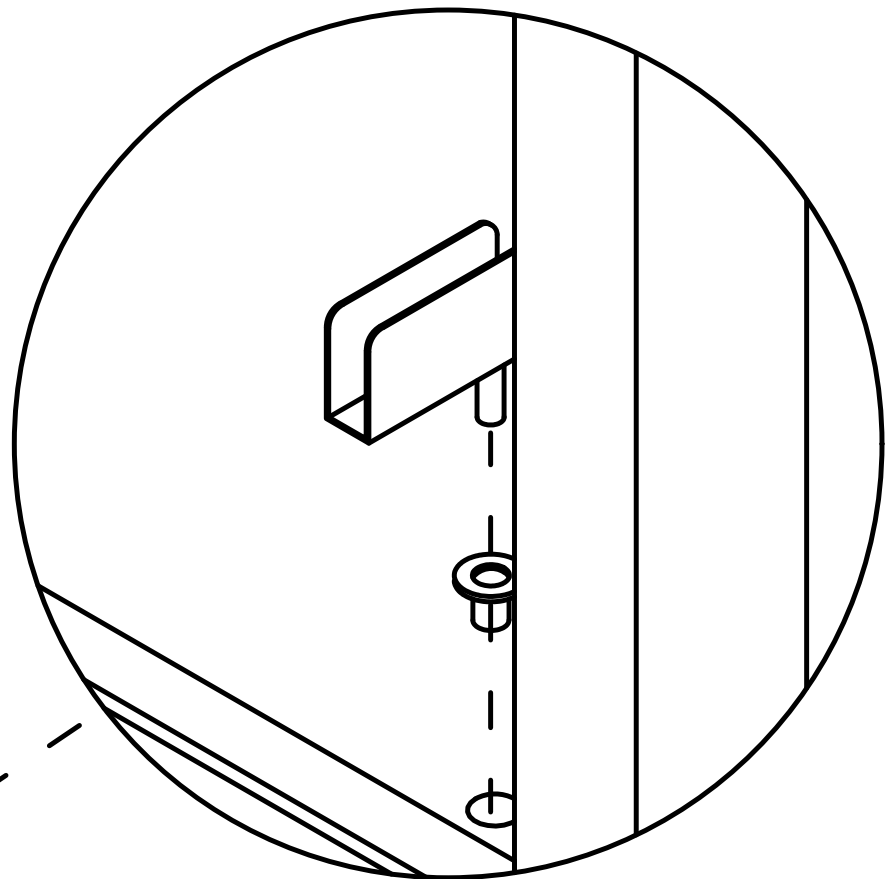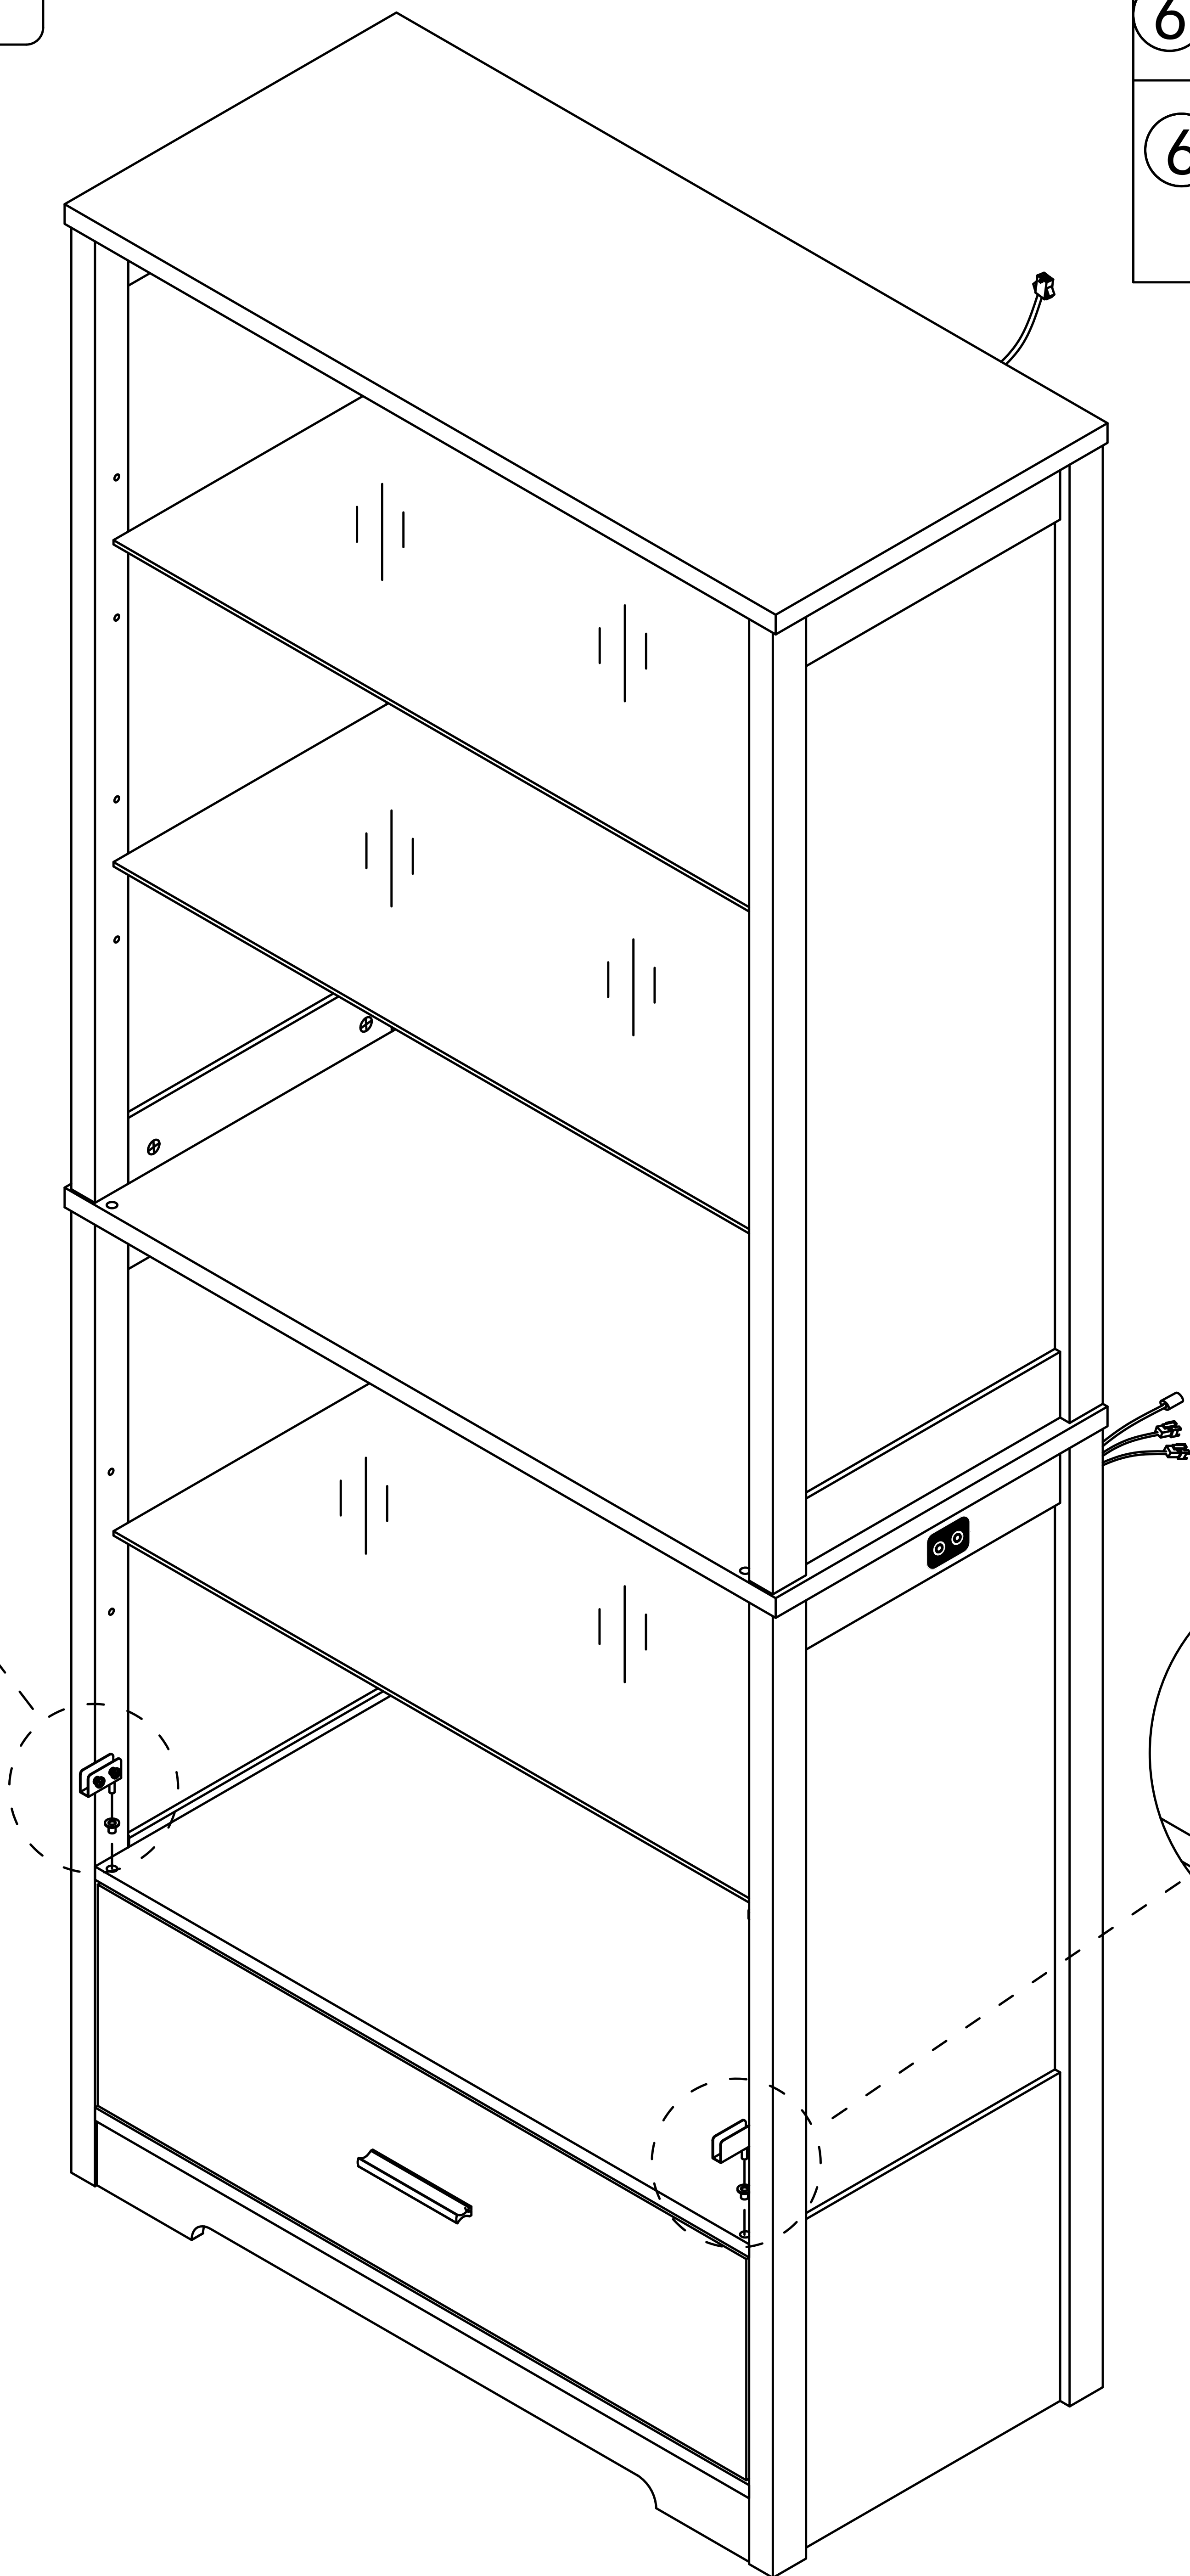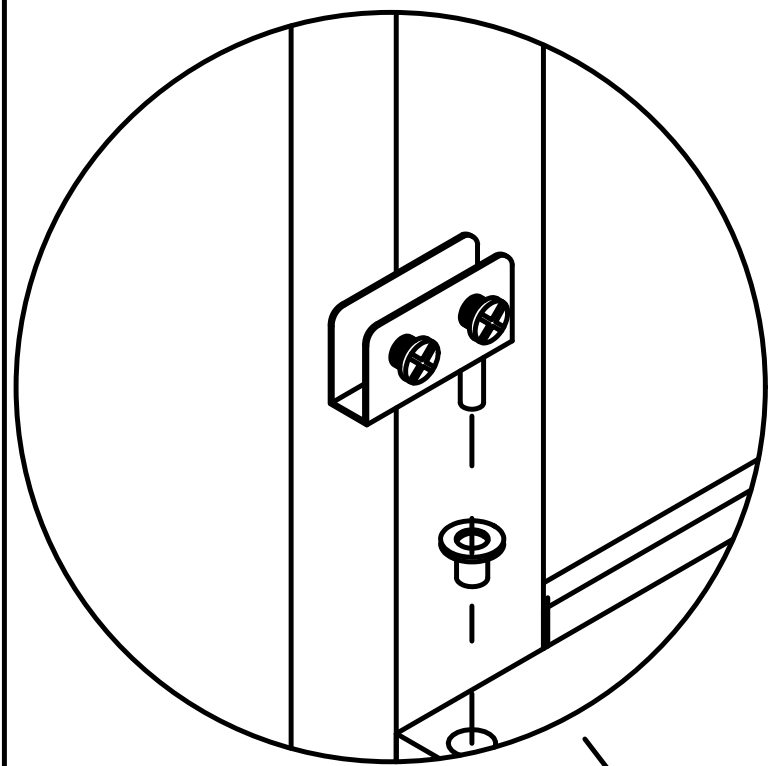


Step 35


6

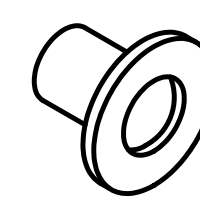

x2

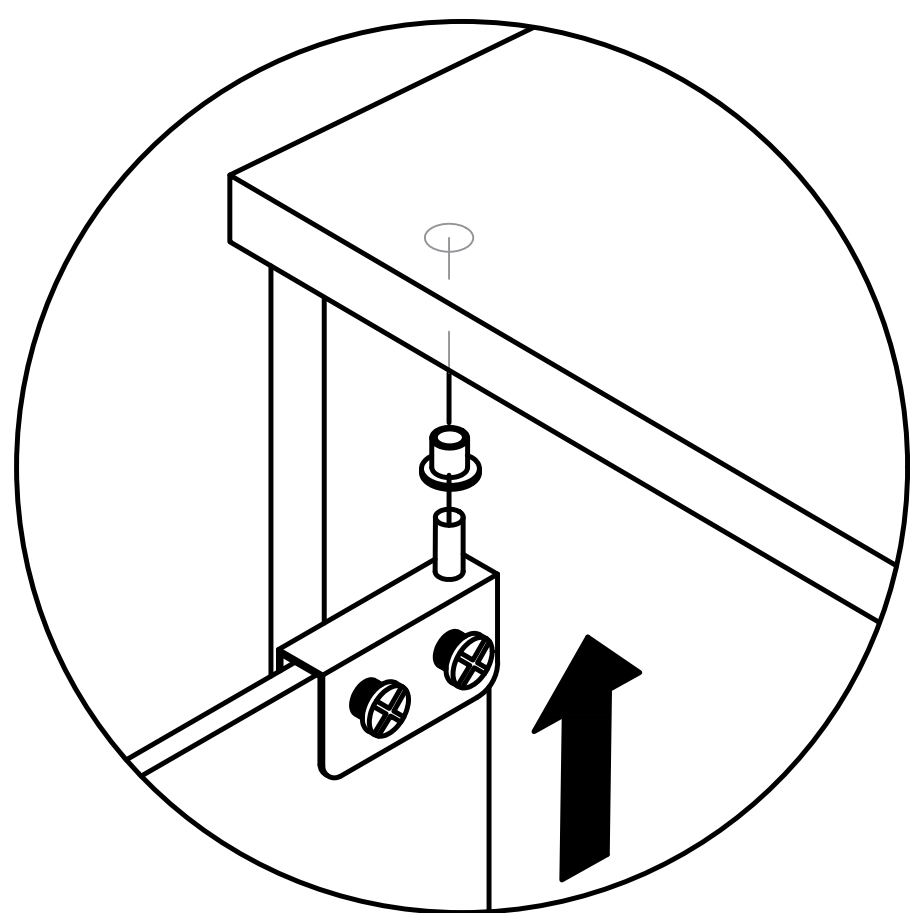


first

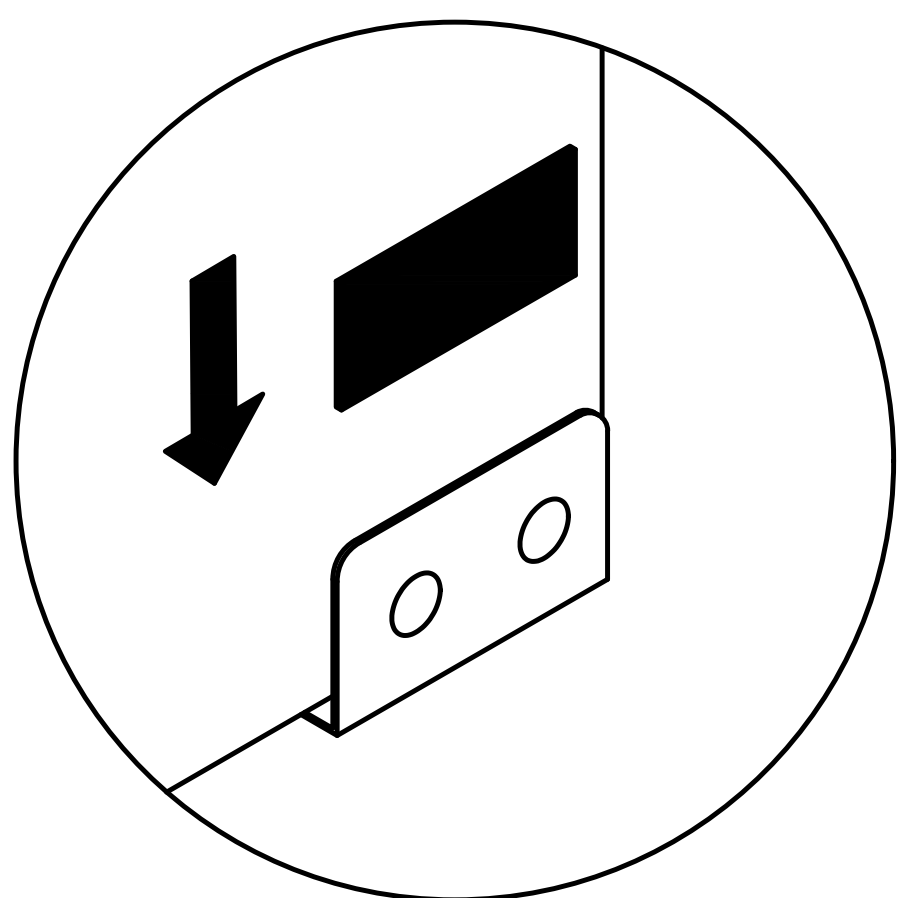


second

After installing the glass door, place the black gasket on the side where the screws are installed

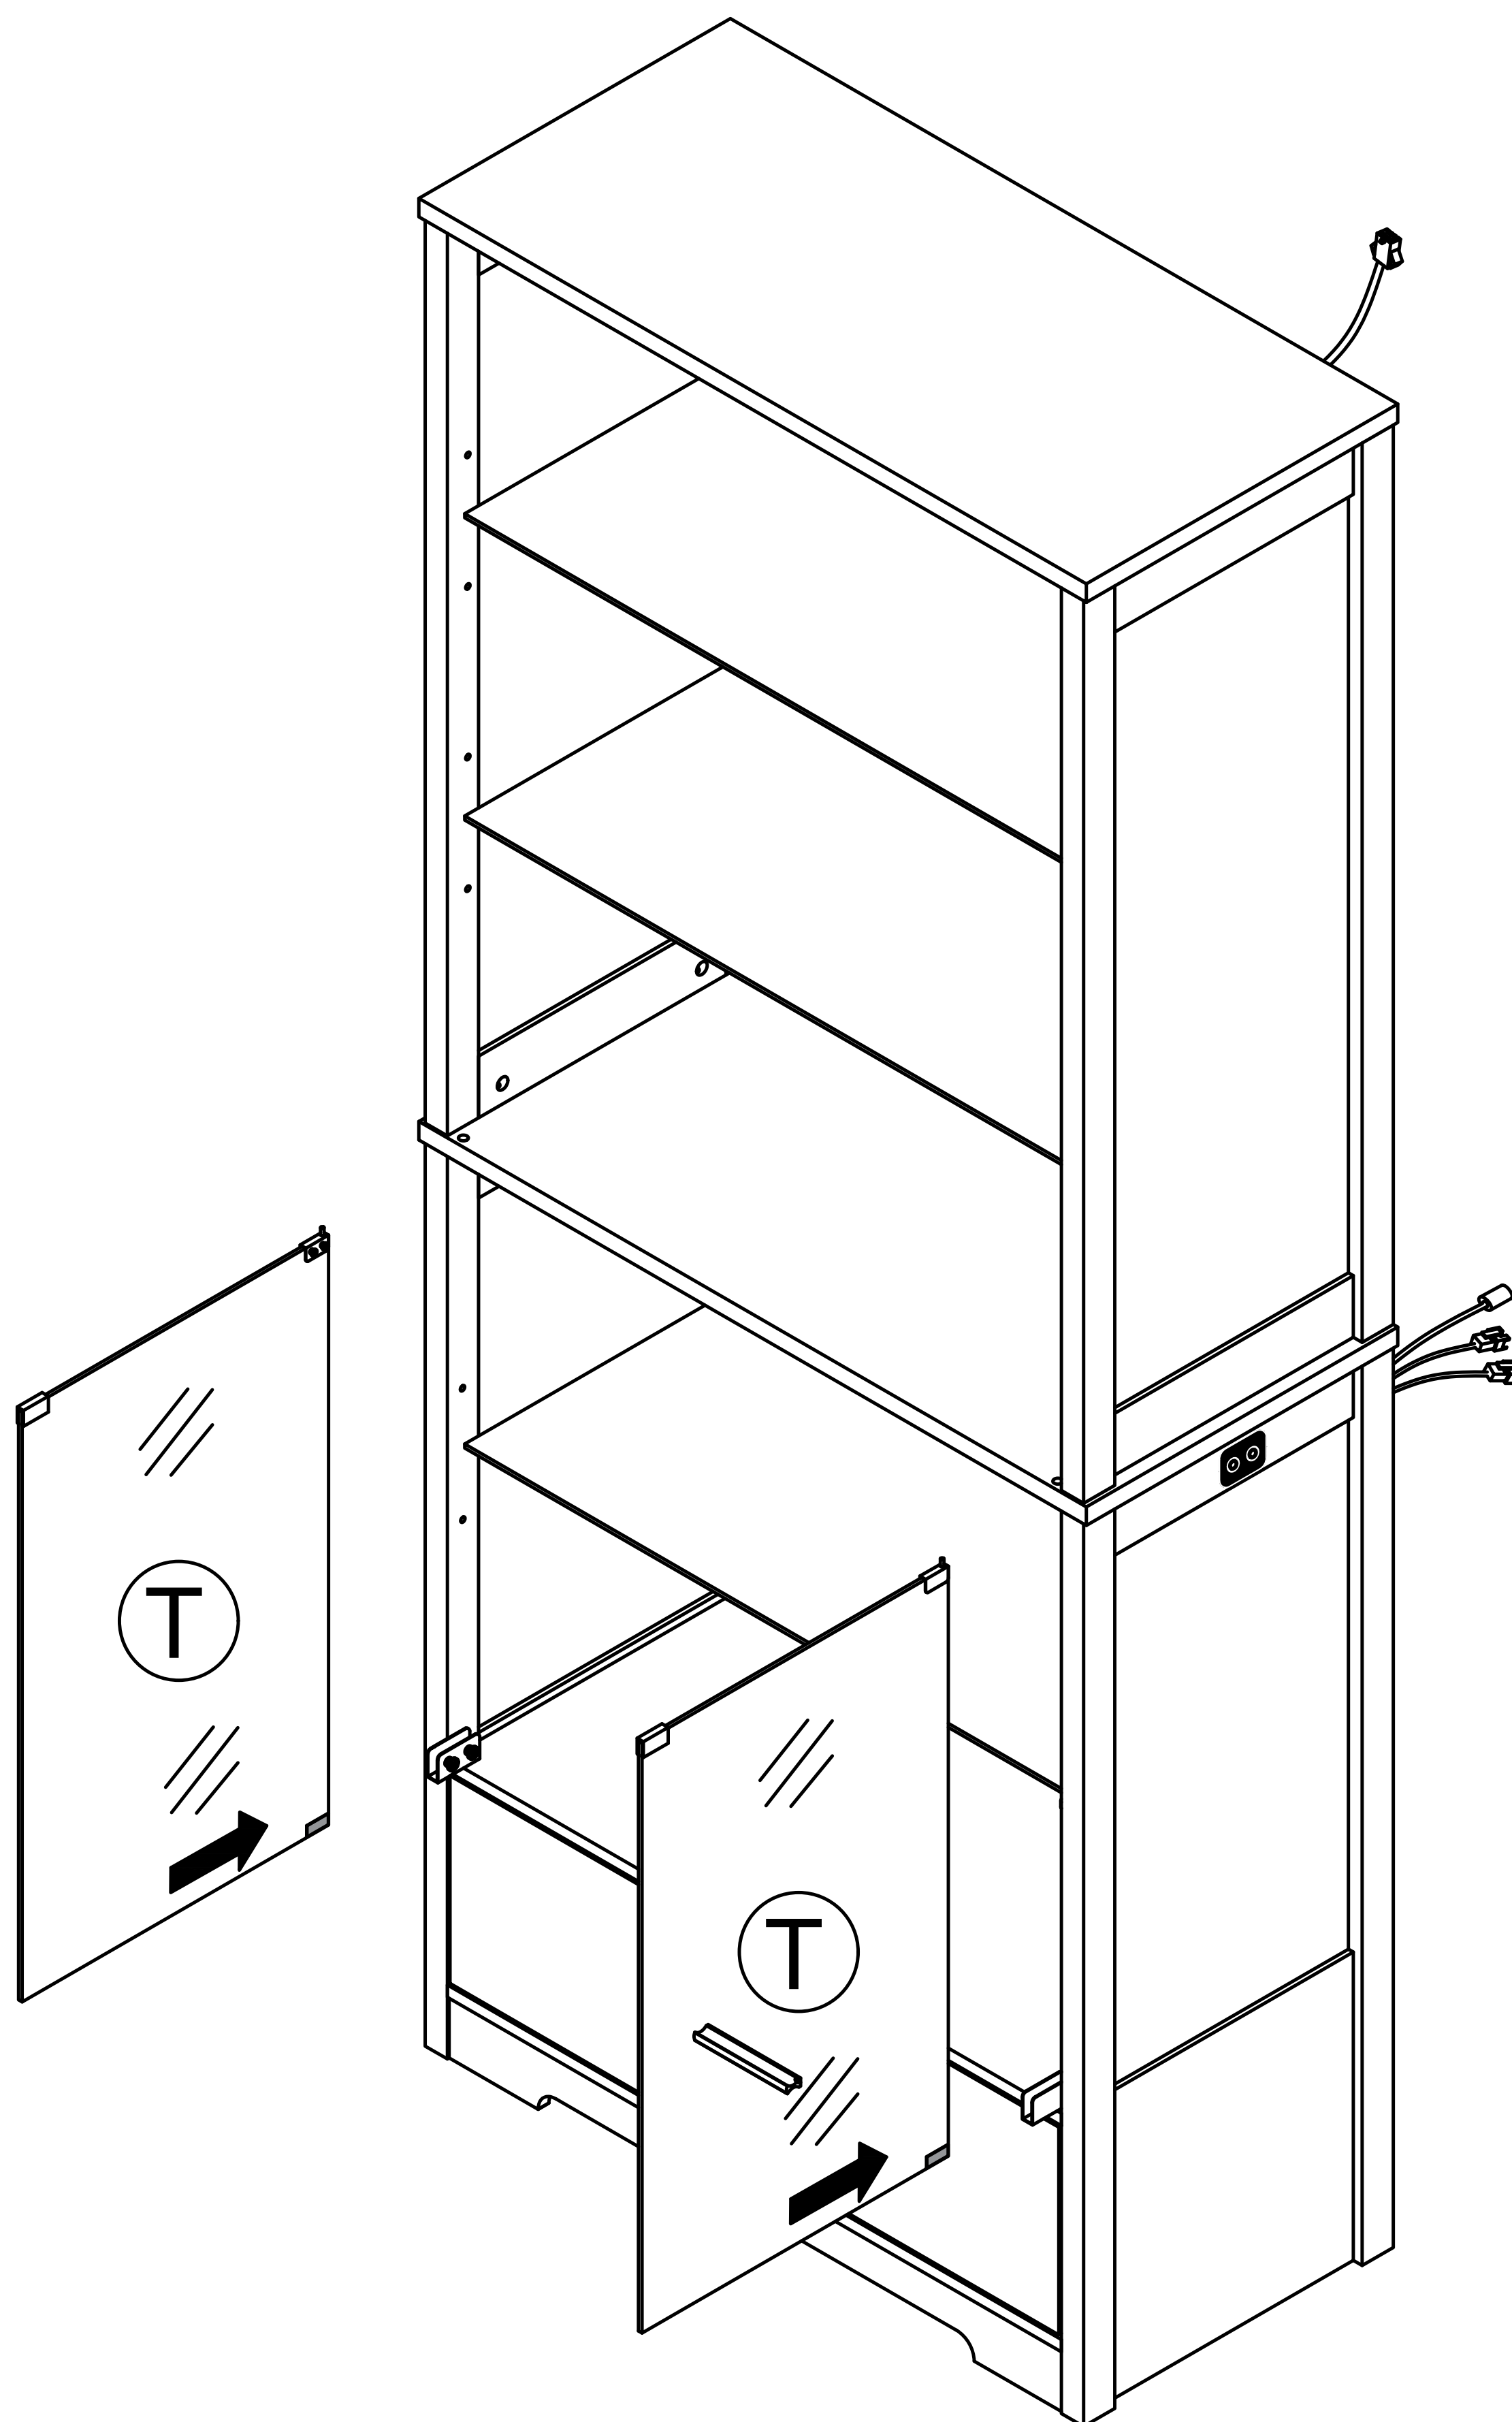

Pay attention to the direction of the door hinge during installation

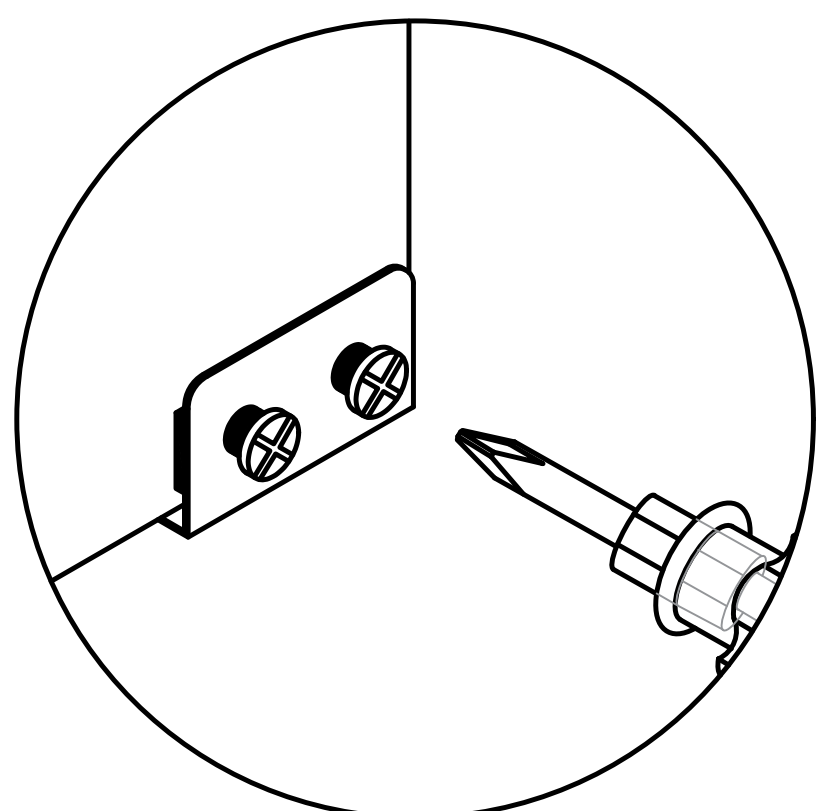


third

Locking screw


When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

Step 36


First, completely unscrew the screws on the parts

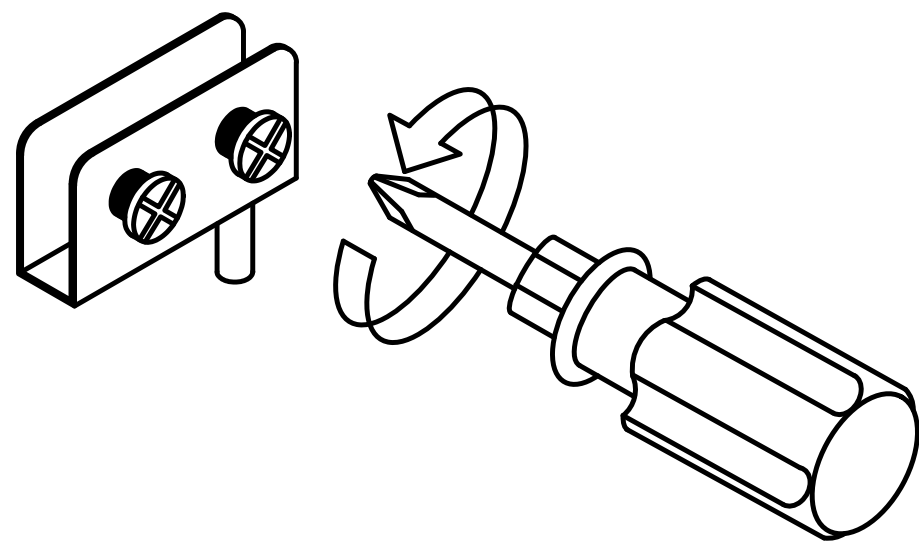


Then take out the black rubber pad from the inside of the part, and the white sponge remains unchanged inside the part.

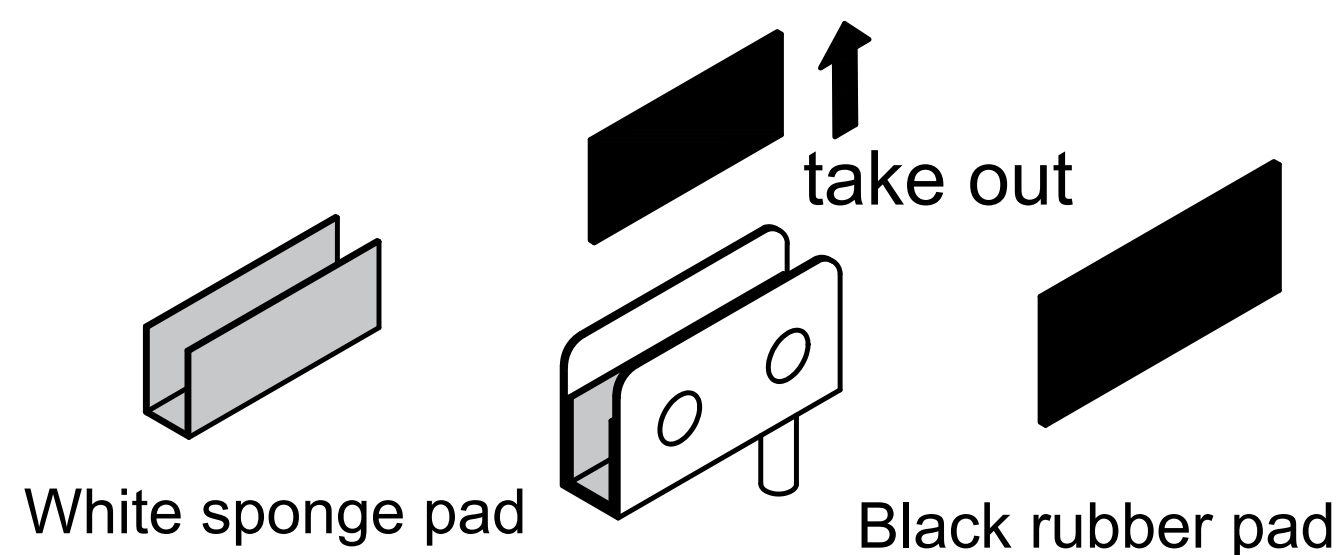


6

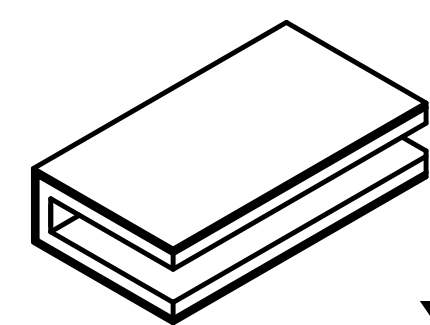

x1

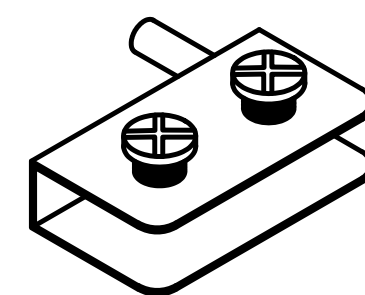

x1


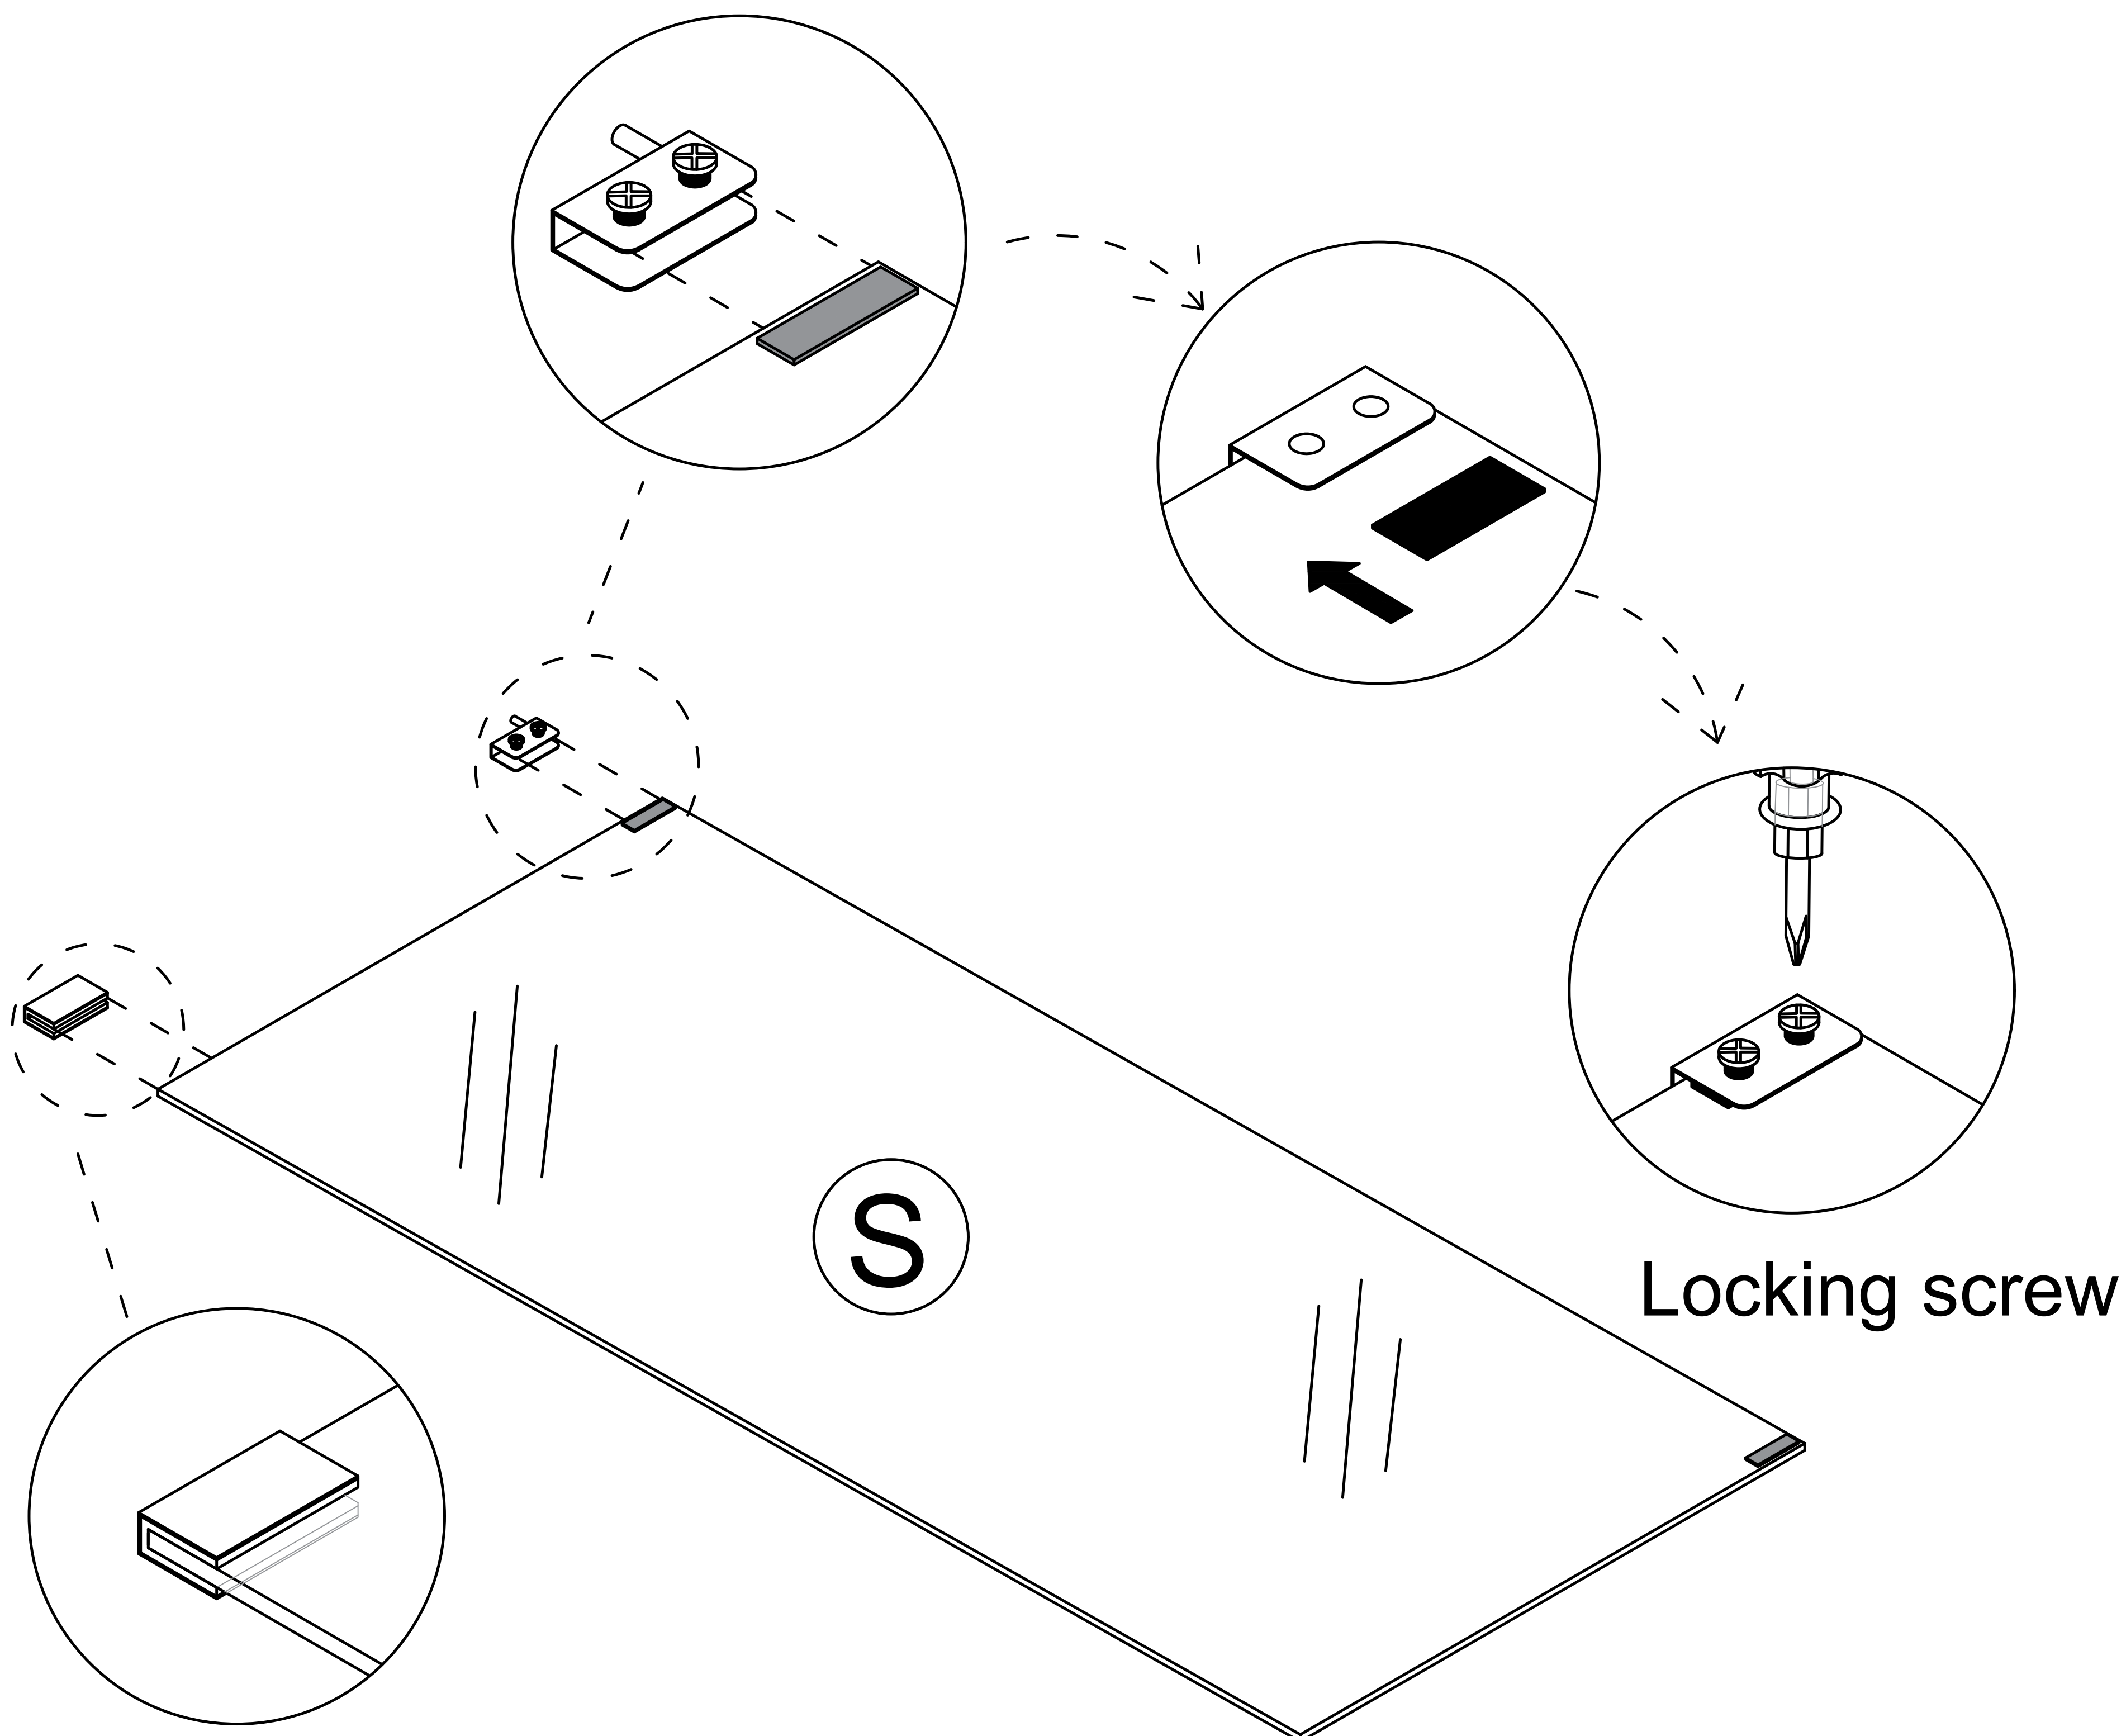


Locking screw

Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed

Step 37

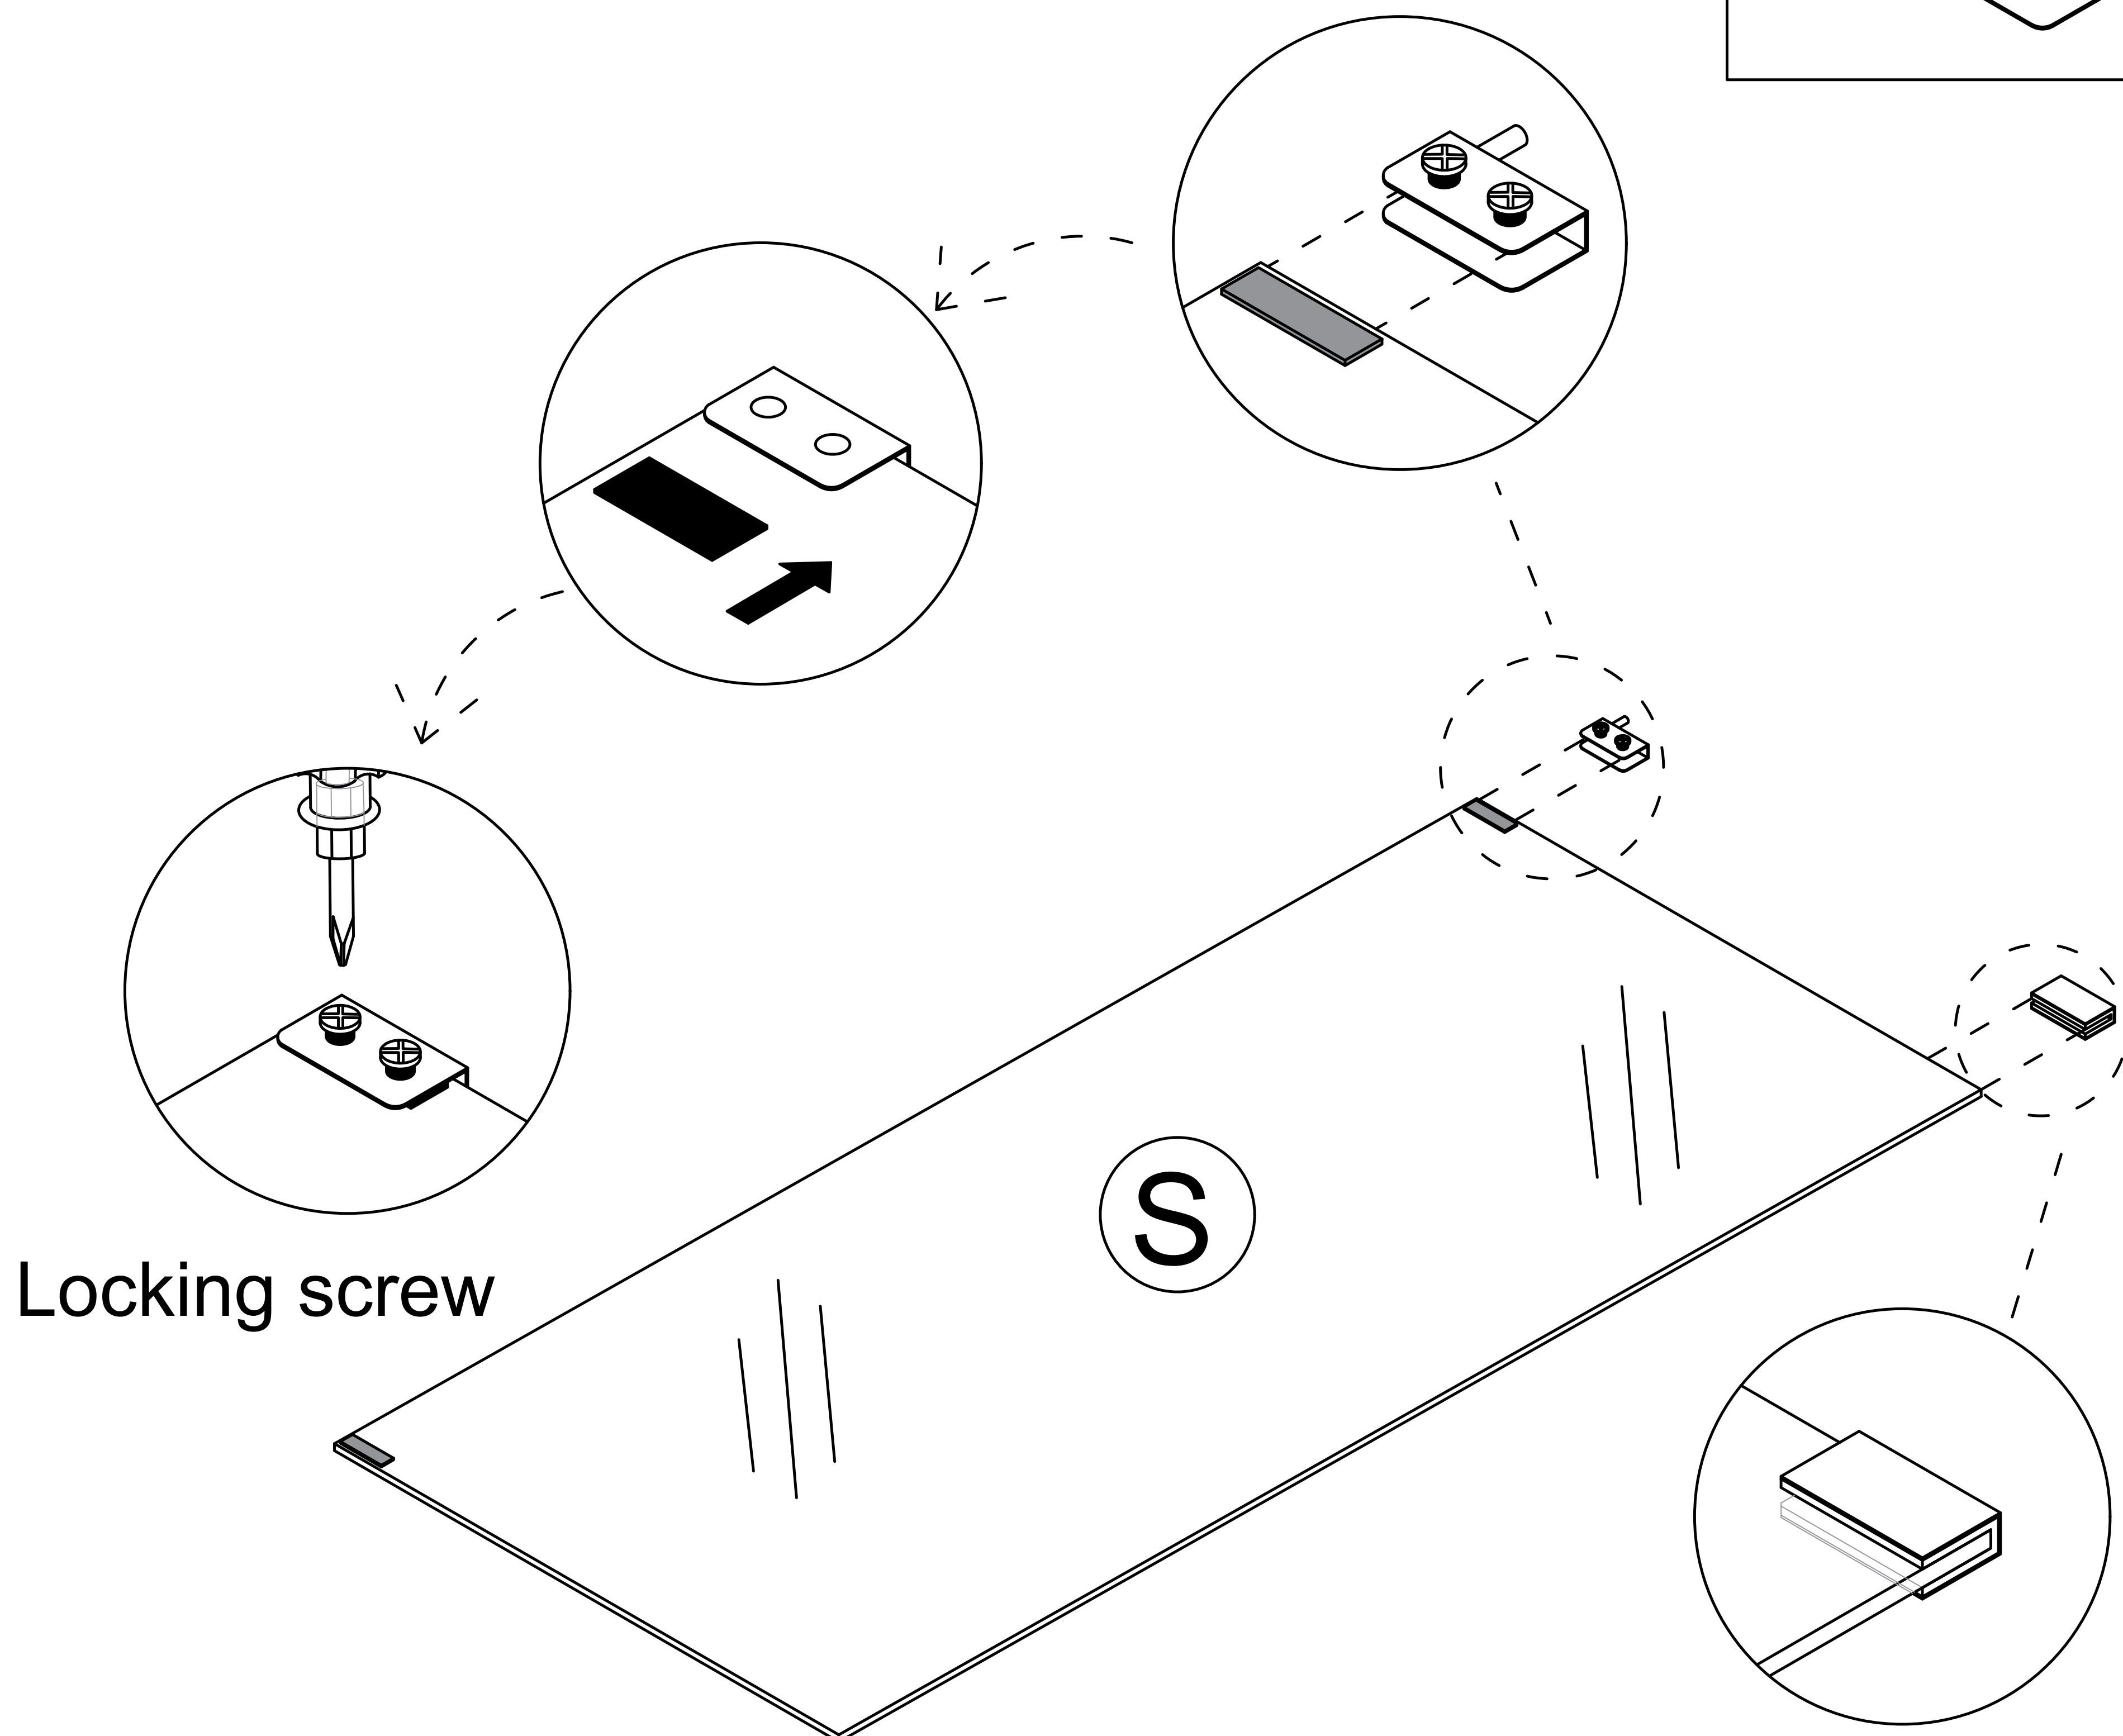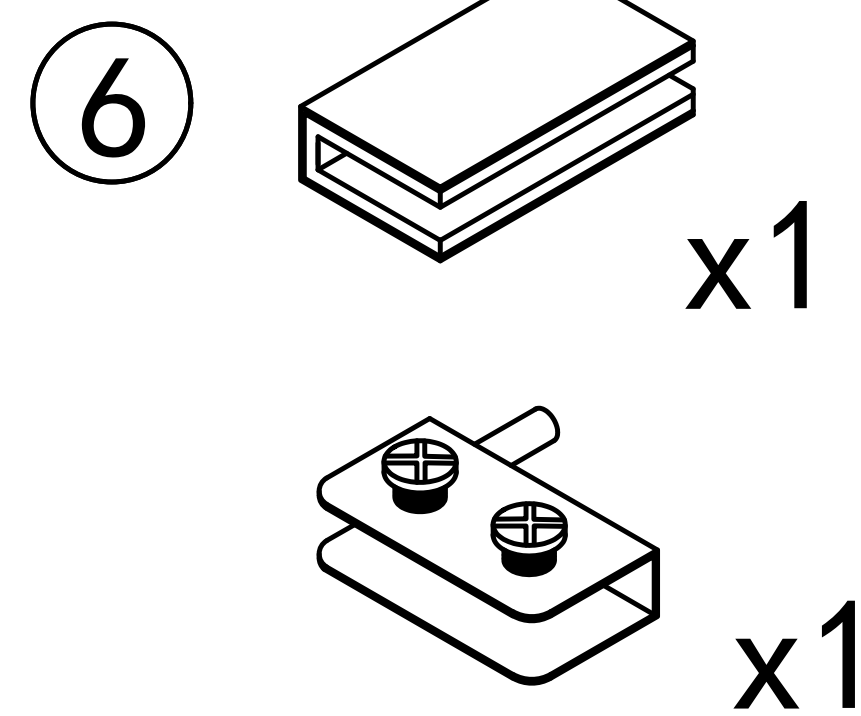



Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction


Place the black gasket on the side where the screws are installed


Step 38


- 6

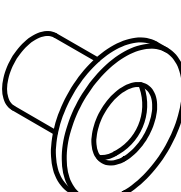

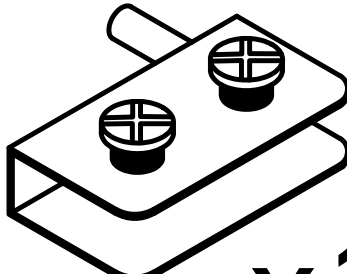

x1
- 6

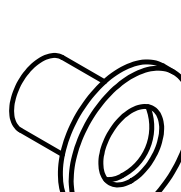


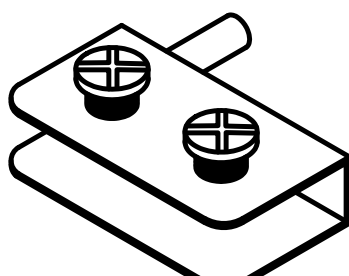
x1

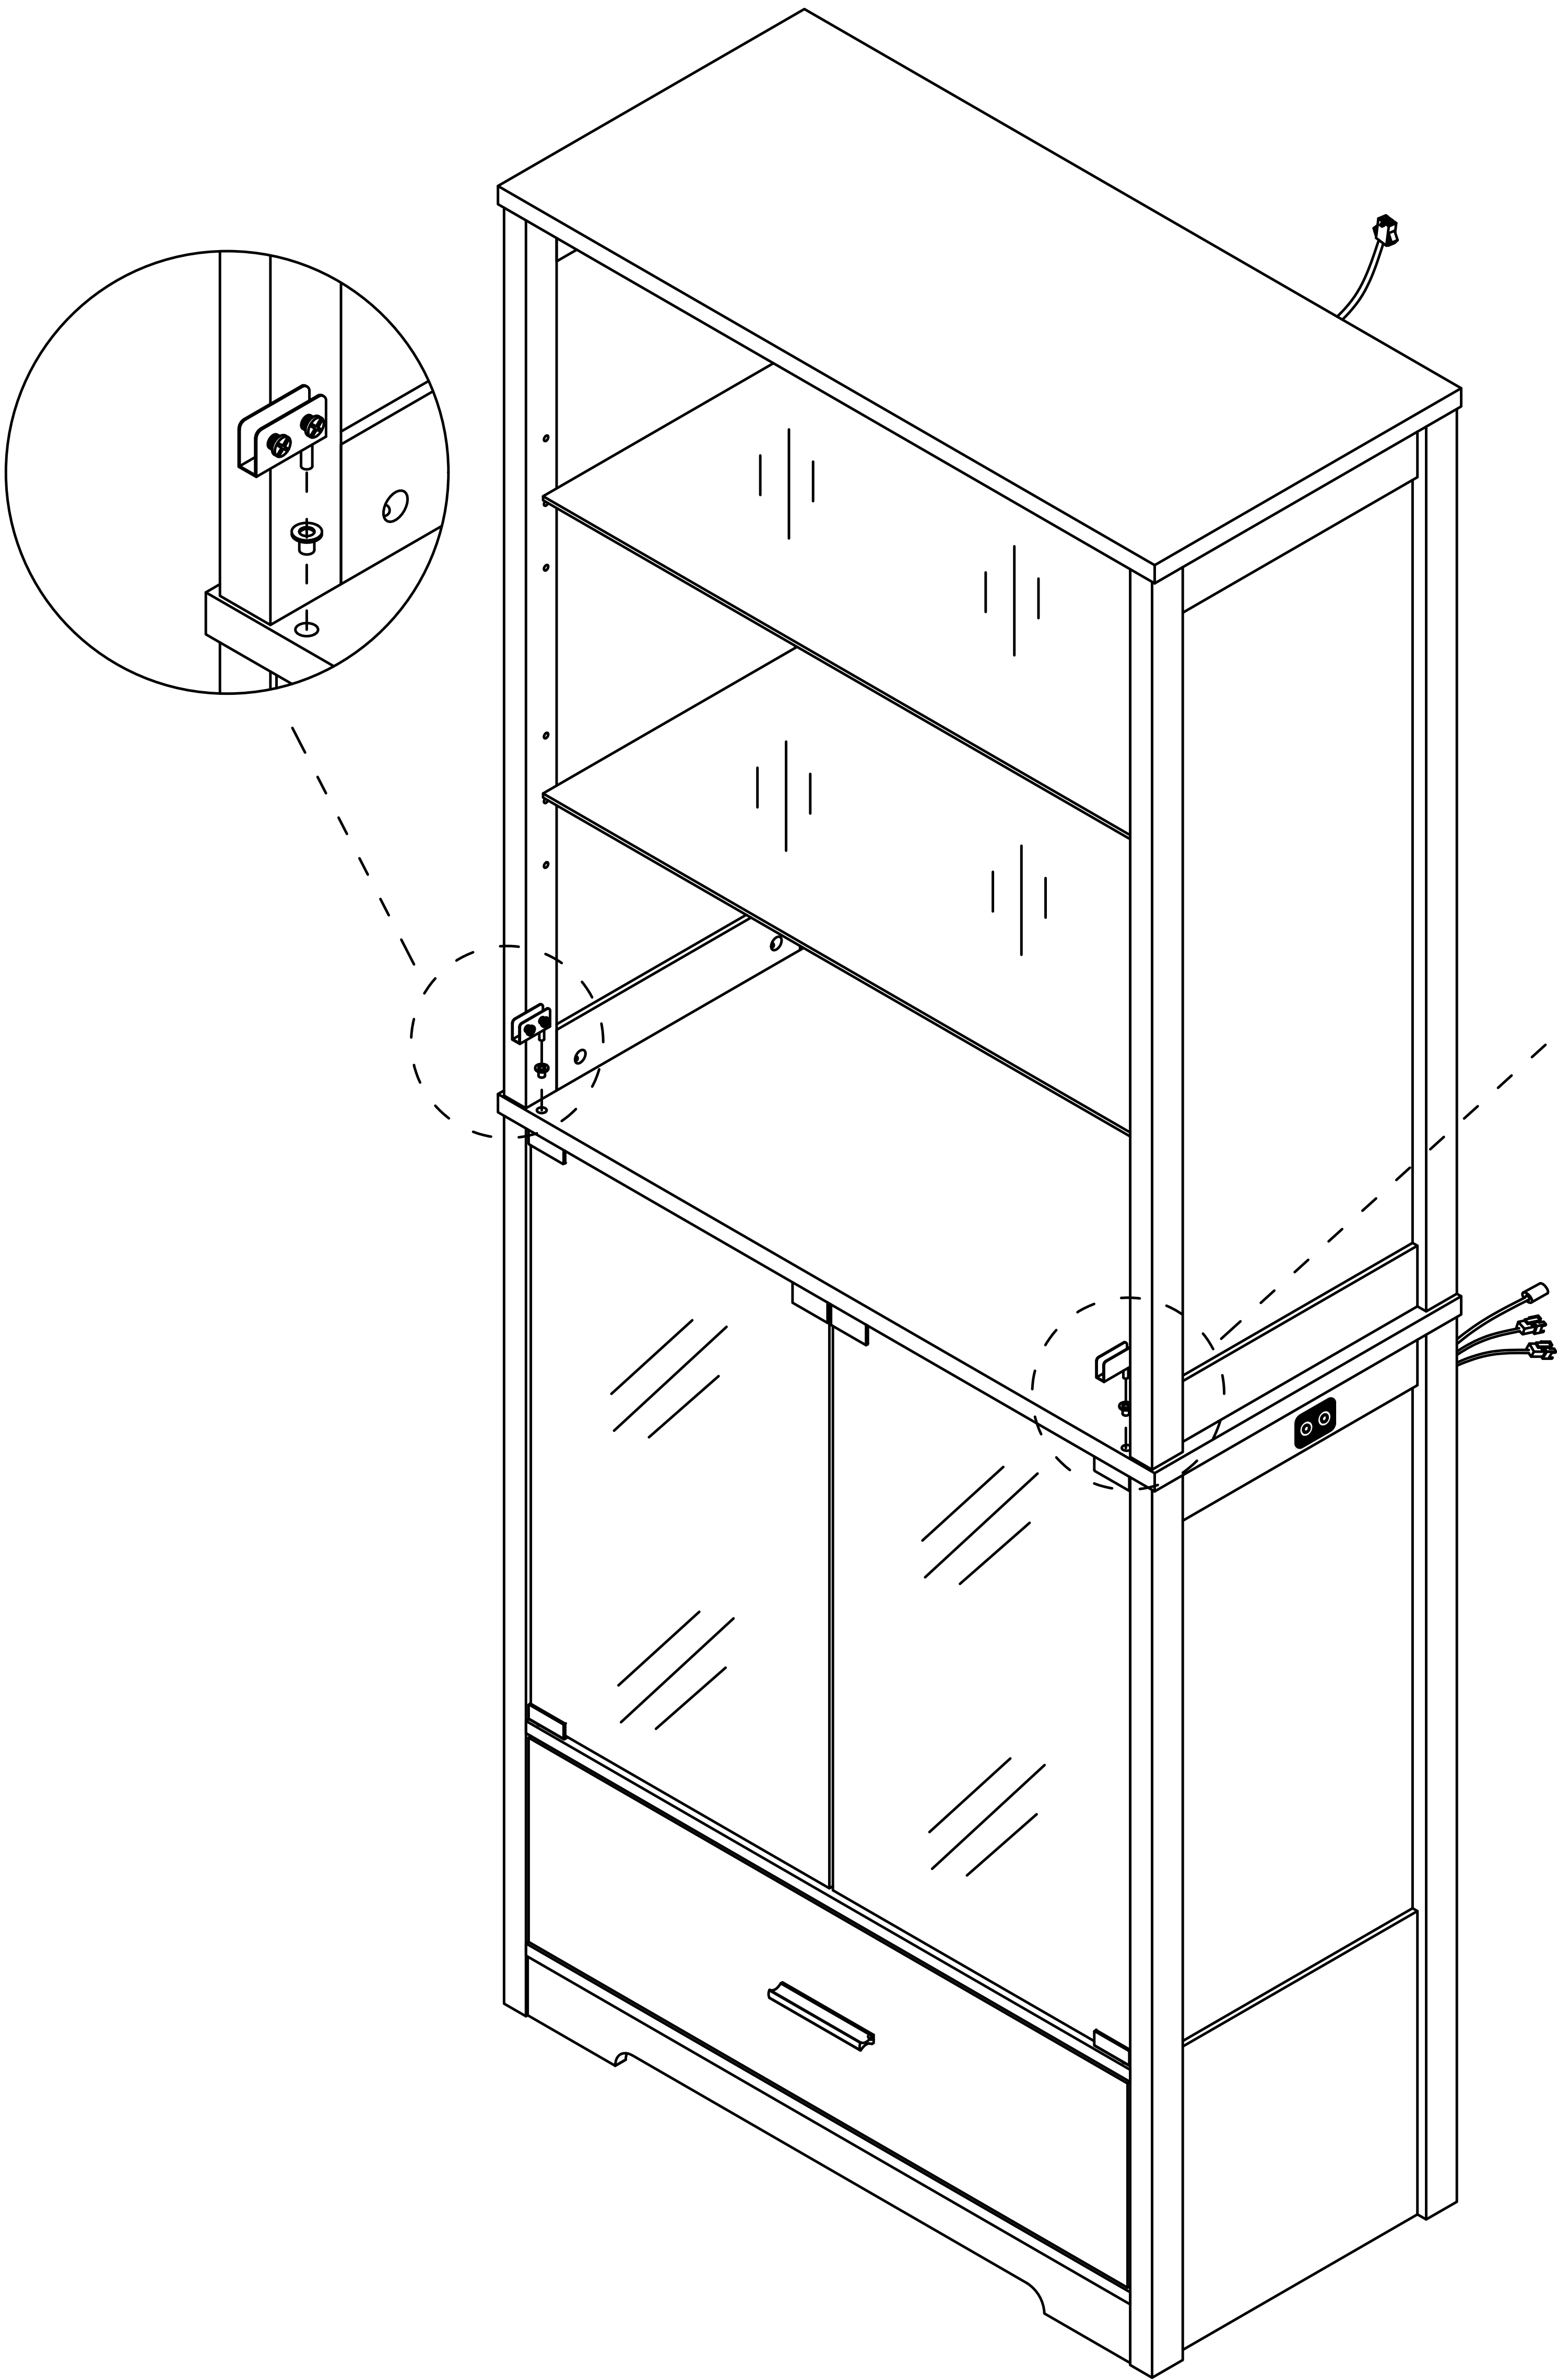


Step 39

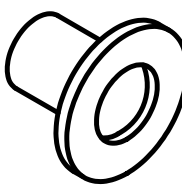6 
x2

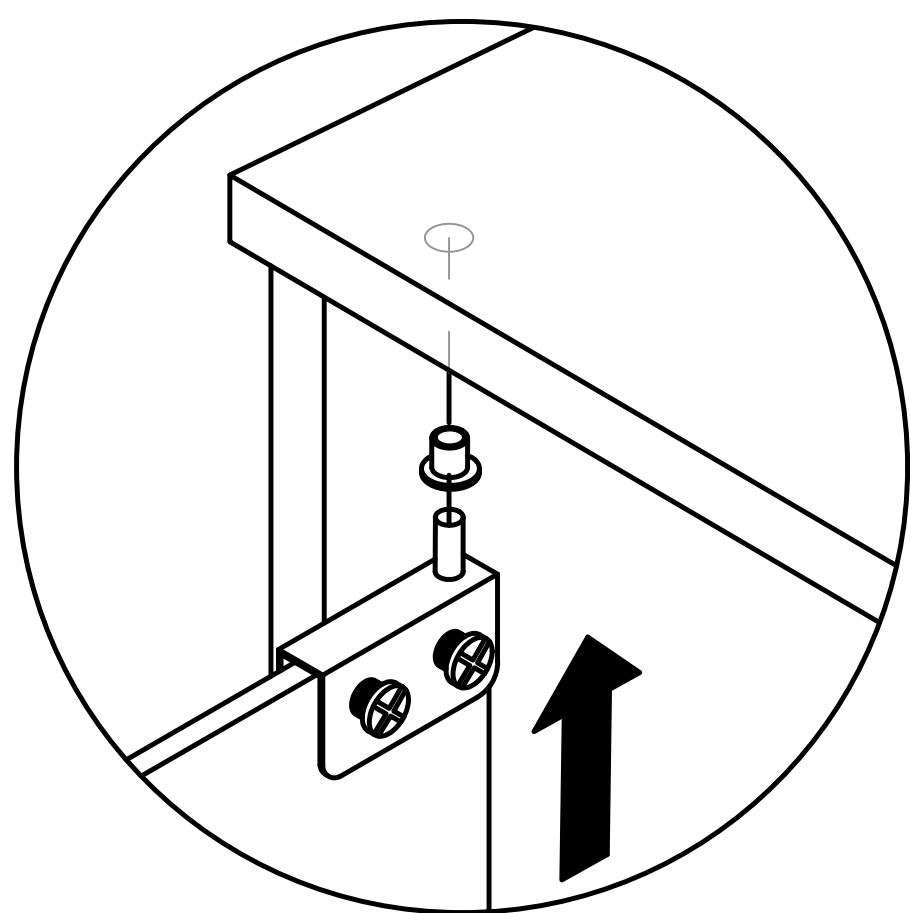


first

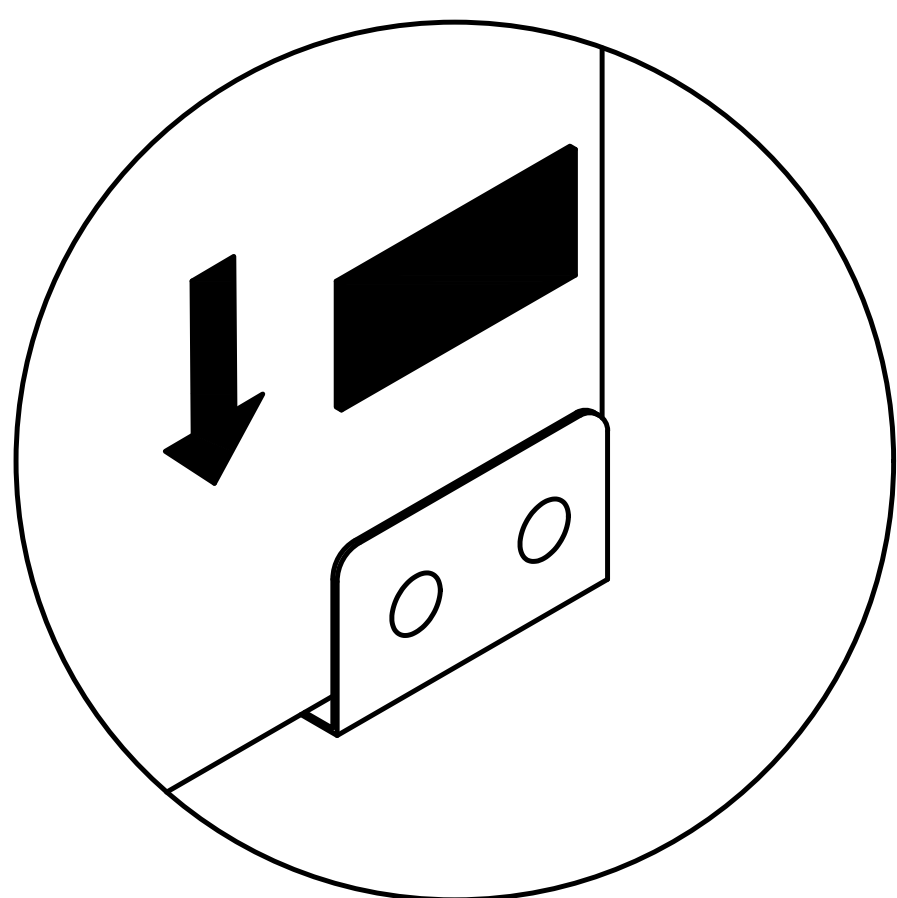


second

After installing the glass door, place the black gasket on the side where the screws are installed

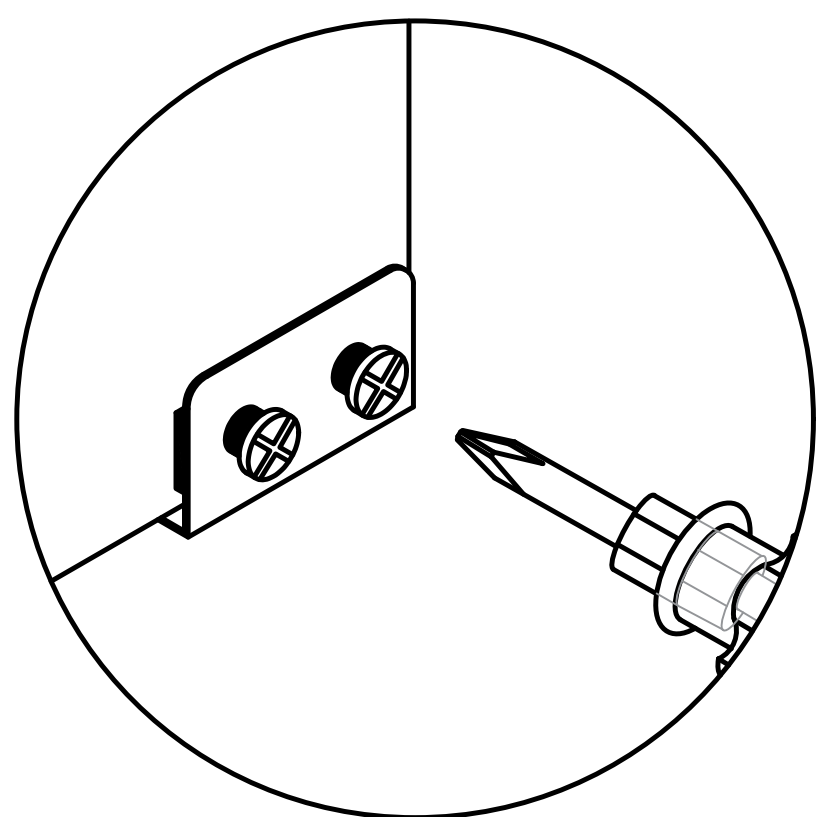

third

Locking screw


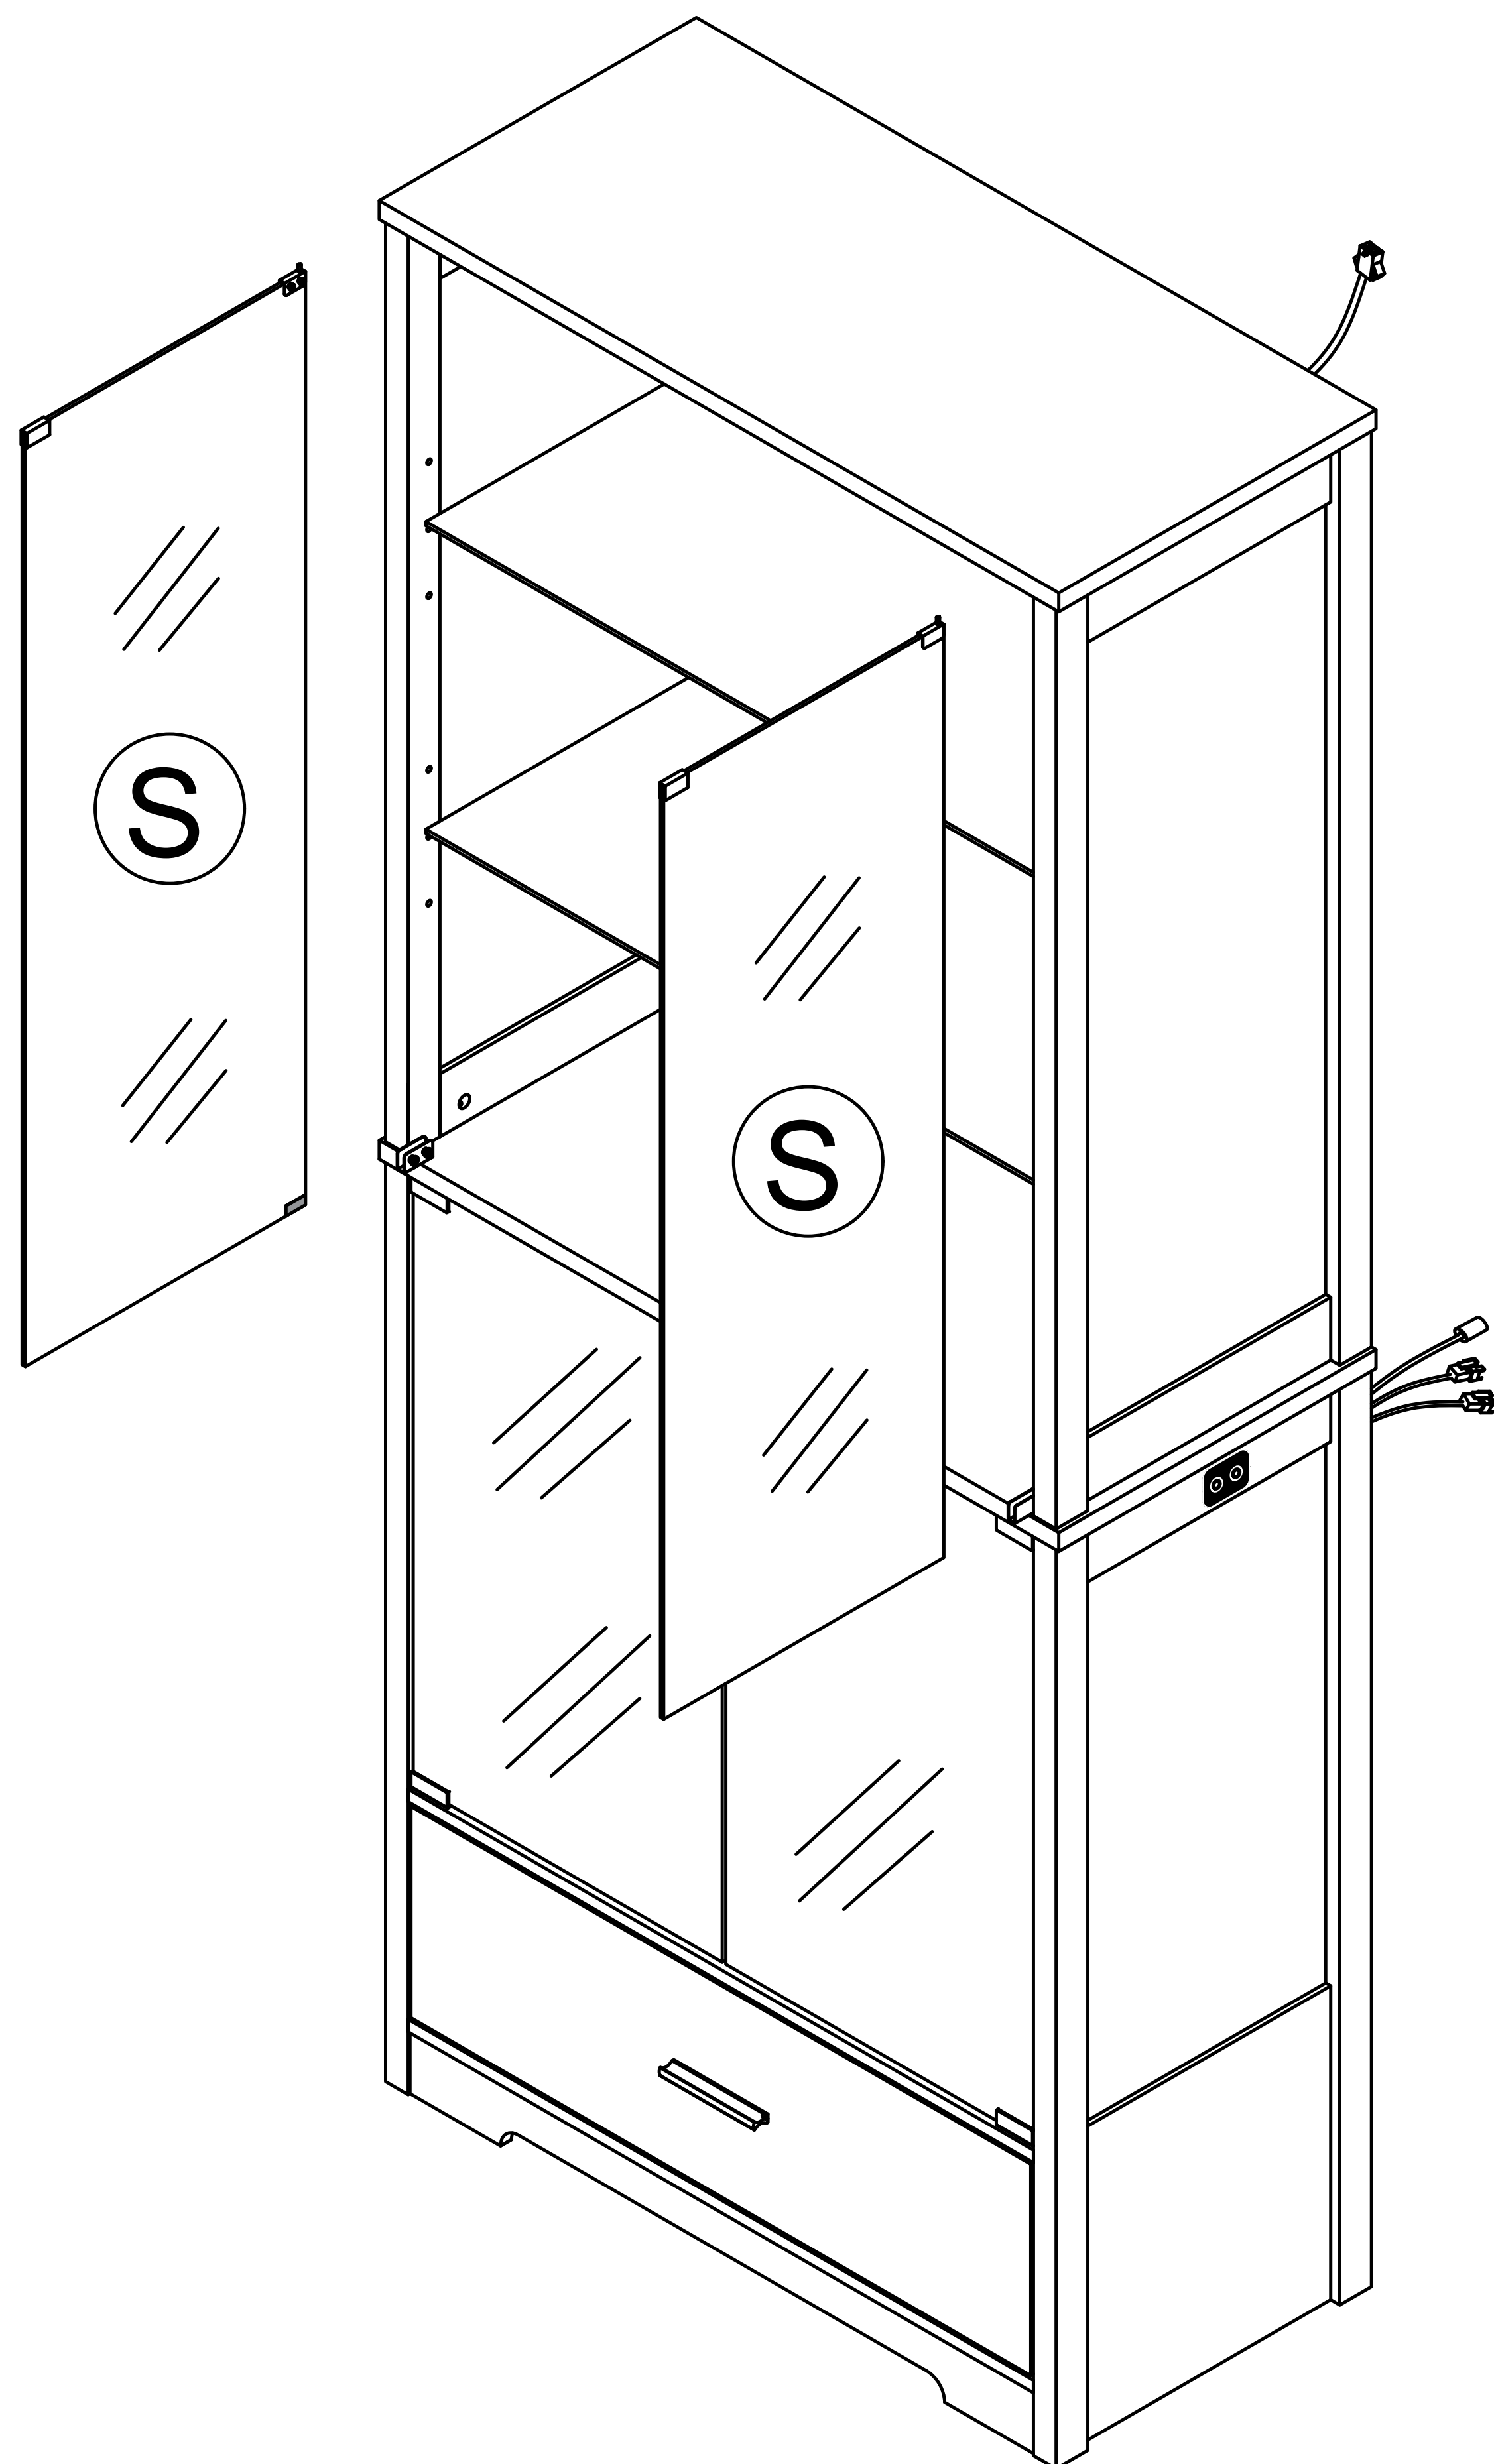


Pay attention to the direction of the door hinge during installation

When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.


Step 40

8



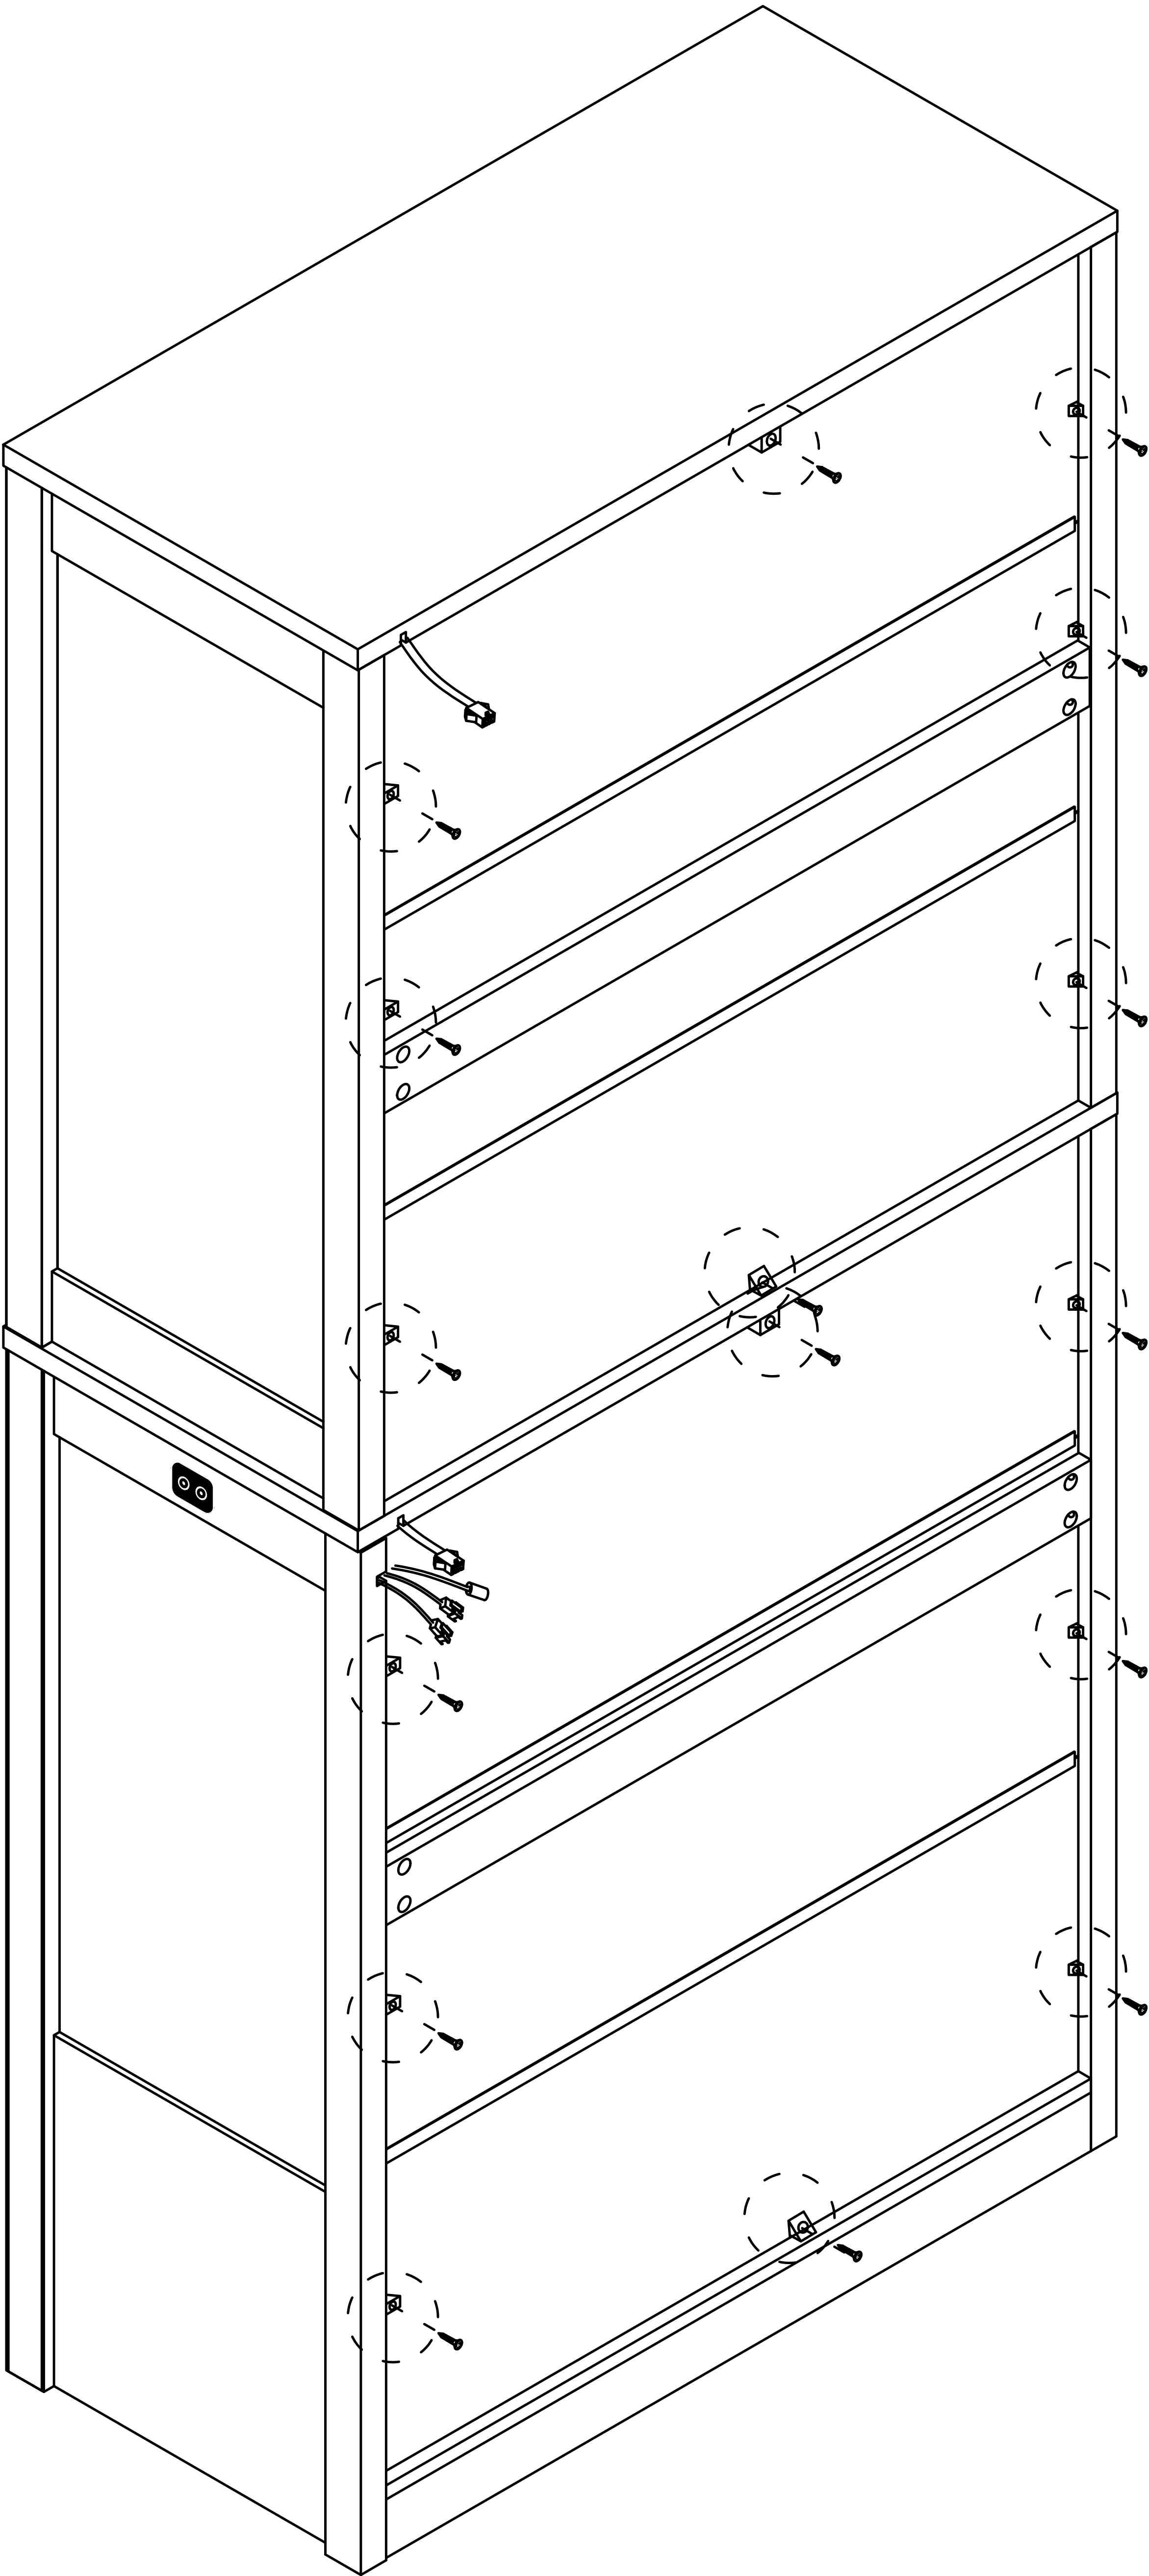
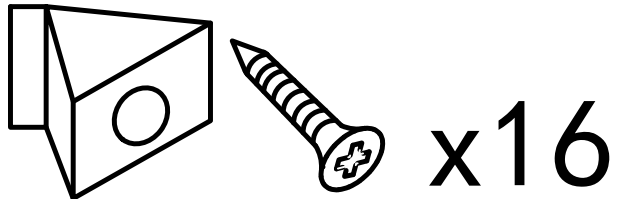


Step 41



9

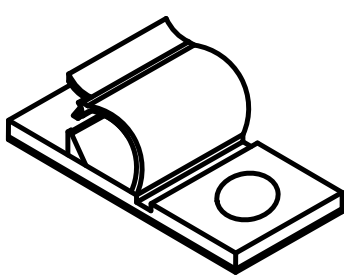

x1

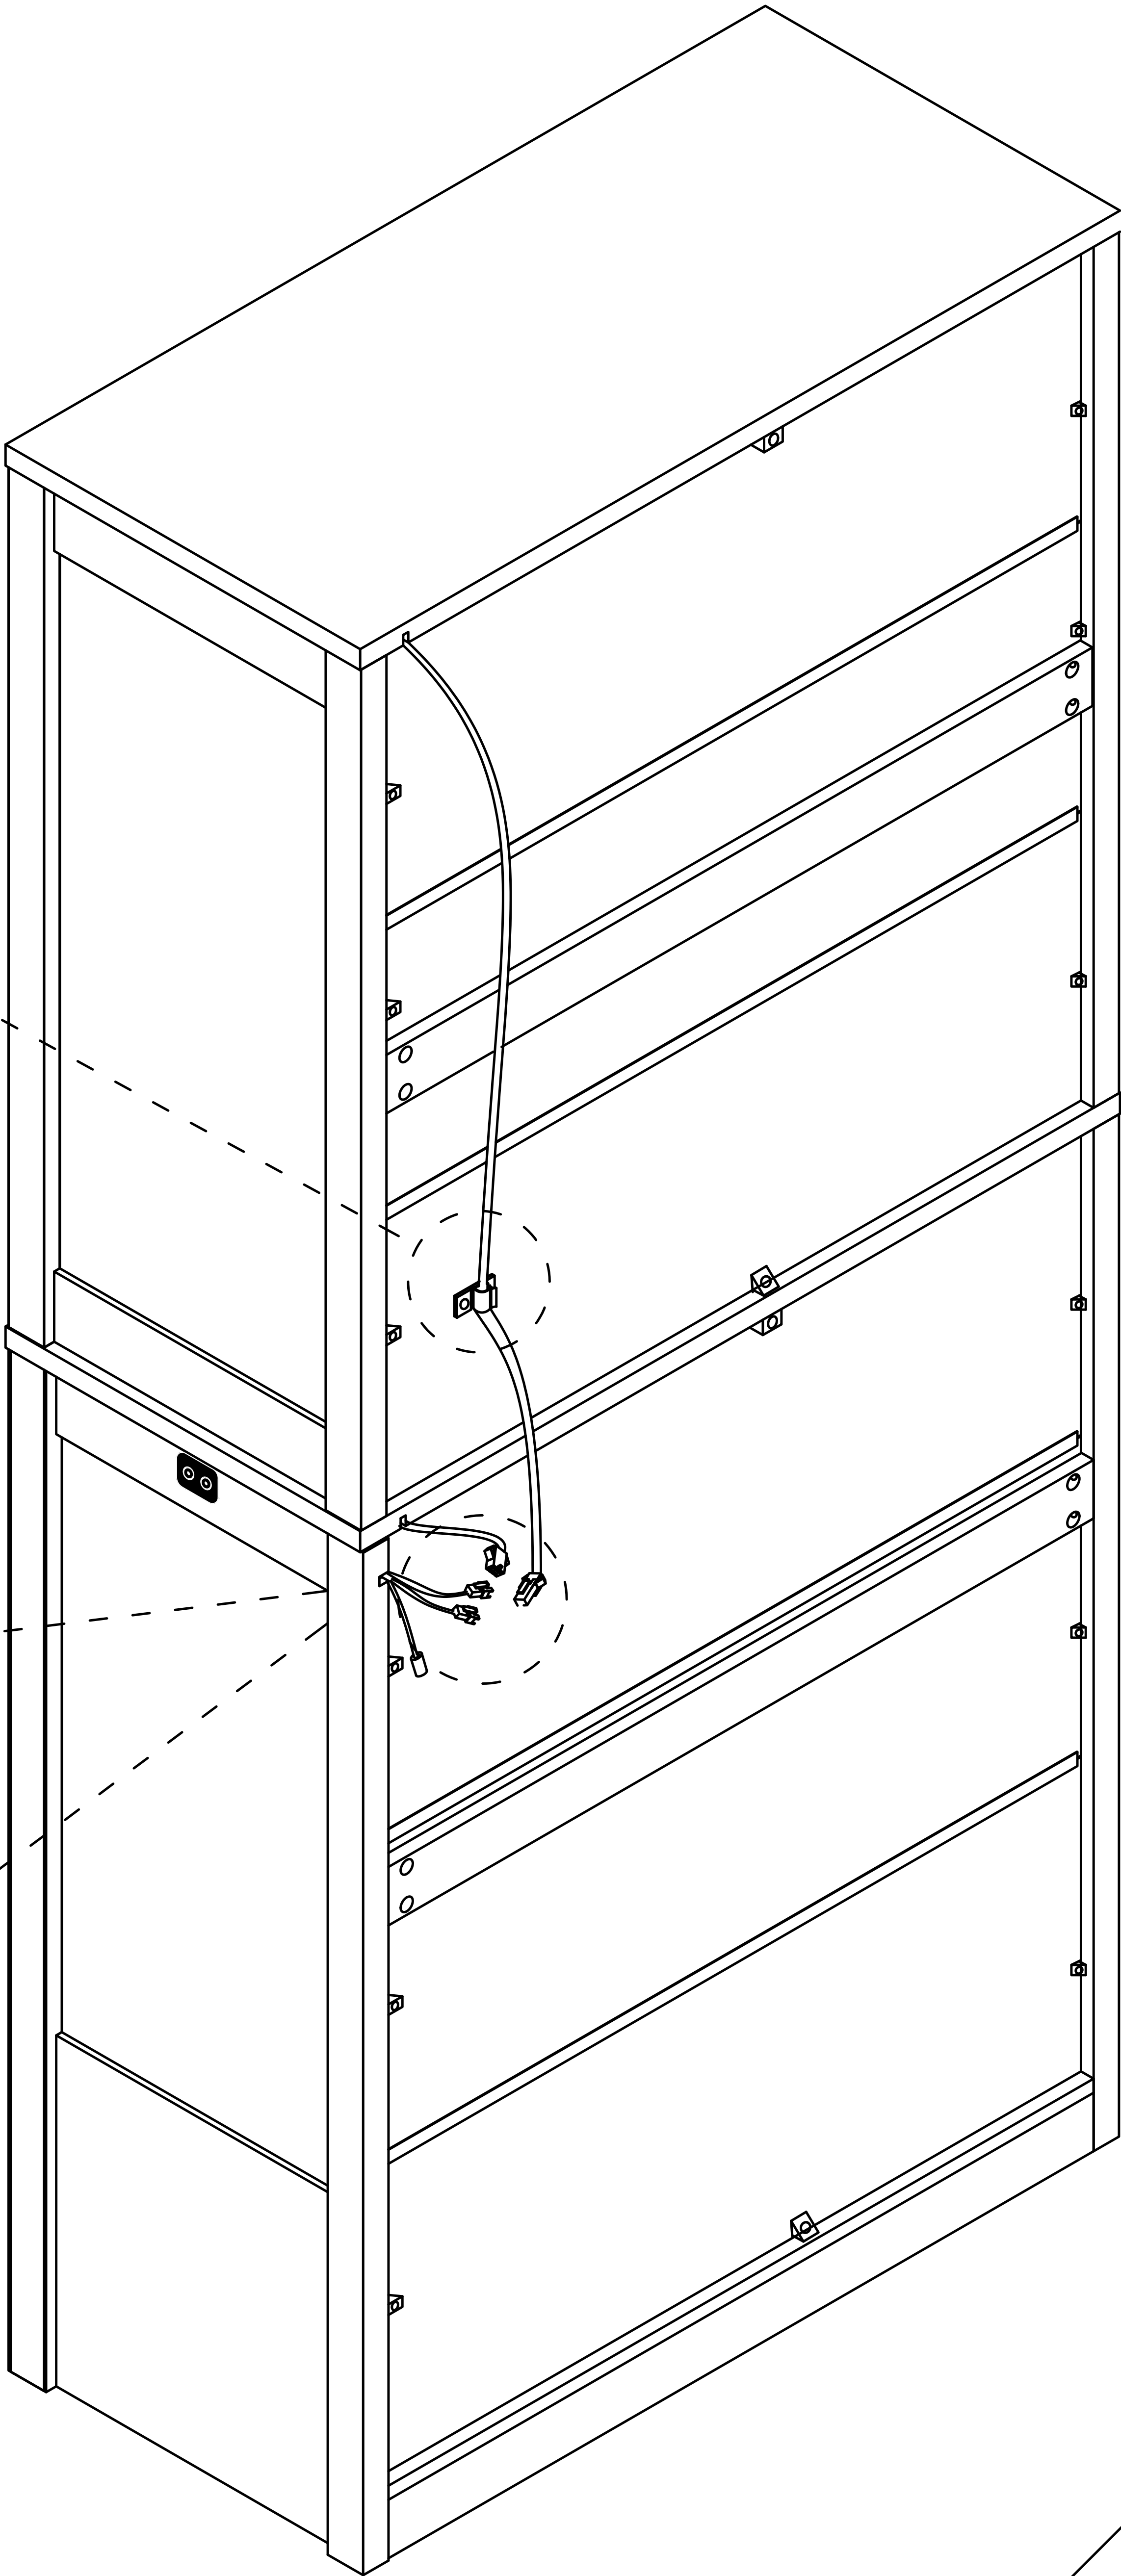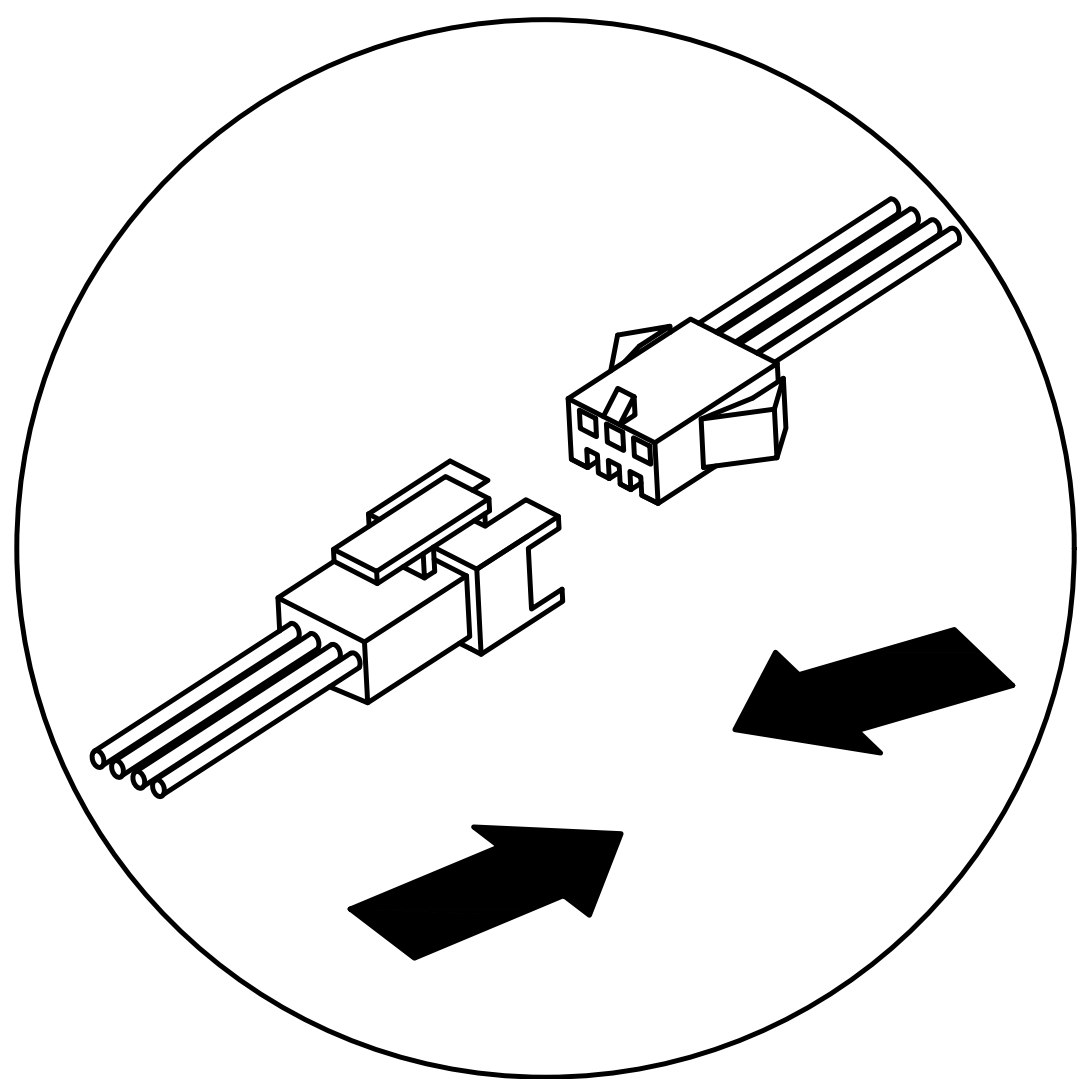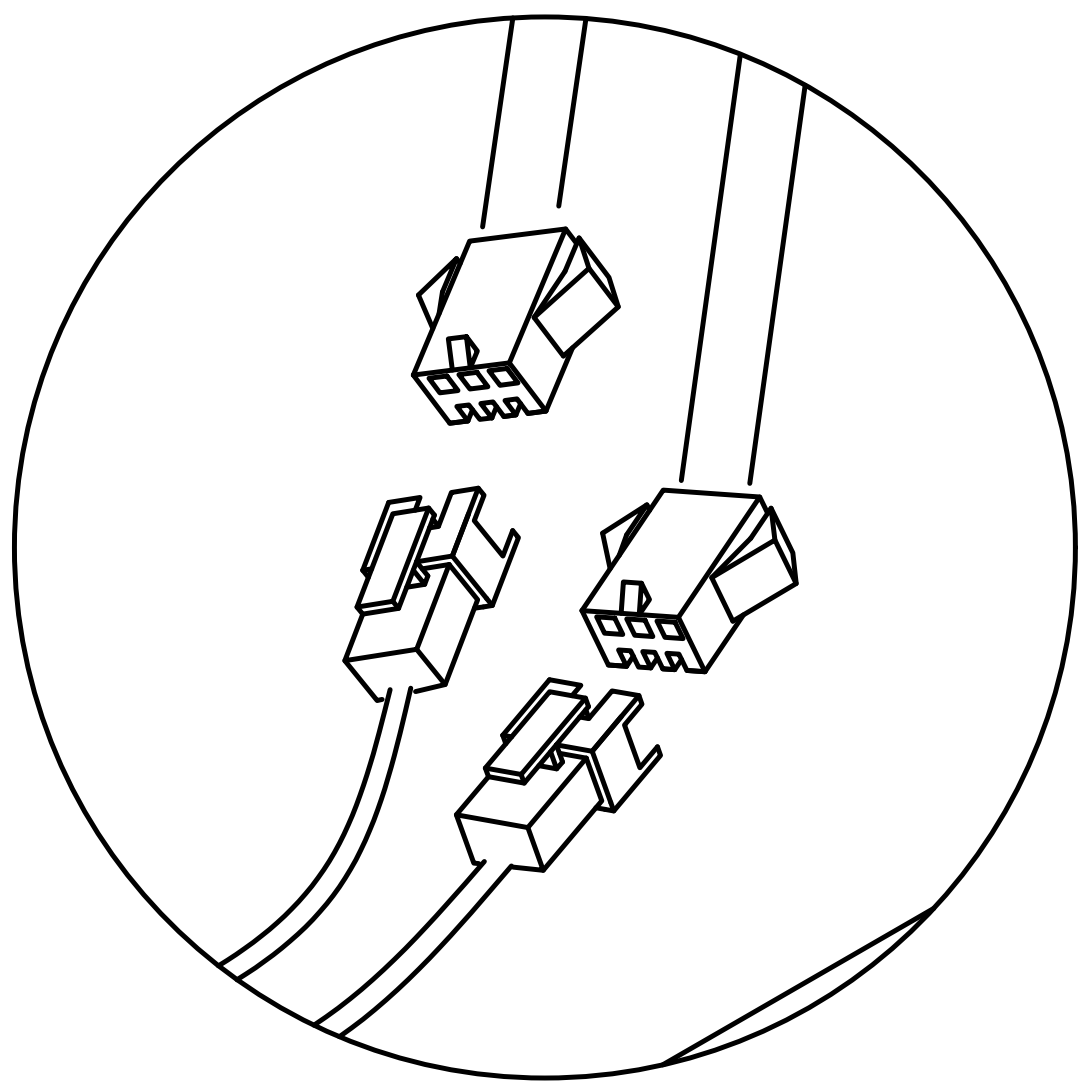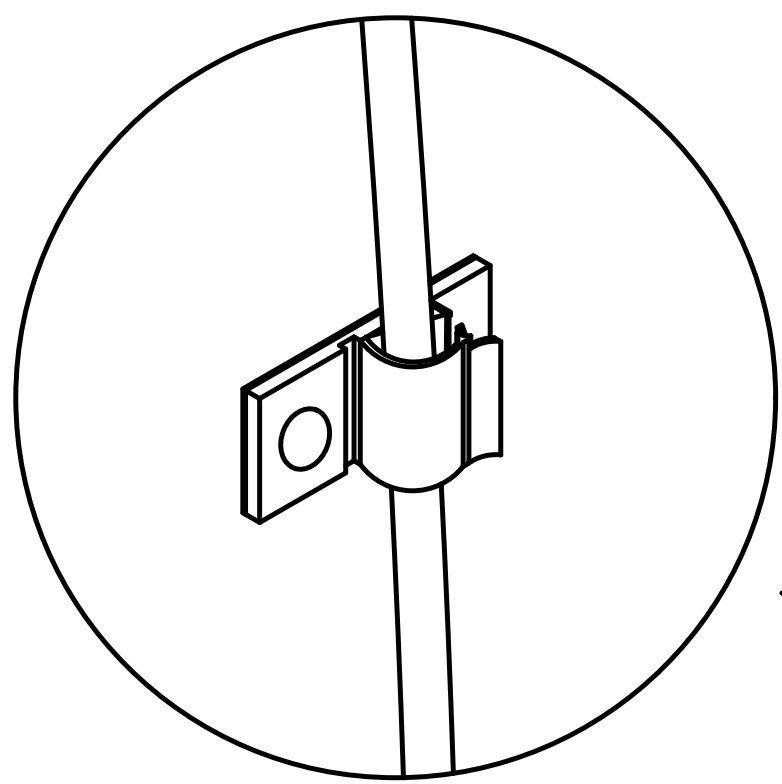


Step 42

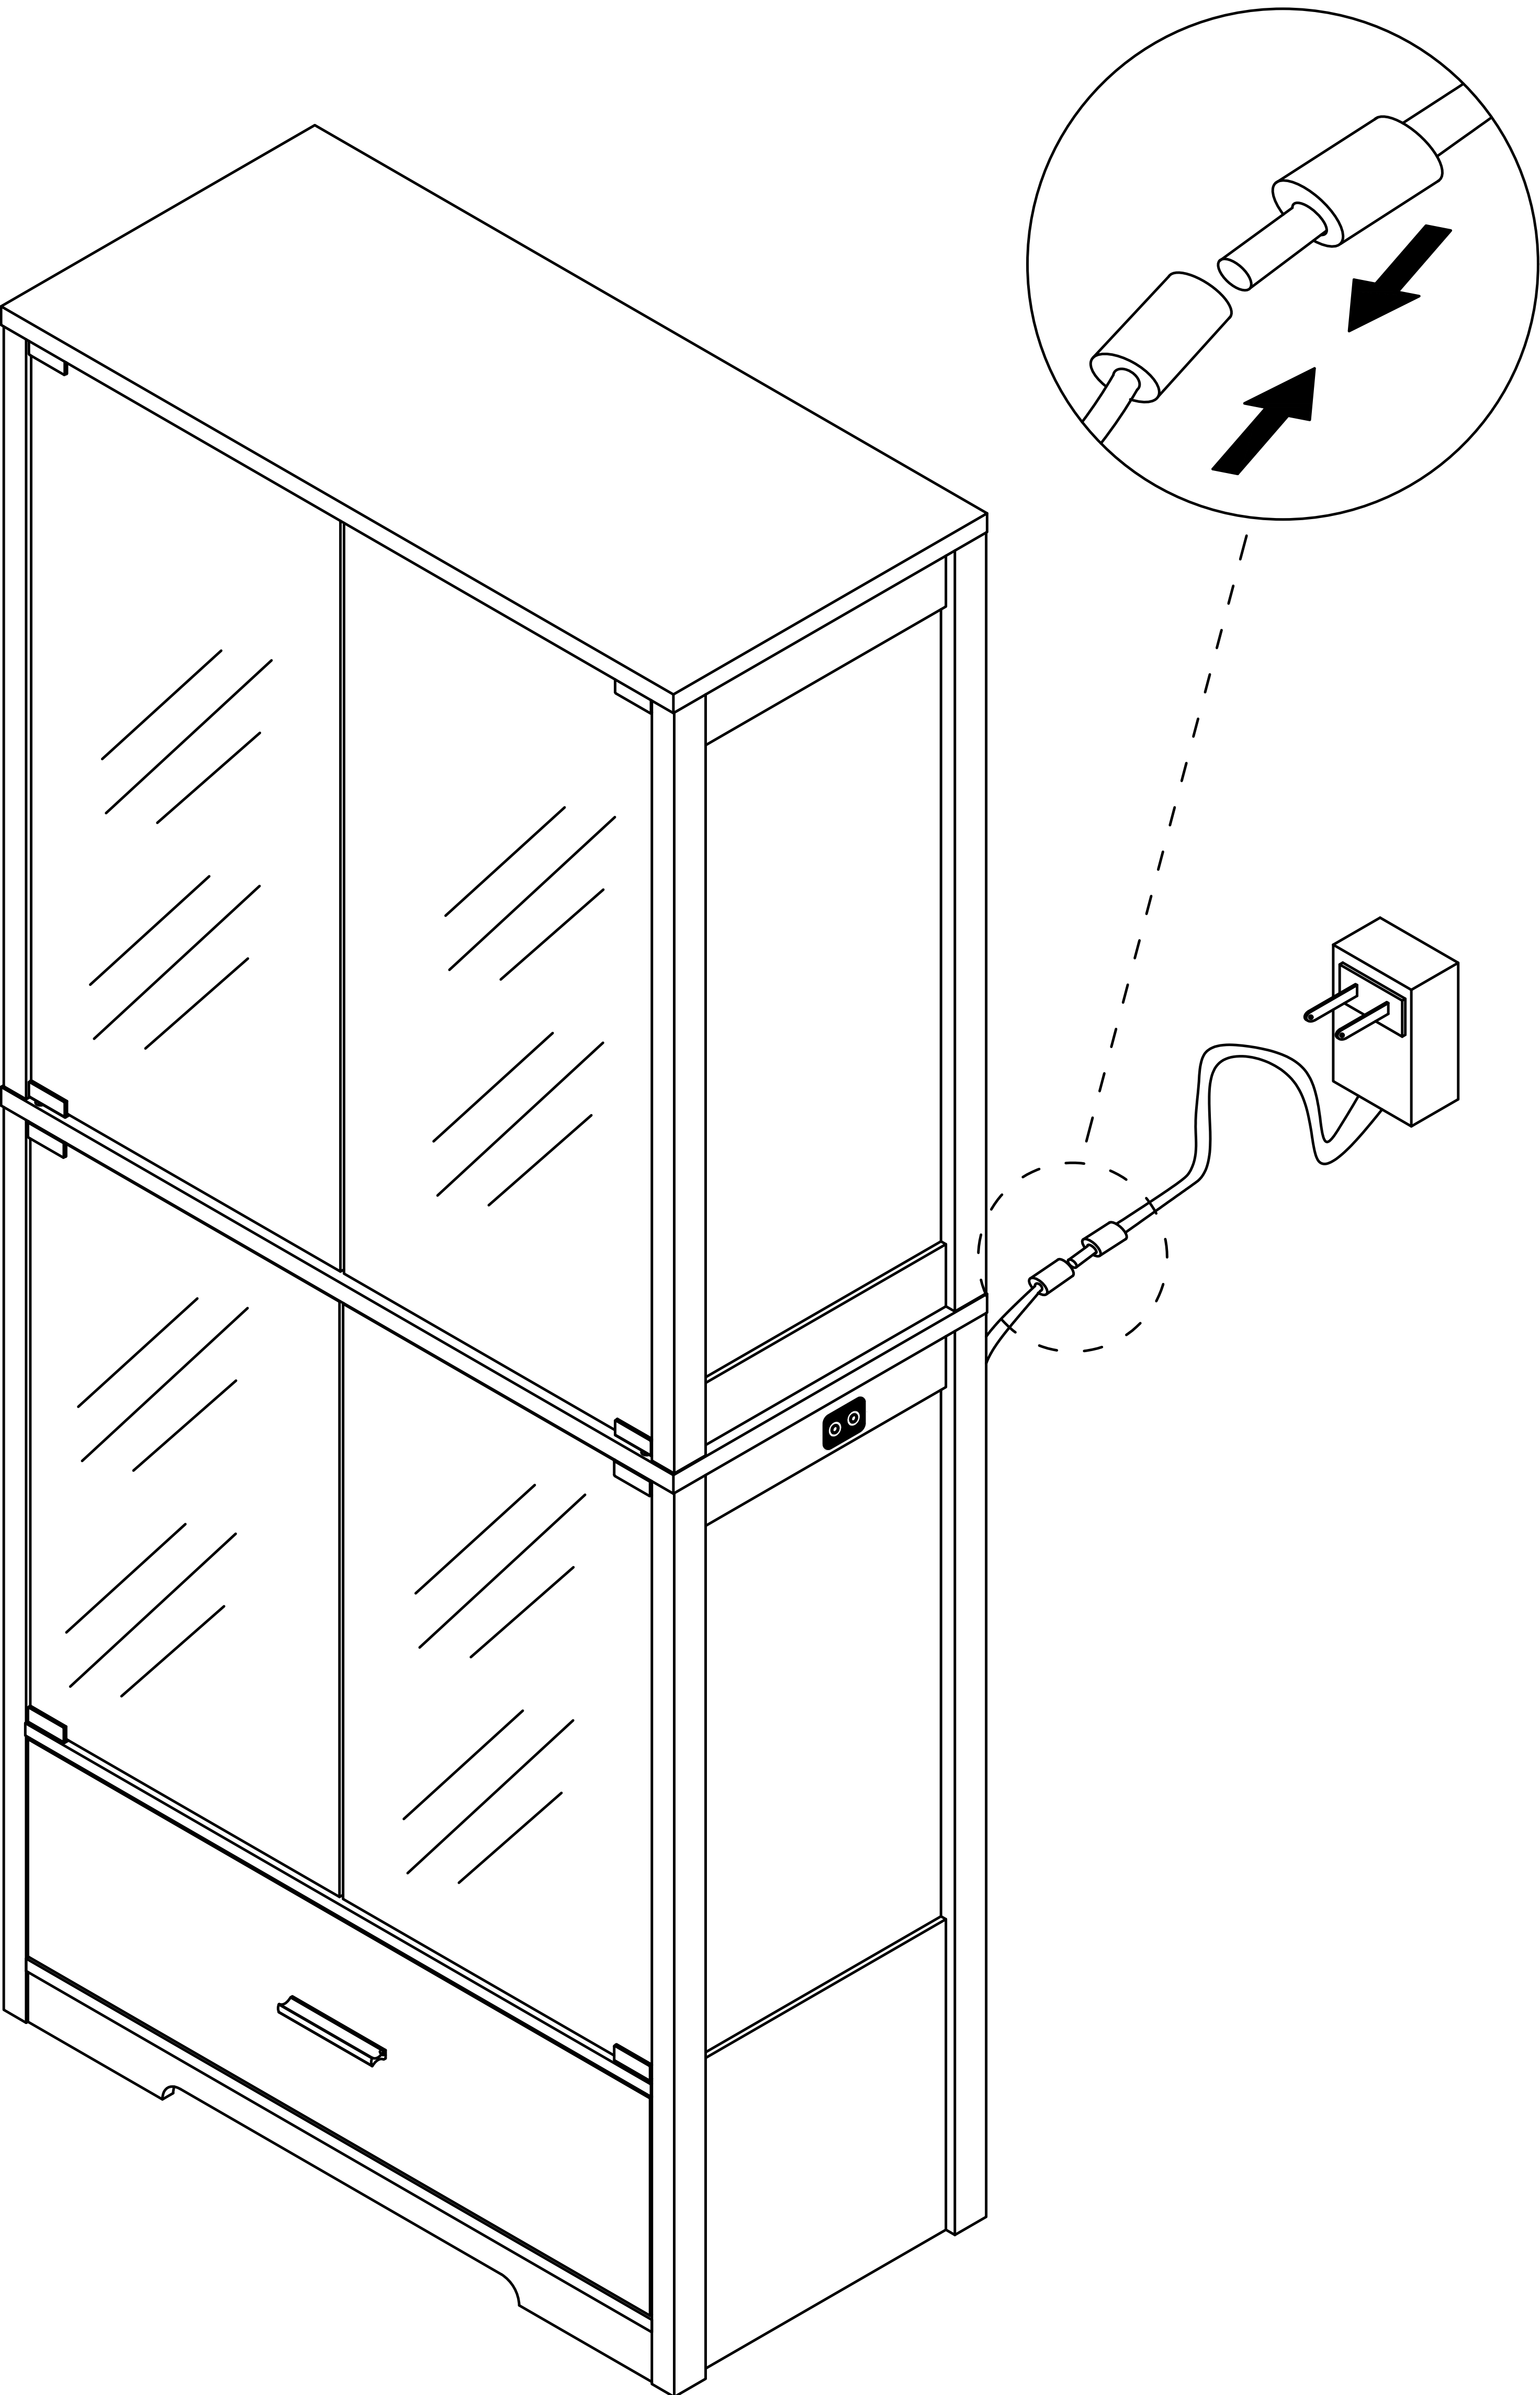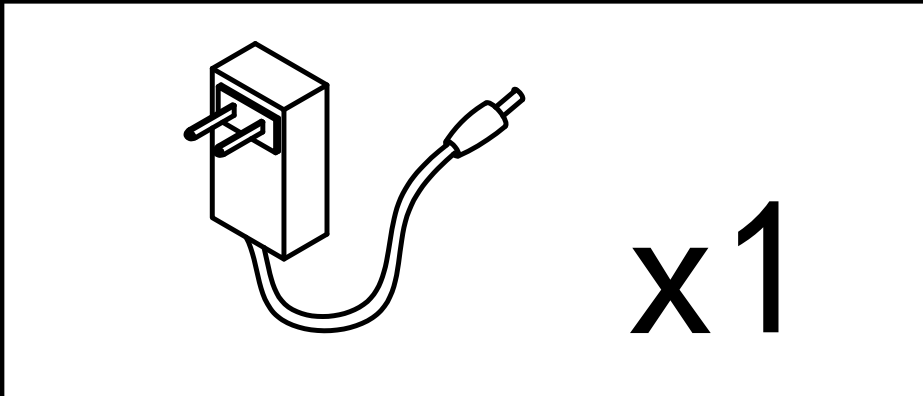


Step 43




Install as required

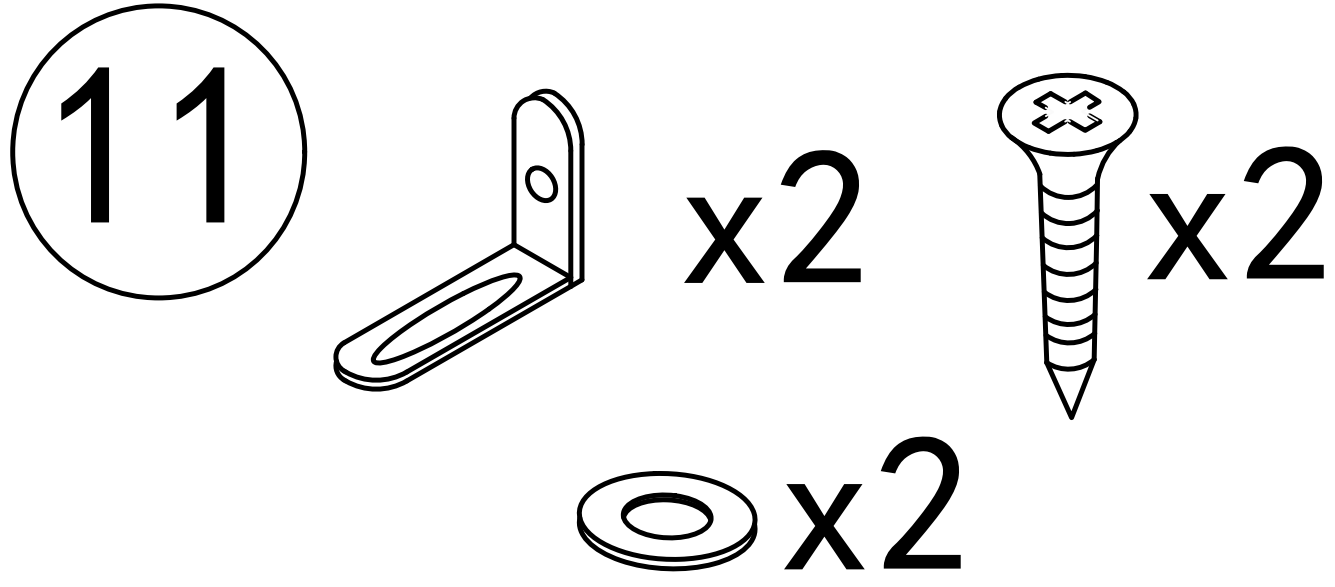

3.5x14mm

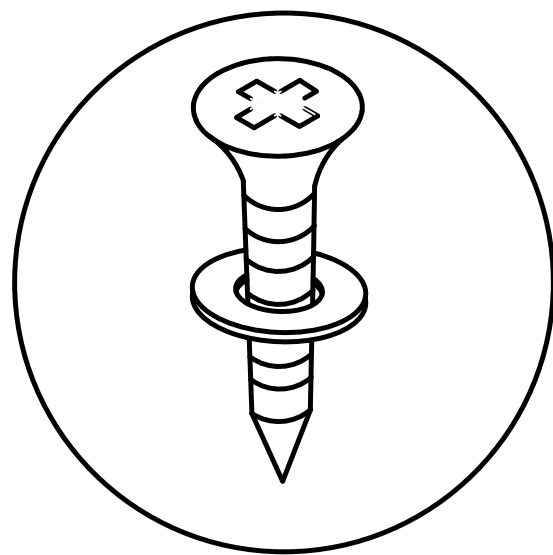

Install the anti fall hardware on the cabinet as shown in the picture first

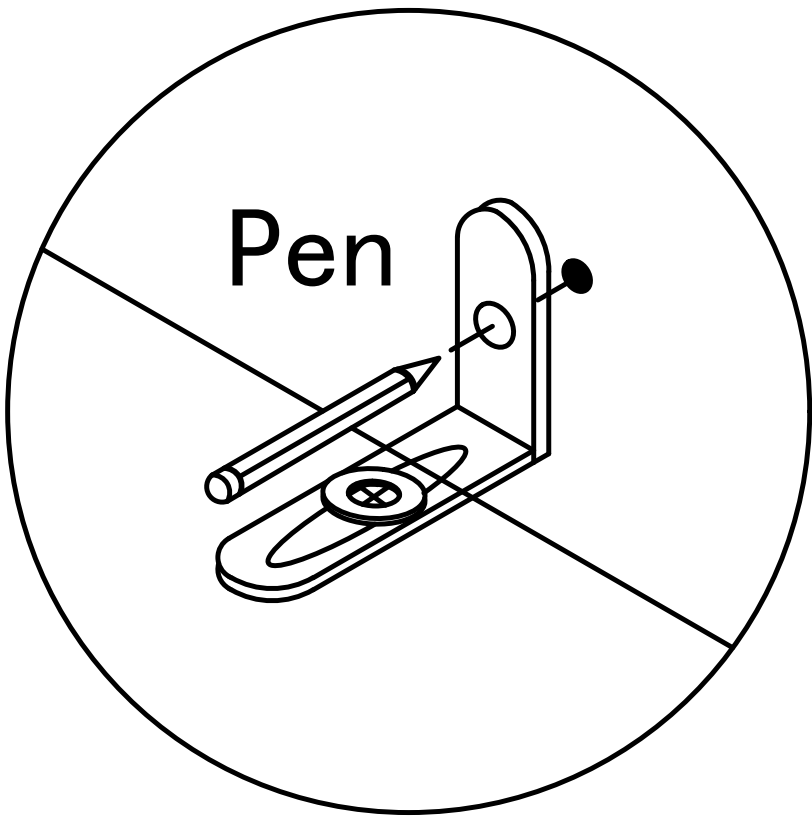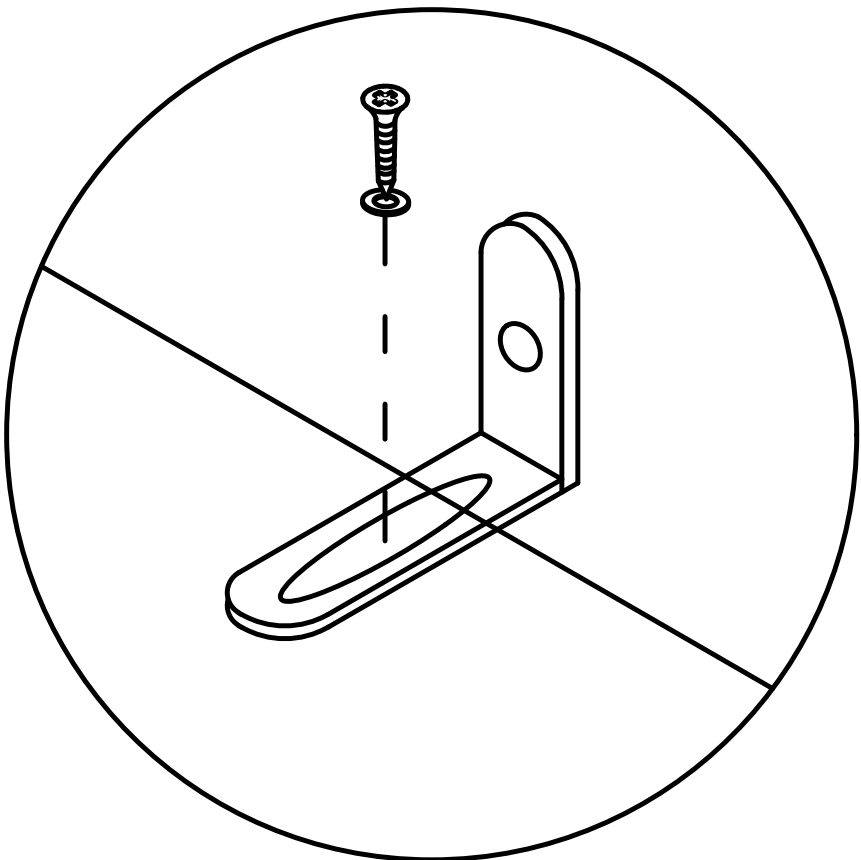
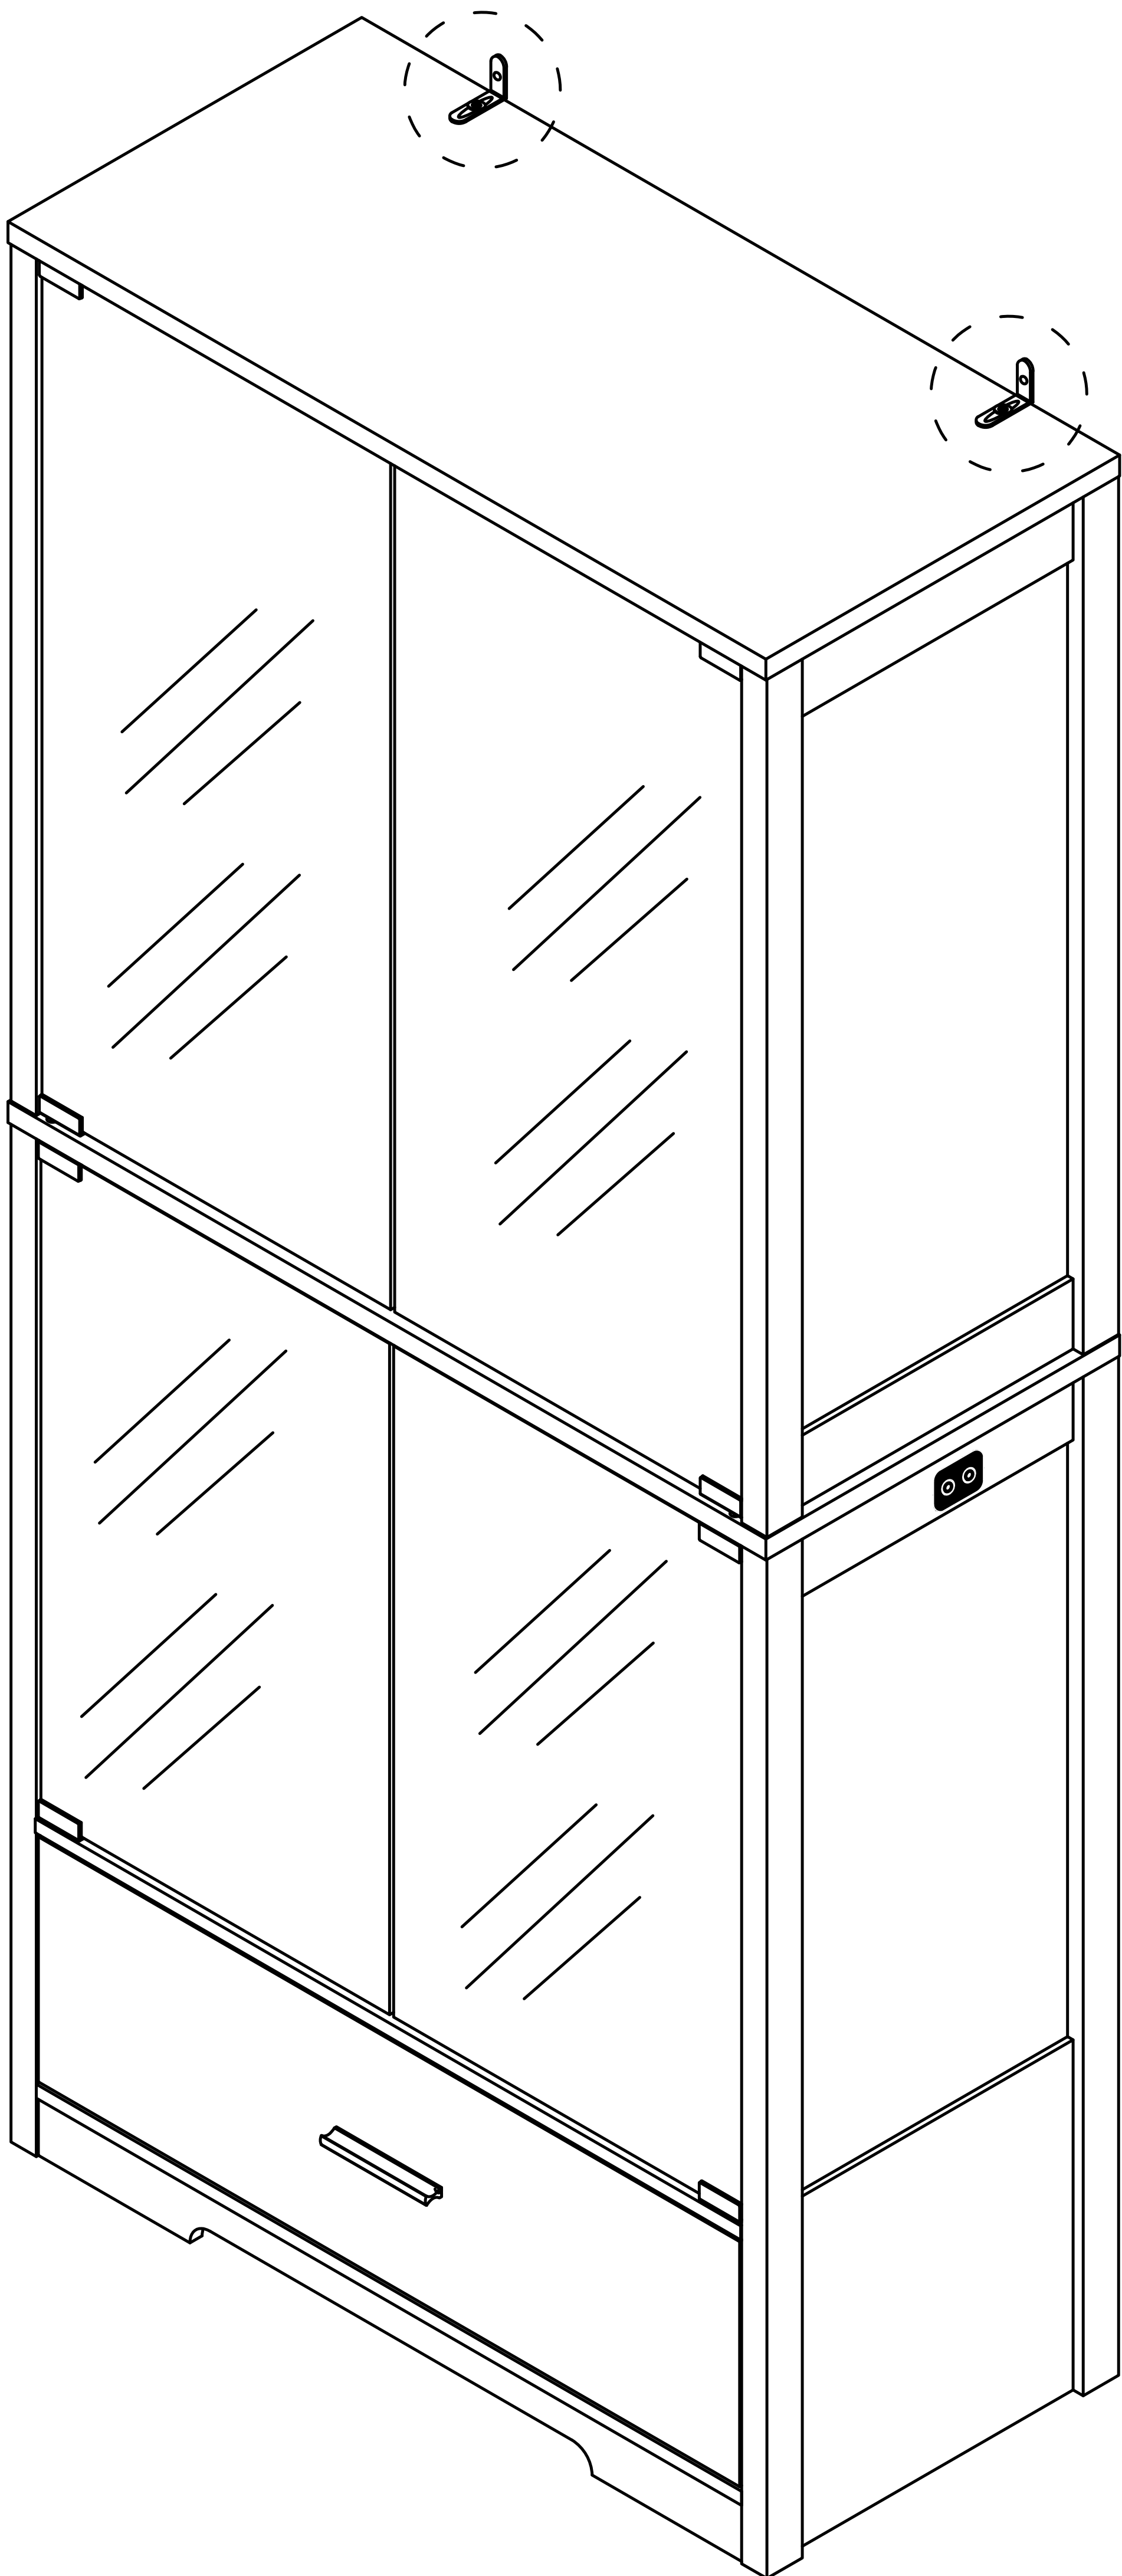


Then mark the wall with a pen through the holes in the anti-fall hardware



Step 44

11




 x2

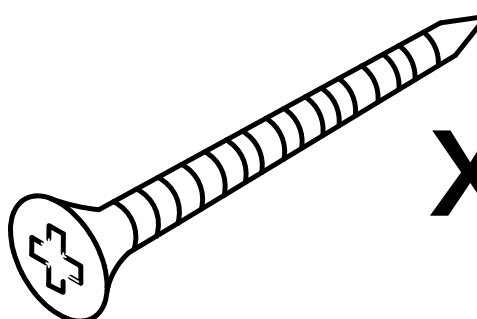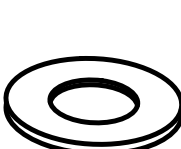 x2  x2

Wall Mount

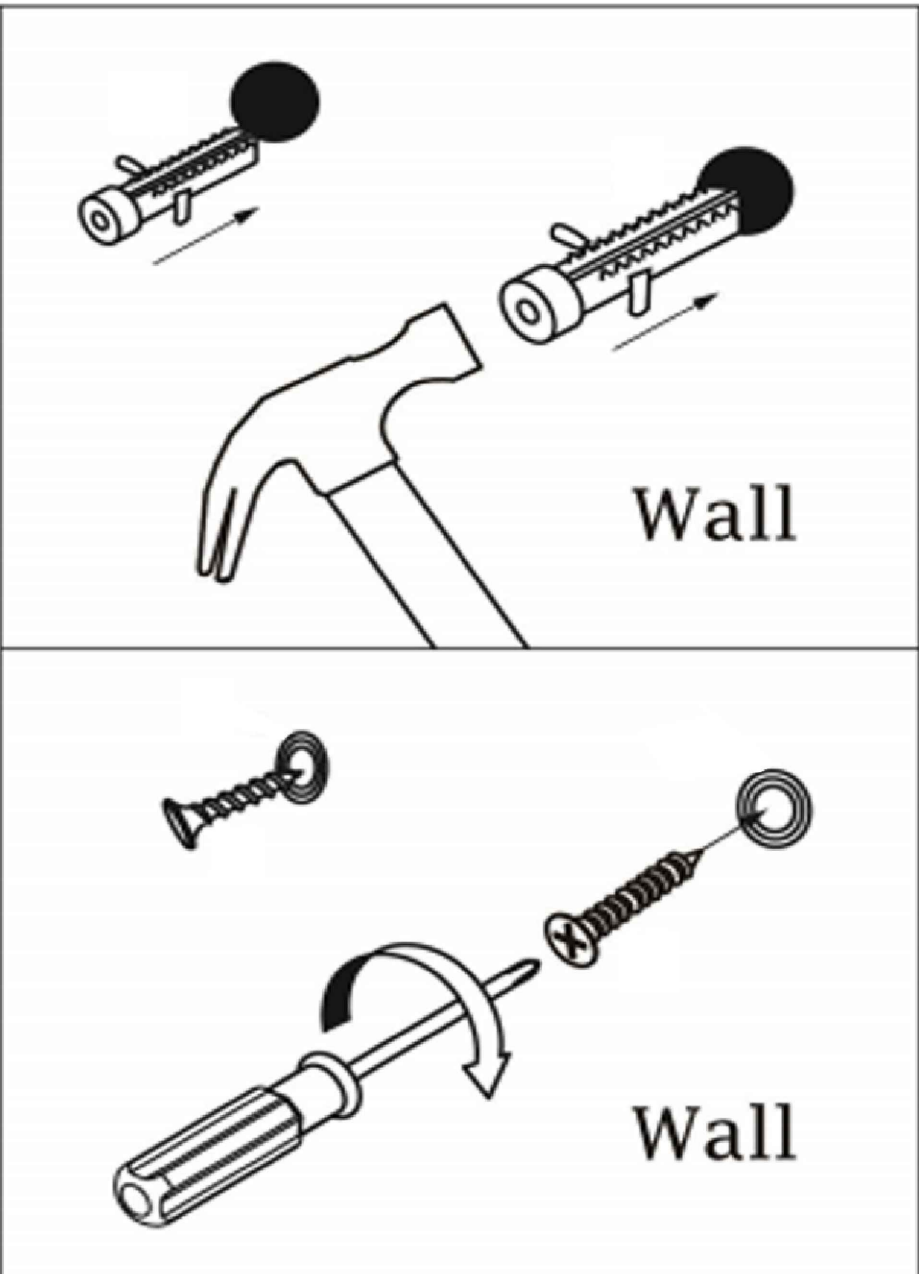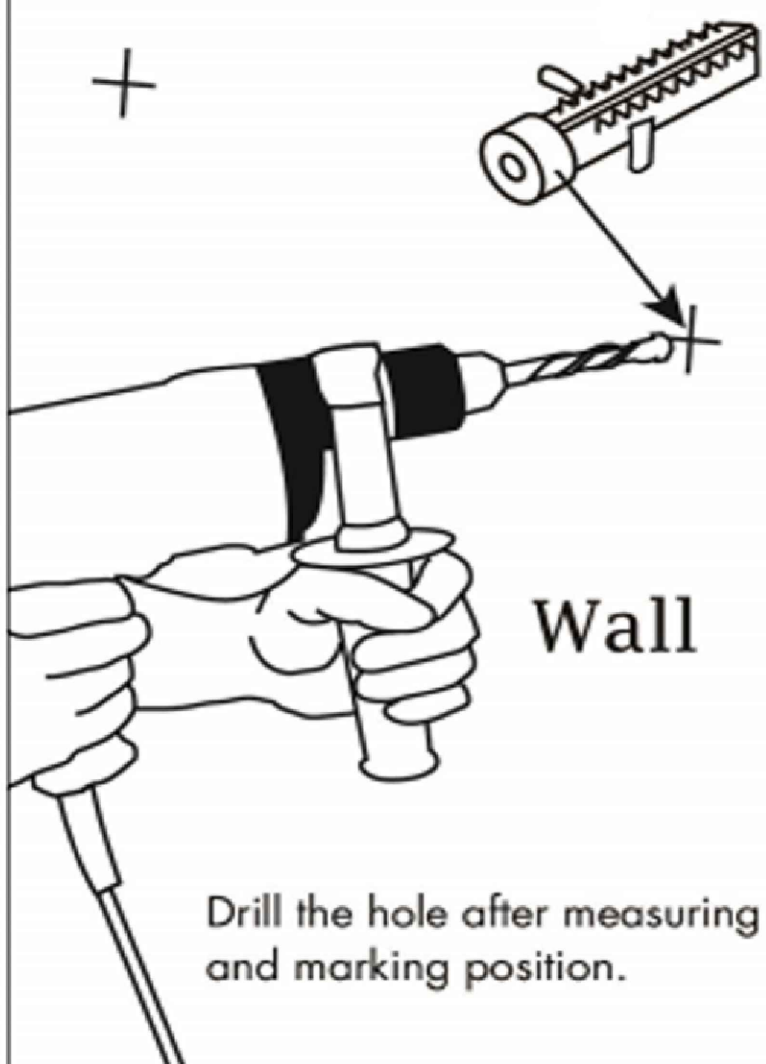

Drill the hole with an electric drill
and punch in the colloidal particles

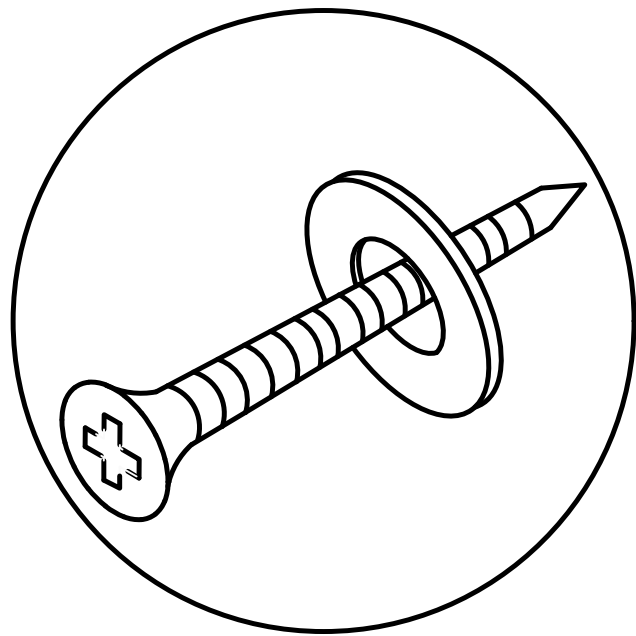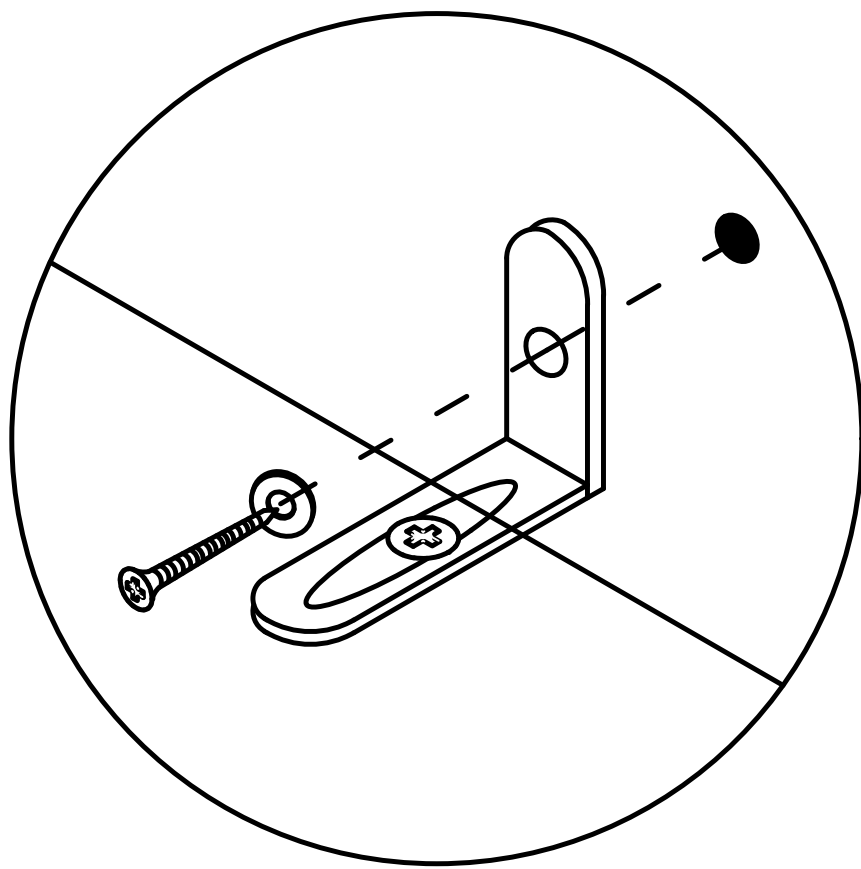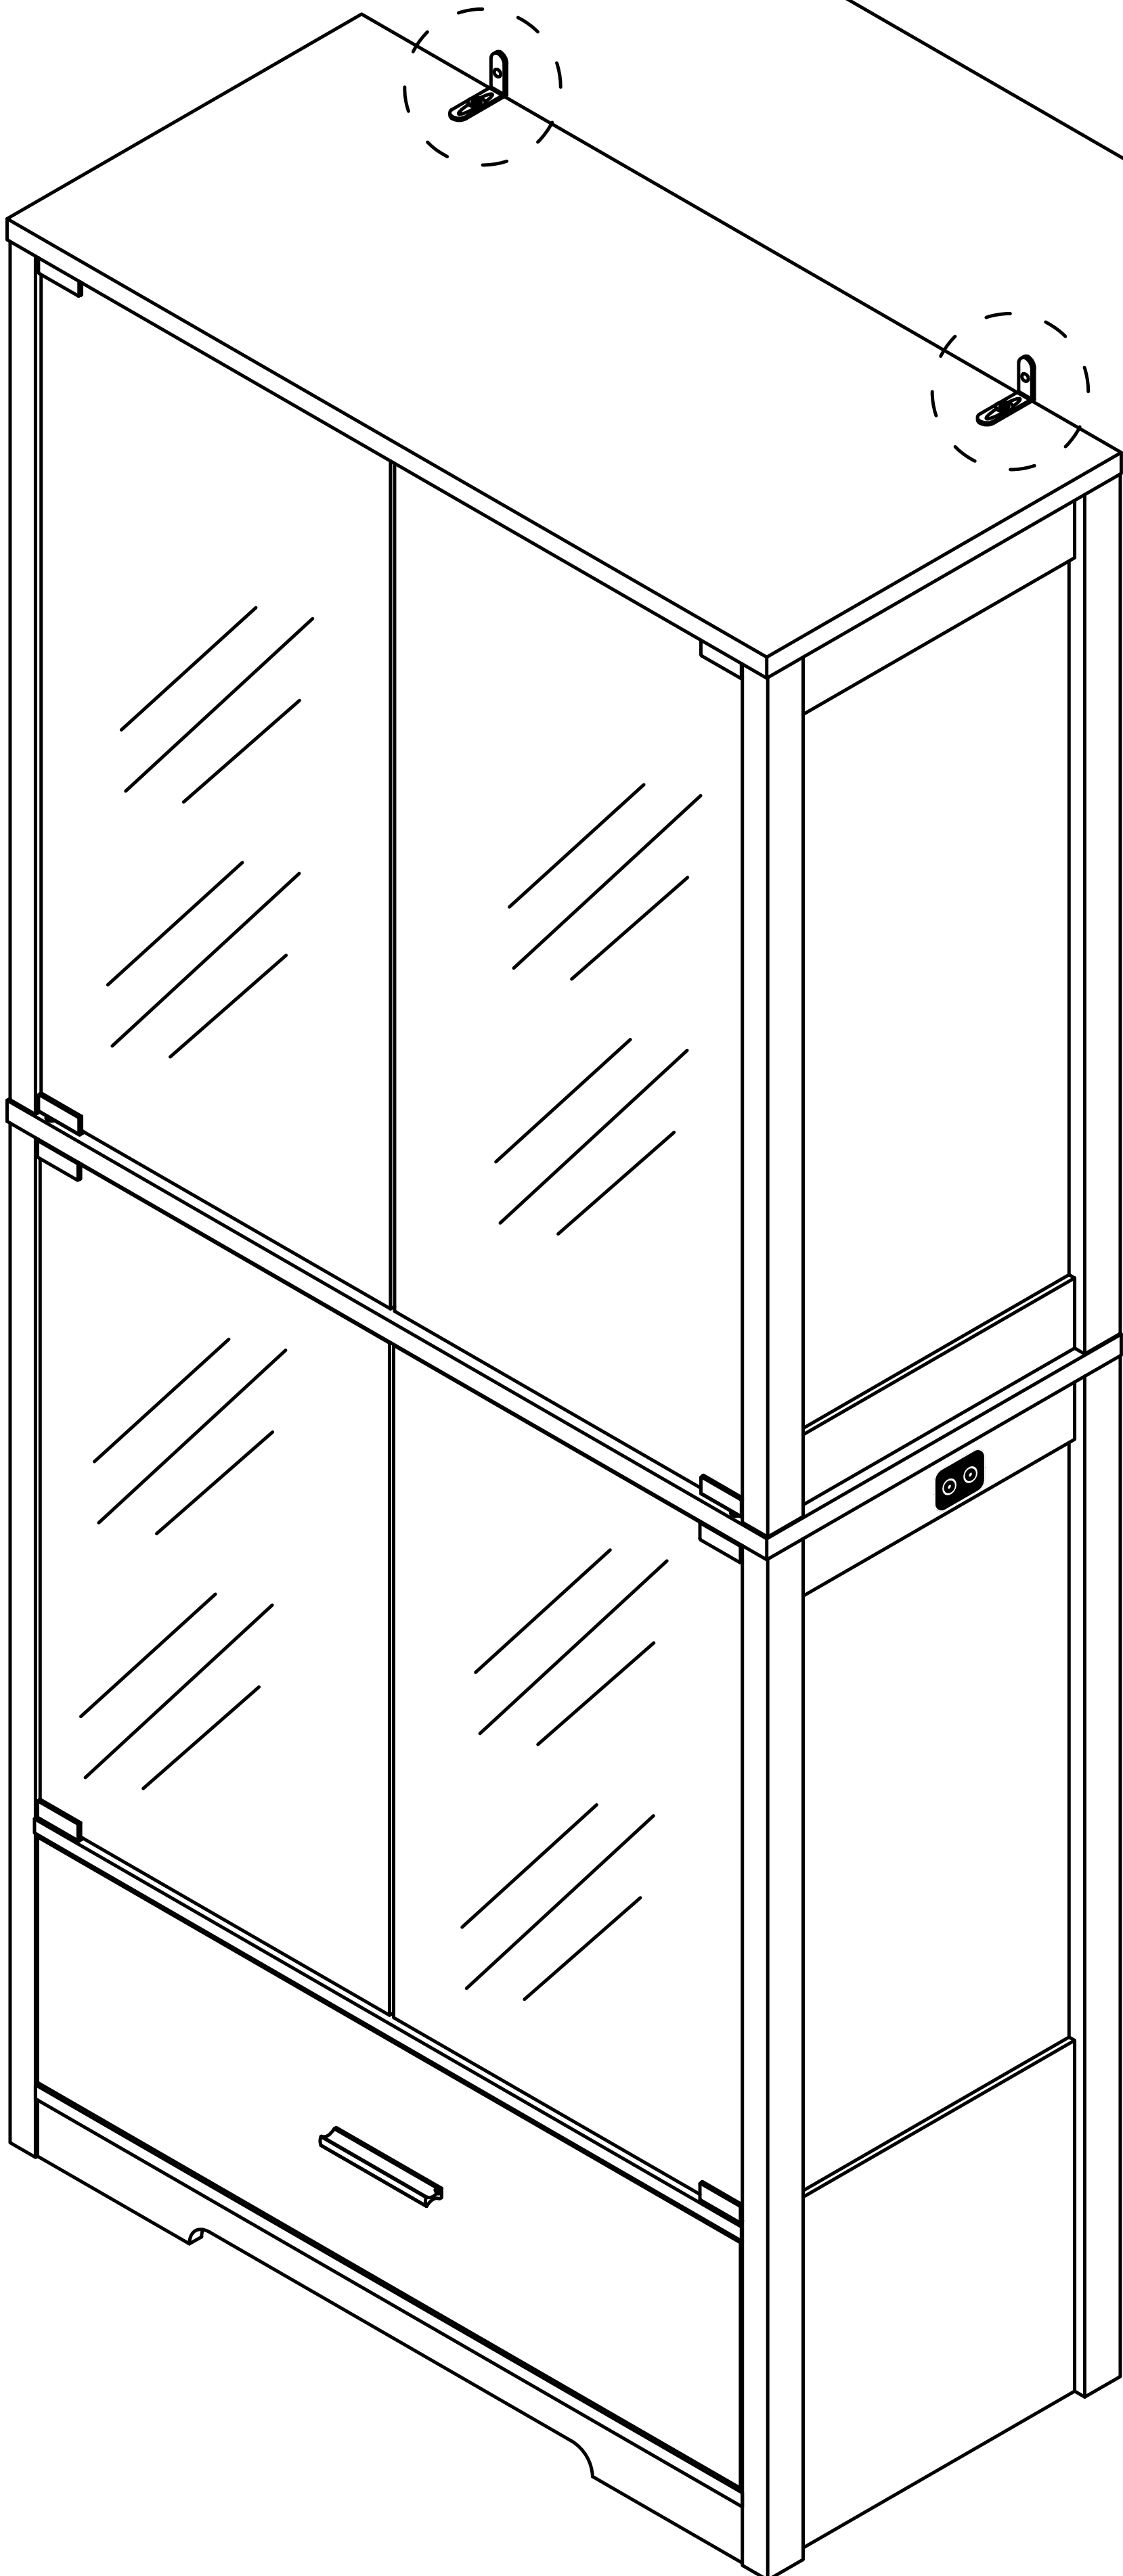

4x45mm

Fix the dressing
table to the wall


User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

Product Show

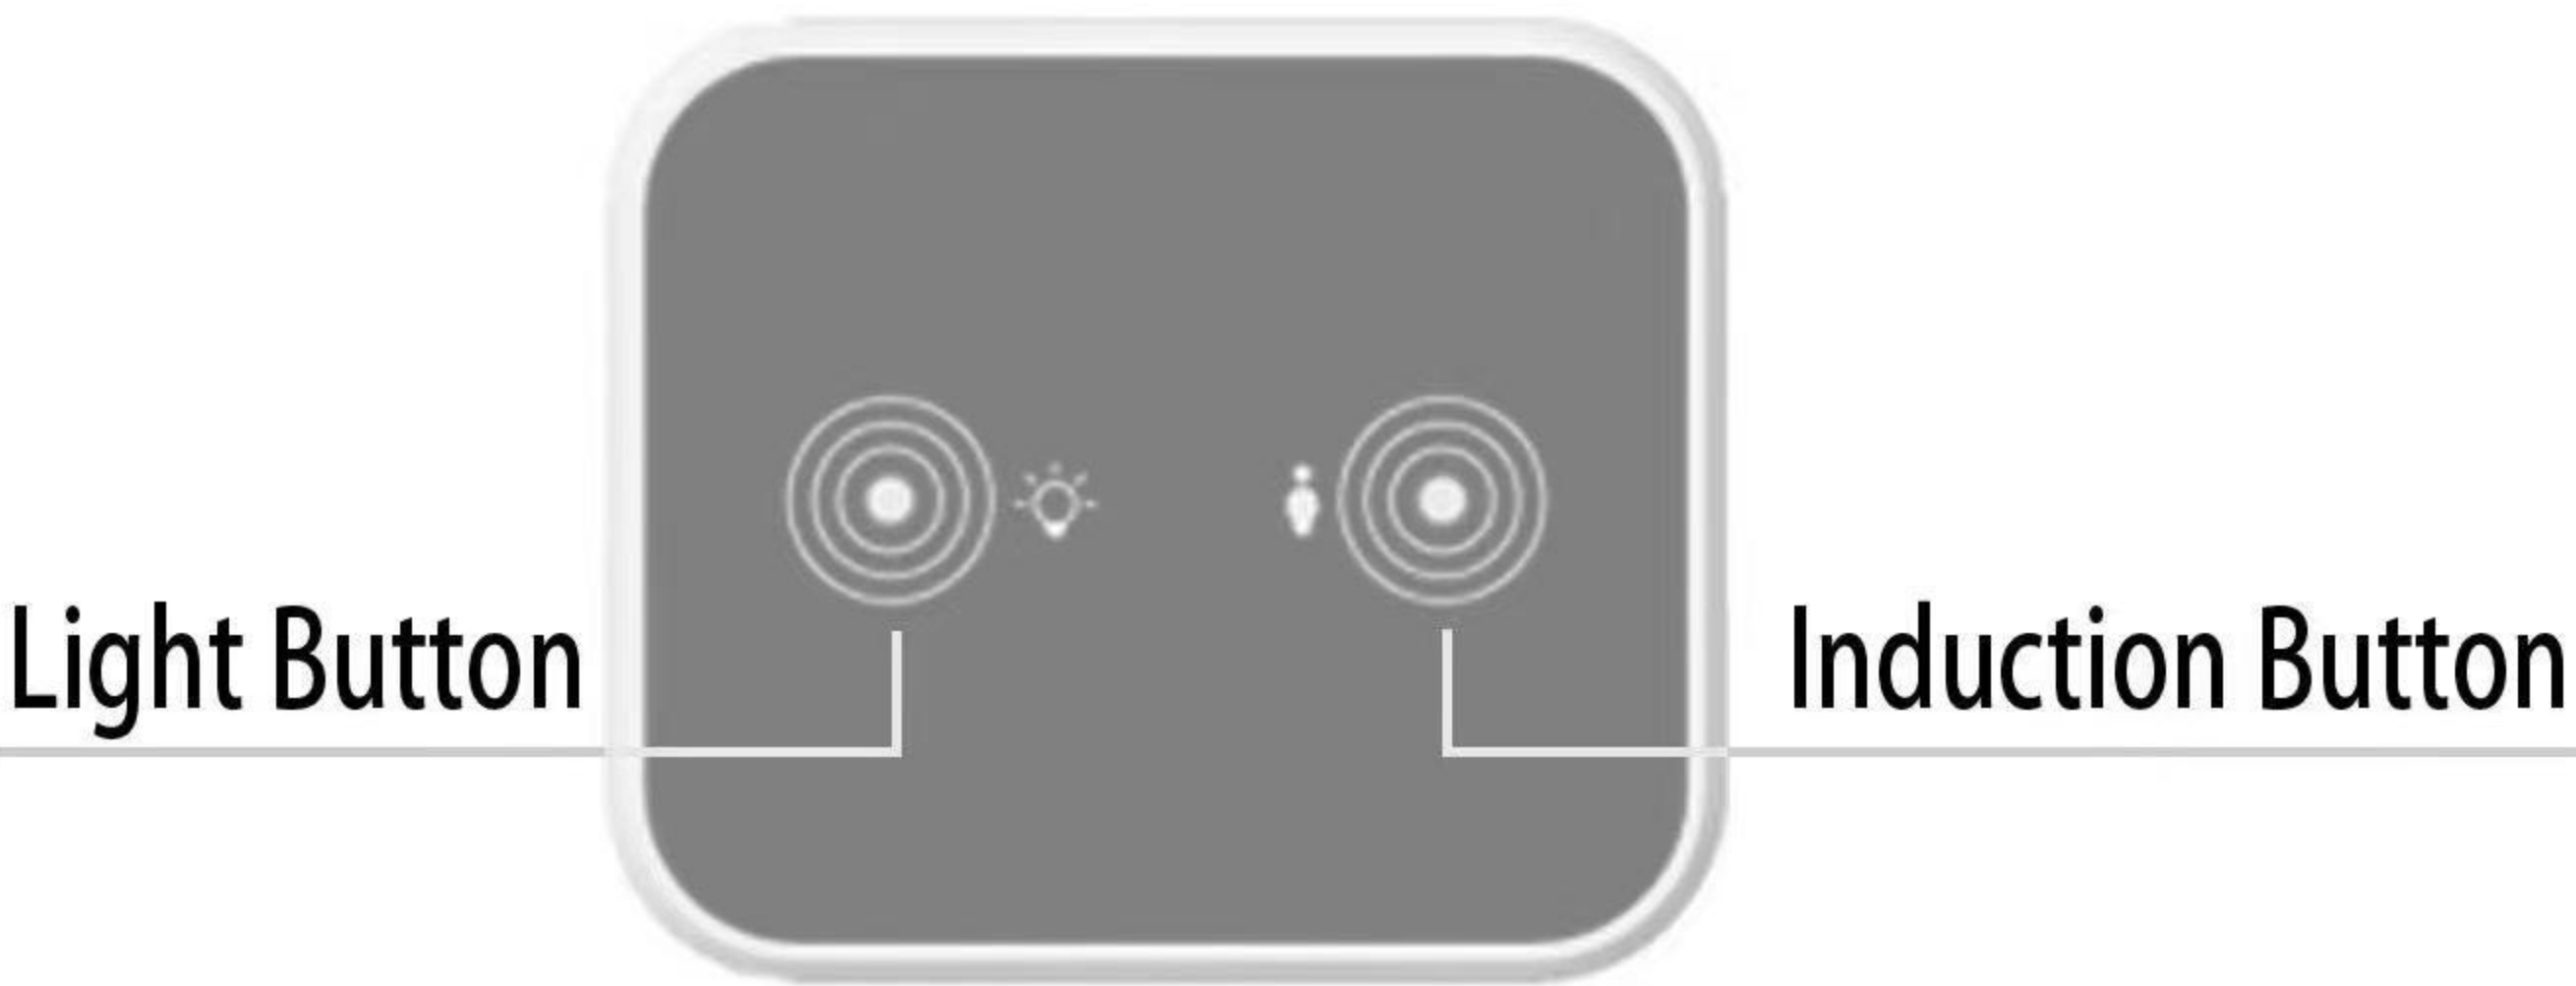

ATTENTION PLEASE

- 1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
- 2. If bubbles appear on the panel, remove the protective film.

Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

- A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.
- B. Long touch to turn off the induction function.
- C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.