

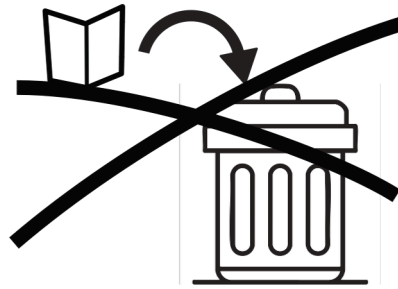
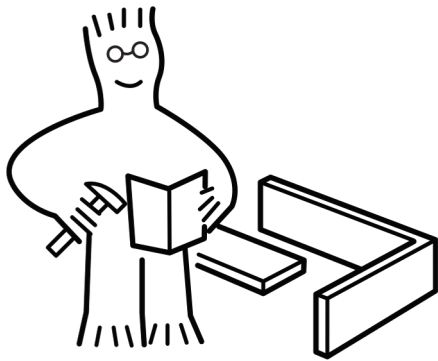


Assembly Instruction

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

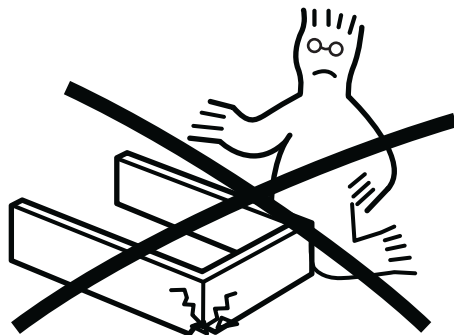

Assemble on a flat, clean and soft surface.

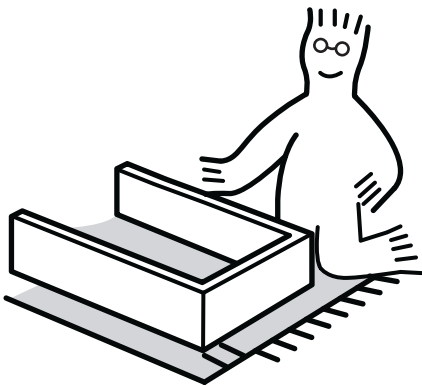


Professional installation is highly recommended.



Periodically Check That All Components Are Tightly Secured.




It is recommended that multiple people assemble this product.

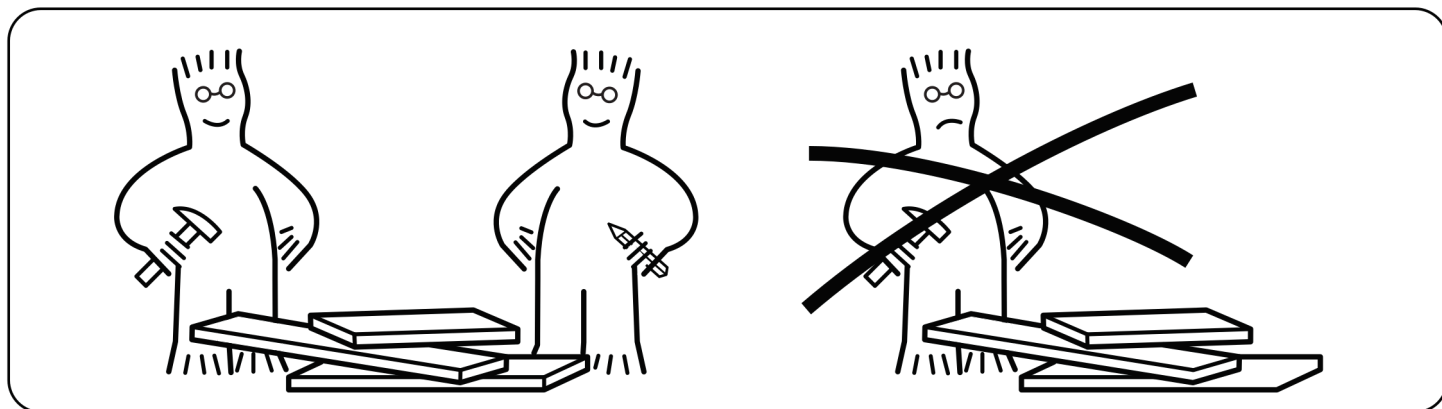
















Please have the following auxiliary tools ready:

















Plate number

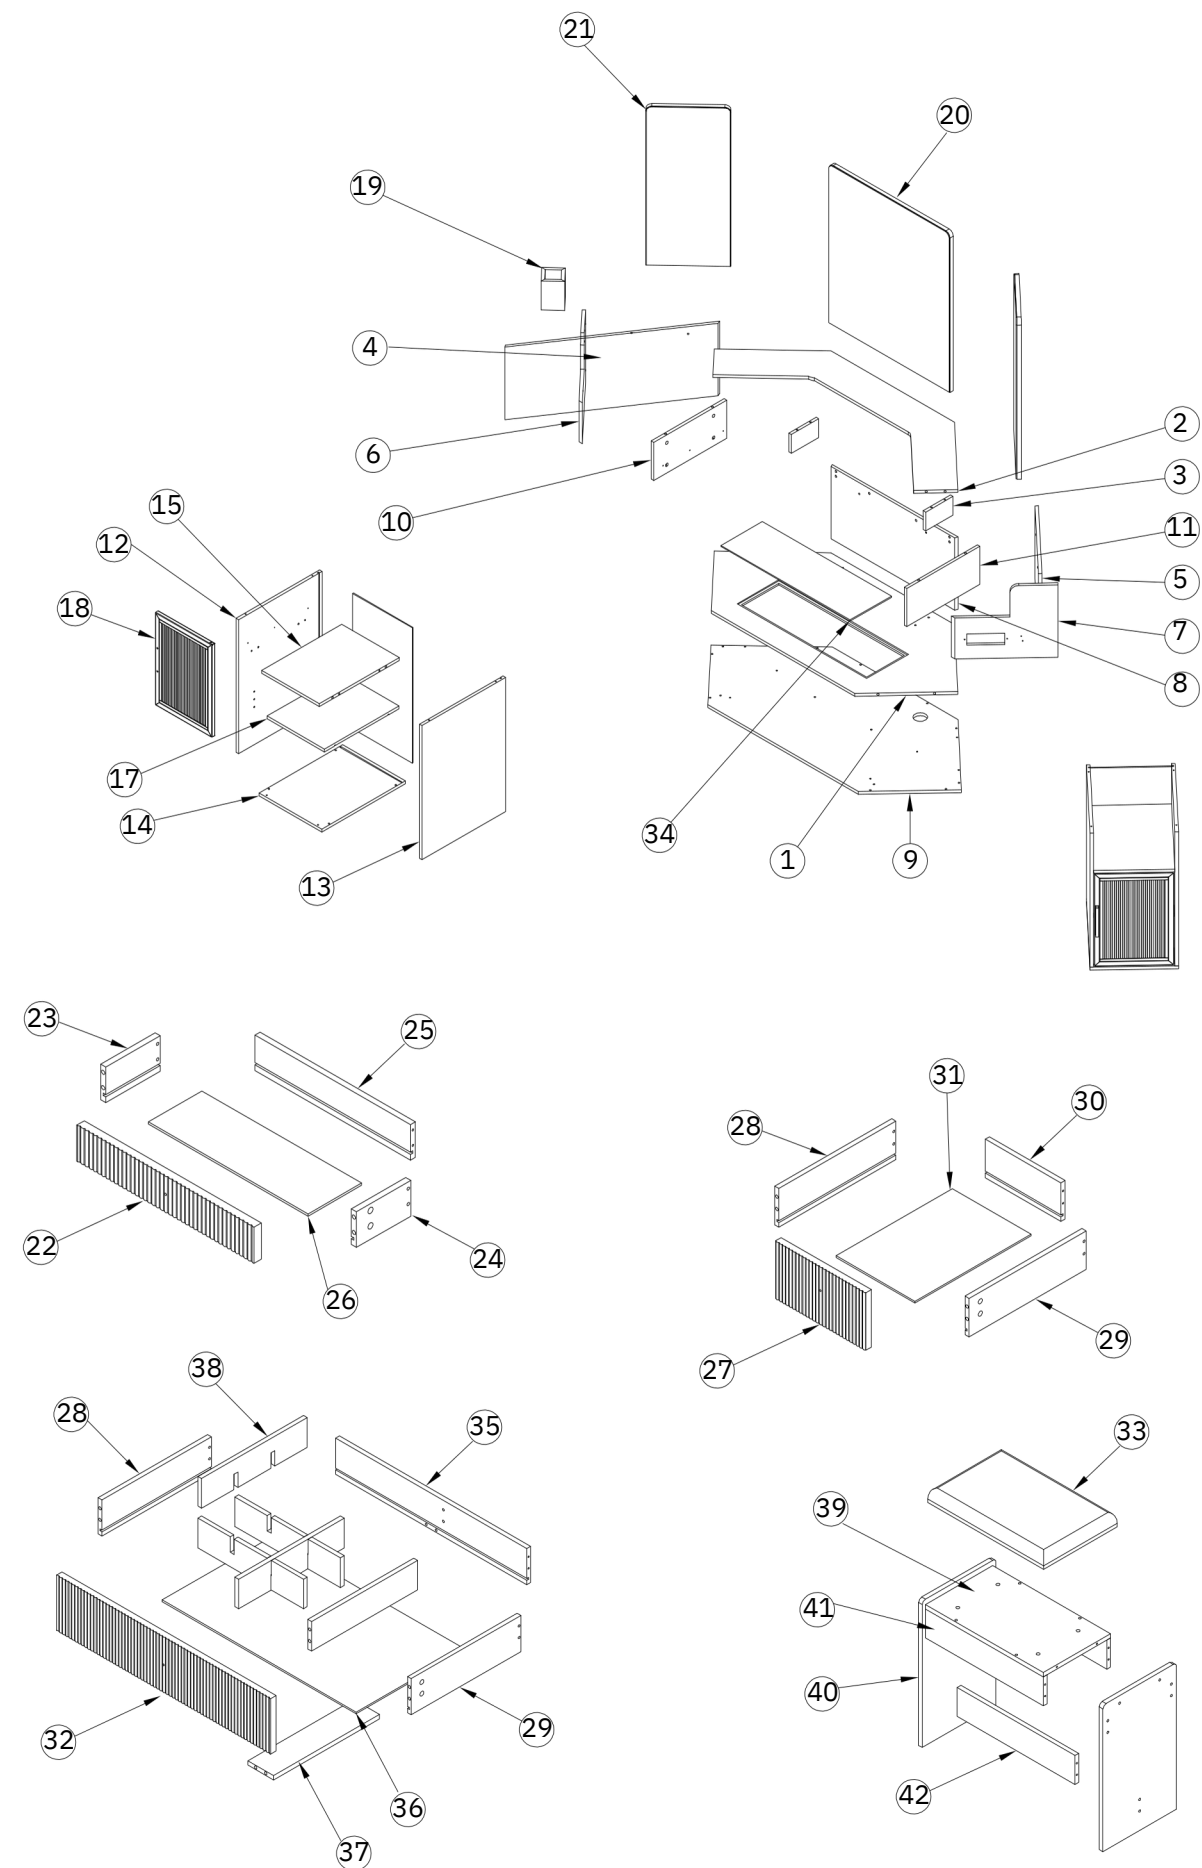










A BOX

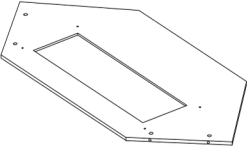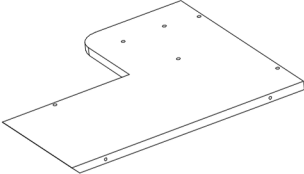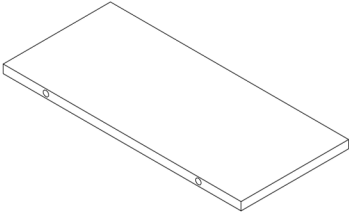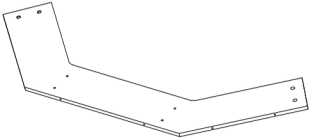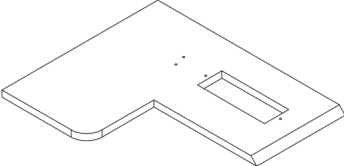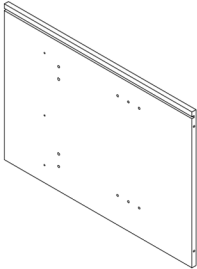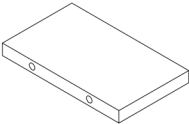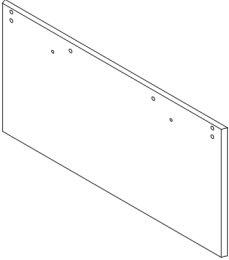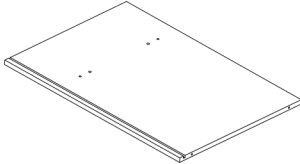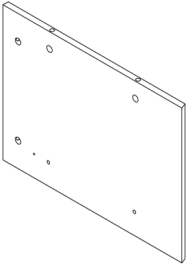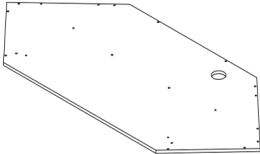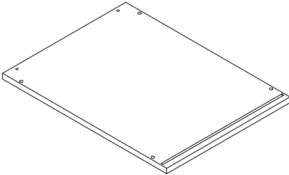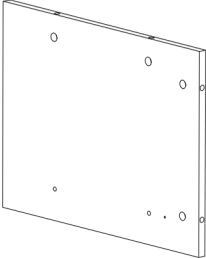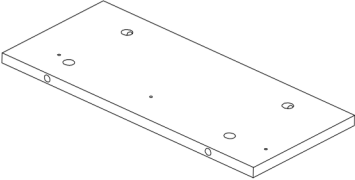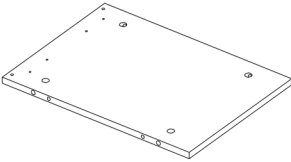PARTS LIST					
1	x1 PC	6	x1 PC	11	x1 PC
					
2	x1 PC	7	x1 PC	12	x2 PCS
					
3	x2 PCS	8	x1 PC	13	x2 PCS
					
4	x1 PC	9	x1 PC	14	x2 PCS
					
5	x1 PC	10	x1 PC	15	x2 PCS
					


A BOX

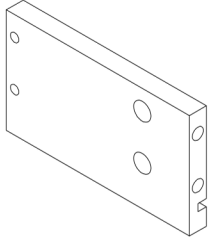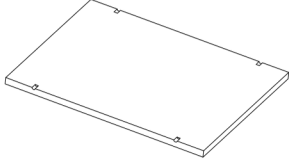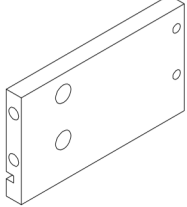
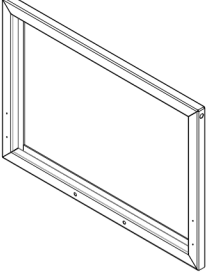
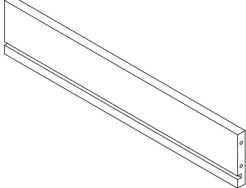
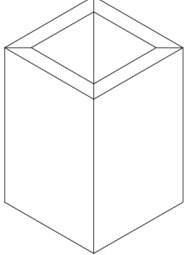
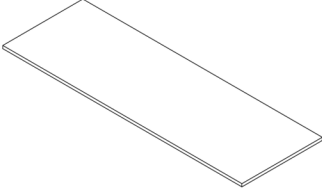
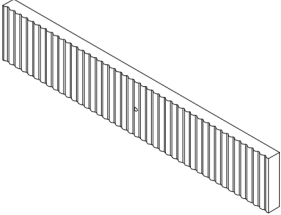
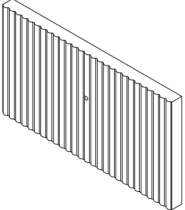
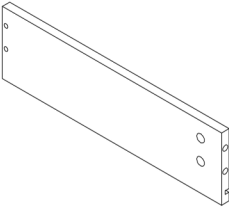
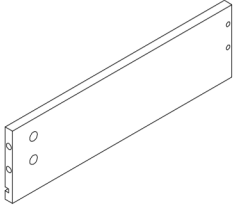
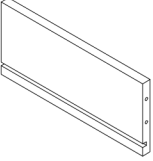
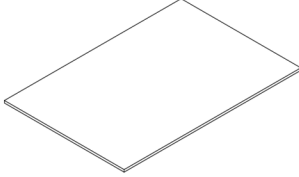
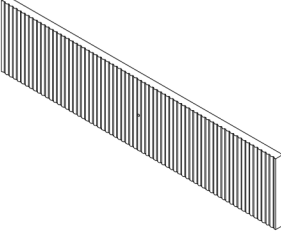
PARTS LIST					
16		x2 PCS	23		x1 PC
17		x2 PCS	24		x1 PC
18		x2 PCS	25		x1 PC
19		x1 PC	26		x1 PC
22		x1 PC	27		x2 PCS
			28		x3 PCS
			29		x3 PCS
			30		x2 PCS
			31		x2 PCS
			32		x1 PC











A BOX

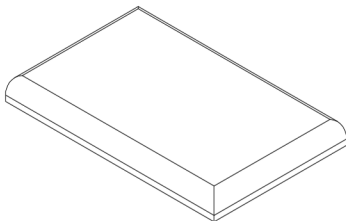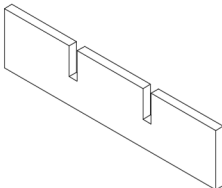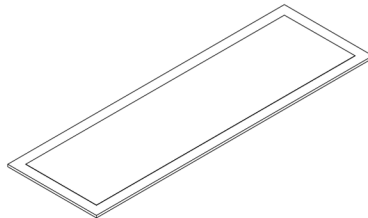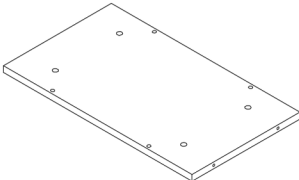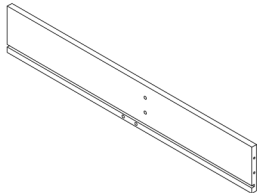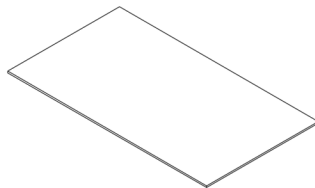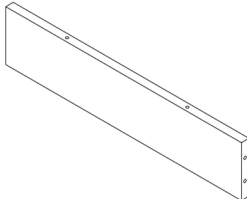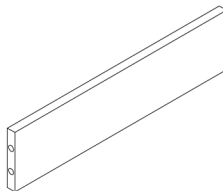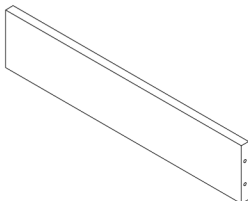PARTS LIST				
33	x1 PC	38	x4 PCS	
				
34	x1 PC	39	x1 PC	
				
35	x1 PC	40	x2 PCS	
				
36	x1 PC	41	x2 PCS	
				
37	x2 PCS	42	x1 PC	
				

B BOX

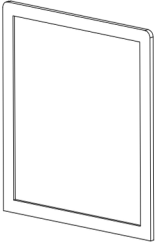PARTS LIST		
20	 x1 PC	
21	 x2 PCS	

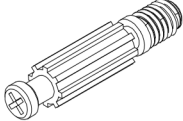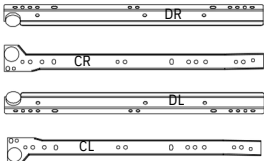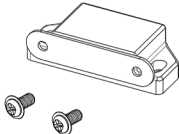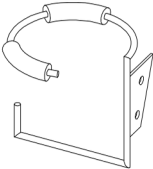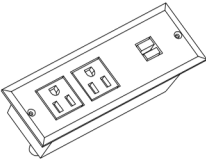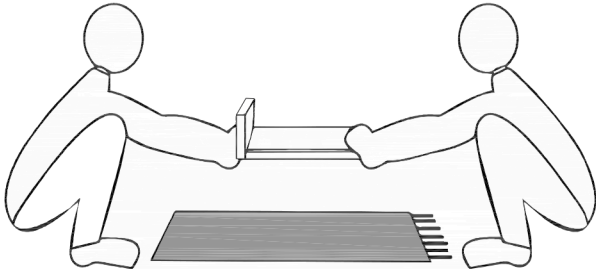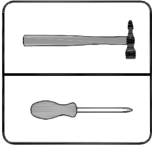Unit:(mm)		ACCESSORIES LIST			
A	x52 PCS	B	x52 PCS	C	x16 PCS
					
M 5x 42		φ12x10		M 6x 30	
E	x60PCS	F	x4PCS	G	x4 PCS
					
ST3.5x12		M 4x 22		M 4x 18	
J	x8 PCS	K	x4 PCS	L	x2 PCS
					
N	x3 PCS	P	x2 PCS	Q	x1 PC
					
				R	x1 PC
					
    					

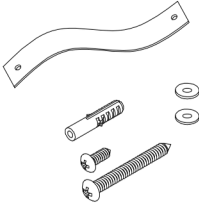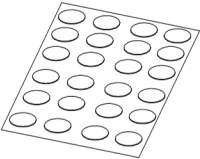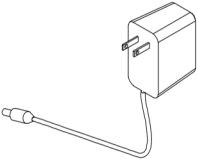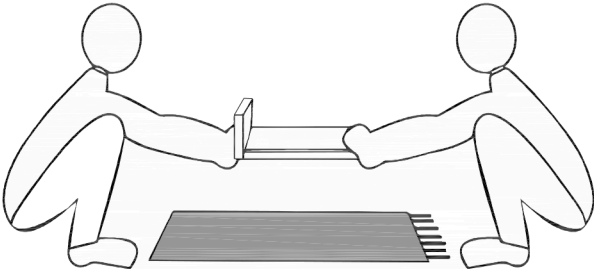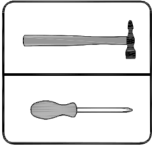Unit:(mm)		ACCESSORIES LIST			
S	x4 PCS	T	x2 PCS	U	x8 PCS
			φ12x10		M3
V	x4 PCS	W	x10 PCS	X	x1 PCS
					M3
		Y	x55 PCS	Z	x1 PCS
					M4
	x1 PCS		x1 PCS		
					
    					


INSTALLATION INSTRUCTION

STEP1


YOU WILL NEED

Ax4	B x4	C x4
-----	------	------

Install the accessory A on the NO.12 plate, 2 pieces in total.

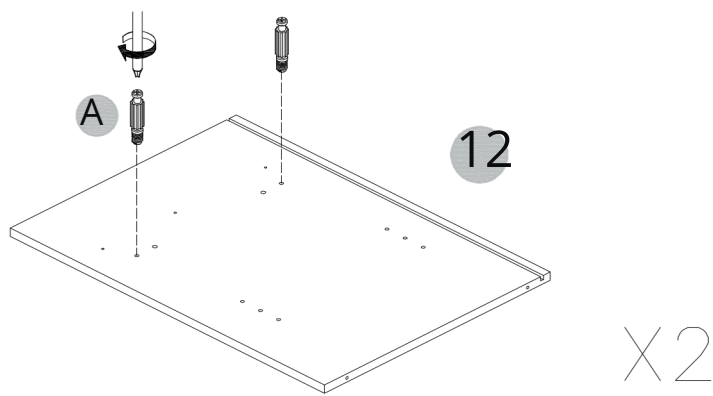


Connect the NO.15 plate and NO.12 plate, and lock them with fittings B and C, 2 pieces in total.

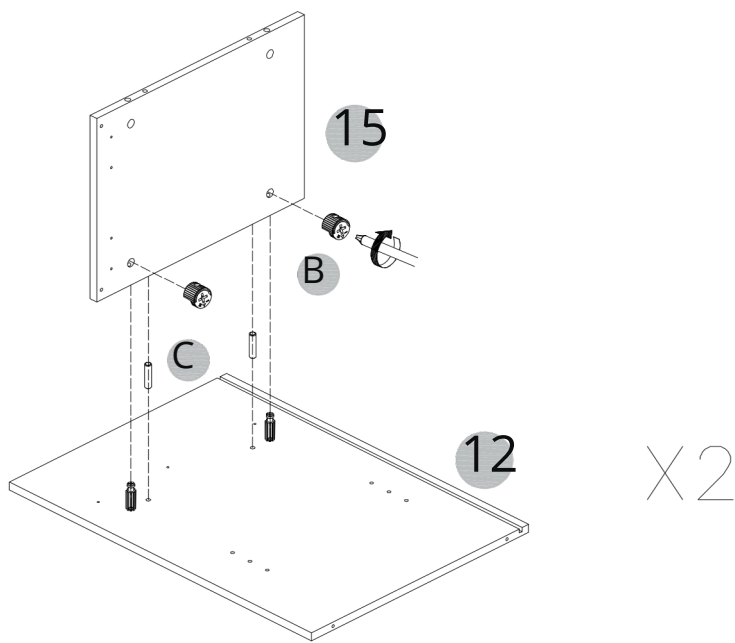


STEP2

YOU WILL NEED			
A x4	B x4	C x4	

Install the accessory A on the NO.13 plate, 2 pieces in total.

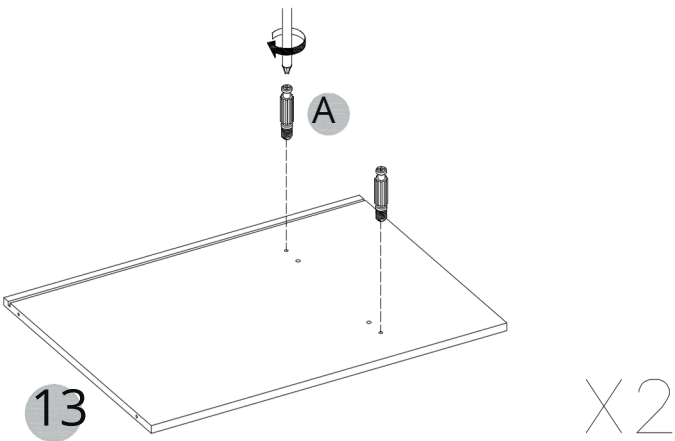

Connect the NO.15 plate and NO.13 plate, and lock them with fittings B and C, 2 pieces in total.

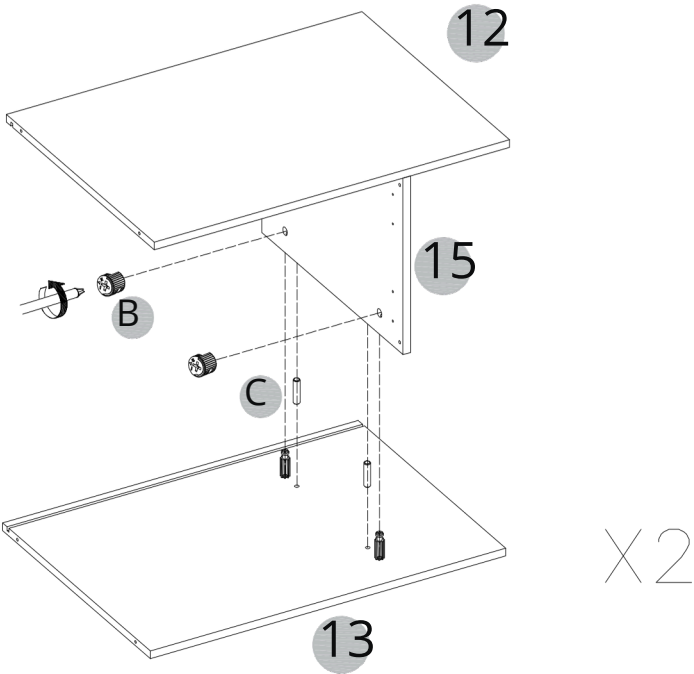


STEP3


YOU WILL NEED

D x8	U x8	E x4	P x2
------	------	------	------

Connect No.12 and No.13 plates with No.14 plate, lock them with fittings D, then install fittings P (magnetic impact) on the bottom of No.15 plate, and finally stick fittings U on the bottom of No.14 plate, totaling 2 pieces.
As shown in the figure.

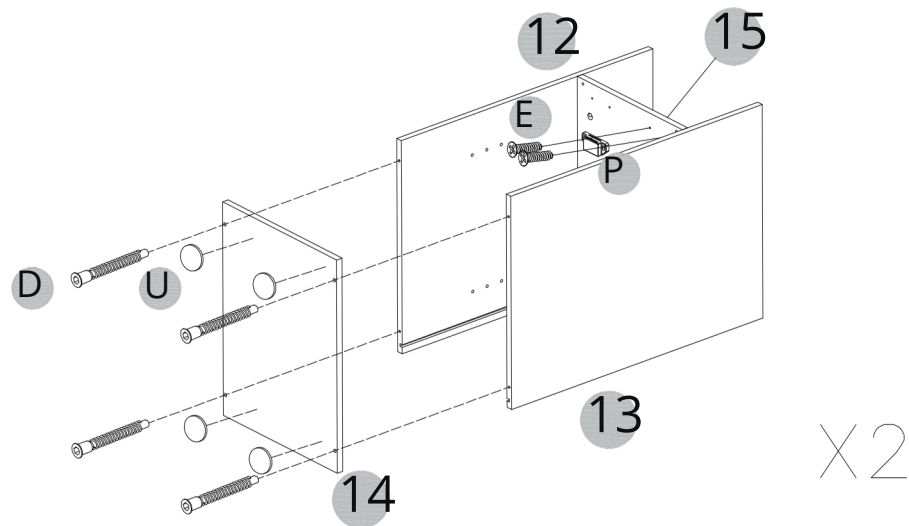

Insert No.16 plate into the slots of No.12 plate and No.13 plate, 2 pieces in total.

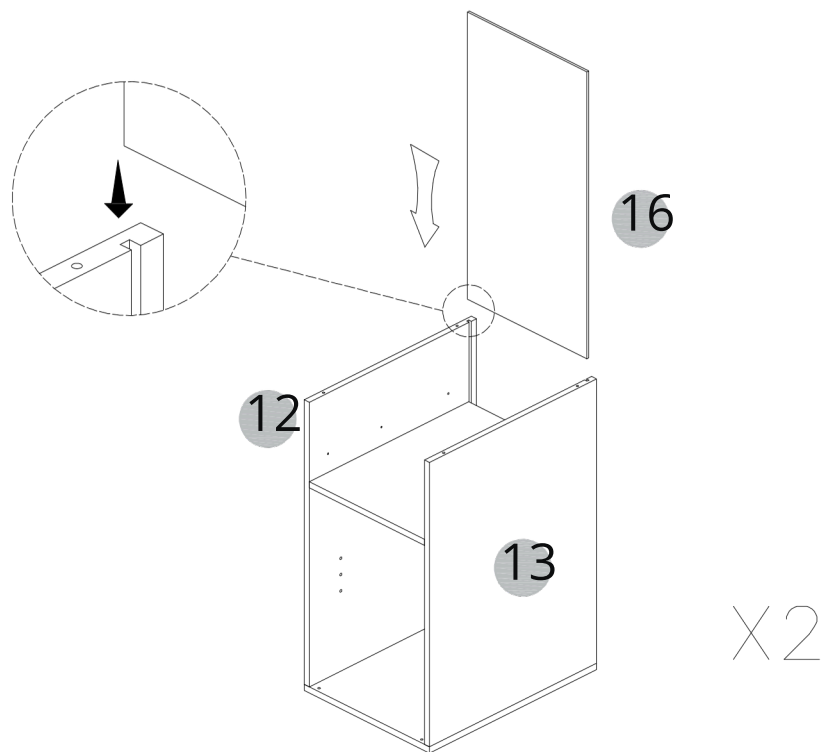



STEP4

YOU WILL NEED

E x12	N x2		
-------	------	--	--

N






N

Install the fitting N(CL) on the NO.12 plate and lock it with the fitting E. 2 pieces in total.

12

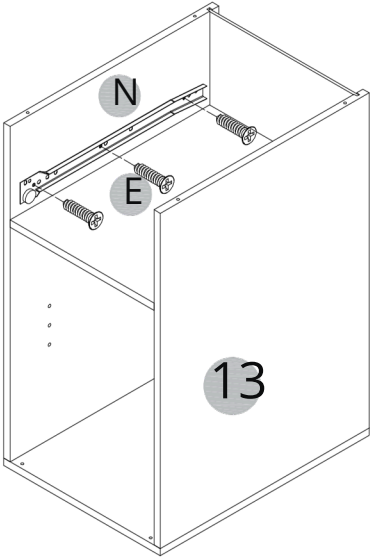


13

X2

Install the fitting N(CR) on the NO.13 plate and lock it with the fitting E. 2 pieces in total

12

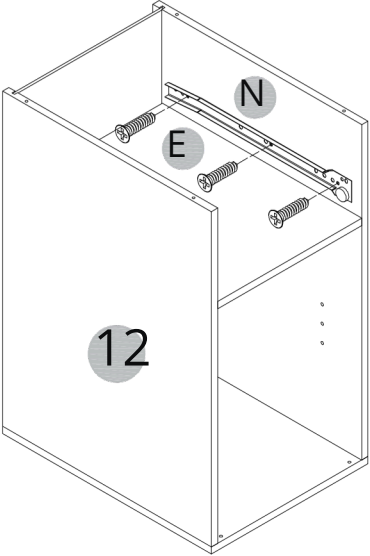

13


X2

12



STEP5

YOU WILL NEED				
A x8	B x8			

Install the accessory A on the NO.27 plate, 2 pieces in total.

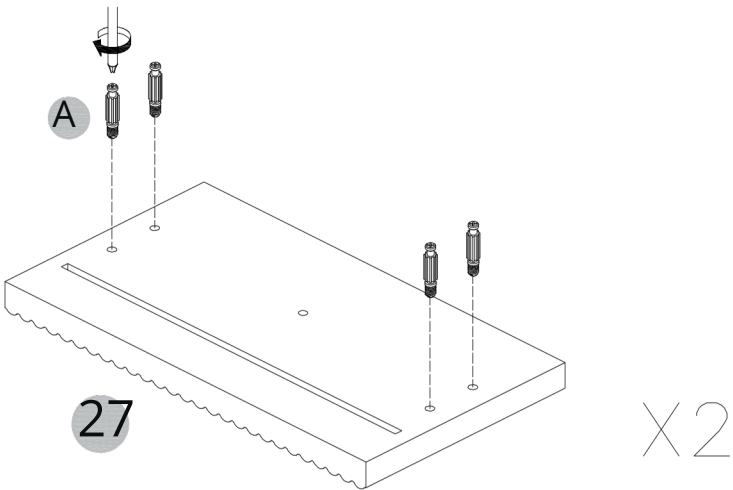

Connect No.28 plate, No.29 plate and No.27 plate, and lock them with fittings B, 2 pieces in total.

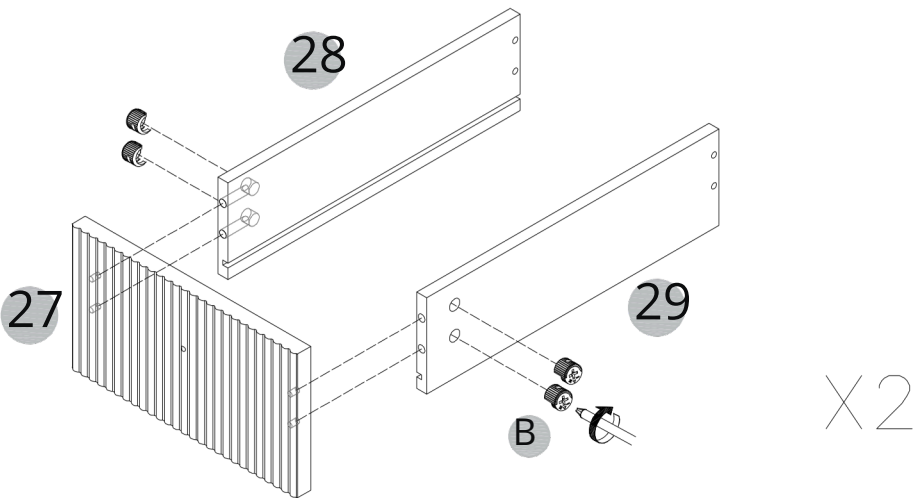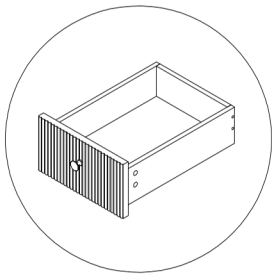


STEP6



YOU WILL NEED

Dx8				
-----	--	--	--	--

Insert the No.31 plate into the slots of No.28 plate and No.29 plate, totaling 2 pieces.

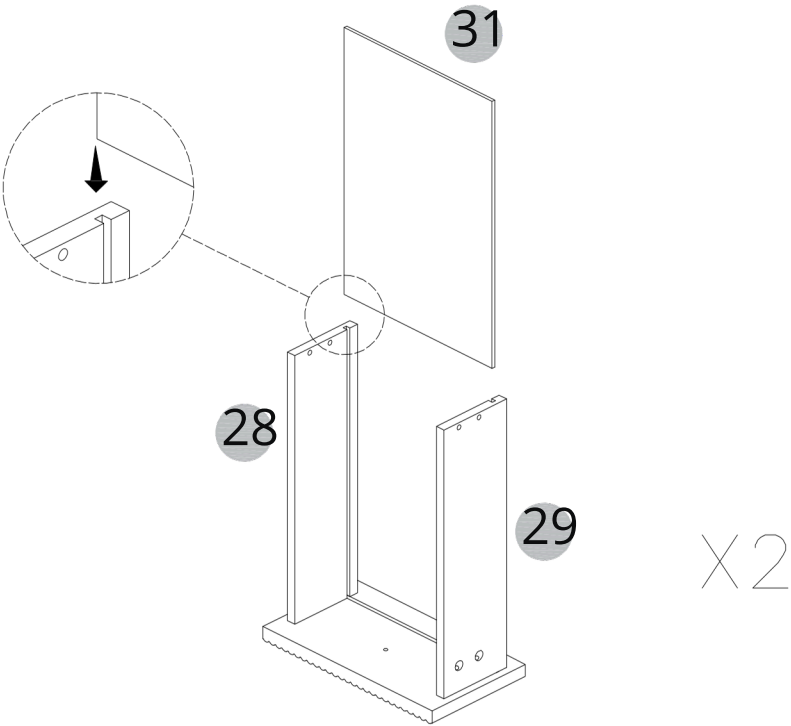

Connect No.28 and No.29 plates with No.30 plates, and lock them with fittings D.

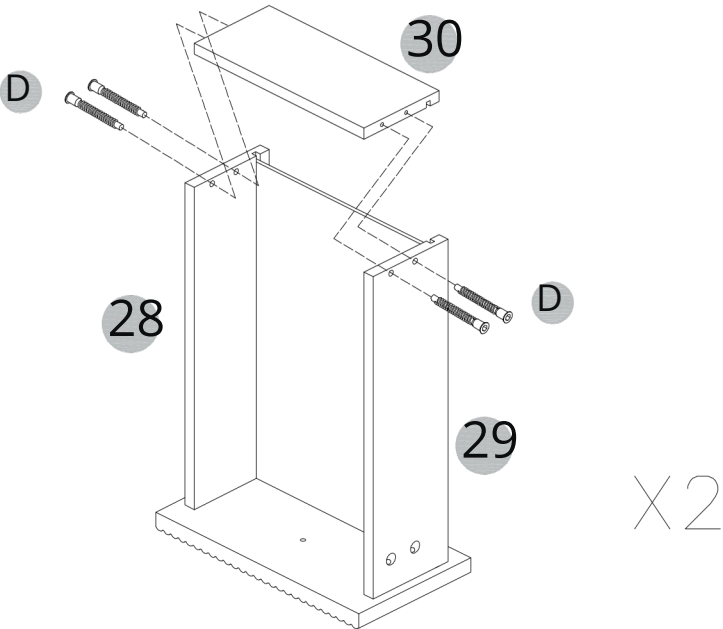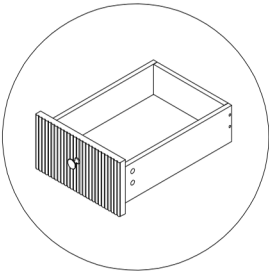


STEP7


YOU WILL NEED

E x12	F x2	M x2	N x2	
-------	------	------	------	--


Install the fitting M on the NO.27 plate and fix it with the fitting F lock, 2 pieces in total.

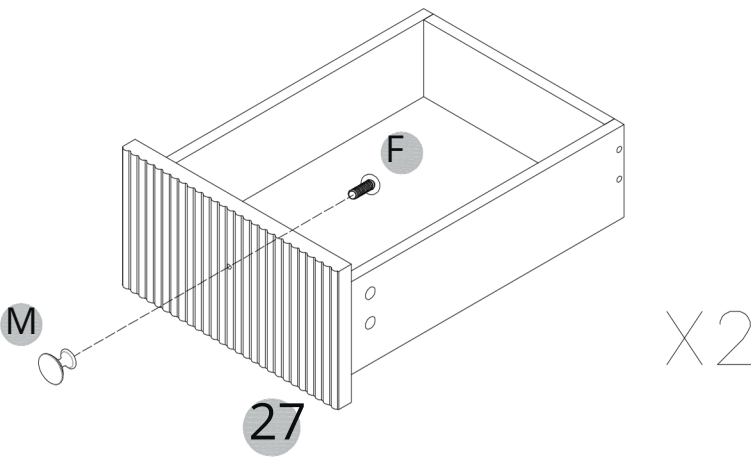


Install the fitting N(DR) on the NO.29 plate and lock it with the fitting E. Similarly, the accessory N(DL) is installed on the NO.28 plate and fixed with the accessory E lock, totaling 2 pieces.

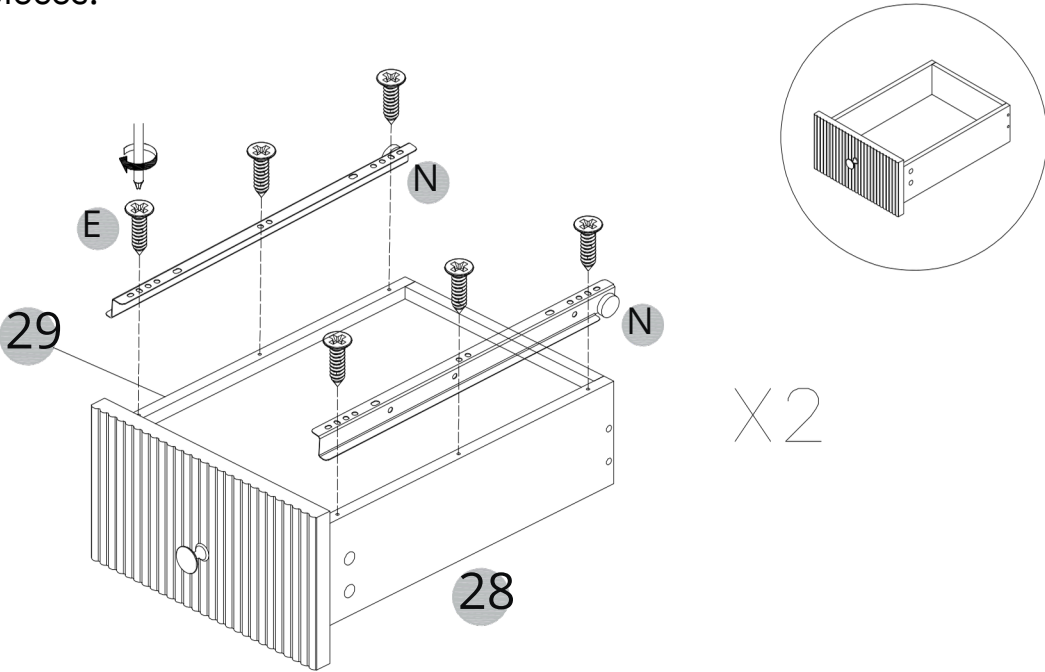

N



DR




DL

N


15

STEP8	YOU WILL NEED			
	Dx10			

Connect No.9 plate with No.12 and No.13 plate, and lock it with fitting D, as shown in the figure.

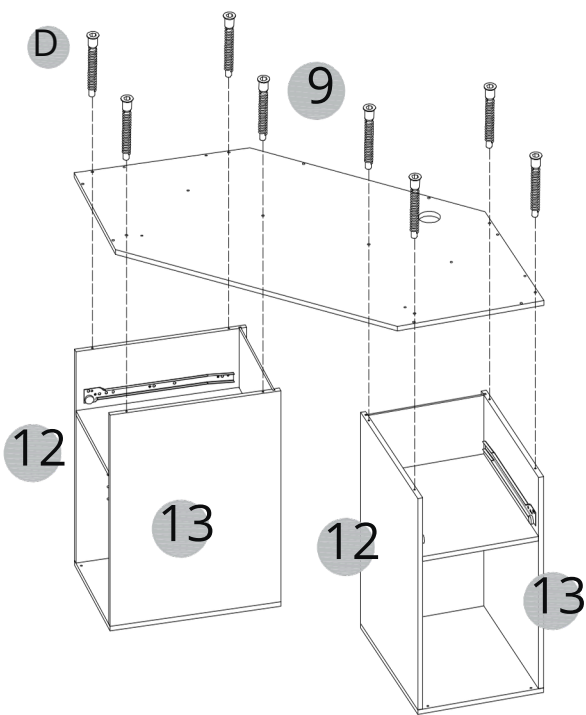


Connect No.2 plate with No.4 plate, and lock it with fitting D.

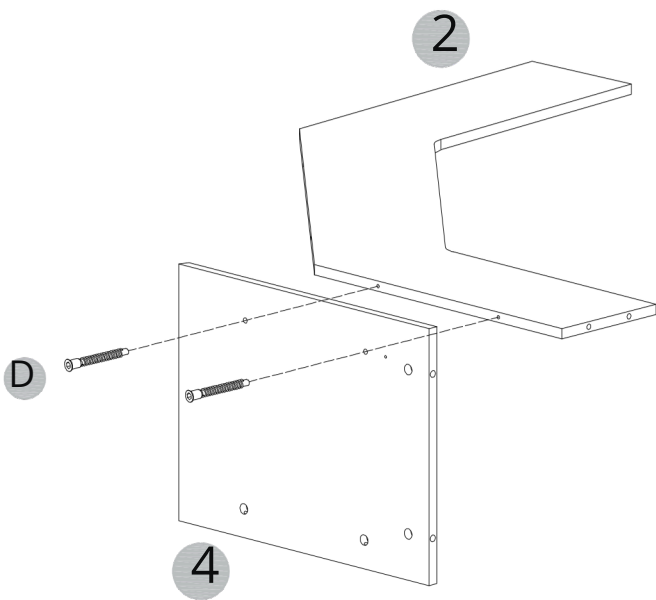


STEP9	YOU WILL NEED			
	Dx4			

Connect No.2 plate with No.4 plate, and lock it with fitting D.

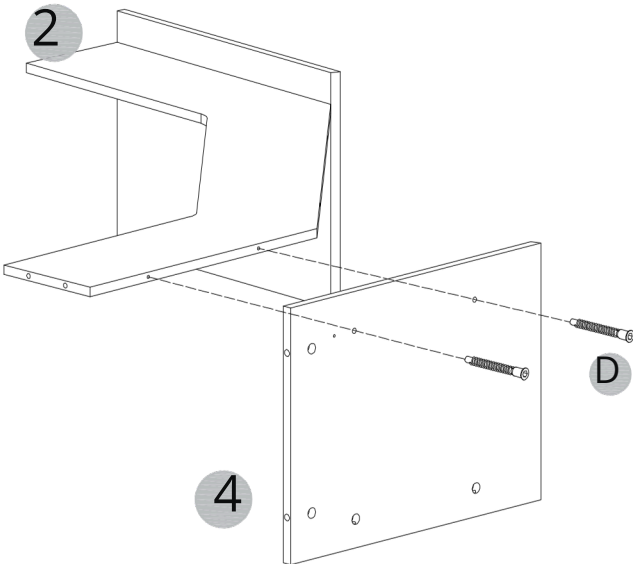


Connect No.2 plate with No.8 plate, and lock it with fitting D.

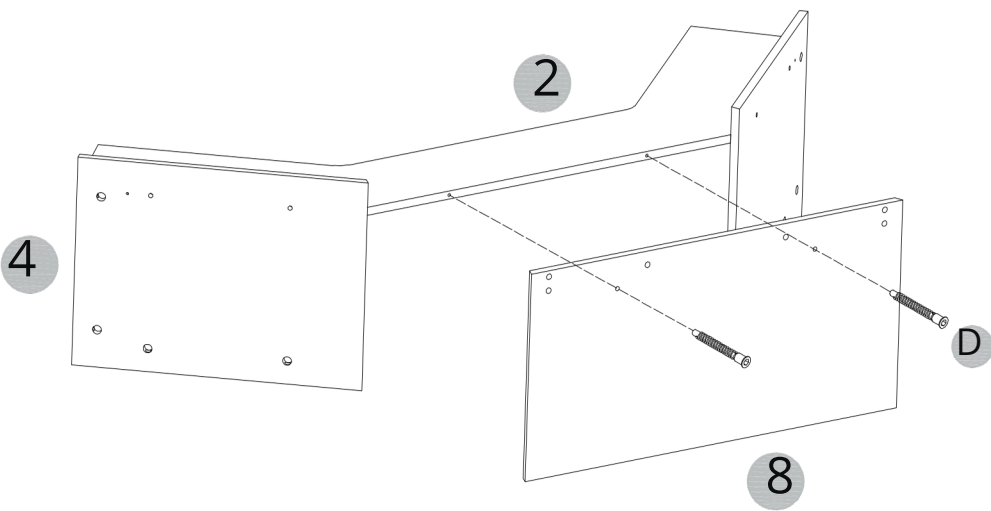


STEP10				YOU WILL NEED			
				Cx4			

Install the accessory C on the No.3 plate, 2 pieces in total.

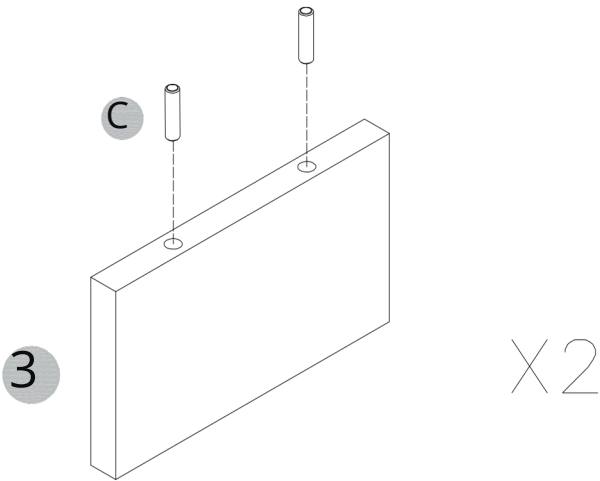

Insert the other end of fitting C into the corresponding hole position of No.2 plate, as shown in the figure.

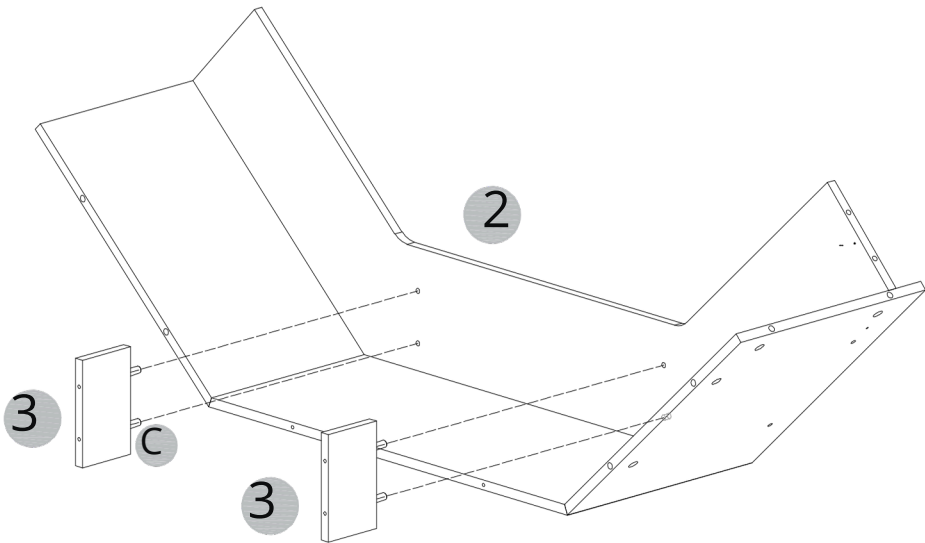


STEP 11


YOU WILL NEED

A x4	C x4		
------	------	--	--

Insert the other end of fitting C into the corresponding hole of No.1 plate, as shown in the figure.

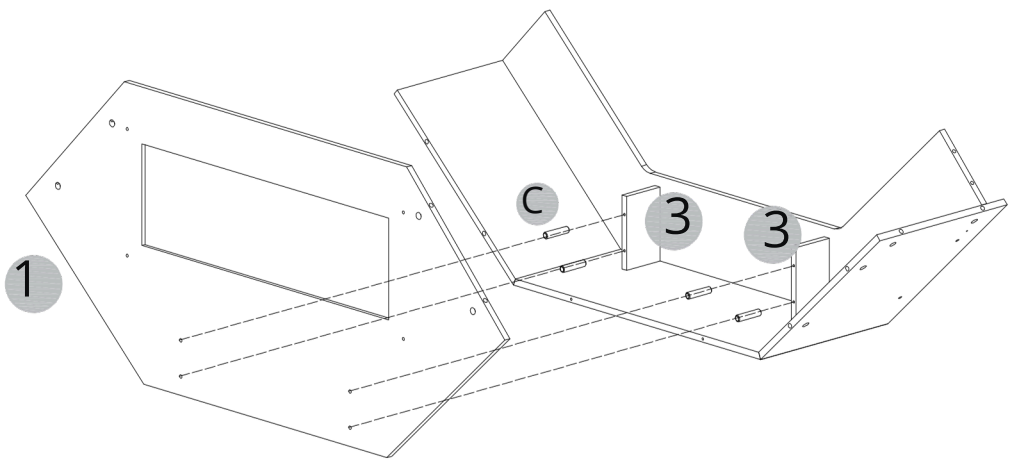

Install fitting A on NO.1 plate .

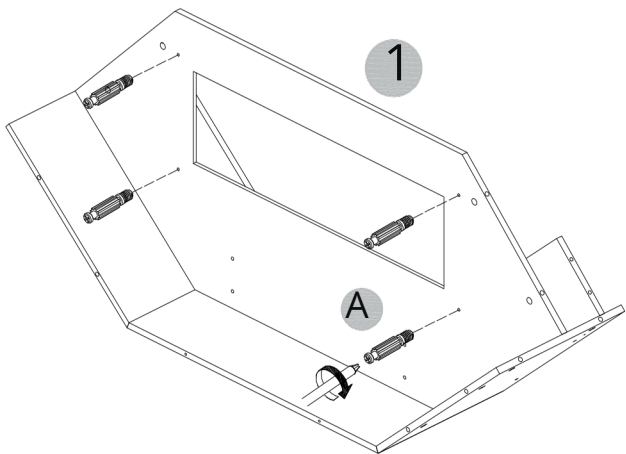


STEP12


YOU WILL NEED

A x12	B x4		
-------	------	--	--

Connect No.10 plate, No.11 plate and No.1 plate, and lock them with fittings B.. As shown in the figure.

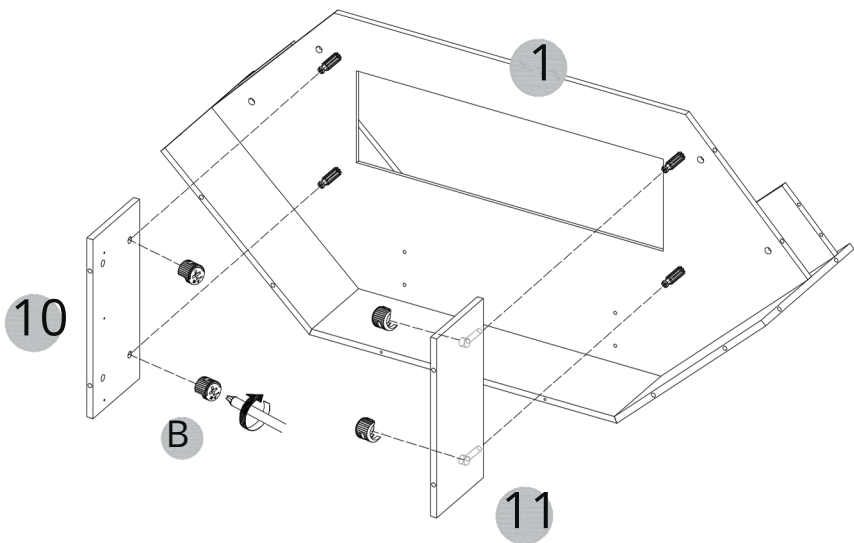

Install fitting A on NO.6 plate and NO.7 plate.

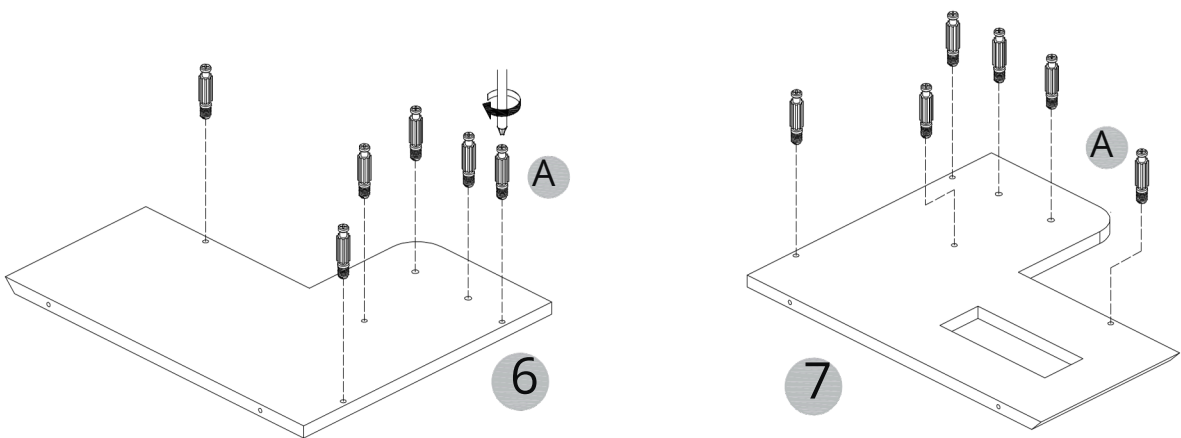


STEP13

YOU WILL NEED


A x8

B x12

Connect the No.6 plate and No.7 plate to the corresponding positions, and lock them with fittings B. As shown in the figure.

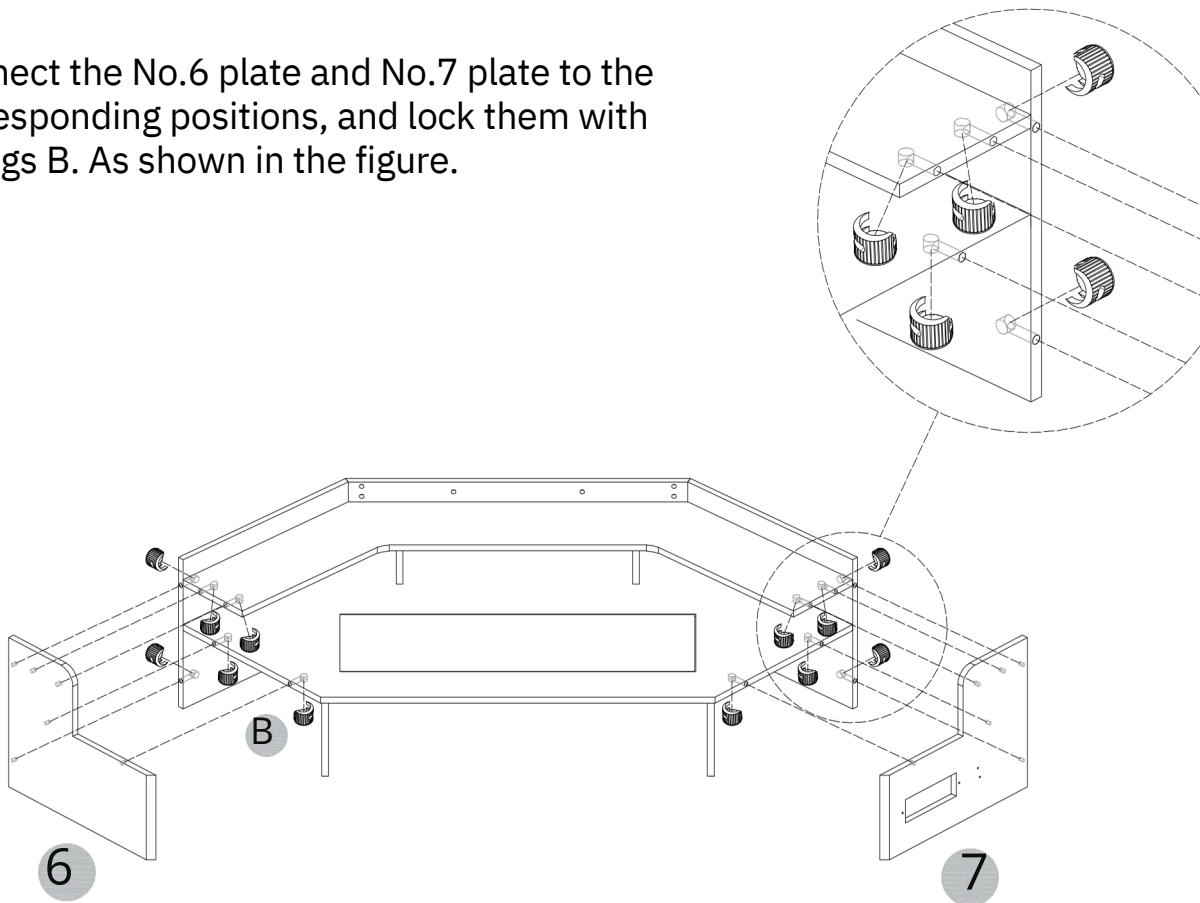

Install fitting A on NO.9 plate.

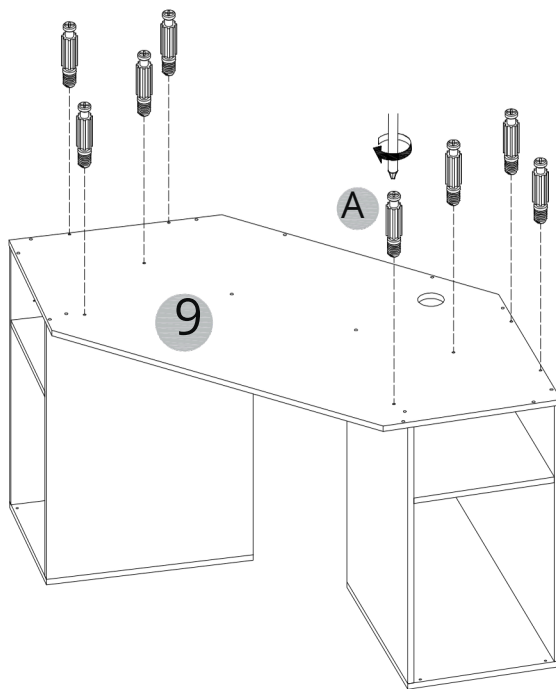


STEP14


YOU WILL NEED

B x8	D x6		
------	------	--	--

Connect the assembled parts of No.6 and No.7 plates with No.9 plate, and lock them with fittings B. As shown in the figure.

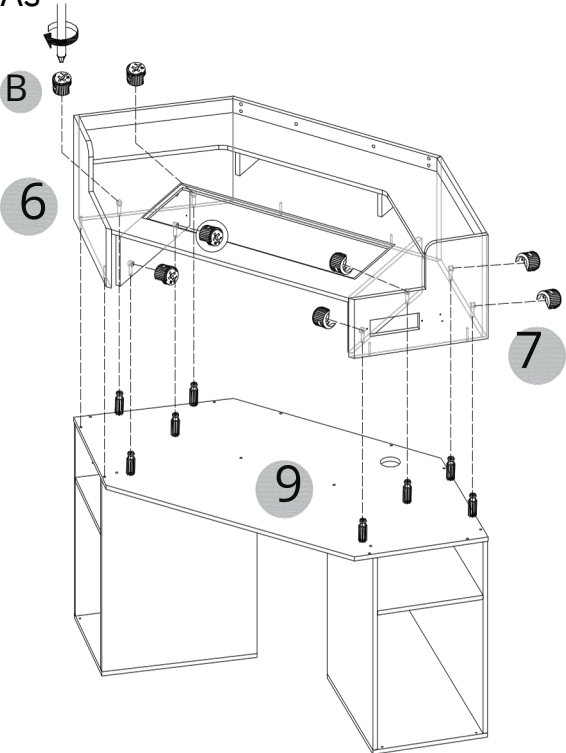

Then use the fitting D to lock it, as shown in the figure.

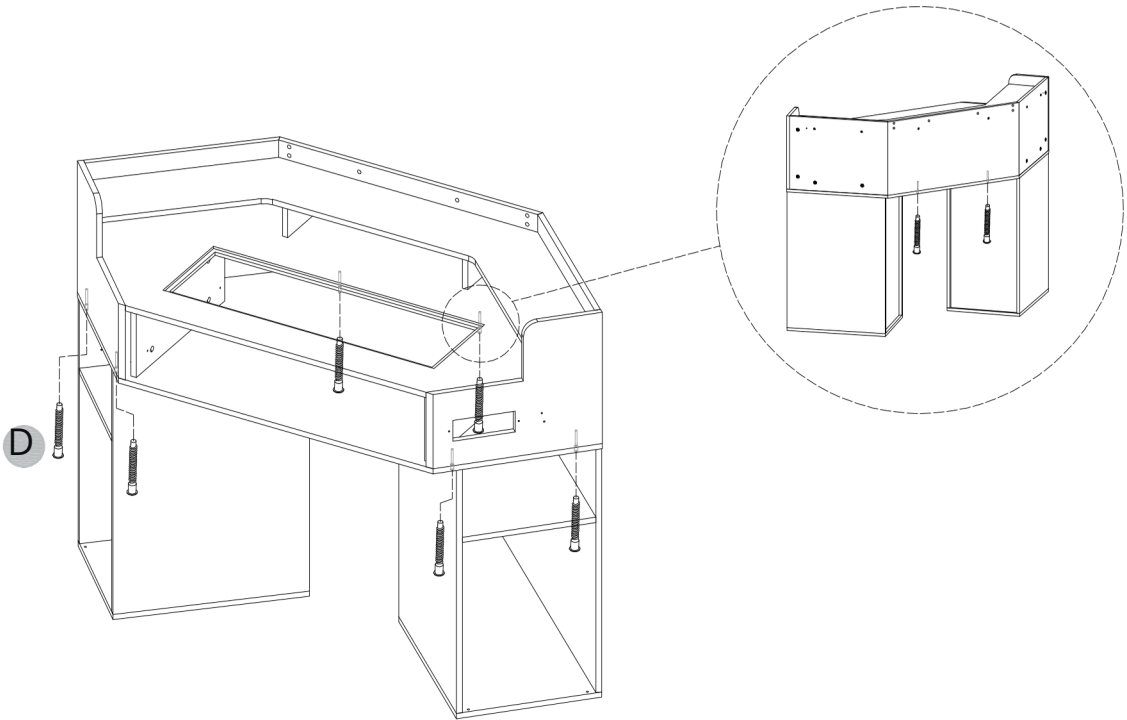

STEP15

YOU WILL NEED

A x8	E x6	N x1	
------	------	------	--

N

CL

10

E

CR

11

Install the fitting N(CL) on the NO.10 plate and lock it with the fitting E. Similarly, the fitting N(CR) is installed on the NO.11 plate and locked with the fitting E. As shown in the figure.

10

9

11

Install fitting a on NO.32 plate.

A


32

STEP16



YOU WILL NEED

B x6

Connect No.28 plate, No.29 plate, No.37 plate and No.32 plate, and lock them with fittings B.

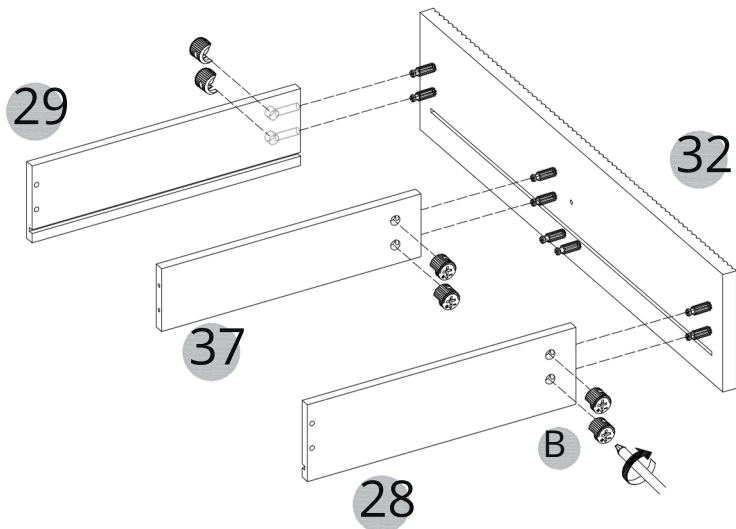


Insert No.36 plate into the slots of No.28 plate and No.29 plate.

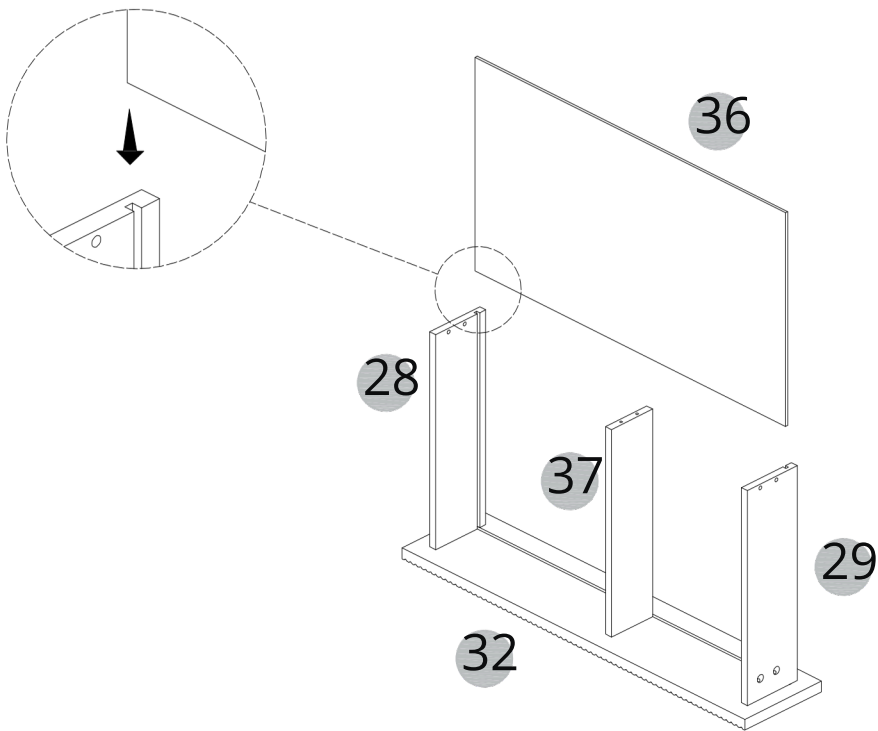
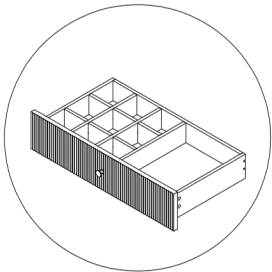


STEP17		YOU WILL NEED			
		B x2	D x4		

Connect No.37 plate with No.32 plate and lock it with fitting B.

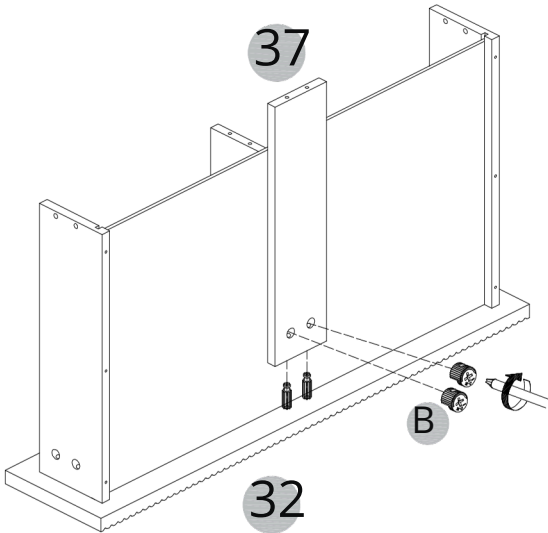



Connect No.35 plate with No.37 plate and lock it with fitting D.

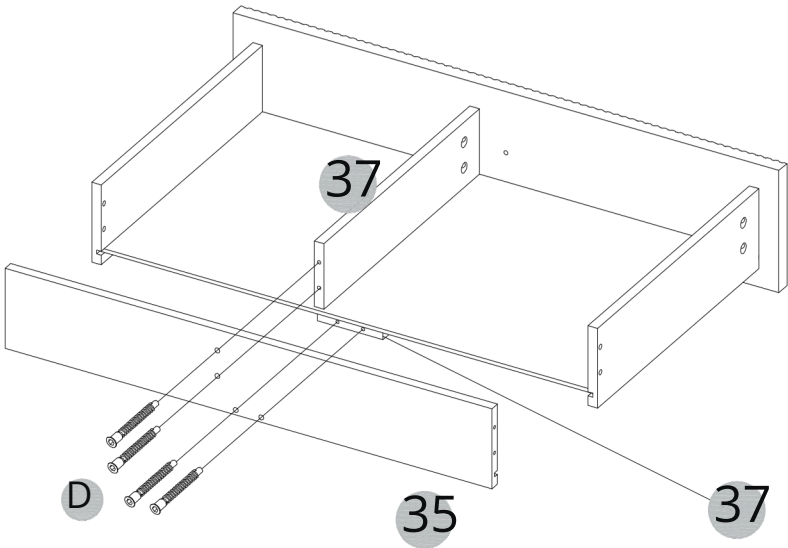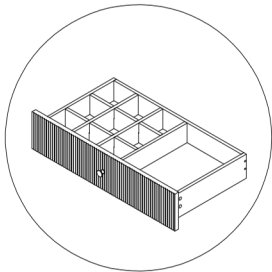


STEP18

YOU WILL NEED			
Dx4	Mx1	F x1	

Connect the No.35 plate with the No.28 plate and No.29 plate, and lock them with the fittings D.

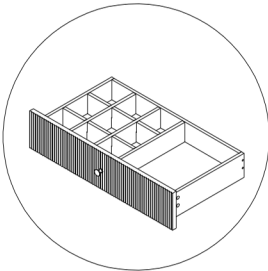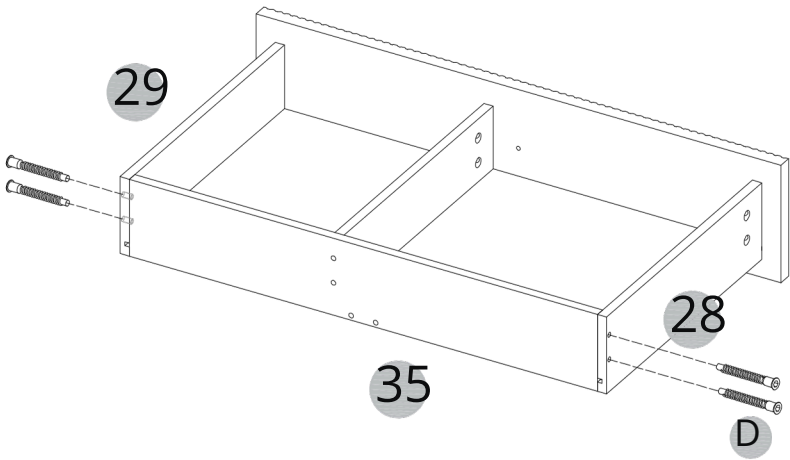


Install the fitting M on the No.32 plate and lock it with the fitting F.

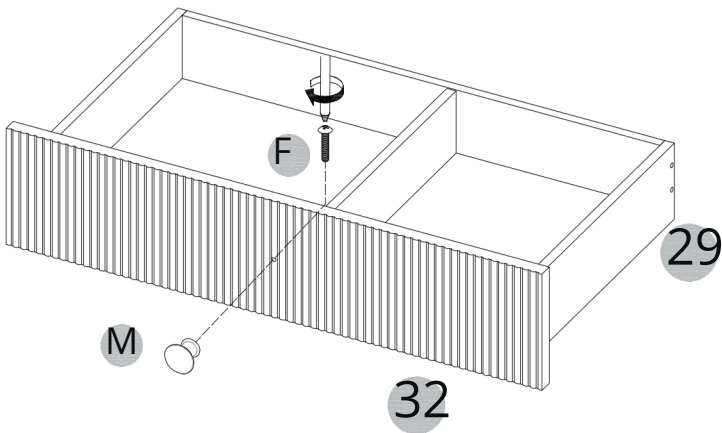



STEP19

YOU WILL NEED			

Assemble four No.38 plates into a lattice frame, as shown in the figure.

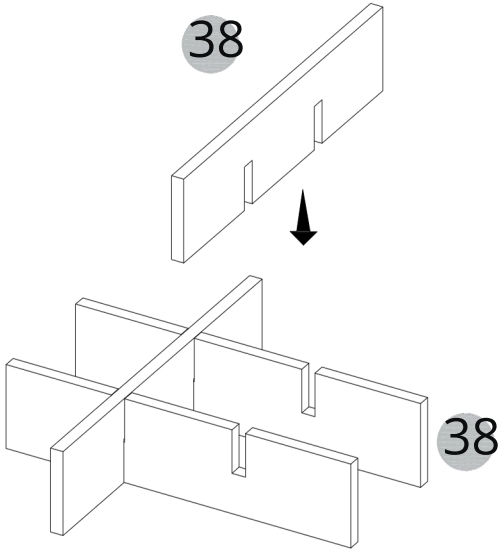

Put the lattice frame in the drawer, as shown in the figure.

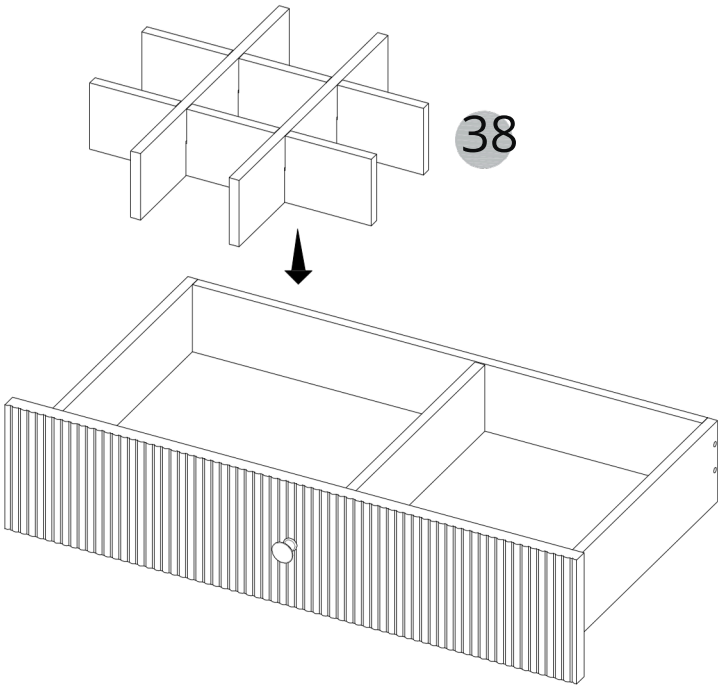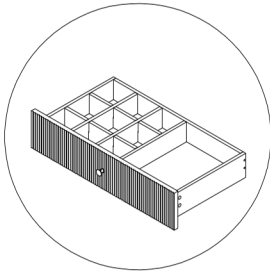

STEP20

YOU WILL NEED

A x4	E x6	N x1		
------	------	------	--	--

N

DR

DL

N

Install the fitting N(DR) on the NO.29 plate and lock it with the fitting E. Similarly, the fitting N(DL) is installed on the NO.28 plate and fixed and locked with the fitting E, as shown in the figure.


29

N

E

N


28

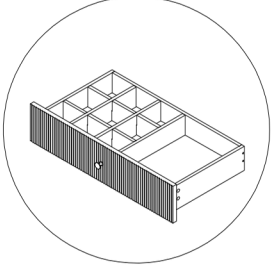

Install fitting A onno.22 plate.

A

22

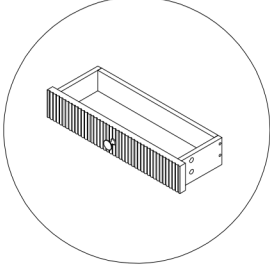


28

STEP21


YOU WILL NEED

B x4

Connect No.23 and No.24 plates with No.22 plate, and lock them with fittings B.

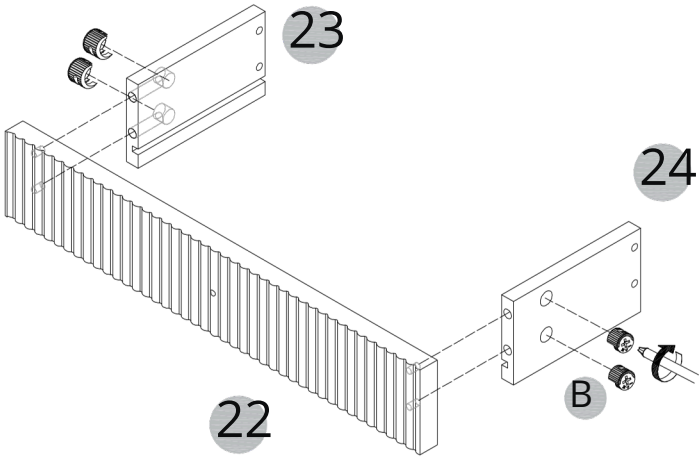


Insert the NO.26 plate into the slots of the NO.23 and NO.24 plates.

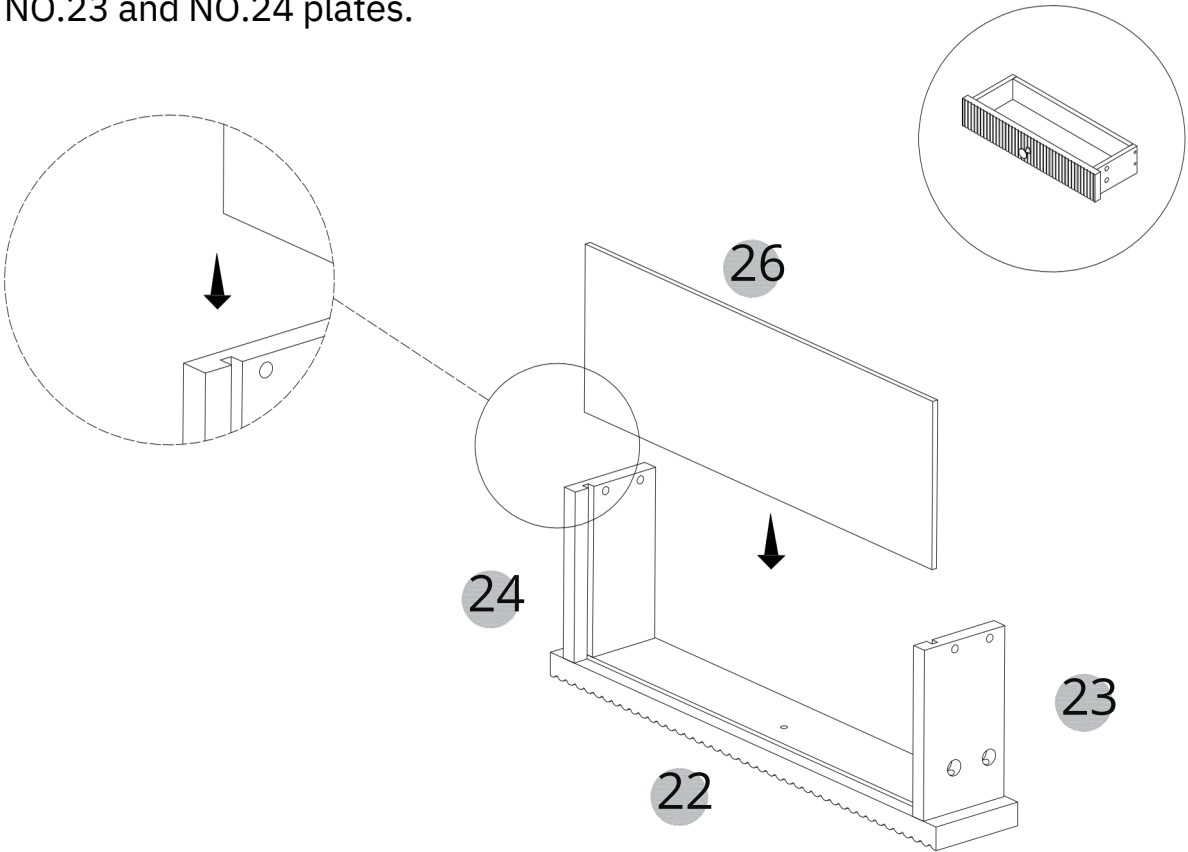


STEP22

YOU WILL NEED			
D x4	F x1	M x1	

Install the fitting M on the NO.22 plate then connect the NO.23 plate and NO.24 plate with NO.25 plate, and lock them with the fitting D.

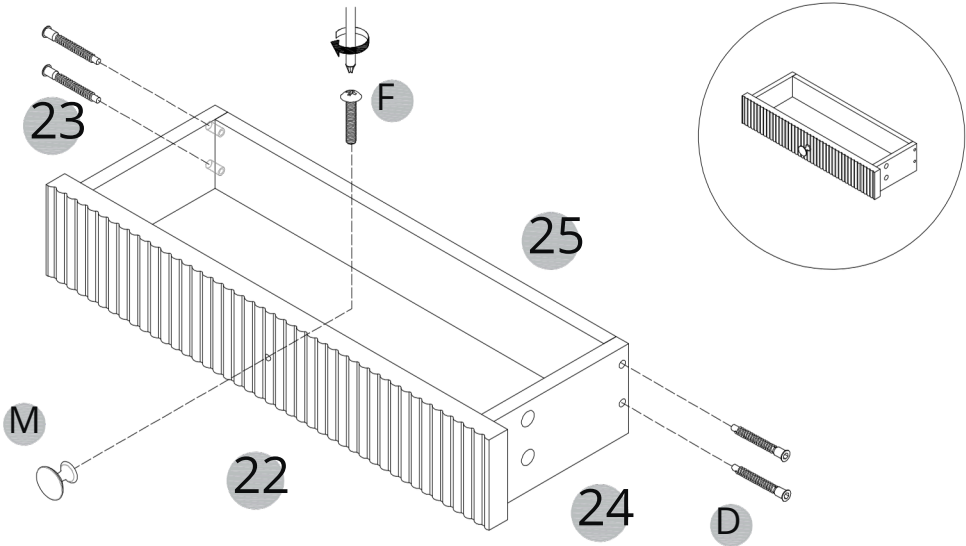


Install the installed drawer into the corresponding position, as shown in the figure.

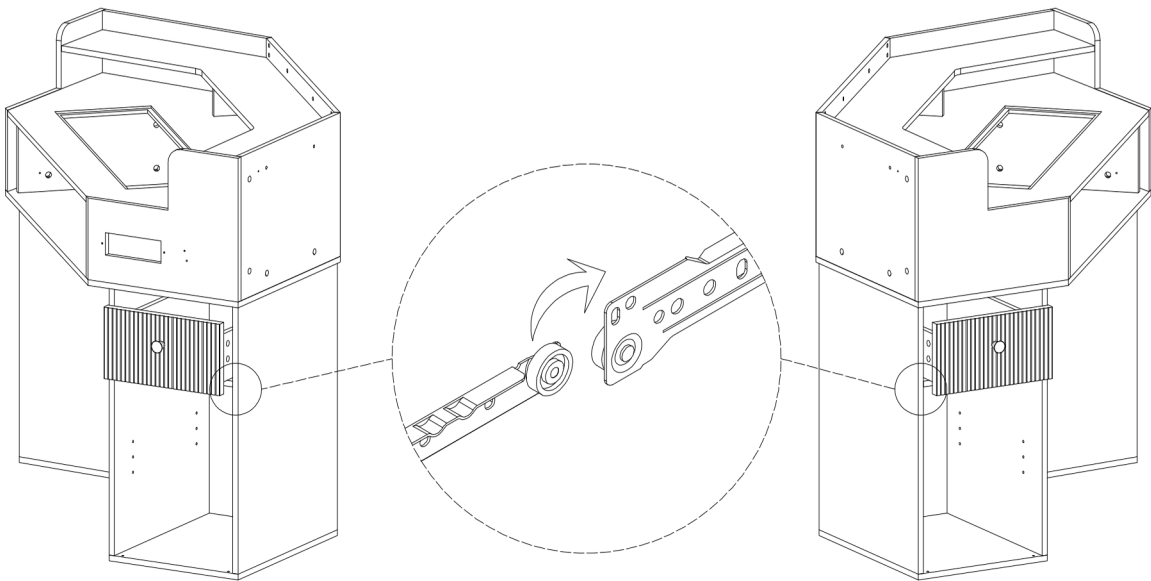


STEP23

YOU WILL NEED			

Install the installed drawer into the corresponding position, as shown in the figure.

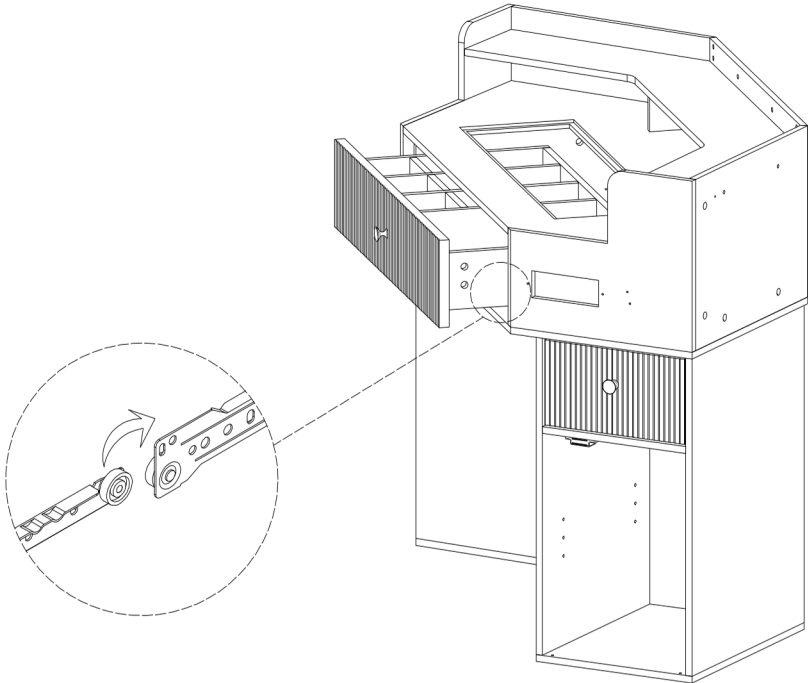

Install the installed drawer into the corresponding position, as shown in the figure.

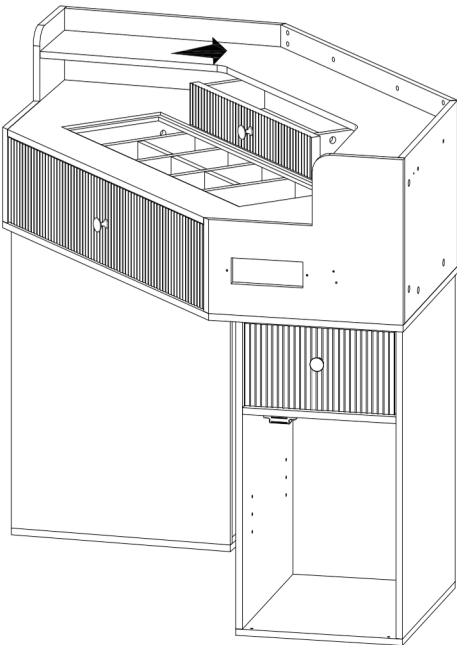


STEP24


YOU WILL NEED

J x8

Install the fitting J on the corresponding positions of the No.12 plate and No.13 plate, as shown in the figure.

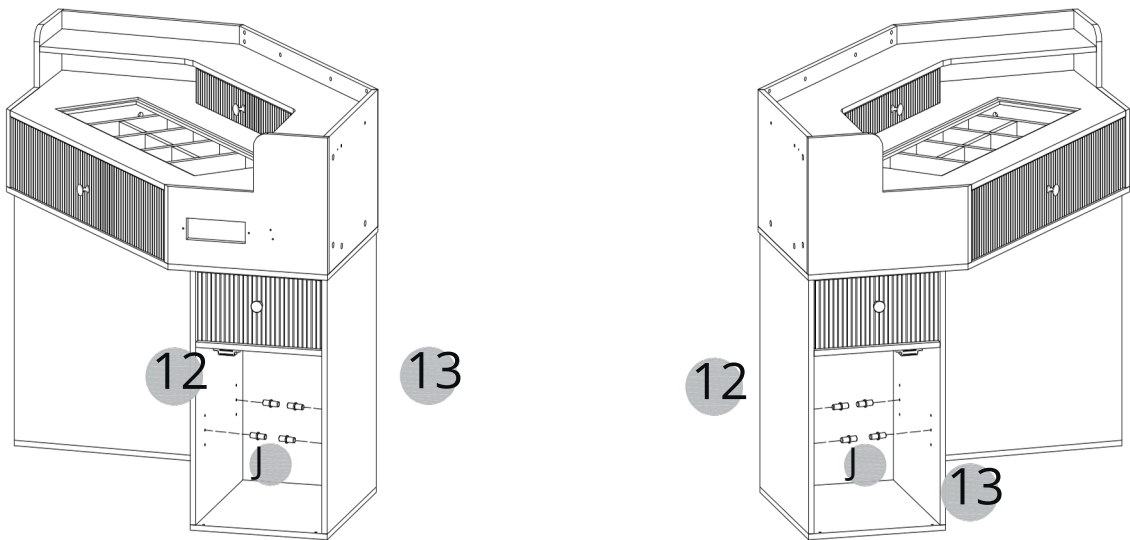

Install the NO.17 plate on the J-layer plate bracket of the fitting, as shown in the following figure.

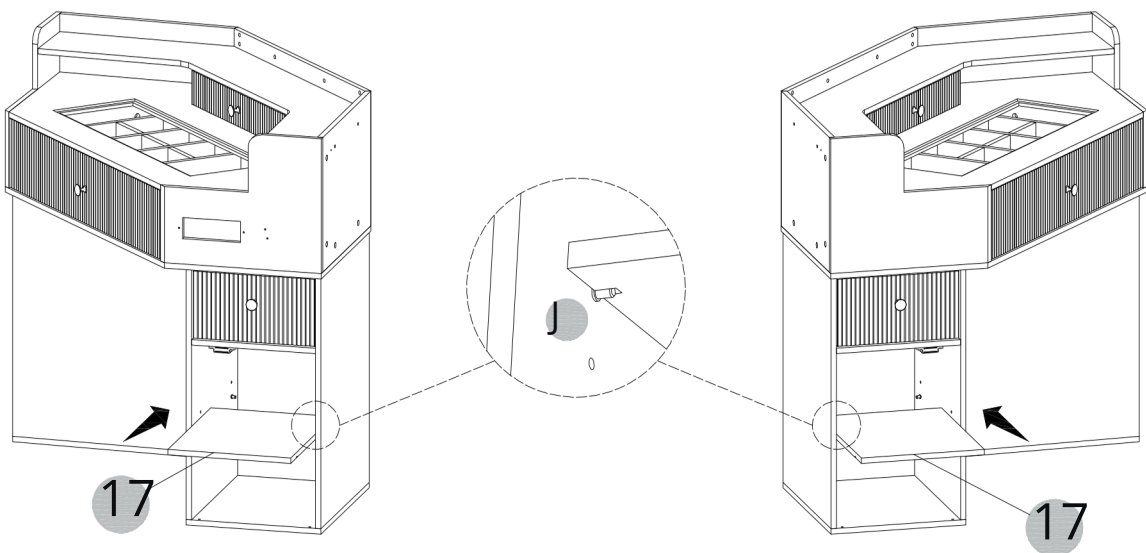


STEP25


YOU WILL NEED

K x4	G x4	L x2	P x2	
------	------	------	------	--

Install the fitting L on the front of the 18th cabinet door and lock it with the fitting G. Then the accessory P is installed on the back of the 18th cabinet door and locked with the accessory P. Insert the fitting K into the corresponding position of the 18th cabinet door.

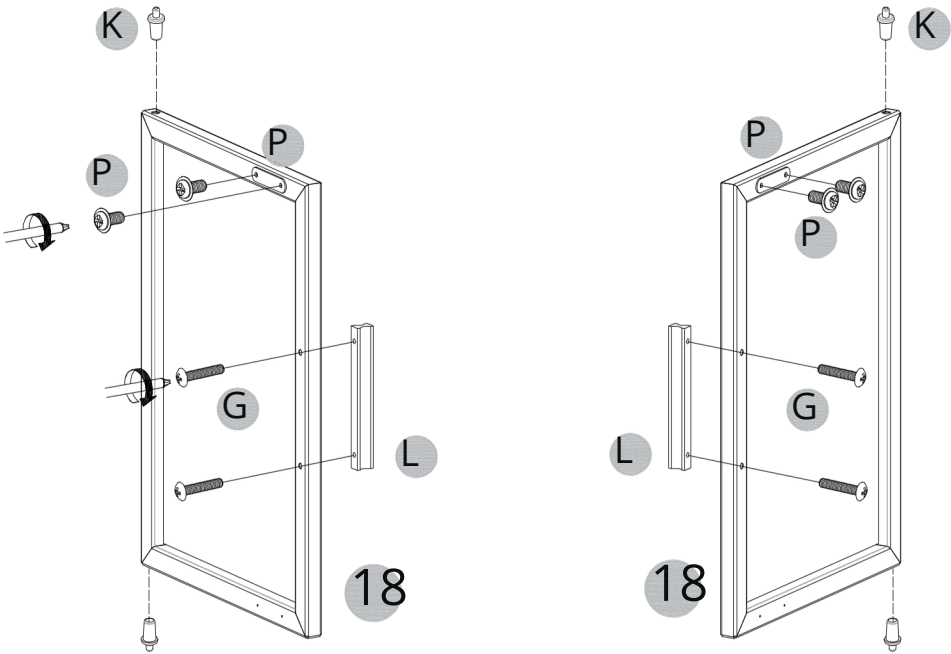

Install No.18 plate into the corresponding cabinet, as shown in the figure below.

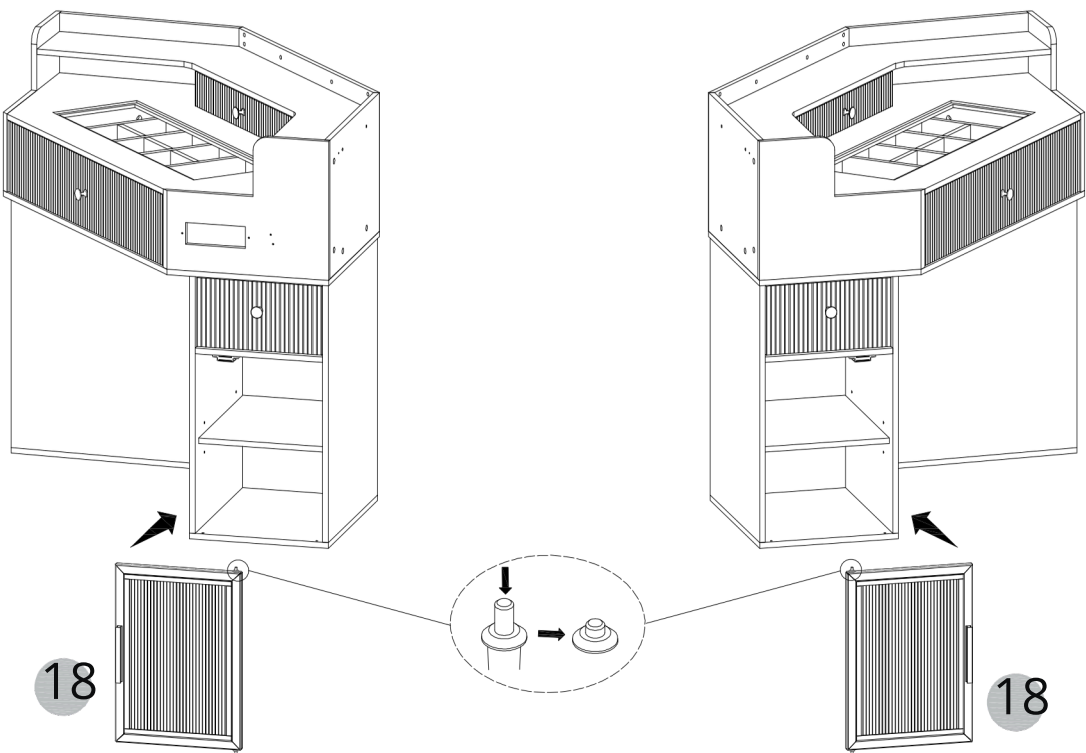


STEP26


YOU WILL NEED

E x16	S x4		
-------	------	--	--

Install the accessory S on the NO.20 plate,
as shown in the figure.

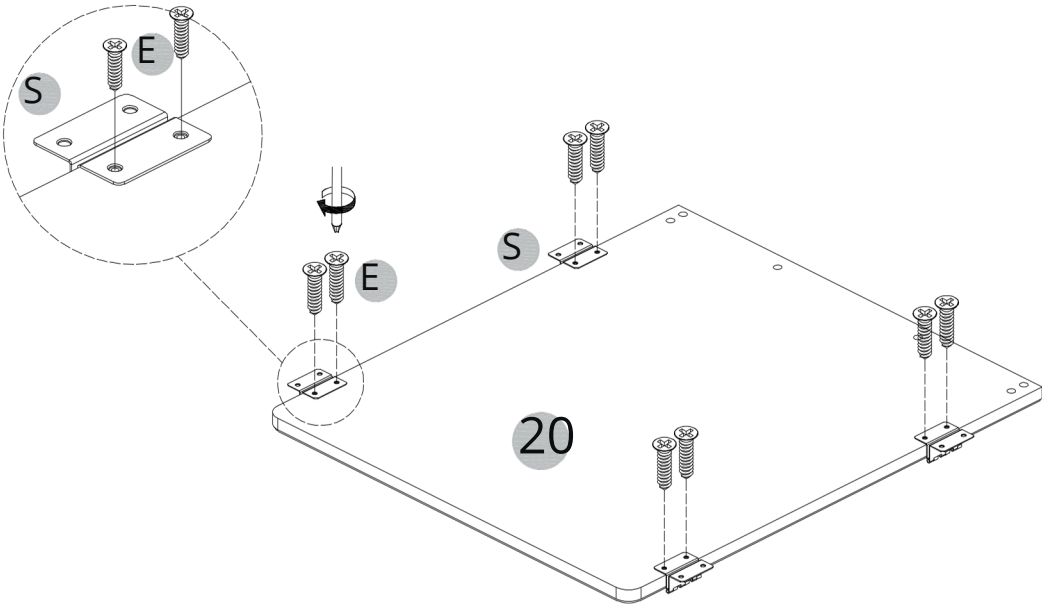

Connect the No.21 plate with the other end of the fitting S
and lock it with the fitting E, as shown in the figure.

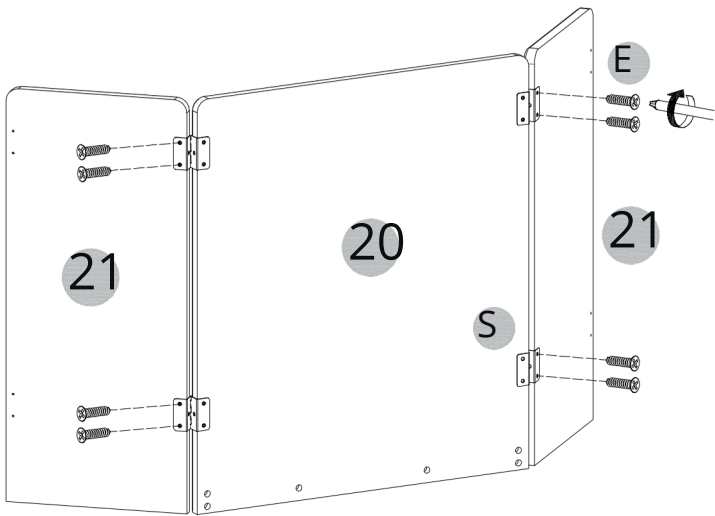


STEP27

YOU WILL NEED

Hx6				
-----	--	--	--	--


Connect the components installed in box A with those installed in box B, and then lock them with fittings H, as shown in the figure below.

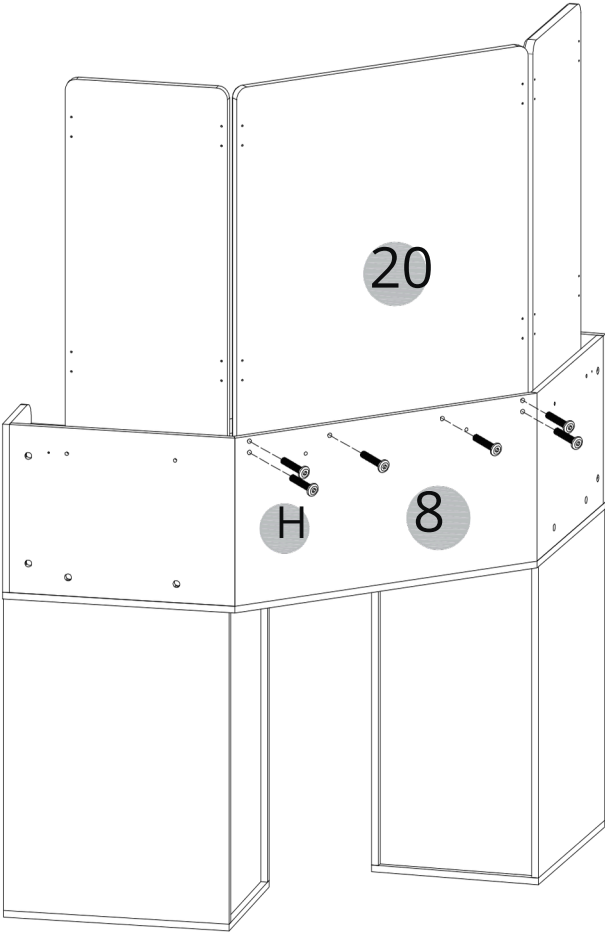


STEP28

YOU WILL NEED			
Dx12			

Connect No.41 plate and No.39 plate, and fix and lock them with fitting D.

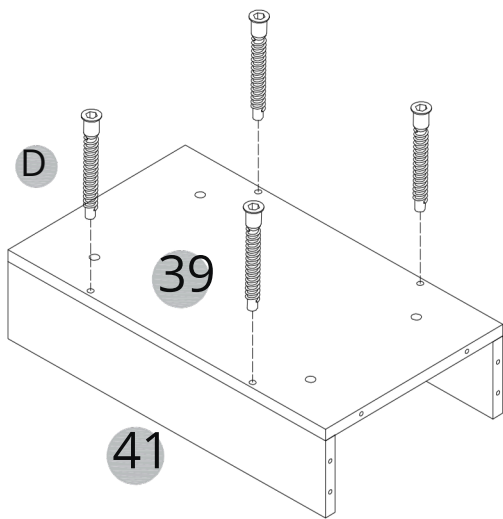


Connect the NO.40 plate with the components installed in the previous step, and lock it with the accessory D.

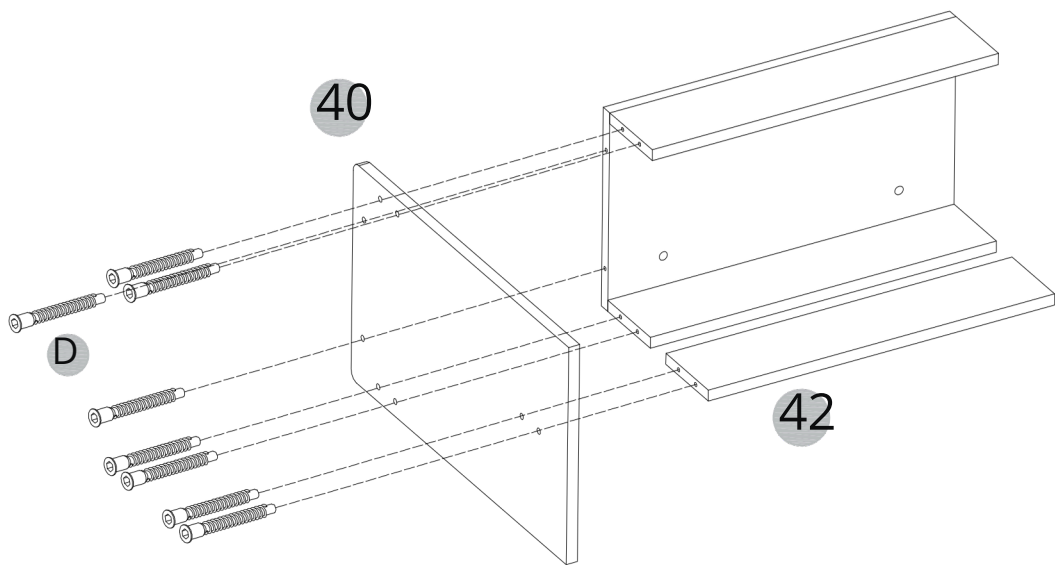


STEP29

YOU WILL NEED			
D x8	H x4	V x4	

Connect the 40# plate with the components installed in the previous step, and lock it with the accessory D.

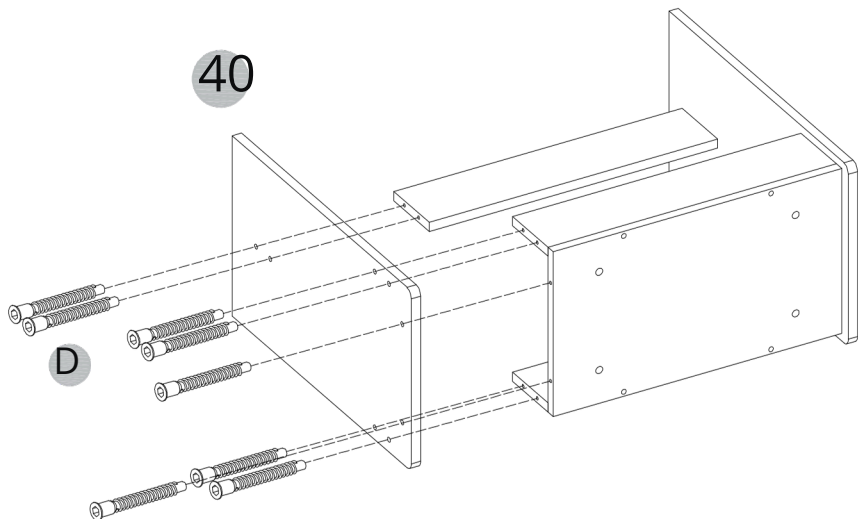


Put the stool upside down, lock the No.33 cushion and No.39 plate with fitting H, and then attach fitting V to the No.40 plate.

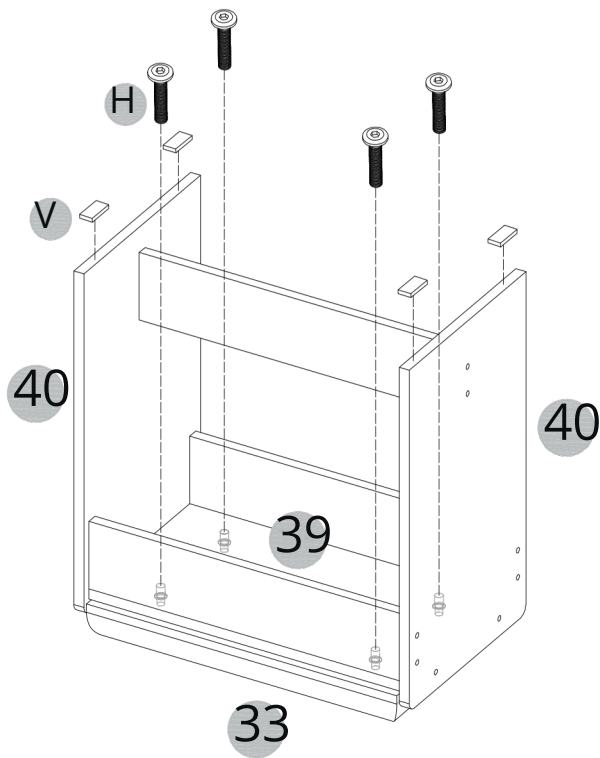


STEP30	YOU WILL NEED			
	R x1	Q x1	E x4	

Install fittings R and Q on No.7 plate, and lock them with fittings E. As shown in the figure.

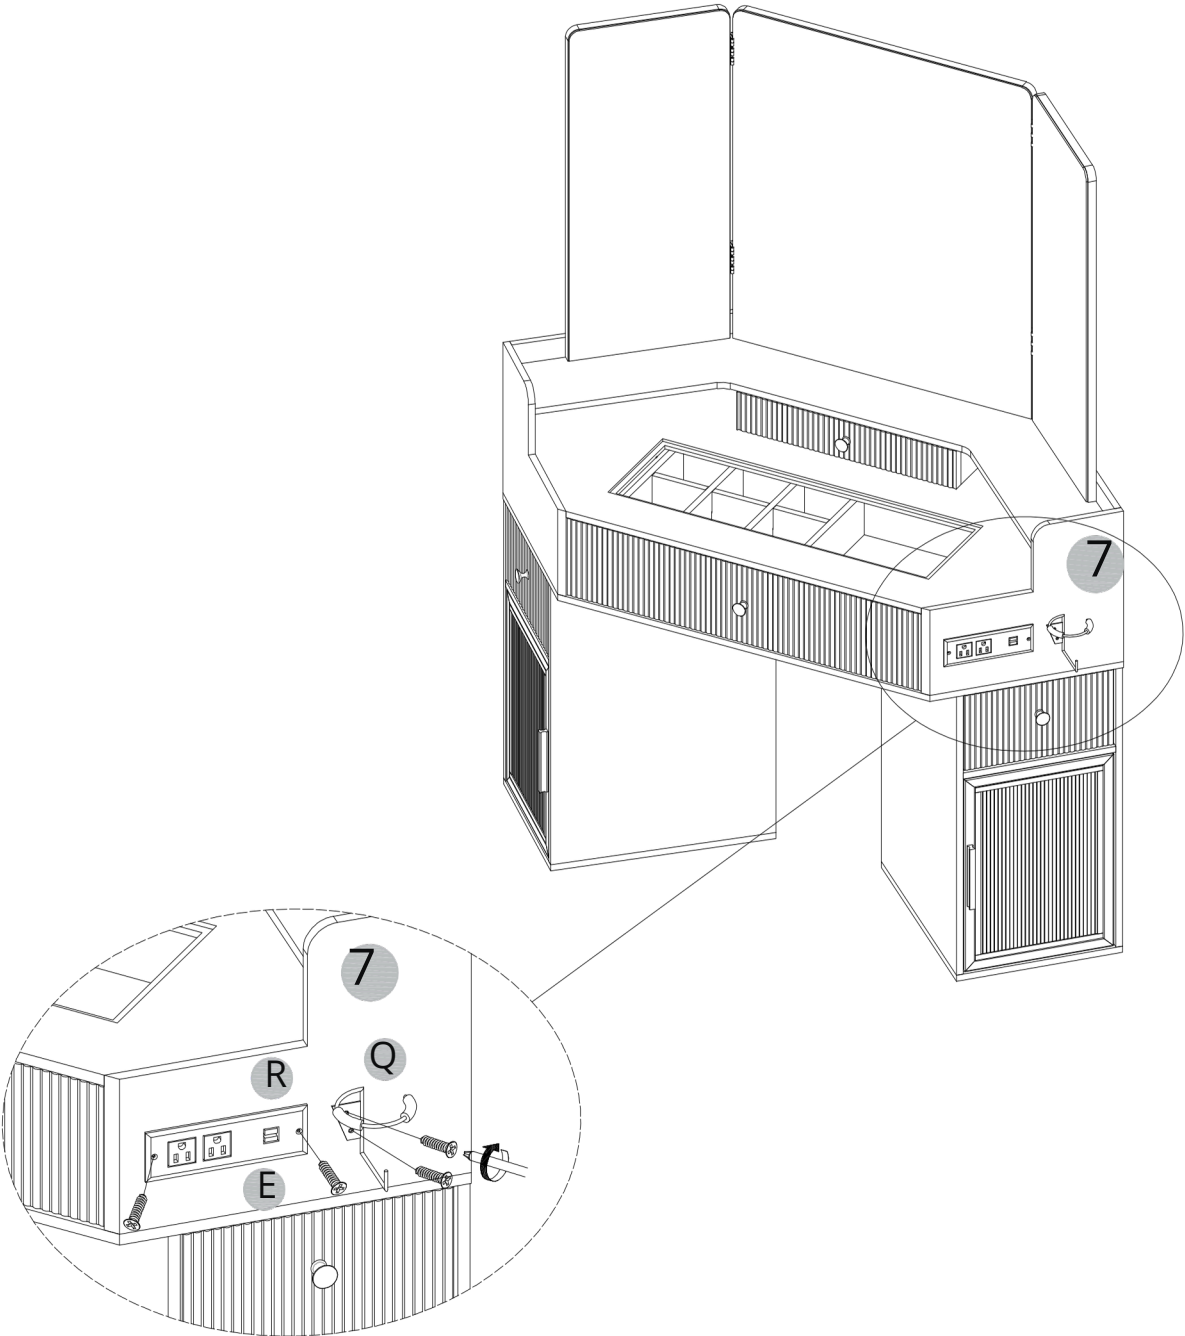



STEP31	YOU WILL NEED			

Put No.34 on the No.1 plate and put No.19 on the No.2 plate.
As shown in the figure.

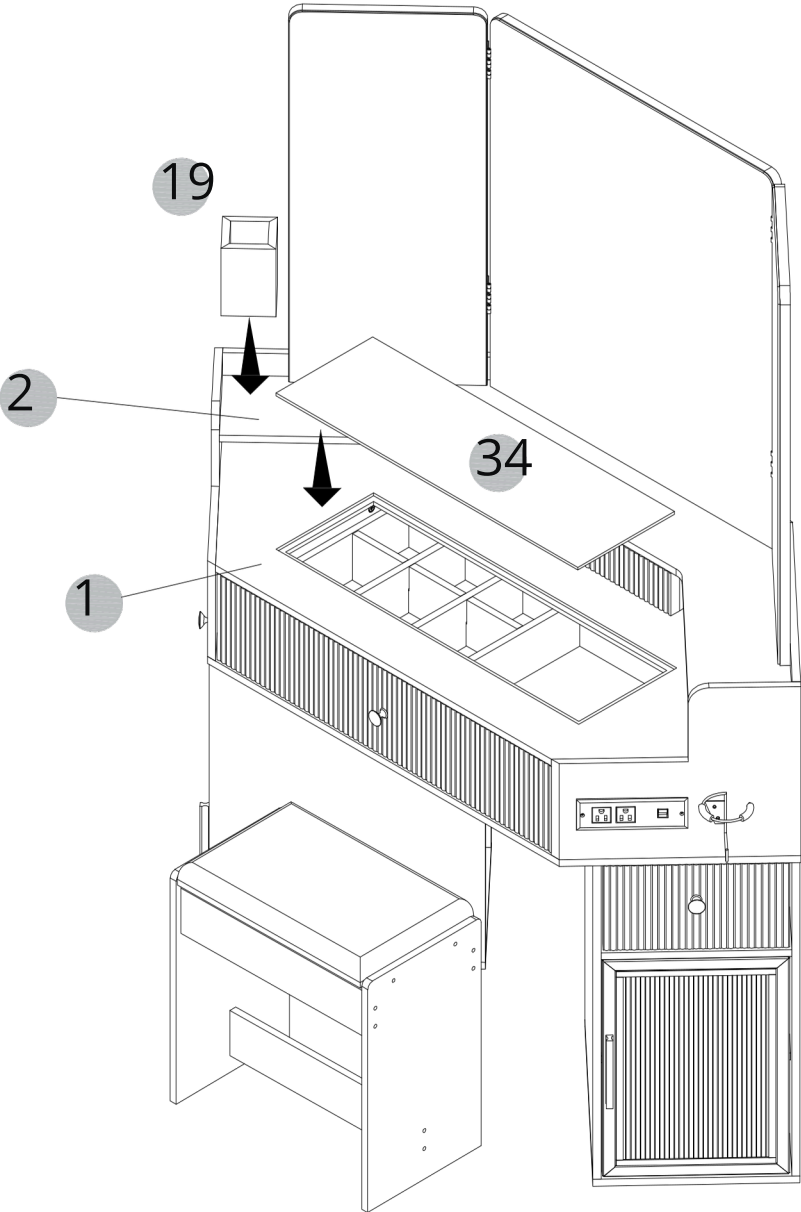

STEP32	YOU WILL NEED			
	Wx10			

Install the accessory W on the back of the cabinet.

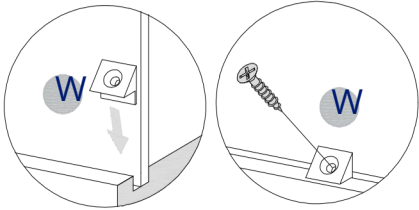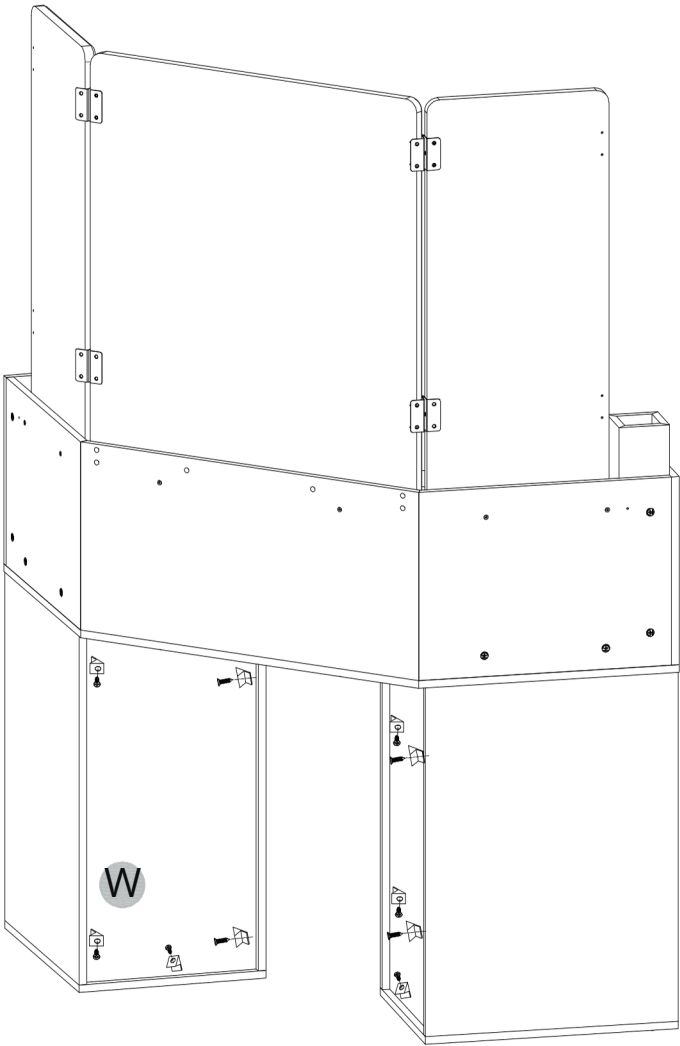


STEP33

YOU WILL NEED

T x2			
------	--	--	--

Fix the cabinet and the wall with the fitting T, which has a certain stability. As shown in the figure.

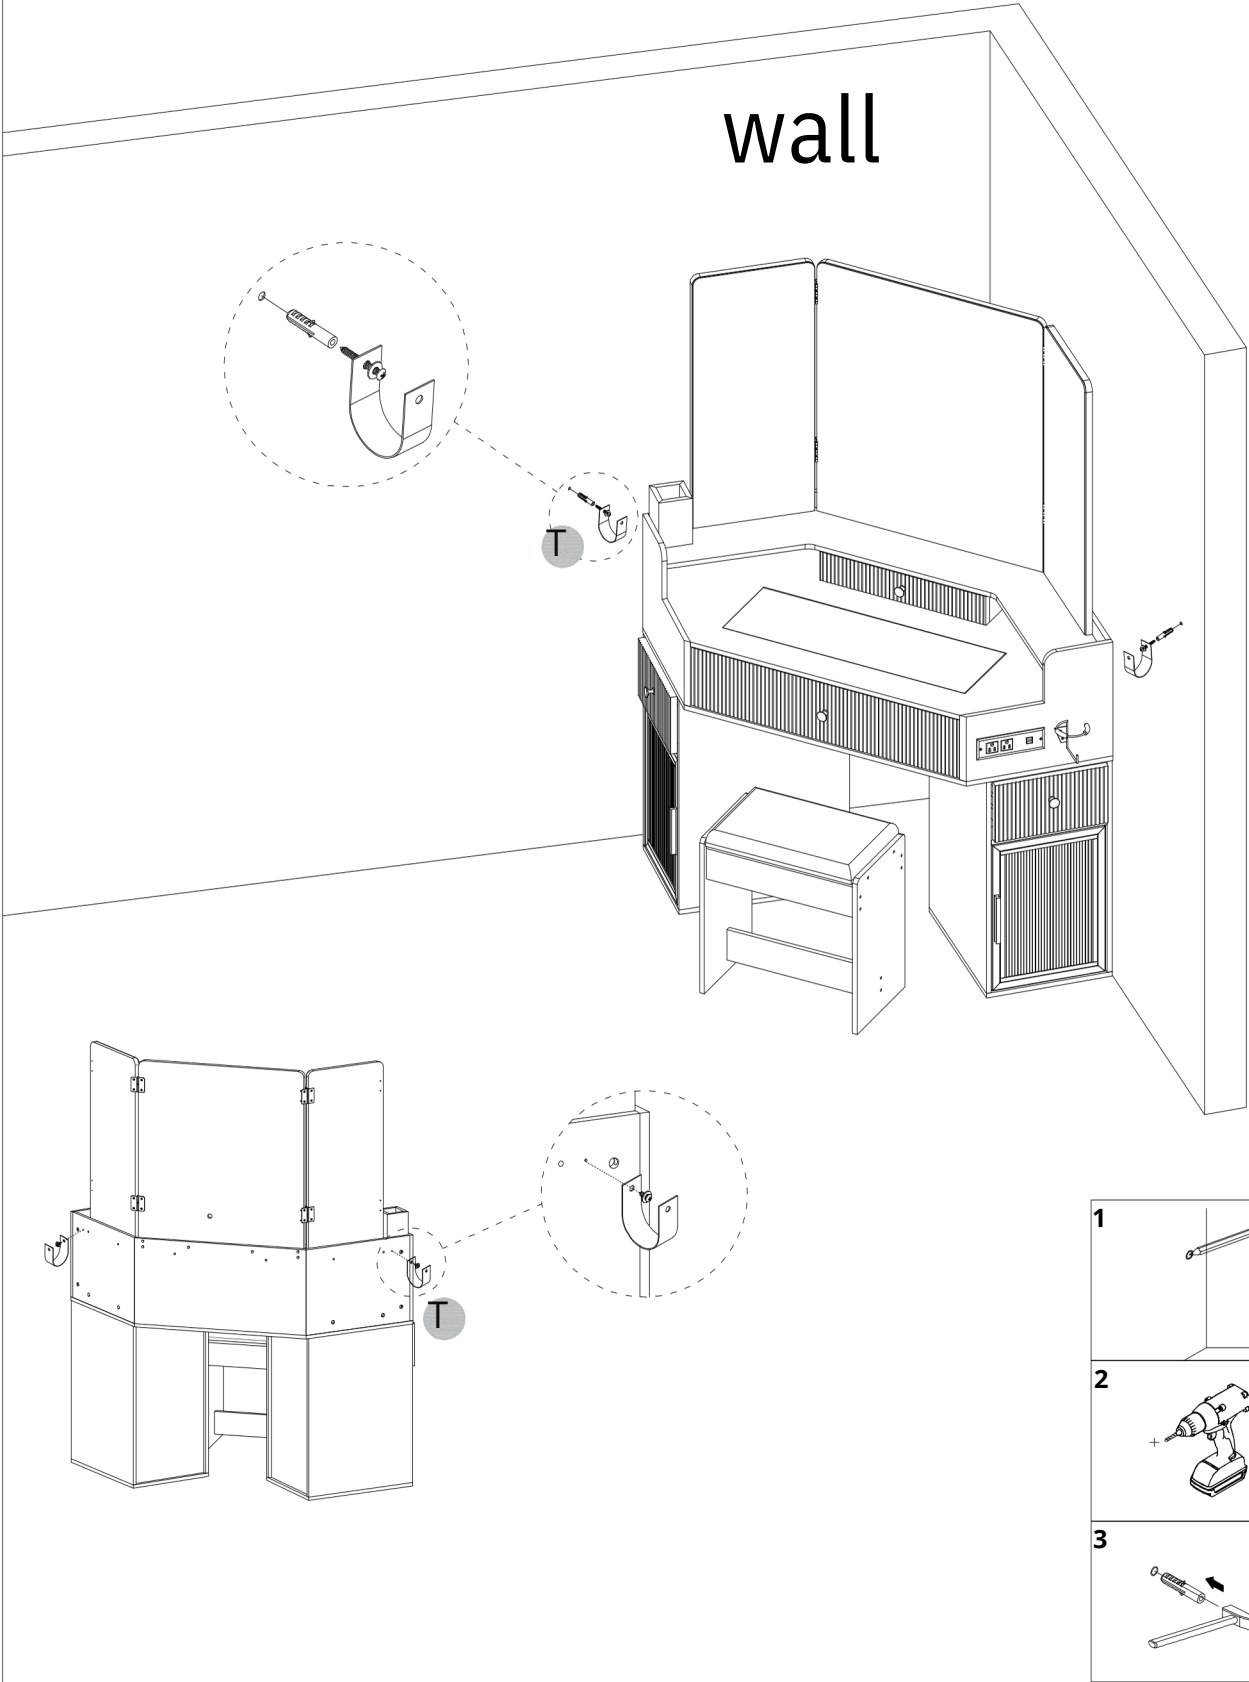


STEP34


YOU WILL NEED


Y x55

1

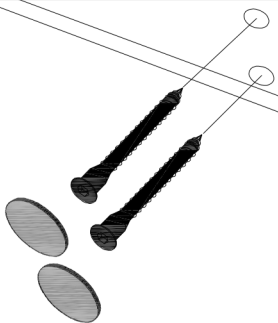

2

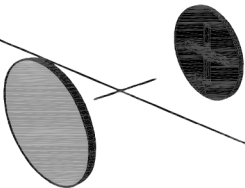

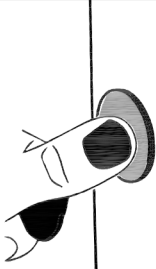

Bond ComponentU to all exposed holes on the front face of the product.

Attach the fitting Y to the position with screw holes, which plays an aesthetic role. As shown in the figure.

