



ASSEMBLY INSTRUCTION

MODEL : BDC0928/ (Dining Chair)





FURNITURE

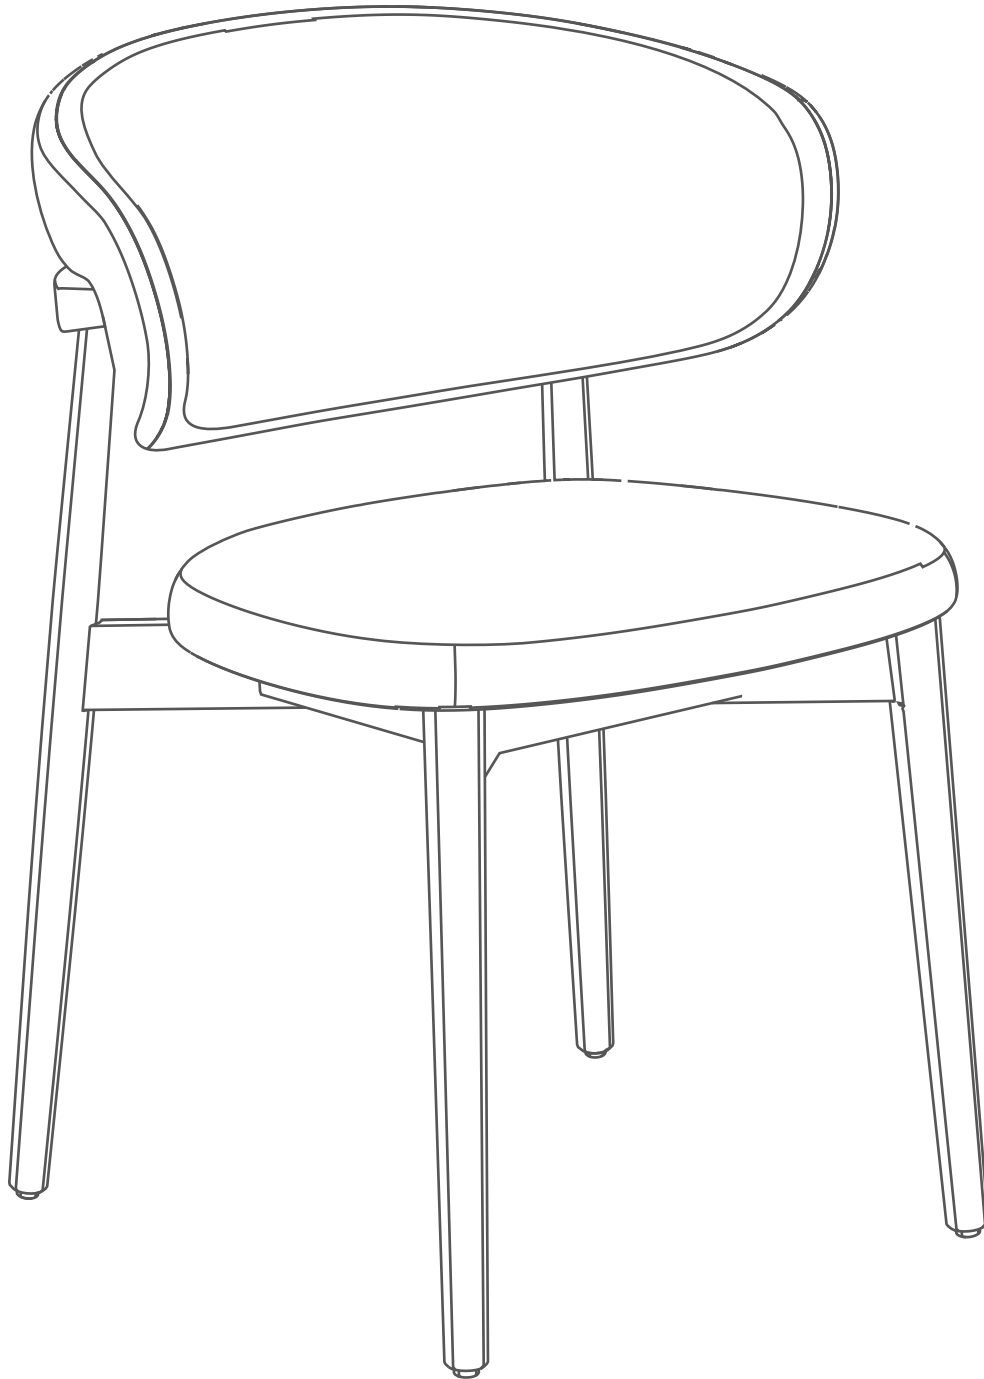



HARDWARE LIST

B  CSK C/B SCREW(M3, 5*45mm) 8 PCS	C  Bolt:M6*35mm 10 PCS	D  Plastic lid:16mm 14 PCS
F  Foot pin pads:M6*20 4 PCS	G  ALLEN KEY (M6 x100MM) 1 PCS	H  2 PCS
I  M6*55MM 2 PCS	Tool Required : Crosshead Screw Driver	

PART LIST

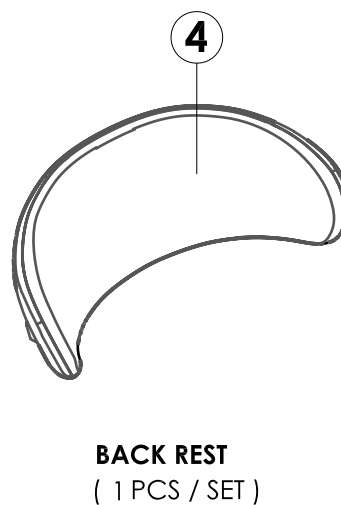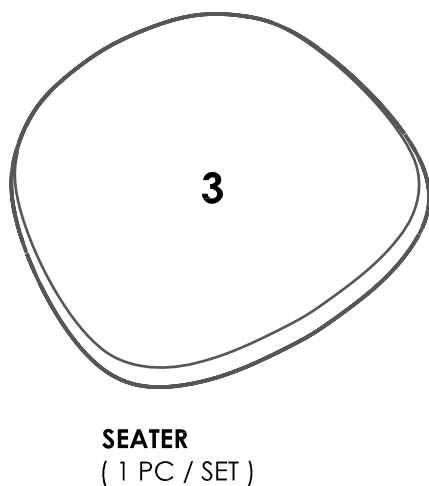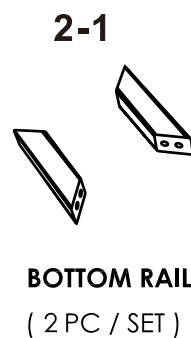
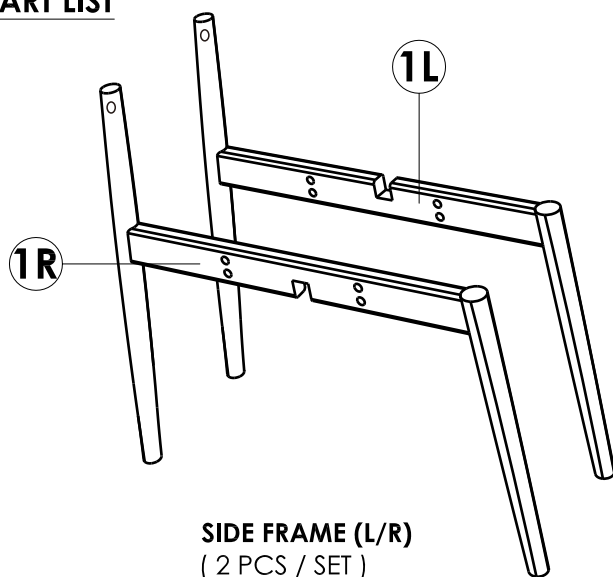


Note: Tighten the screws halfway before completing step 3, and fully tighten them after finishing step 3.

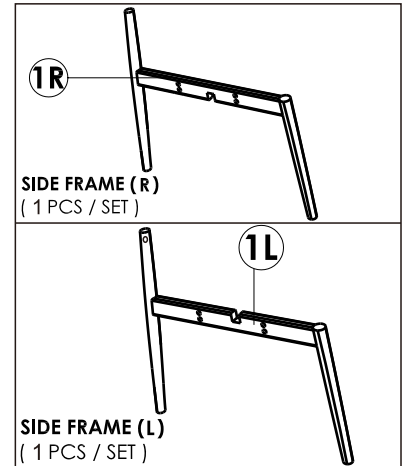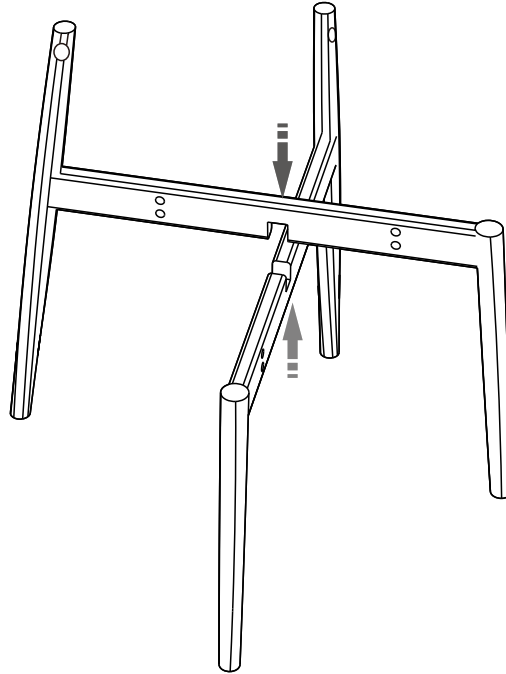




STEP 1

Assemble side frame(L) and side frame(R)

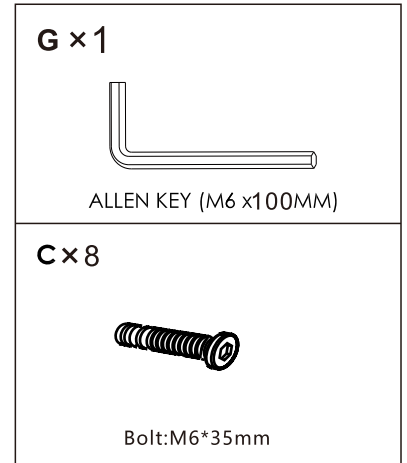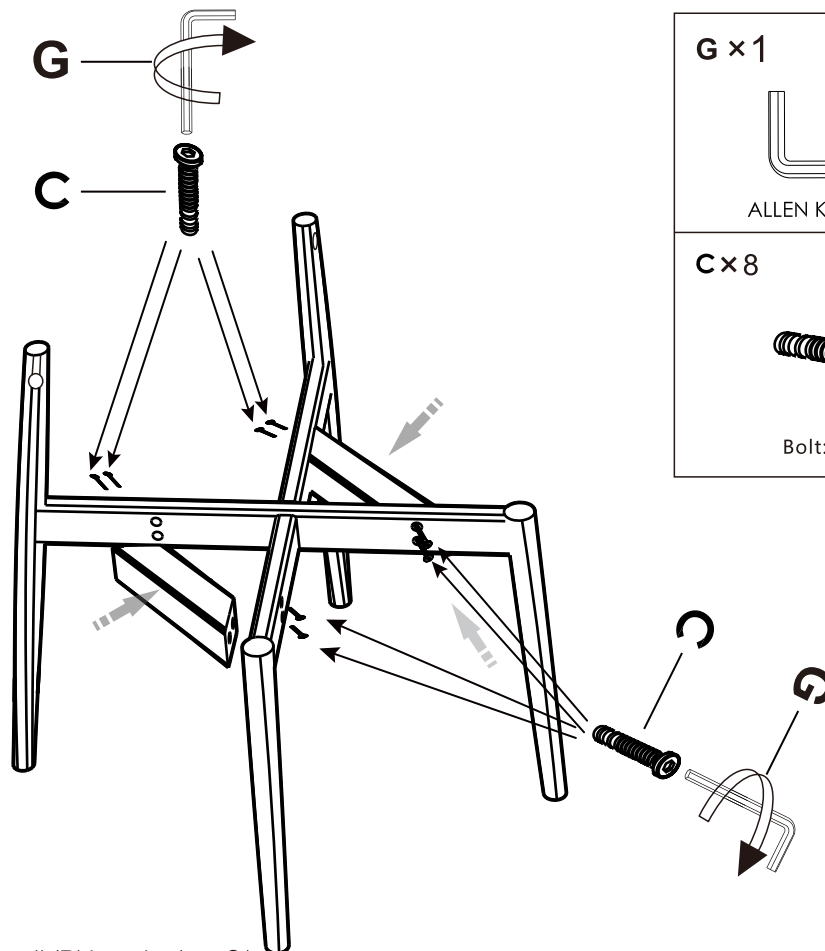


STEP 2

Attach bottom rail to side frame(L/R) by using (C x 8)

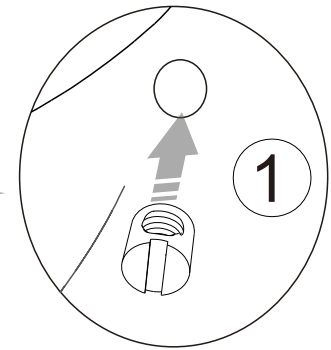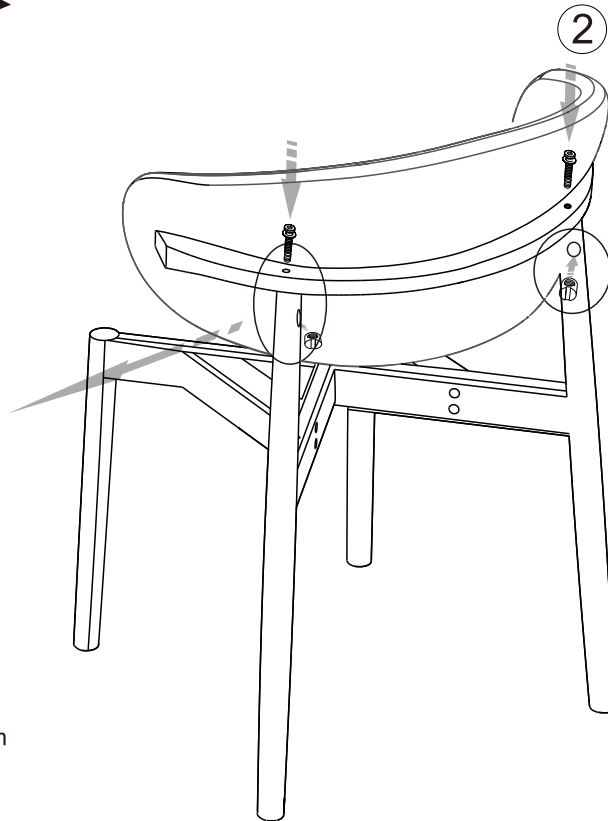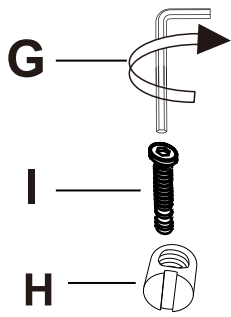

flat slot facing upward

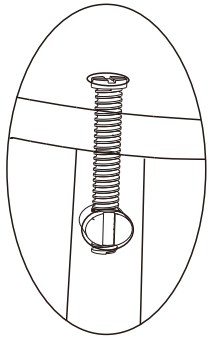

Assembly internal
structure slope diagram



H		2 PCS
I		2 PCS
	M6*55MM	
D		2 PCS
	Plastic lid:16mm	

STEP 3

- ① Put the screw(H*2)with the flat slot facing upward into the hole of the side frame(L/R).
- ② Attach back rest to side frame(L/R) by using (I*2),Then cover it with D*2

B		8 PCS
CSK C/B SCREW(M3. 5*45mm)		
Crosshead Screw Driver		

F		4 PCS
Foot pin pads:M6*20		

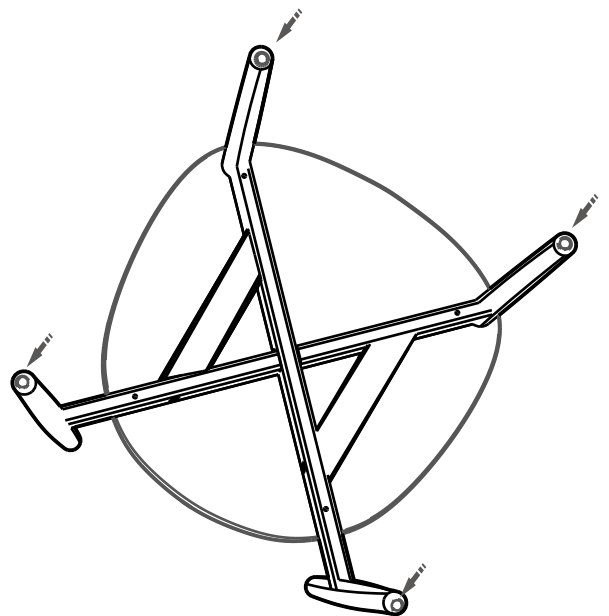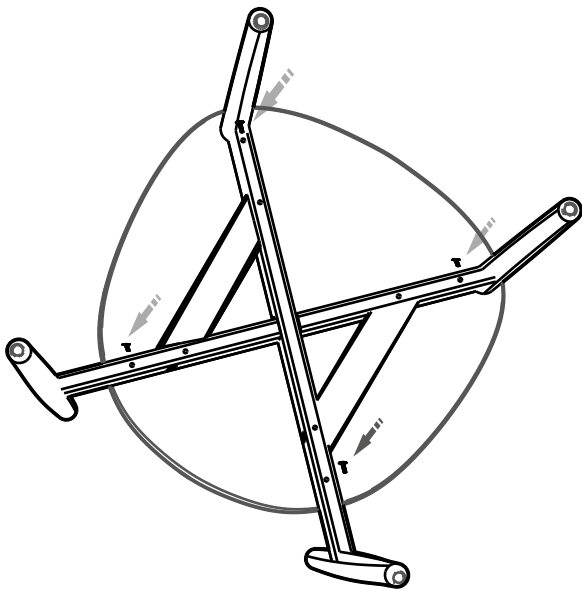

STEP 4

Attach seater to side frame(L/R) by using (B*8)
(The screw needs to penetrate the 1mm-thick
reserved hole wall and be tightened firmly after
connecting to the base.)

STEP 5

Attach foot pin pads to side frame(L/R) by using (F*4),
tighten it up by using a cross head screw driver