
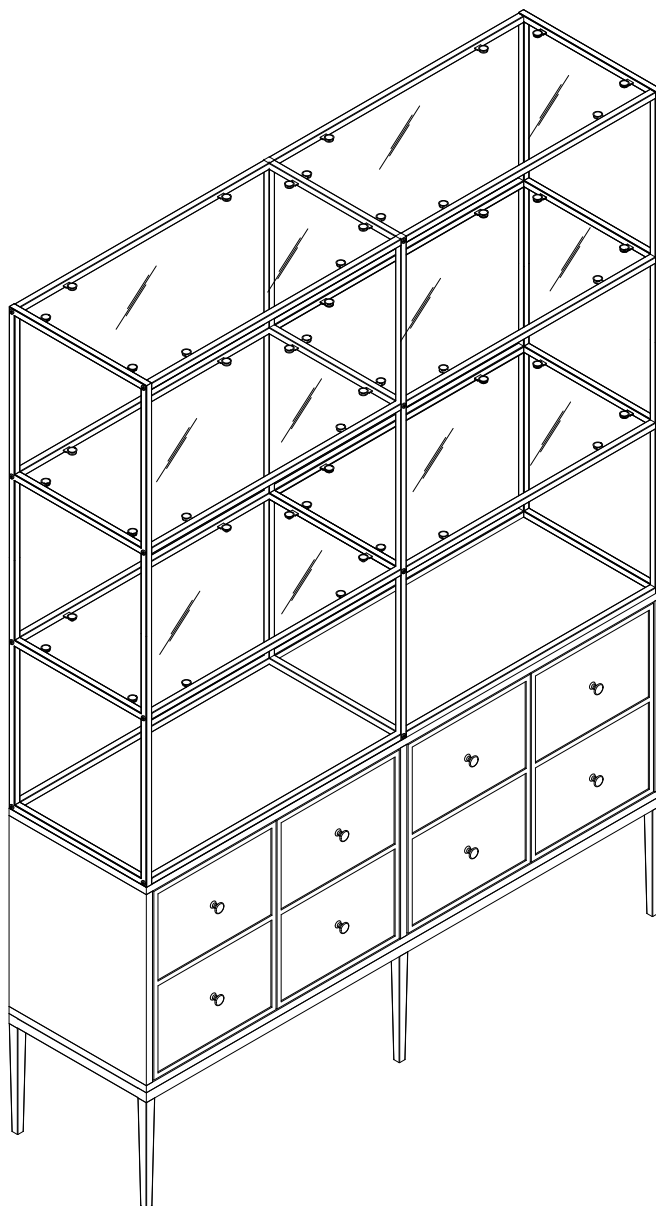
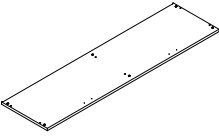
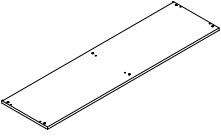



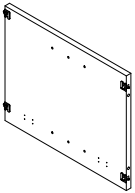
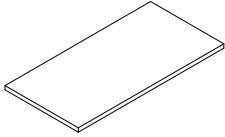
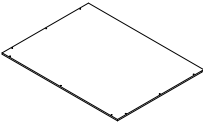
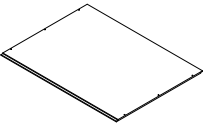
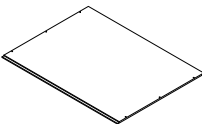
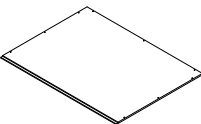
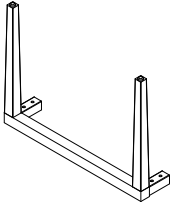
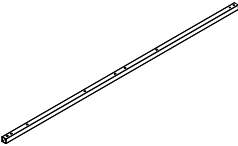

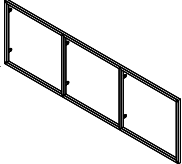
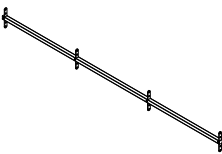
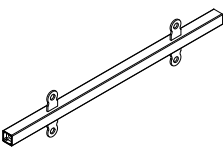
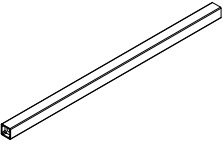
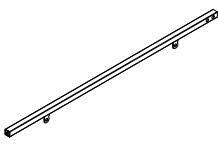
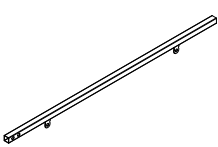
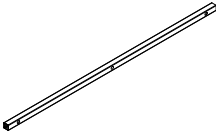
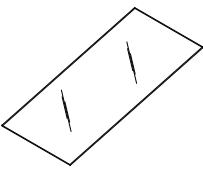





Cabinet

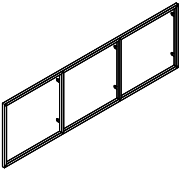

PART LIST


A 	B 	C 	D 	
Top Panel 1 PC	Bottom Panel 1 PC	Side Panel 2 PCS	Left Door Panel 2 PCS	Right Door Panel 2 PCS
F 	G 	H 	I 	J 
Partition Panel 1 PC	Adjustable Shelf Panel 2 PCS	Back Panel 1 1 PC	Back Panel 2 1 PC	Back Panel 3 1 PC
K 	L 	M 	N 	O 
Back Panel 4 1 PC	Metal Leg 2 PCS	Metal Strip 2 PCS	Middle Metal Leg 2 PCS	Left Metal Frame 1 PC
P 	Q 	R 	S 	T 
Outframe Partition Metal 2 PCS	Partition Top Metal 3 PCS	Partition Bottom Metal 1 PC	Front Metal 6 PCS	Back Metal 6 PCS
U 	V 	W 		
Bottom Metal Strip 4 PCS	Glass 6 PCS	Right Metal Frame 1 PC		

HARDWARE LIST

1	 $\phi 1/4" \times 3/8"$	2	 $\phi 1/4" \times 1-1/4"$	3	 $\phi 8 \times 30\text{mm}$	4		5	 $\phi 3 \times 12\text{mm}$
Short Bolt 30 PCS (Extra 1)		Long Bolt 24 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)		Hinge 8 PCS		Hinge Screw 48 PCS (Extra 1)	
6		7	 $\phi 5/32" \times 3/4"$	8		9	 $\phi 3 \times 16\text{mm}$	10	 $\phi 3 \times 16\text{mm}$
Knob 8 PCS		Round Head Bolt 8 PCS		Magnet Latch 2 PCS		Latch Screw 4 PCS		Round Head Screw 30 PCS (Extra 2)	
11		12		13		14	 $\phi 1/4" \times 1"$		
Allen Wrench 1 PC		Shelf Holder 8 PCS (Extra 1)		Suction Cup 48 PCS (Extra 2)		Bolt 12 PCS (Extra 1)			


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

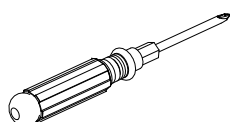


Phillips Head Screwdriver

STEP 1

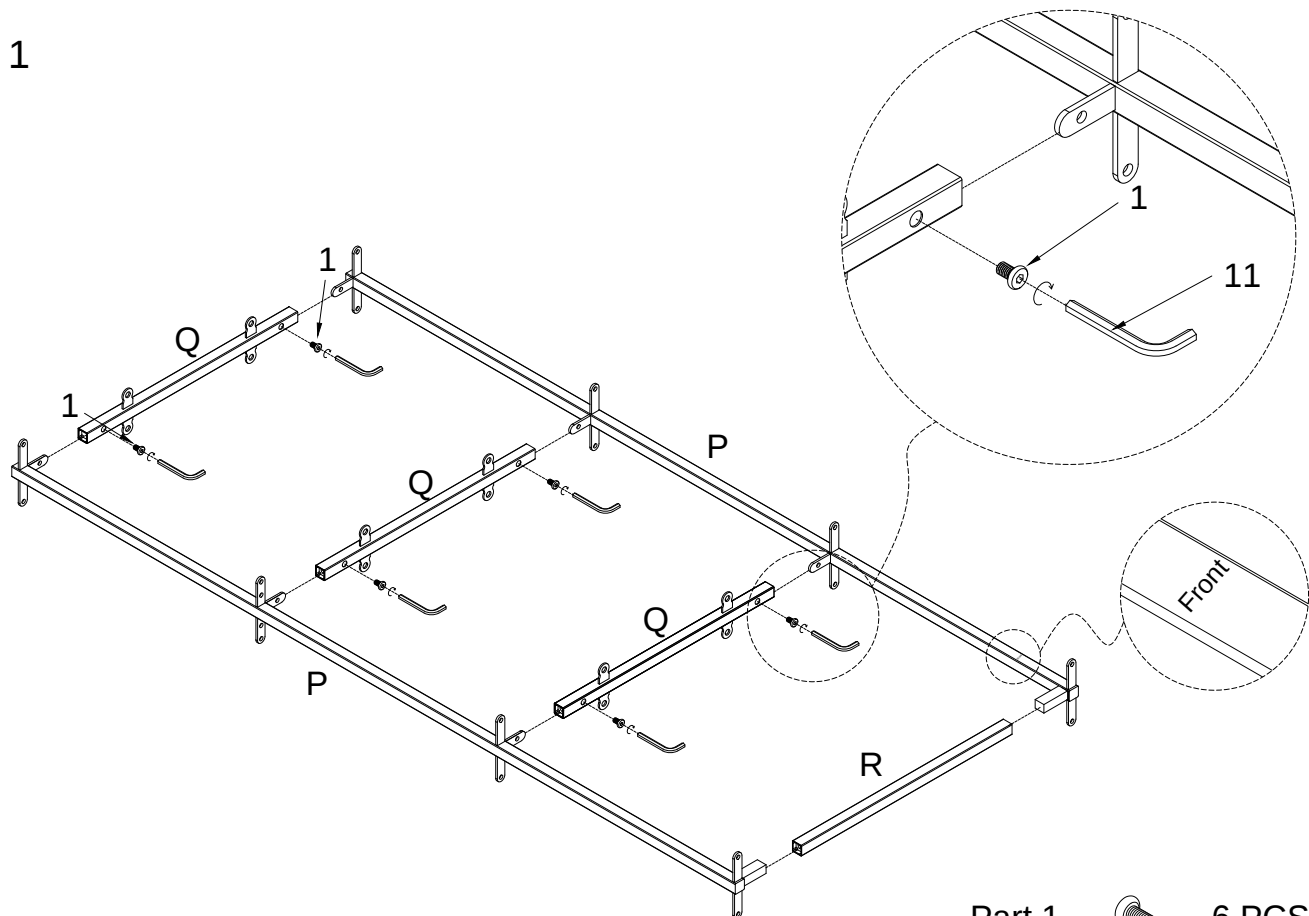


- Part 1  6 PCS
Part 11  1 PC

STEP 2

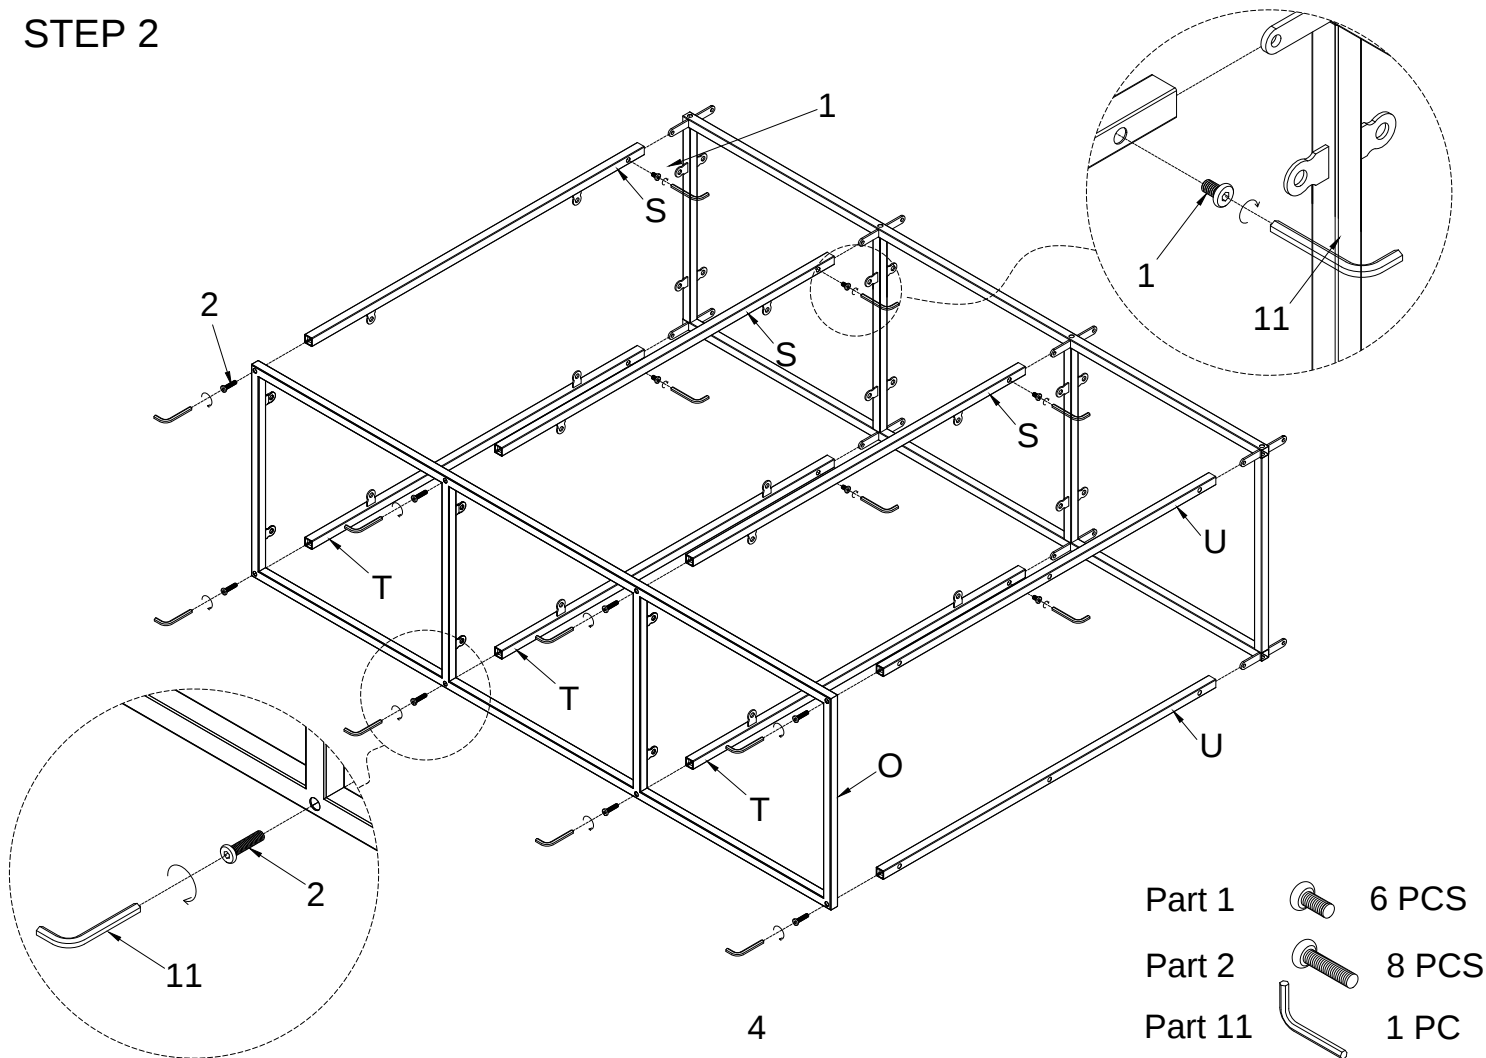


- Part 1  6 PCS
Part 2  8 PCS
Part 11  1 PC


STEP 3

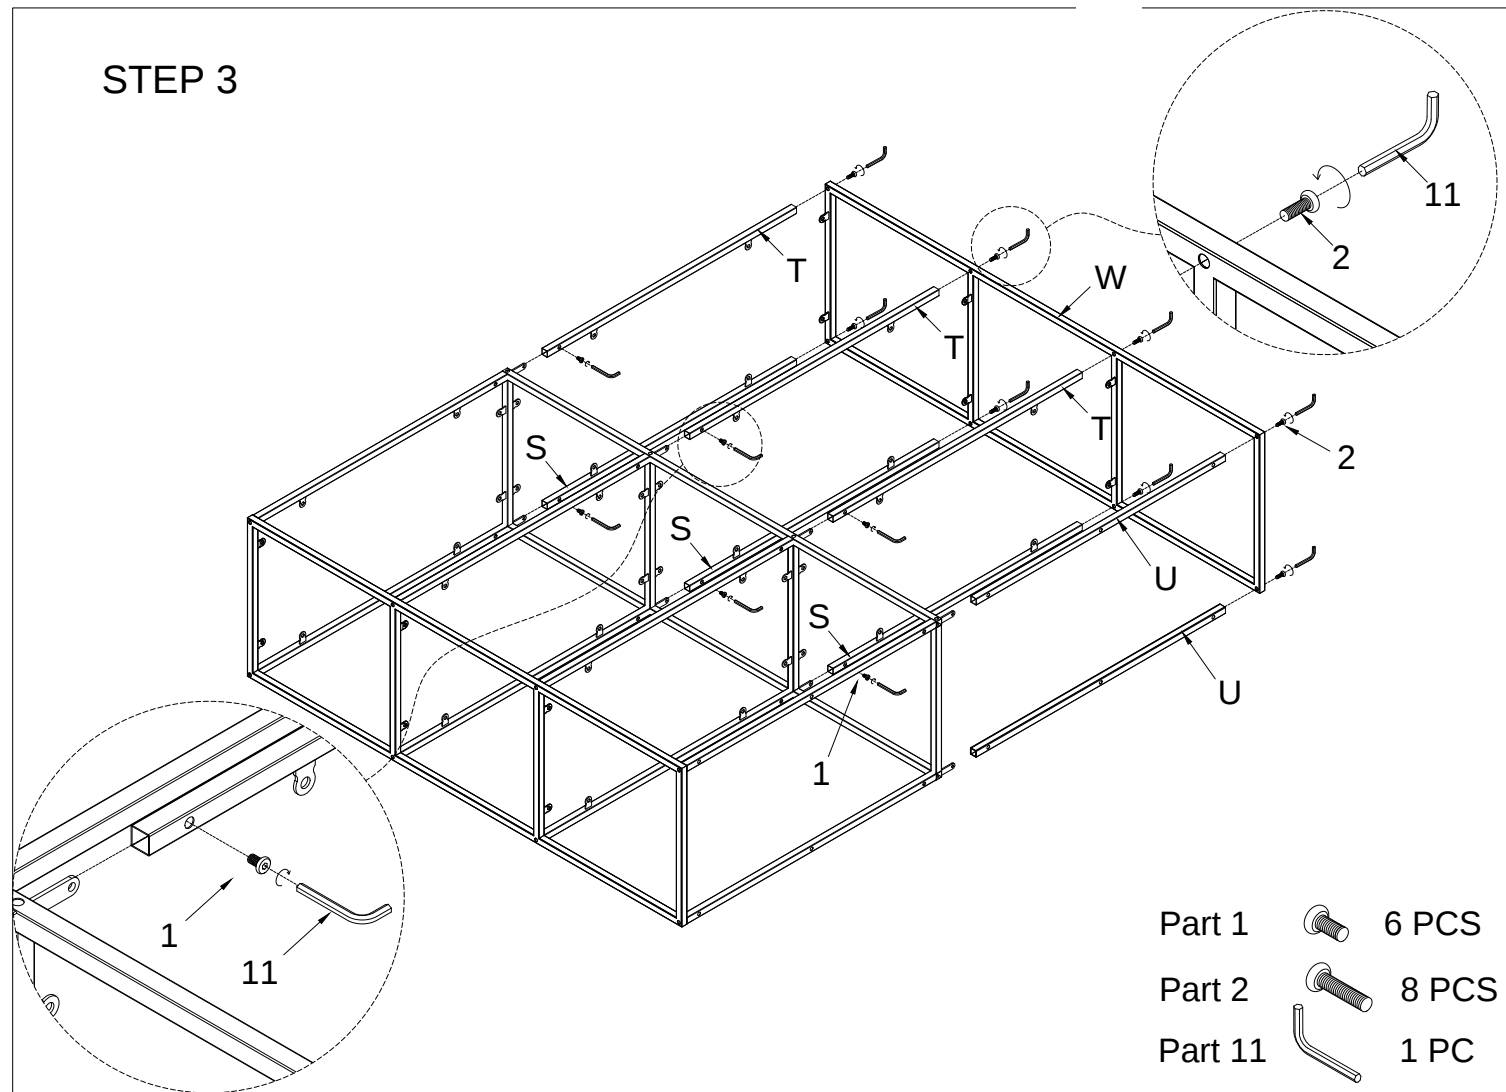

STEP 4

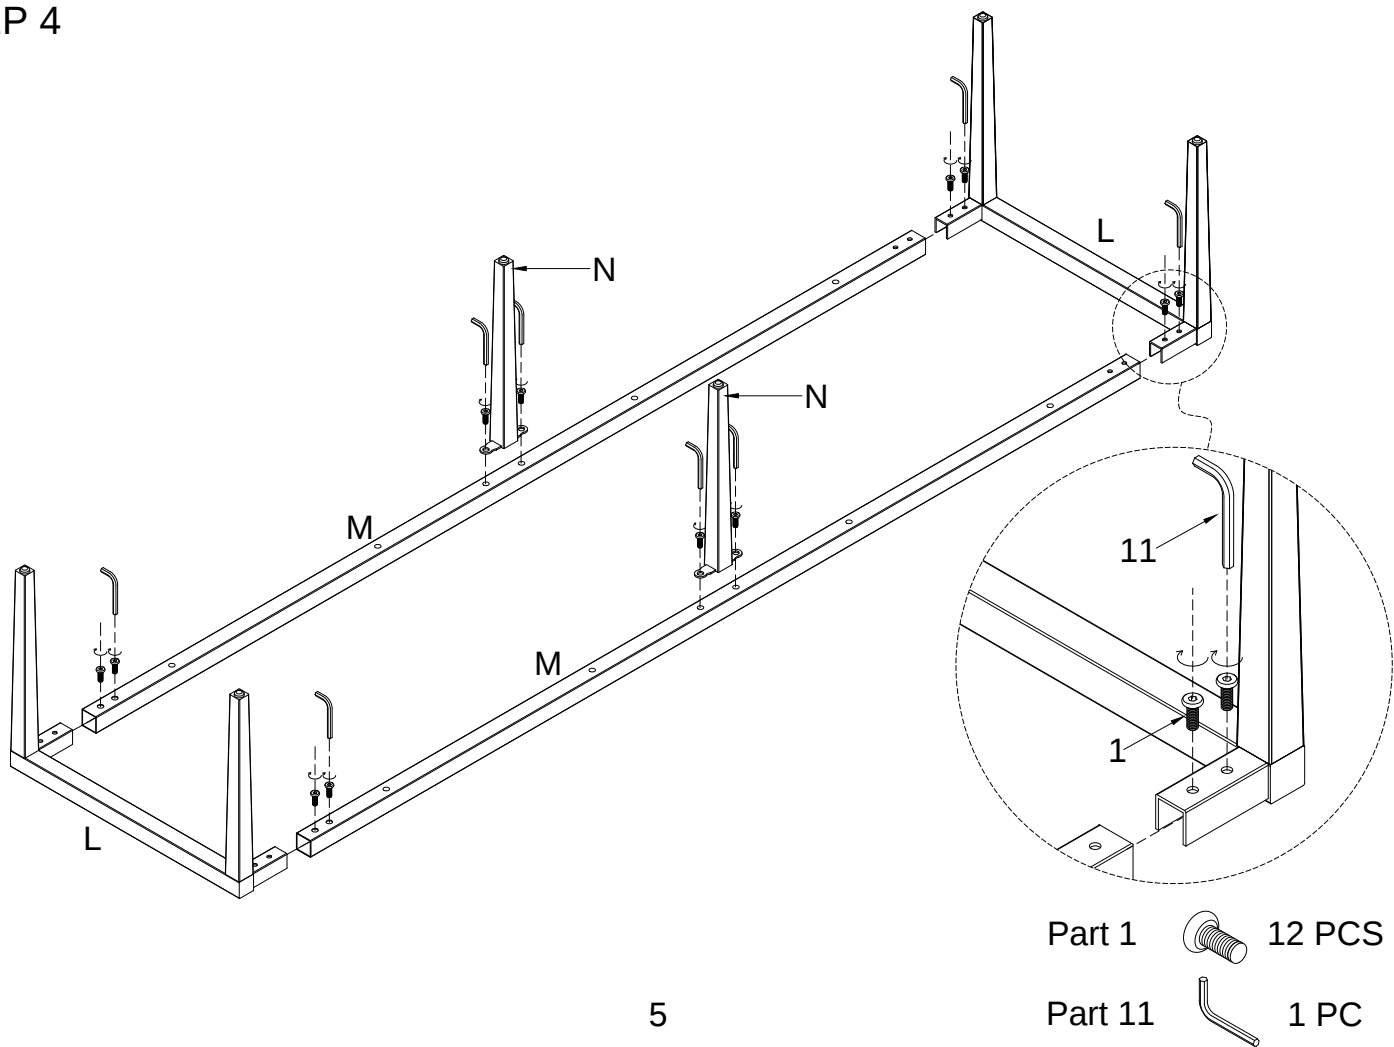


STEP 5

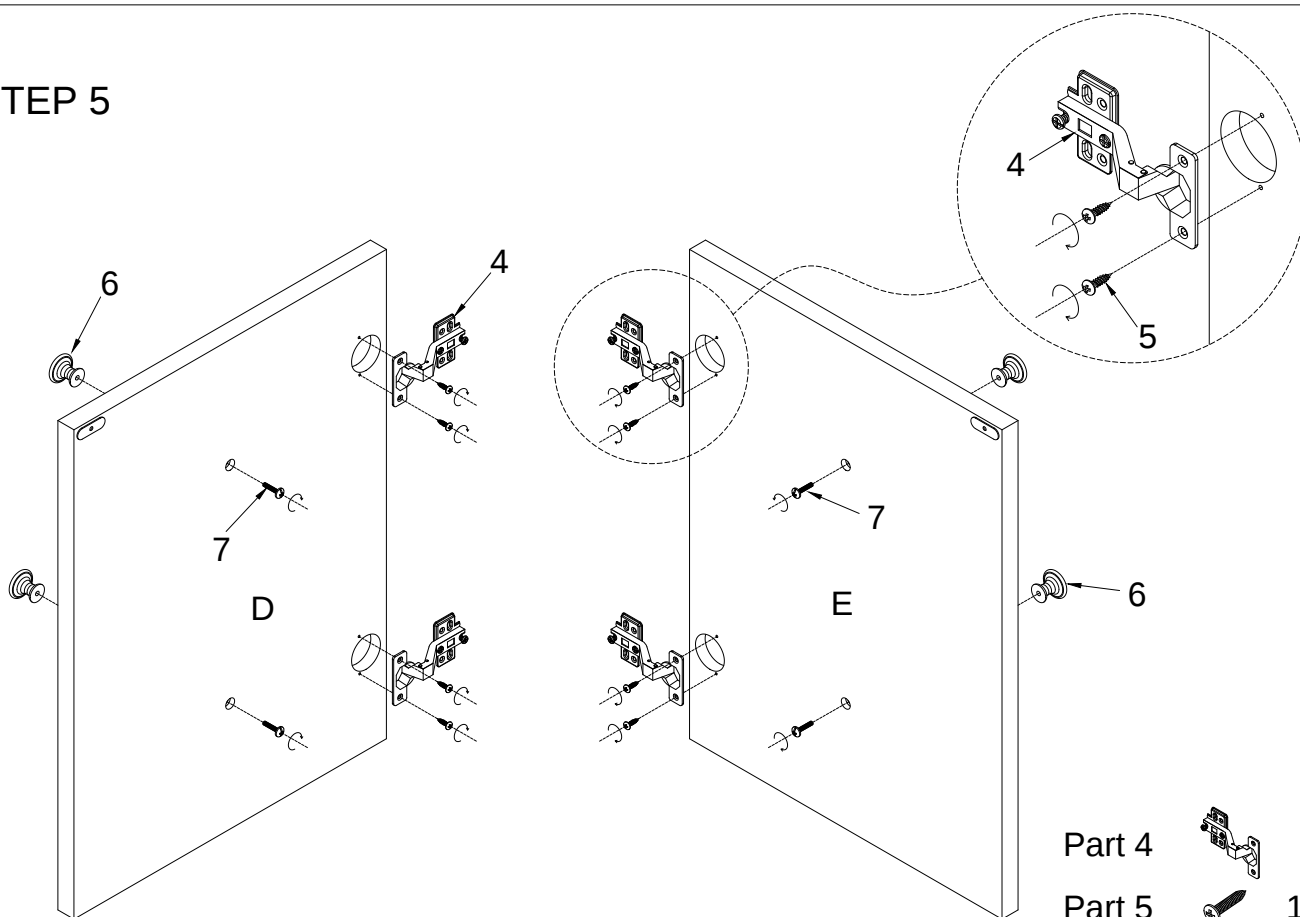


Part 4		8 PCS
Part 5		16 PCS
Part 6		8 PCS
Part 7		8 PCS

STEP 6

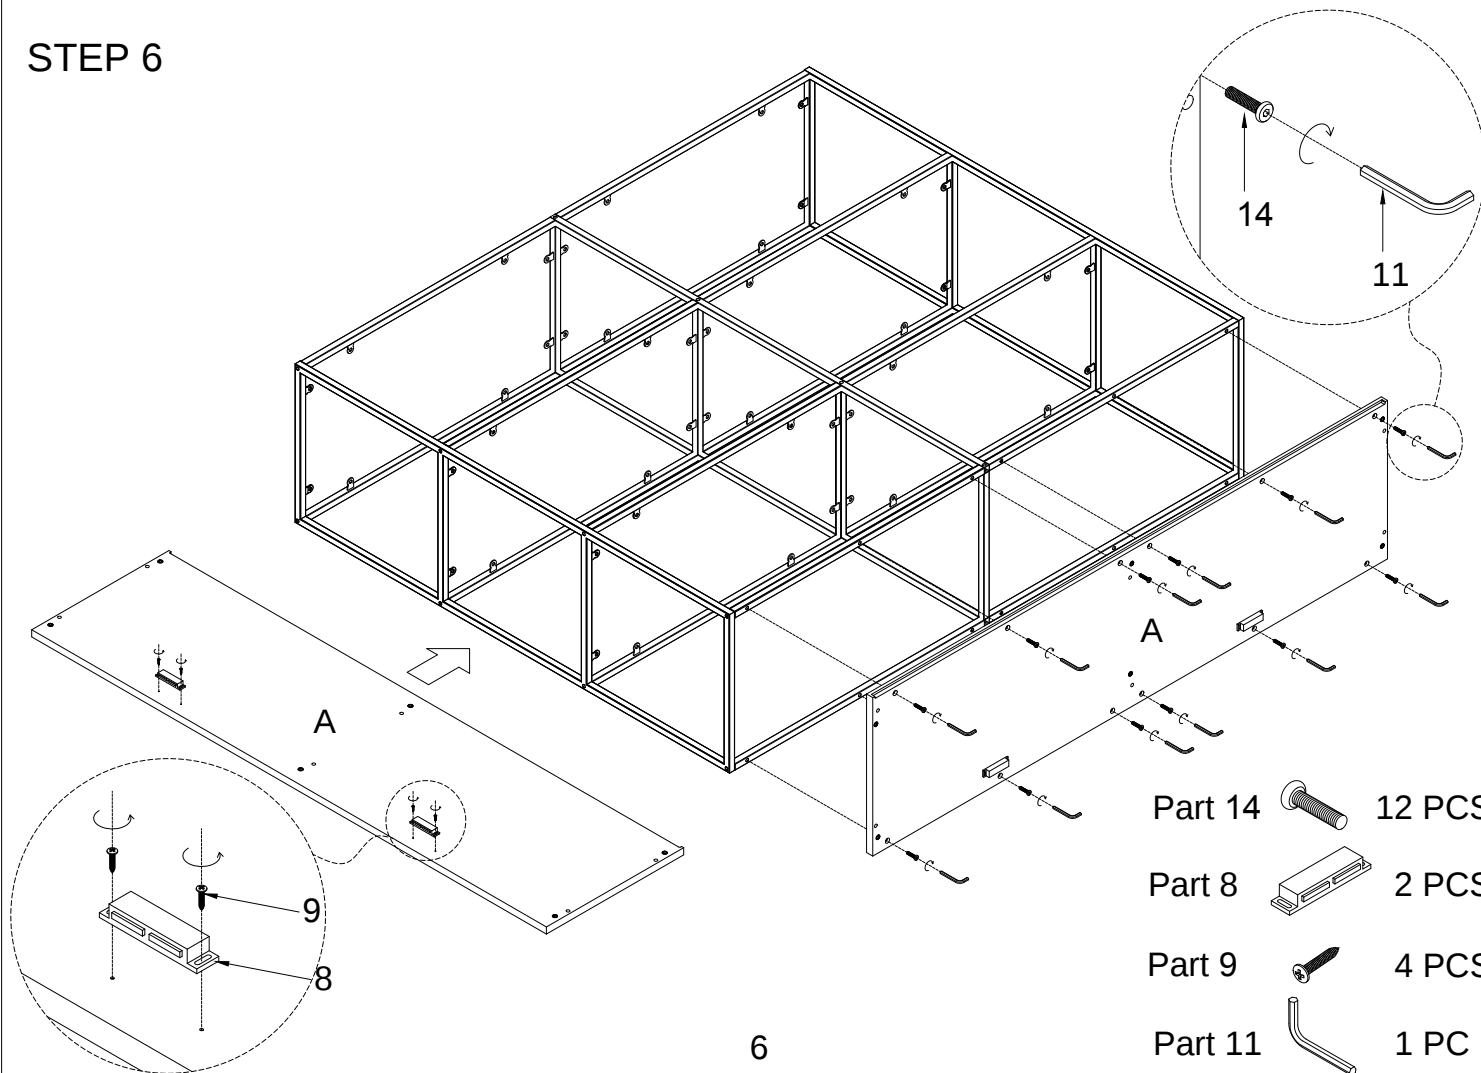


Part 14		12 PCS
Part 8		2 PCS
Part 9		4 PCS
Part 11		1 PC

STEP 7

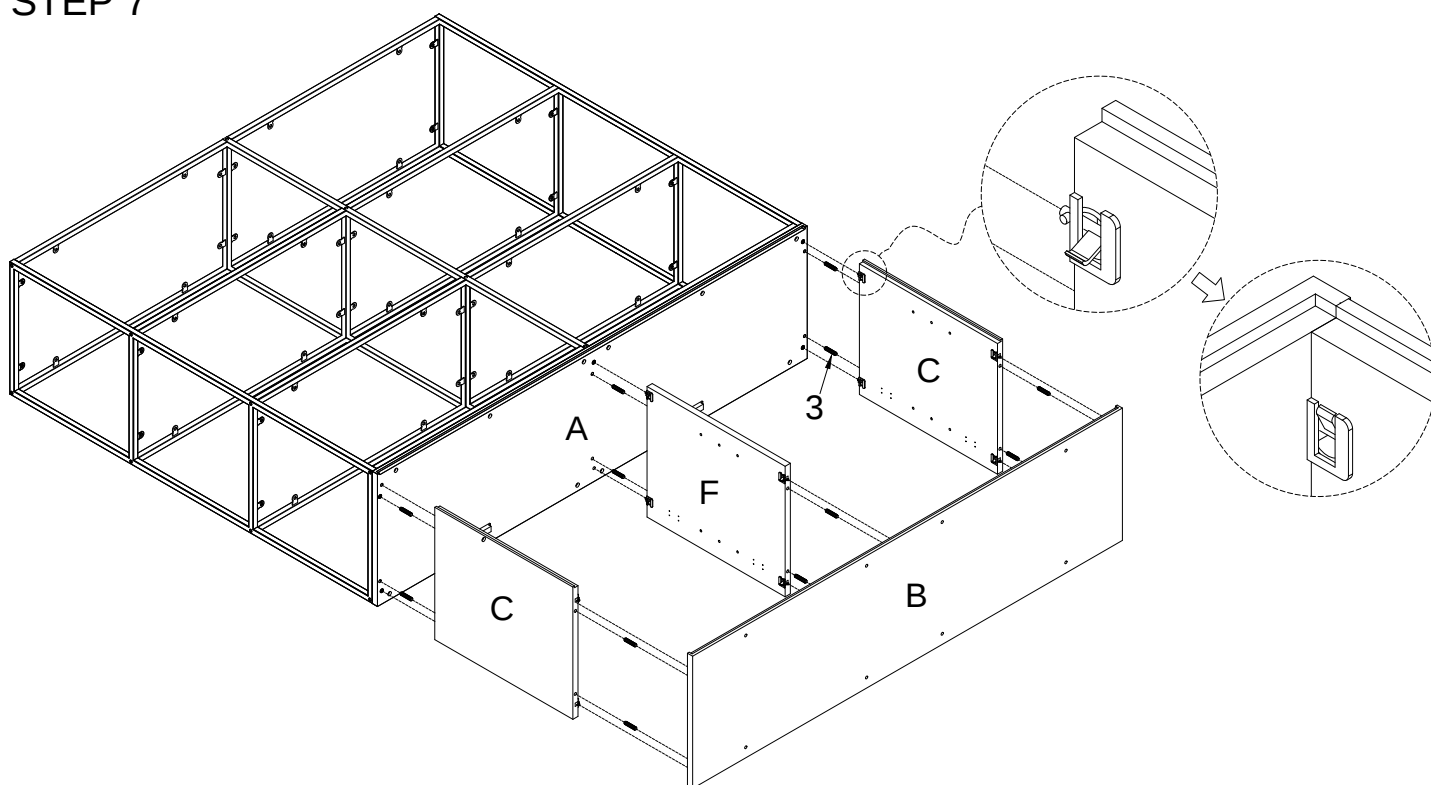

Part 3  12 PCS



STEP 8

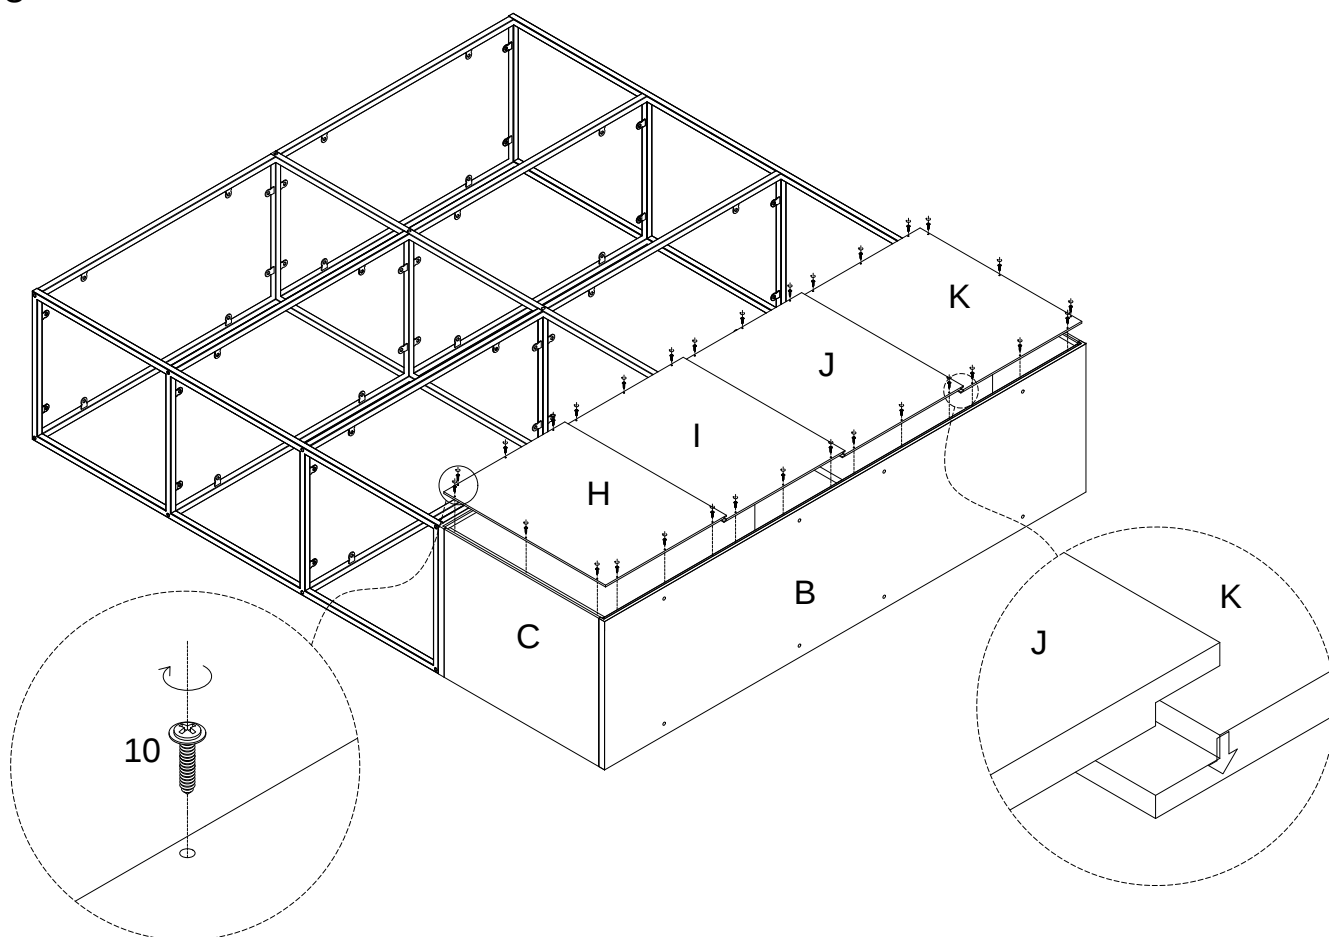

10





Part 10  30 PCS

STEP 9

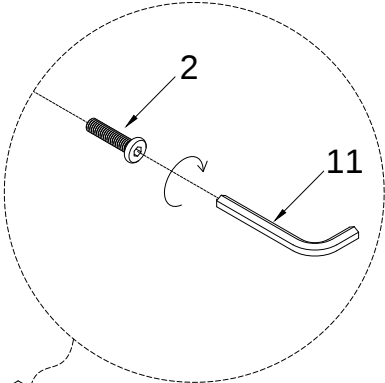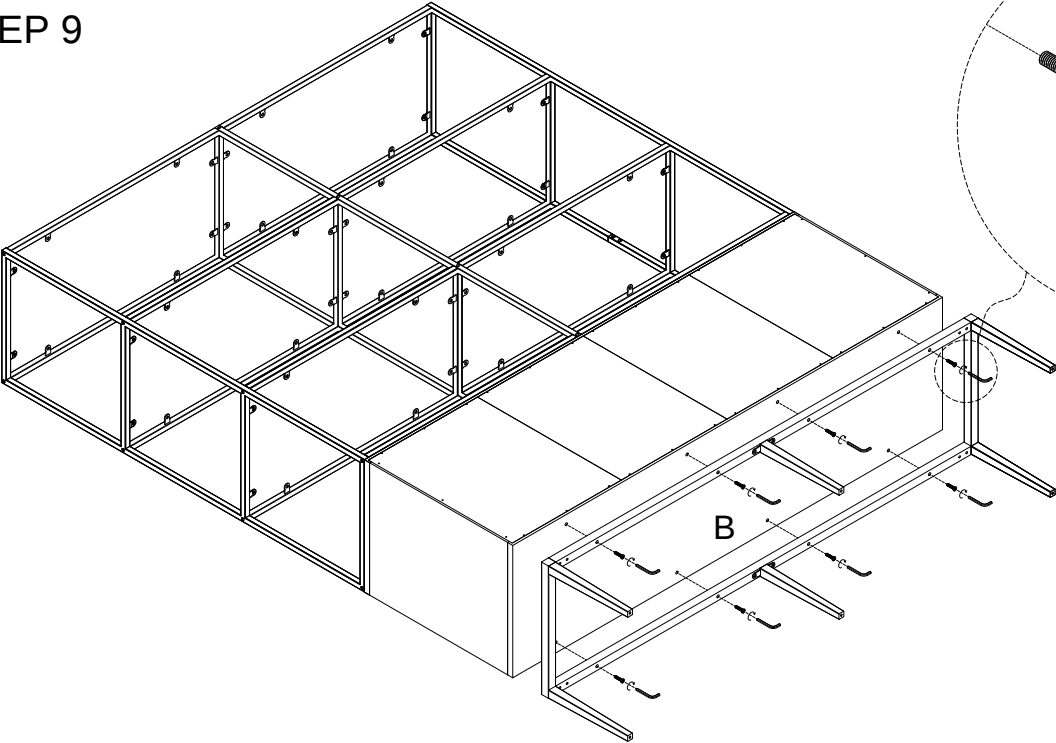

- Part 2  8 PCS
- Part 11  1 PC





STEP 10

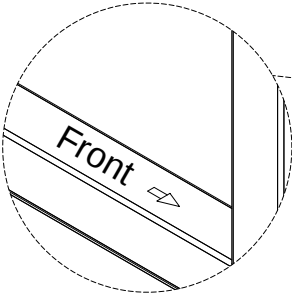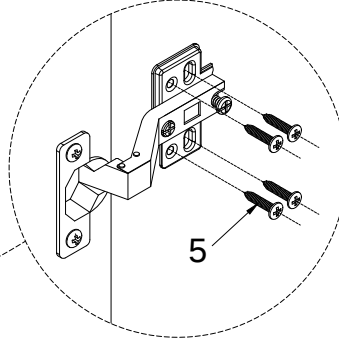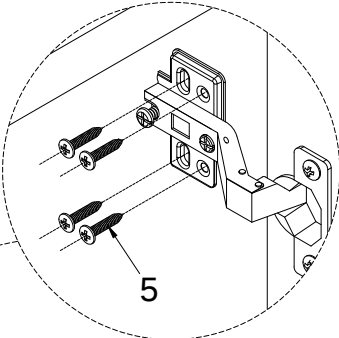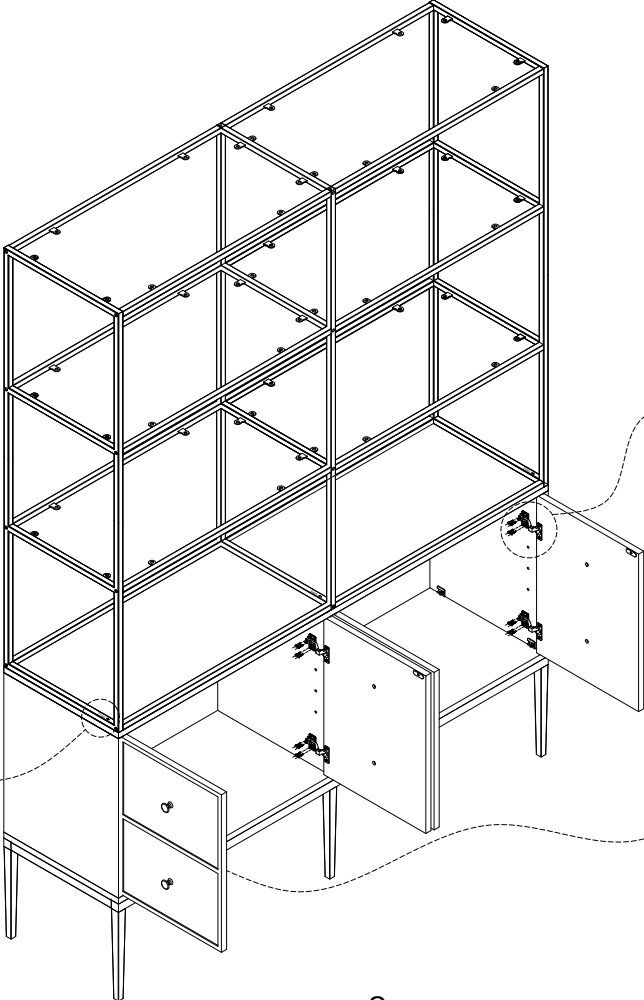

8

- Part 5  32 PCS


STEP 11

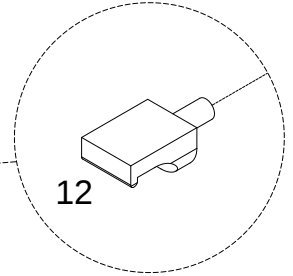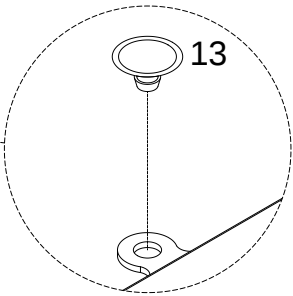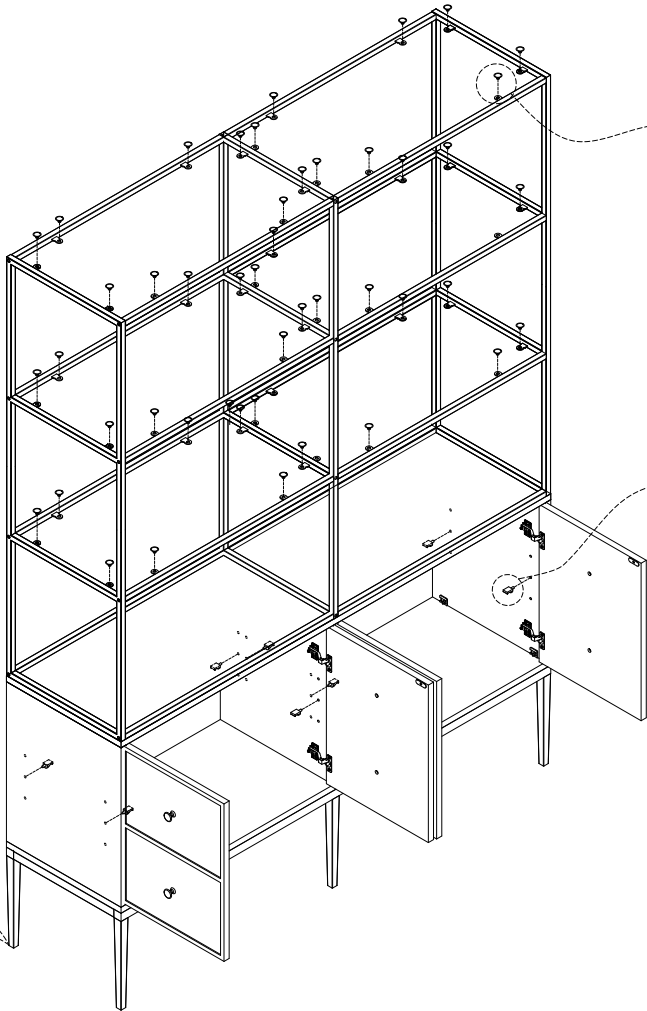
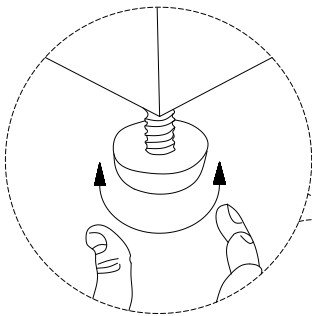


Part 12  8 PCS

Part 13  48 PCS

STEP 12

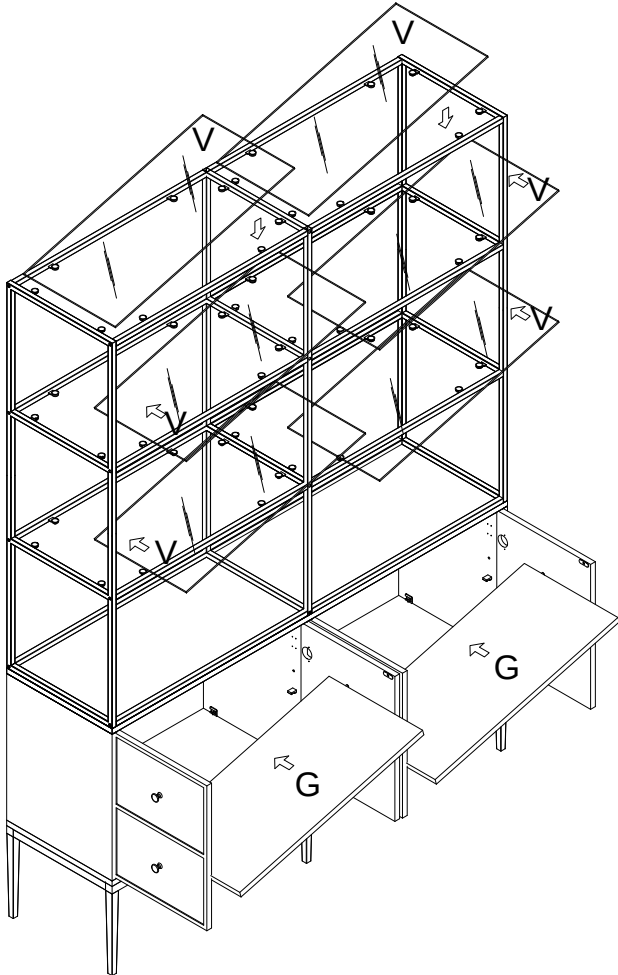



#A	#B	#C	#D	#E
				
1-1/2"xØ4xD8		5/8"xØ3xD8		
Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 2 PCS

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and then fix them to panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through flat washer (E) and safety wall strap (D) into wall anchor (B) using phillips head screwdriver.


Note: This item is not intended for clothing storage use.

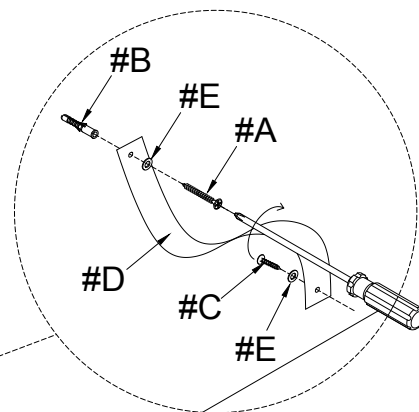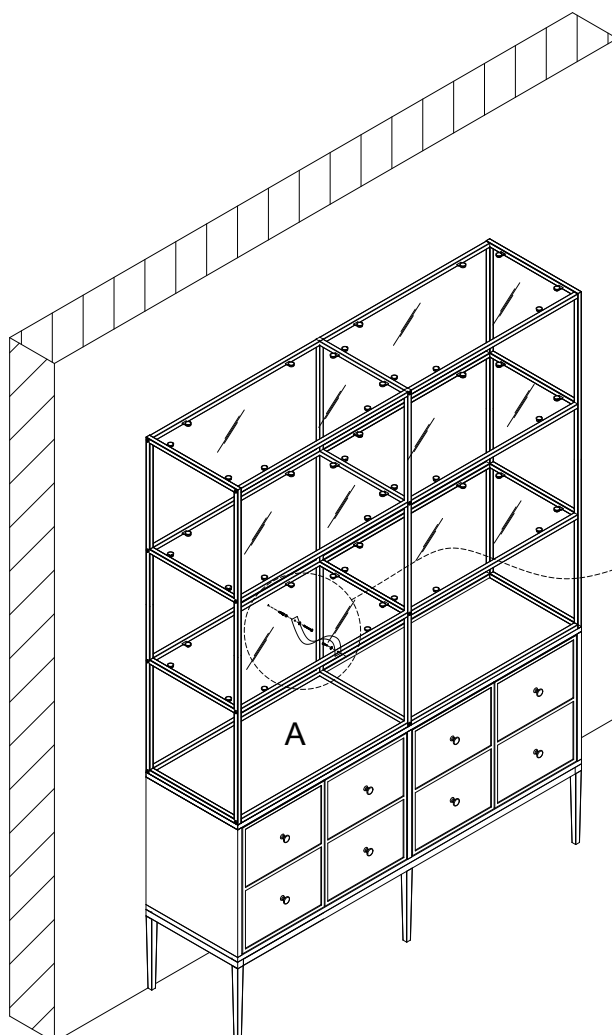

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

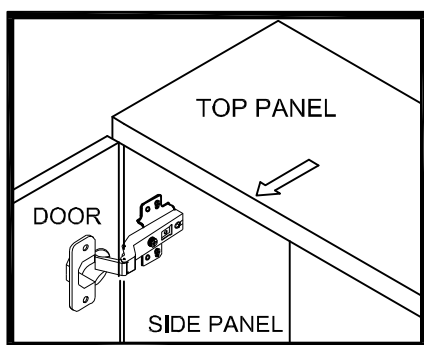


STEP 2

Adjust the gap between door panel and side panel

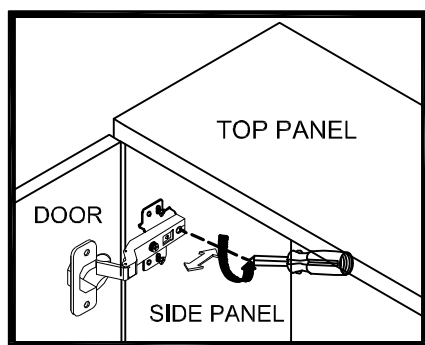


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

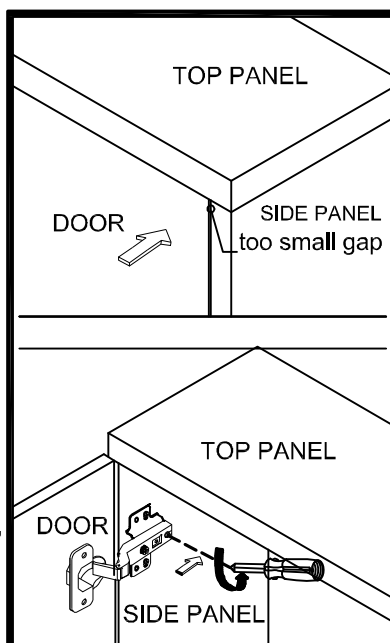

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

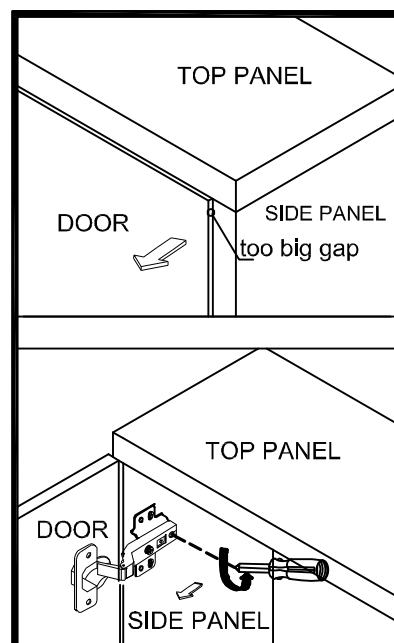

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

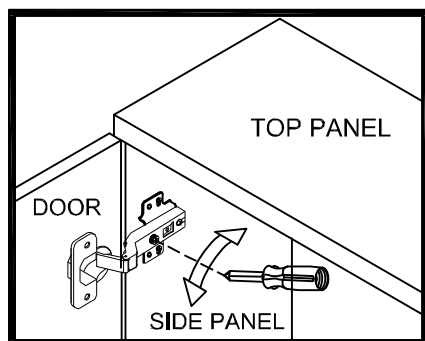


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

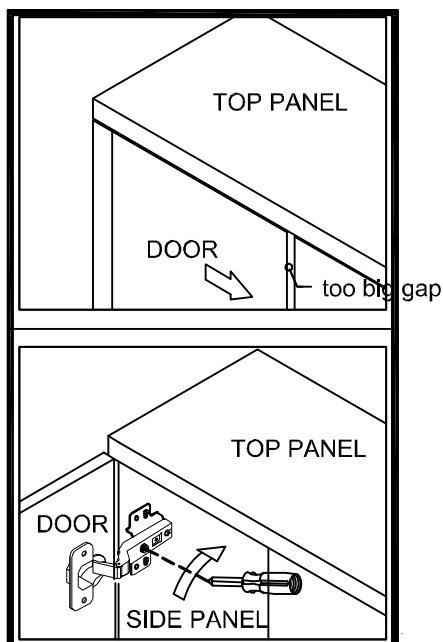

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

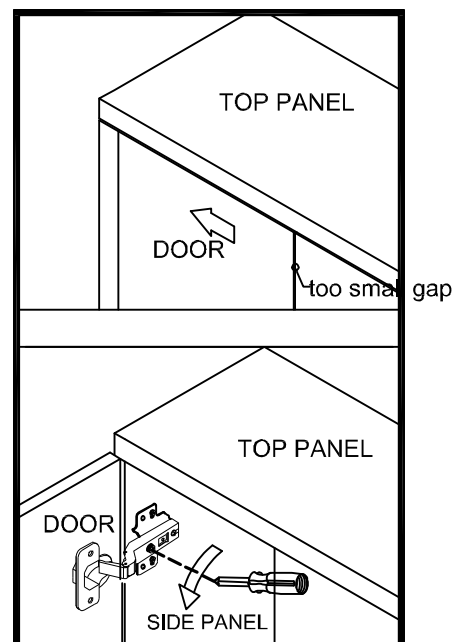

Turn the screw counterclockwise a little as shown to make the gap big.