

ASSEMBLY INSTRUCTIONS

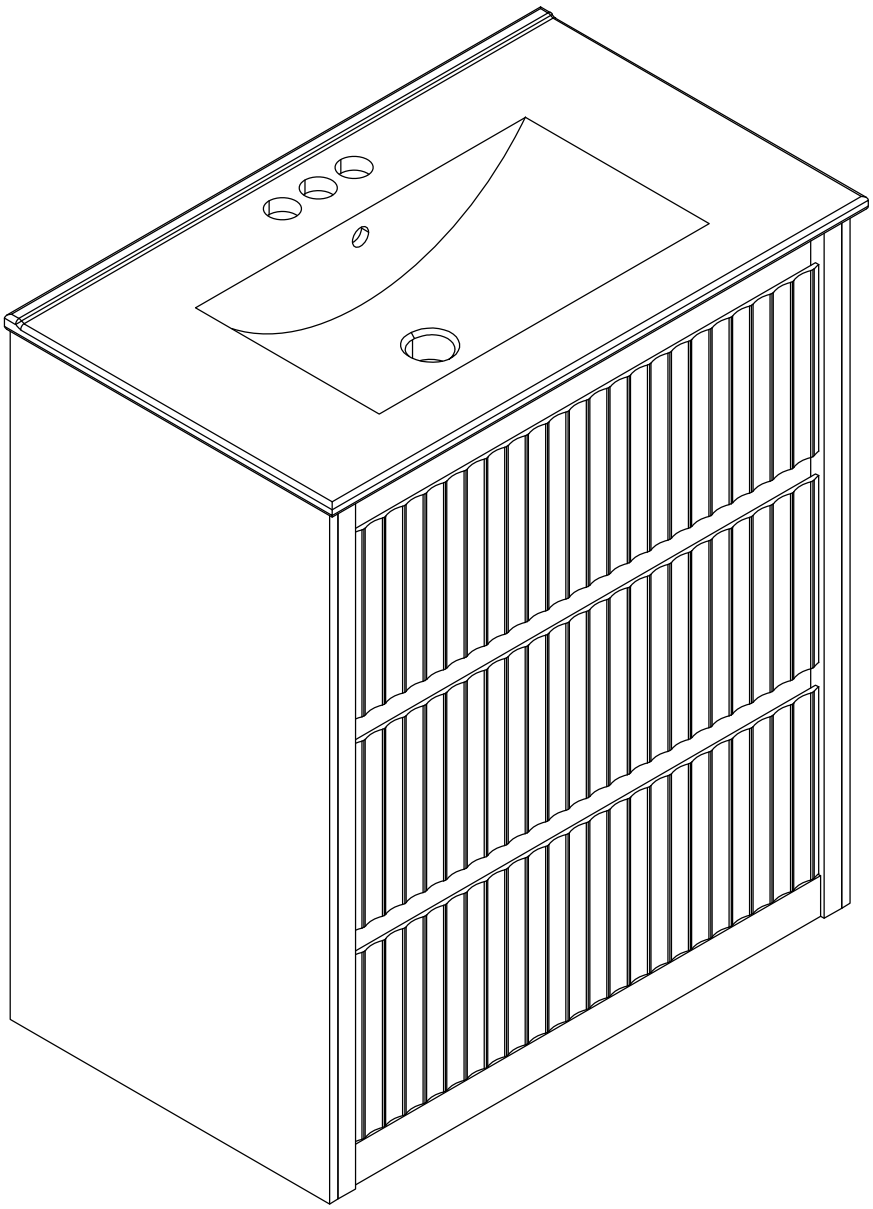


WARNING !

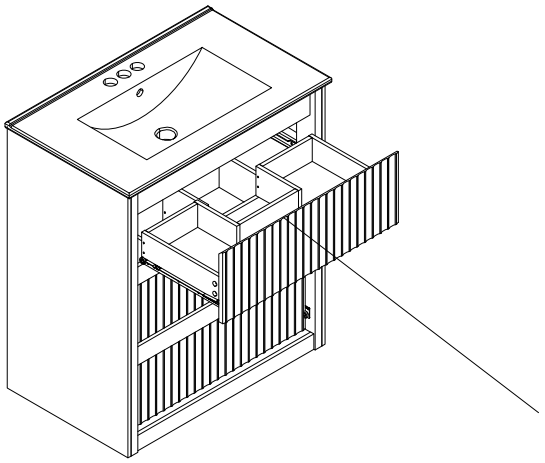


MAXIMUM LOAD
20 lb/ 9.1kg

Estimated Time for Assembly

60 mins

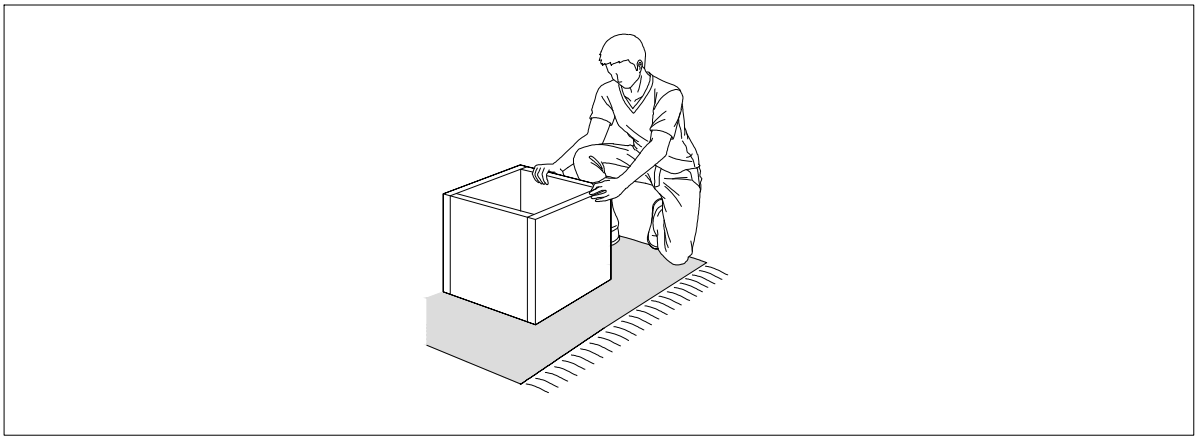

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

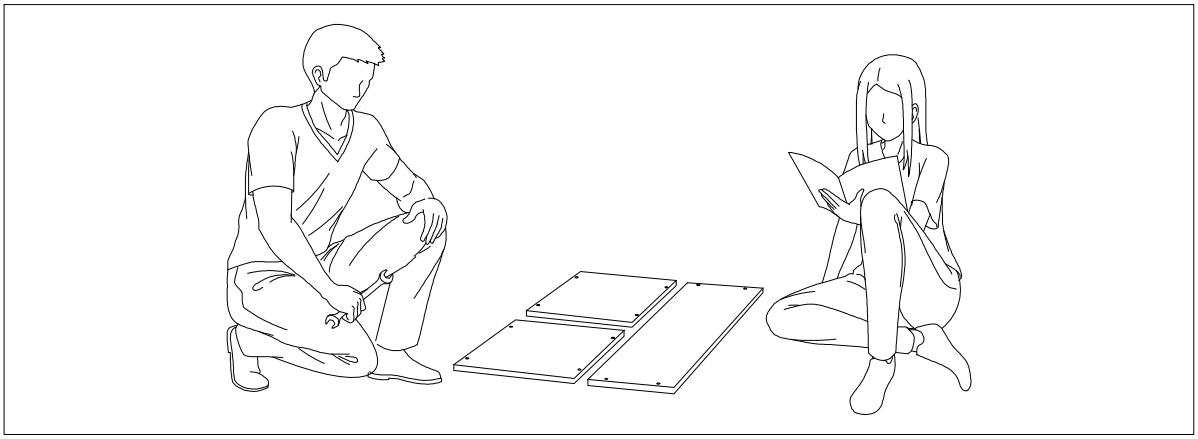


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

























Board Identification

Not actual size

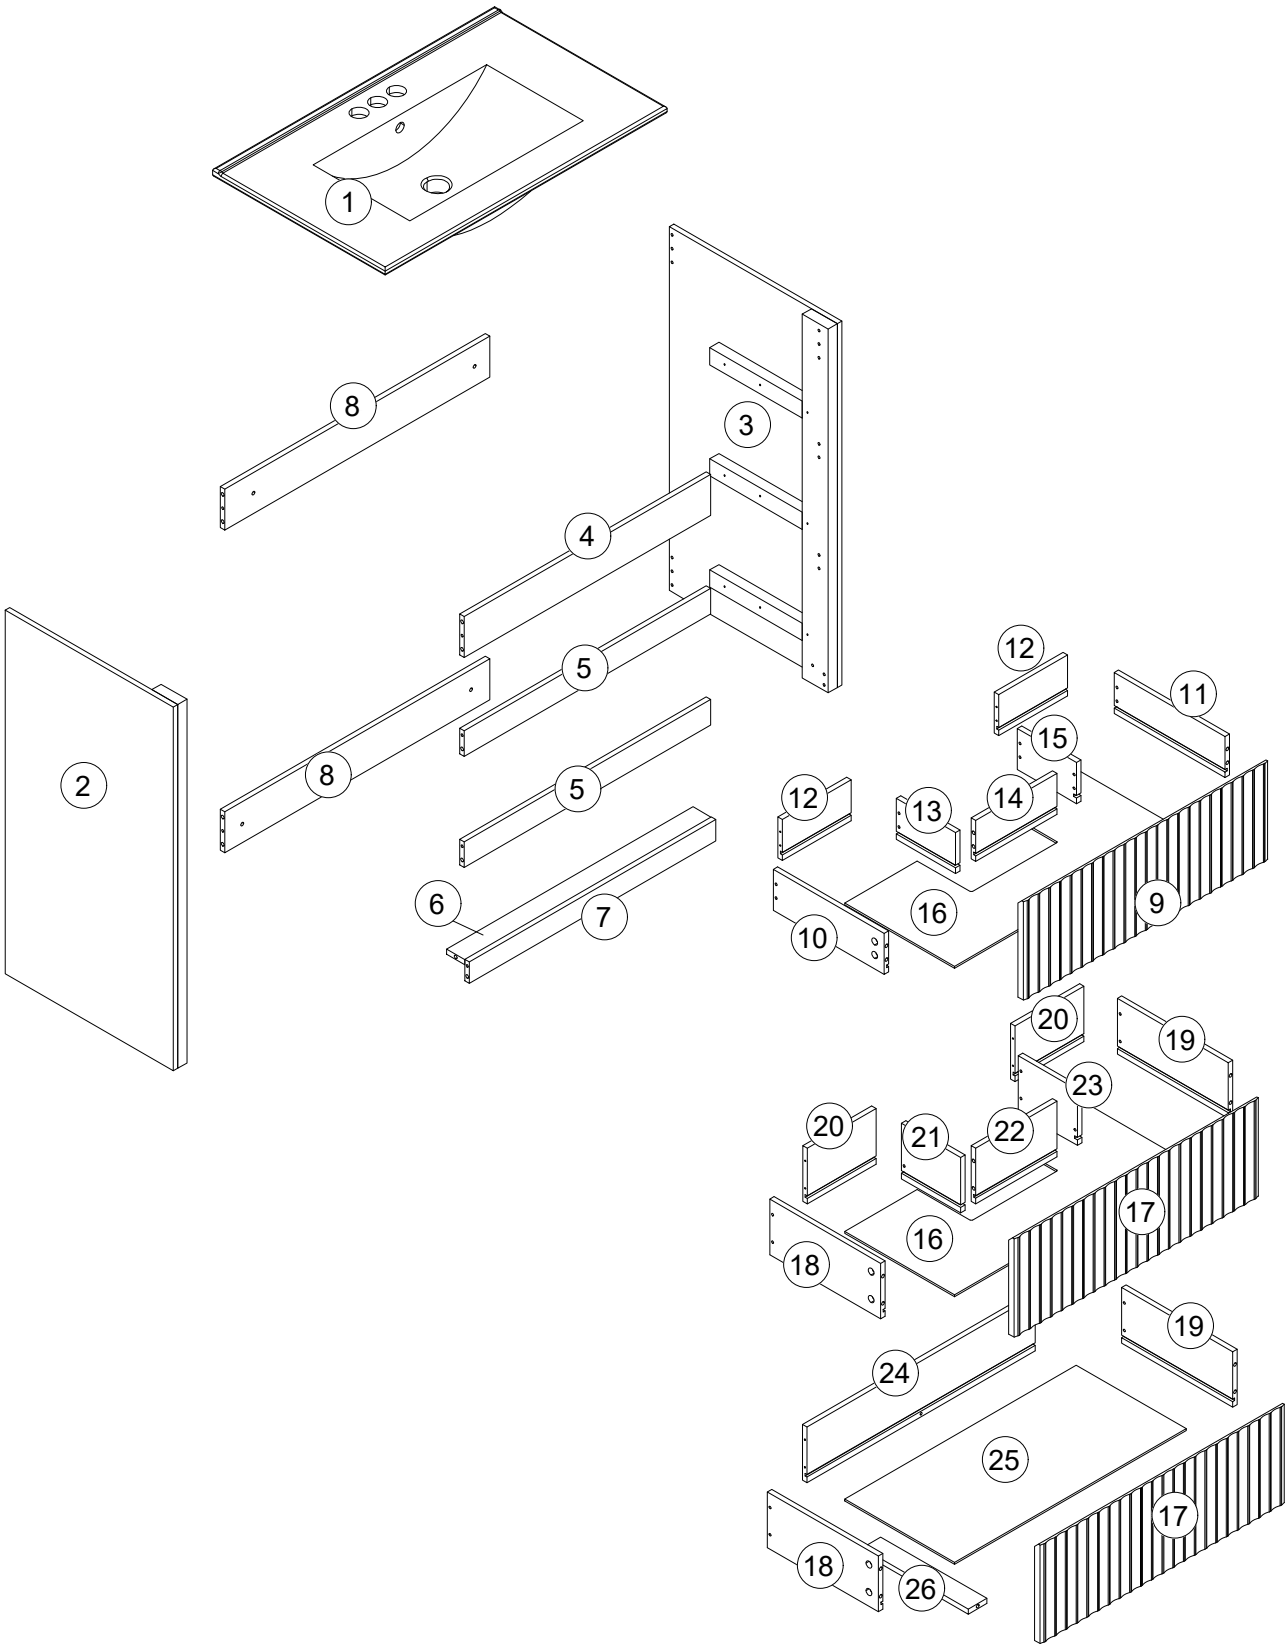



BOARD IDENTIFICATION


Not actual size

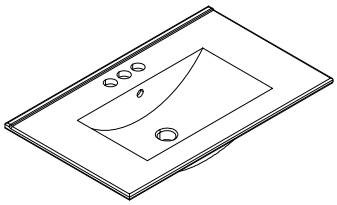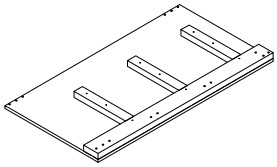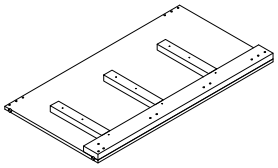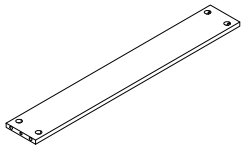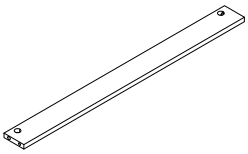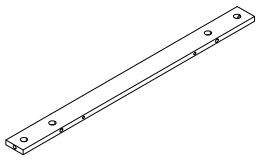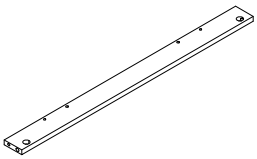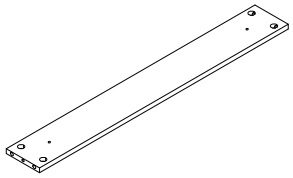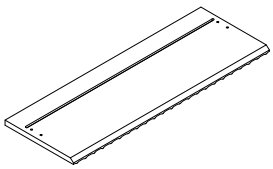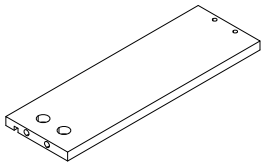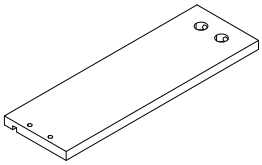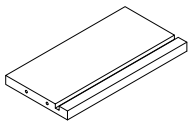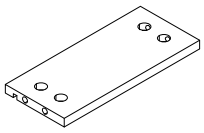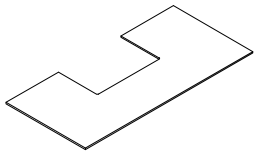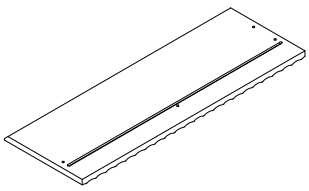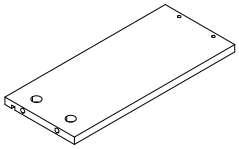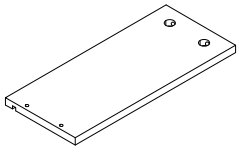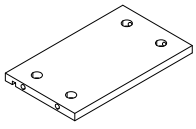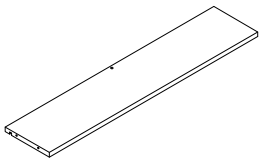			
① x1	② x1	③ x1	④ x1
			
⑤ x2	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1	⑩ x1	⑪ x1	⑫ x2
			
⑬ x1	⑭ x1	⑮ x1	⑯ x2
			
⑰ x2	⑱ x2	⑲ x2	⑳ x2
			
㉑ x1	㉒ x1	㉓ x1	㉔ x1

BOARD IDENTIFICATION

Not actual size

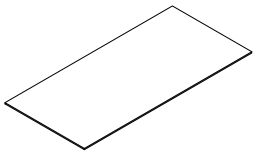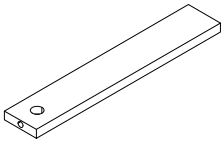
	
25 x1	26 x1



Ø6x33.5mm	
A	x43+4




Ø15x9.5mm	
B	x43+4



Ø6x30mm	
C	x14+1



Ø4x38mm	
D	x21+2




Ø3.5x12mm	
E	x36+3




F	x1




Ø4x45mm	
G	x2




H	x8+1




Ø6x30mm	
I	x2

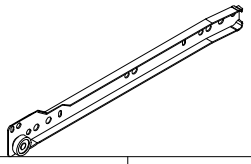


CL	x3

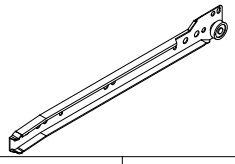

CR	x3

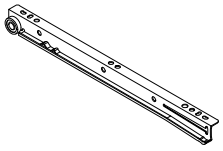

DL	x3

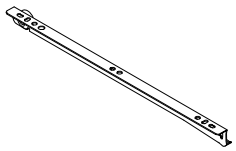


DR	x3


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

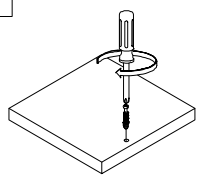

2

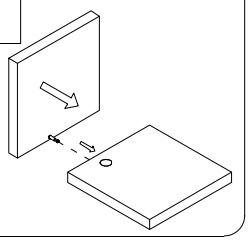


3

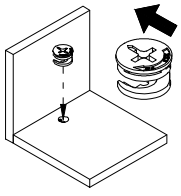


The opening must point toward the edge of the board

4

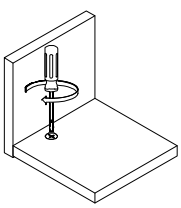

STEP 1

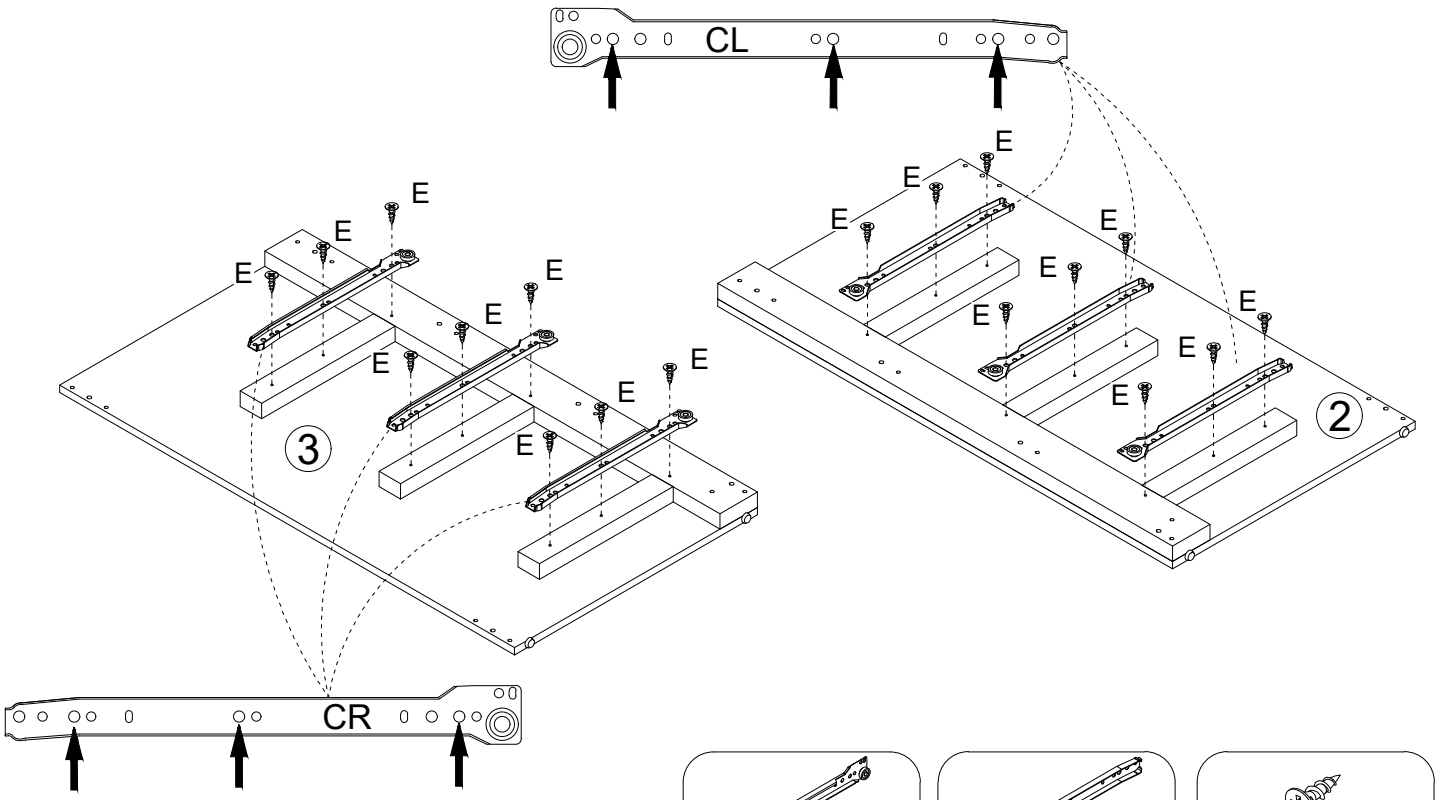



CR	x 3

CL	x 3

Ø3.5x12mm	
E	x 18


STEP 2

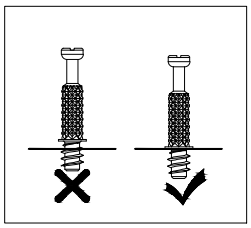


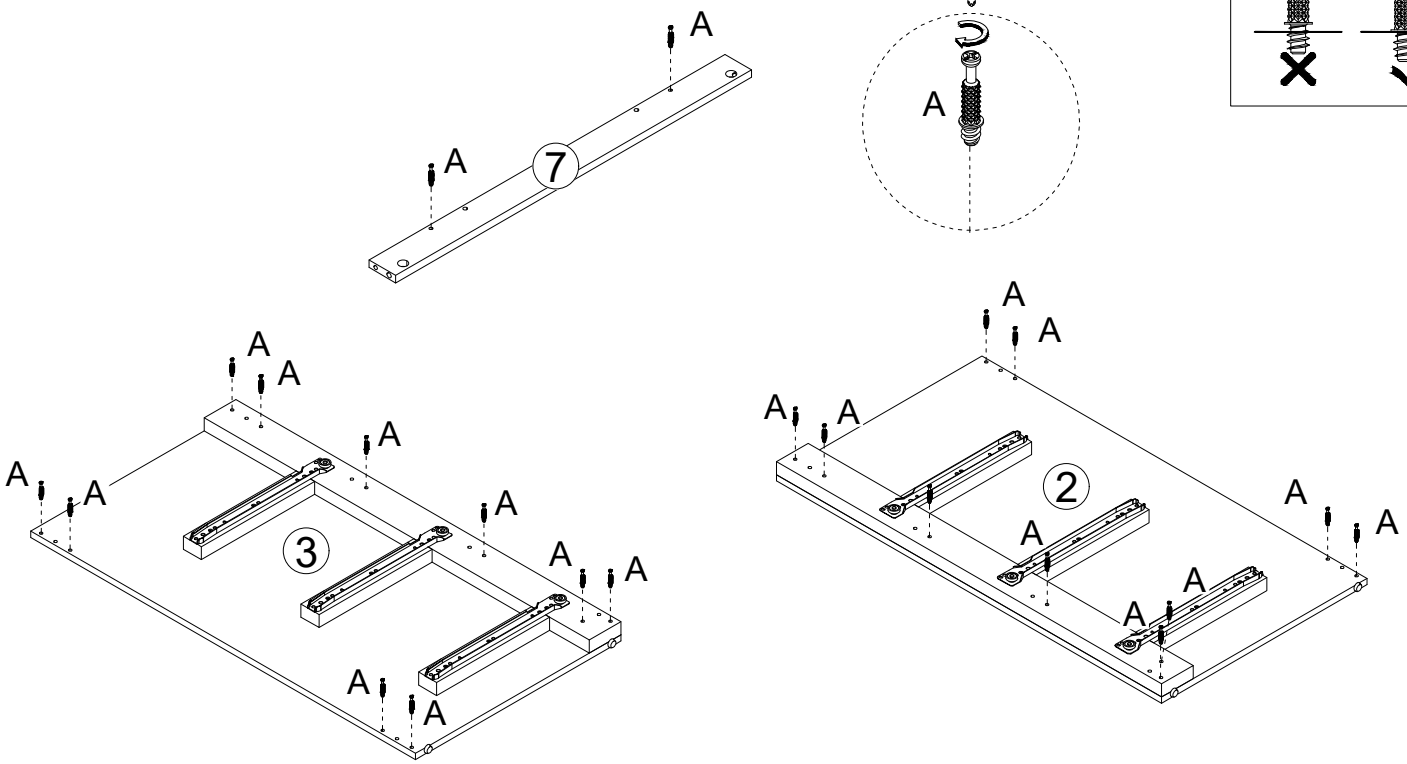

Ø6x33.5mm	
A	x 22

STEP 3

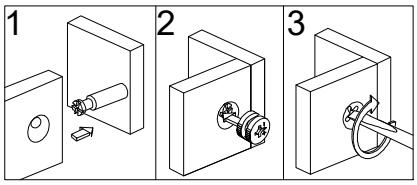


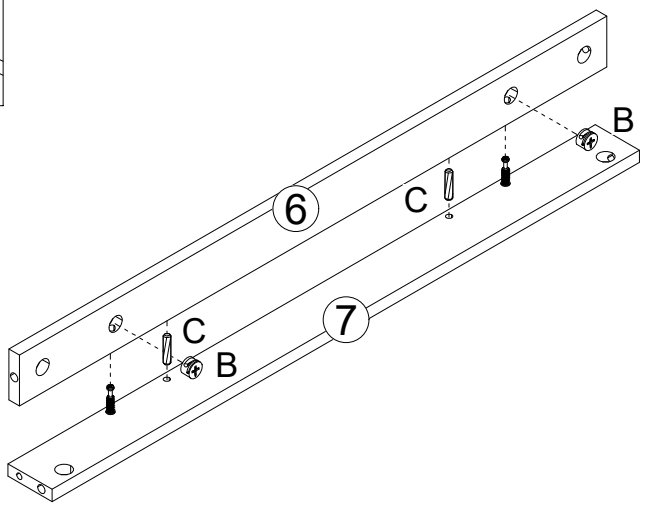


Ø6x30mm	
C	x 2

Ø15x9.5mm	
B	x 2

STEP 4

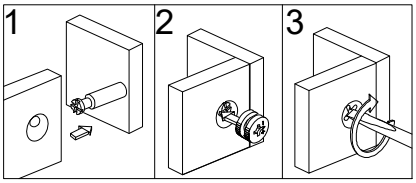


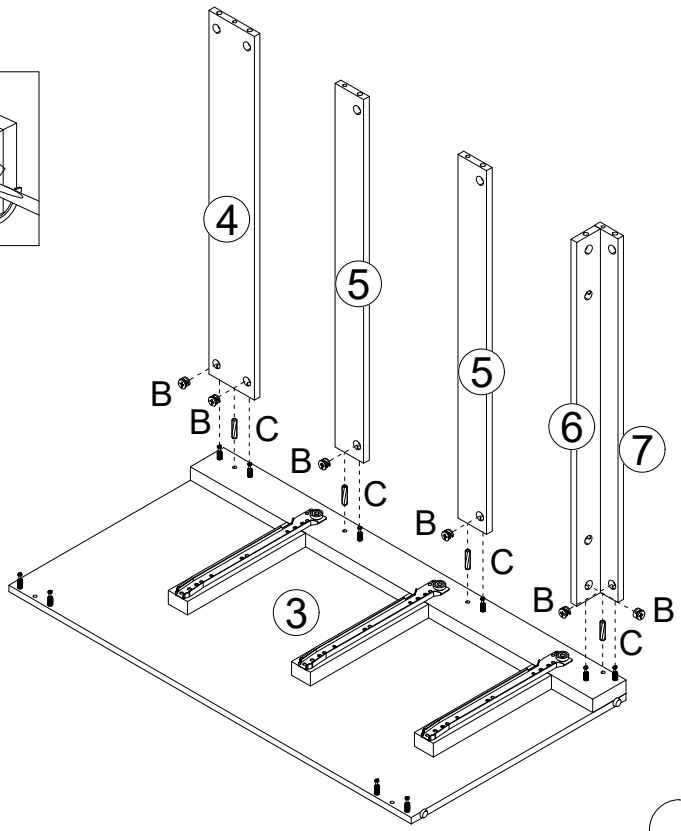



Ø6x30mm	
C	x 4

Ø15x9.5mm	
B	x 6

STEP 5

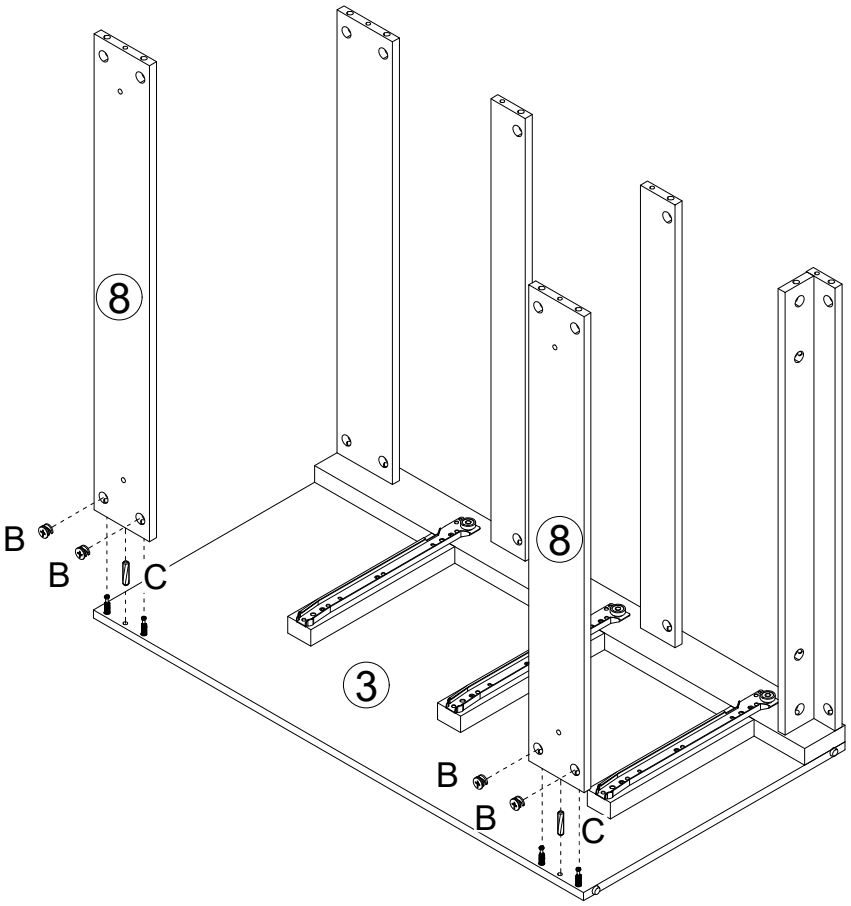

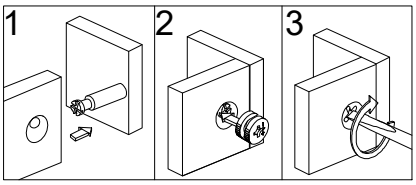





Ø6x30mm	
C	x 2



Ø15x9.5mm	
B	x 4

STEP 6

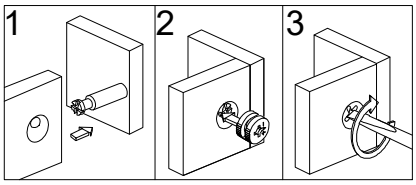

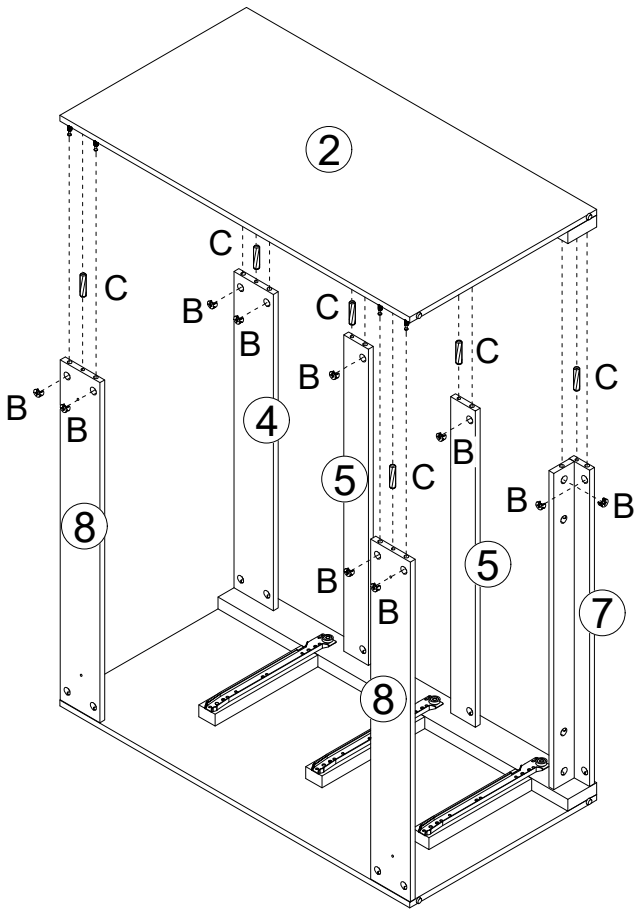





Ø6x30mm	
C	x 6




Ø15x9.5mm	
B	x 10

STEP 7

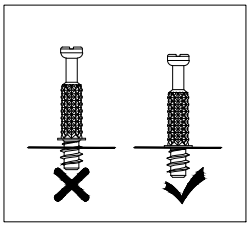

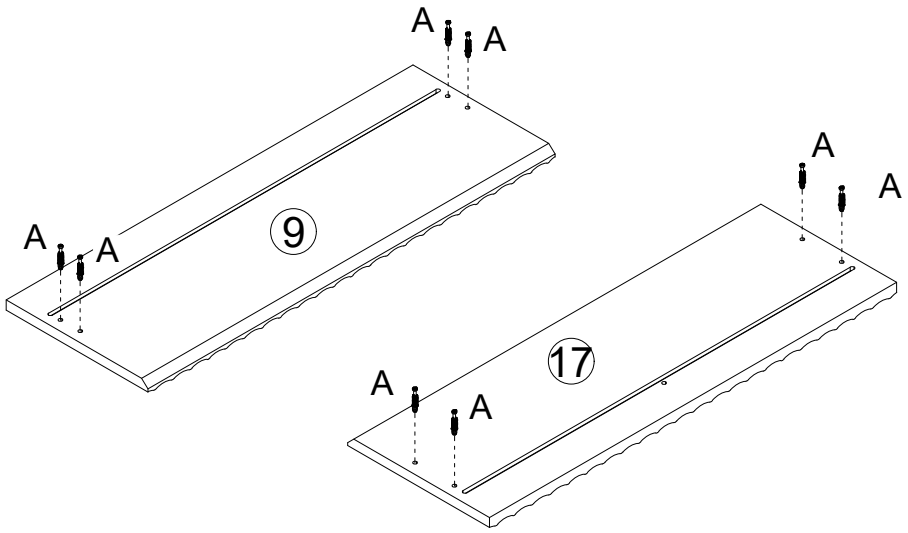






Ø6x33.5mm

A	x 8

STEP 8

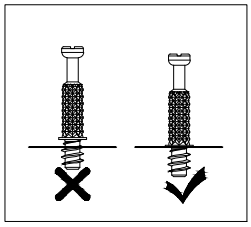

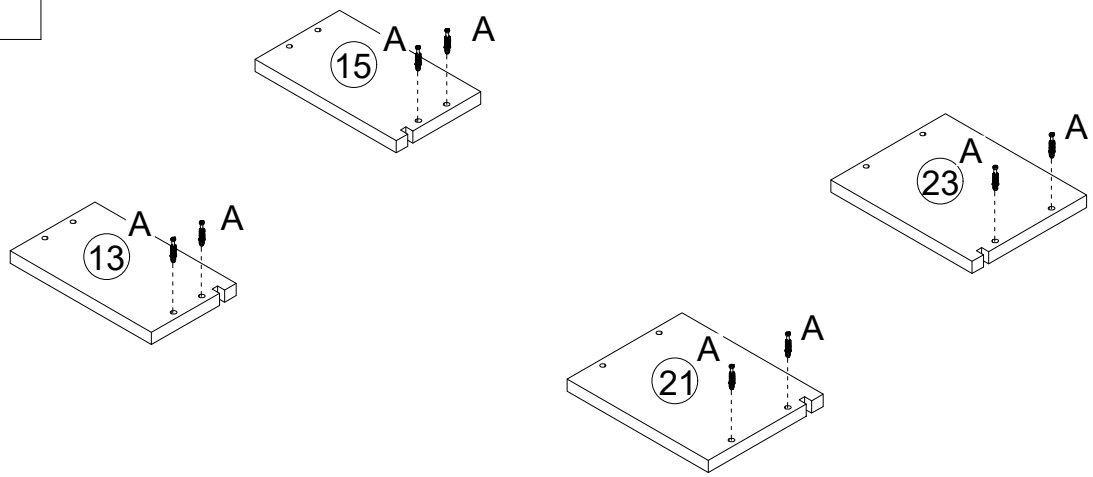





Ø6x33.5mm

A	x 8


STEP 9

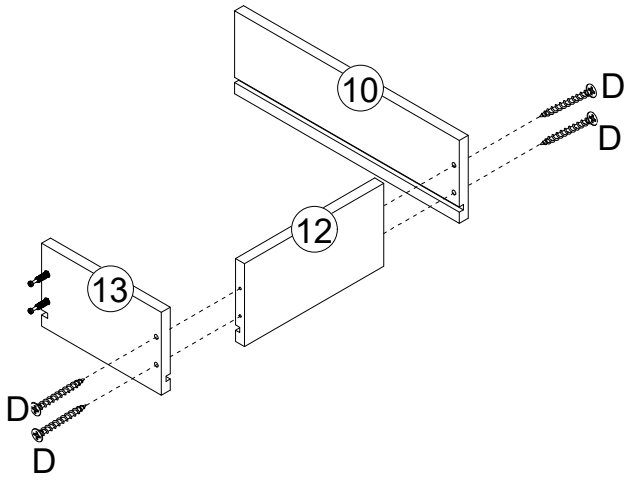


Ø4x38mm

D	x 4


STEP 10

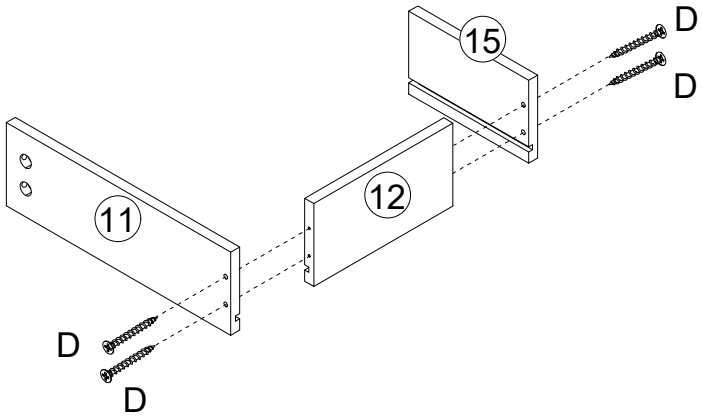




Ø4x38mm

D	x 4


STEP 11

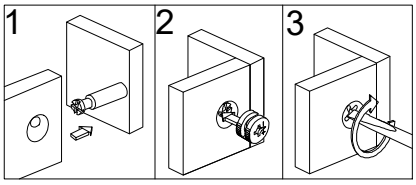

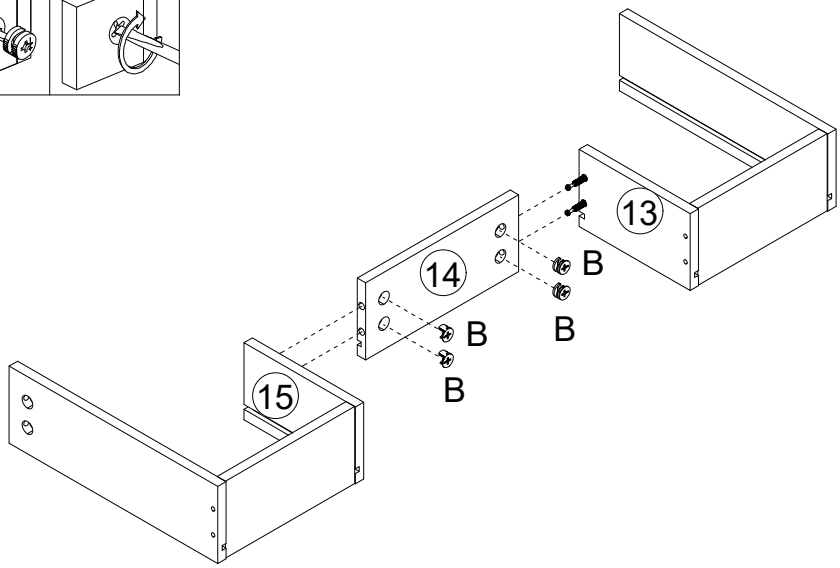


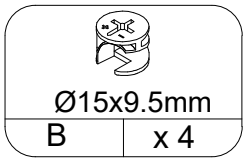



STEP 12

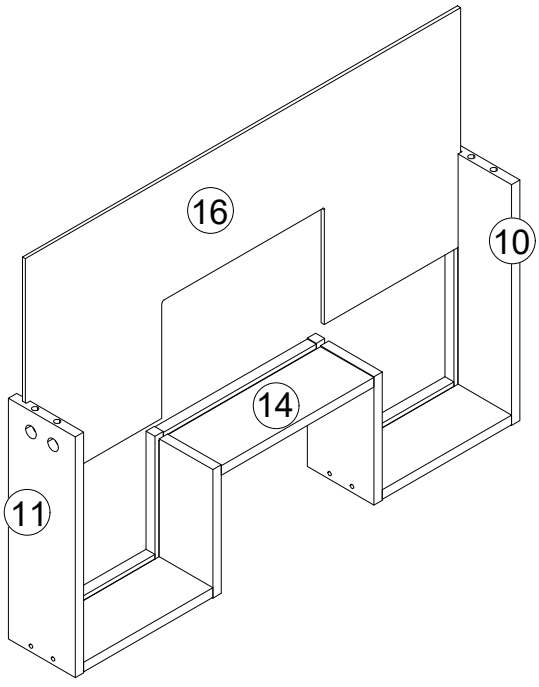


STEP 13

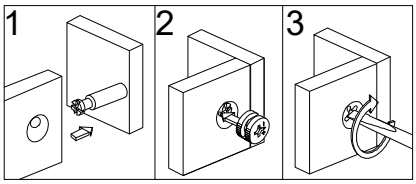

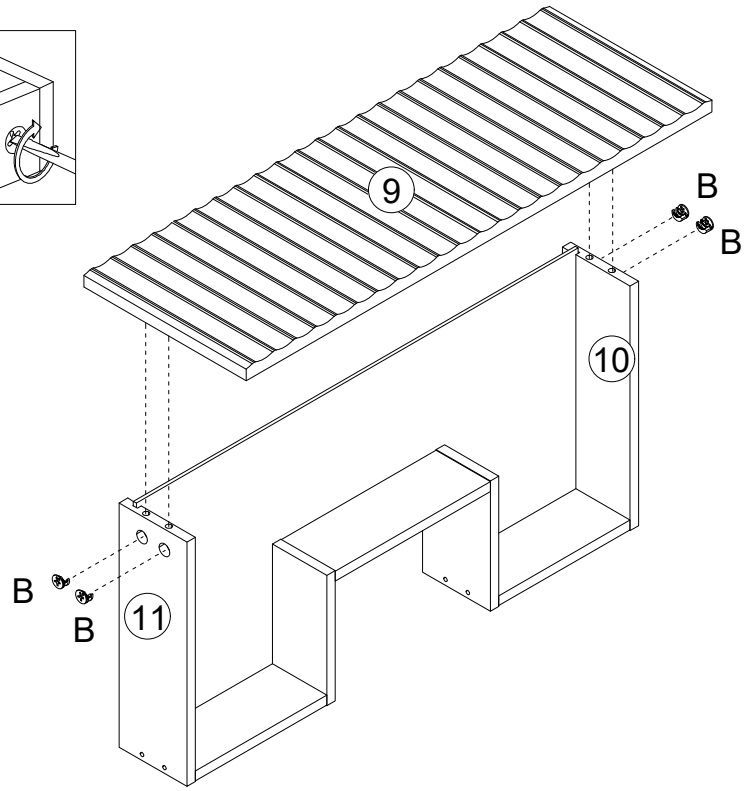


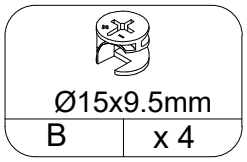


STEP 14

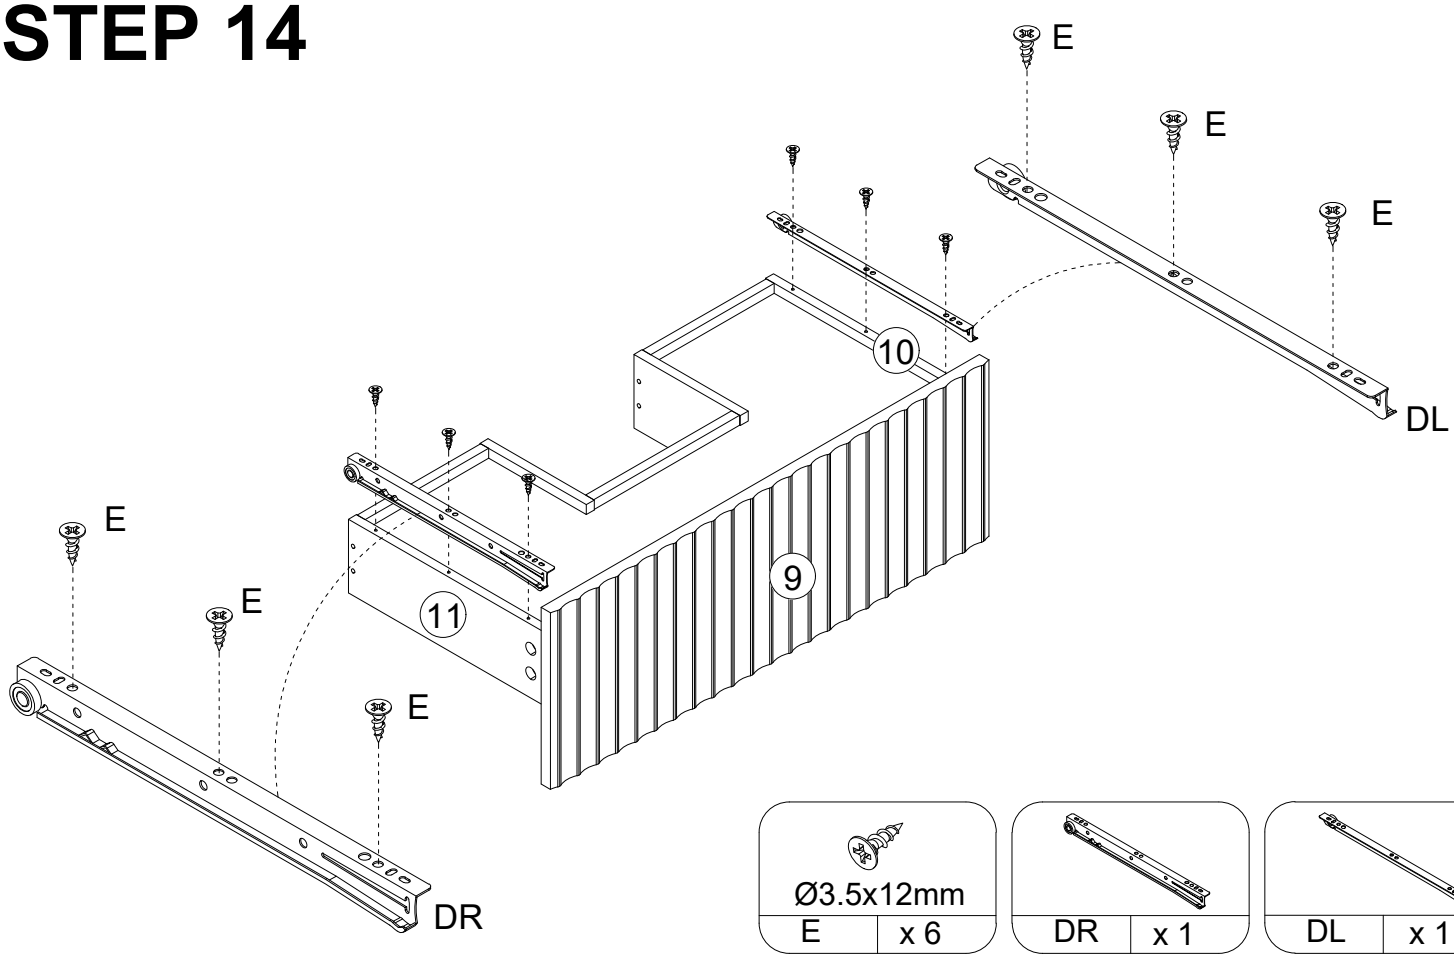


STEP 15

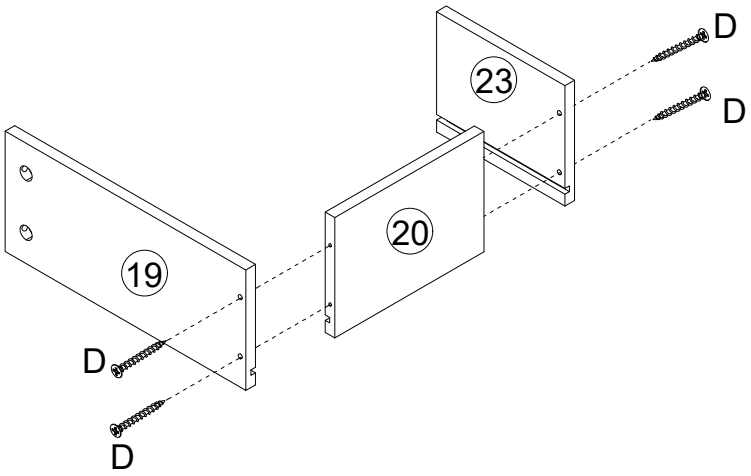


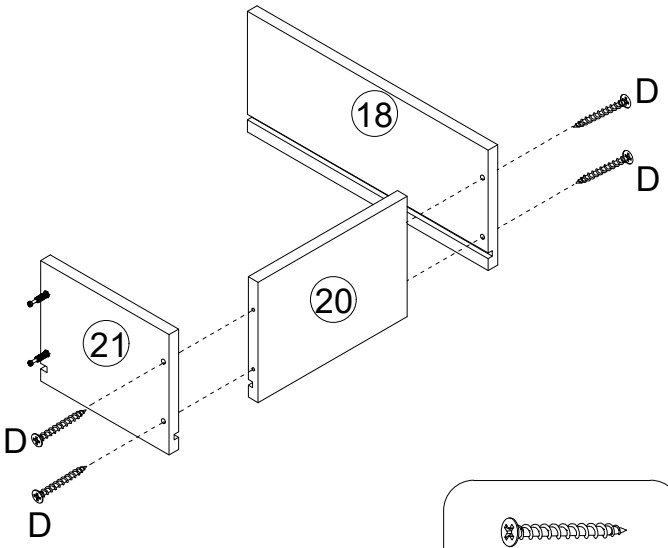

Ø4x38mm	
D	x 8

STEP 16

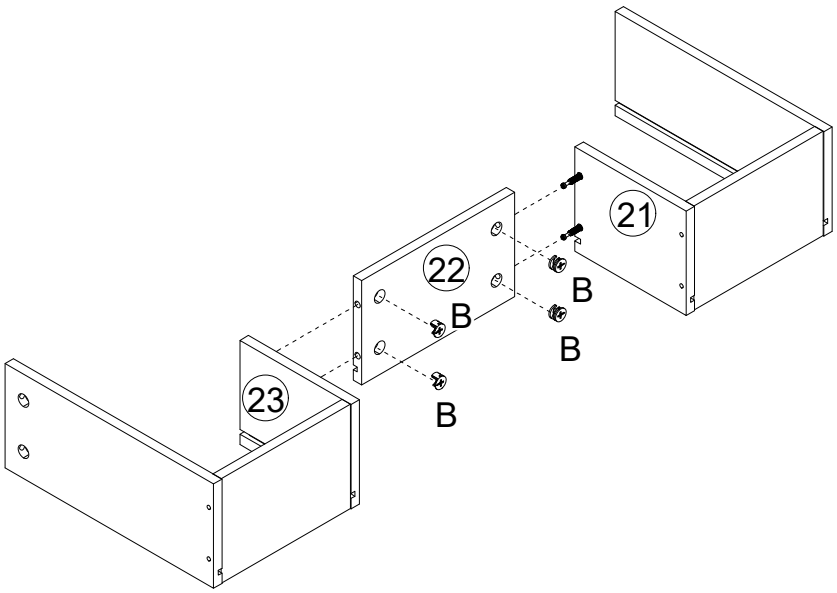


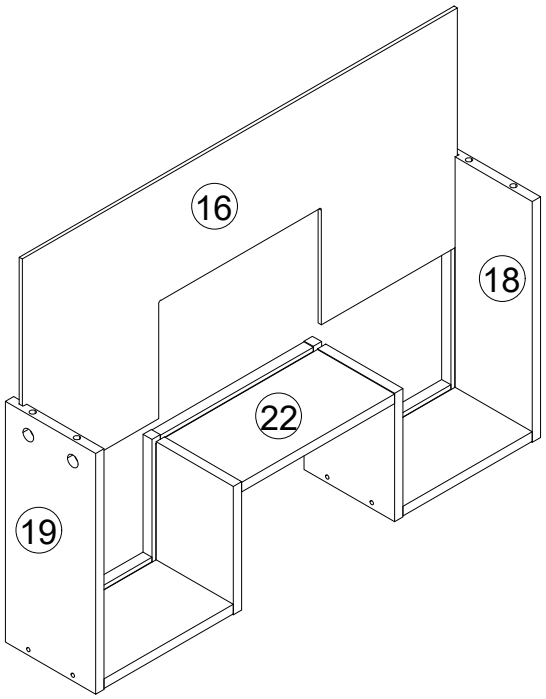





Ø15x9.5mm	
B	x 4


STEP 17

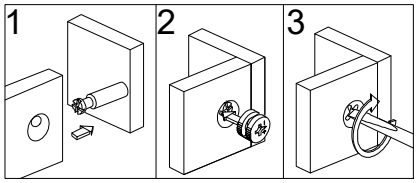

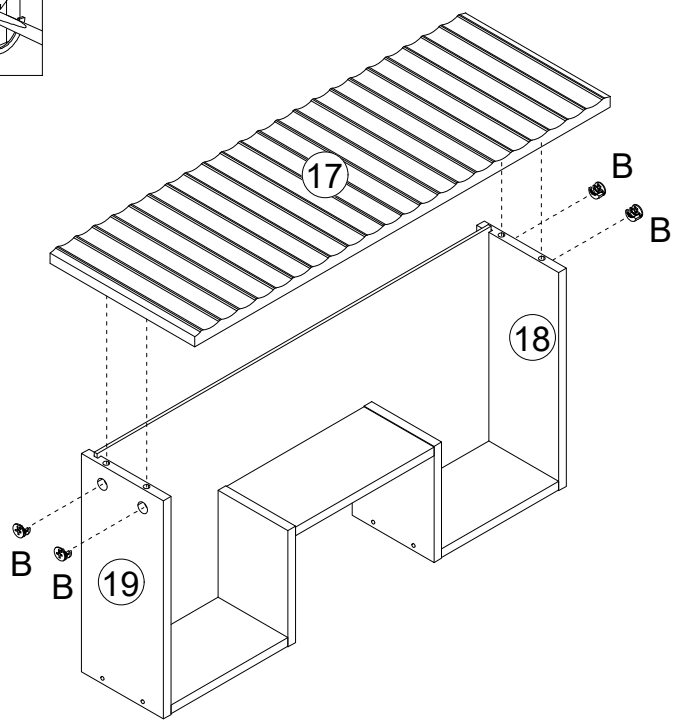


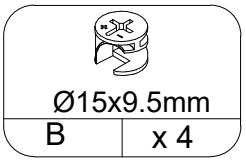


STEP 18

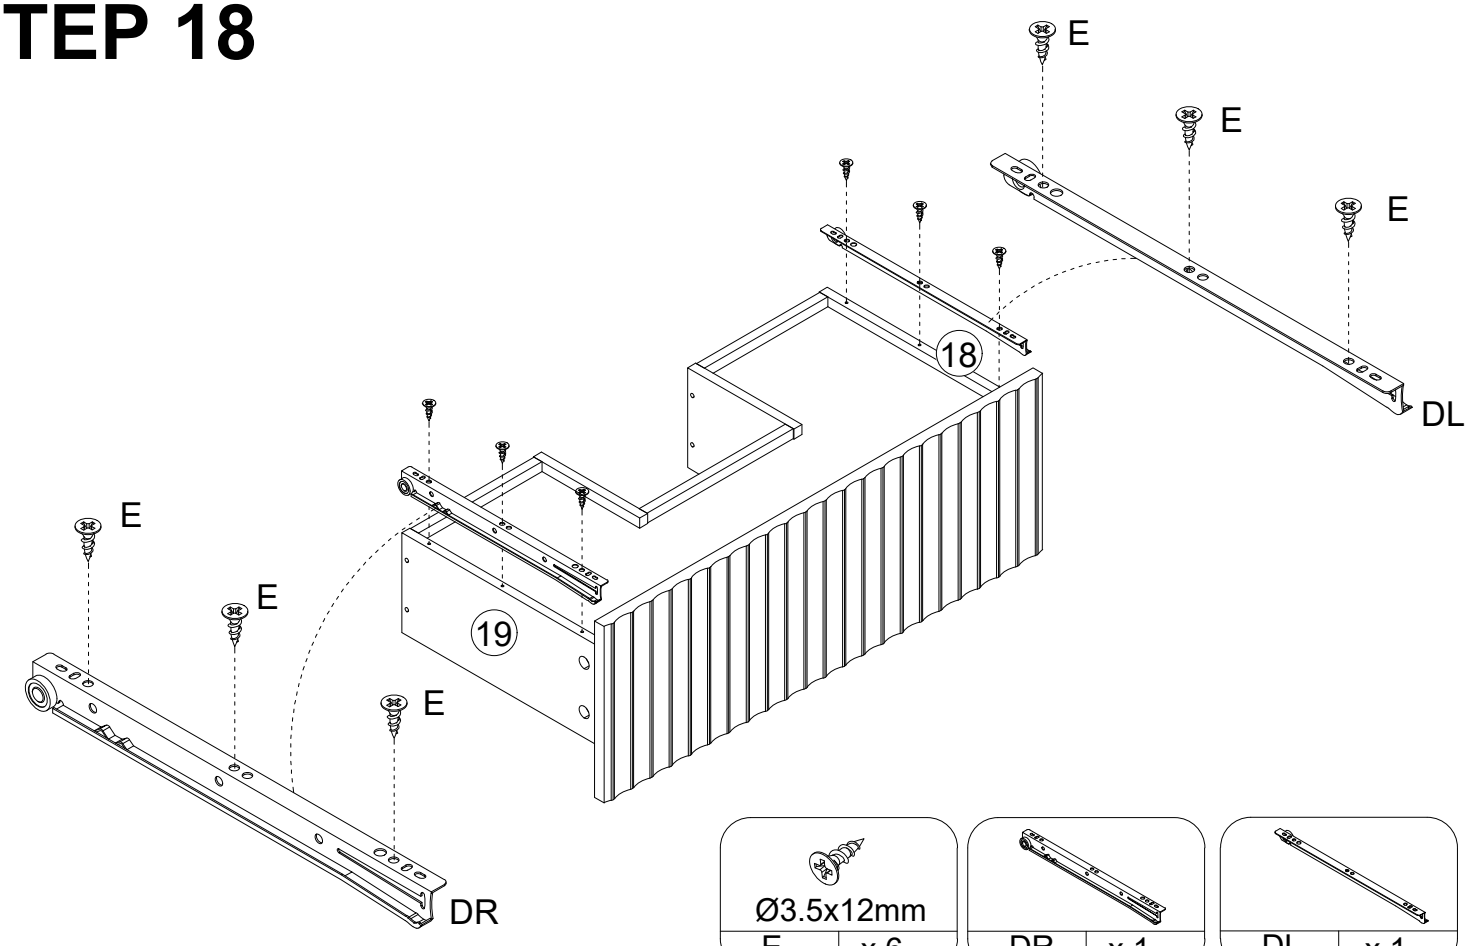



STEP 19

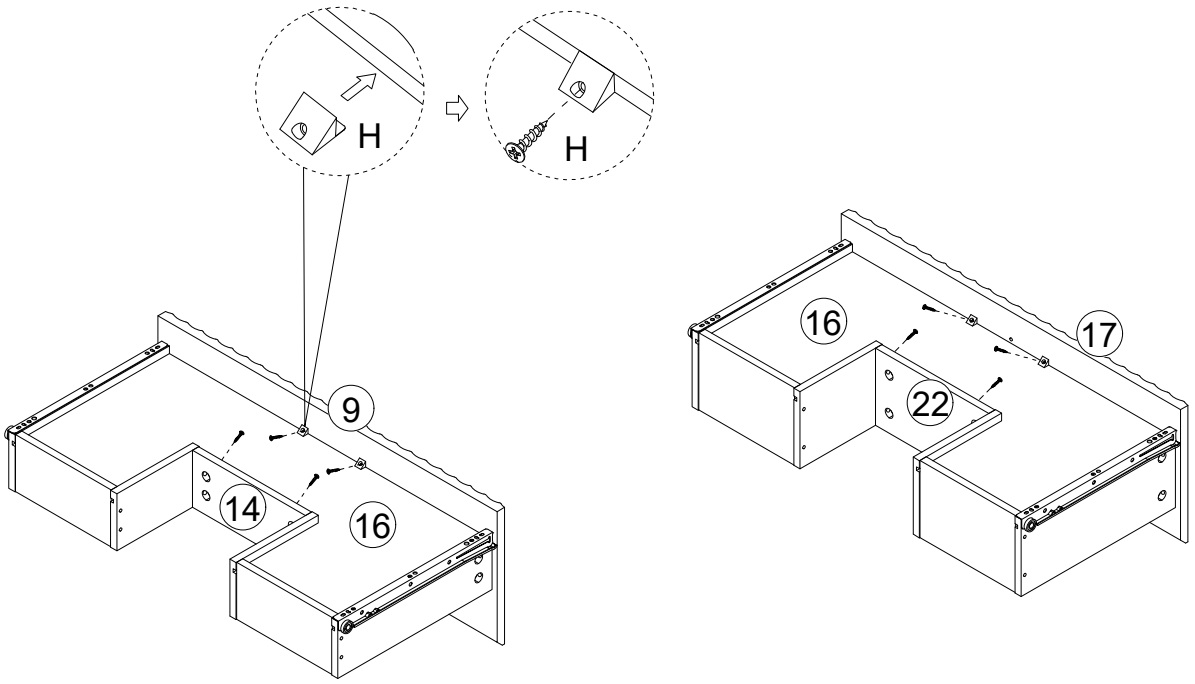





STEP 20

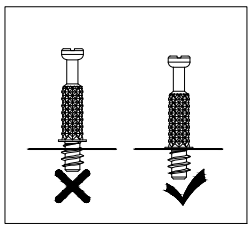


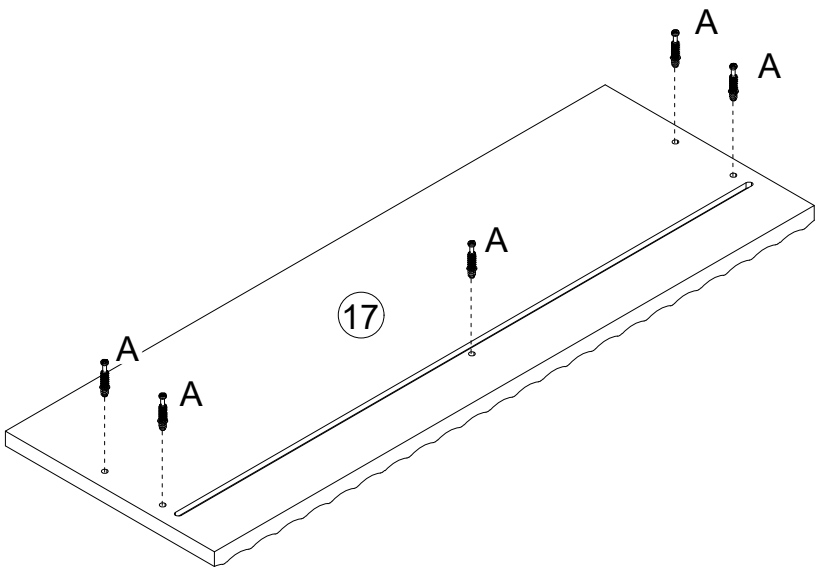

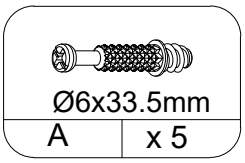


STEP 21

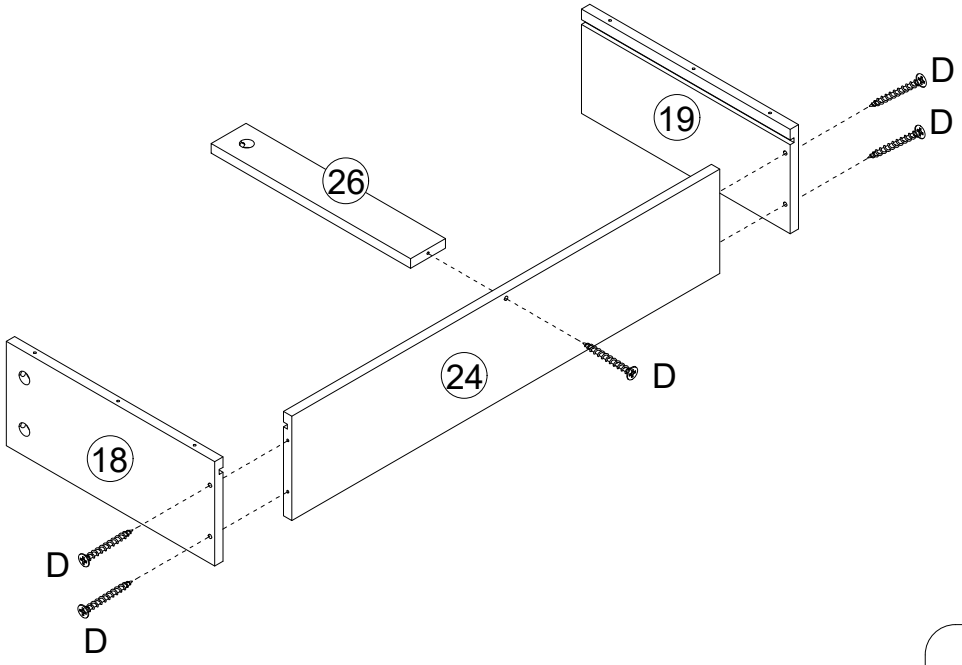


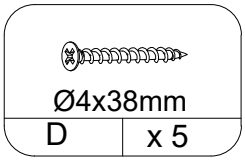



STEP 22

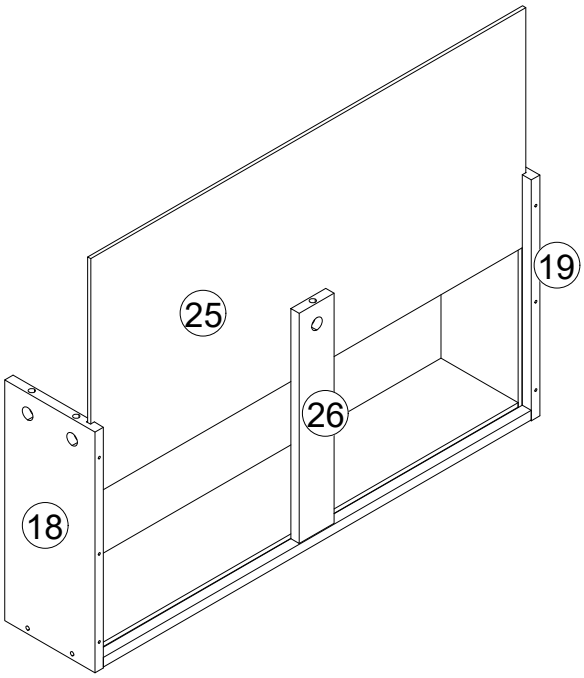


STEP 23

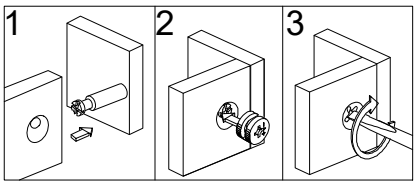

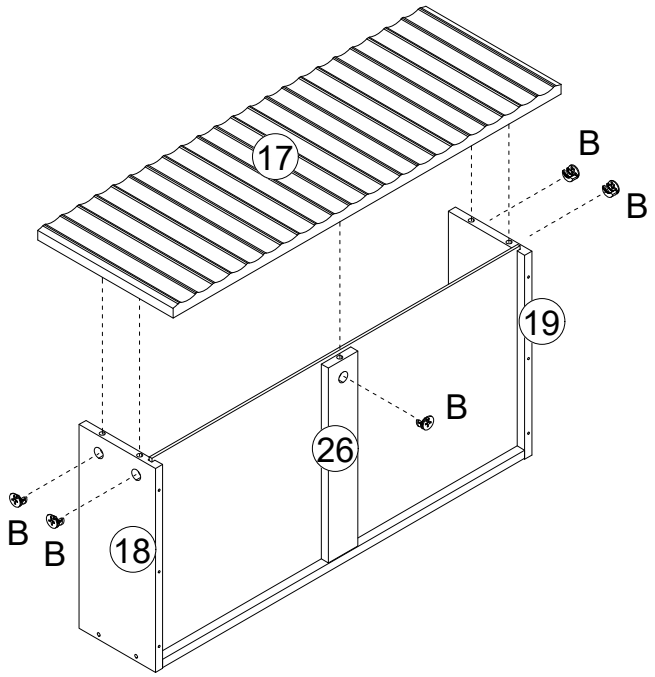


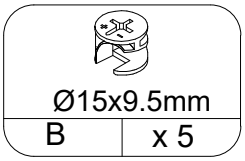


STEP 24

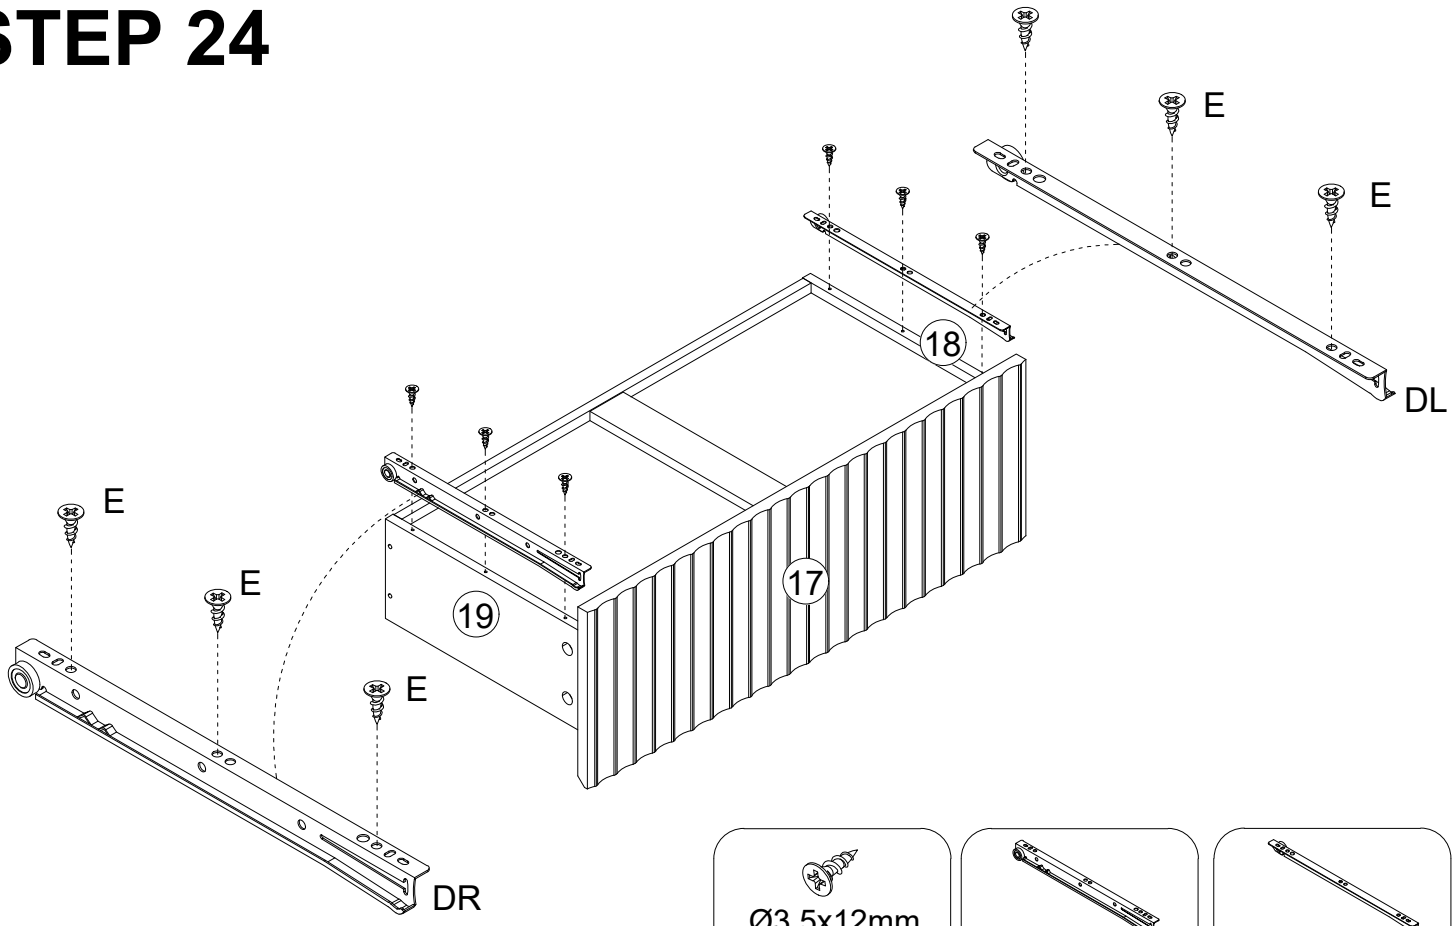


STEP 25

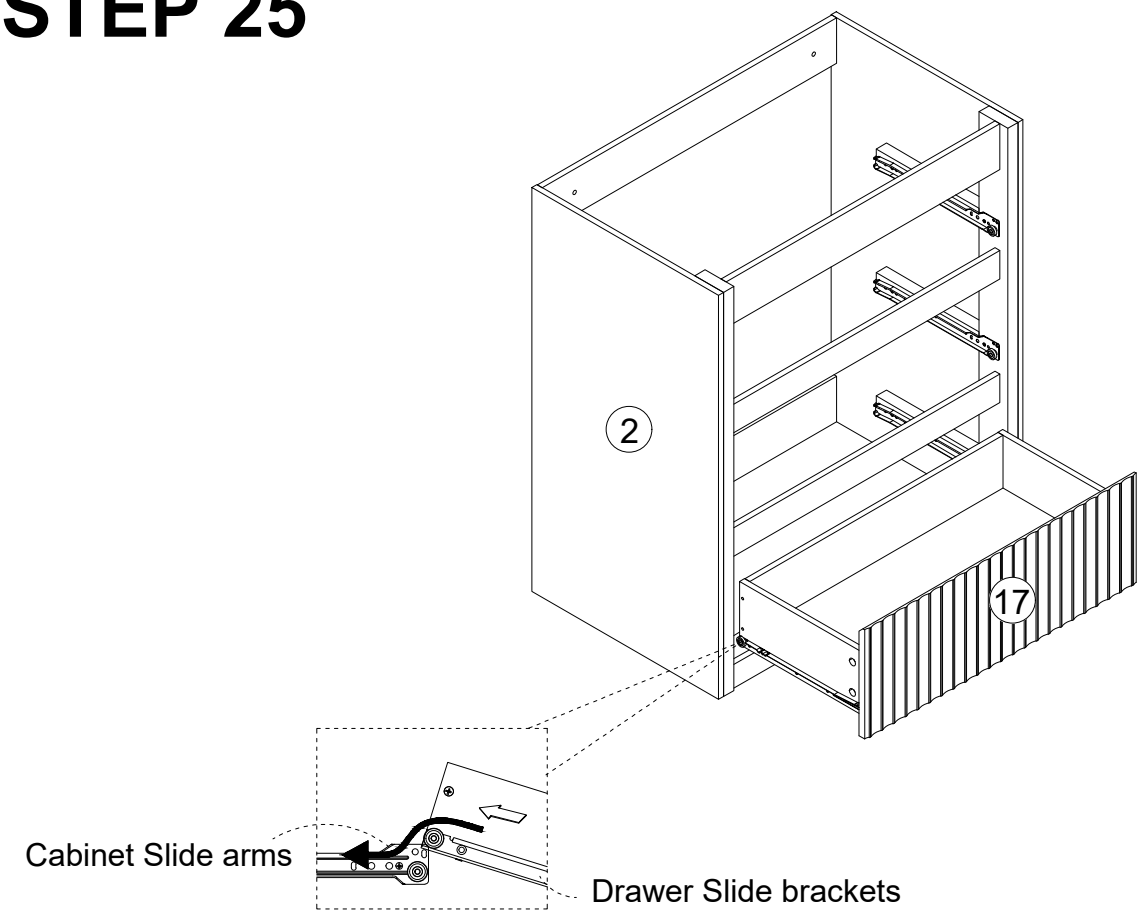



STEP 26

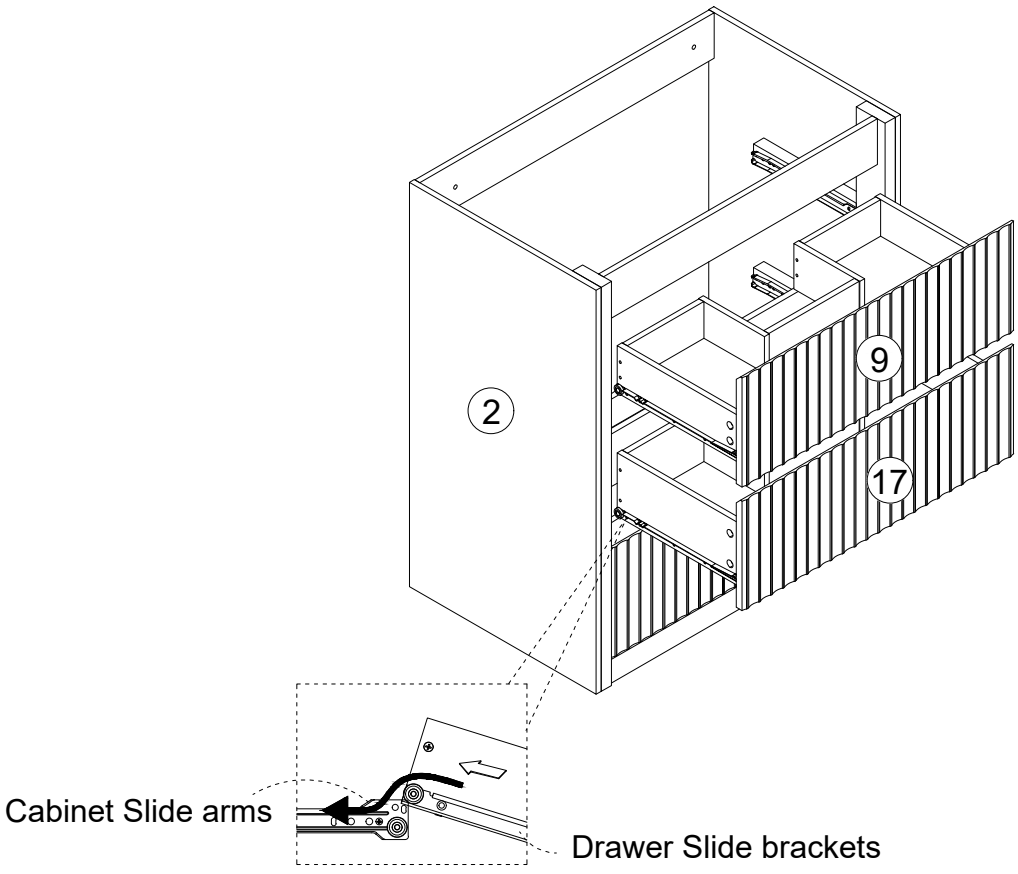


STEP 27

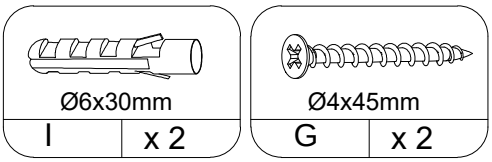

Ø6x30mm
I
x 2
Ø4x45mm
G
x 2

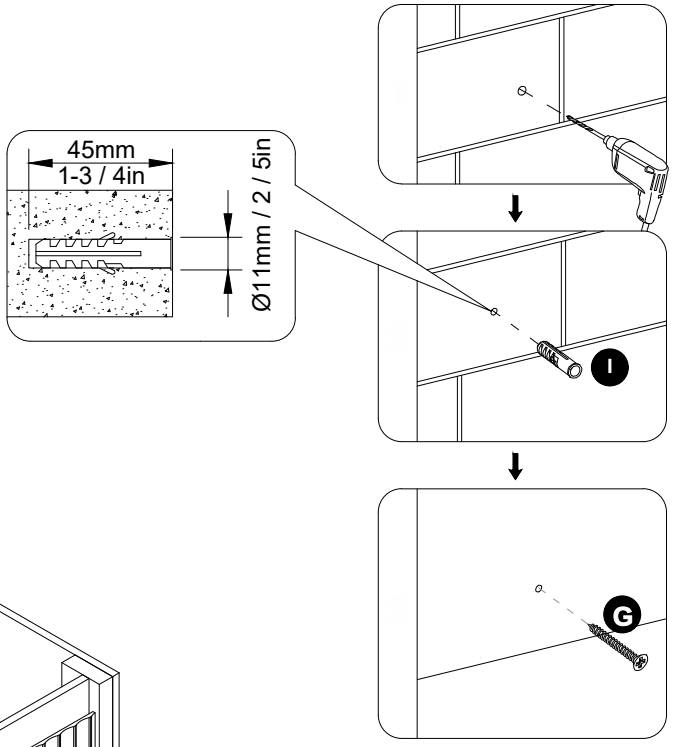

45mm
1-3 / 4in
Ø11mm / 2 / 5in
I
G

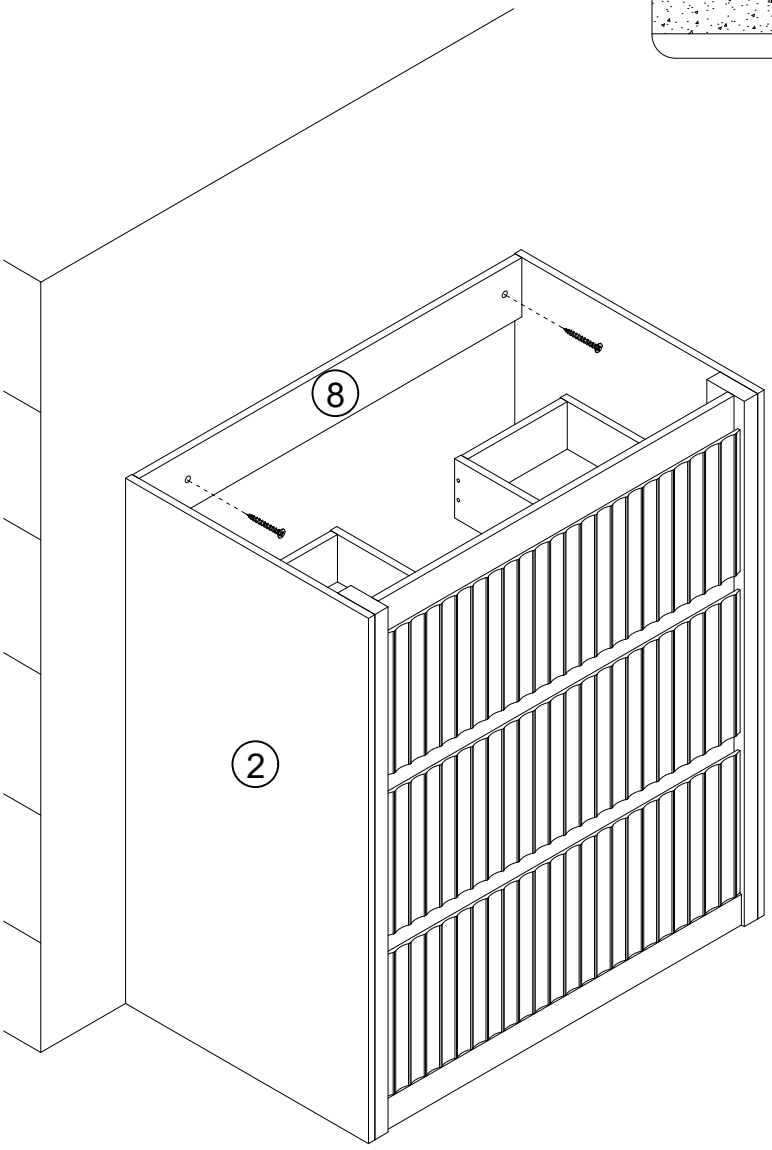

8
2

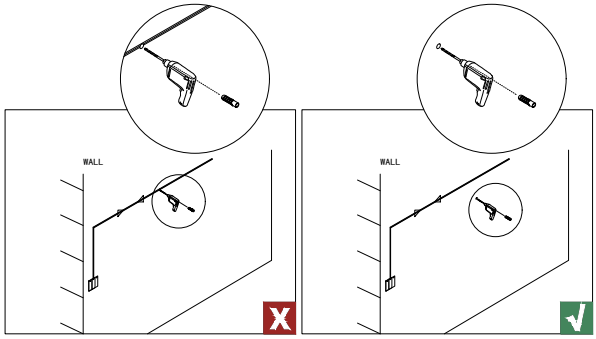
WALL
WALL

STEP 28

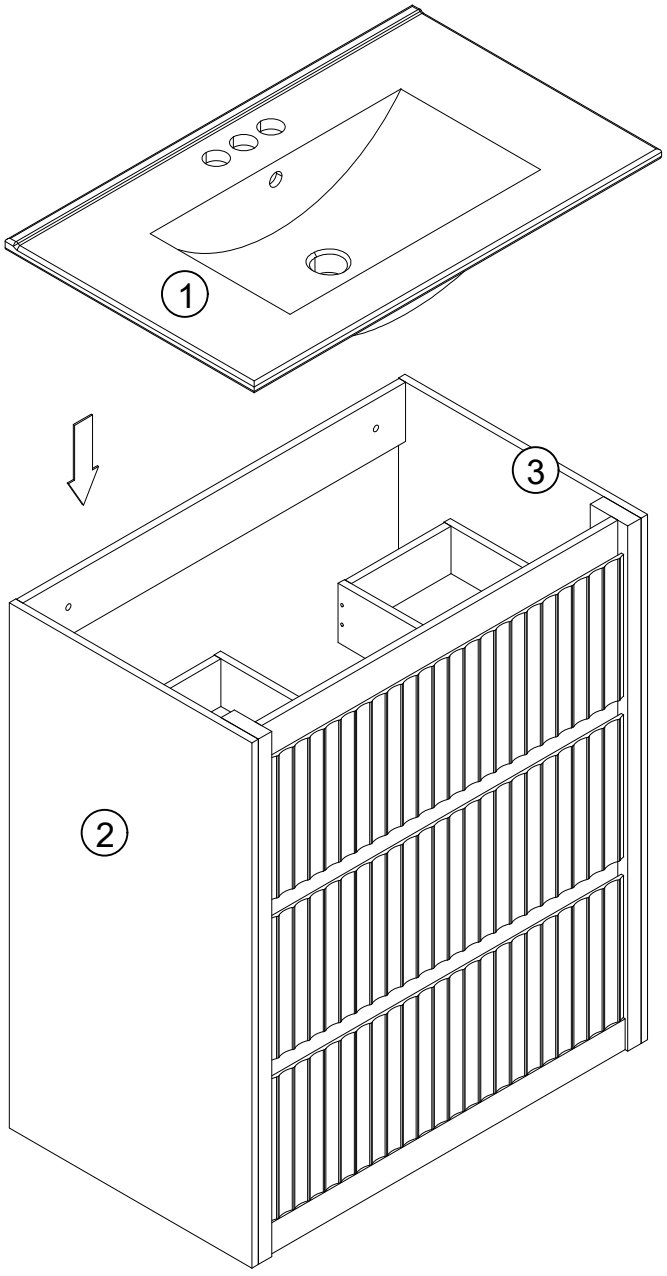

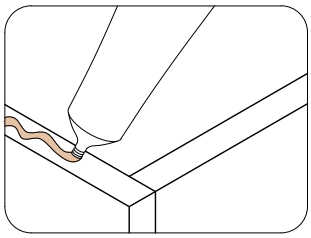

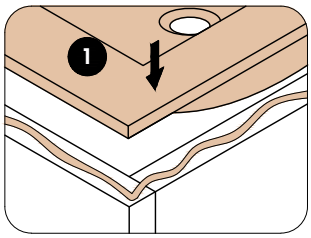

*Apply stain free silicone or latex silicone caulk(not included)to the top edge of vanity. with the help of another adult, gently lower top onto the vanity.wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning