



# BATHROOM VANITY INSTALLATION GUIDE

Different models, same installation method

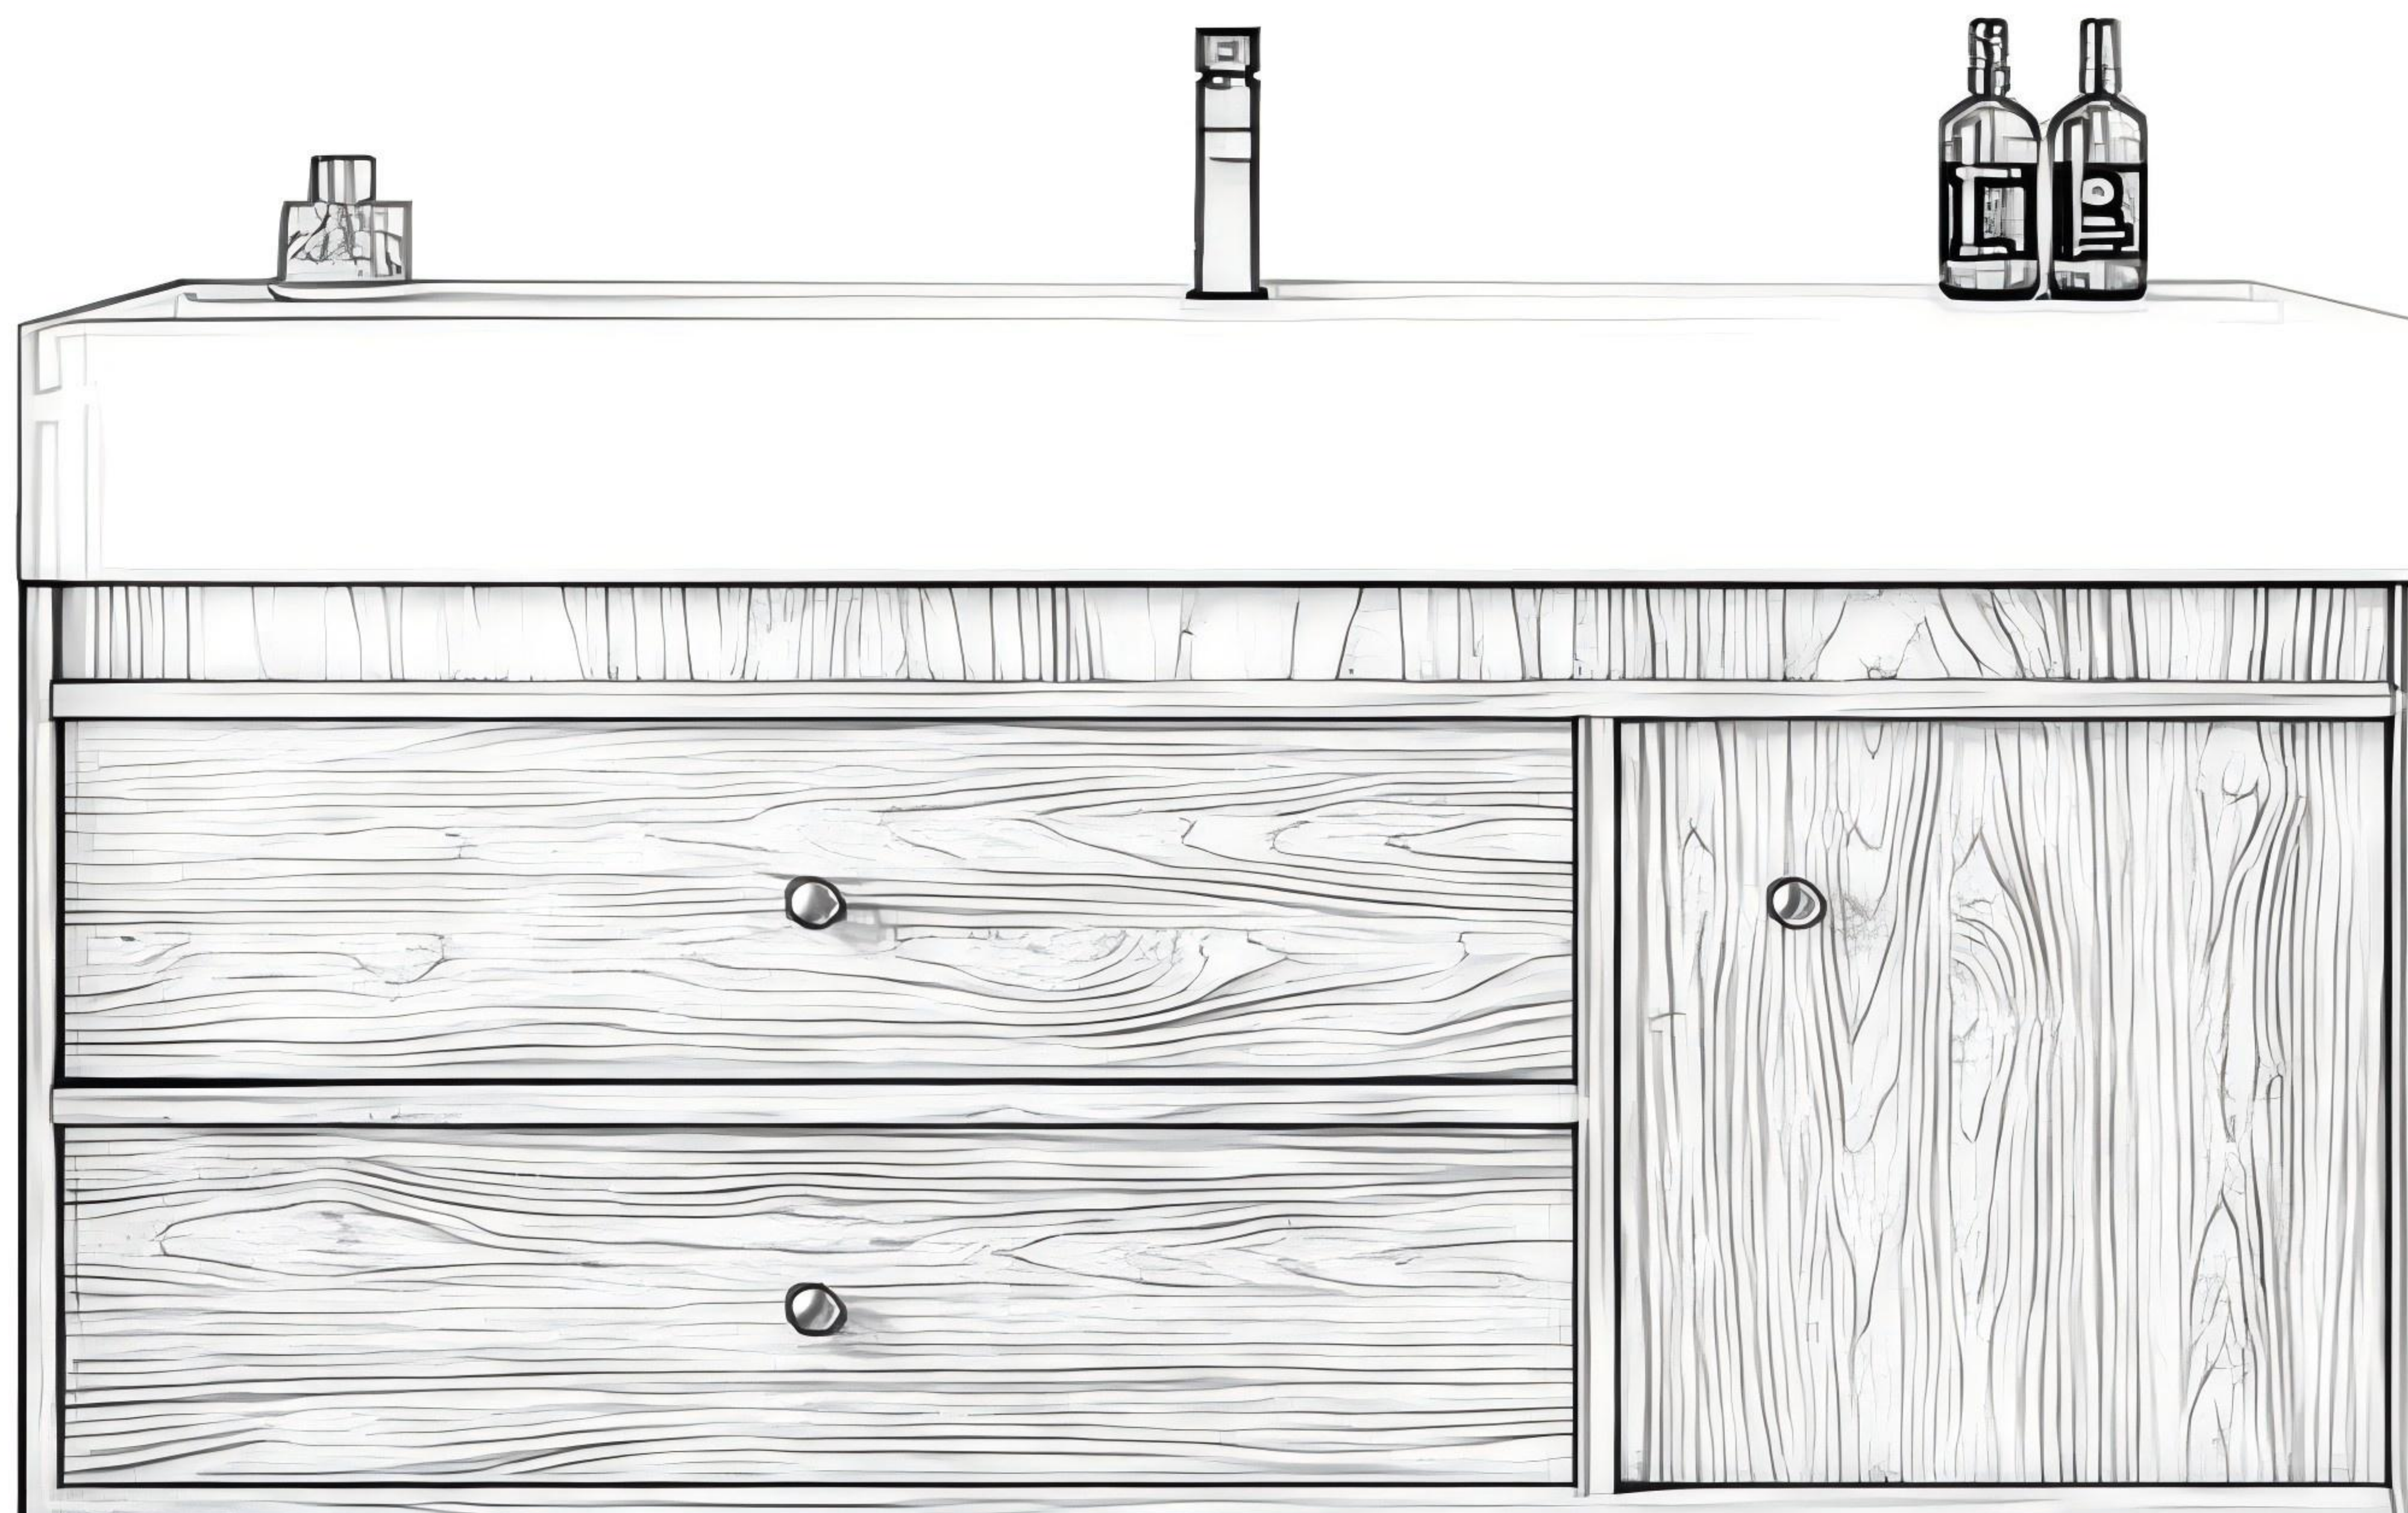


## Tools Required for Installation

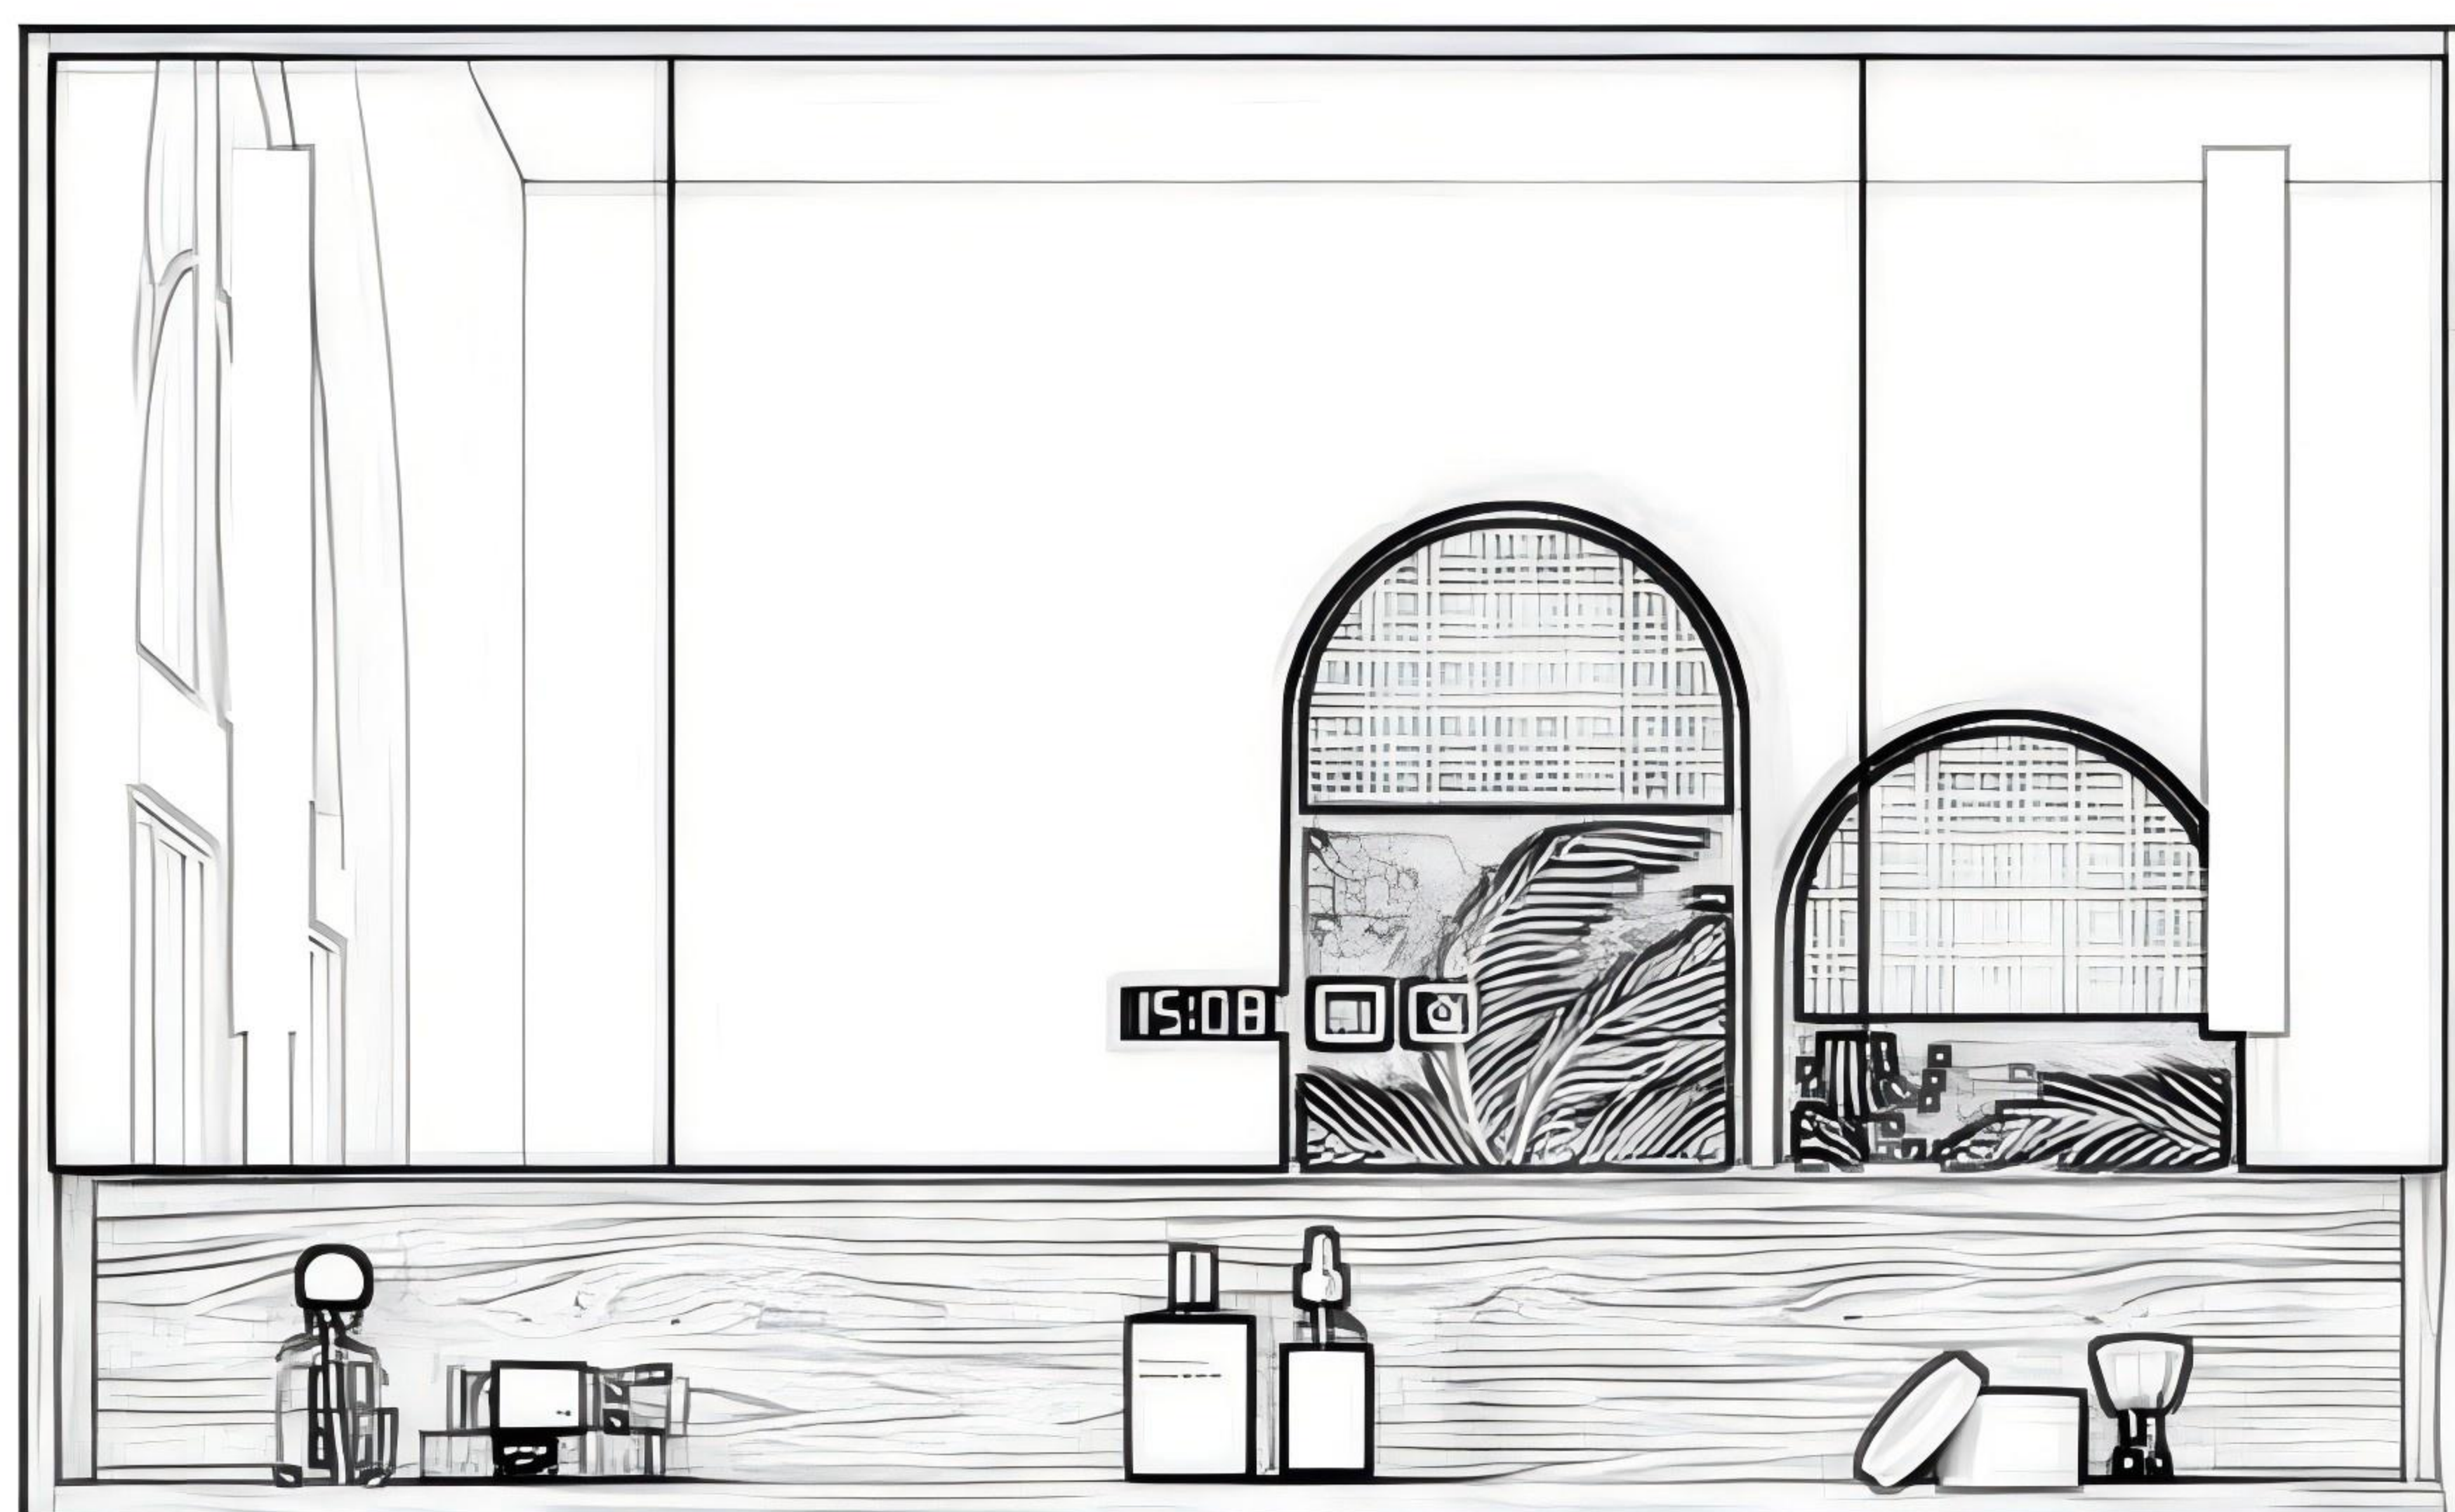

Electric drill, drill bits, screwdriver, adjustable wrench, hammer, tape measure, silicone sealant. **Important: Acidic silicone sealant is prohibited.**

## View All Products

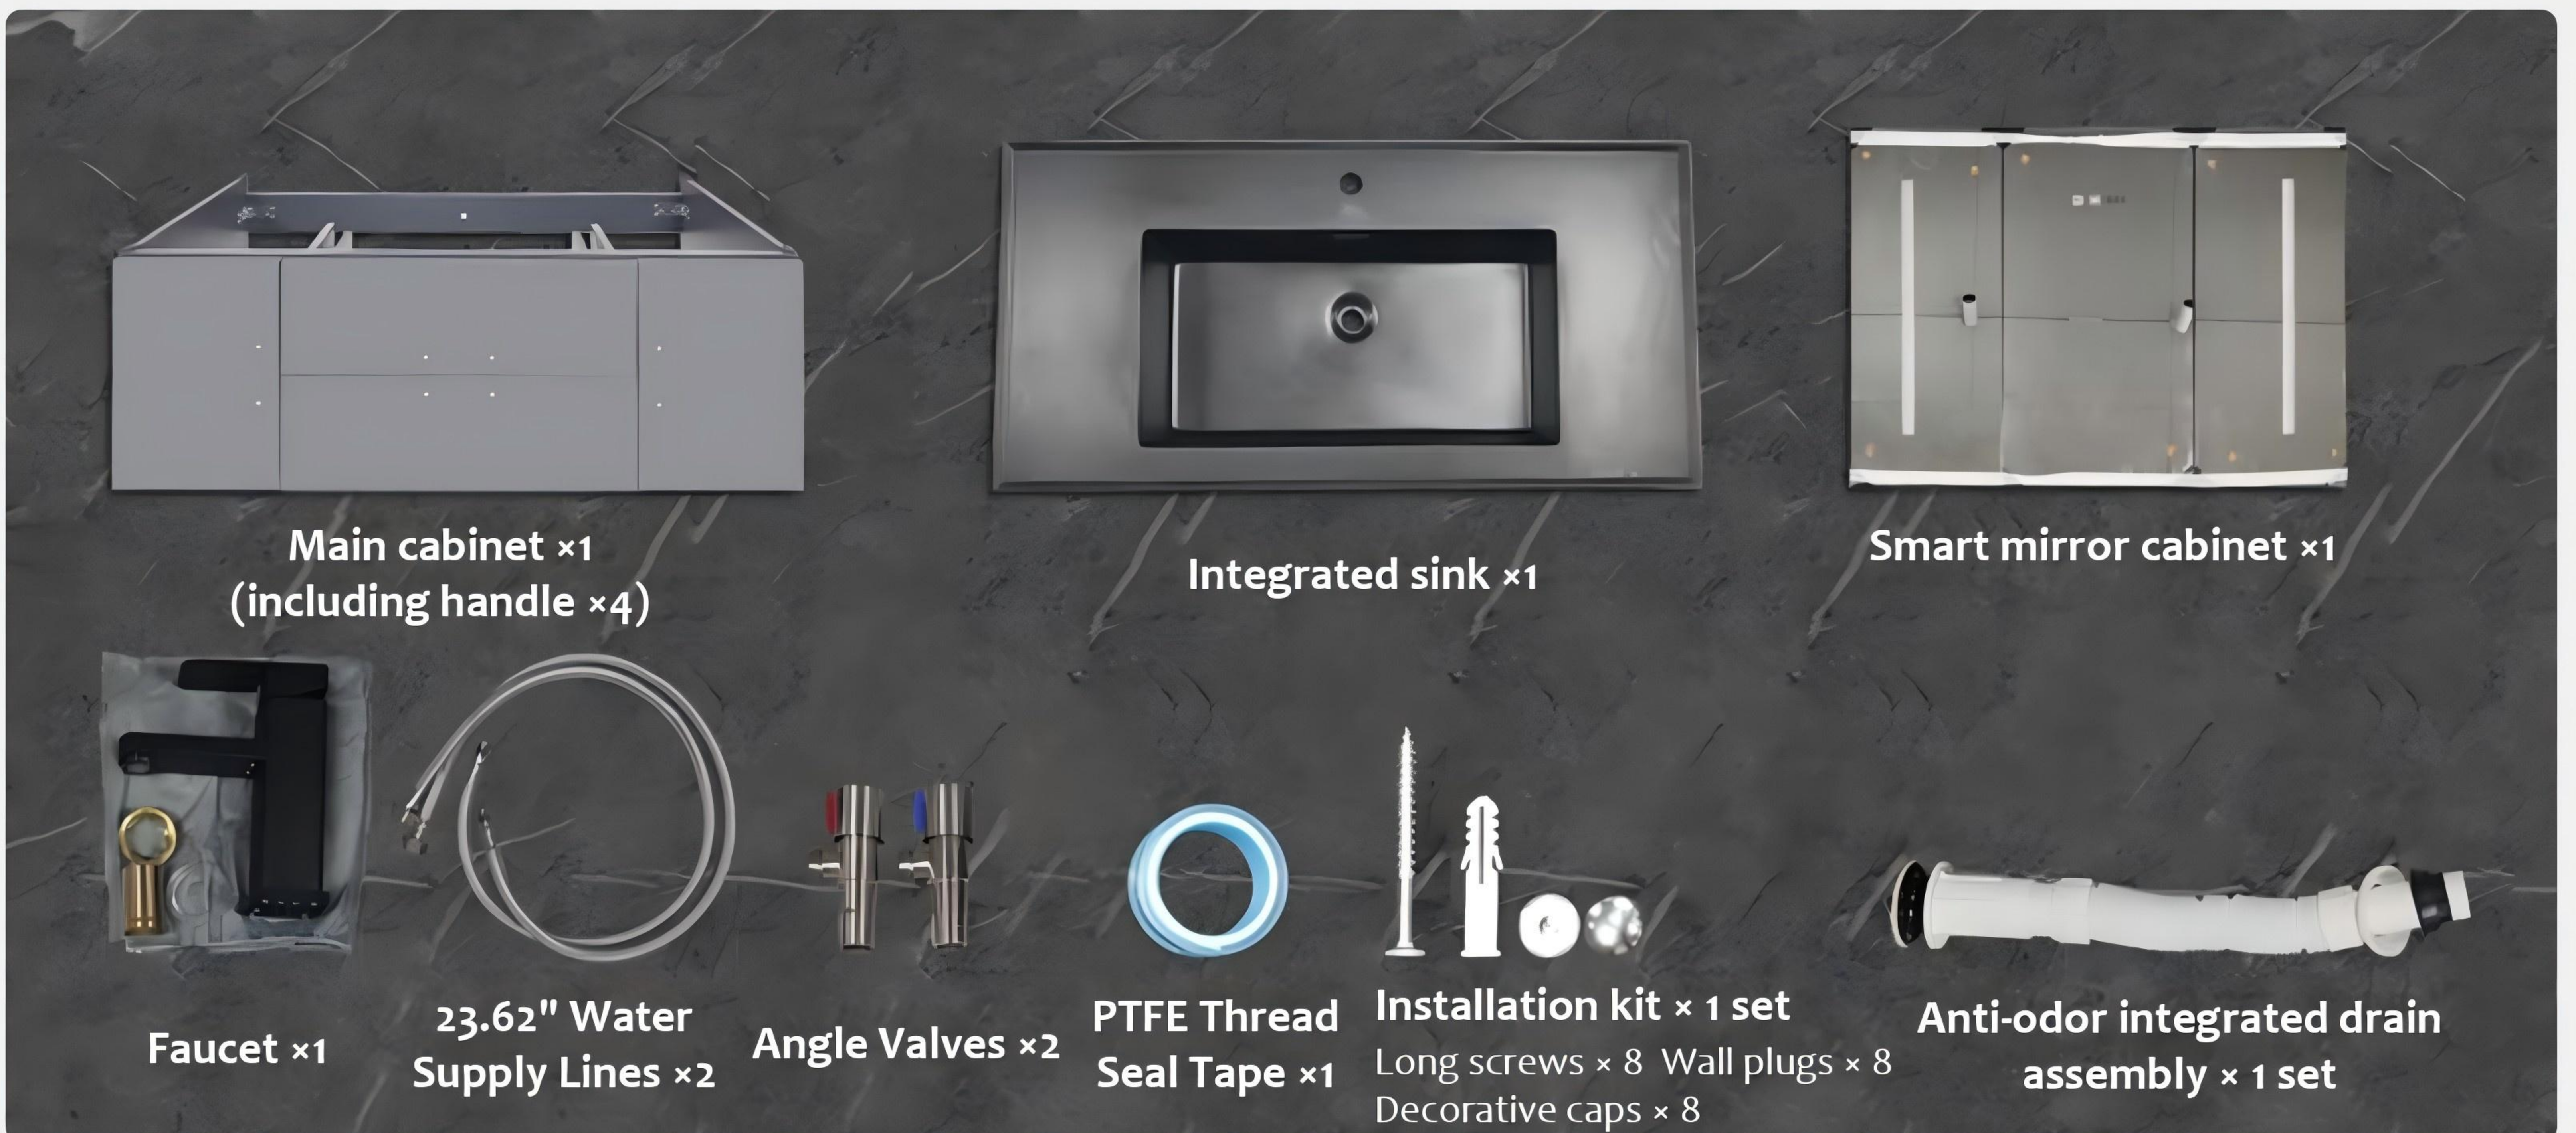



**Actual product configuration is subject to your final order.  
This video is for demonstration of installation steps only.**

Before installation, you must contact your property management or renovation contractor to confirm the layout of water and electrical lines. This is to avoid accidentally striking pipes or wires during drilling. Shut off the main water supply valve.

## WALL CABINET ASSEMBLY





Use a tape measure to determine the installation height of the cabinet. The installation height should be measured from the floor to the highest point of the cabinet, within the range of 22.44" to 26.38". The placement can be either closer to the center or to one side. The final location and height should be selected according to your actual home conditions and usage needs.

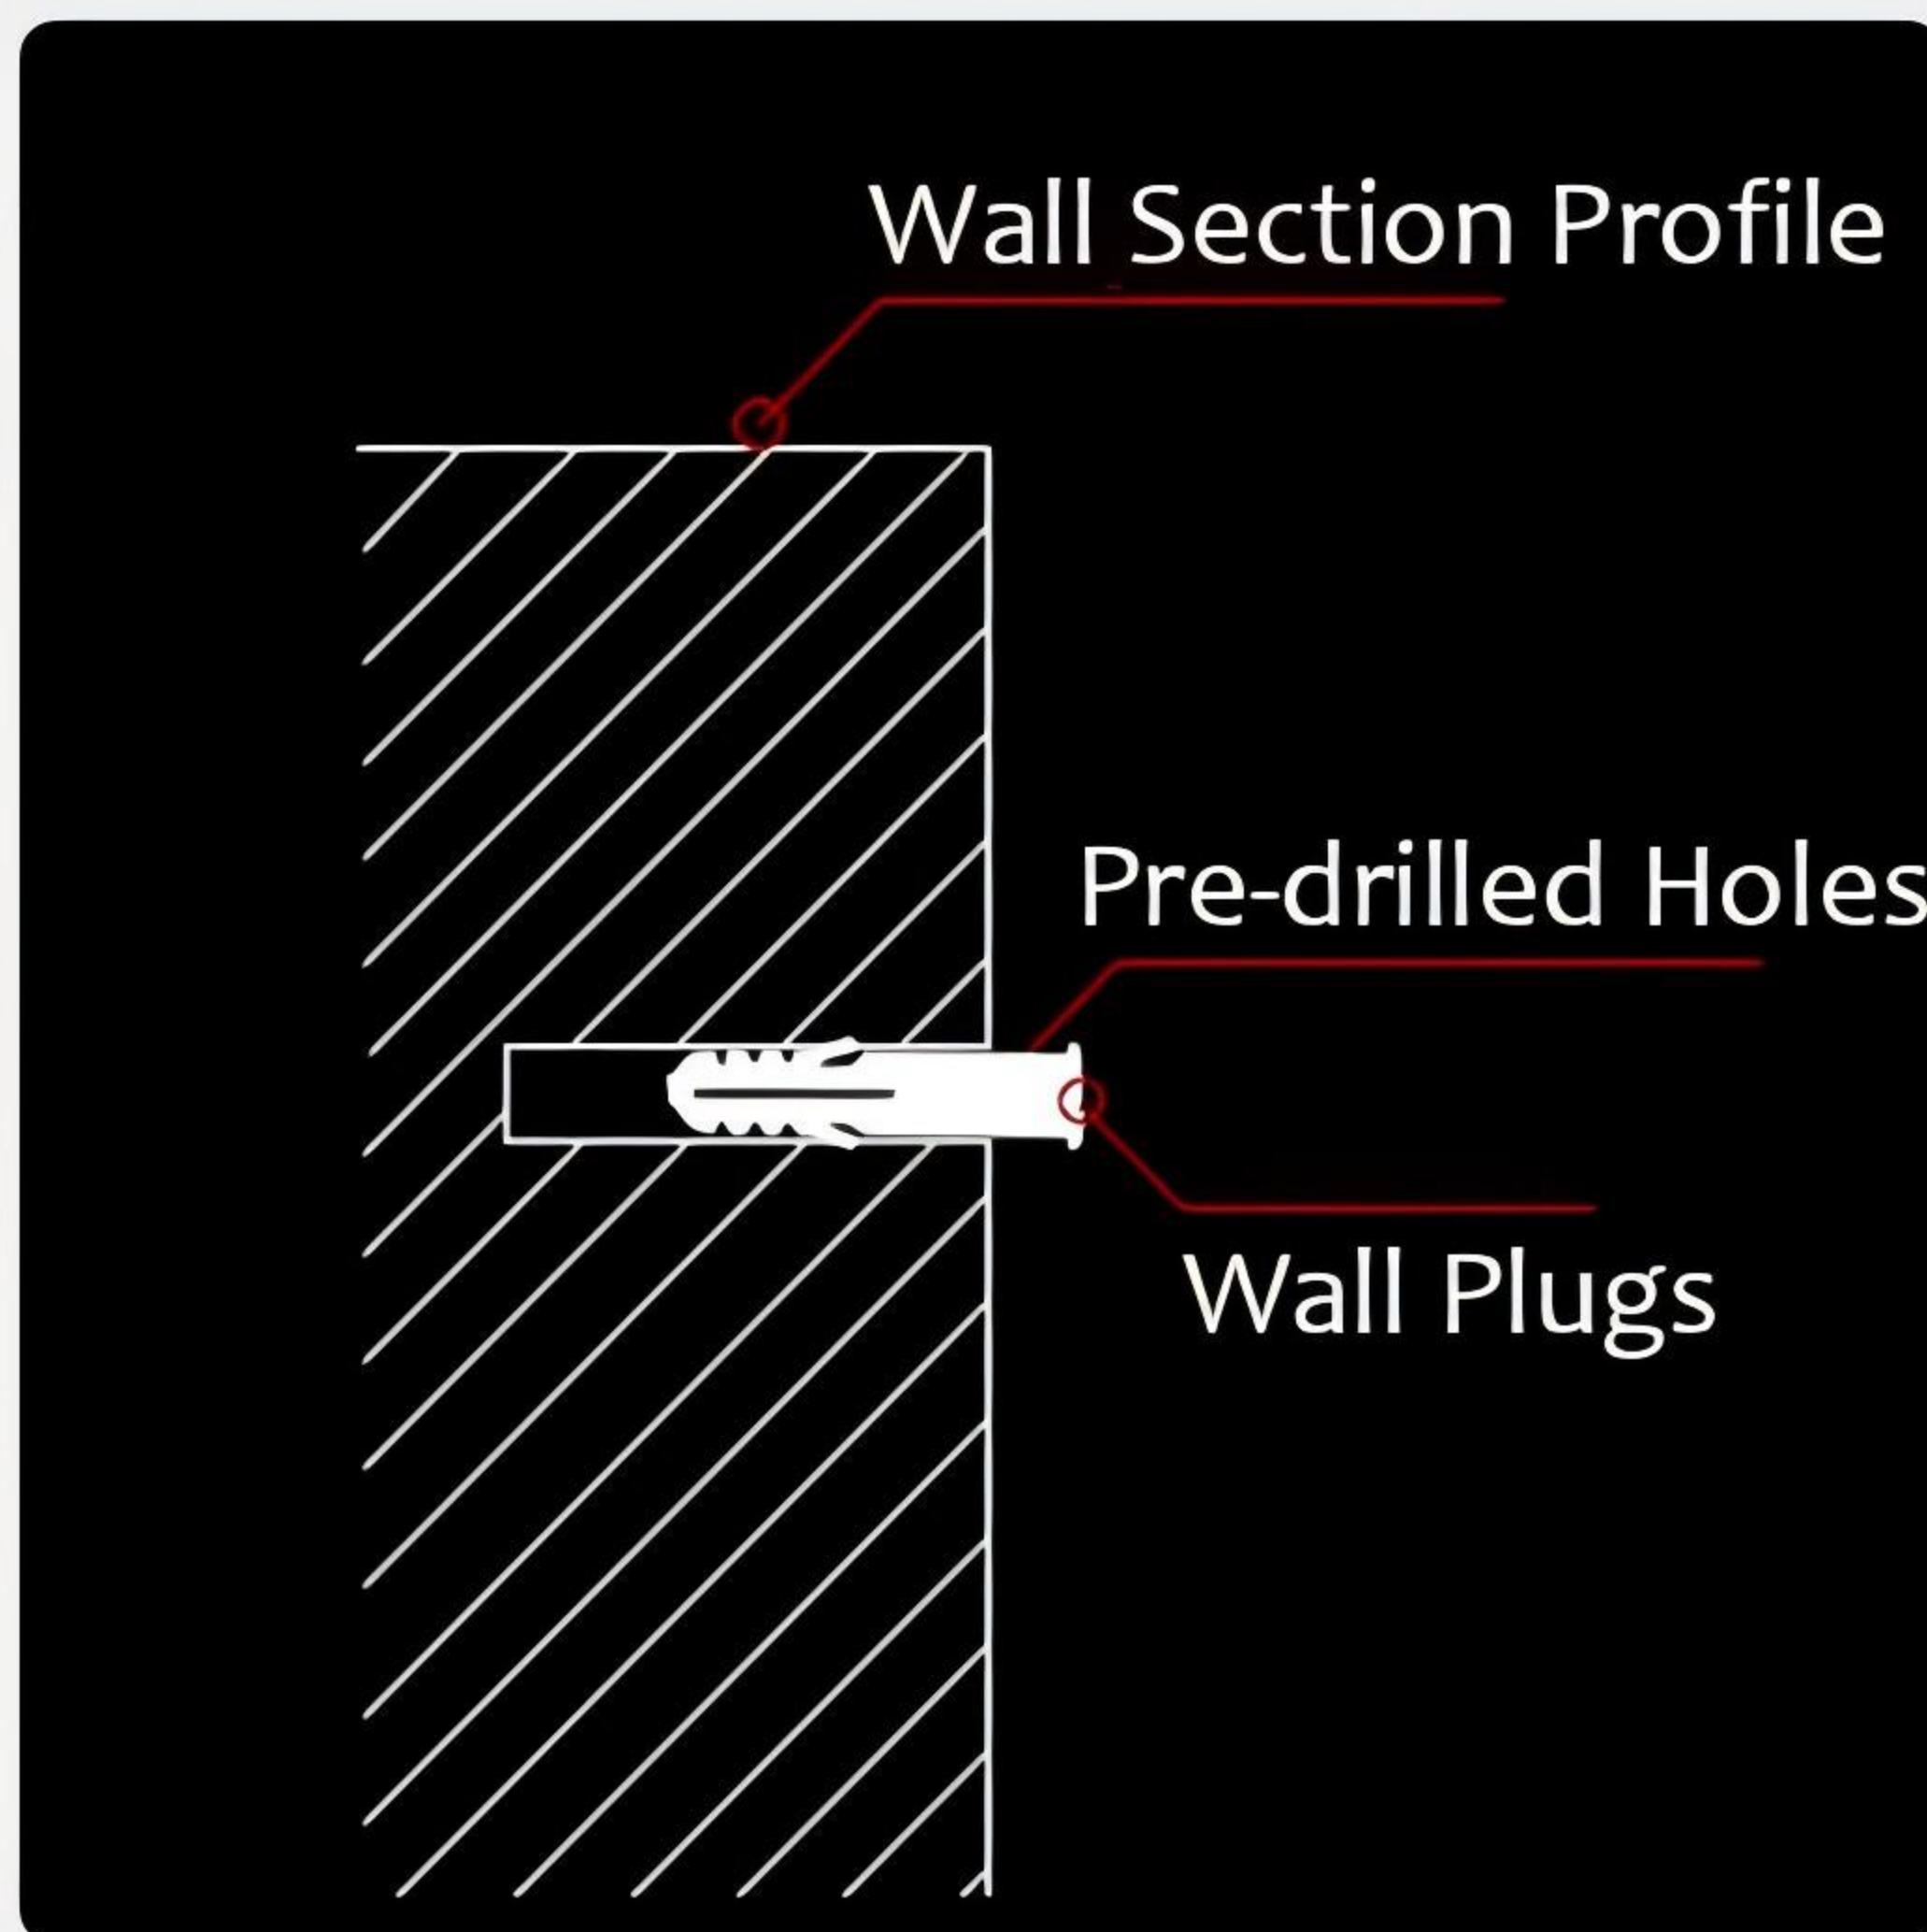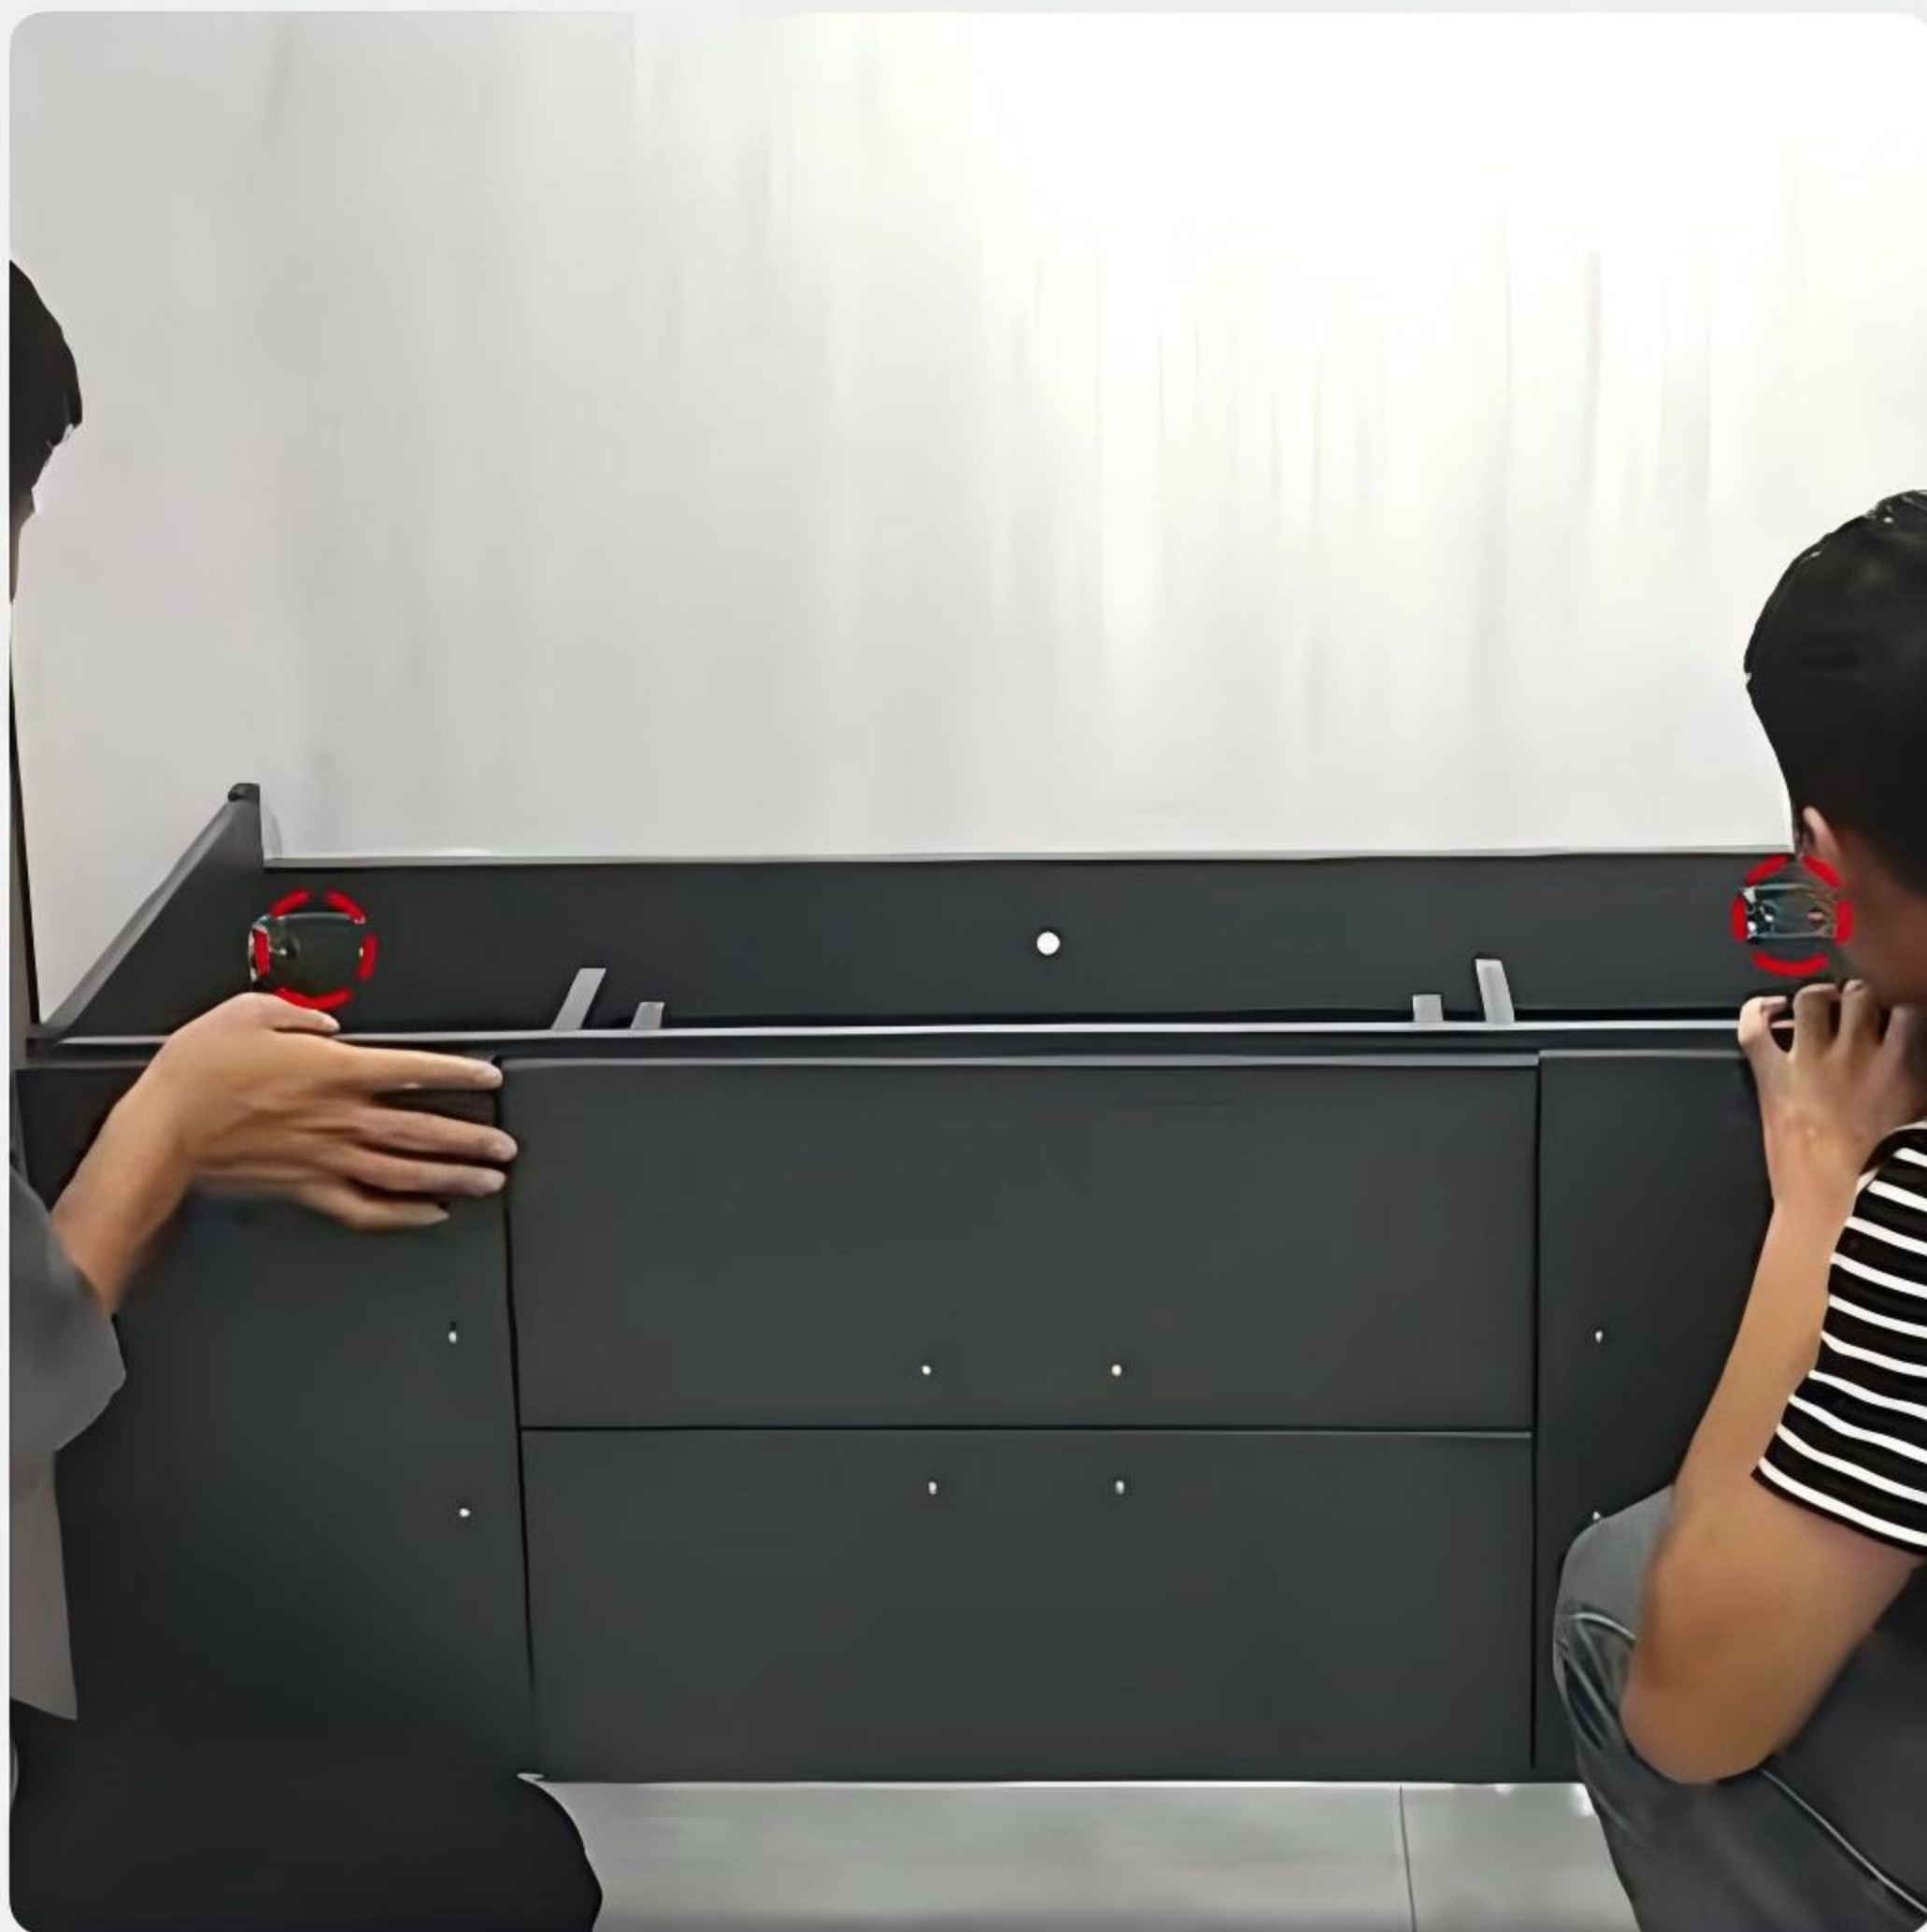

- Mark the drilling points with a marker. Prior to this, you must have verified the utility line locations to avoid striking them.
- After drilling, insert the wall plugs into the holes. Then, use the four long screws by feeding them through the pre-drilled mounting holes on both sides of the cabinet's back panel to secure the cabinet to the wall.

## FAUCET AND DRAIN INSTALLATION

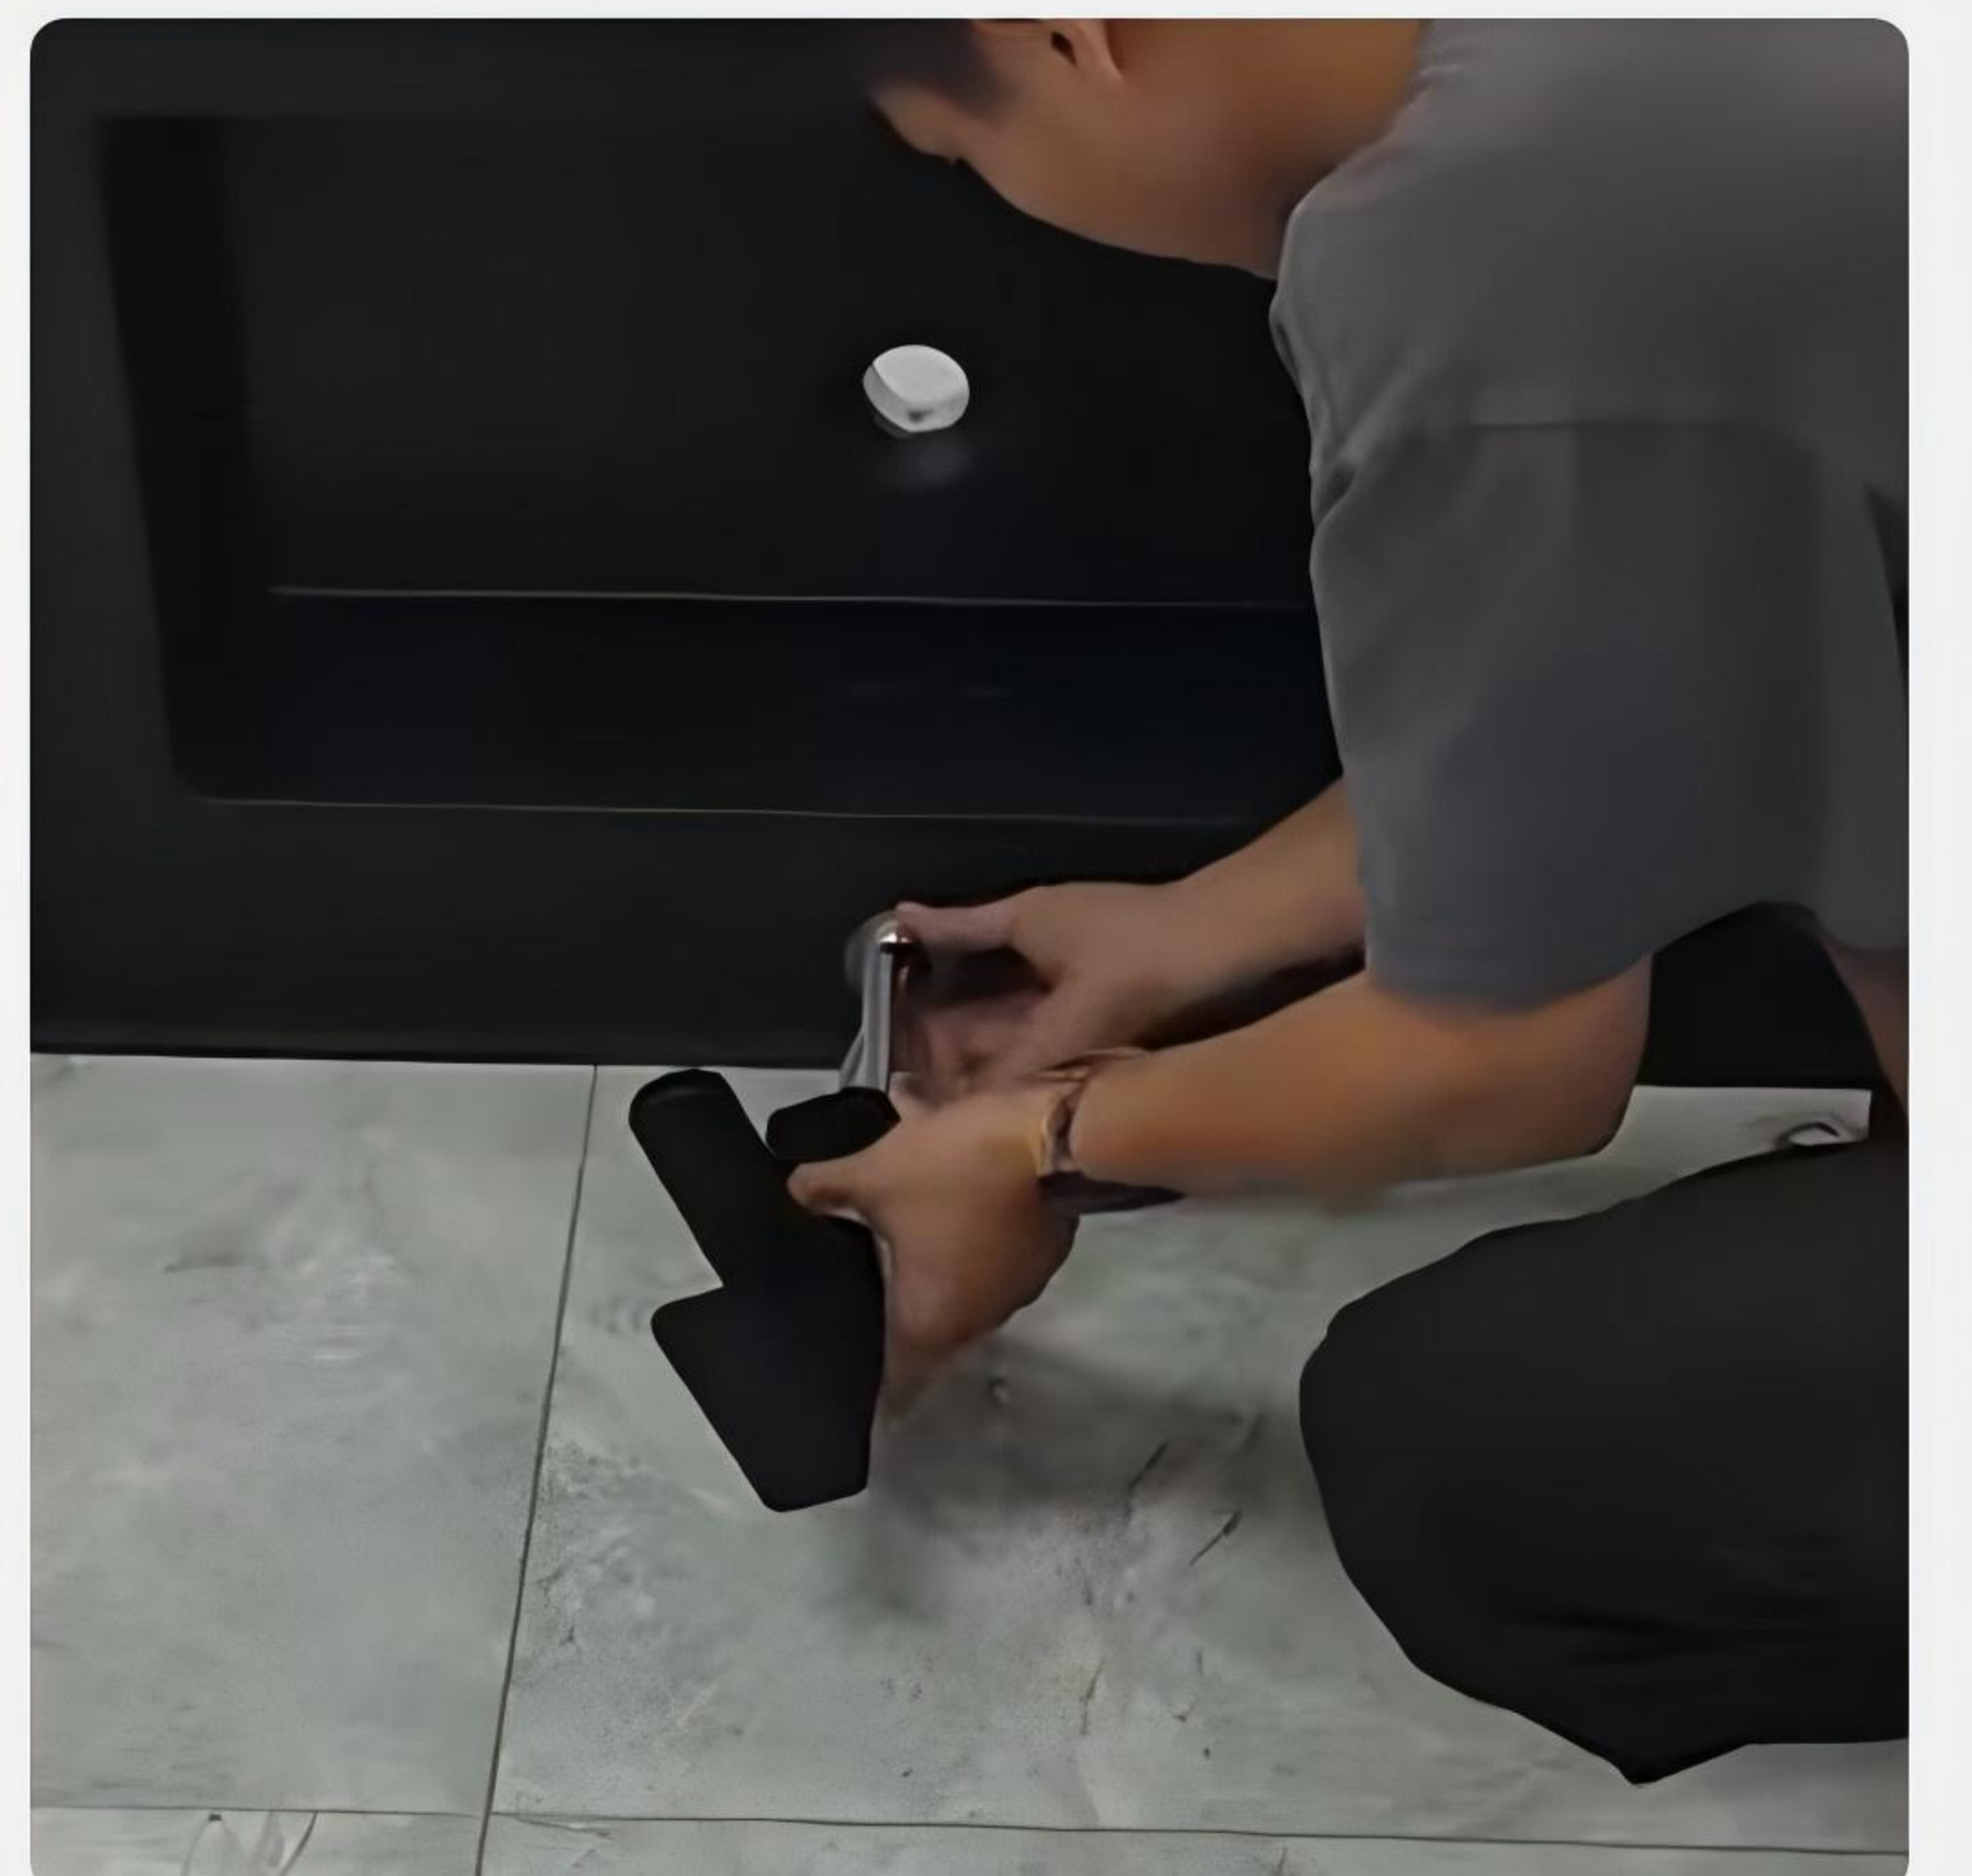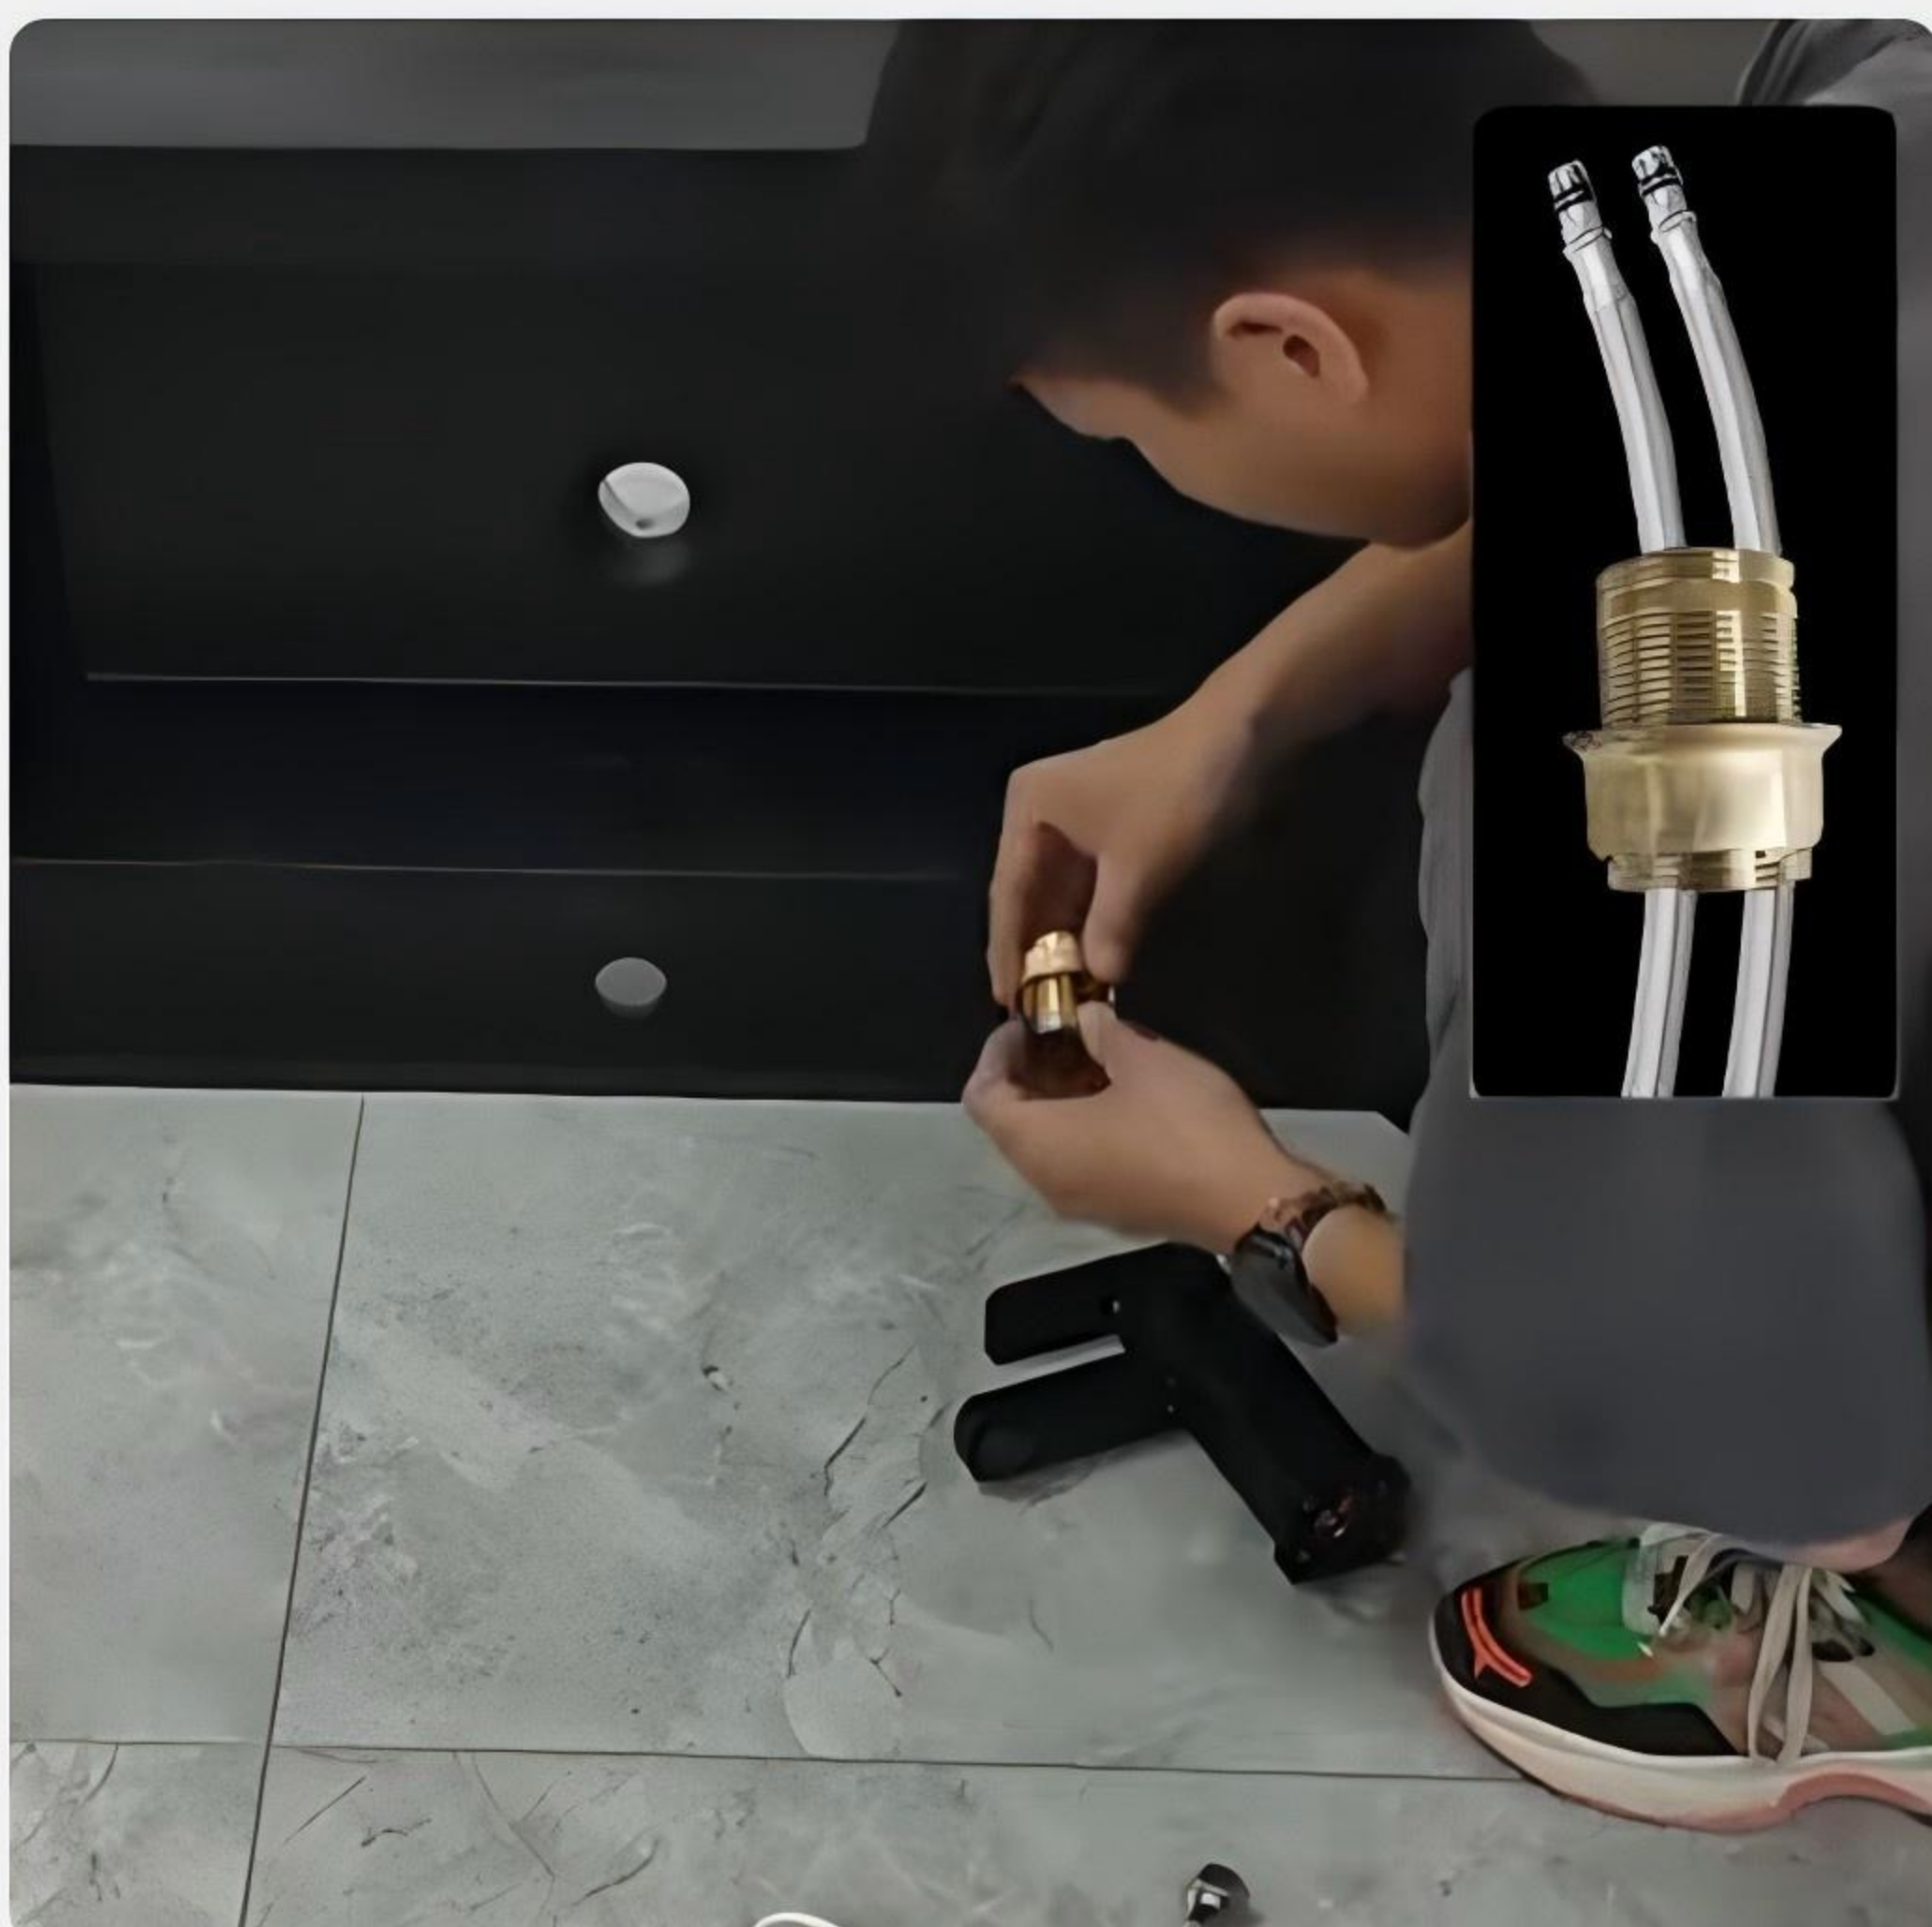


1. Install the angle valve adapters by threading them into the wall's cold and hot water outlets, ensuring they are perpendicular.
2. Slide the copper screw sleeves onto the two flexible supply lines.
3. Feed the threaded ends of the lines up through the pre-drilled holes in the sink.
4. Slide a plastic washer onto each line.
5. Connect the lines to the faucet's inlets and hand-tighten.
6. From under the sink, fully tighten the copper screw sleeves to secure the faucet.



Insert the drain stopper into the sink basin.  
Then, from underneath the sink, connect and tighten the lower part of the drainpipe to the drain body.

## FAUCET AND DRAIN INSTALLATION

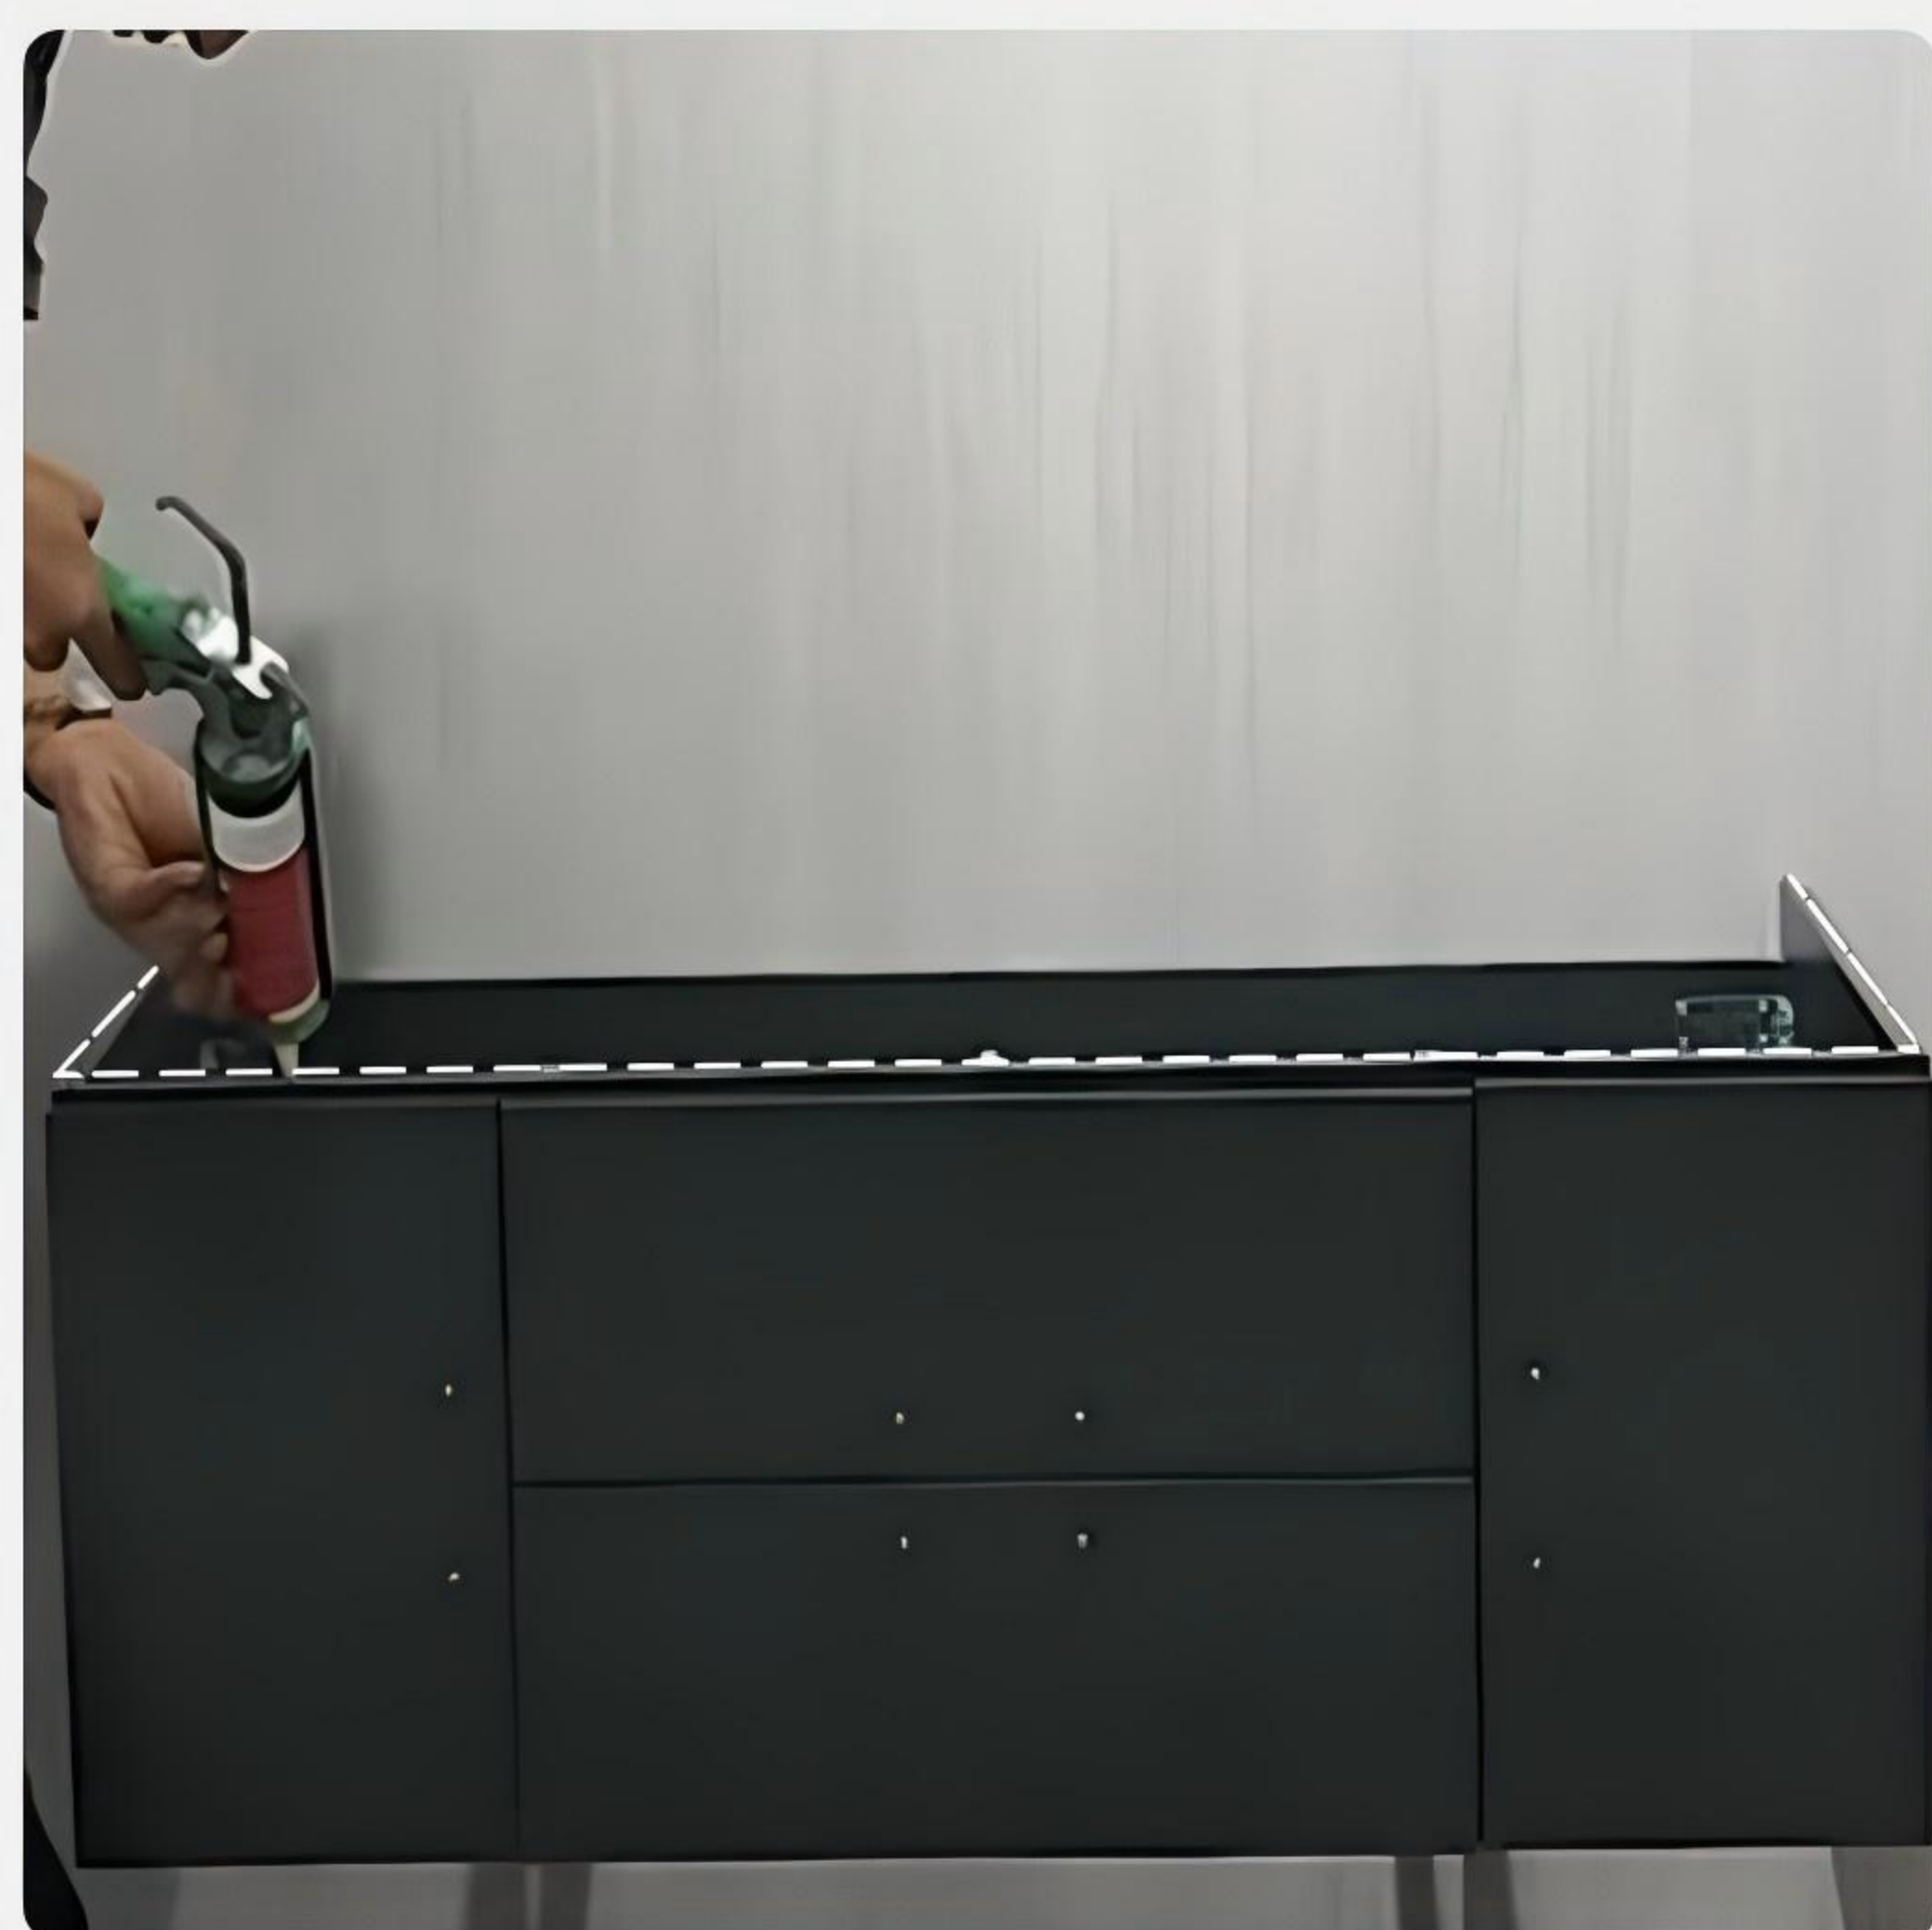


- Apply a bead of silicone sealant along the top edge of the cabinet.  
The use of acidic silicone sealant is strictly prohibited.
- Place the integrated sink onto the bathroom cabinet.  
Apply a bead of silicone sealant along the joint between the sink and the wall.

## SMART MIRROR CABINET INSTALLATION



For the mirror cabinet installation height, it is recommended to measure 11.81" upwards from the highest point of the sink and mark the position. The final height can be adjusted according to your household's preferences and usage habits.

Align the bottom of the mirror cabinet with the mark you made.  
Once positioned, use a marker through the four pre-drilled mounting holes to mark the wall.

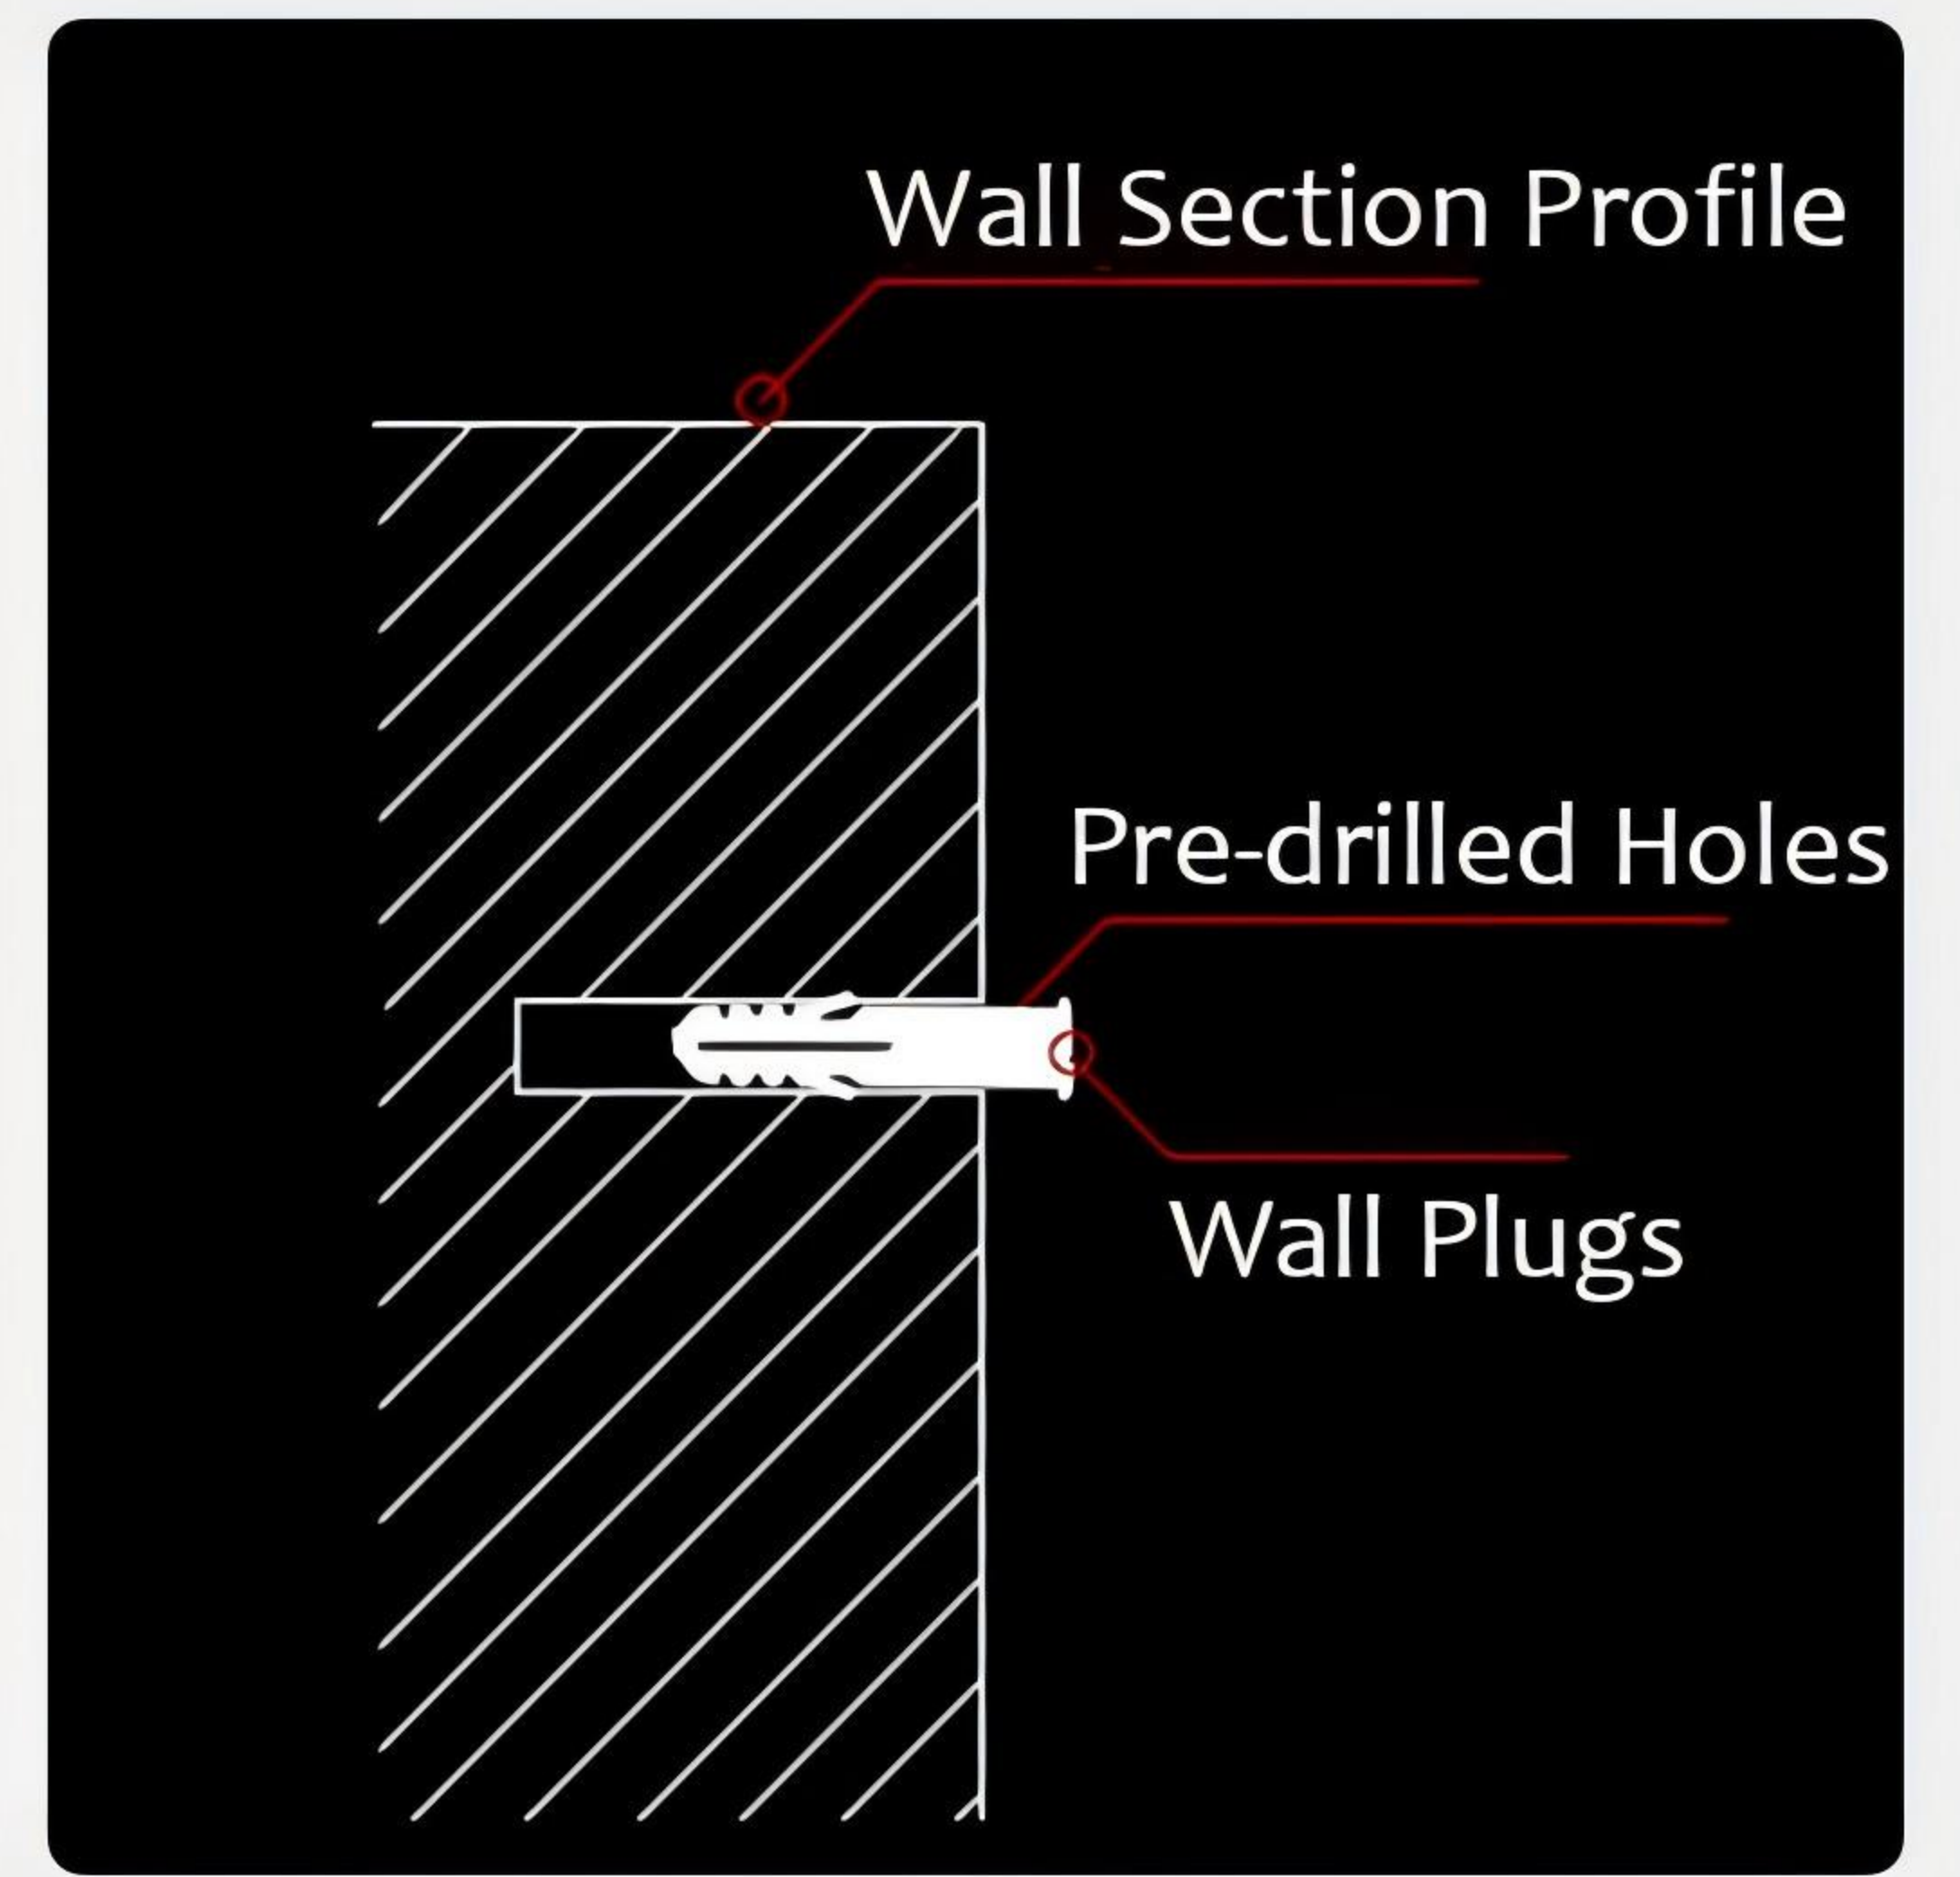

After drilling, insert the wall plugs into the holes. Align the cabinet's mounting holes with the wall plugs, then drive the long screws through them to secure the cabinet to the wall.

After installation, you can directly plug the mirror cabinet's light switch into the pre-installed wall socket. The lighting is now operational.

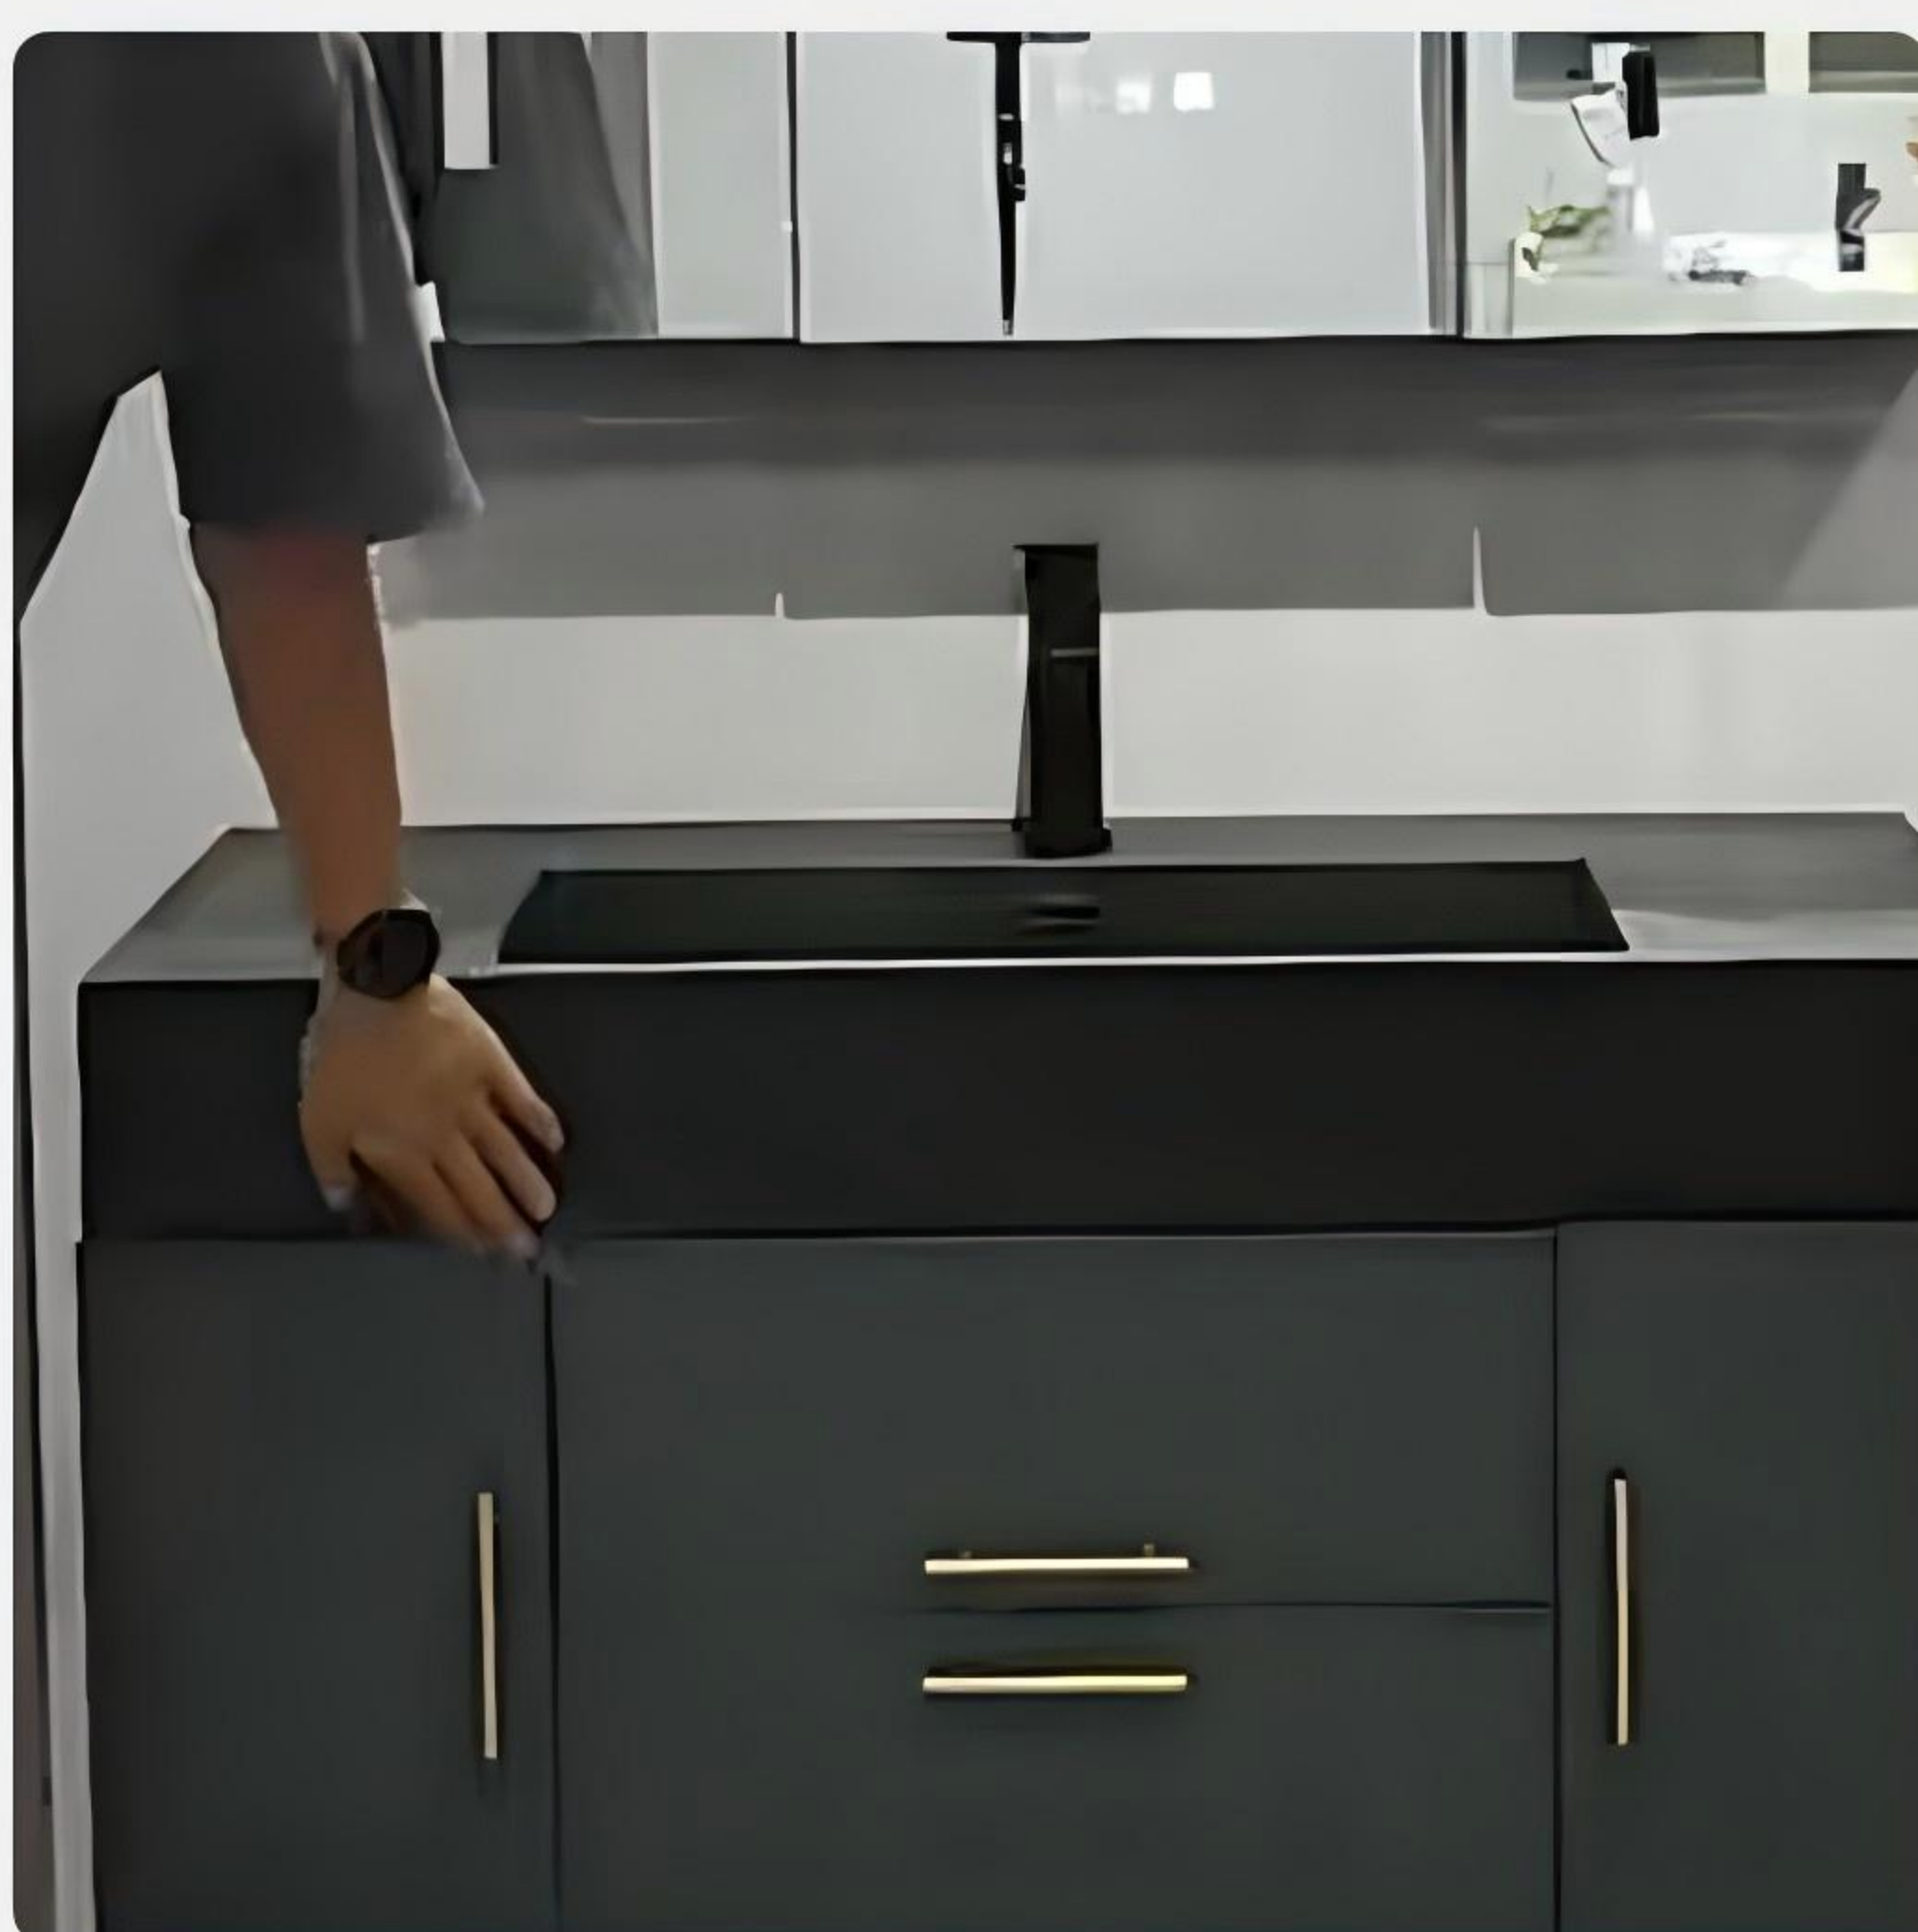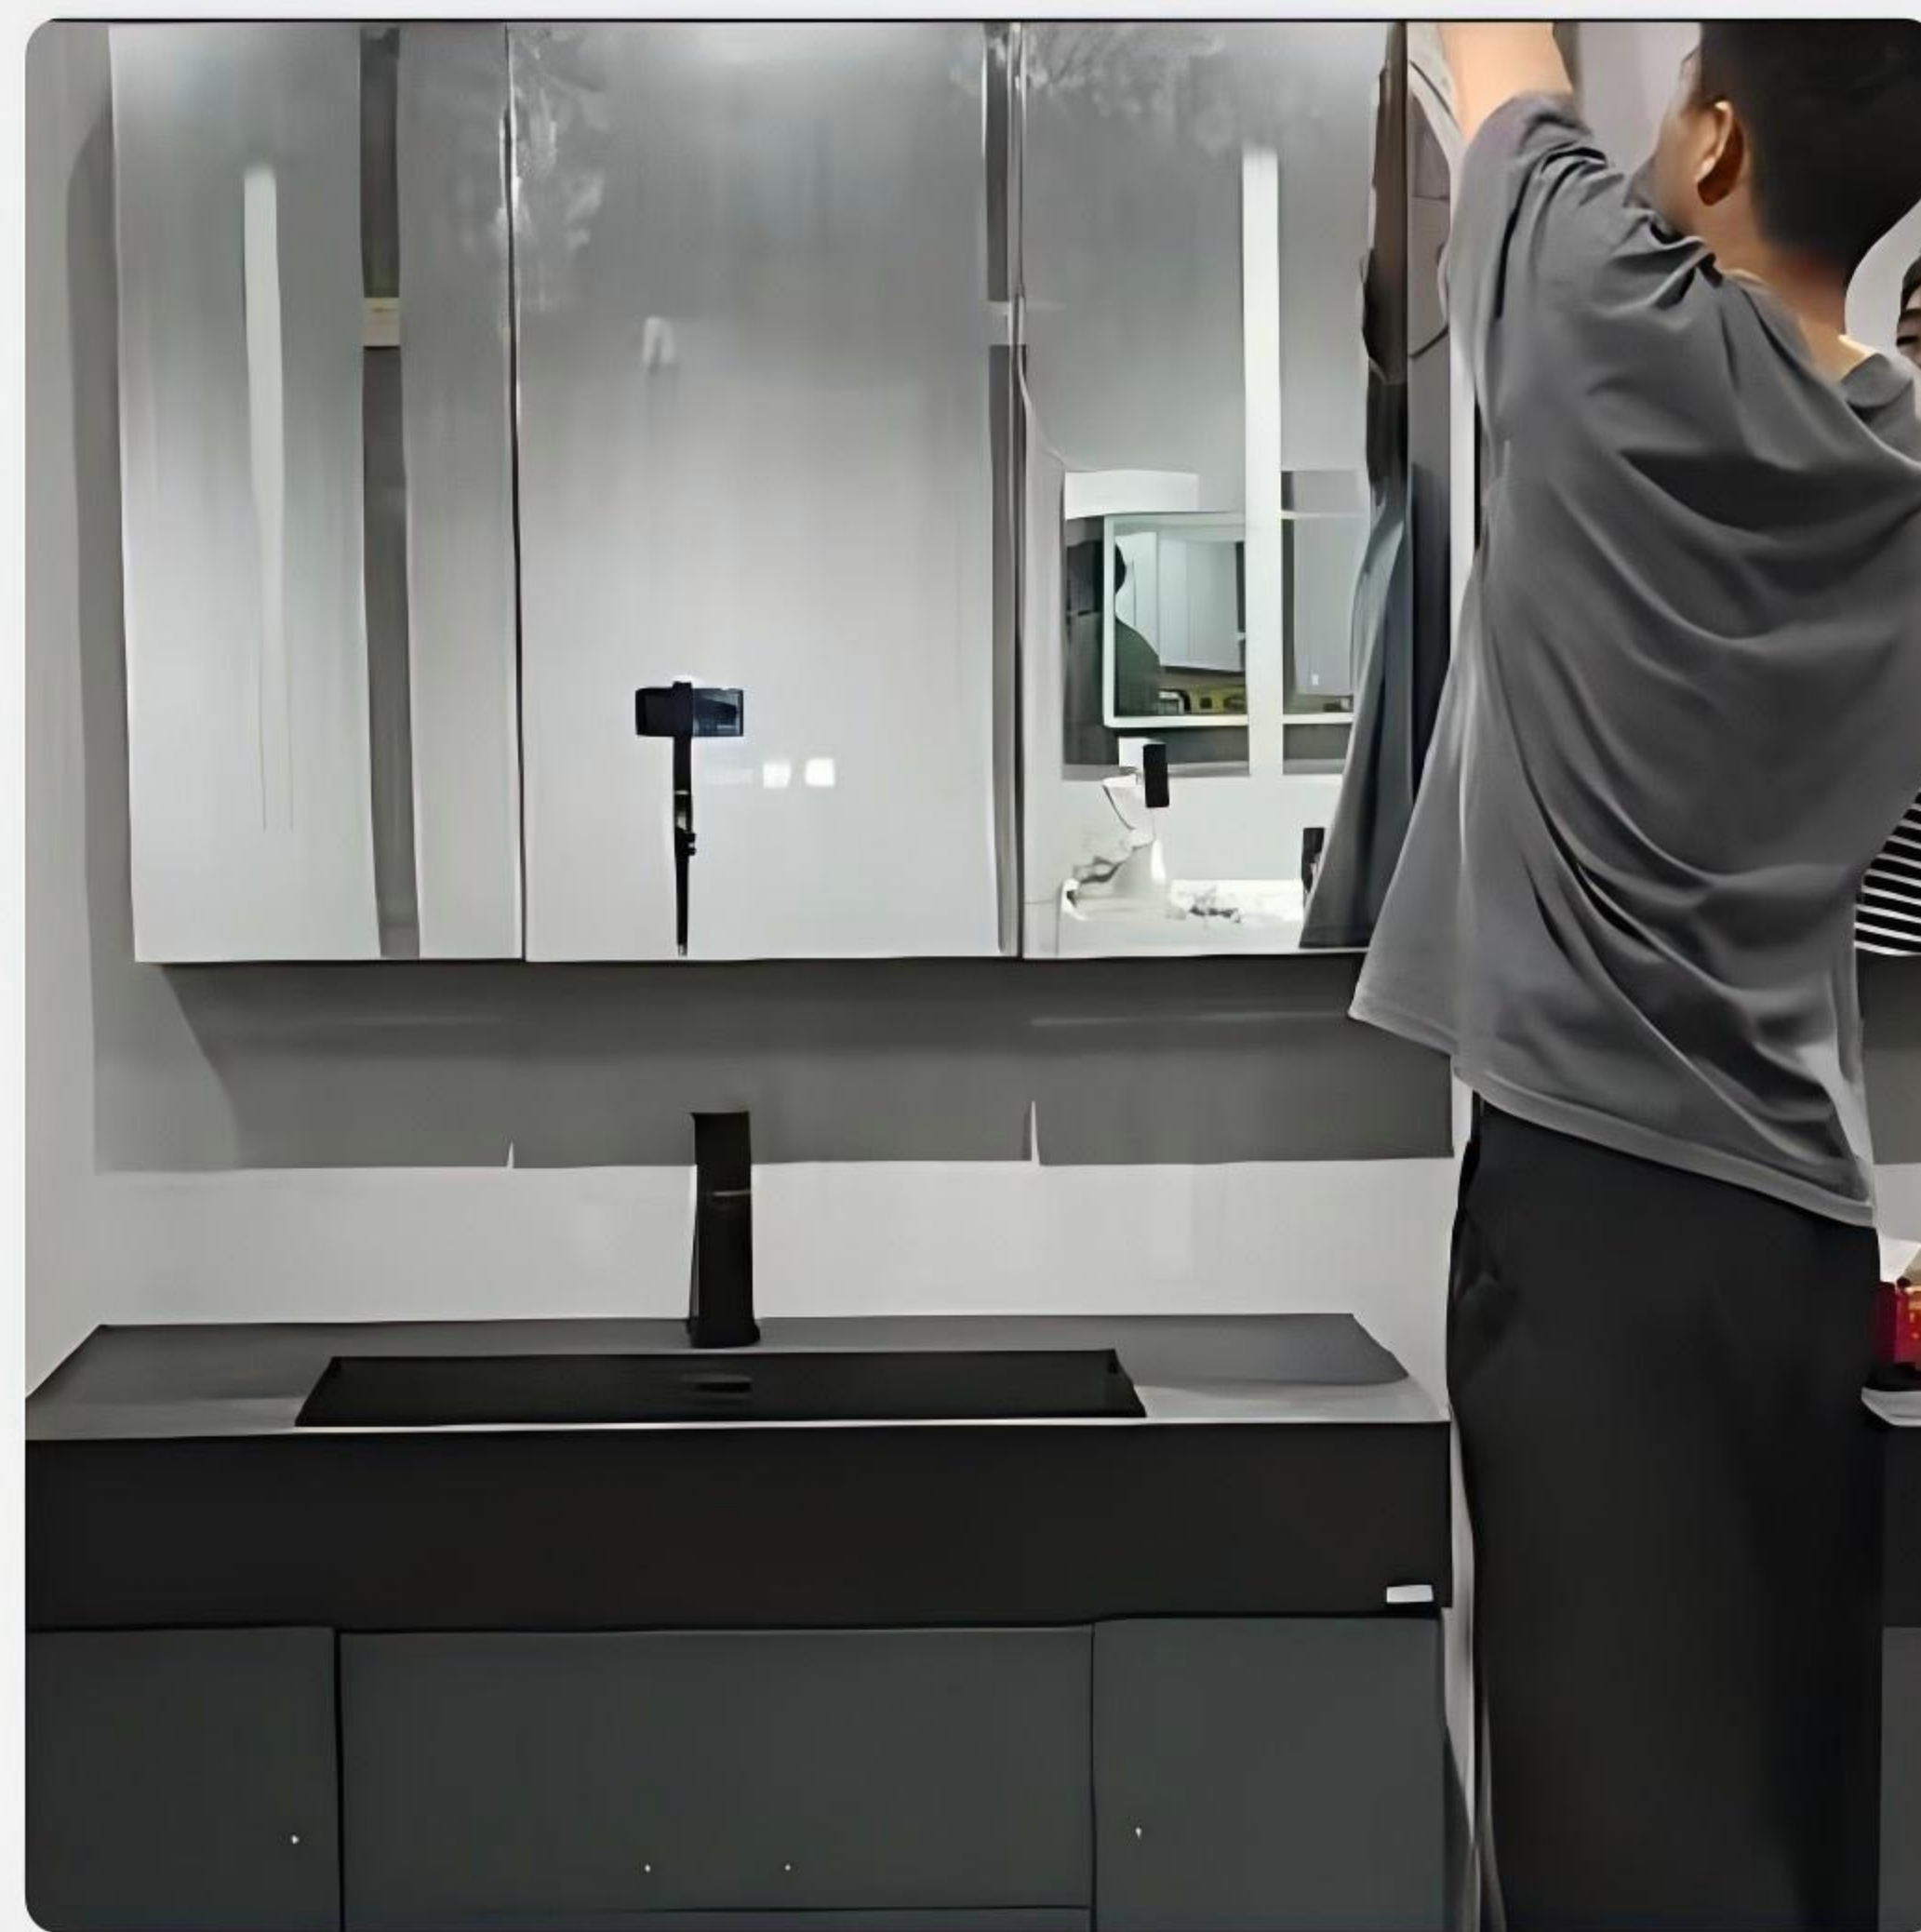

Unscrew the handles from the main cabinet and drawer doors from the inside, then reinstall them correctly on the exterior.

**The installation is now complete.**