

# NOTICE

Dear Customer,


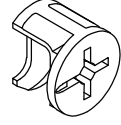
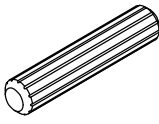

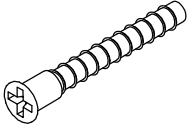





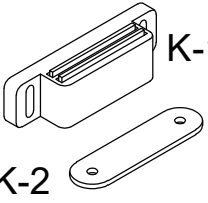

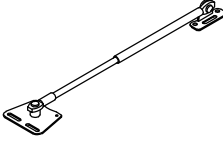
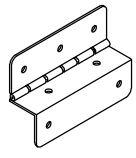
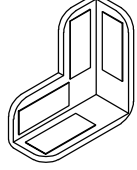

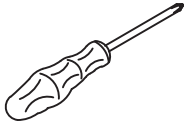
All of our products have got strict quality inspection, but we can't guarantee that each set got no issues. When you get troubles with installation or found any product issues, such as wood breakage, lacquer scratch, toolkit missing etc, we hope that you can contact our mailbox: niexift234528@163.com before you give feedback or review, we will solve your problem until you are satisfied, thank you!

HOTAMO

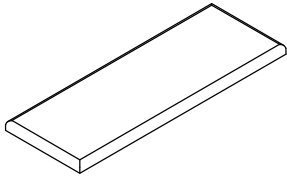
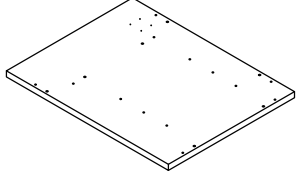
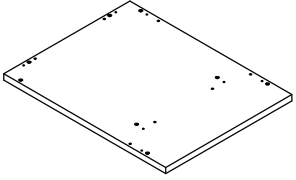
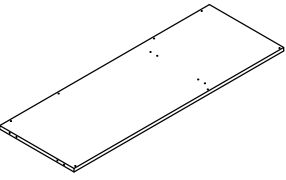
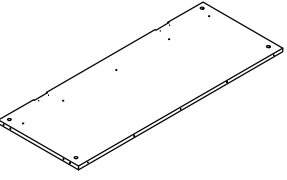
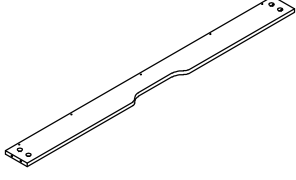
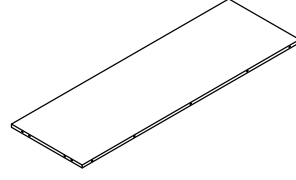
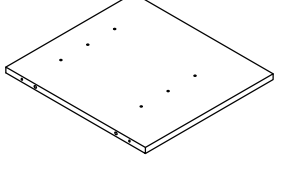
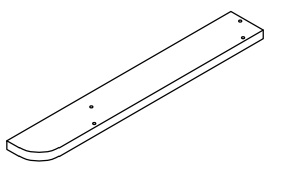
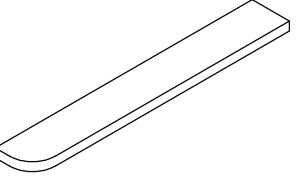
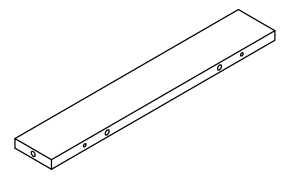
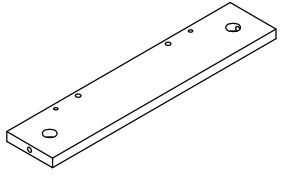
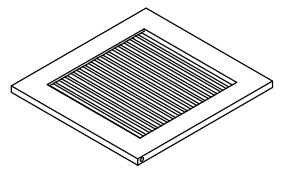
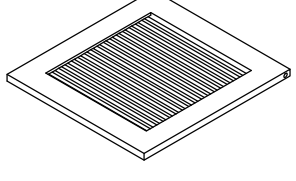
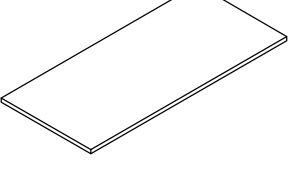
Please check the installation videos on our YouTube channel named: 42.5" Shoe Bench with Lift Top Storage, Entryway Bench with Cushioned Seat



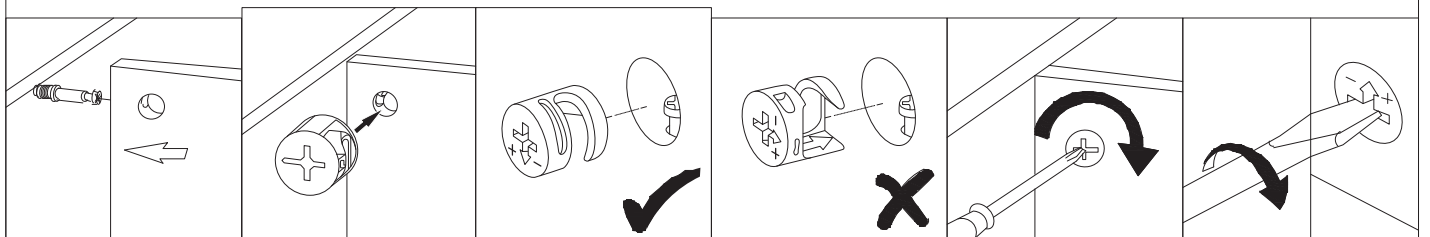
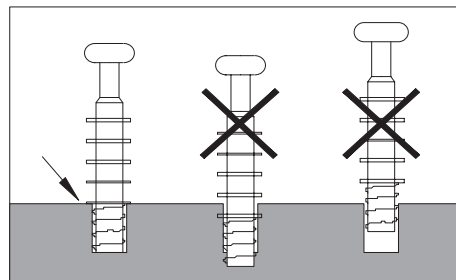
# HARDWARE LIST

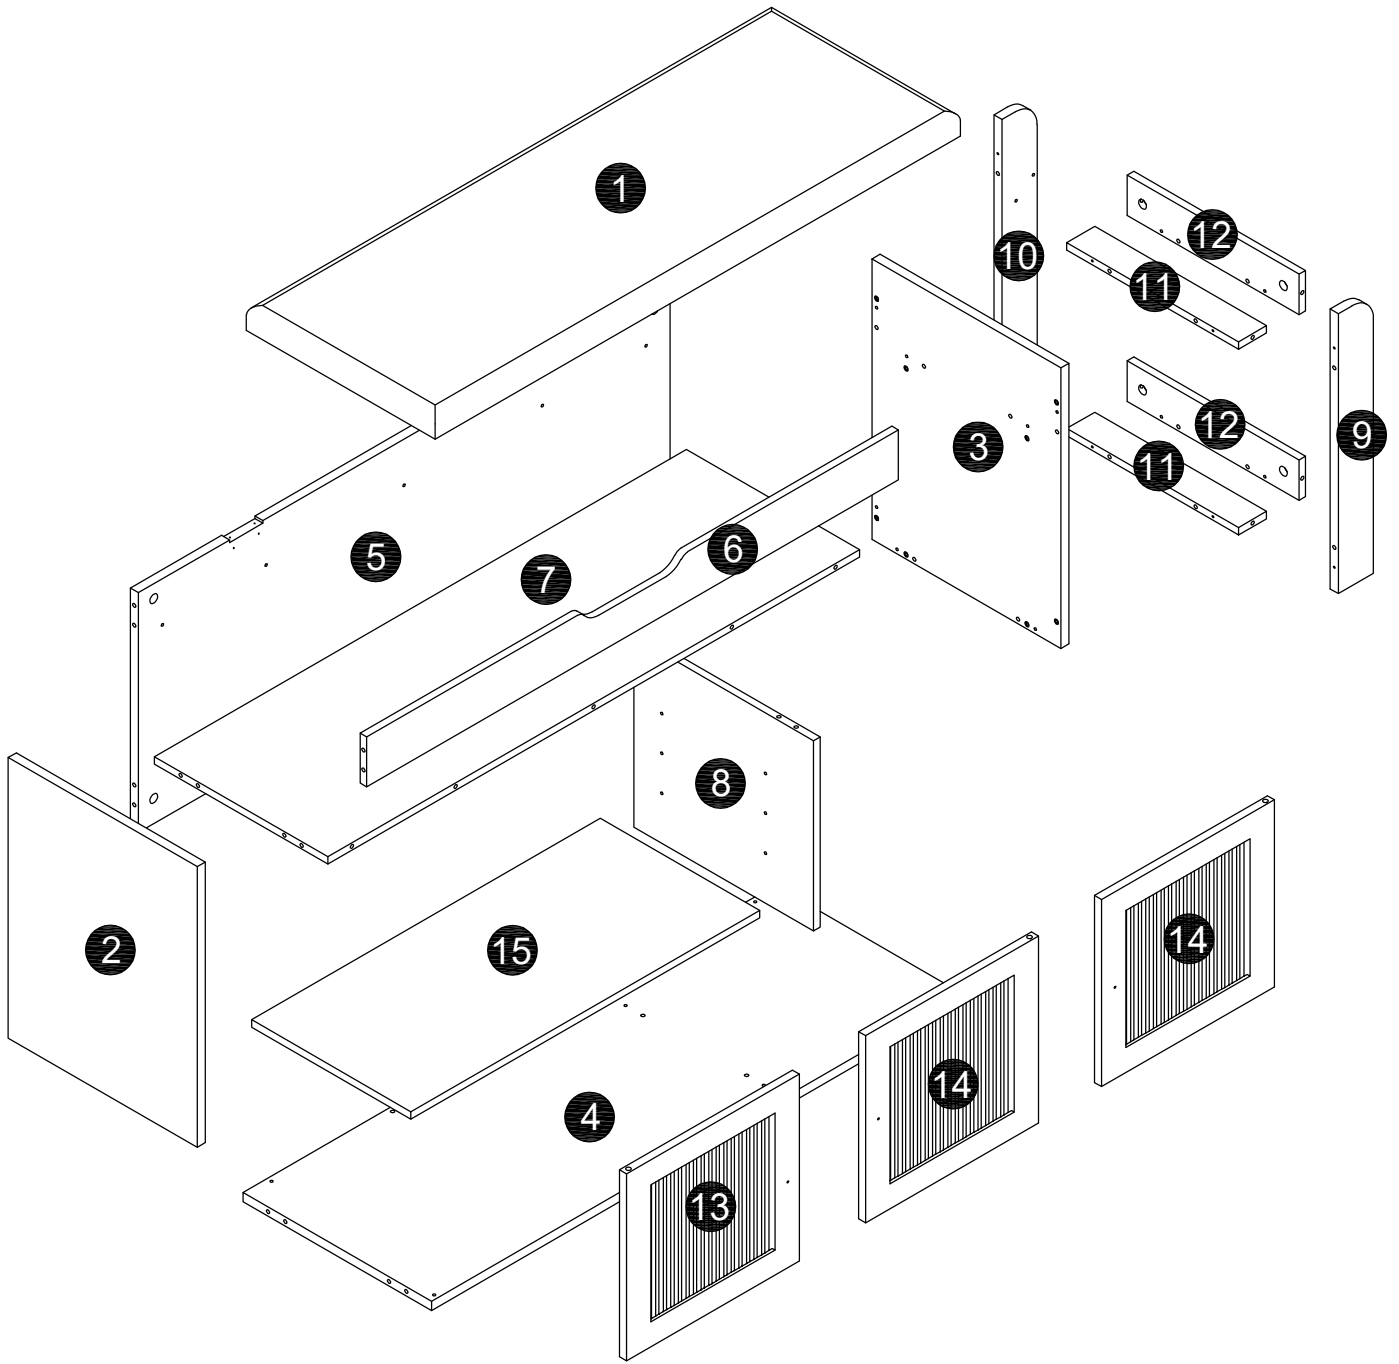
|   |  |   |   |  |
|---|--|---|---|--|
| <p><b>A</b></p>  <p>6×35mm<br/>40(+2)PCS</p>   | <p><b>B</b></p>  <p>40(+2)PCS</p>           | <p><b>C</b></p>  <p>6×30mm<br/>30(+2)PCS</p> | <p><b>D</b></p>  <p>M3×12mm<br/>6PCS</p> | <p><b>E</b></p>  <p>M5×40mm<br/>13(+1)PCS</p> |
| <p><b>F</b></p>  <p>M3×14mm<br/>20(+2) PCS</p> | <p><b>G</b></p>  <p>M3.5×14mm<br/>6 PCS</p> | <p><b>H</b></p>  <p>M4×16mm<br/>3 PCS</p>    | <p><b>I</b></p>  <p>3 PCS</p>            | <p><b>J</b></p>  <p>4 PCS</p>                 |
| <p><b>K</b></p>  <p>K-1<br/>K-2<br/>3 PCS</p>  | <p><b>L</b></p>  <p>6 PCS</p>               | <p><b>M</b></p>  <p>1 PC</p>                 | <p><b>N</b></p>  <p>2 PCS</p>            | <p><b>O</b></p>  <p>4 PCS</p>                 |
| <p><b>P</b></p>  <p>5 PCS</p>                | <p><b>Q</b></p>  <p>1 PC</p>              |   |   |  |

PANEL LIST

|  |   |   |  |
|--|---|---|--|
| <p>1</p>  <p>1PC</p>    | <p>2</p>  <p>1PC</p>     | <p>3</p>  <p>1PC</p>    | <p>4</p>  <p>1PC</p>    |
| <p>5</p>  <p>1PC</p>    | <p>6</p>  <p>1PC</p>     | <p>7</p>  <p>1PC</p>    | <p>8</p>  <p>1PC</p>    |
| <p>9</p>  <p>1PC</p>   | <p>10</p>  <p>1PC</p>   | <p>11</p>  <p>2PCS</p> | <p>12</p>  <p>2PCS</p> |
| <p>13</p>  <p>1PC</p> | <p>14</p>  <p>2PCS</p> | <p>15</p>  <p>1PC</p> |  |


Installation method of three in one rod and buckle

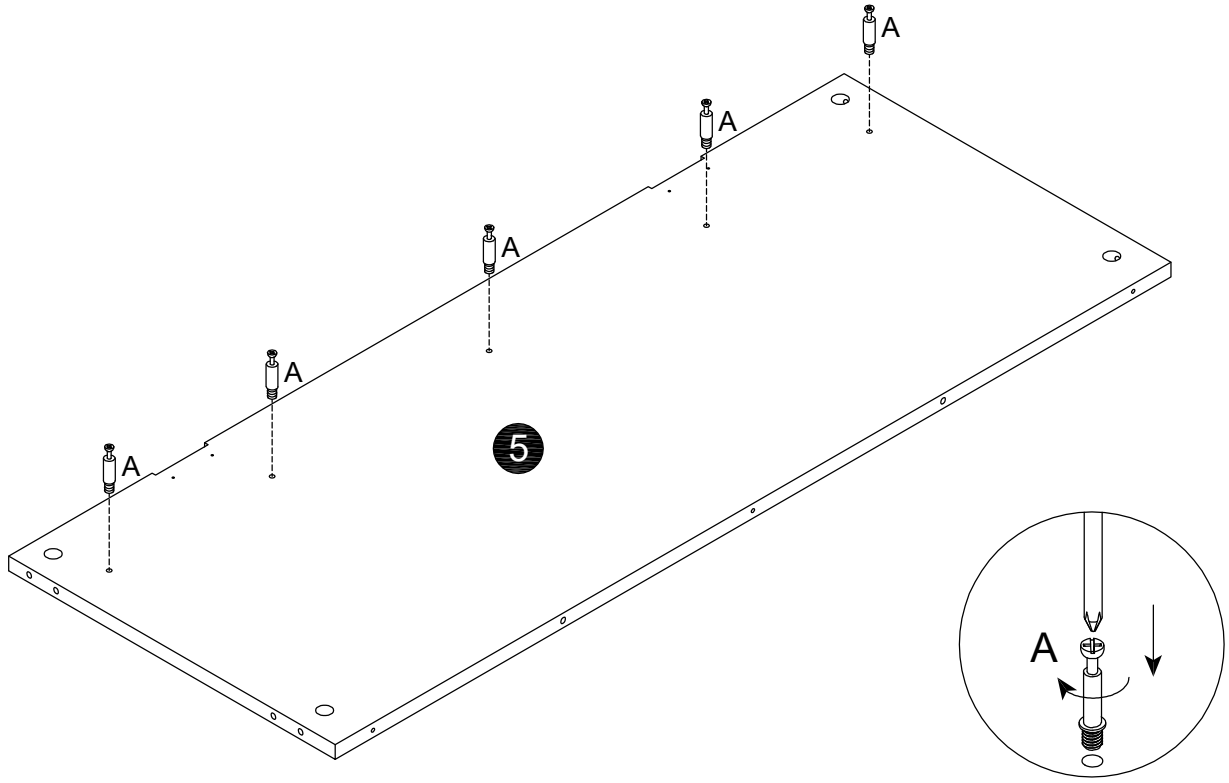




01

# INSTALLATION STEPS


Ax5 

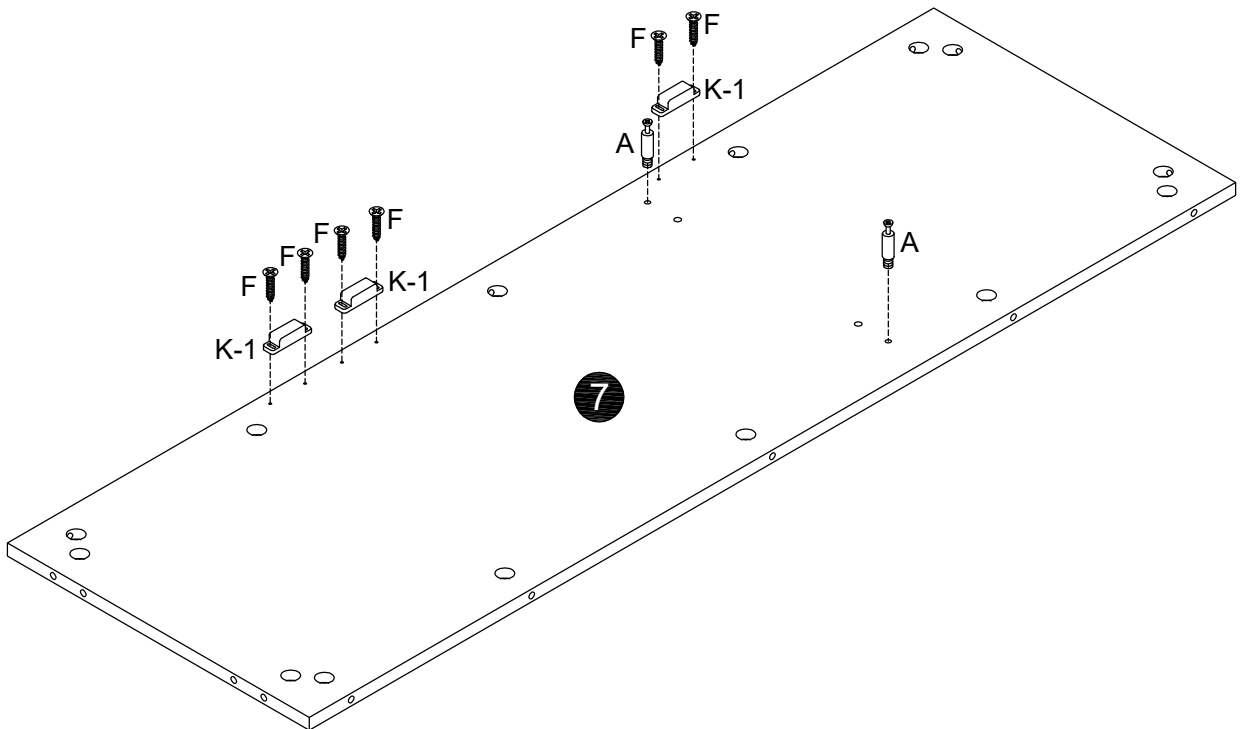


02

Ax2 

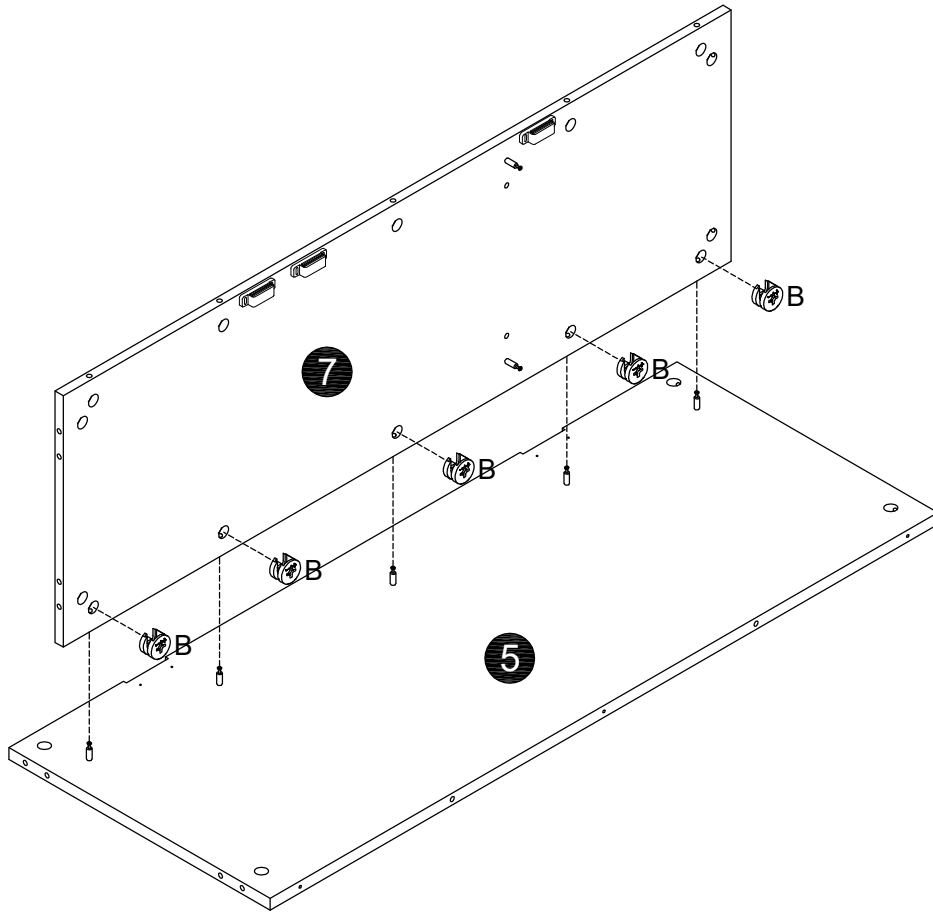
Fx6 

K-1x3 



03

Bx5

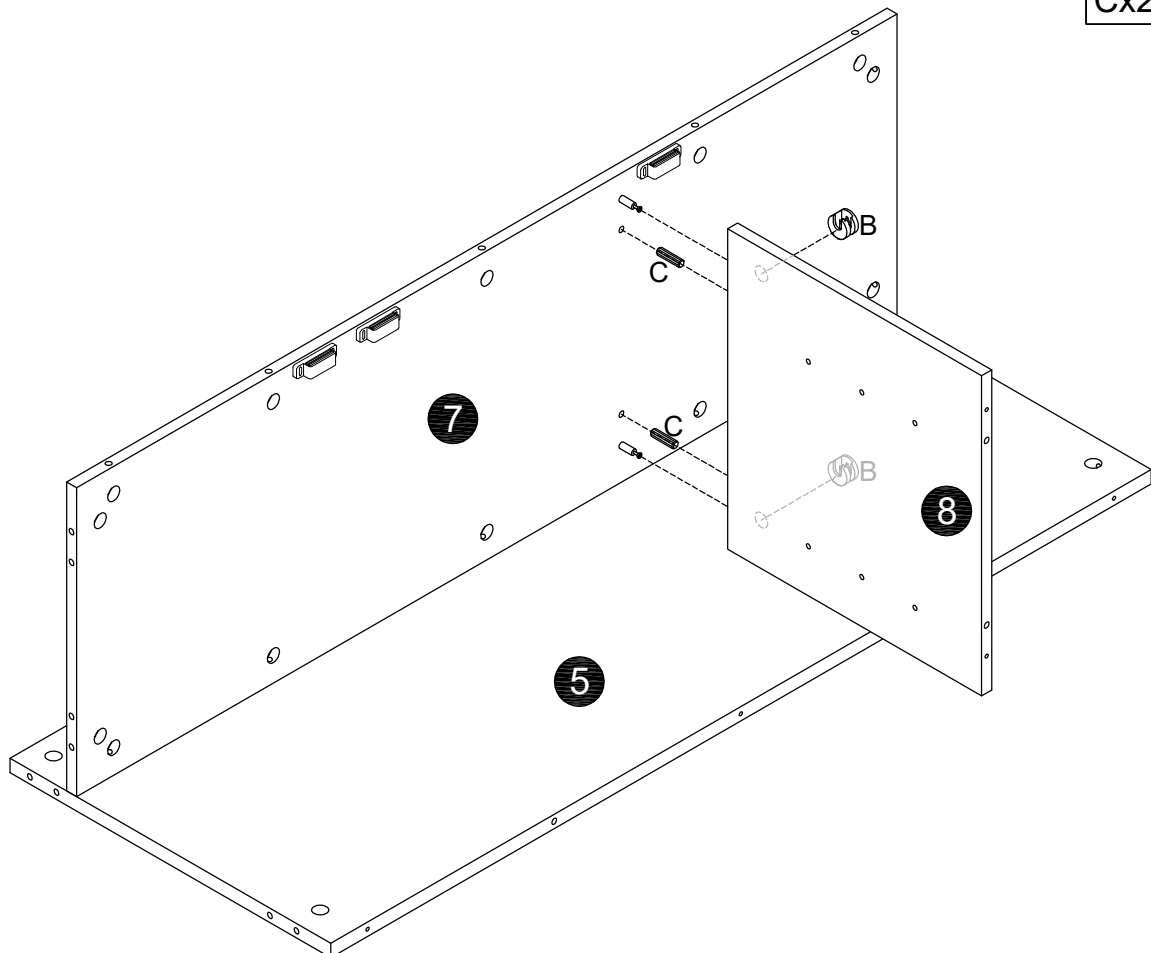


04


Bx2

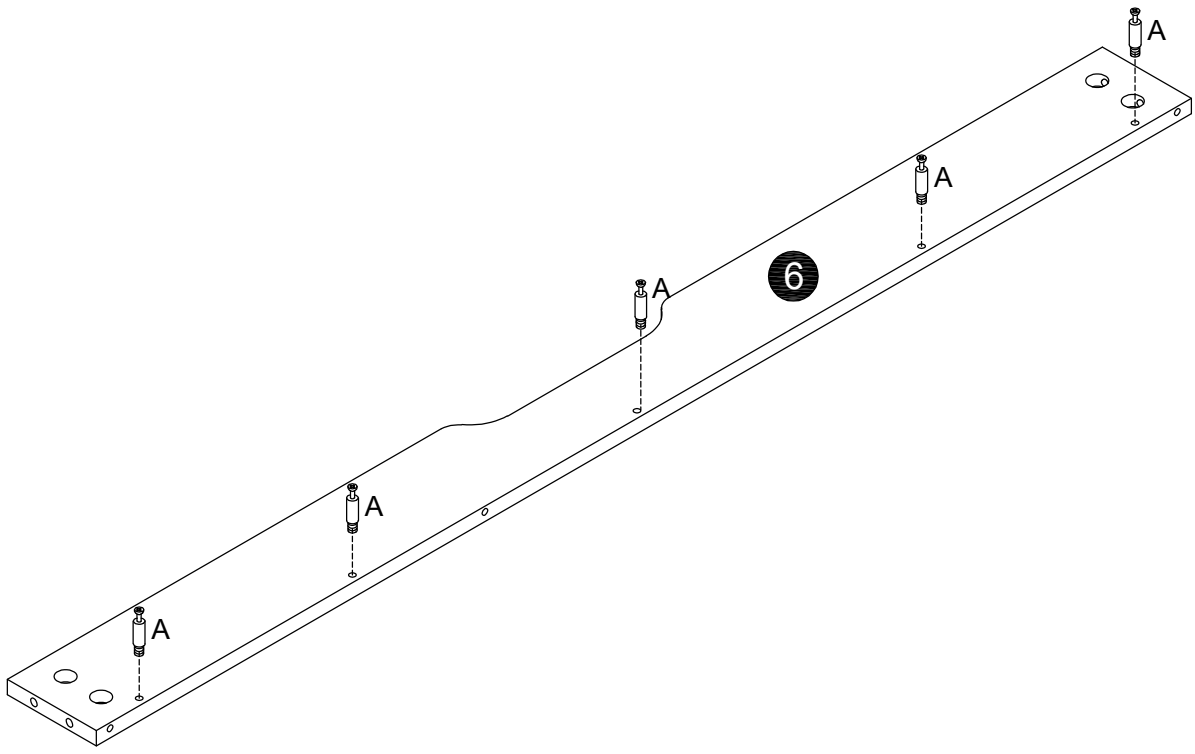


Cx2




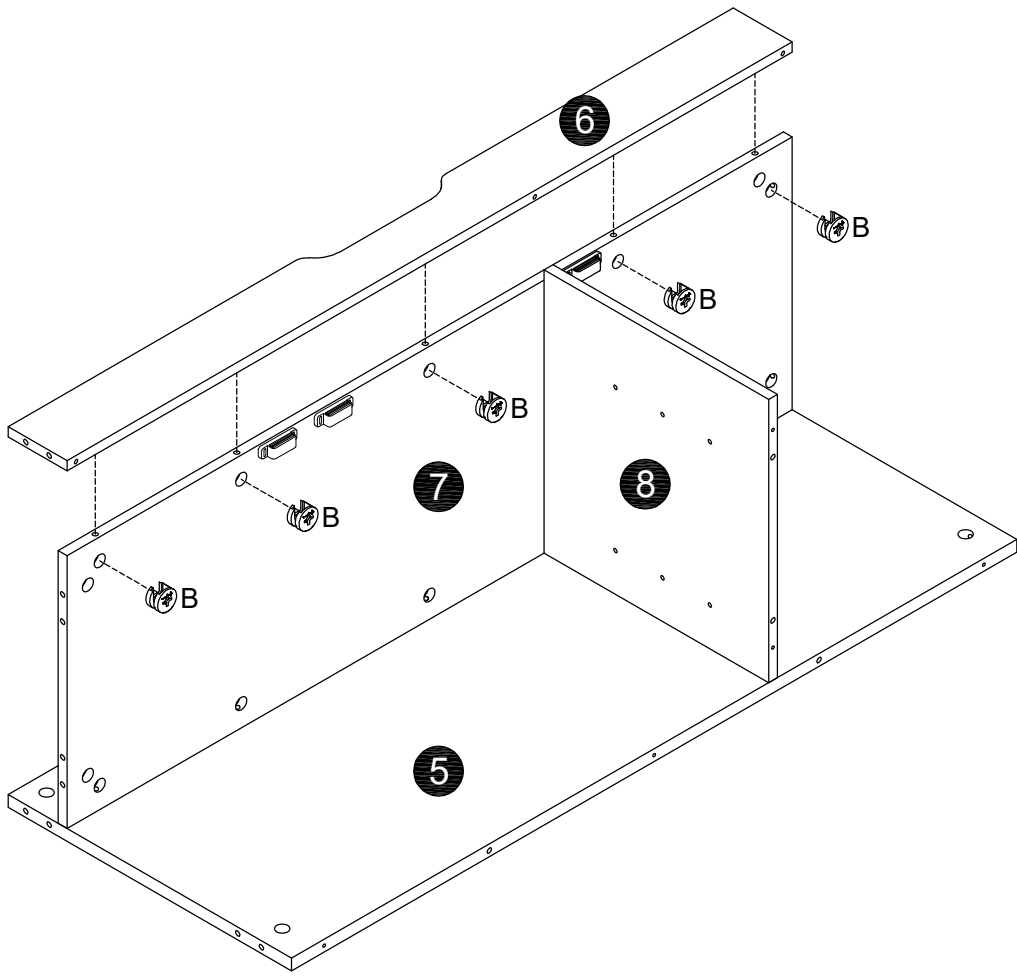
05

Ax5 





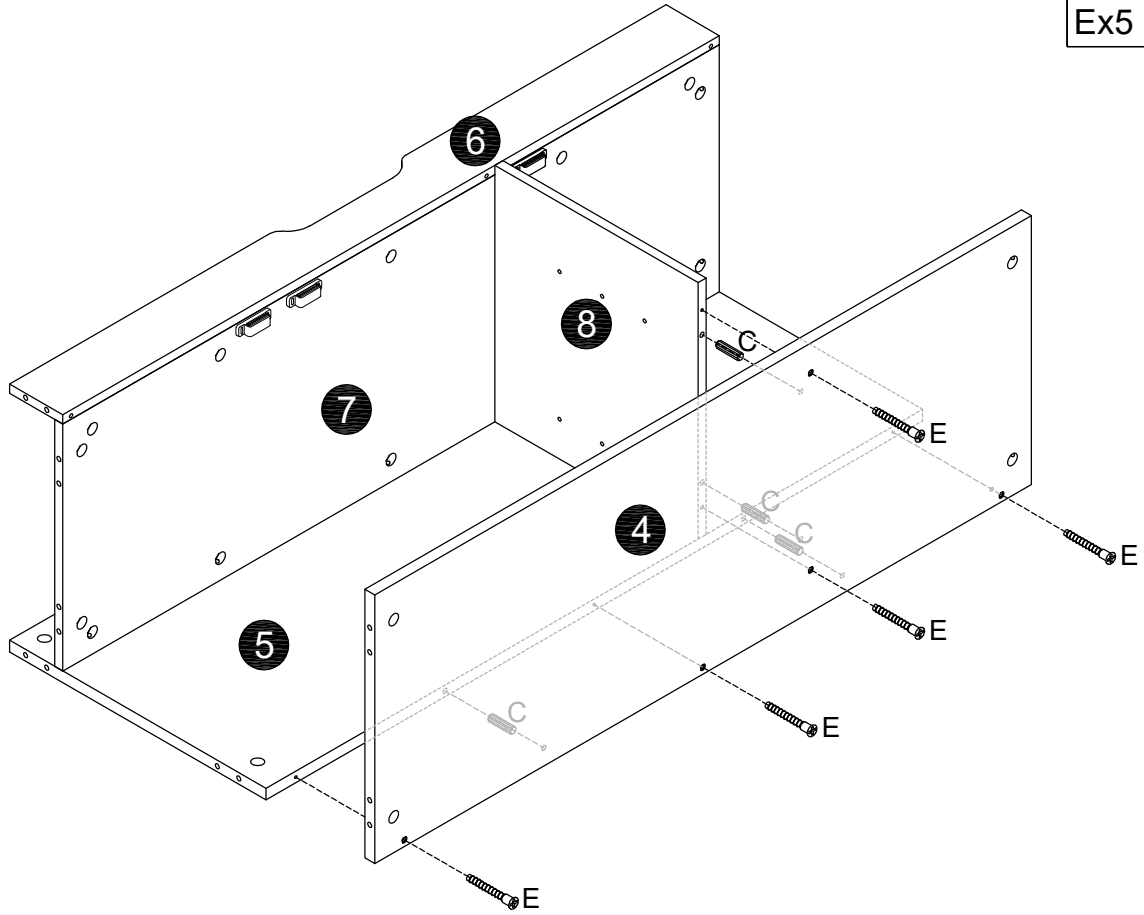
06

Bx5 



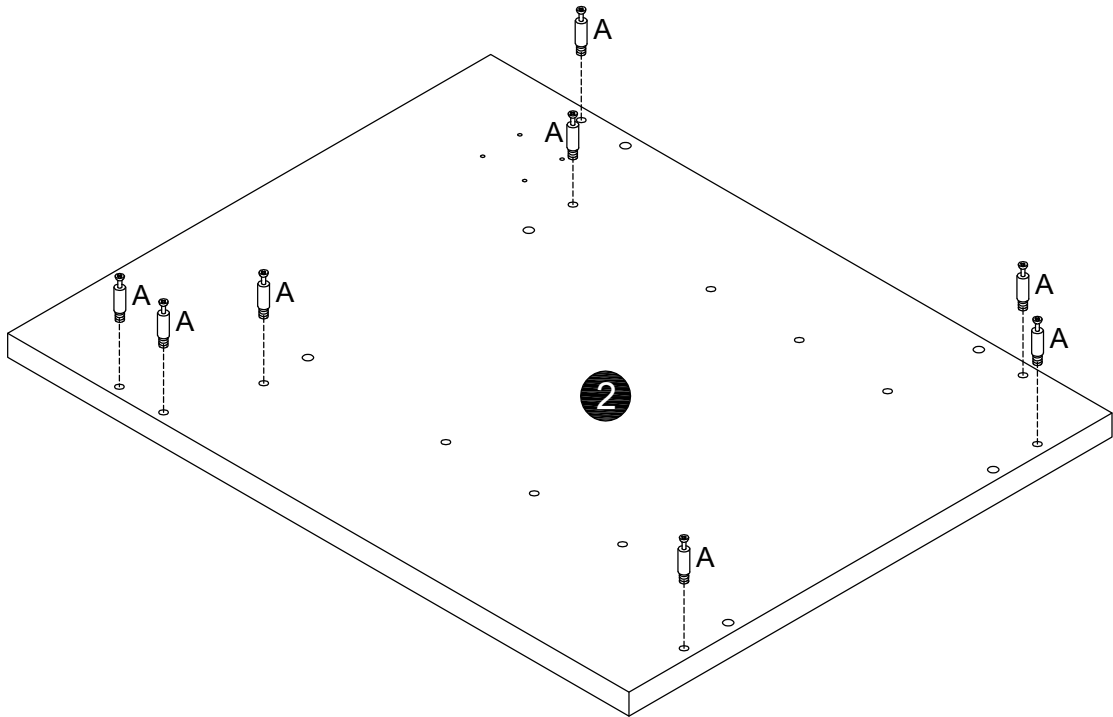
07

Cx4   
Ex5 






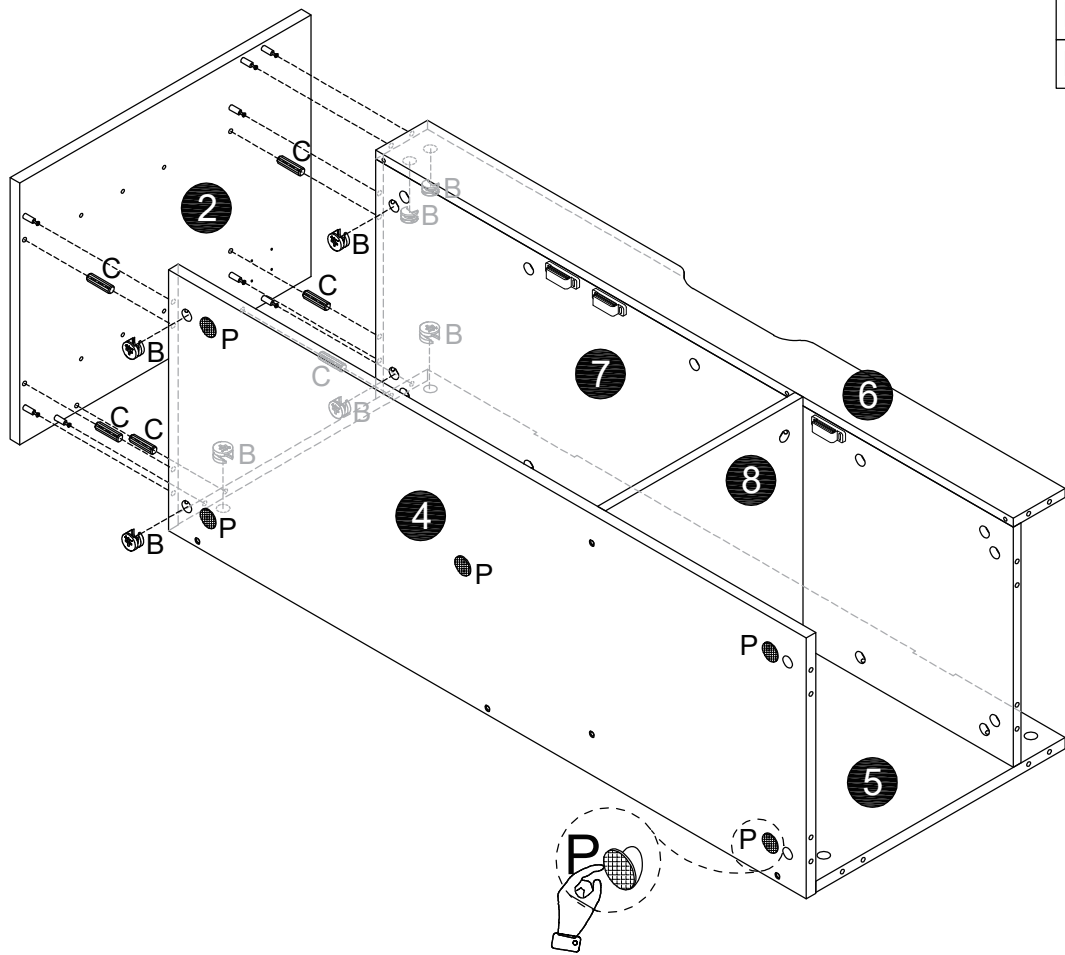
08

Ax8 






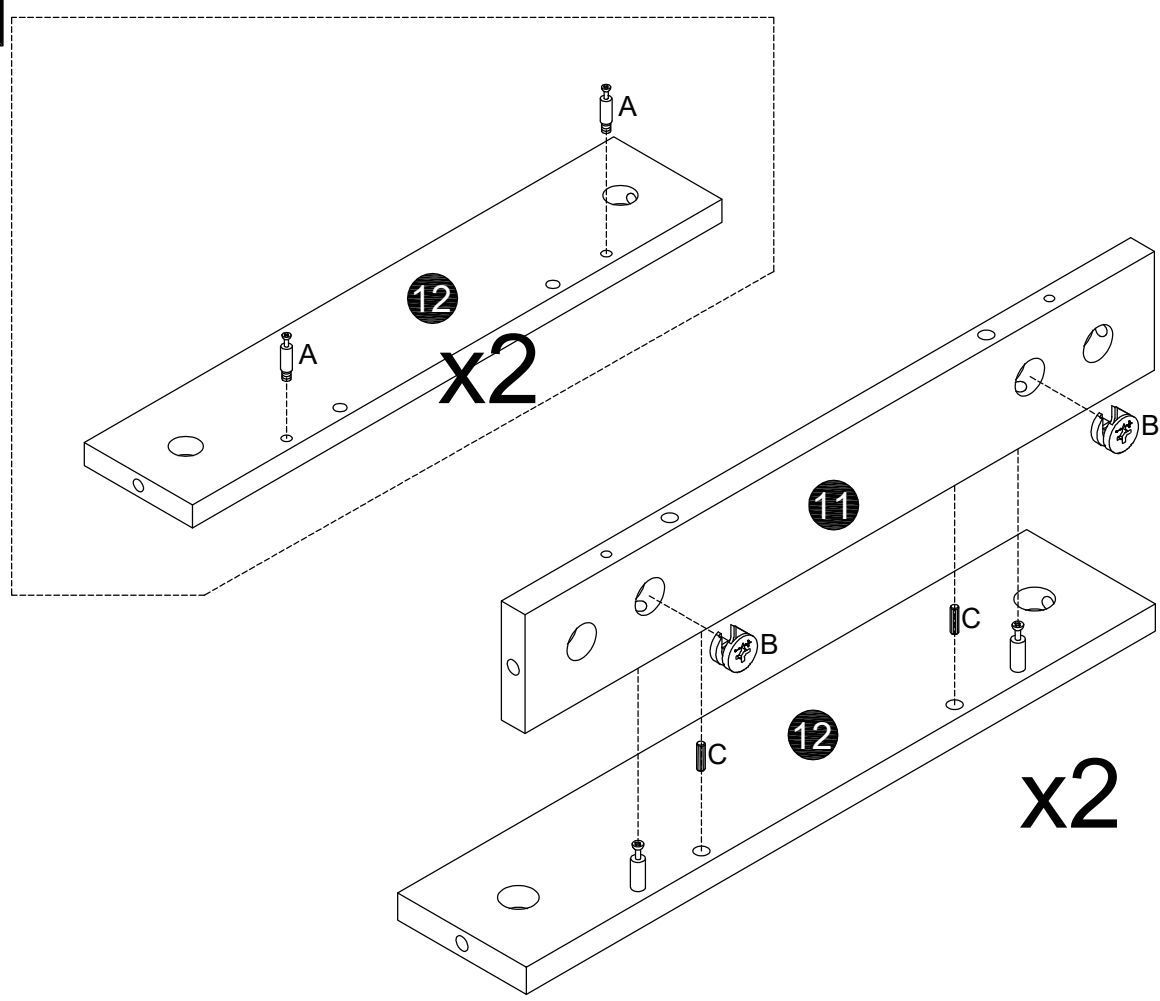
09

|     |   |
|-----|---|
| Cx6 |   |
| Bx8 |  |
| Px5 |  |





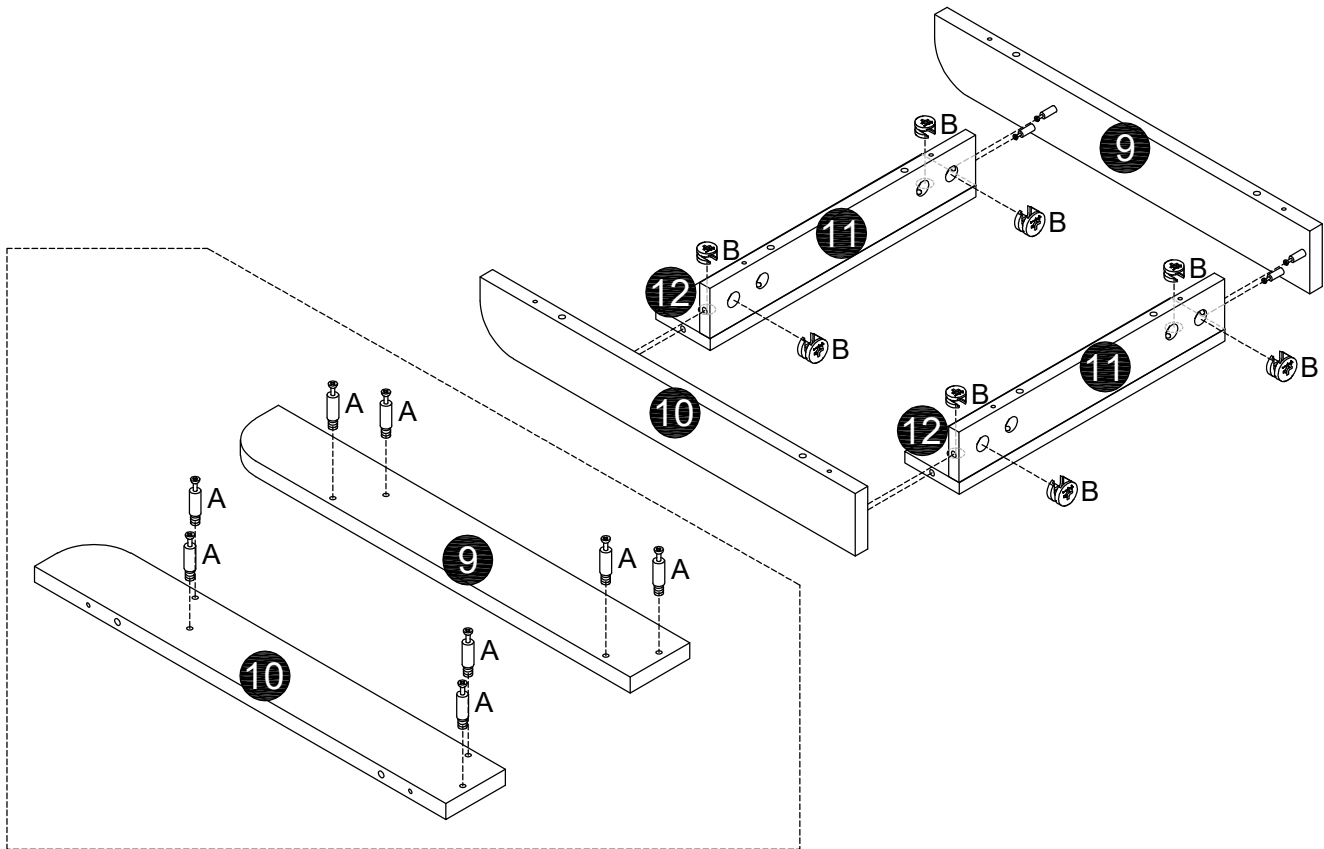
10

|     |   |
|-----|---|
| Ax4 |  |
| Cx4 |  |
| Bx4 |  |



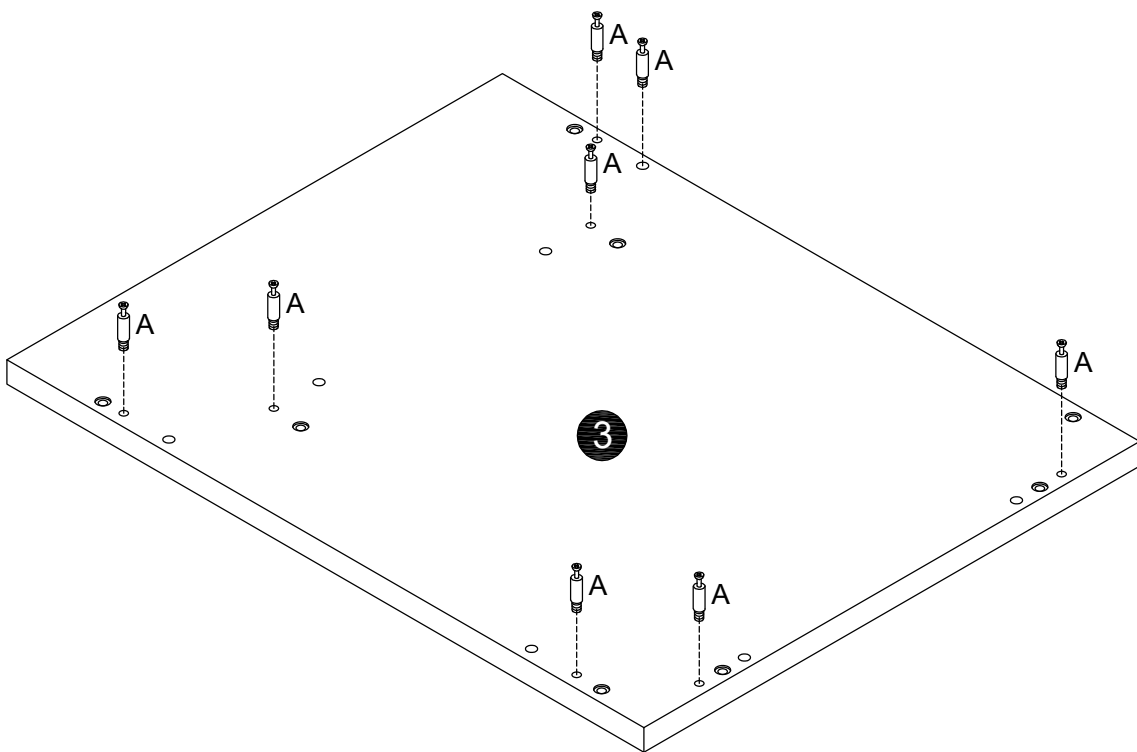
11

Ax8   
Bx8 





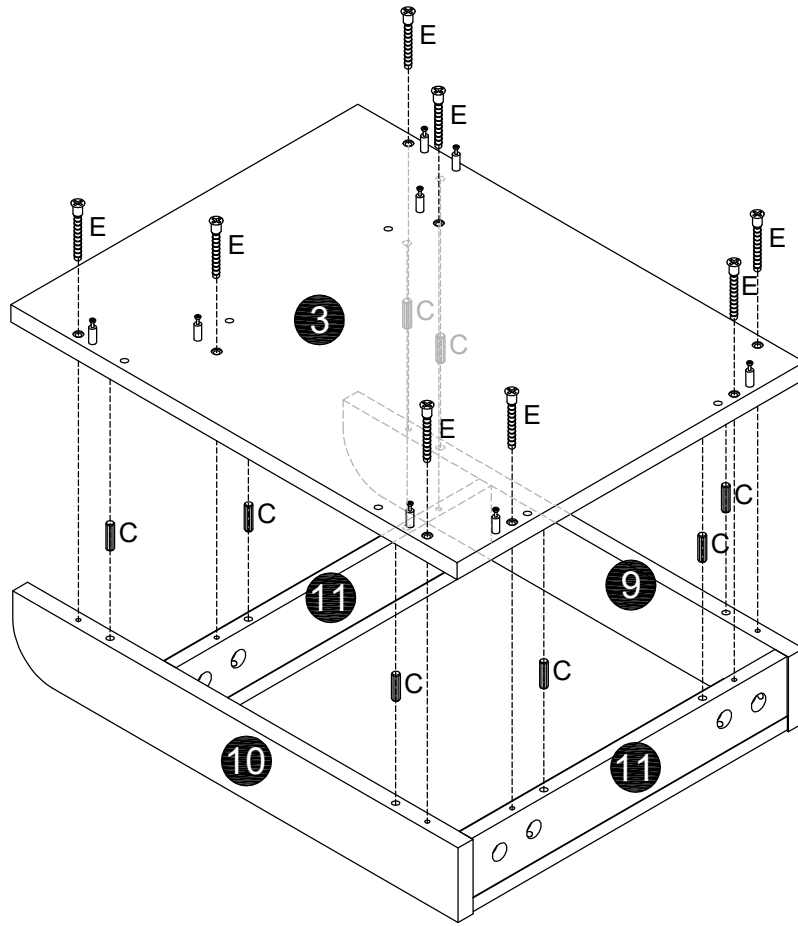
12

Ax8 





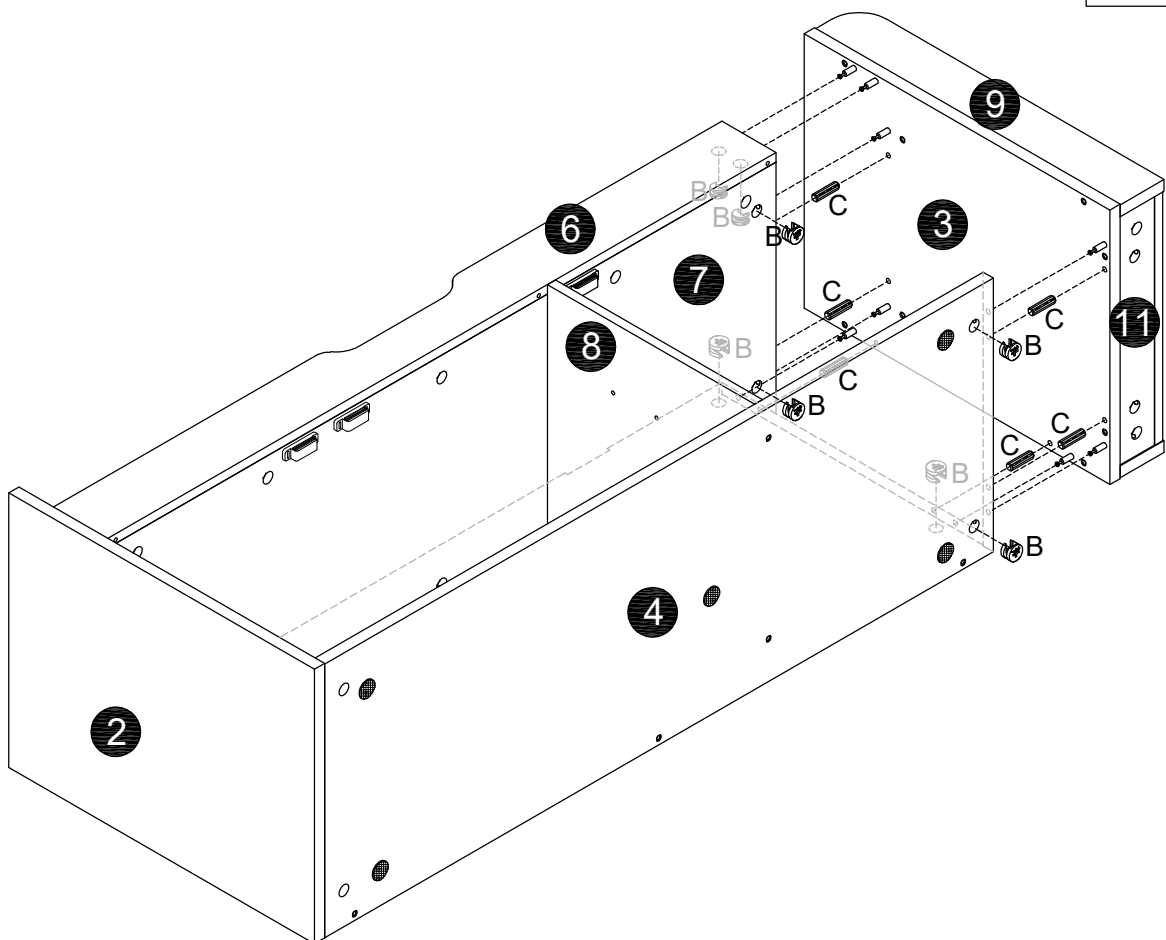
13

|     |   |
|-----|---|
| Cx8 |   |
| Ex8 |  |



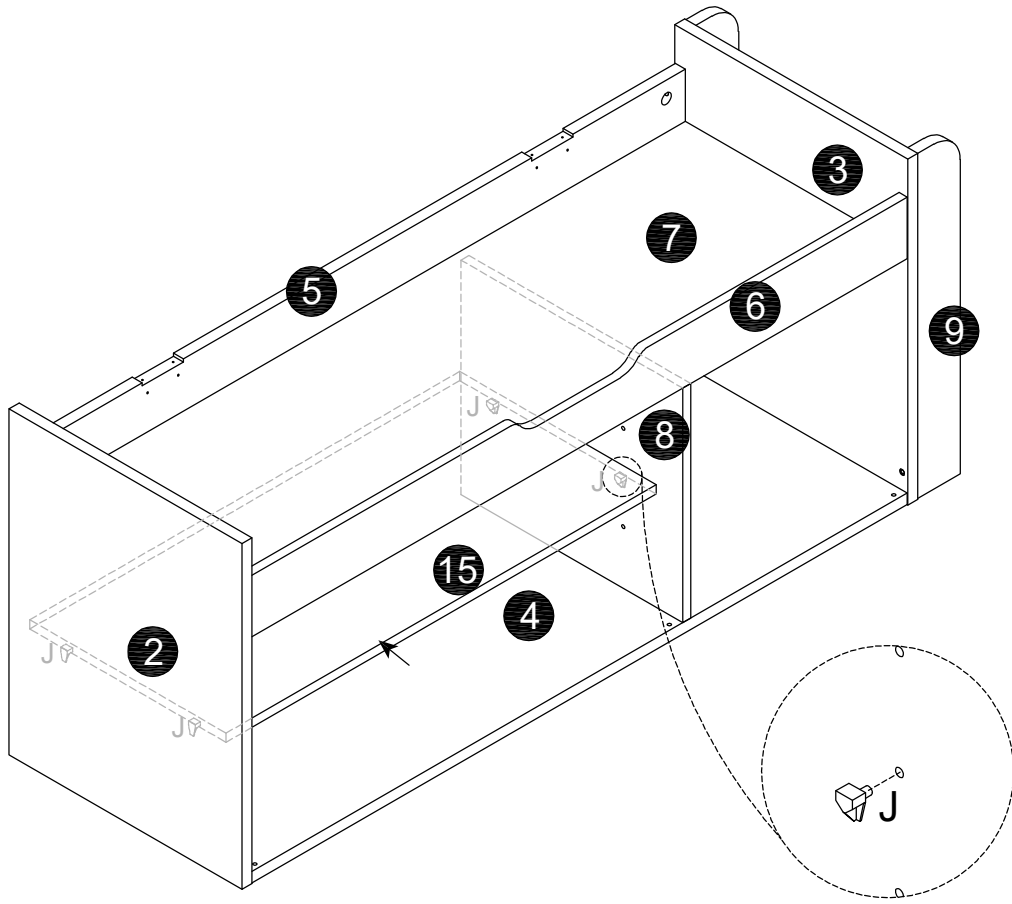
14

|     |   |
|-----|---|
| Cx6 |  |
| Bx8 |  |



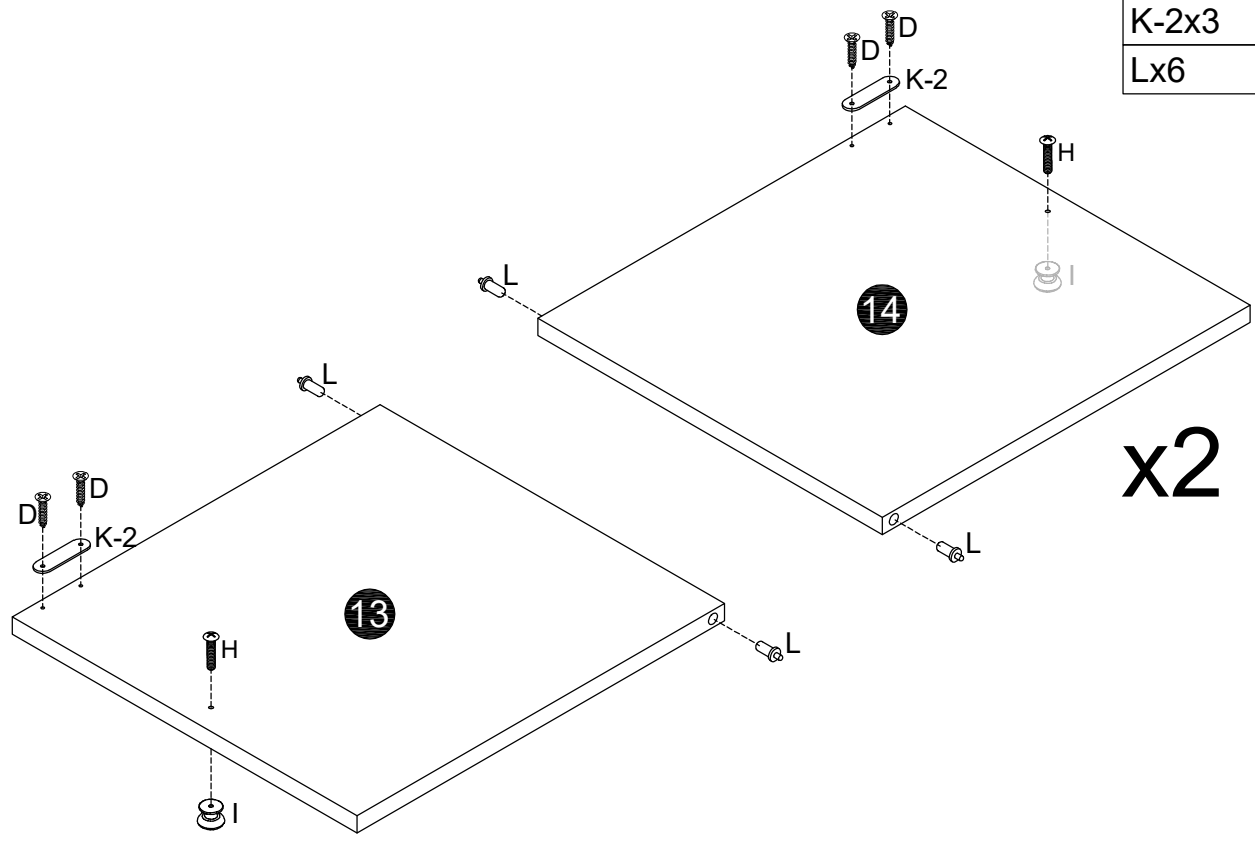
15

Jx4

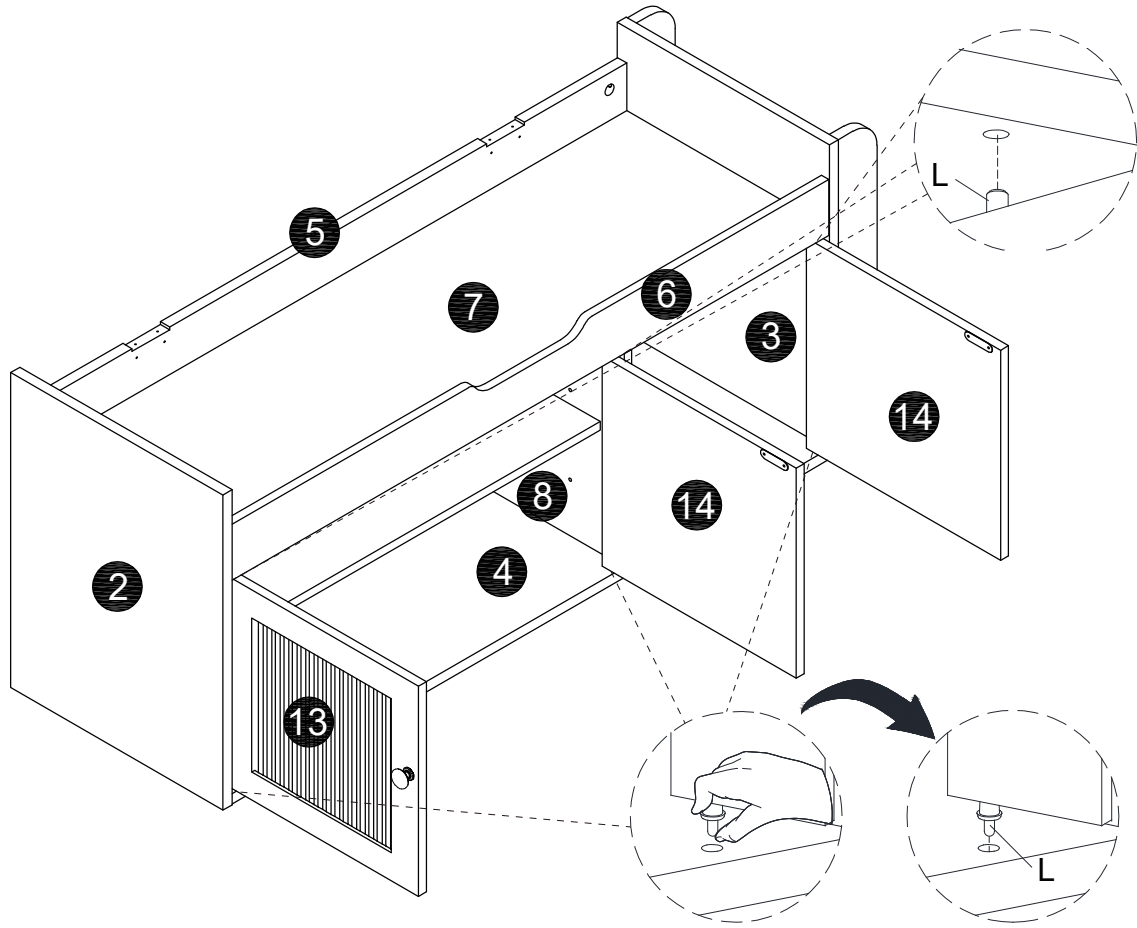


16

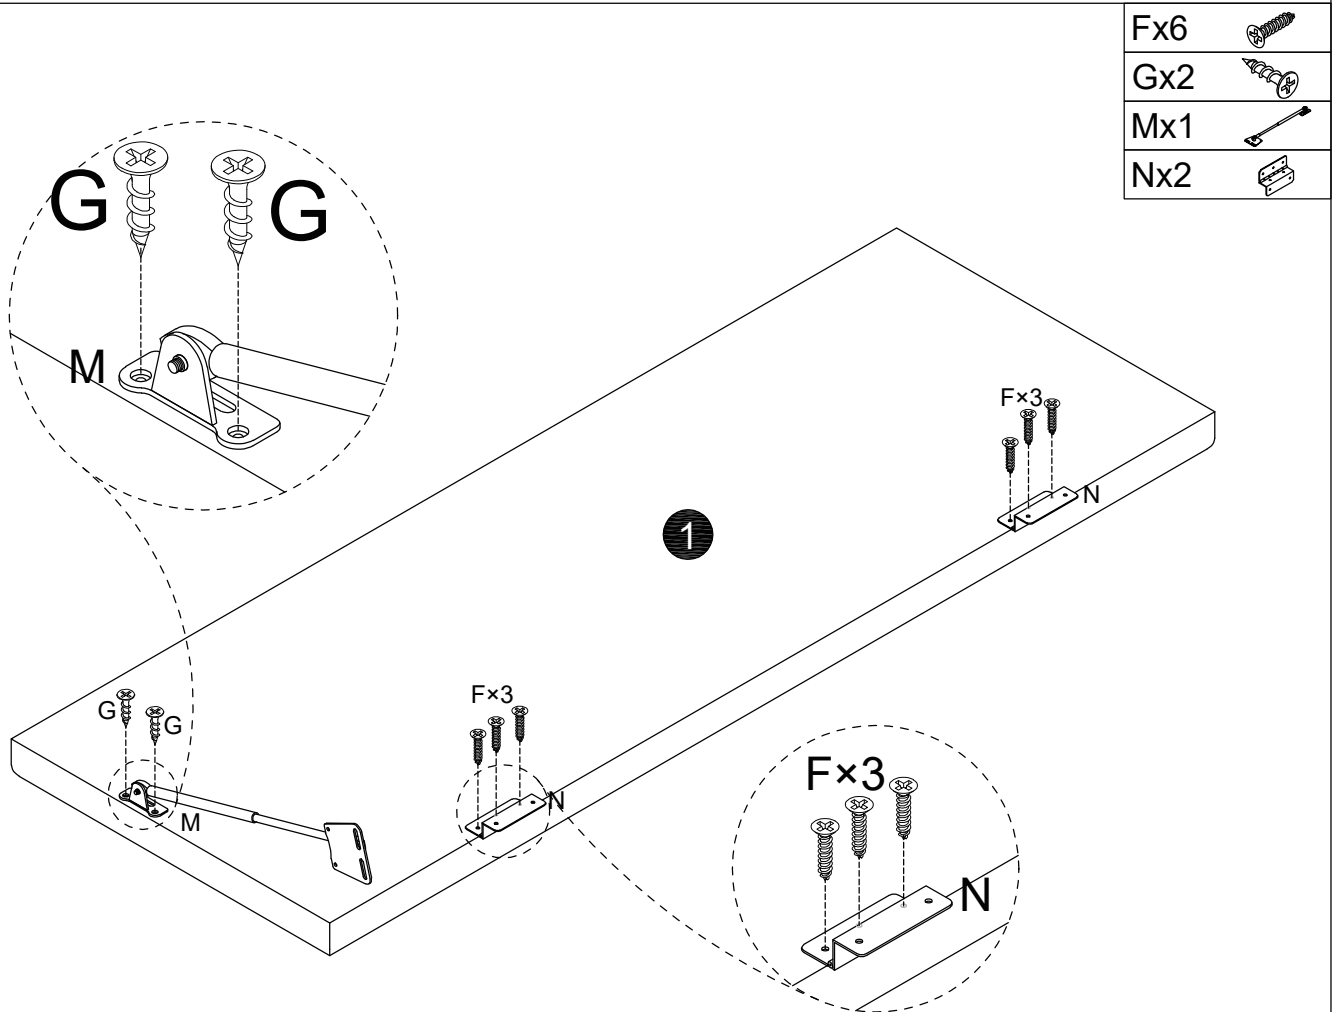
|       |  |
|-------|--|
| Dx6   |  |
| Hx3   |  |
| Ix3   |  |
| K-2x3 |  |
| Lx6   |  |





17

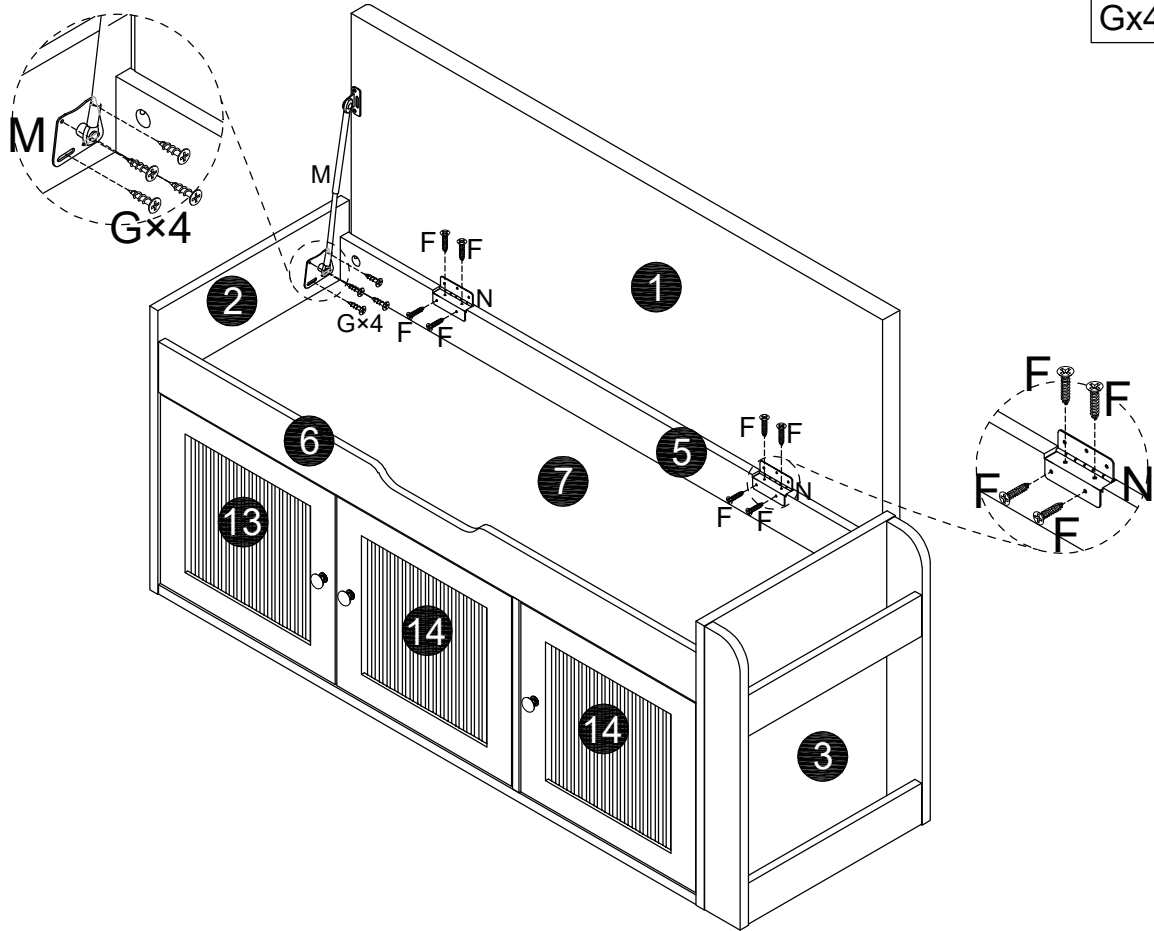


18




19

|     |   |
|-----|---|
| Fx8 |   |
| Gx4 |  |



20

|     |   |
|-----|---|
| Ox4 |  |
|-----|---|

