




DESK

ASSEMBLY INSTRUCTION

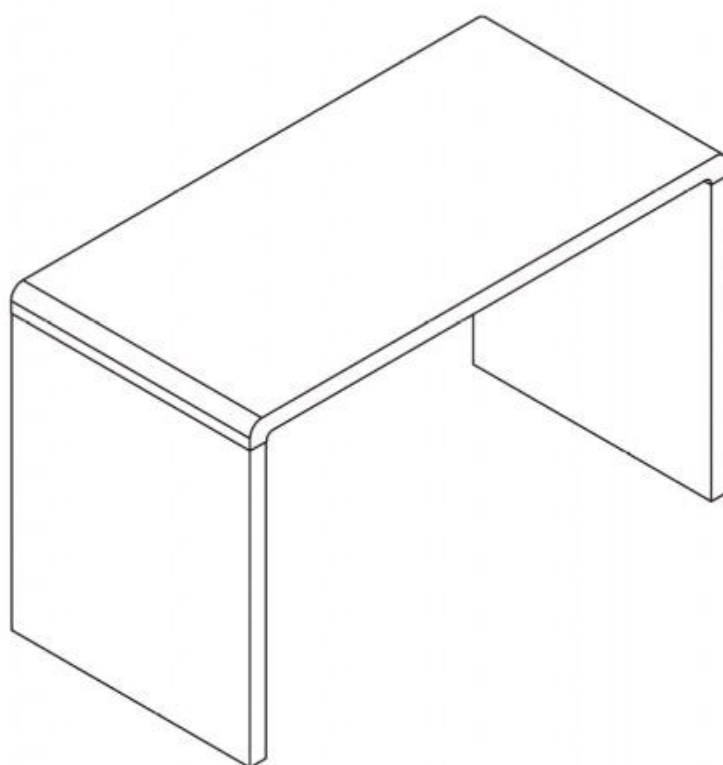

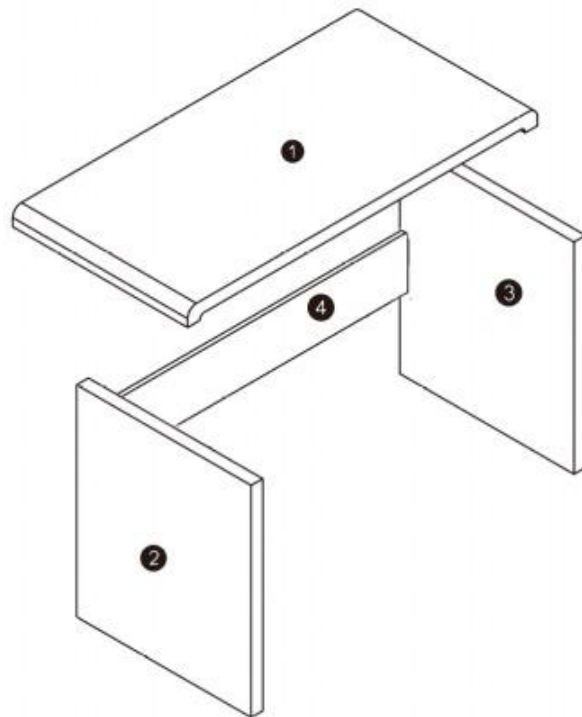










2 Person Build




Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | | | |
|---|--|---|--|--|
| <p>Ⓐ</p>  <p>M8x720mm x4</p> | <p>Ⓑ</p>  <p>Ø6x40mm x8</p> | <p>Ⓒ</p>  <p>Ø15x11mm x8</p> | <p>Ⓓ</p>  <p>Ø30mm x12</p> | <p>Ⓔ</p>  <p>M8x30mm x4</p> |
| <p>Ⓕ</p>  <p>M8x22mm x4</p> | <p>Ⓖ</p>  <p>M8 x4</p> | <p>Ⓗ</p>  <p>M8 x1</p> | <p>Ⓘ</p>  <p>X1 Screw Driver</p> | |


Step 1

Insert the wooden dowels **E** into the matching holes on Part **1**. screw the threaded rods **A** into the matching holes on Part **1**. screw the connecting rods **B** into the matching holes on Part **1**, **2**, **3**.

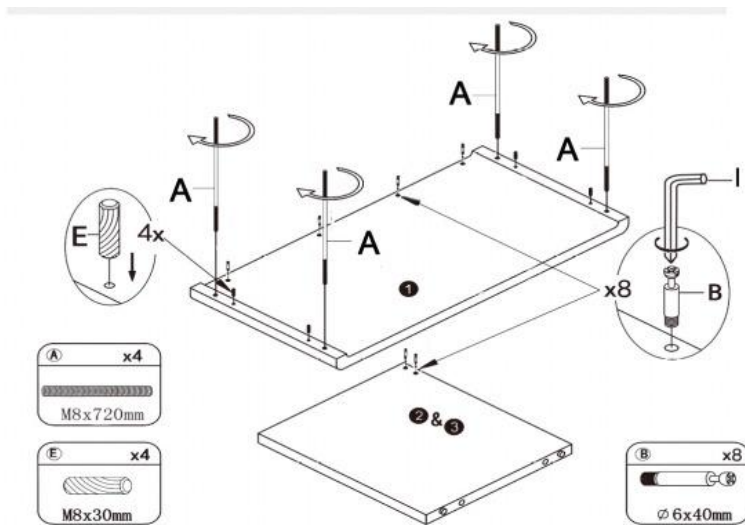


Step 2

Use fitting **C** to connecting Part **2**, **3**, **4**; once fully tightened cover the holes with stickers **D**.

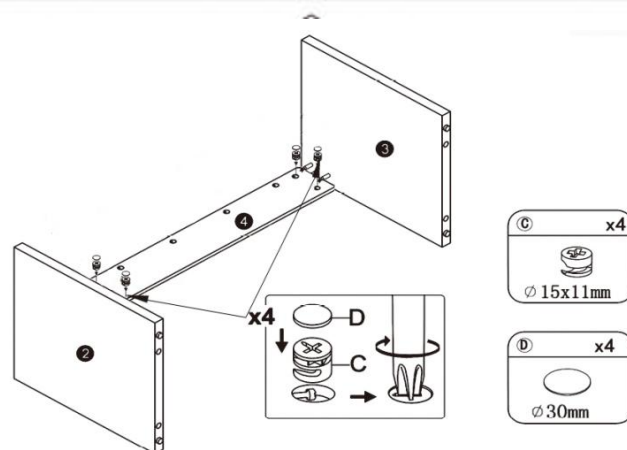

Step 3

Install the assembly Part **2**, **3**, **4** to the Part **1** through the threaded rods **E**, secure using fixing **G**, **F**, using box spanner **H** to tighten.

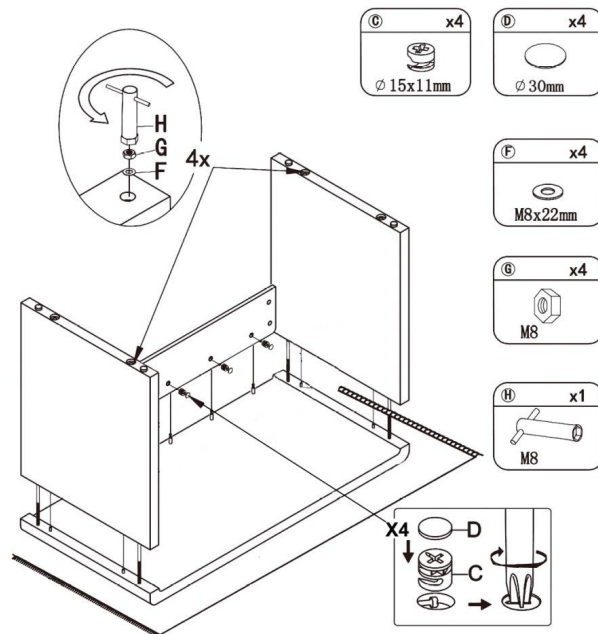

Step 4

Assembly Completion

