


Hall Tree

Assembly Instructions - Please keep for future reference

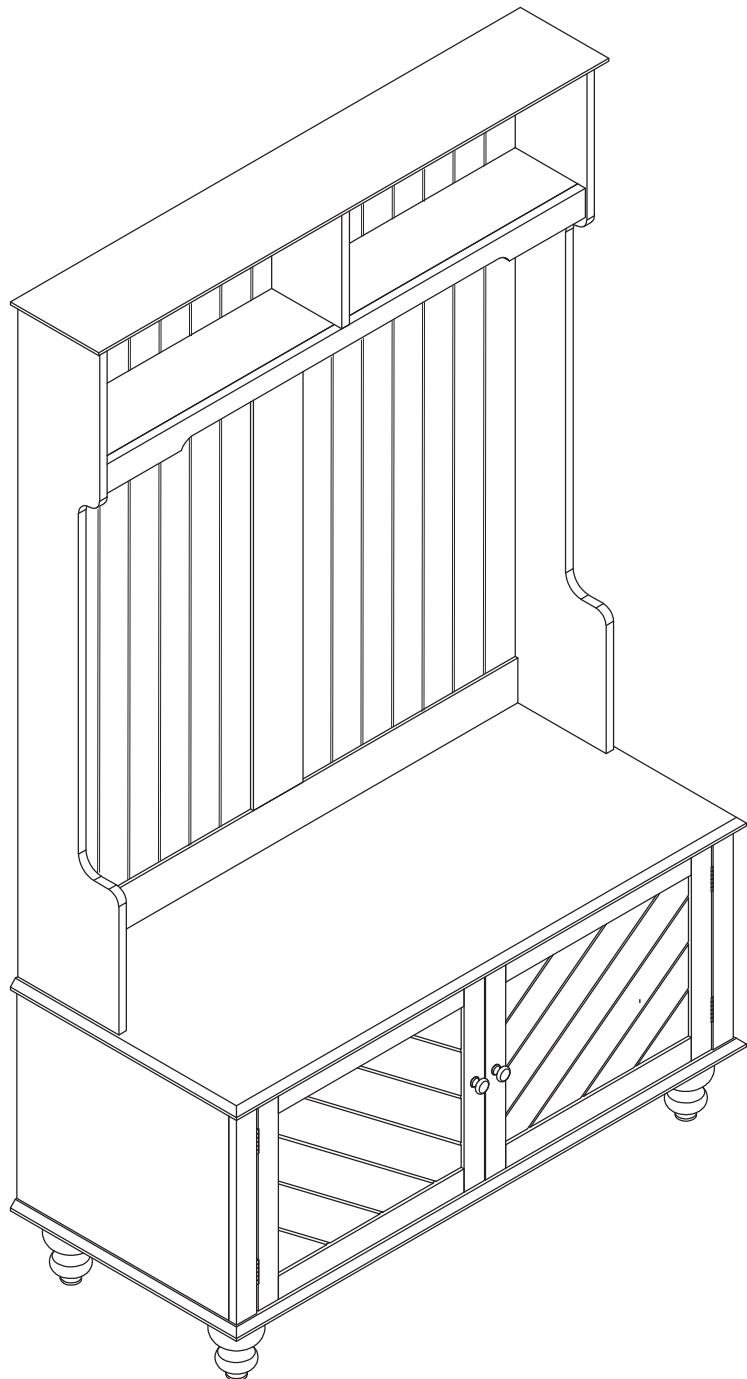

Dimensions

Width-39.76inch

Depth-17.63inch

Height-64.96inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions






To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose




Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

 Cam Bolt x 27	 Cam lock x 27	 Dowel x 47+1	 4*35mm Screw x 10
 Iron sheet x 4	 4*25mm Screw x 20	 Clothes Hook x 4	 3*14mm Screw x 12
 4*14mm Screw x 16	 Foot Pad x 4	 4*20mm Screw x 2	 Handle x 2
 Back Panel Buckle x 24	 3*16mm Screw x 24	 x 2	 4*10mm Screw x 2
 Plastic expansion x 2	 Adjuster Foot x 1	 3*12mm Screw x 30	 Hinge x 4
 Magnetic Collision x 2	 Single Hole Iron Sheet x 2	 Iron Sheet x 2	 6*35mm Screw x 4 M6 wrench x 1

Tools required Not Included

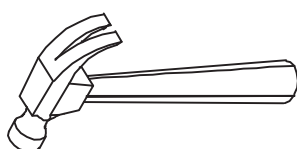

Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

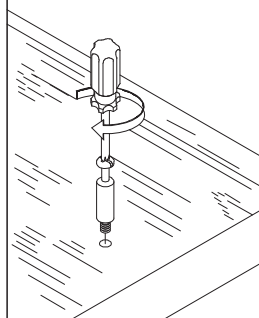

Step 2

Push the male camlock into the entry hole.

2

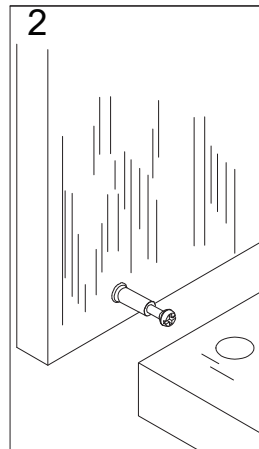


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

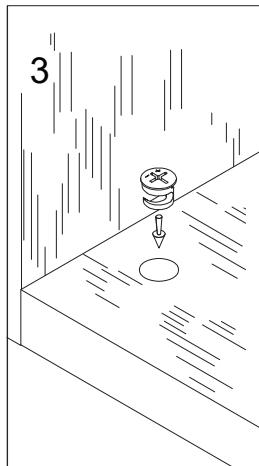


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4


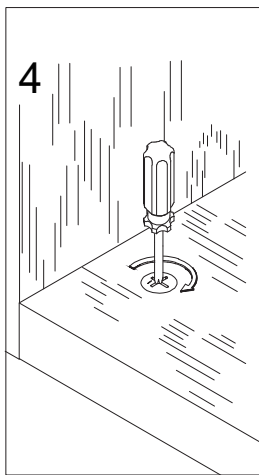


Assembly Instructions

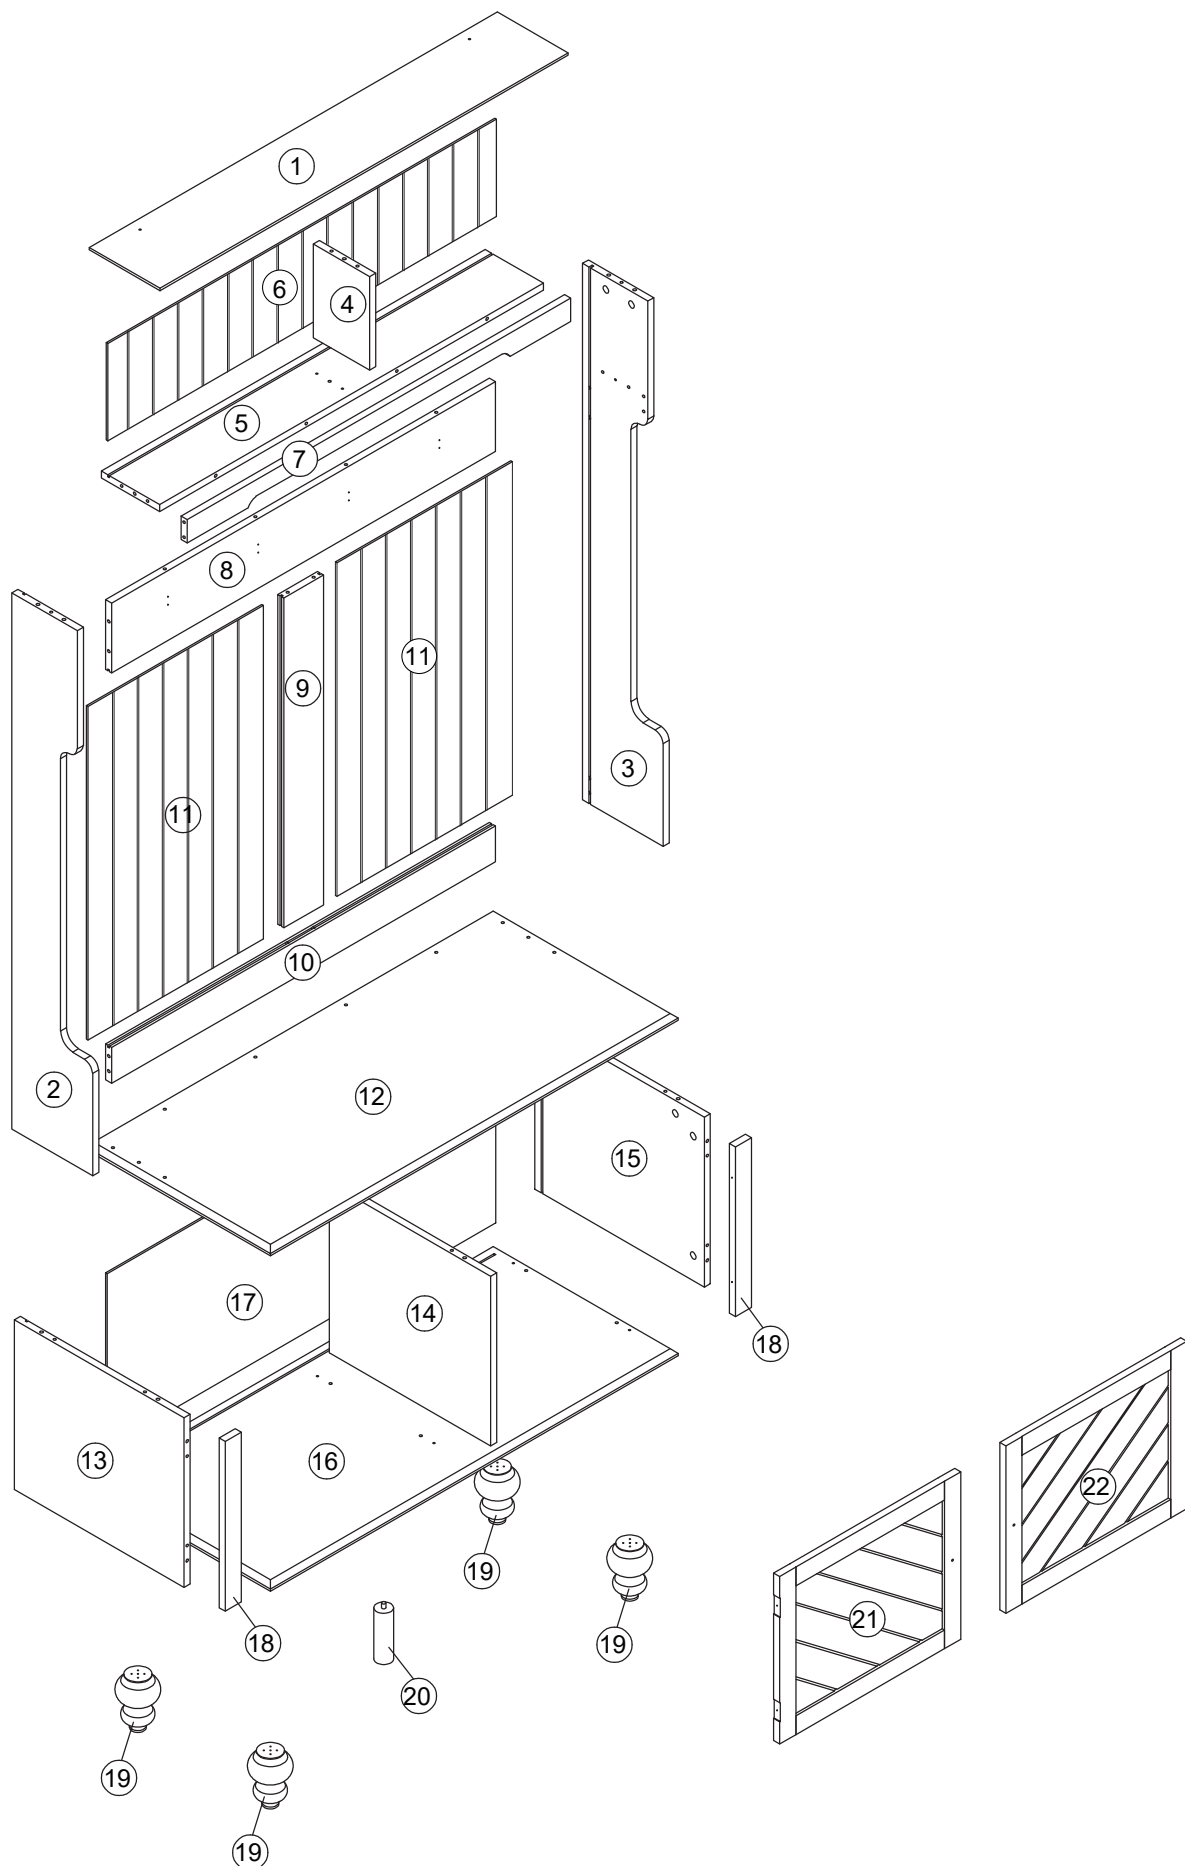



Assembly Instructions

Step 1

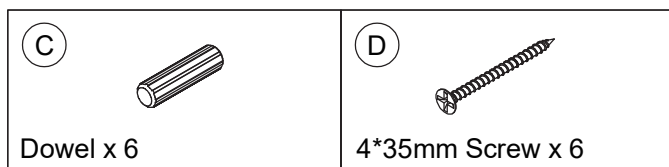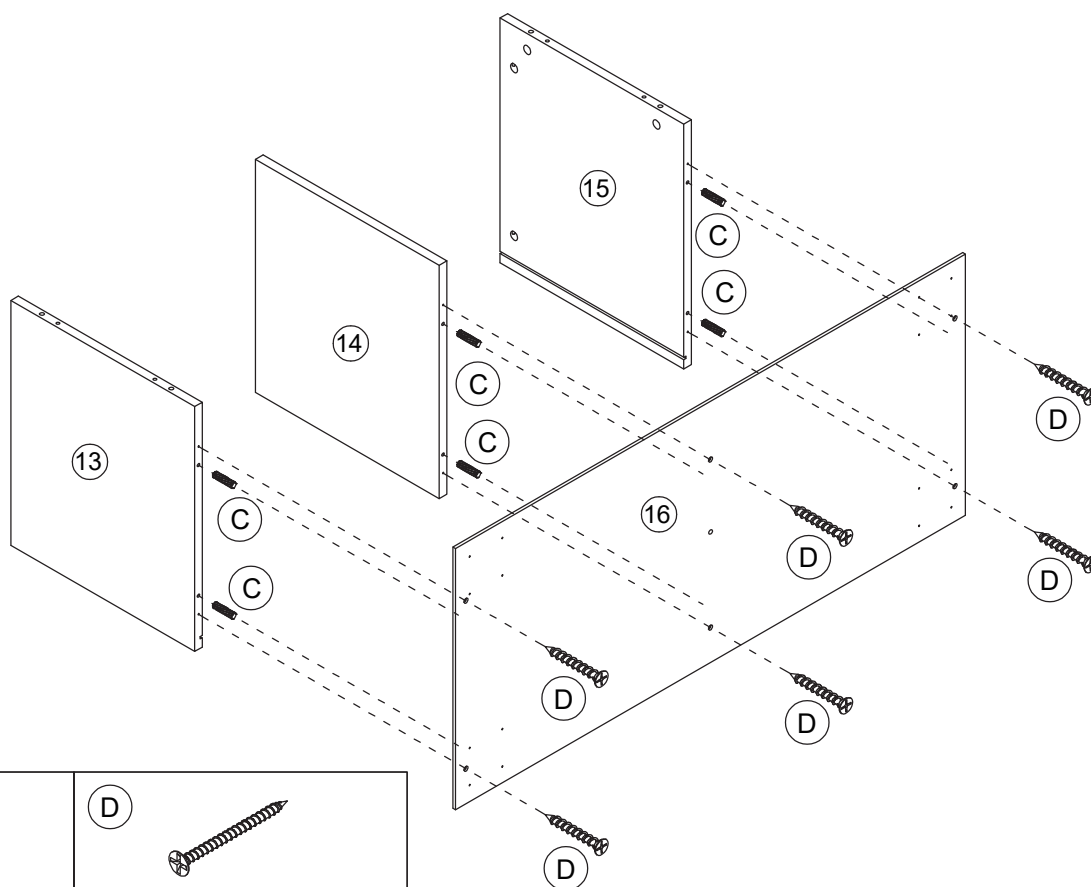


Step 2

x4

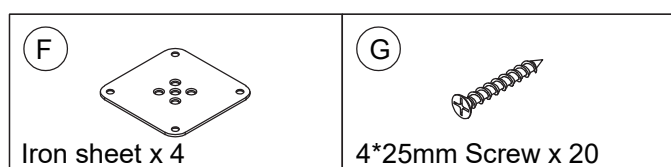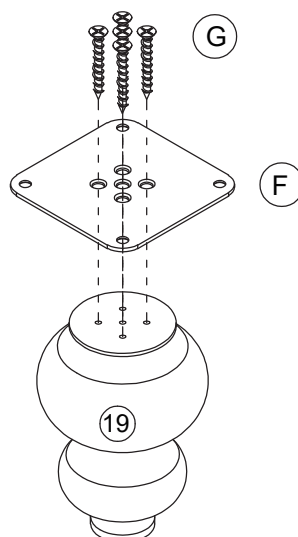

Assembly Instructions

Step 3

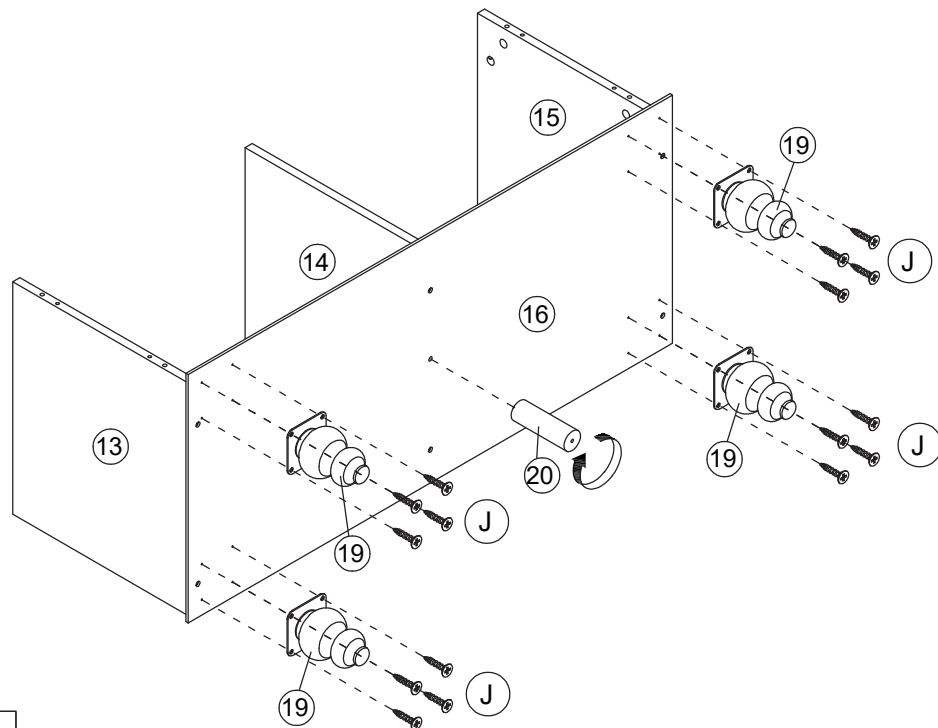


J



4*14mm Screw x 16

Step 4

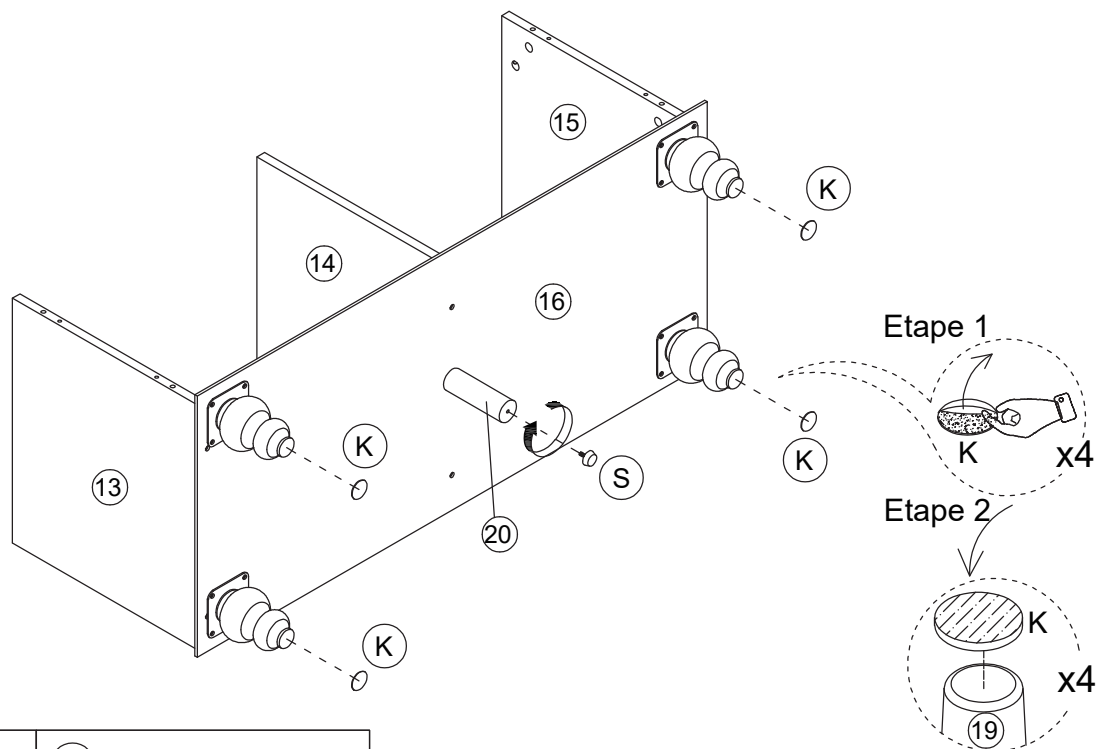

K



Foot Pad x 4


S




Adjuster Foot x 1

Assembly Instructions


Step 5

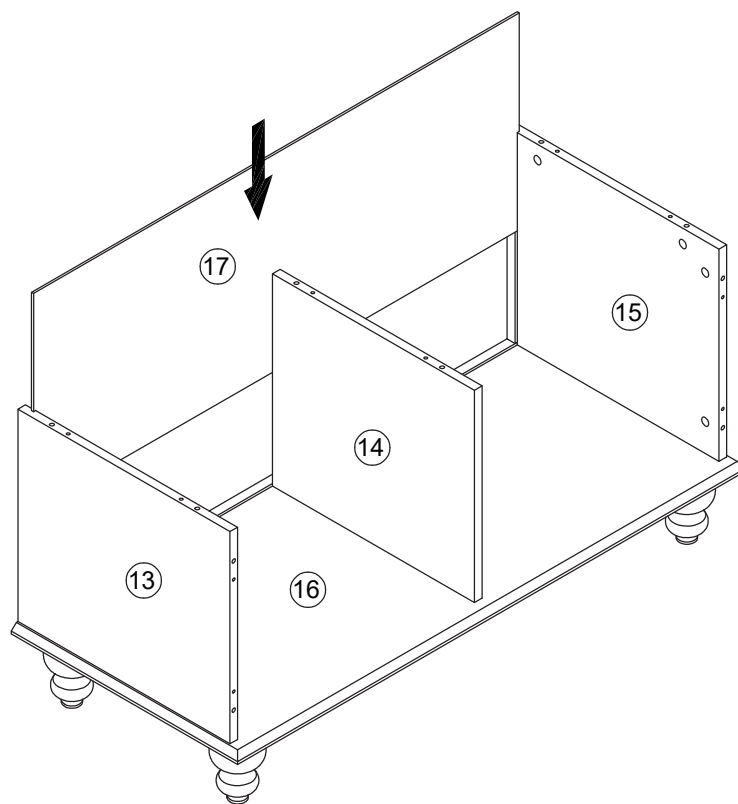

Step 6

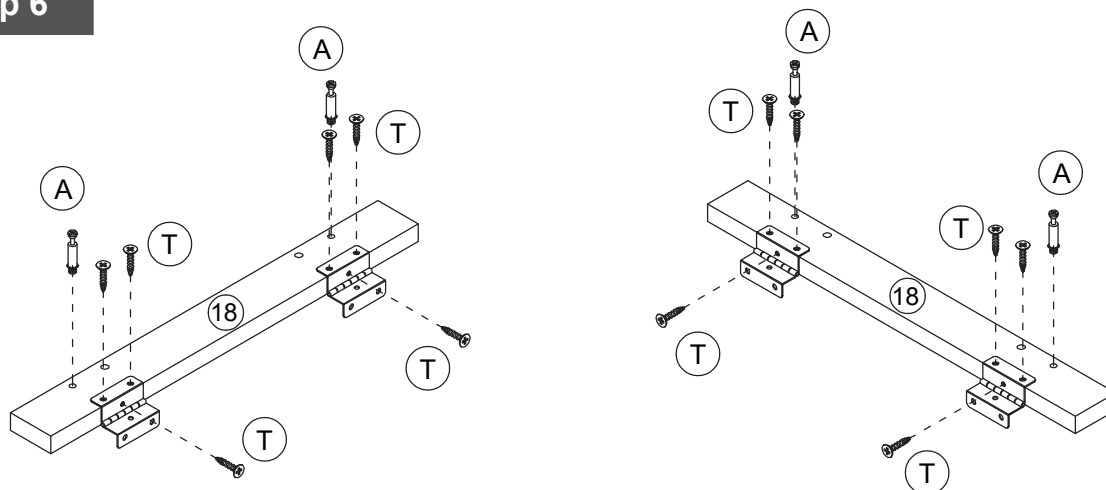

(A)



Cam Bolt x 4

(T)



3*12mm Screw x 12


(U)



Hinge x 4

Assembly Instructions

Step 7

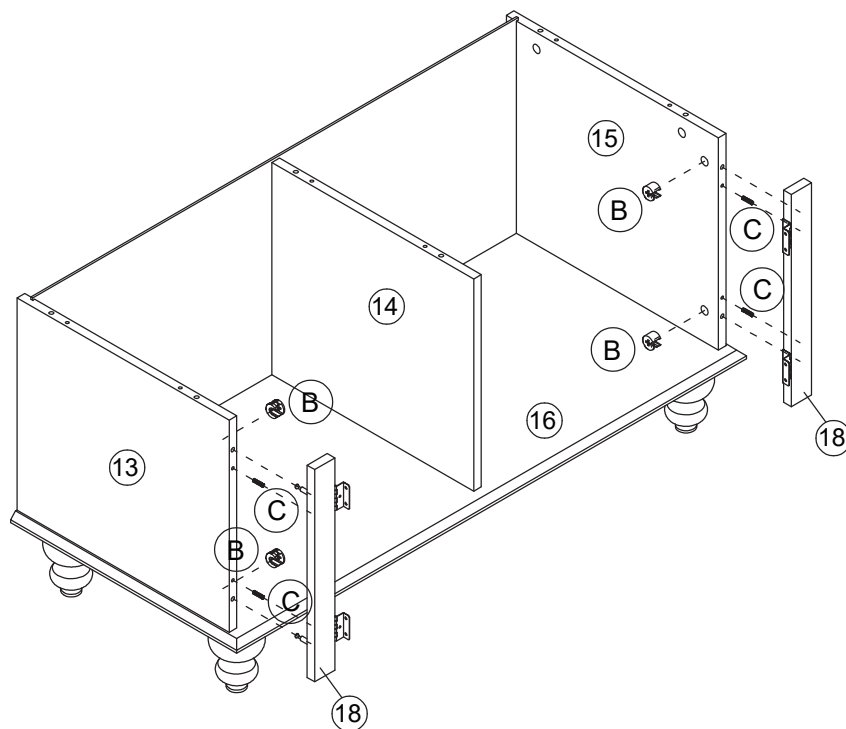

B




Cam lock x 4

C




Dowel x 4

Step 8

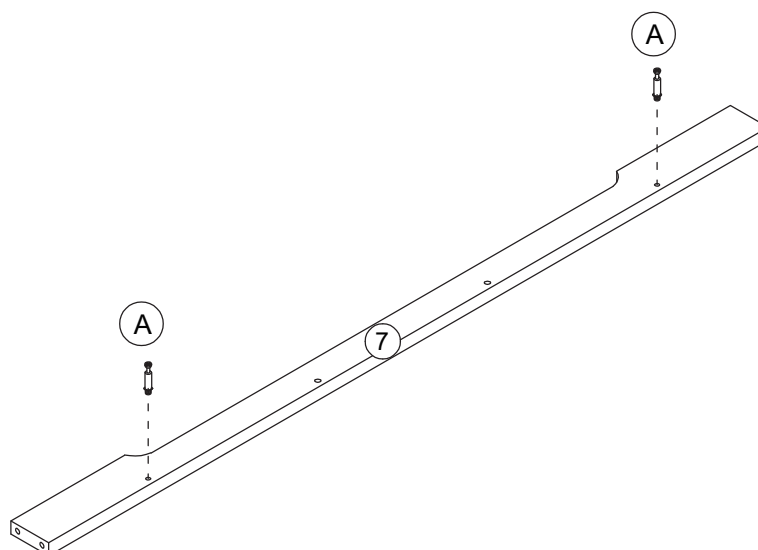


A



Cam Bolt x 2

Assembly Instructions

Step 9

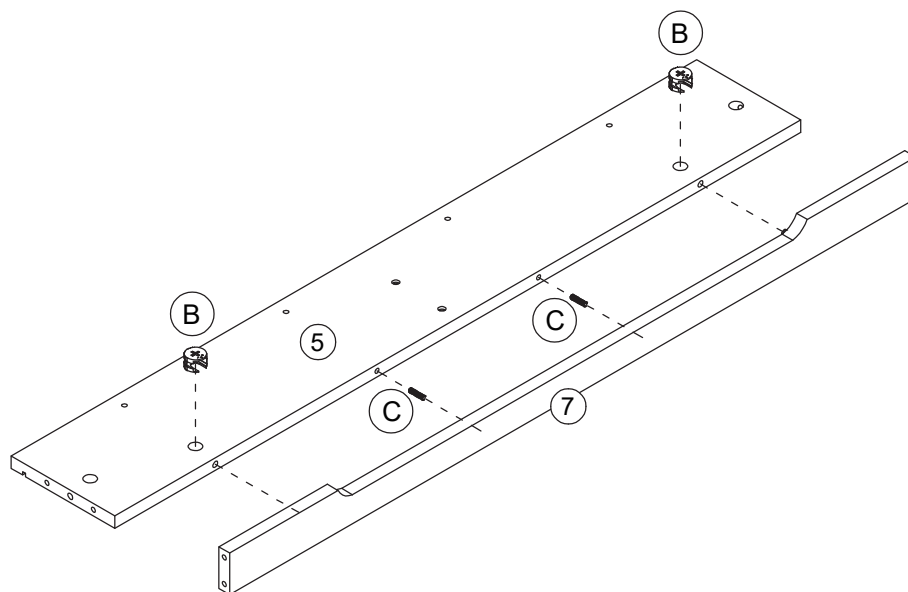

(B)




Cam lock x 2

(C)



Dowel x 2

Step 10

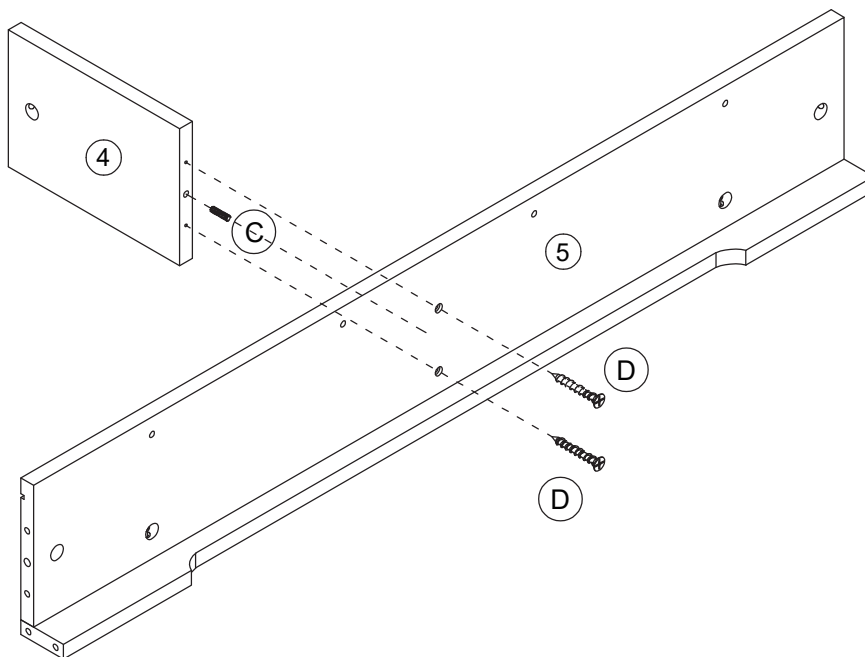

(C)



Dowel x 1


(D)



4*35mm Screw x 2

Assembly Instructions

Step 11

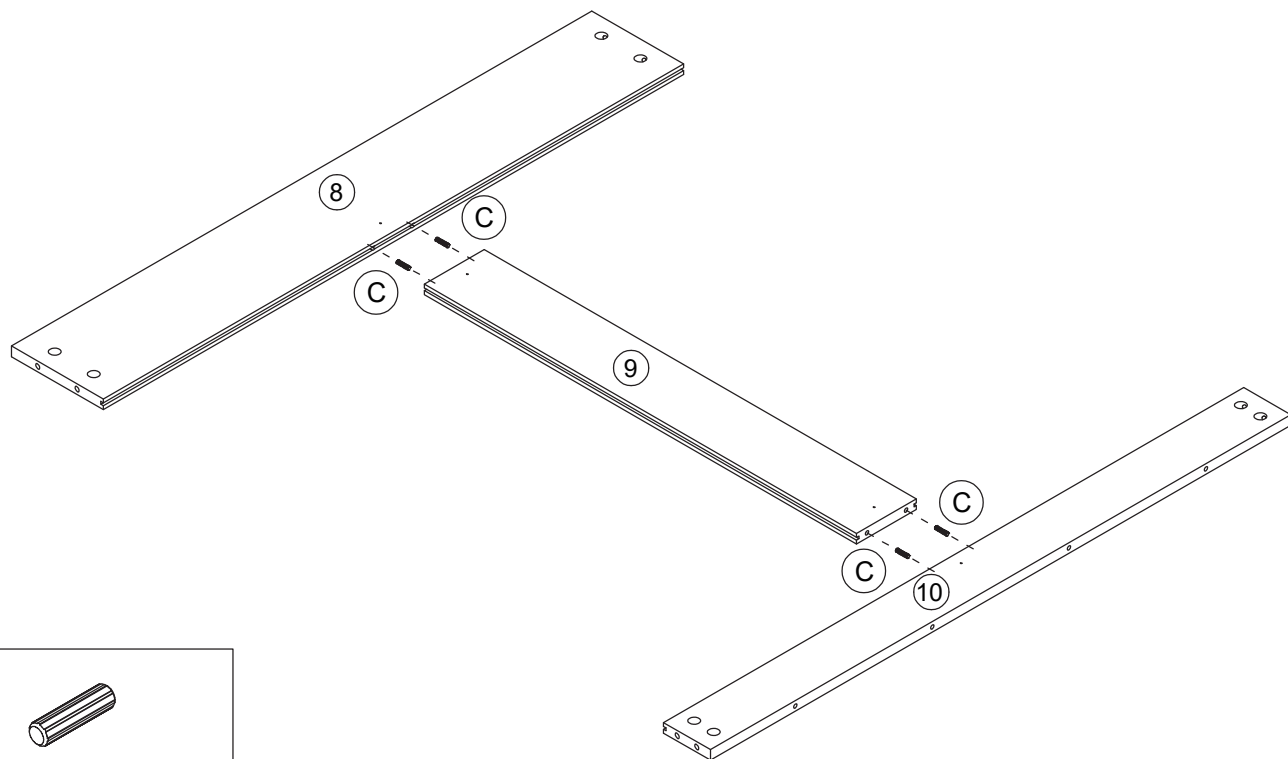


(C)



Dowel x 4

Step 12

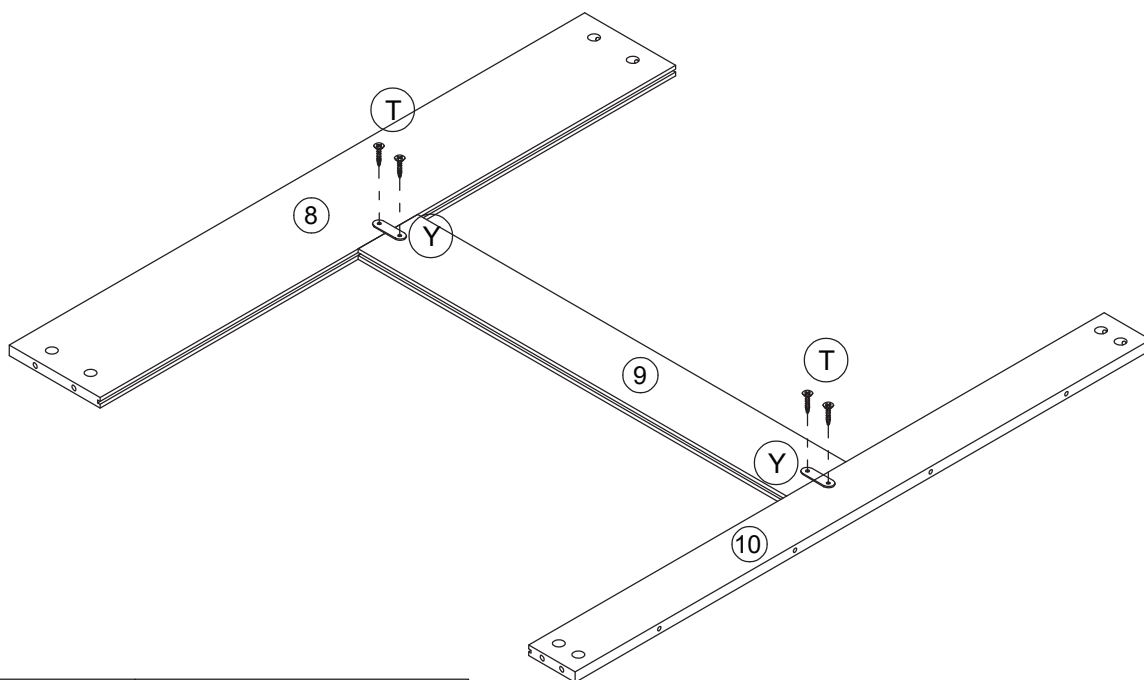


(T)



3*12mm Screw x 4


(Y)



Iron Sheet x 2

Assembly Instructions

Step 13

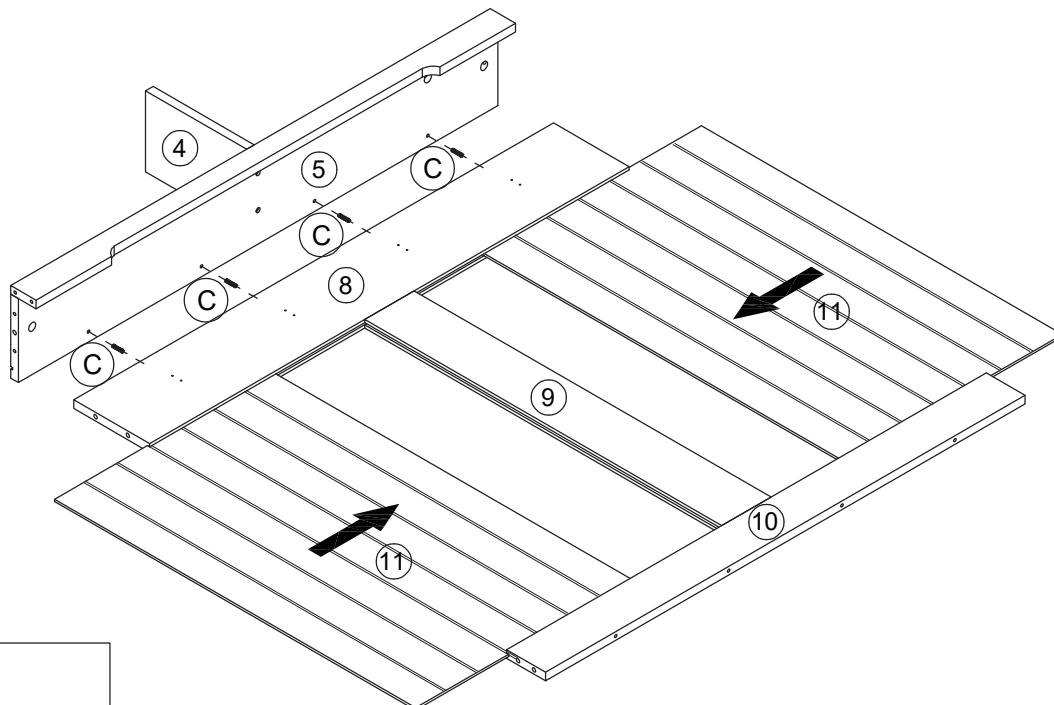


C




Dowel x 4

Step 14

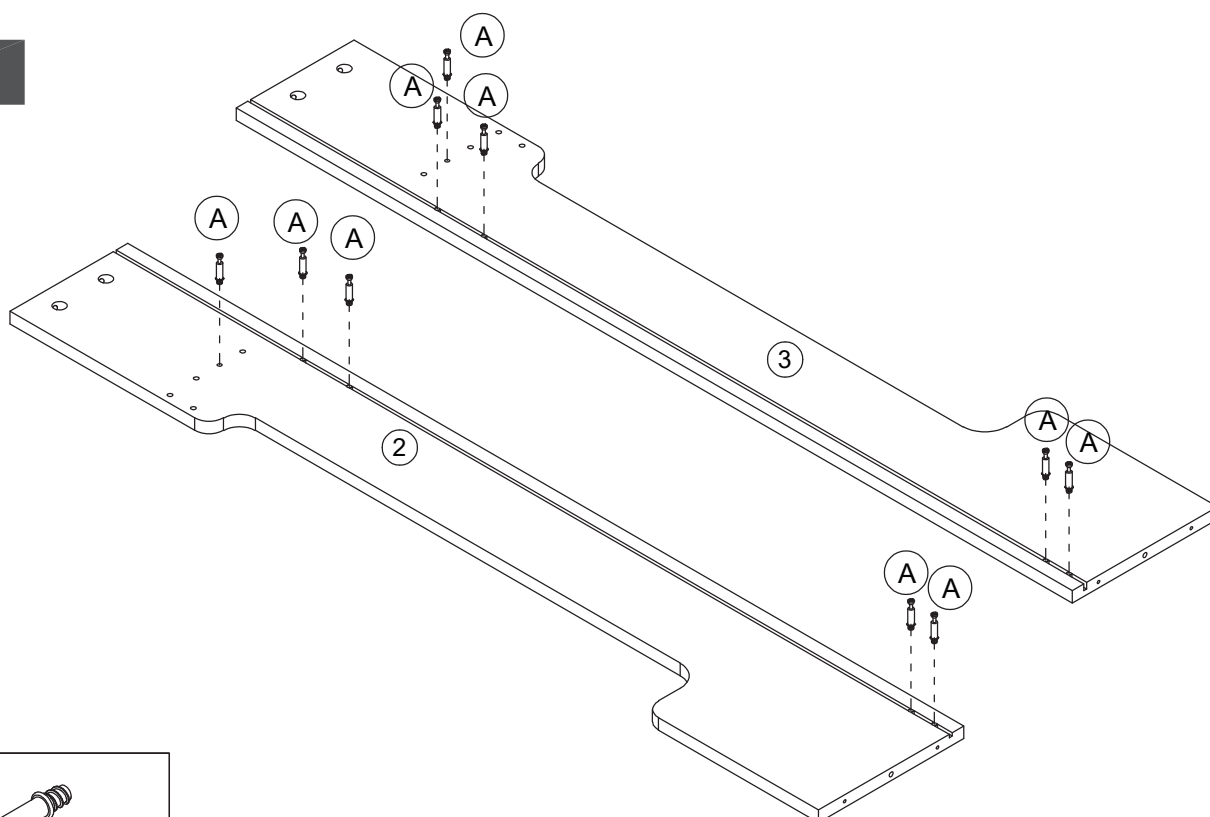


A



Cam Bolt x 10

Assembly Instructions

Step 15

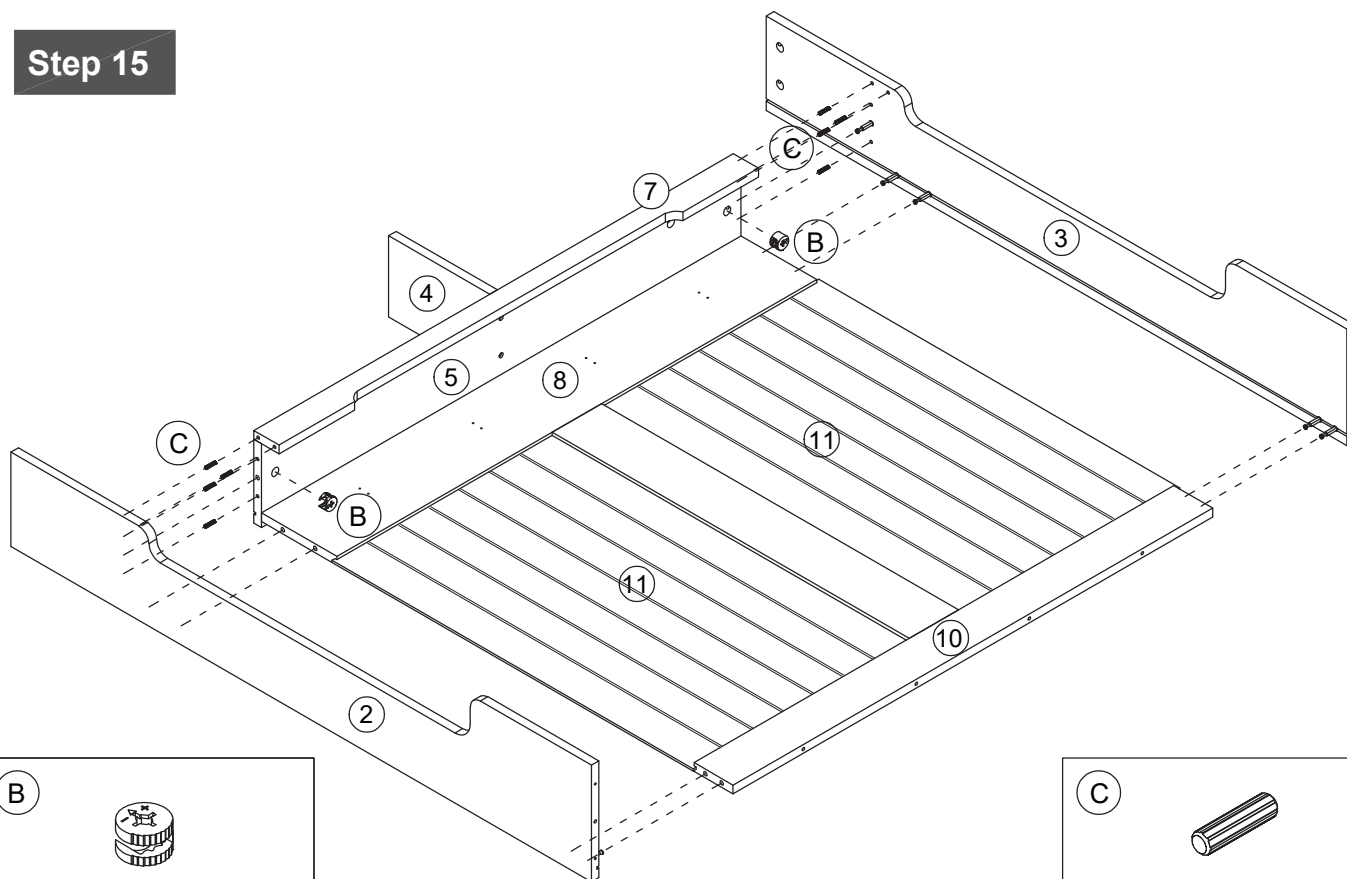

B




Cam lock x 2

C





Dowel x 8

Step 16


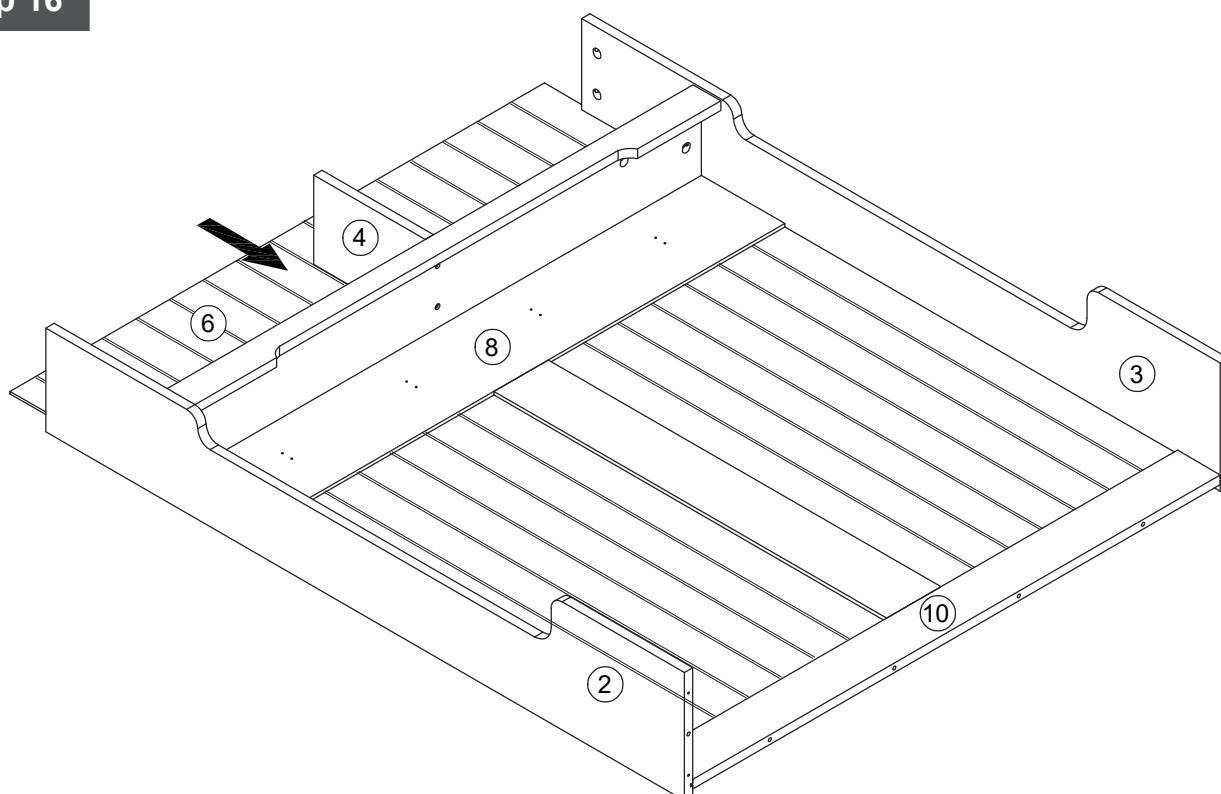


Assembly Instructions

Step 17

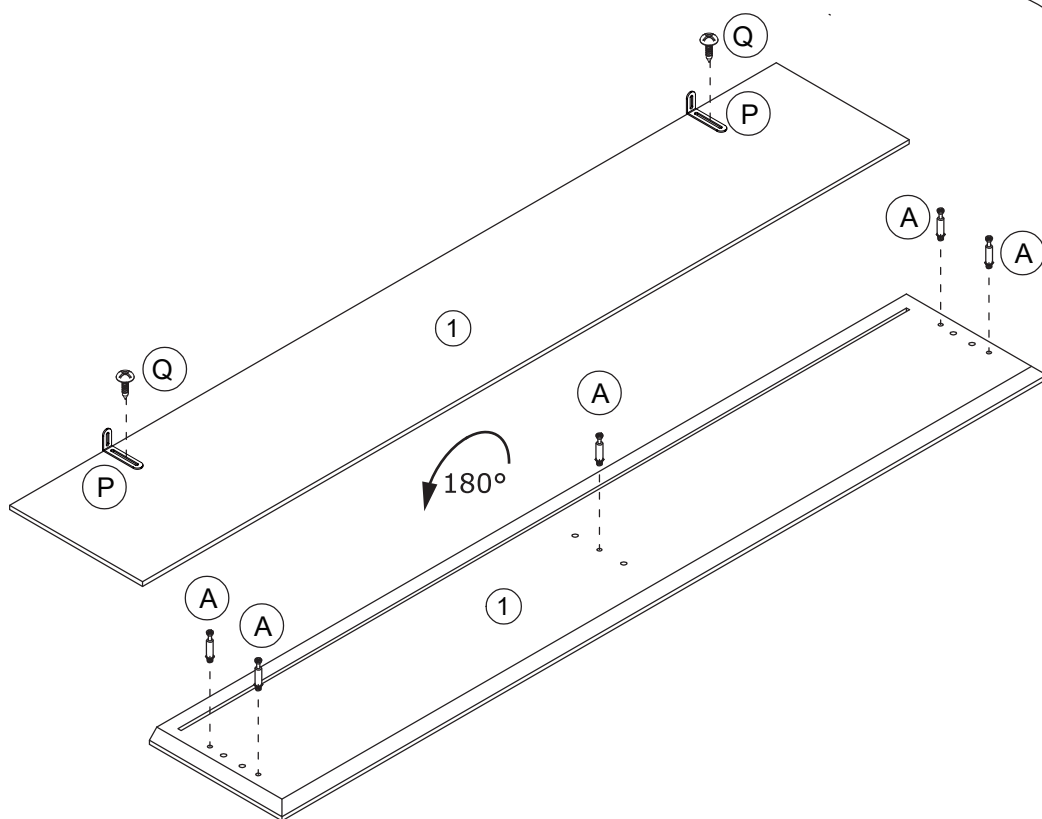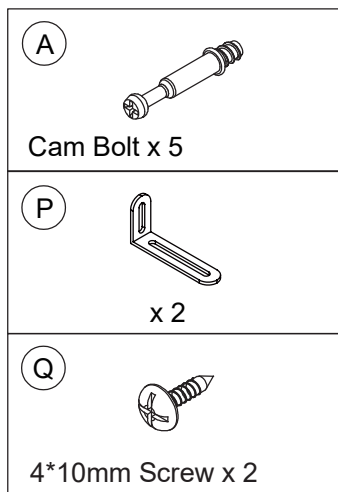


Step 18

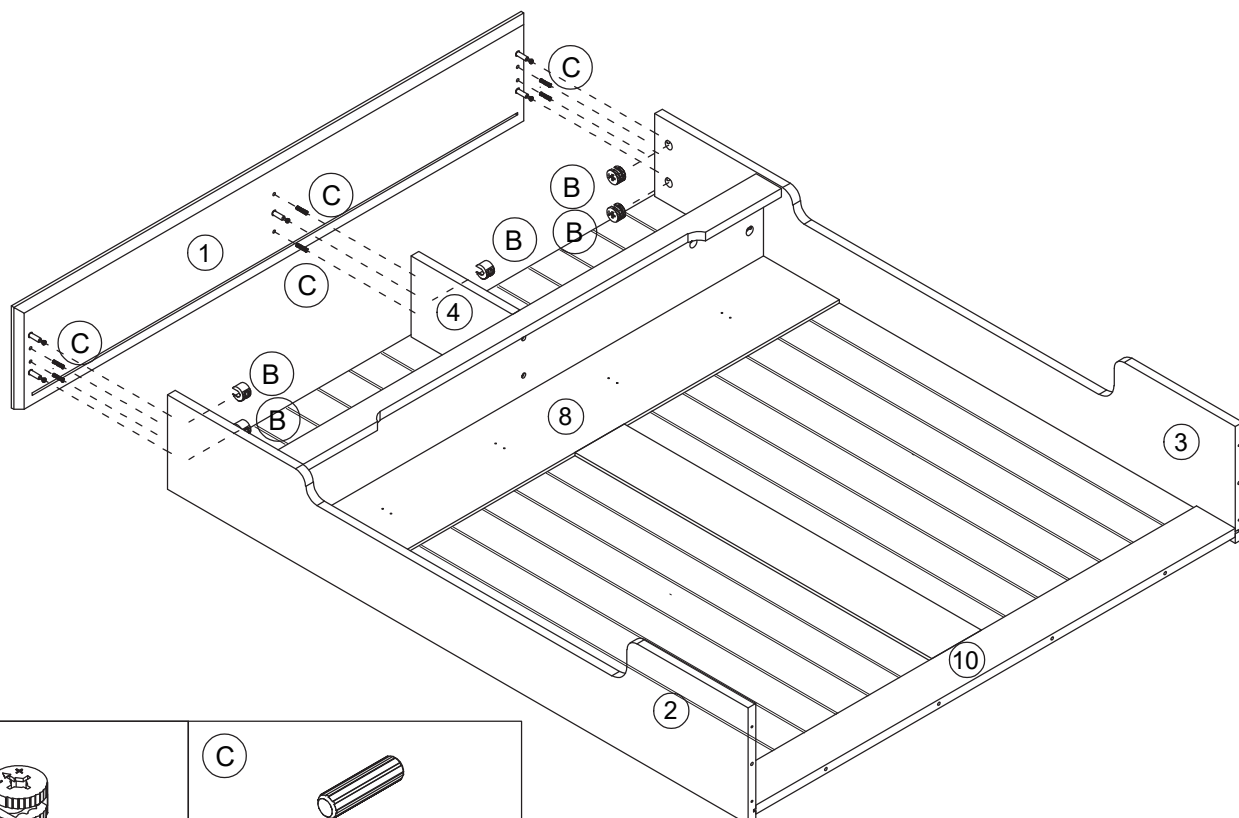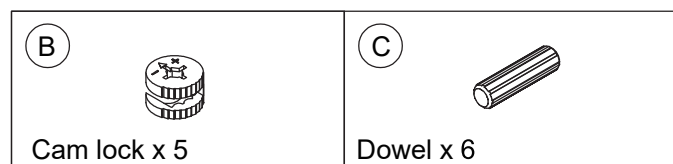


Assembly Instructions

Step 19

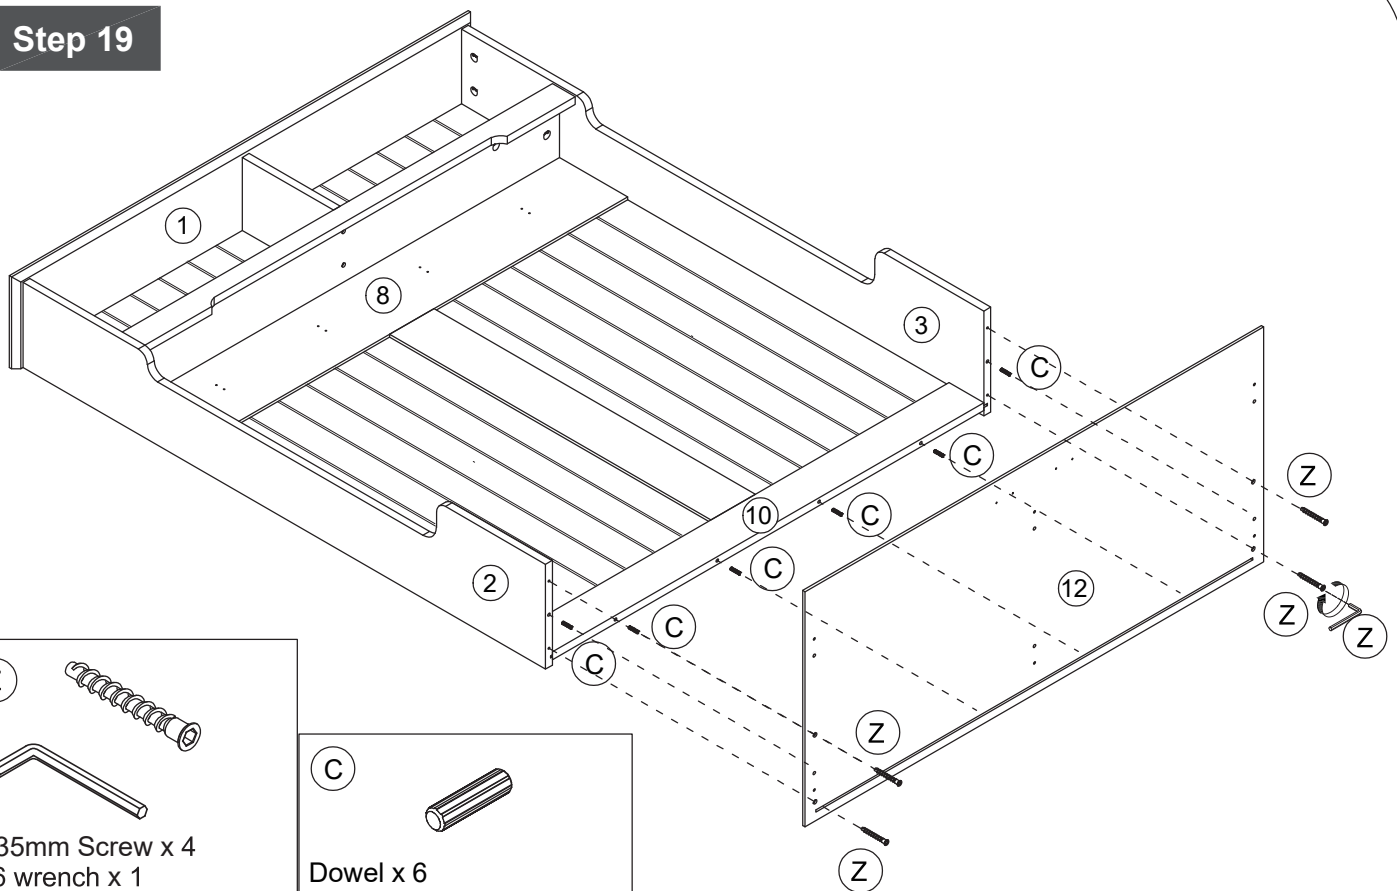

Step 20

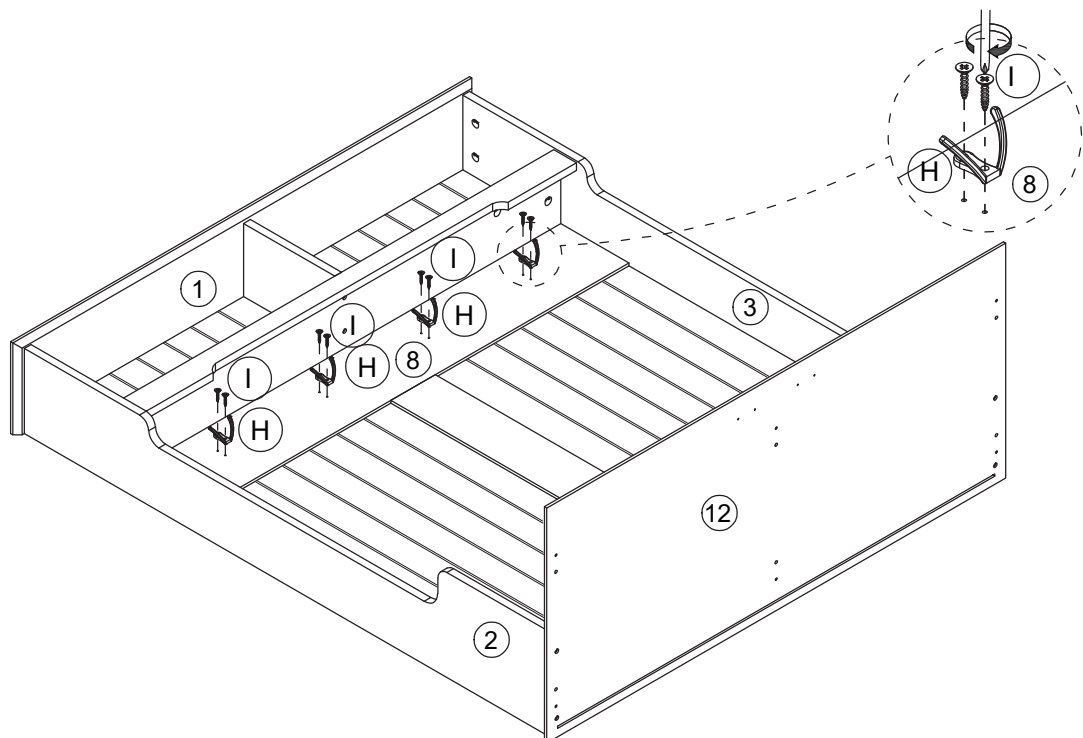


(H) 
Clothes Hook x 4


(I) 
3*14mm Screw x 8

Assembly Instructions

Step 21

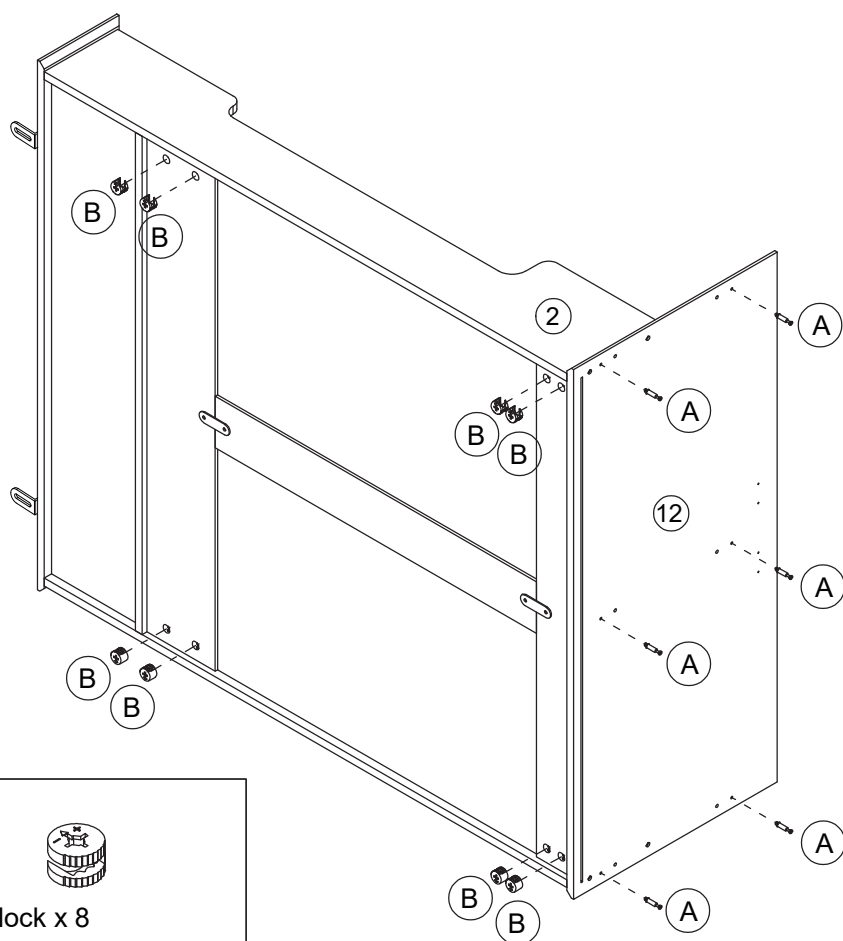

A




Cam Bolt x 6

B



Cam lock x 8

Step 22

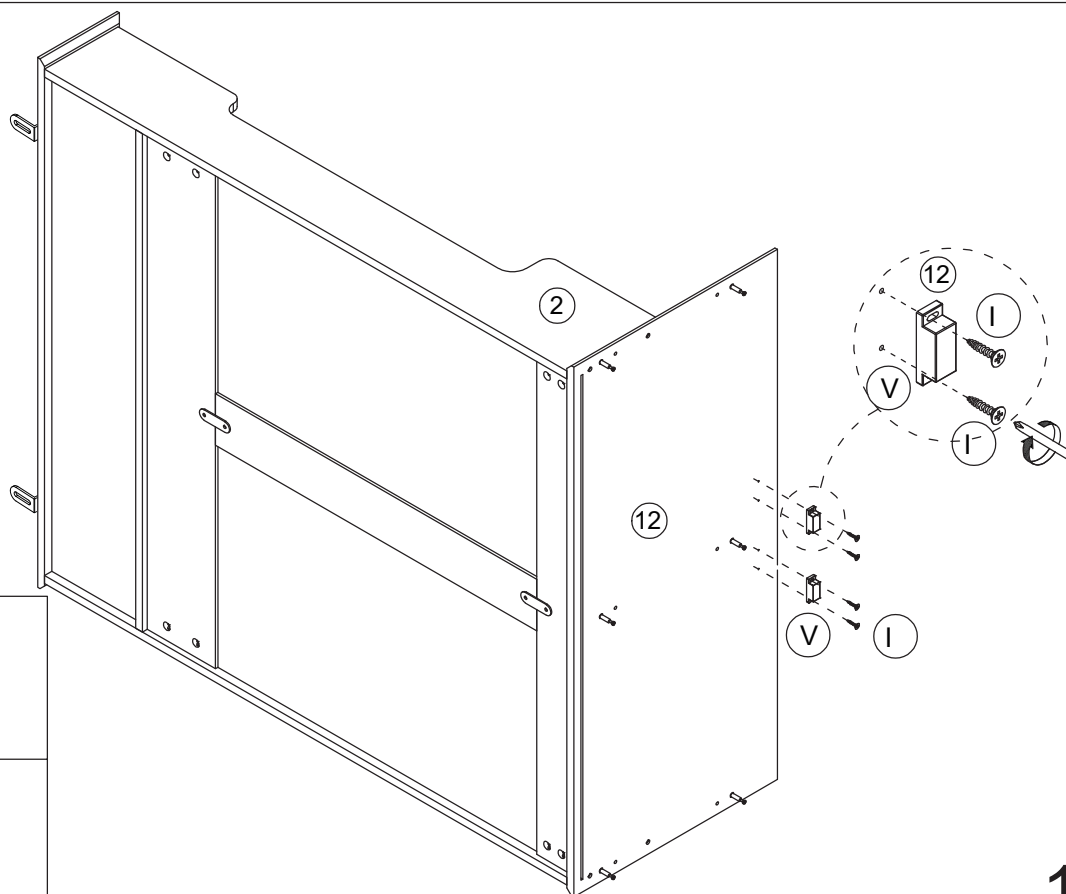

I



3*14mm Screw x 4


V



Magnetic Collision x 2

Assembly Instructions

Step 23

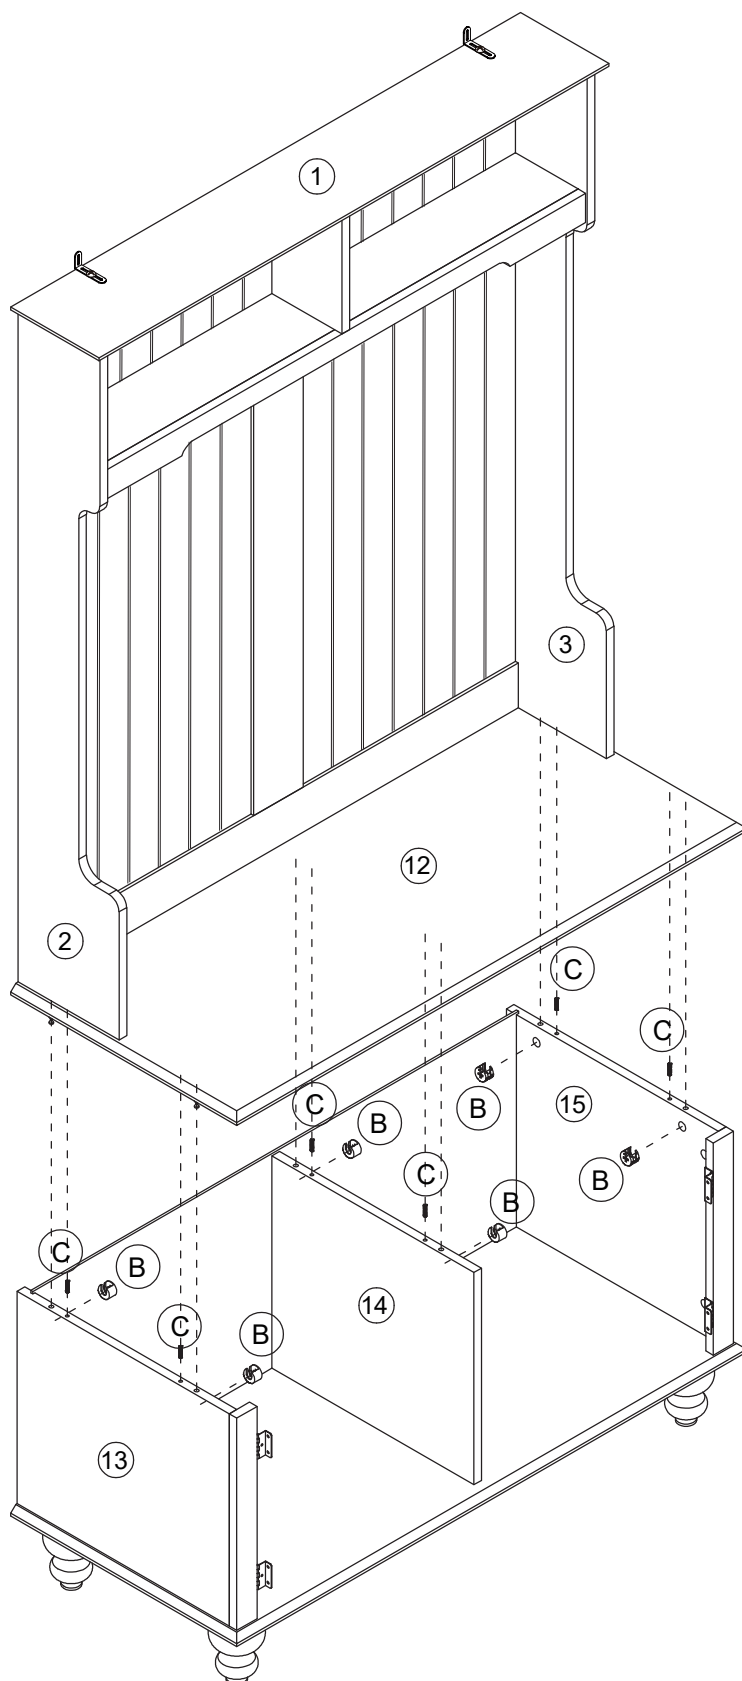

B



Cam lock x 6


C



Dowel x 6


Assembly Instructions

Step 24

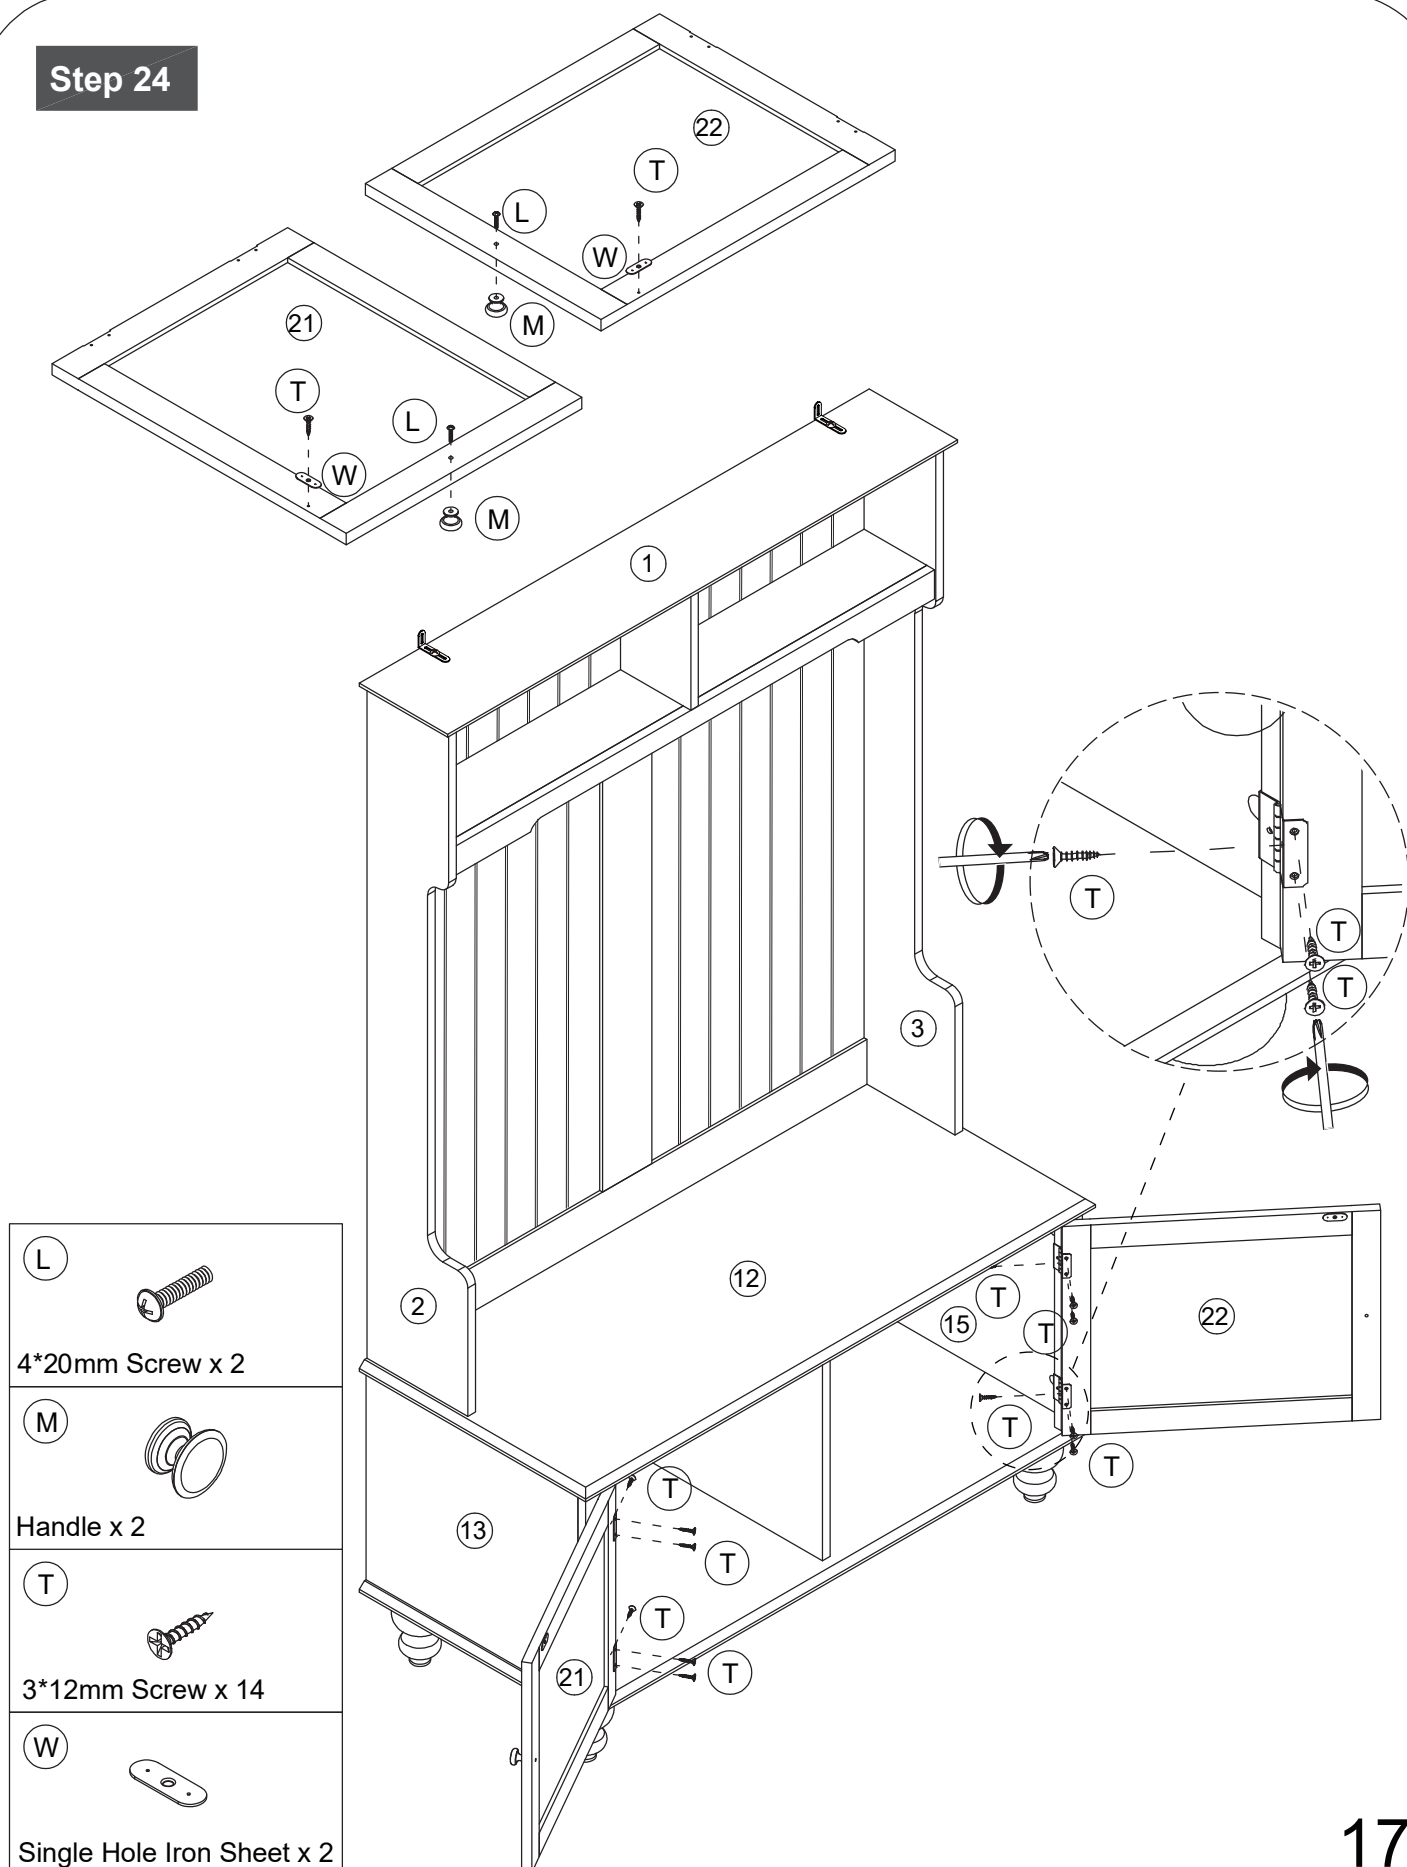

Assembly Instructions

Step 25

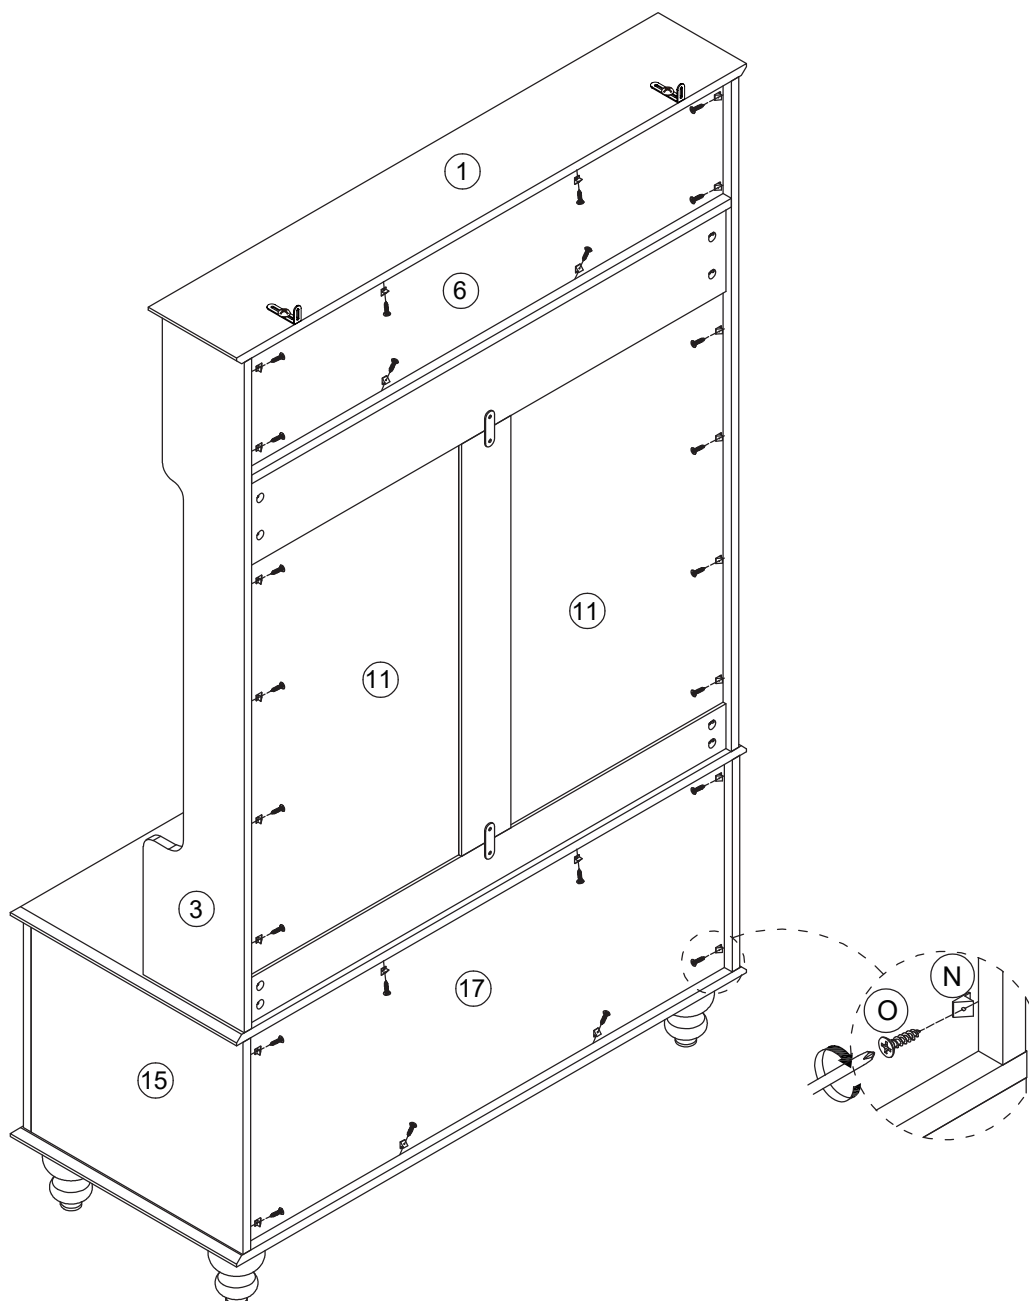

(N)



Back Panel Buckle x 24

(O)






3*16mm Screw x 24

Assembly Instructions

Step 26

WALL

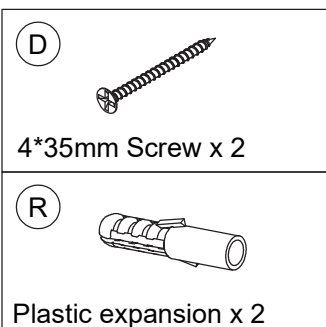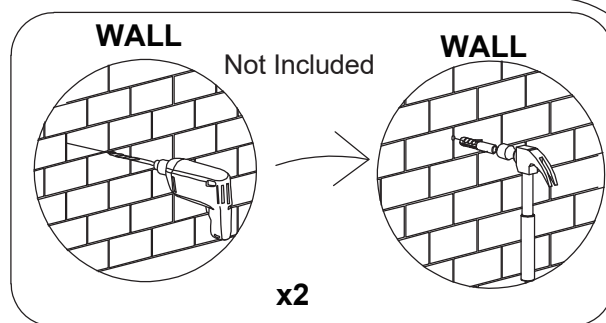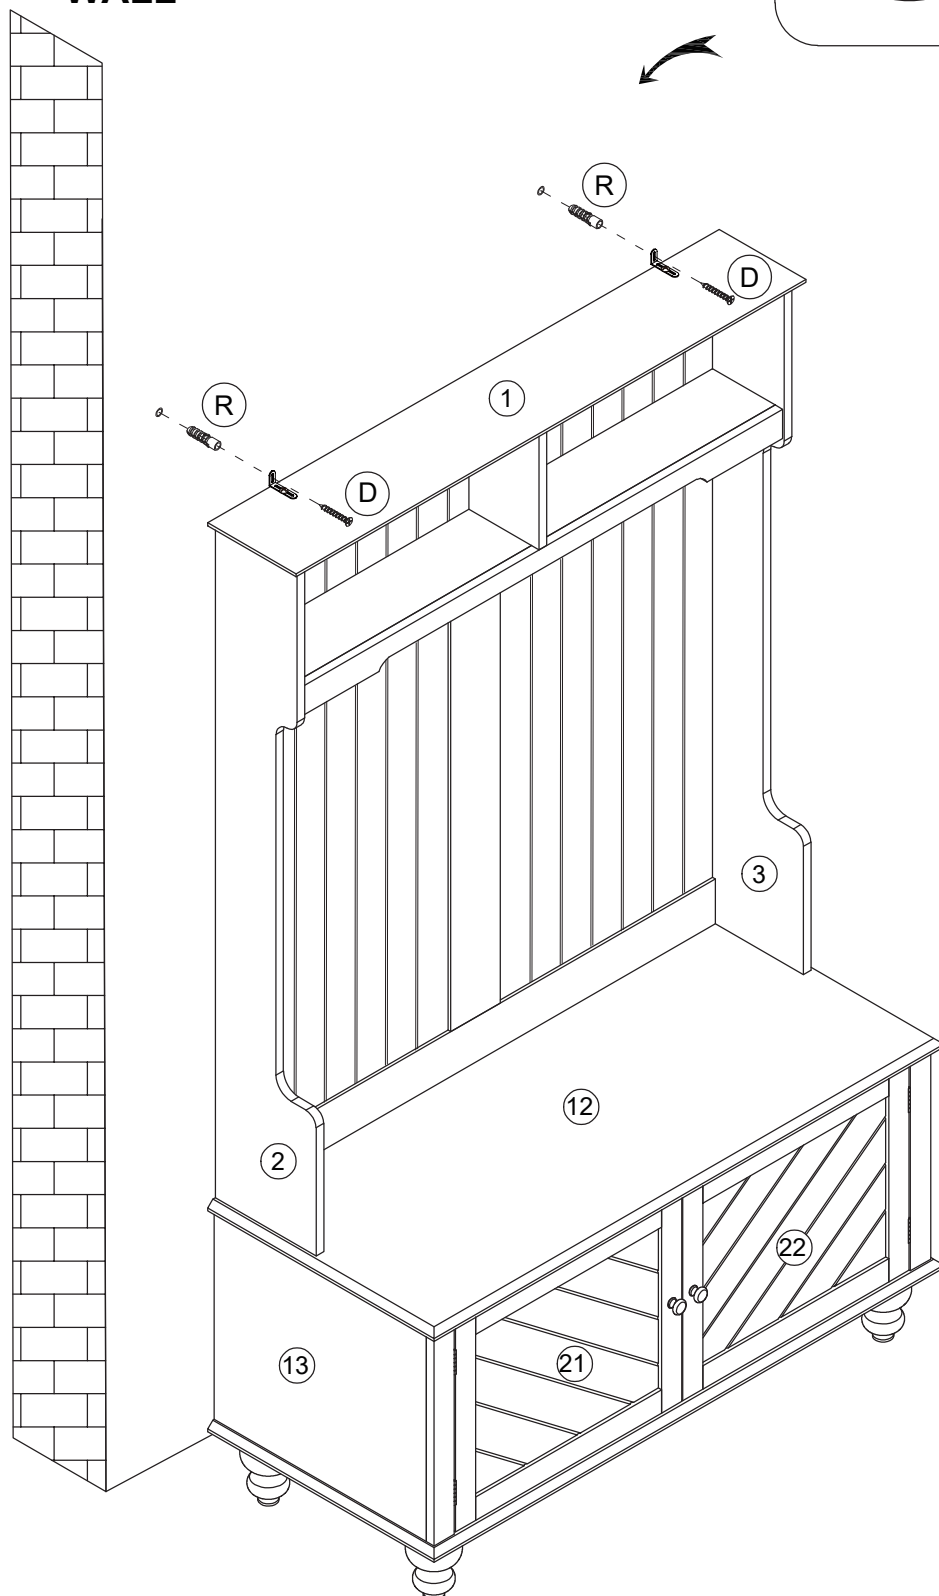

Assembly Instructions

Finish

