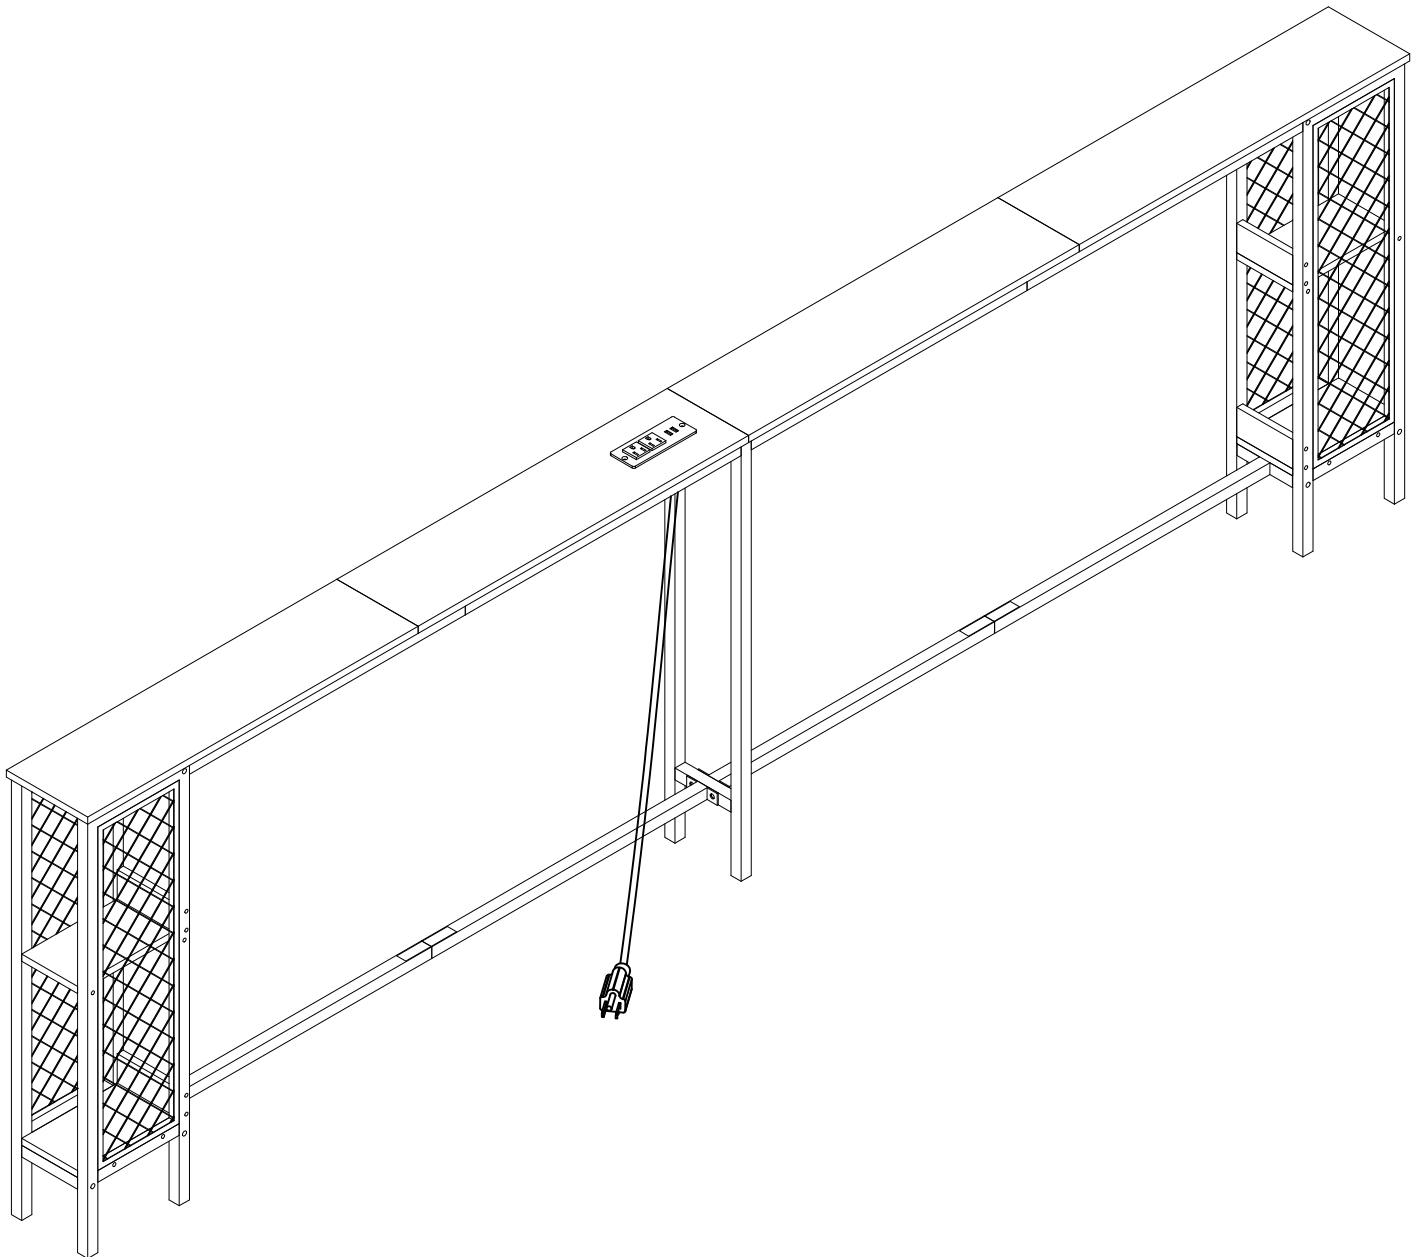
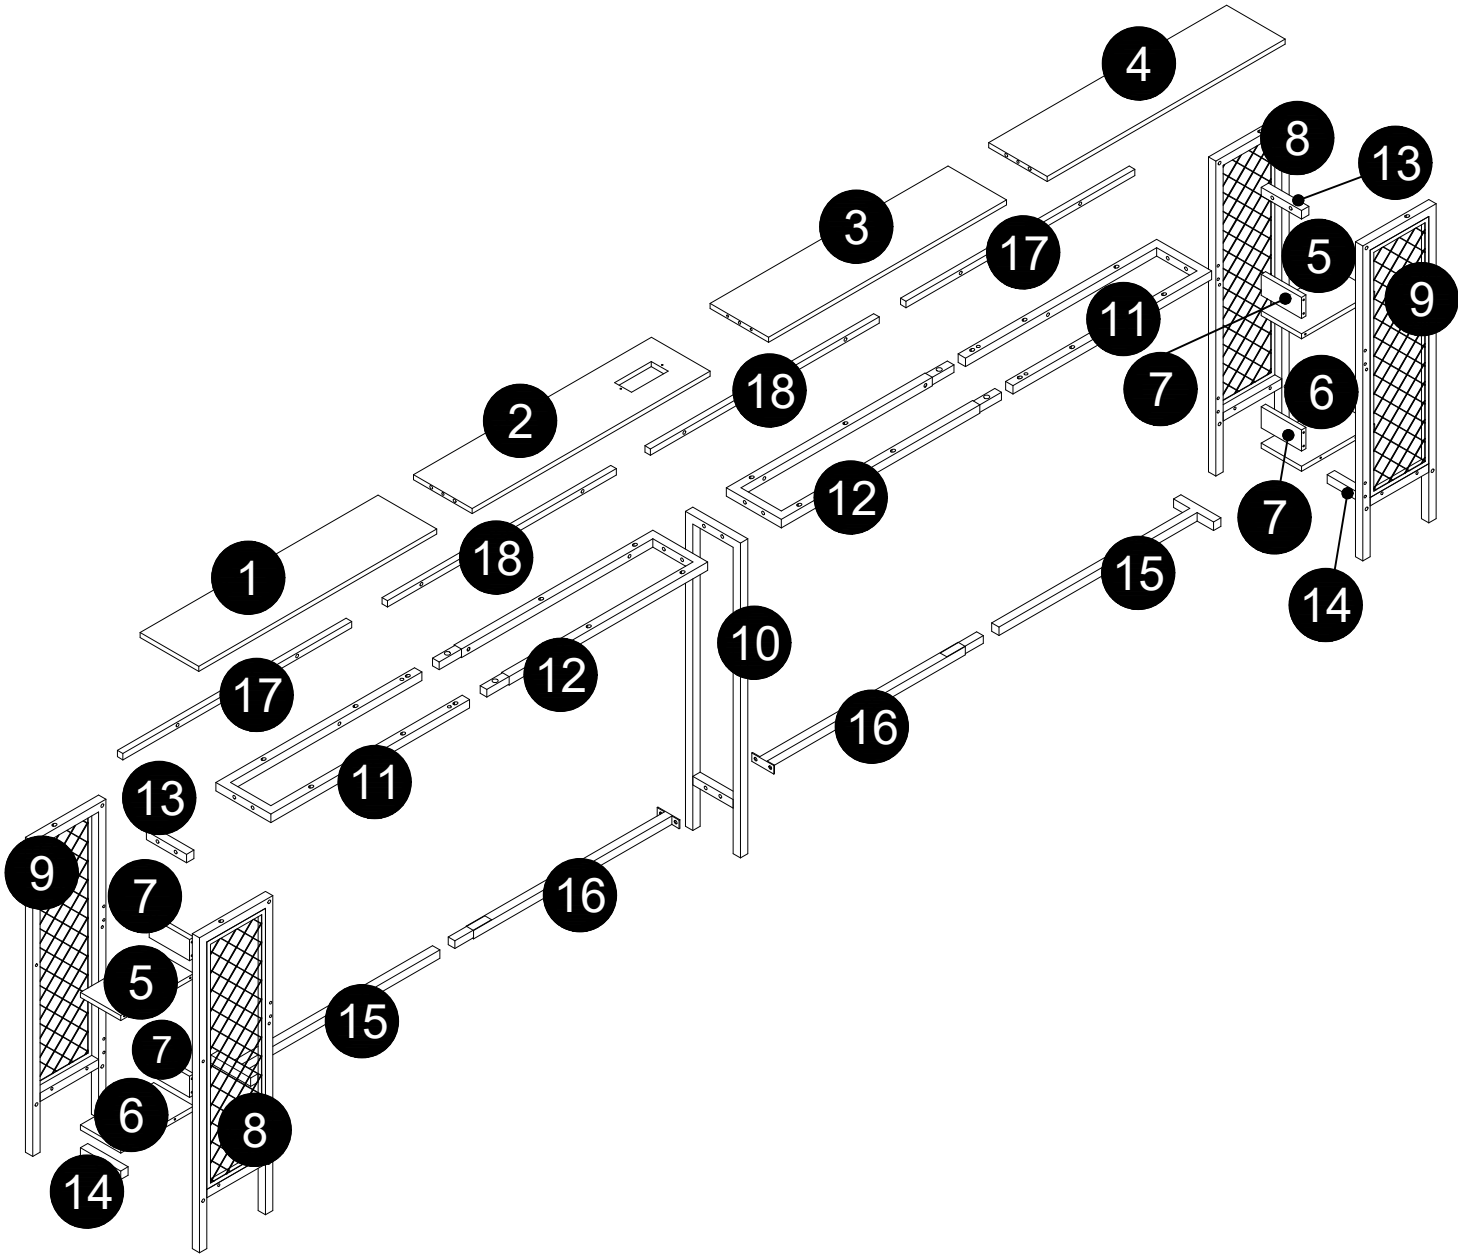




















Installation & Assembly











ASSEMBLY INSTRUCTION




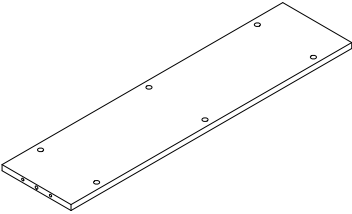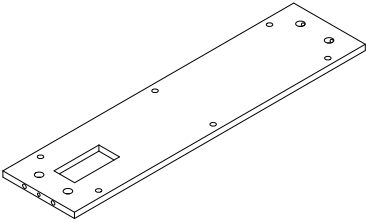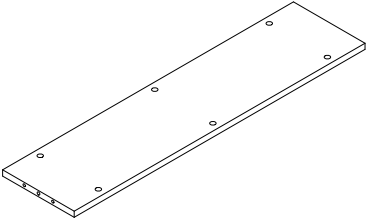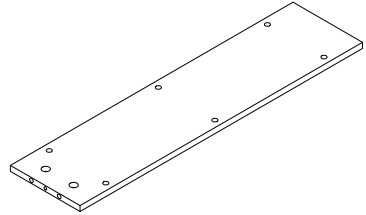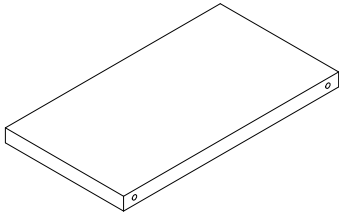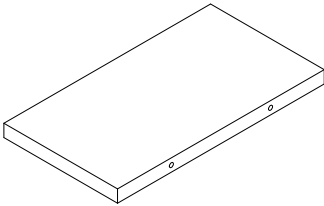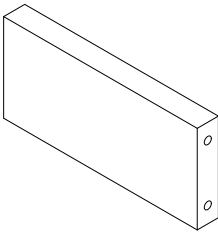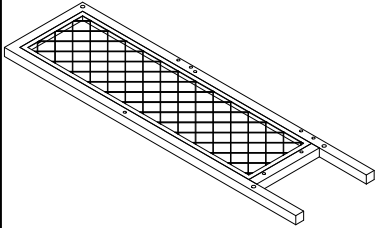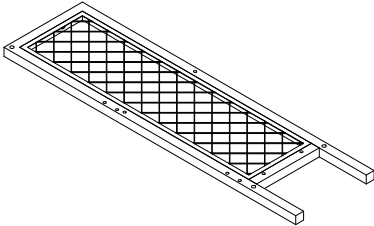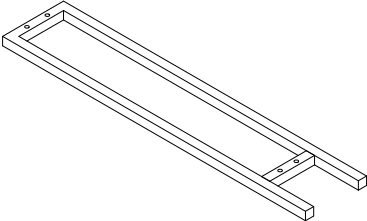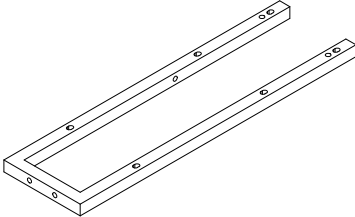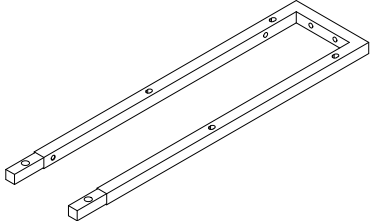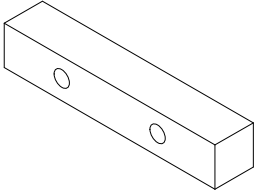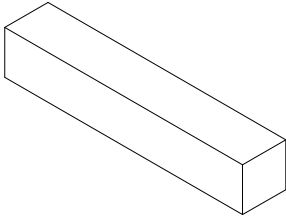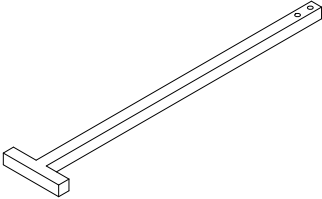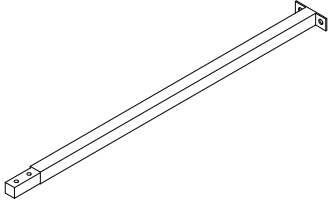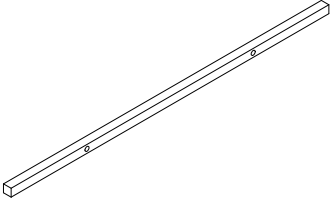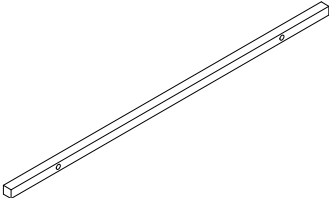ASSEMBLY INSTRUCTION


① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 2PCS 	⑥ 2PCS 	⑦ 4PCS 	⑧ 2PCS 
⑨ 2PCS 	⑩ 1PC 	⑪ 2PCS 	⑫ 2PCS 
⑬ 2PCS 	⑭ 2PCS 	⑮ 2PCS 	⑯ 2PCS 
⑰ 2PCS 	⑱ 2PCS 		

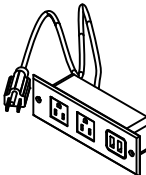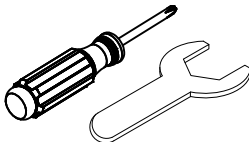ASSEMBLY INSTRUCTION

A 6PCS 	B 6PCS  Ø15X10	C 16PCS  M6*40	D 4PCS  M6*45	E 32PCS  M5*38	
F 14PCS  M6	G 24PCS  M6*28	H 2PCS  M6*65	J 3PCS  Ø6*30	K 8PCS  M6*10	
L 2PCS  M3.5*12	M 2PCS  M6*30	N 2PCS  M6*50	1PC 	1PC 	

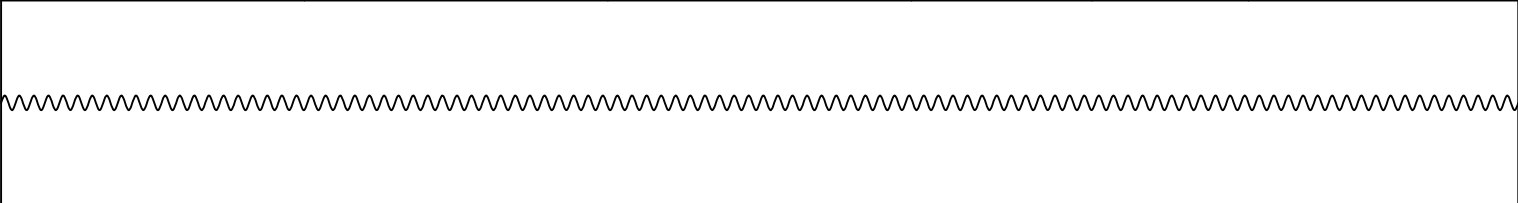

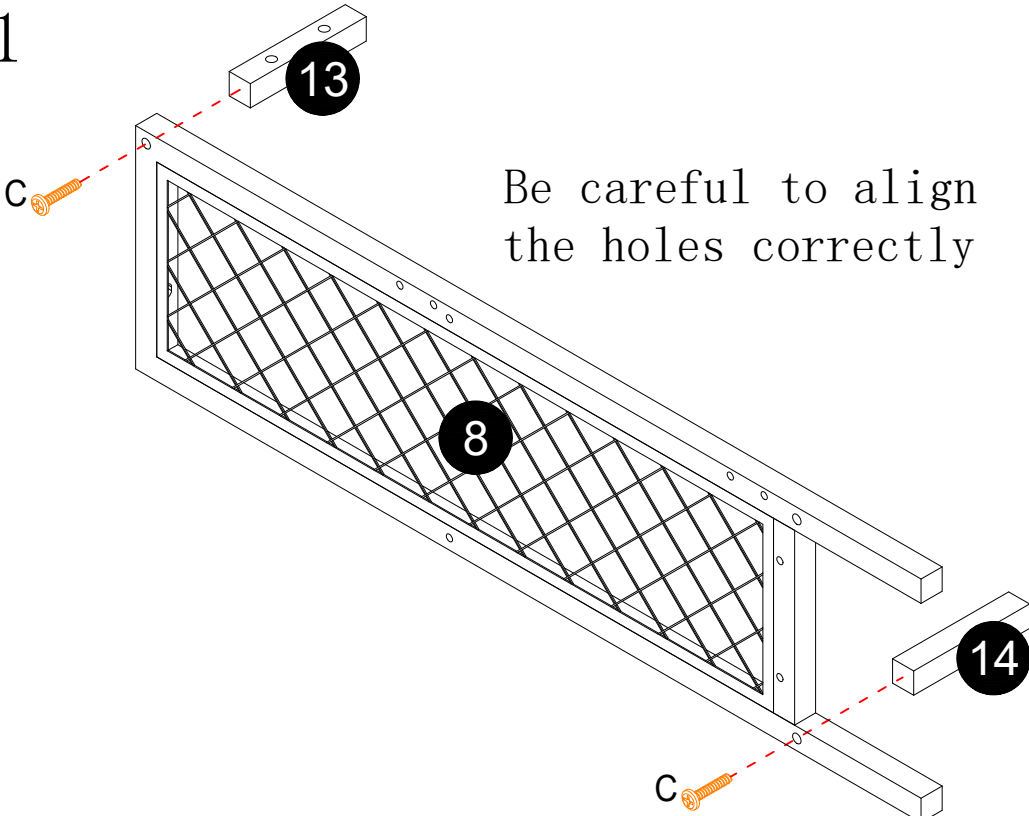STEP1




Be careful to align the holes correctly

C 2PCS

M6*40

ASSEMBLY INSTRUCTION

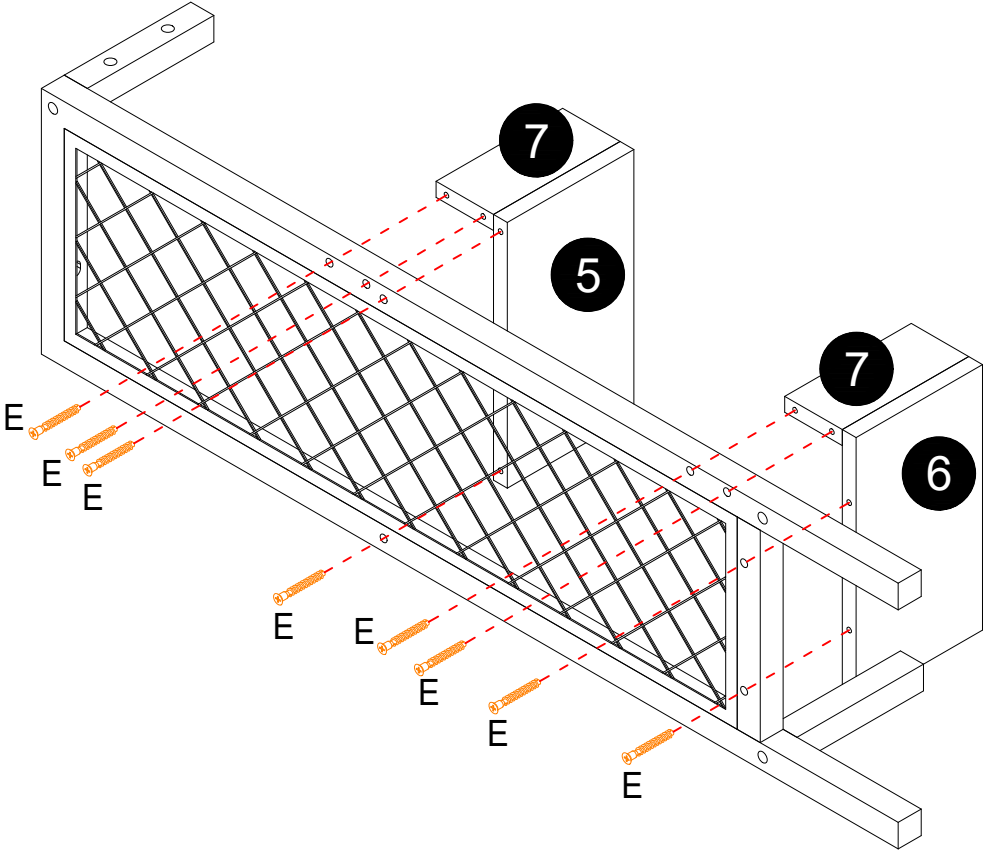
STEP2



E 8PCS



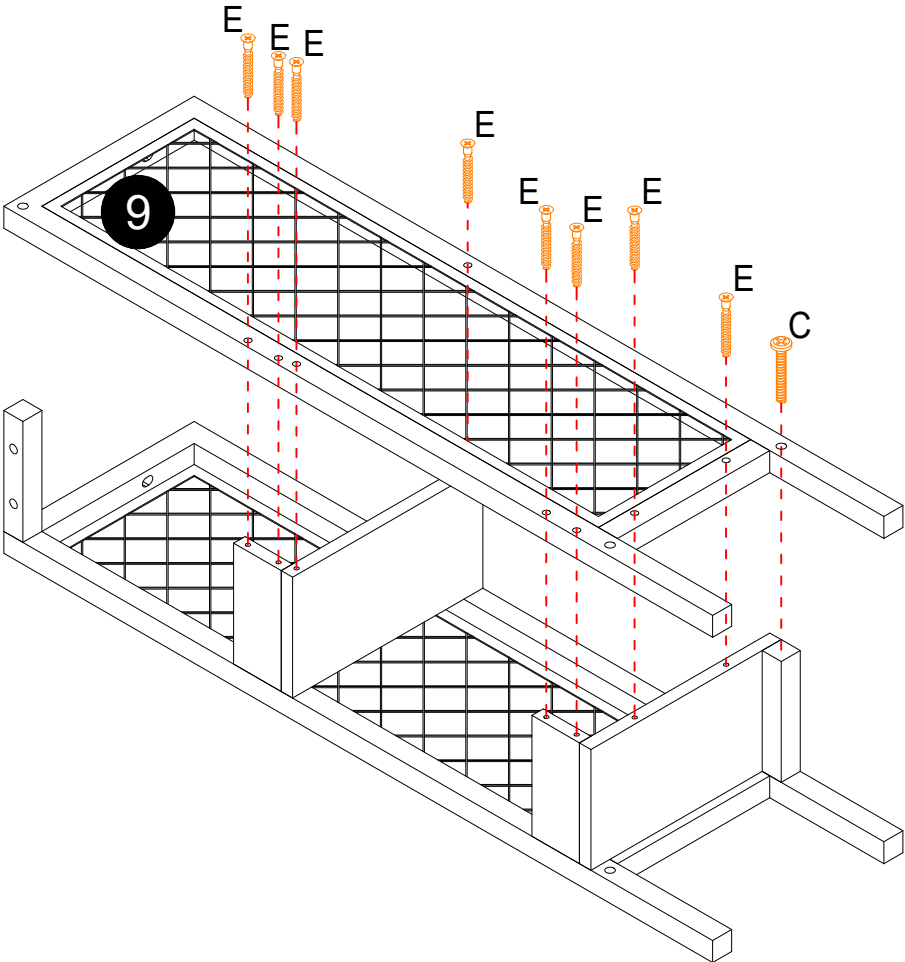STEP3



C 1PCS



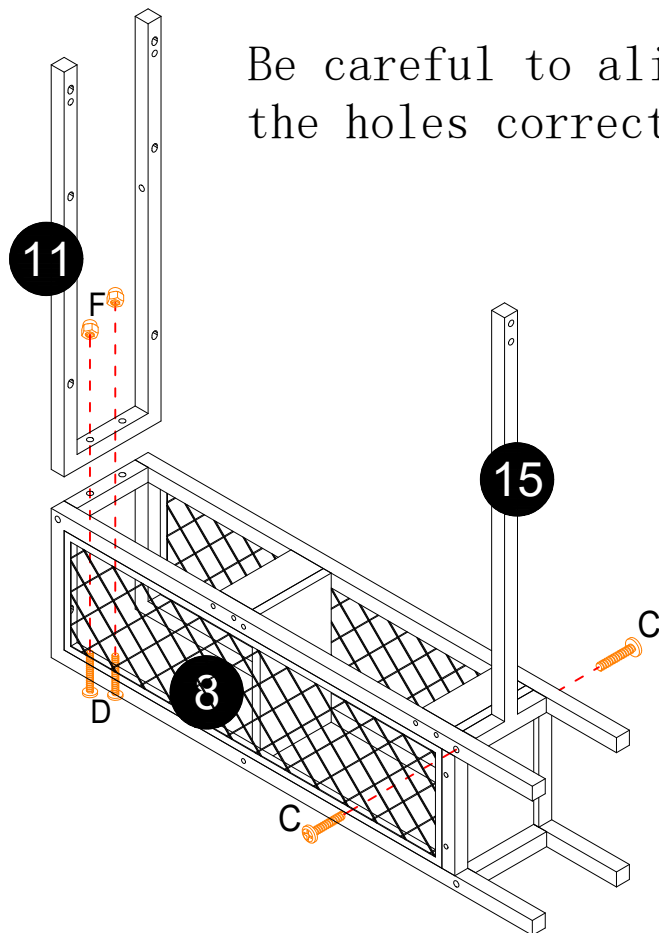
M6*40

E 8PCS




ASSEMBLY INSTRUCTION

STEP4



C	2PCS	D	2PCS
			
M6*40		M6*45	
		F	2PCS
			
		M6	

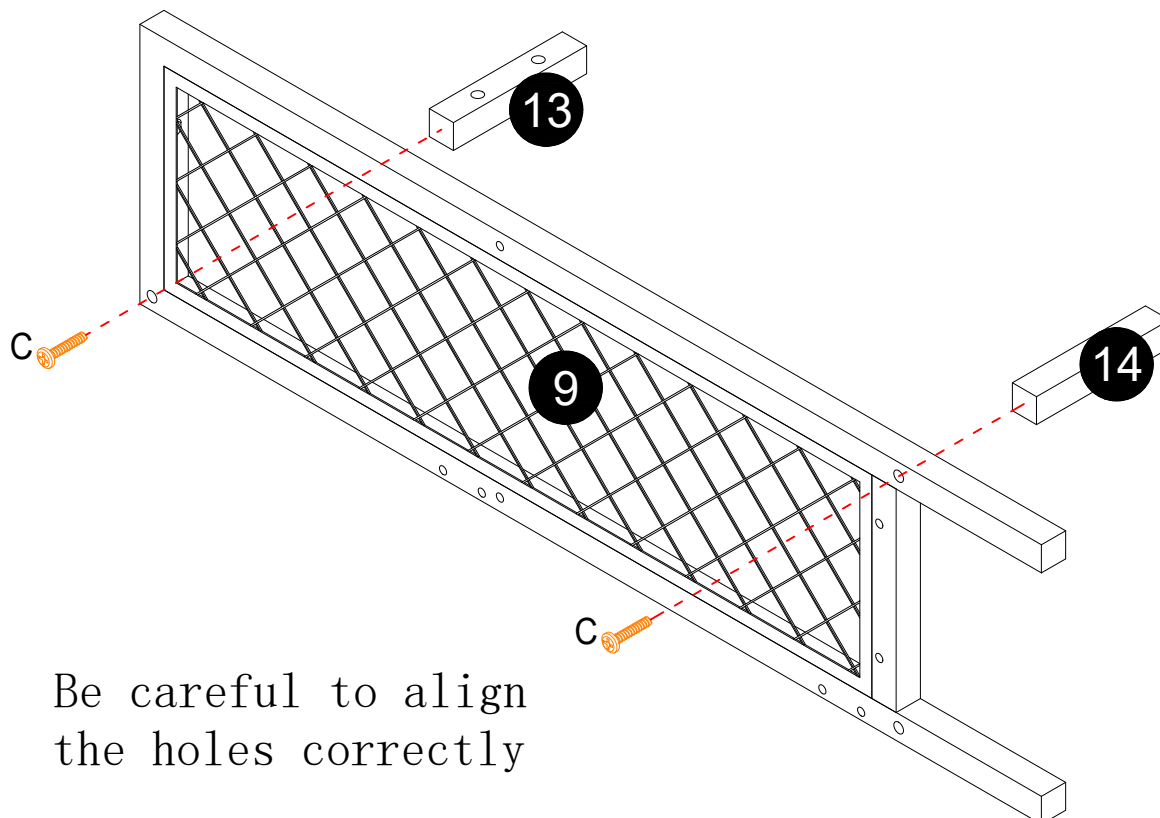STEP5




C	2PCS
	
M6*40	

ASSEMBLY INSTRUCTION

STEP6

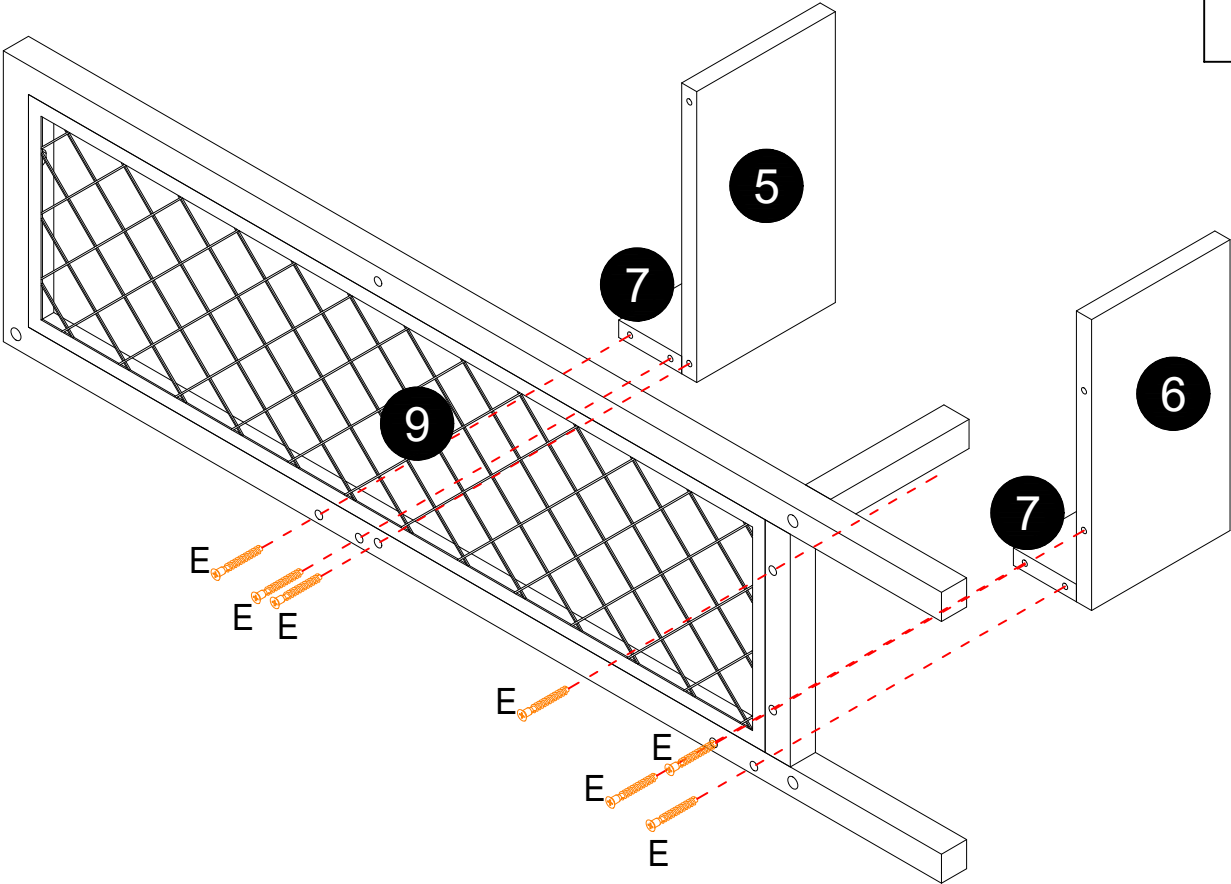E 8PCS




STEP7

C 1PCS




M6*40

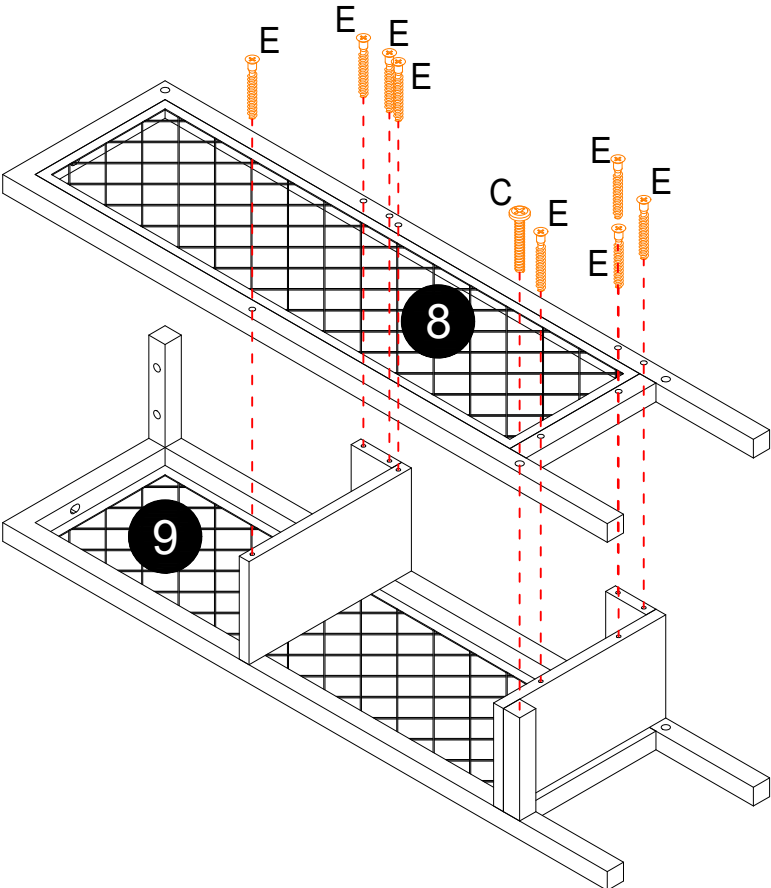E 8PCS



ASSEMBLY INSTRUCTION

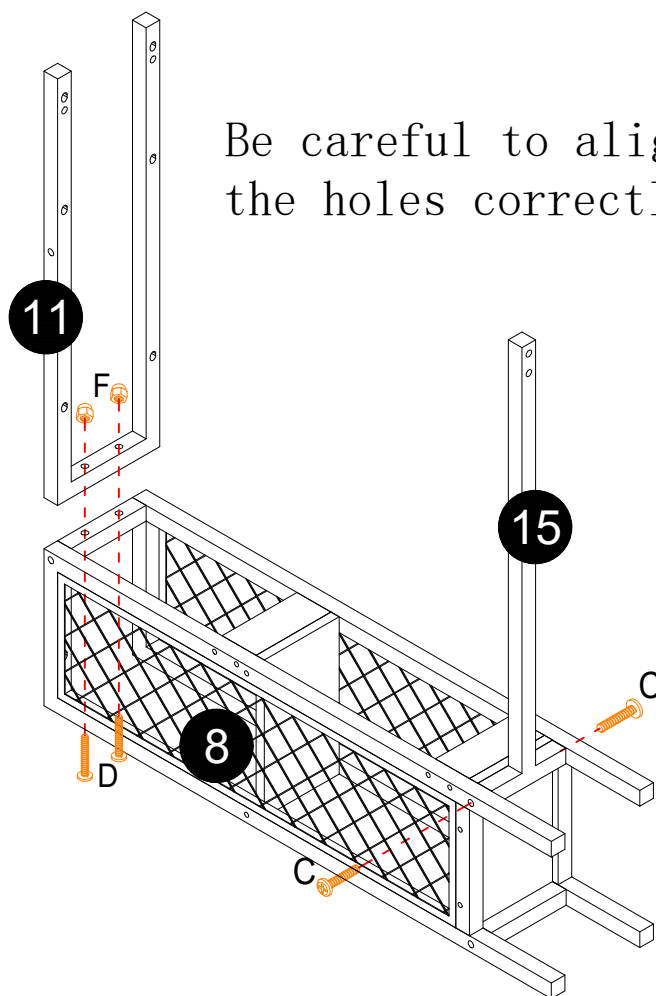STEP8




C 2PCS
M6*40

D 2PCS
M6*45

F 2PCS
M6

STEP9

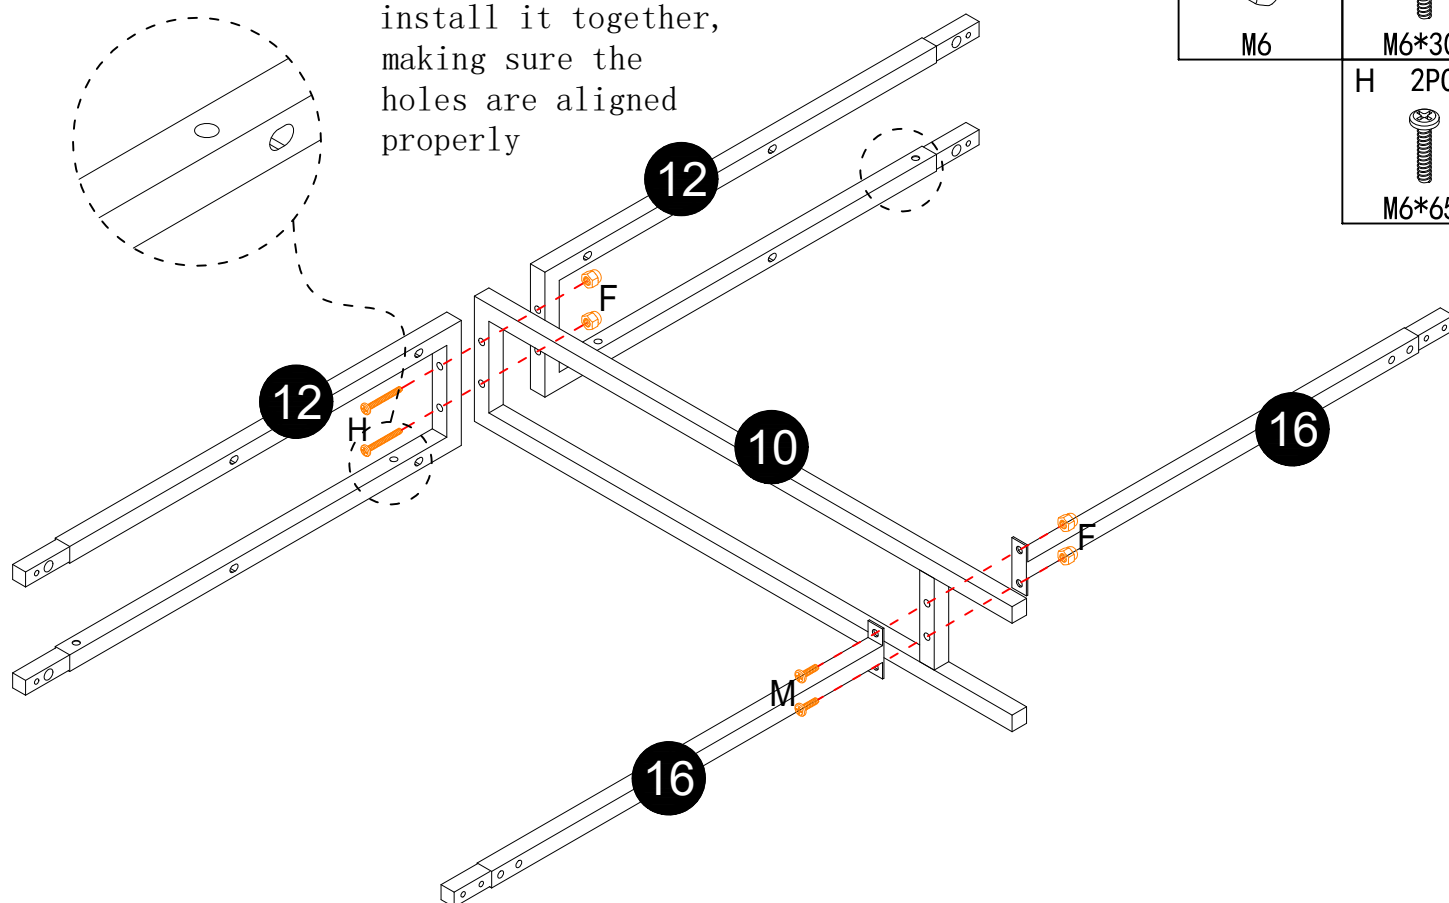It's recommended that two people install it together, making sure the holes are aligned properly



F 4PCS
M6

M 2PCS
M6*30

H 2PCS
M6*65

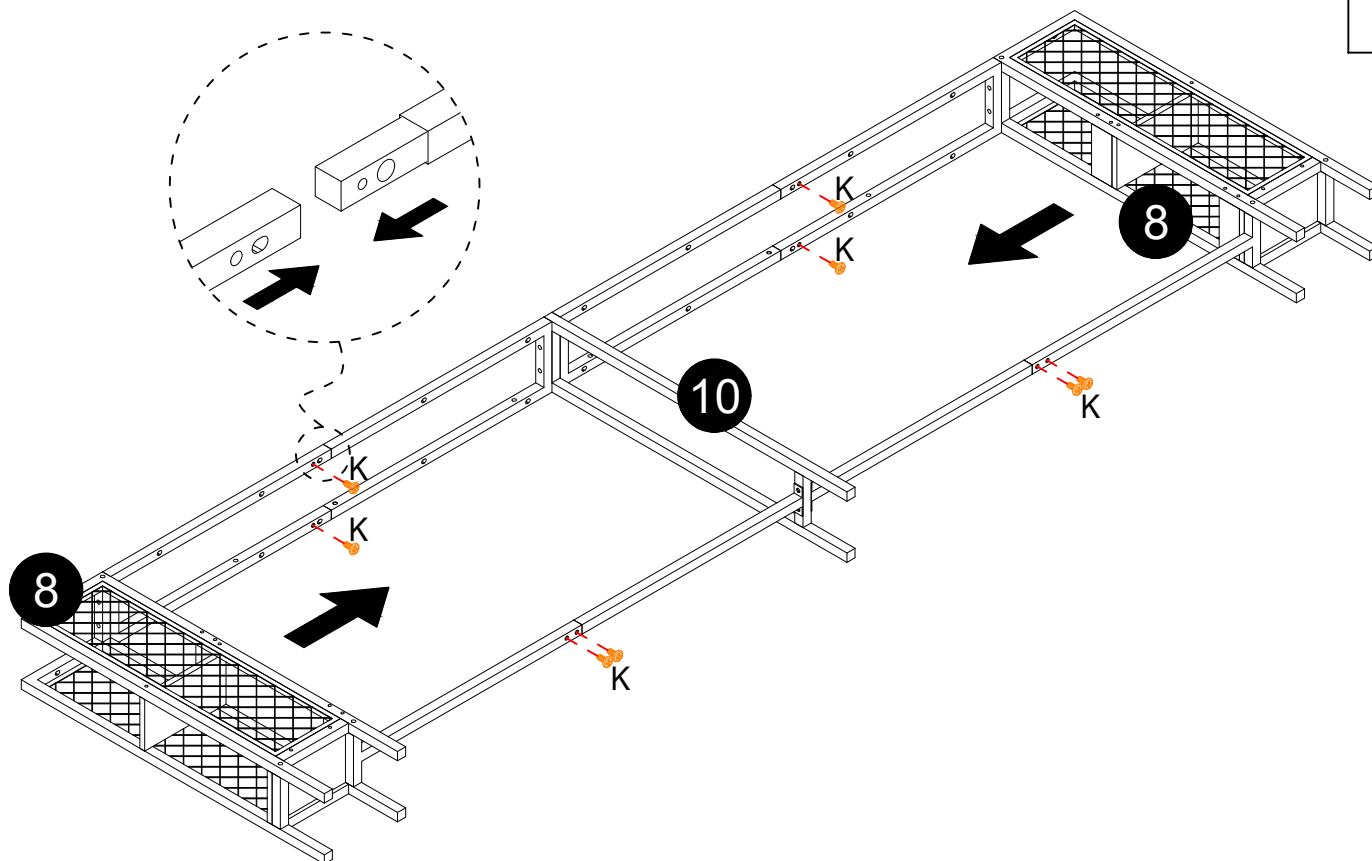
ASSEMBLY INSTRUCTION

STEP10

K 8PCS



M6*10




STEP11

A 2PCS




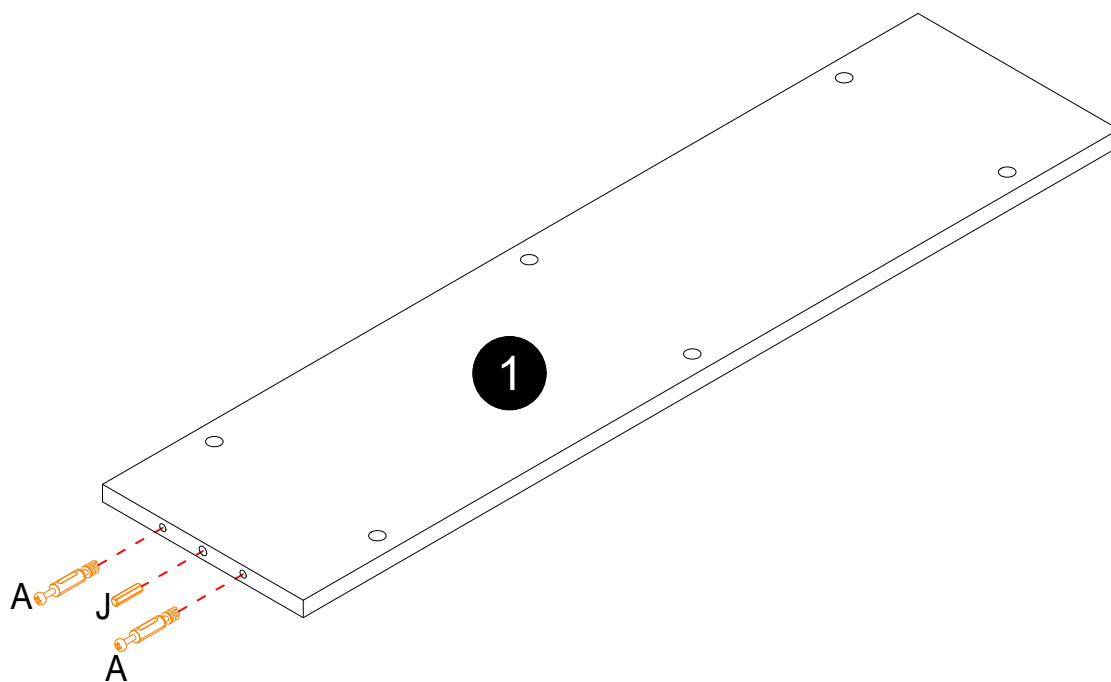J 1PC



ASSEMBLY INSTRUCTION

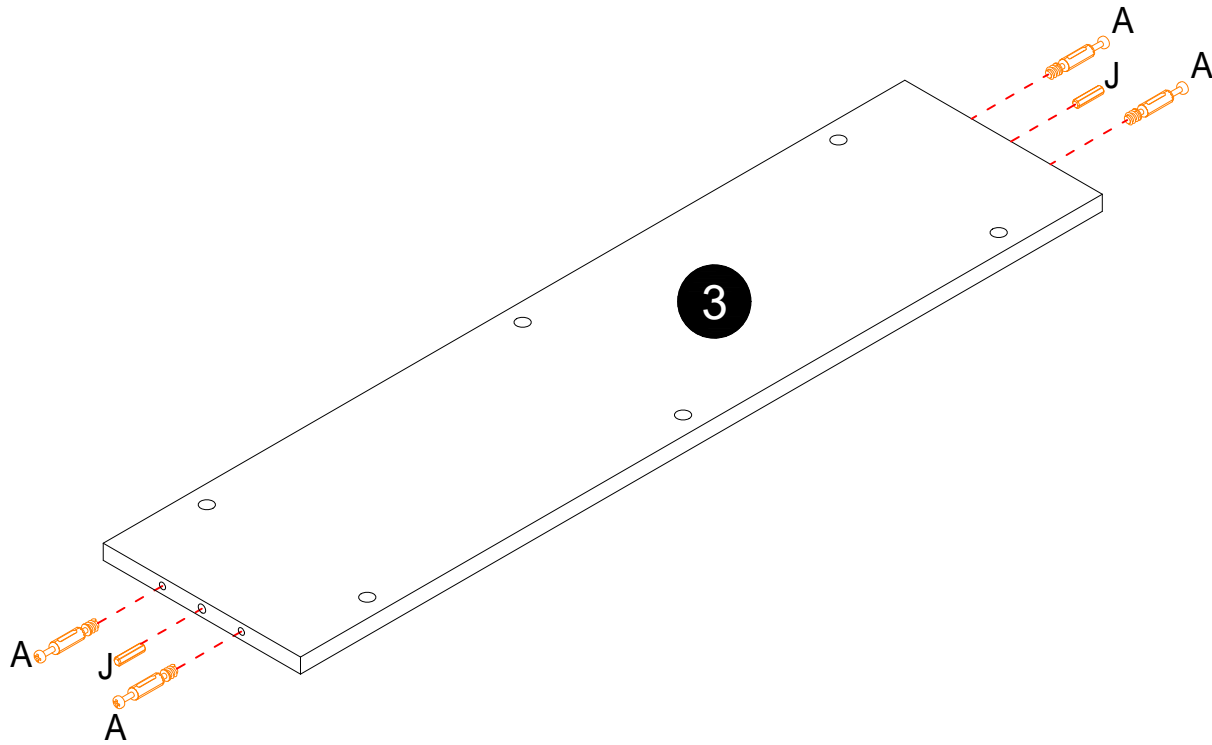STEP12




A 4PCS



J 2PCS



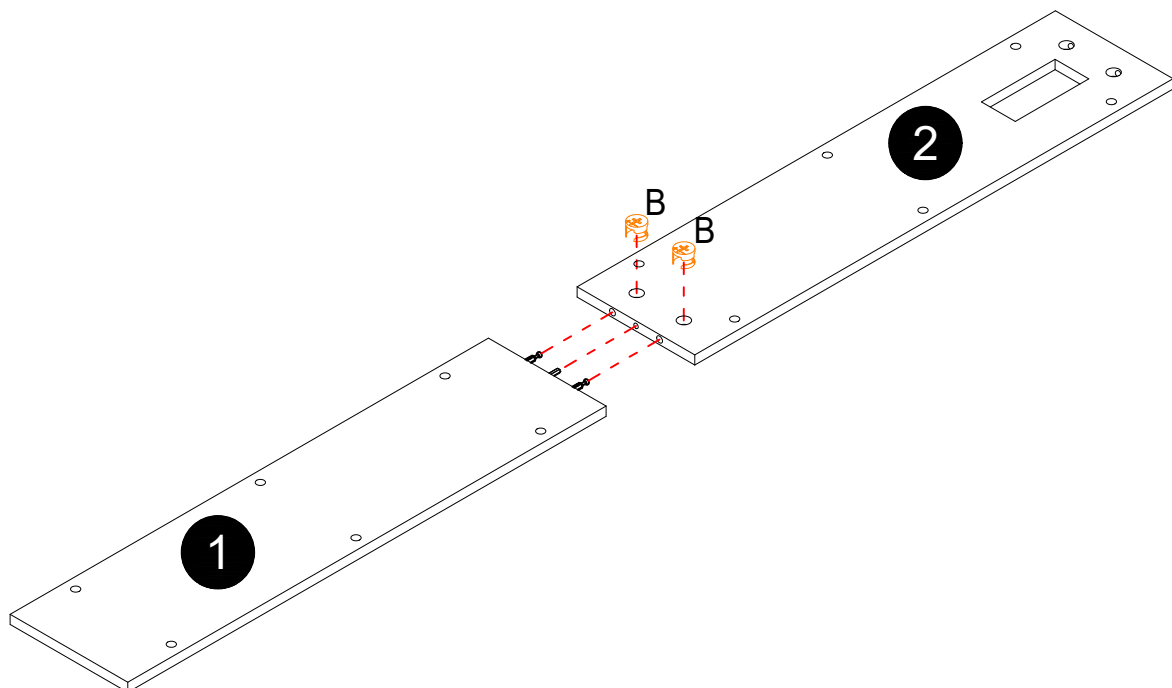STEP13




B 2PCS




STEP14

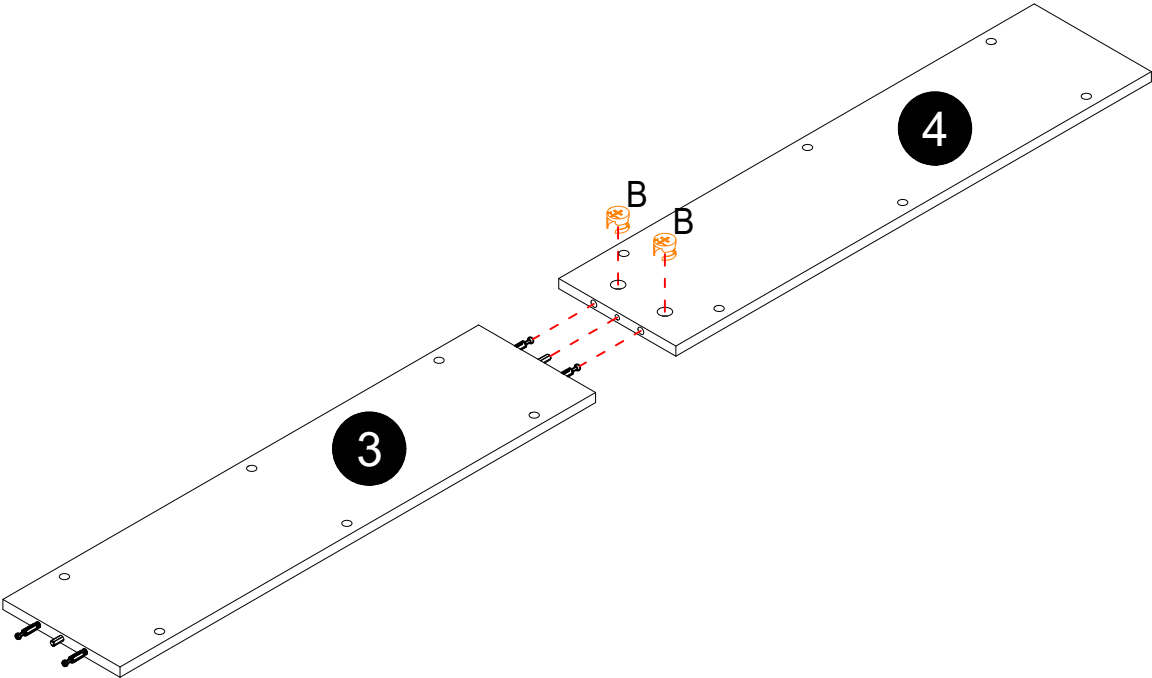B 2PCS




STEP15

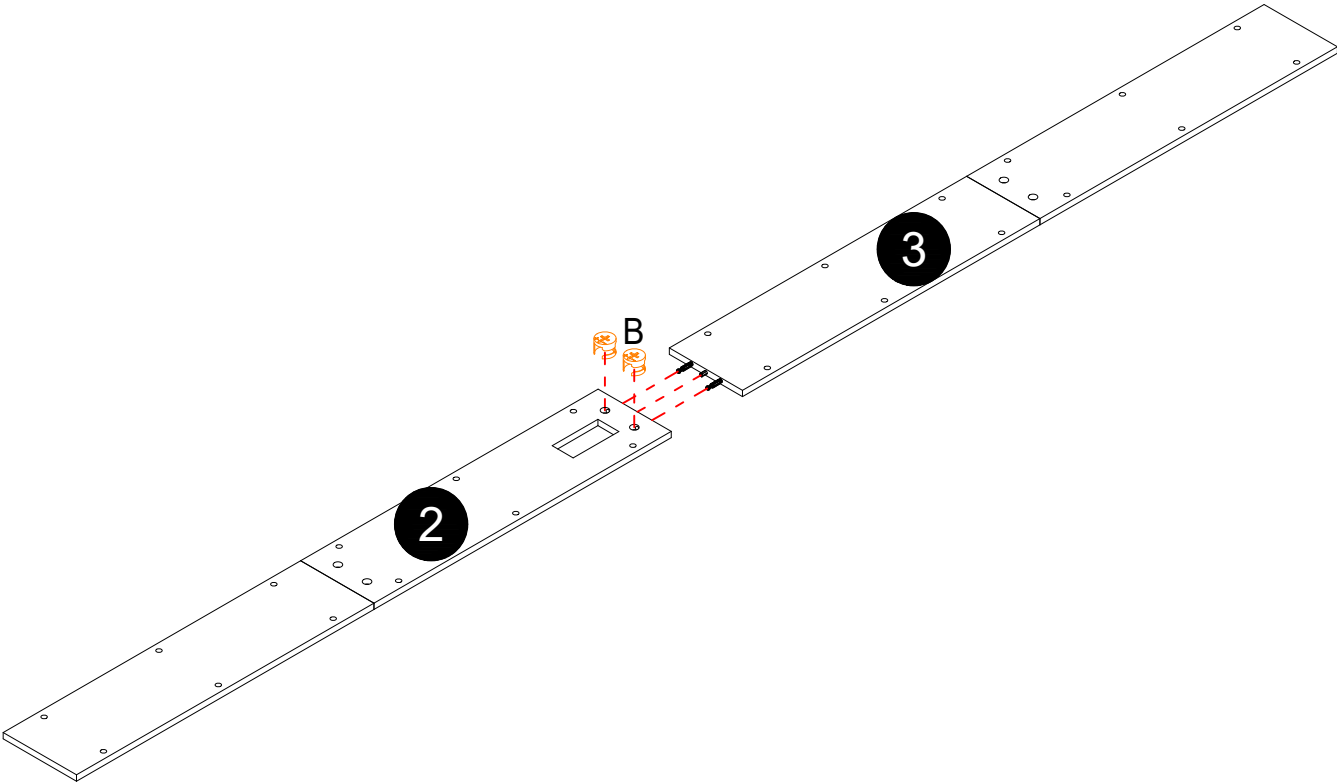B 2PCS



STEP16

C 6PCS  M6*40	F 6PCS  M6
N 2PCS  M6*50	

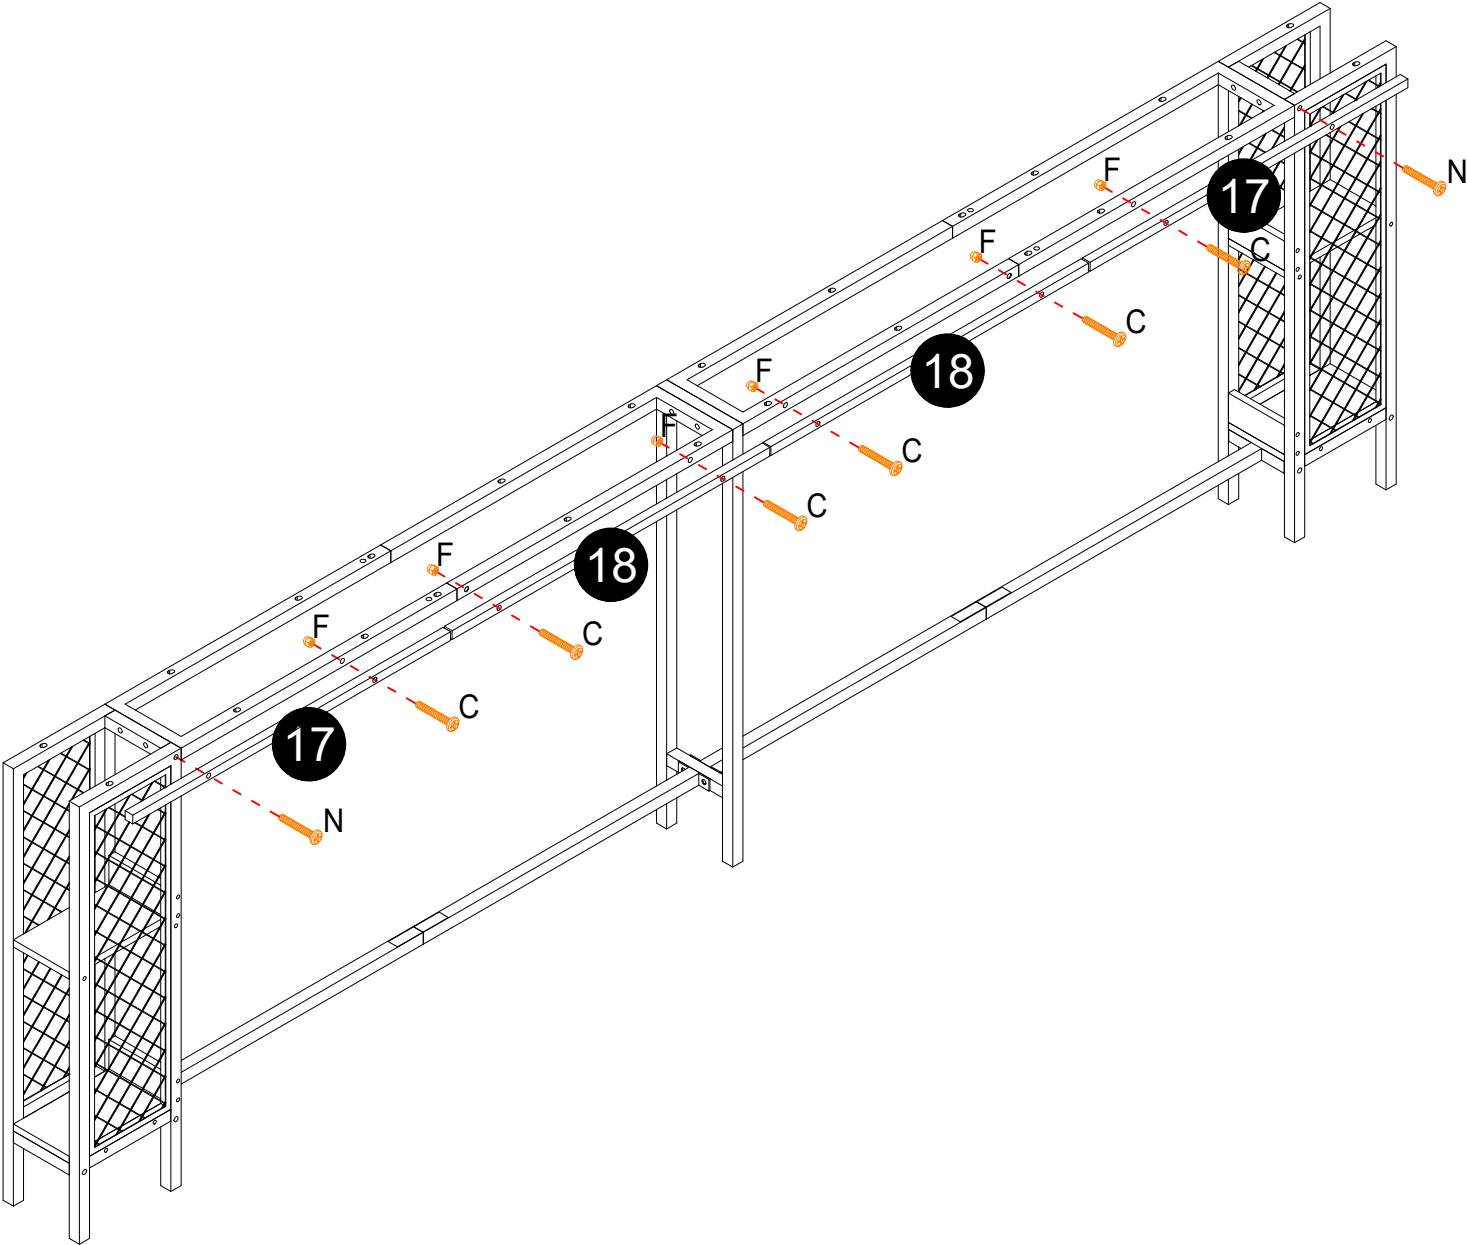


STEP17

G 24PCS



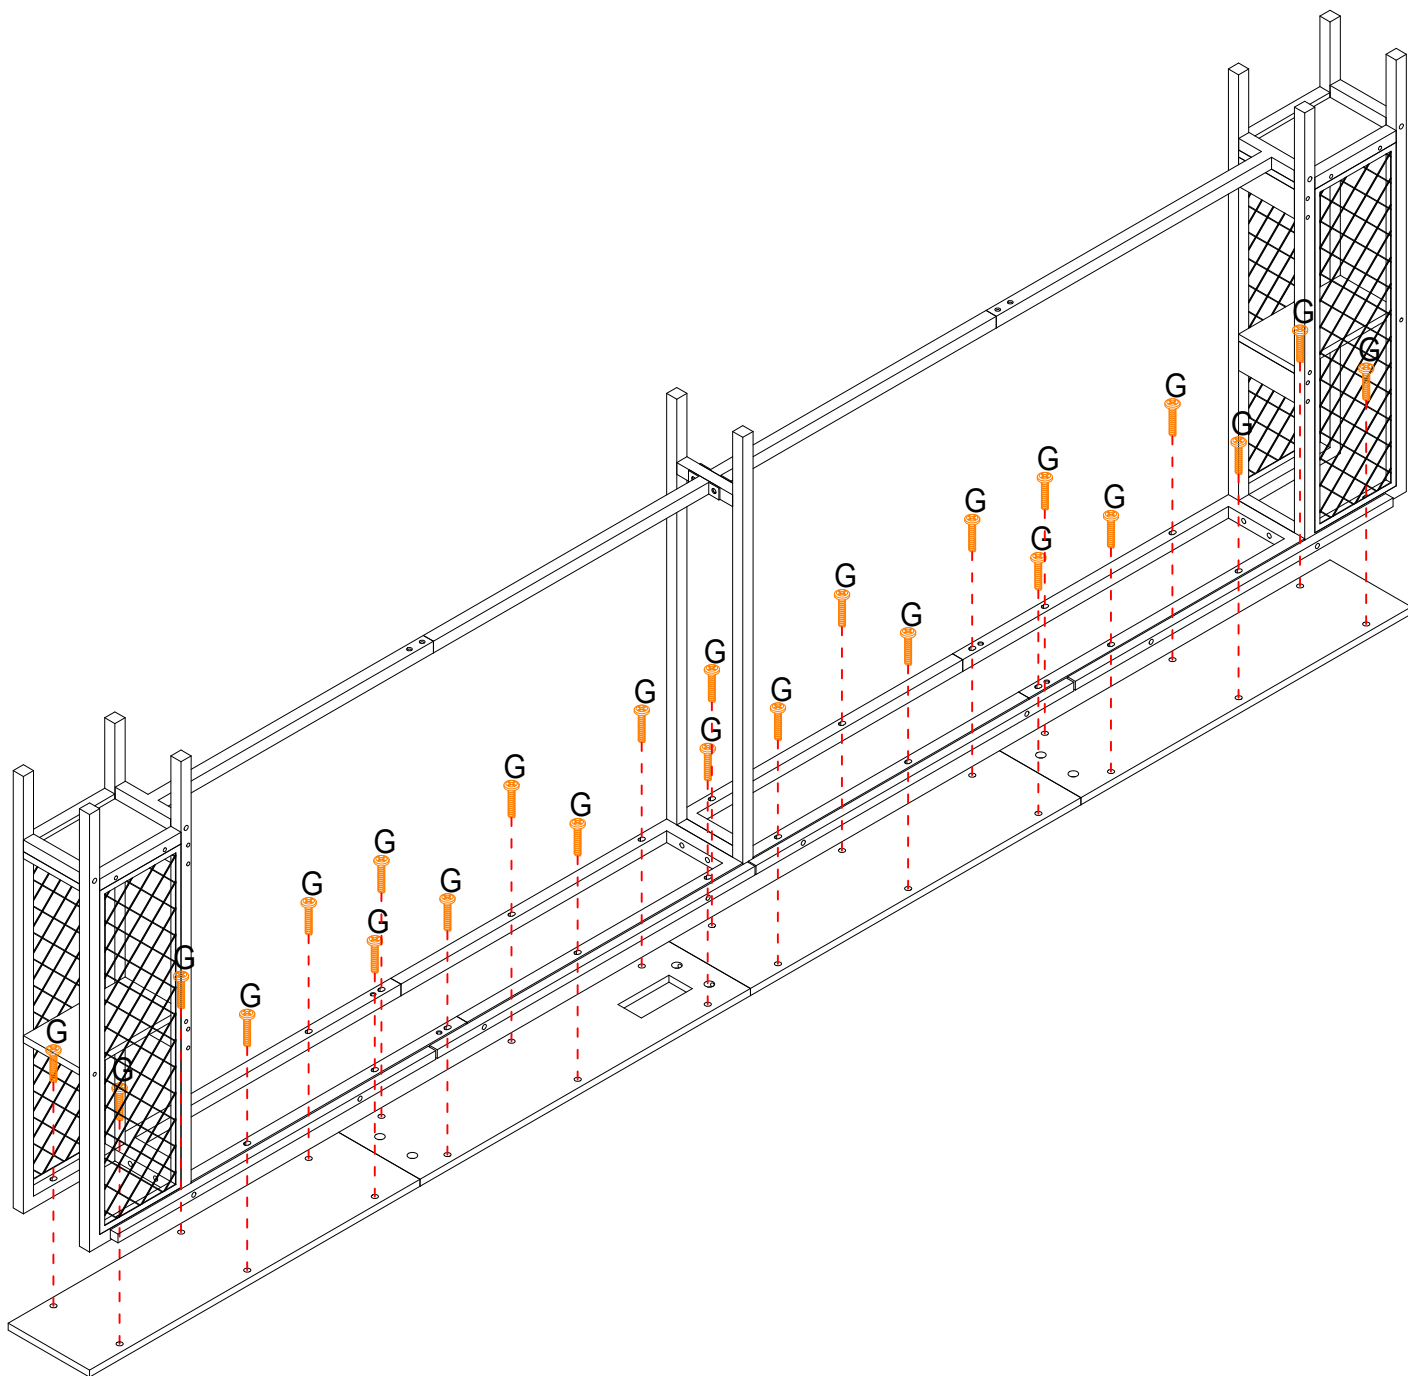M6*28



1 PC

