



ASSEMBLY INSTRUCTION

CABINET WITH 3 GLASS DOOR AND 3 DRAWERS

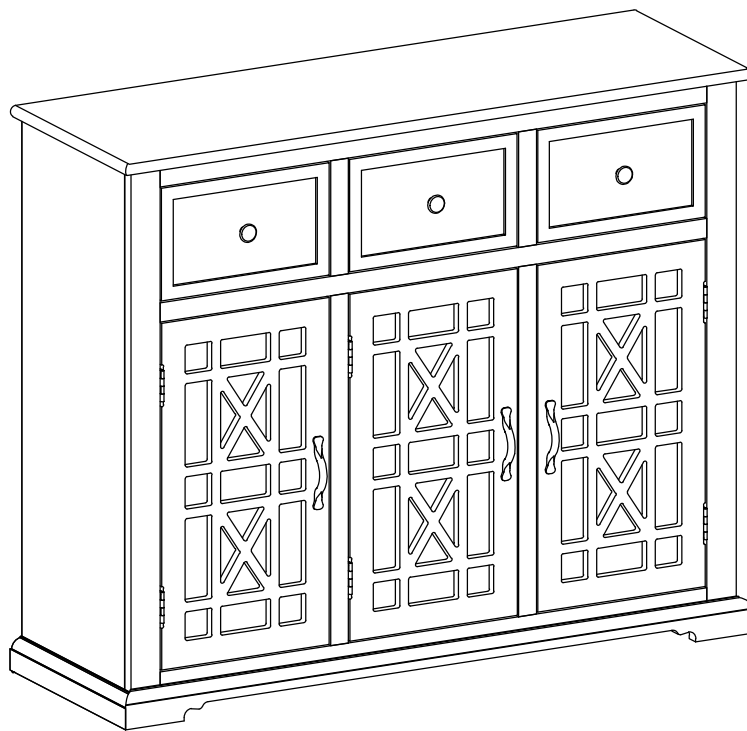


ASSEMBLY INSTRUCTION

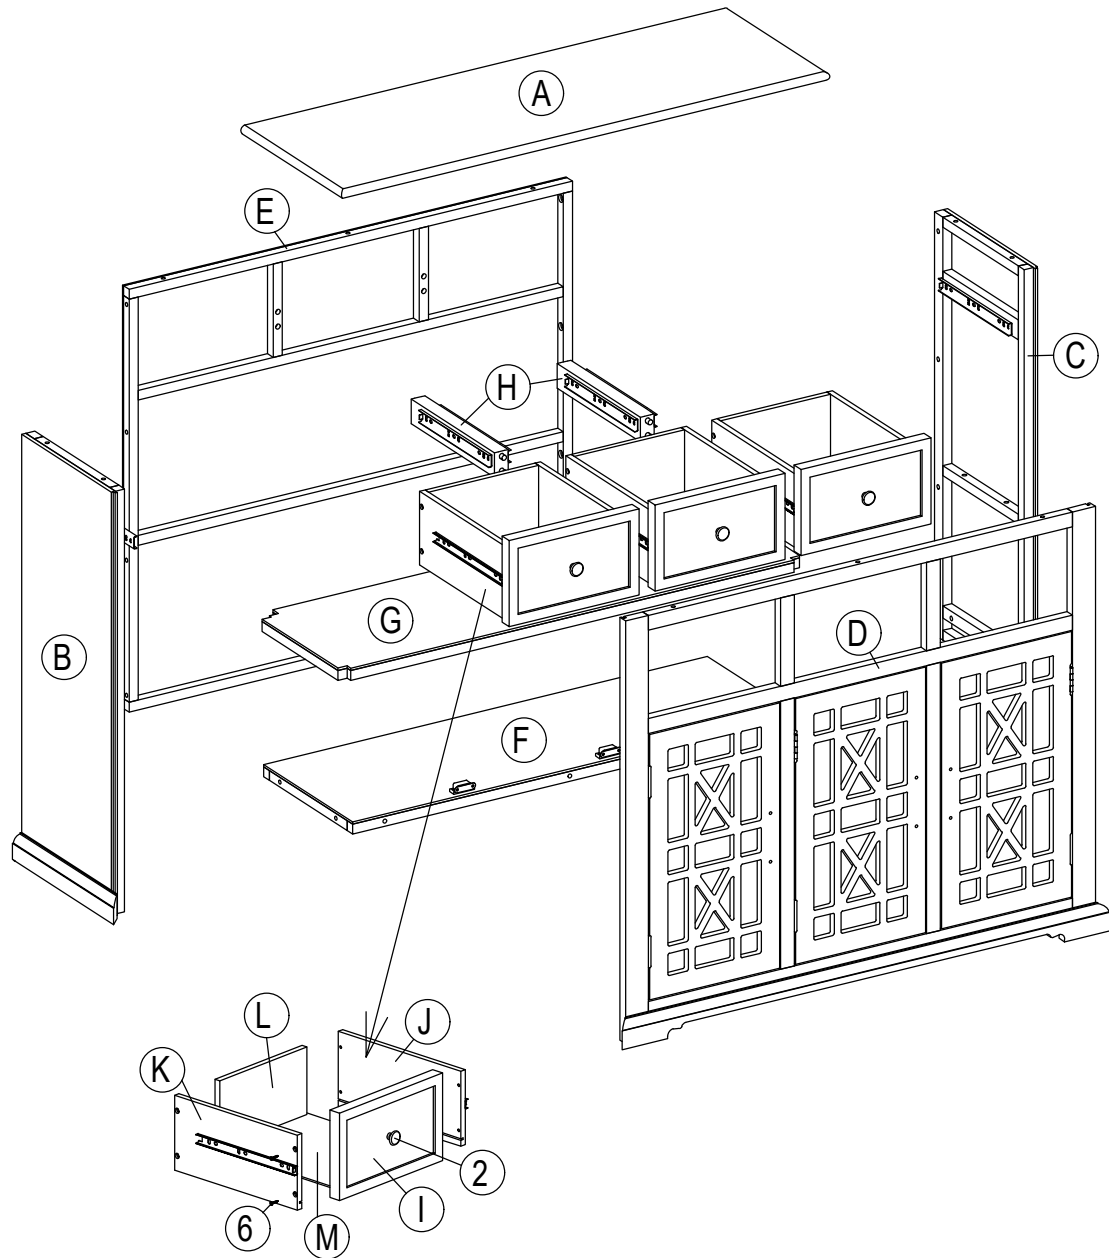


ASSEMBLY INSTRUCTION


BOX 1 : WF297171

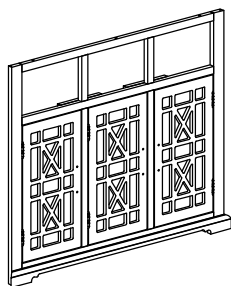


④ FONT PANEL-1PC

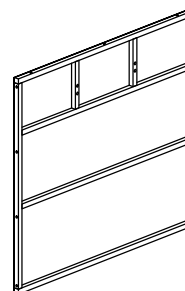


⑤ BACK PANEL-1PC

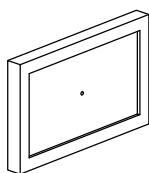


① TOP DRAWERS- 3PCS

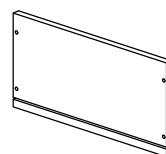

② RIGHT SIDE DRAWERS- 3PCS

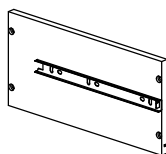


③ LEFT SIDE DRAWERS- 3PCS




④ BACK DRAWERS- 3PCS

ASSEMBLY INSTRUCTION


BOX 2 : WF297172

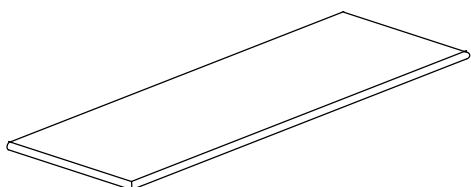


Ⓐ TOP PANEL - 1PC




Ⓑ LEFT SIDE PANEL-1PC




Ⓒ LEFT SIDE PANEL-1PC

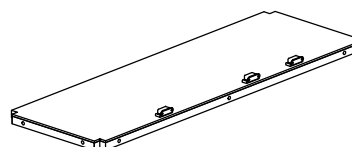


Ⓕ BOTTOM PANEL-1PC

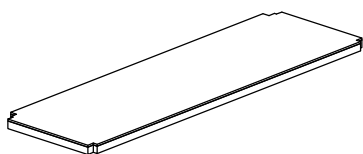


Ⓖ SHELF PANEL-1PC

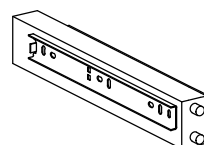

Ⓗ FOR DRAWING- 2PCS




Ⓜ BOTTOM DRAWERS- 3PCS




Ⓝ HARDWARE BOX- 1PC

ASSEMBLY INSTRUCTION


HARDWARE

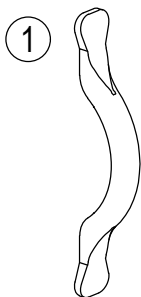


Handle = 3 pcs

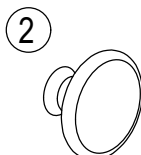


Handle = 3 pcs




Bolt M4x18= 6 pcs




Bolt M4x35= 3 pcs

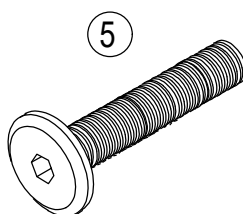


Bolt M6x30= 39 pcs

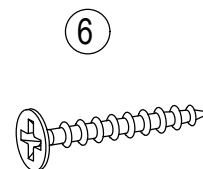


Head Srew 4x25= 24 pcs

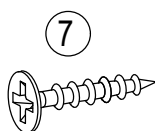

Head Srew 4x15= 8 pcs

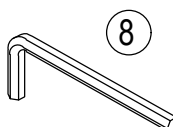




KEY= 1 pcs



Pas L = 4 pcs

ASSEMBLY INSTRUCTION

STEP 1 :

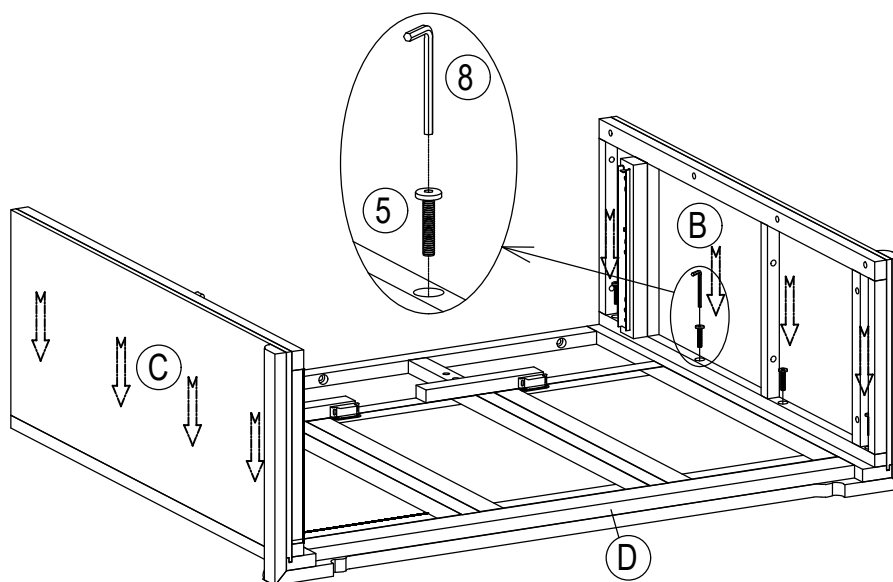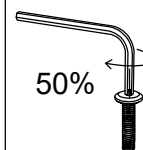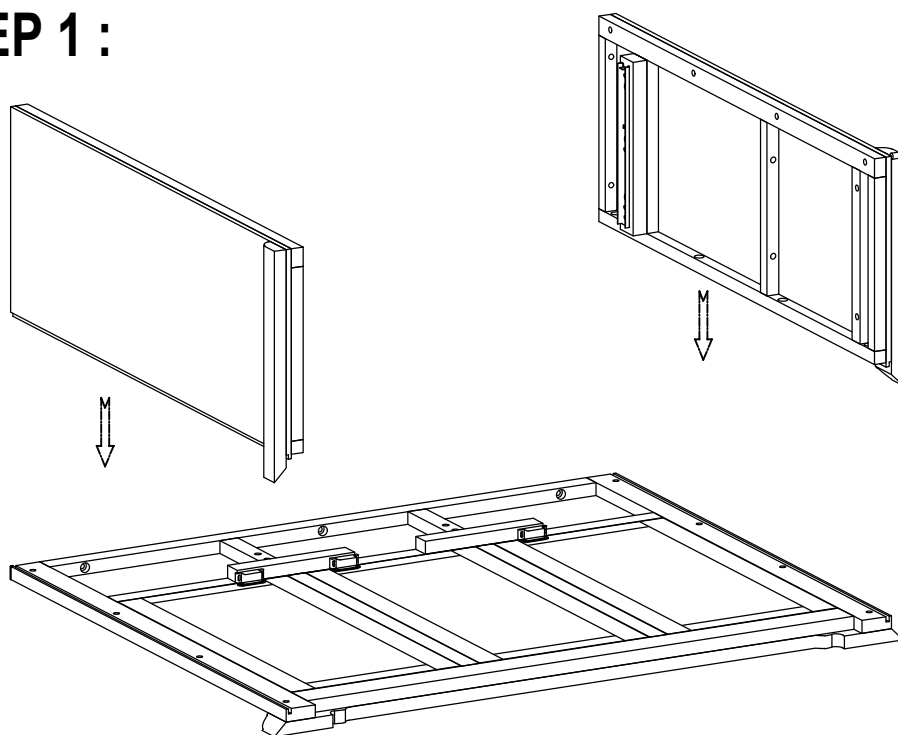

⑤*8

⑧*1





B*1

C*1

D*1

ASSEMBLY INSTRUCTION

STEP 2 :

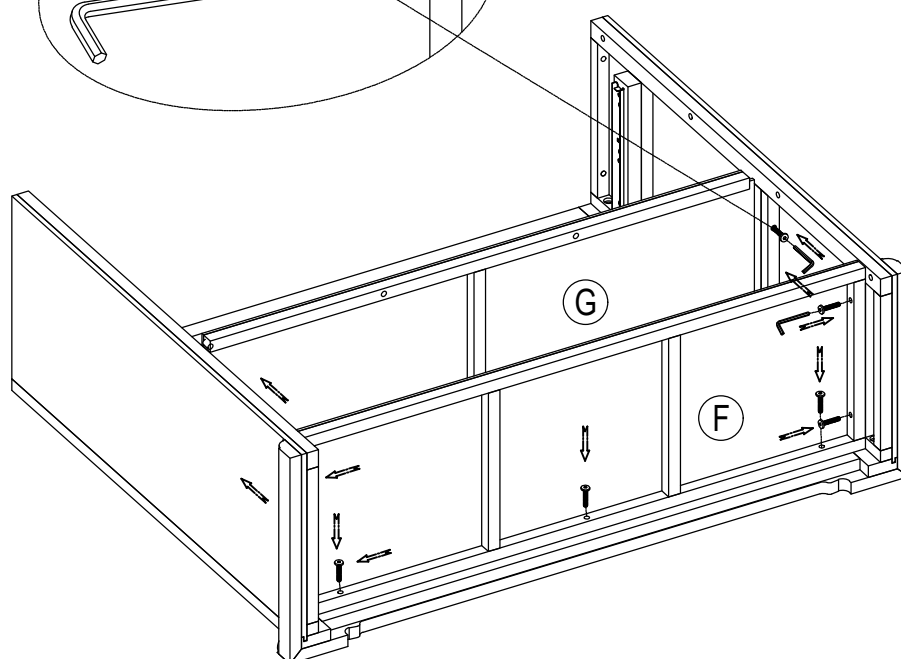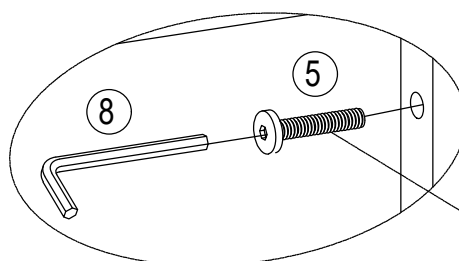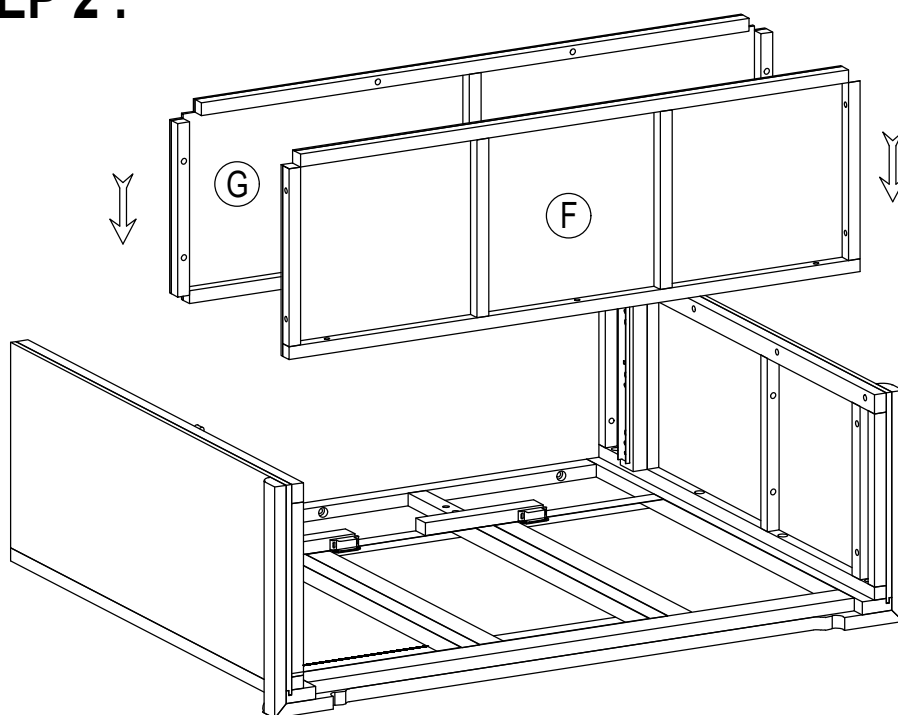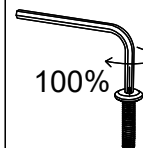

⑤*11


⑧*1

F*1

G*1


ASSEMBLY INSTRUCTION

STEP 3 :

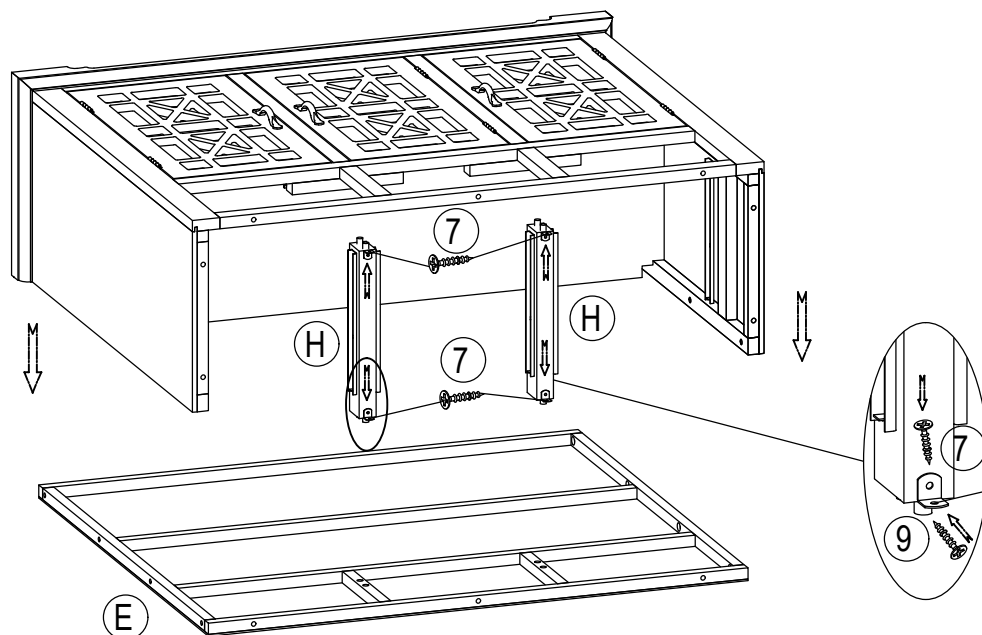

⑦*8 ⑨*4 E*1 H*2






STEP 4 :

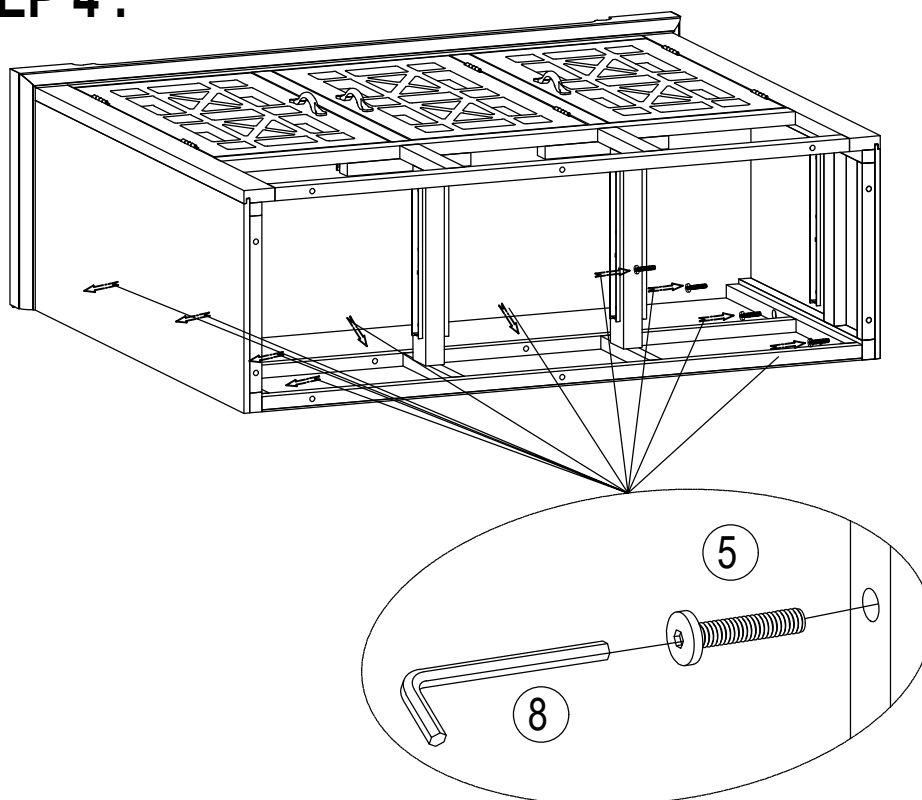

⑤*10 ⑧*1

ASSEMBLY INSTRUCTION

STEP 5 :

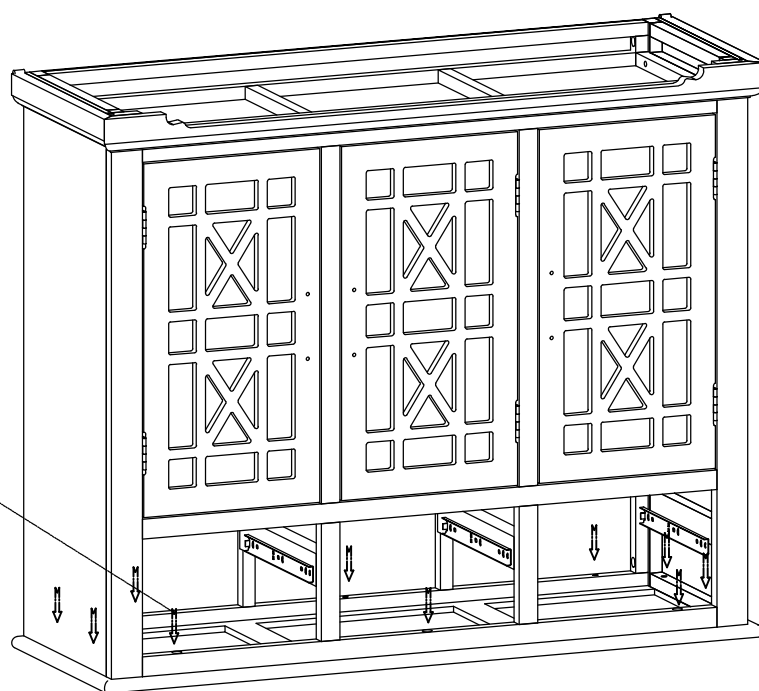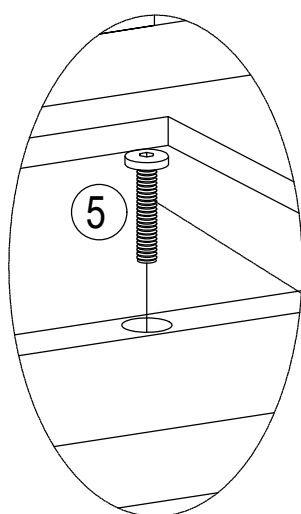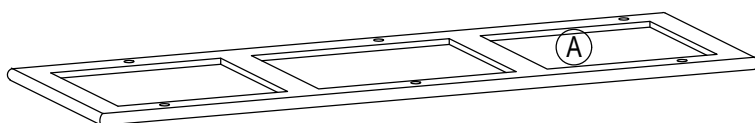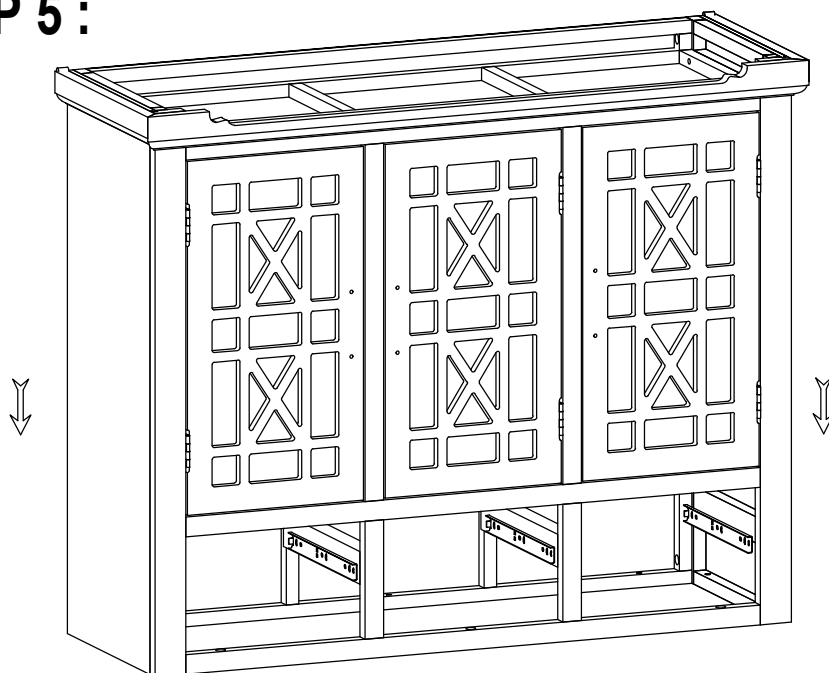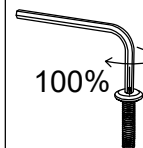


⑤*10

A*1

ASSEMBLY INSTRUCTION

STEP 6 :

X3

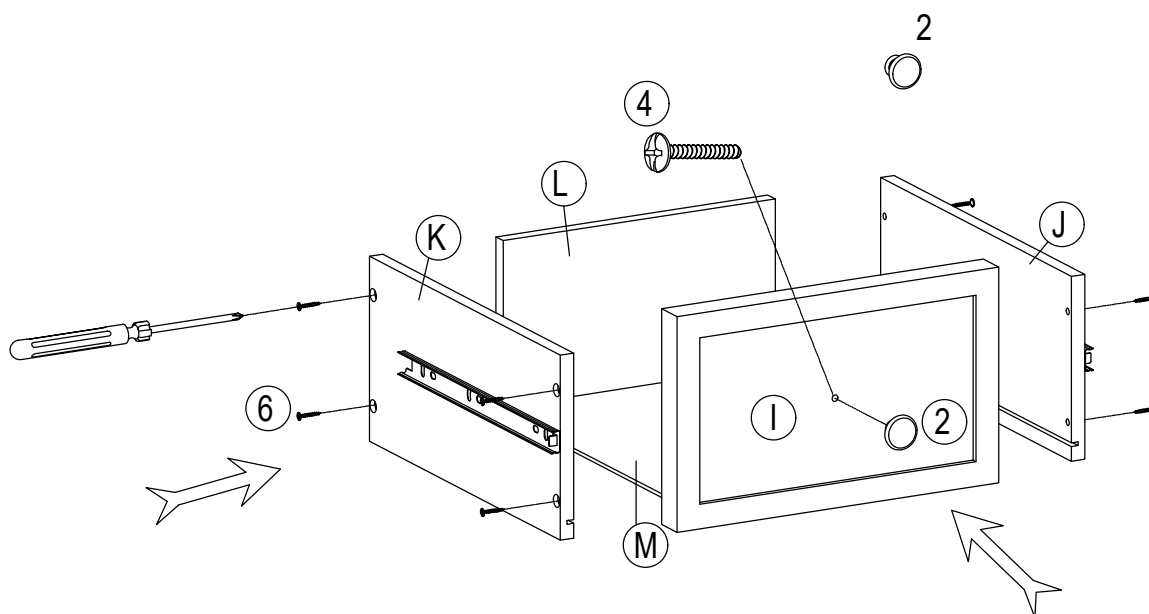

②*3

⑥*24

④*3

I*3

J*3

K*3

L*3


M*3

ASSEMBLY INSTRUCTION

STEP 7 :



100%

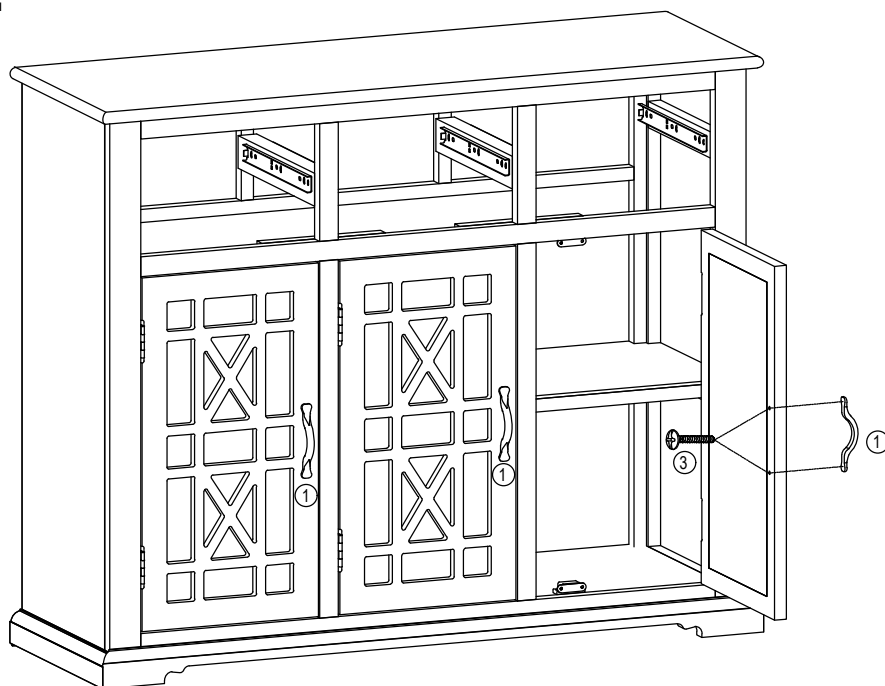

①*3

③*6

STEP 8 :

