



# Instructions

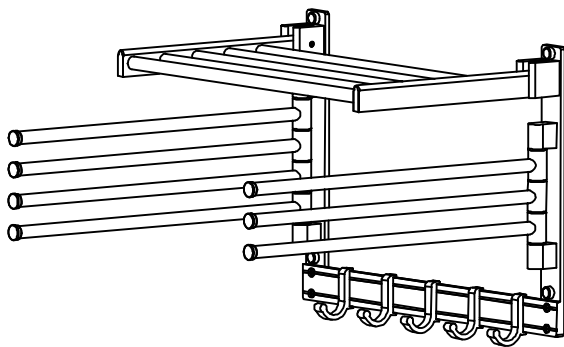

	a x 1
	b x 4
	c x 4
	d x 4
	e x 4
	f x 4
	g x 4
g x 4 Spare parts	

1

1. Adjust left and right to align the 2 bases.

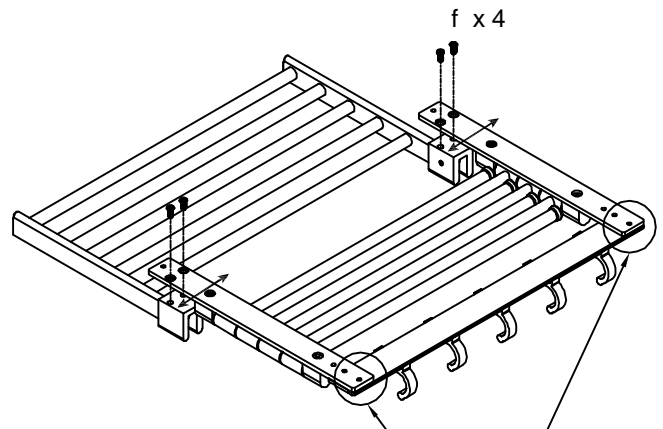


2. Loose two Ross adjustments.

2


## step3

Drill holes for installation in the wall.

mark screw hole locations

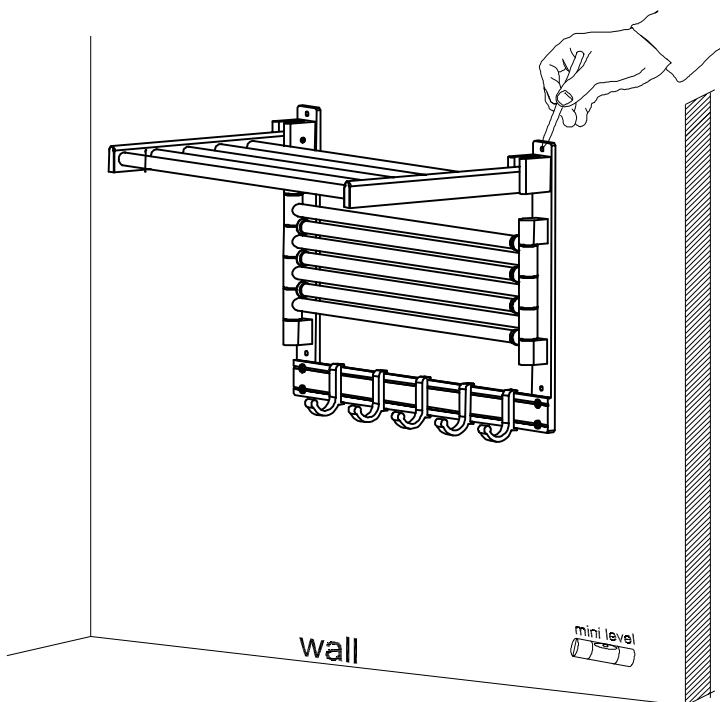

3

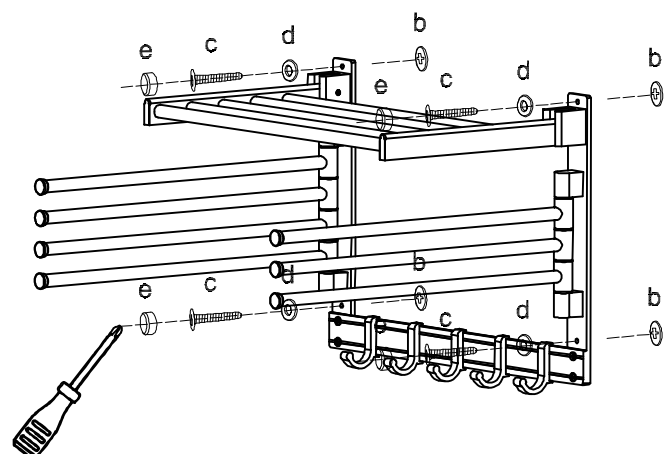

4