

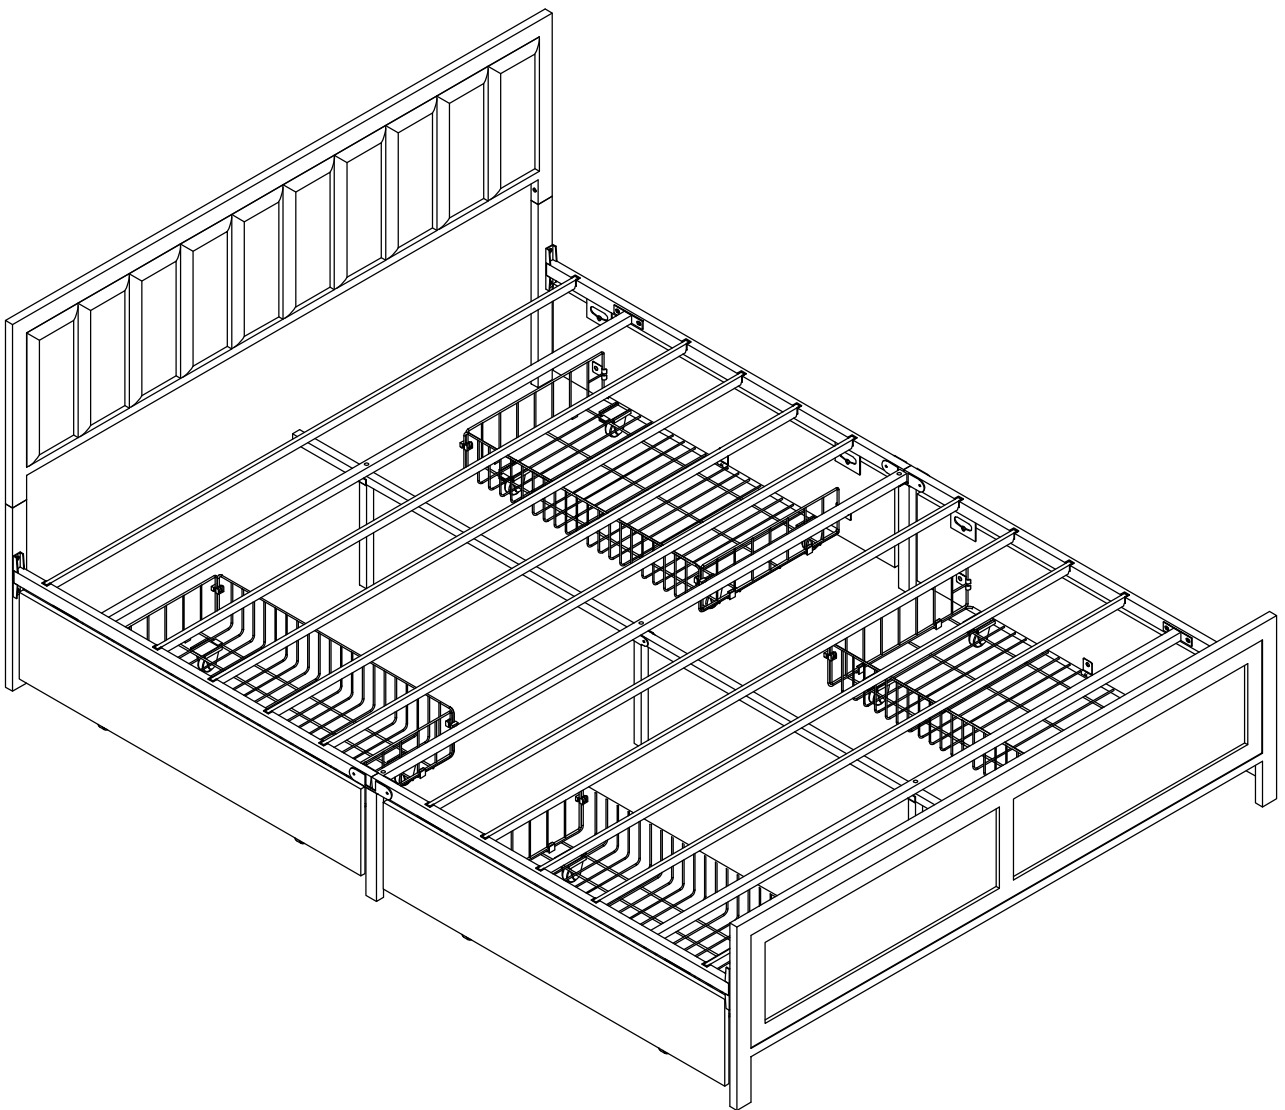
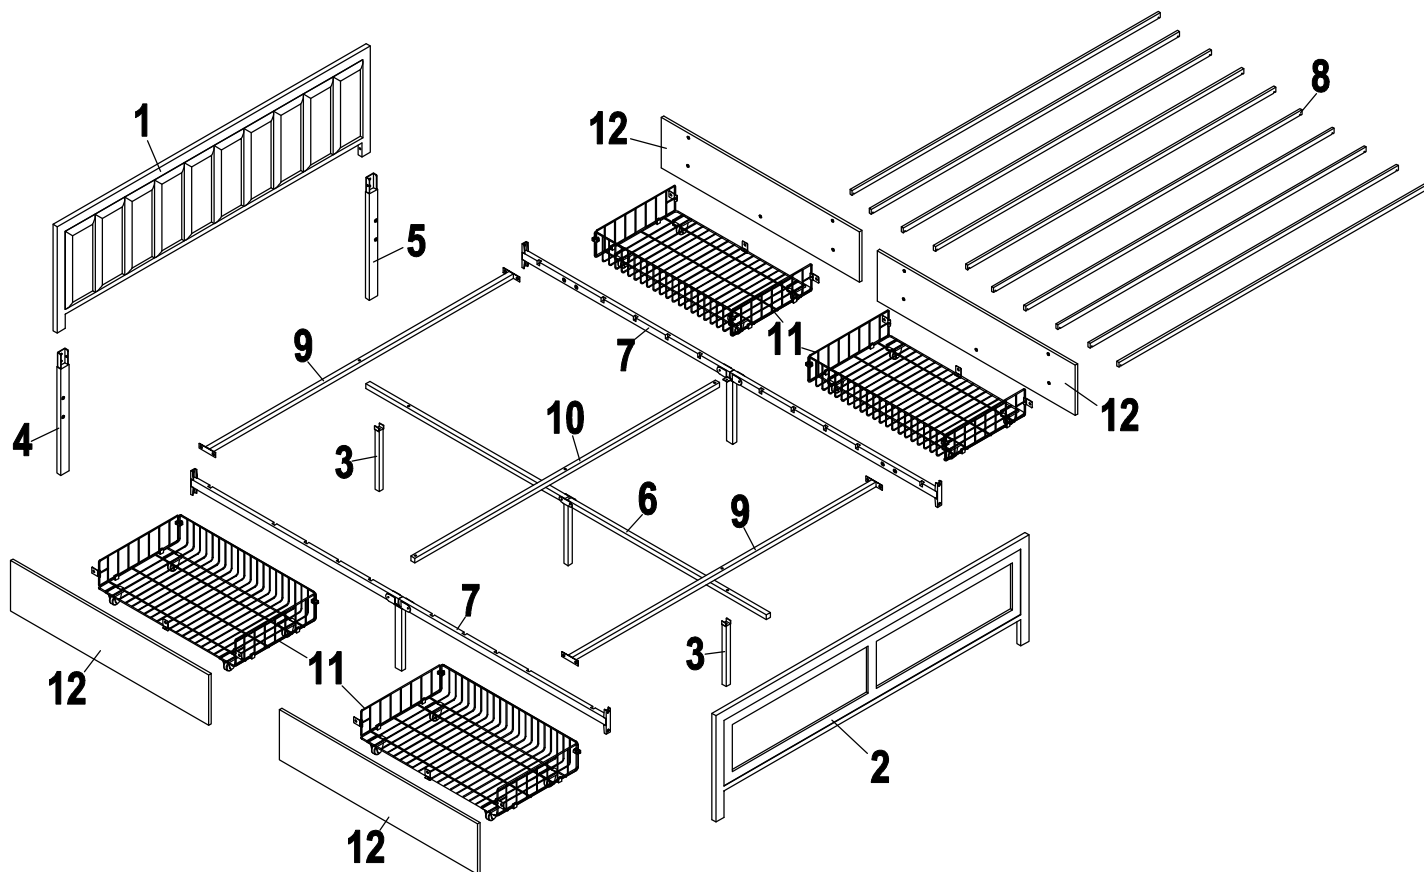
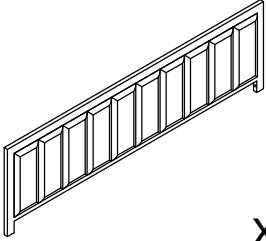
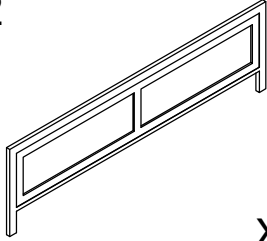
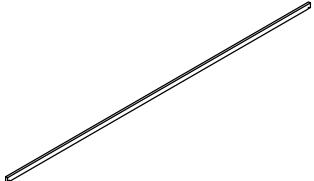
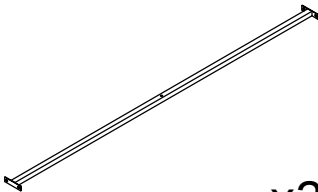
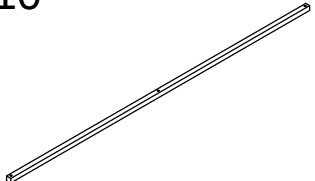










ASSEMBLY INSTRUCTION

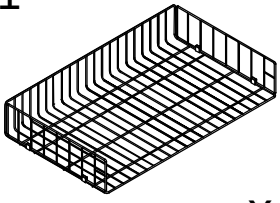


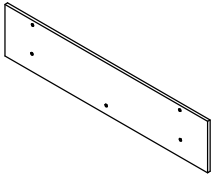


Packing List


1  x1	2  x1	3  x2	4  x1
5  x1	6  x1	7  x2	8  x10
9  x2	10  x1	11  x4	12  x4

A  x16	B  x8	C  x12	D  x8	E M8x16  x22
F M6x10  x28	G M8x55  x2	H M6x50  x1	I M6x35  x2	J   x8
K M4  x1	L M5  x1	M  x20		

Step 1

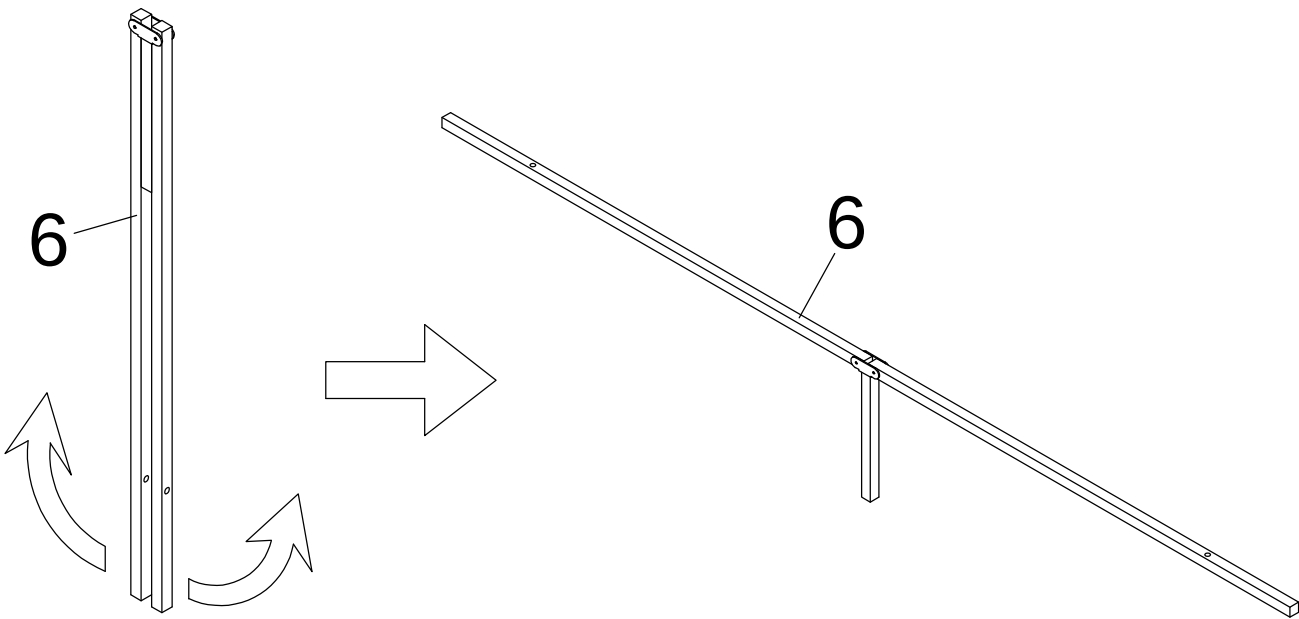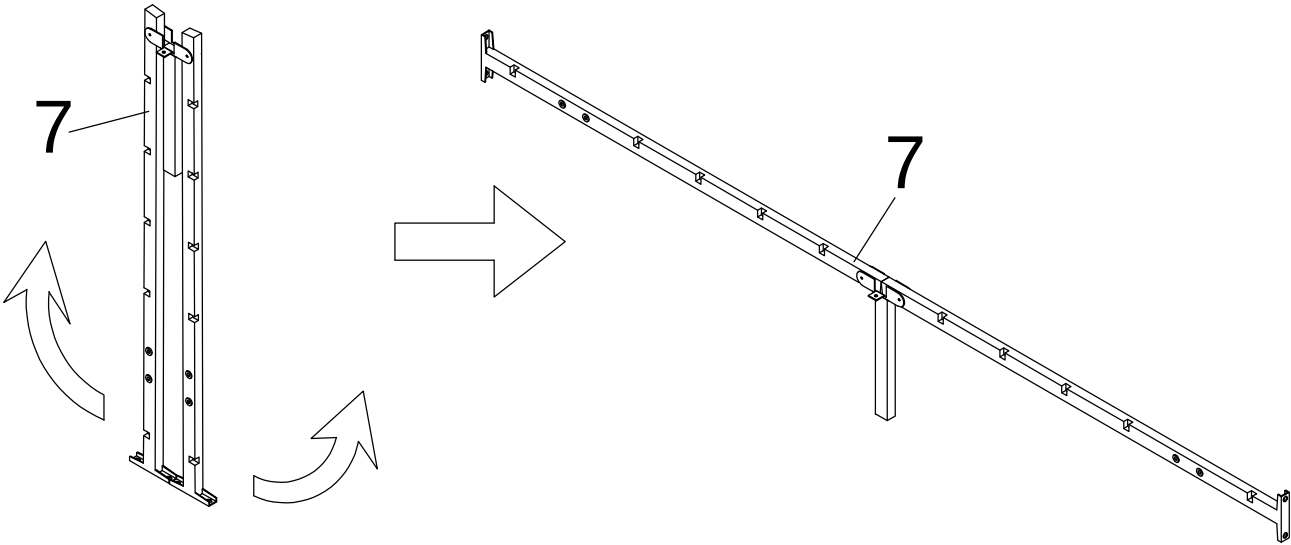


Step 2

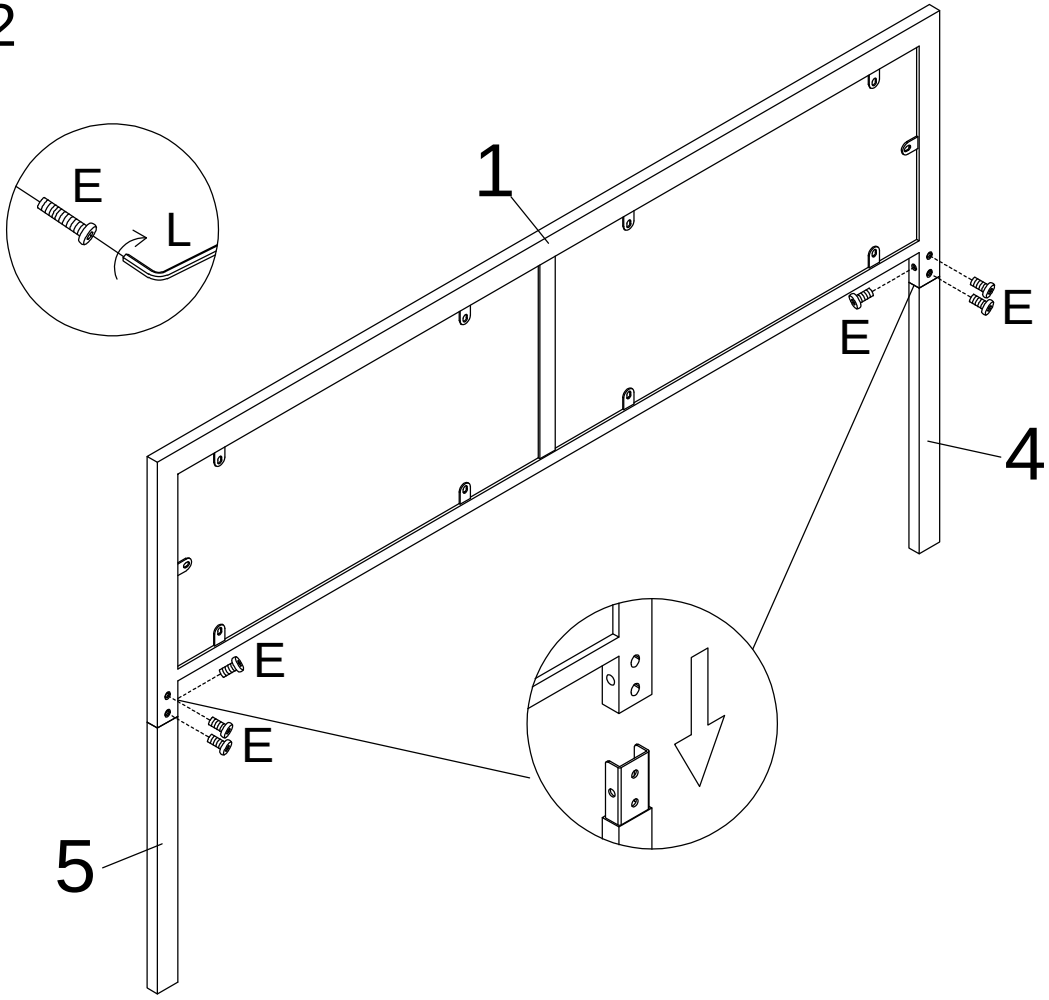


E	M8x16
	
x6	


Step 3

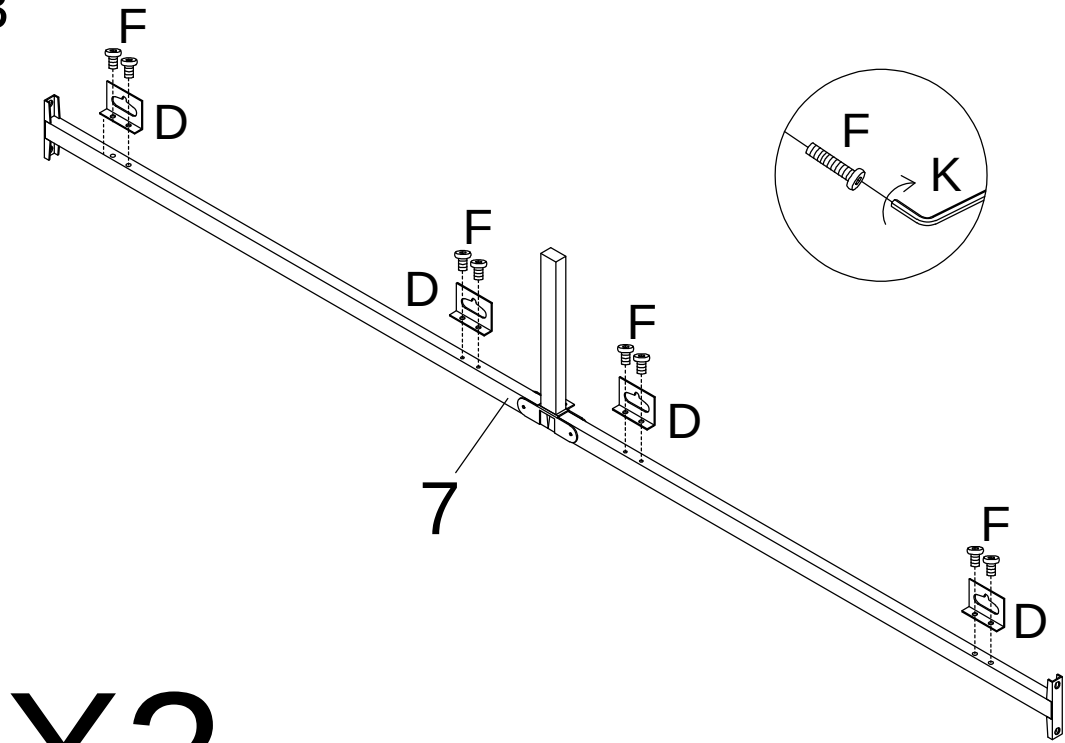

X2

D	F	M6x10
		
x8		x16

Step 4

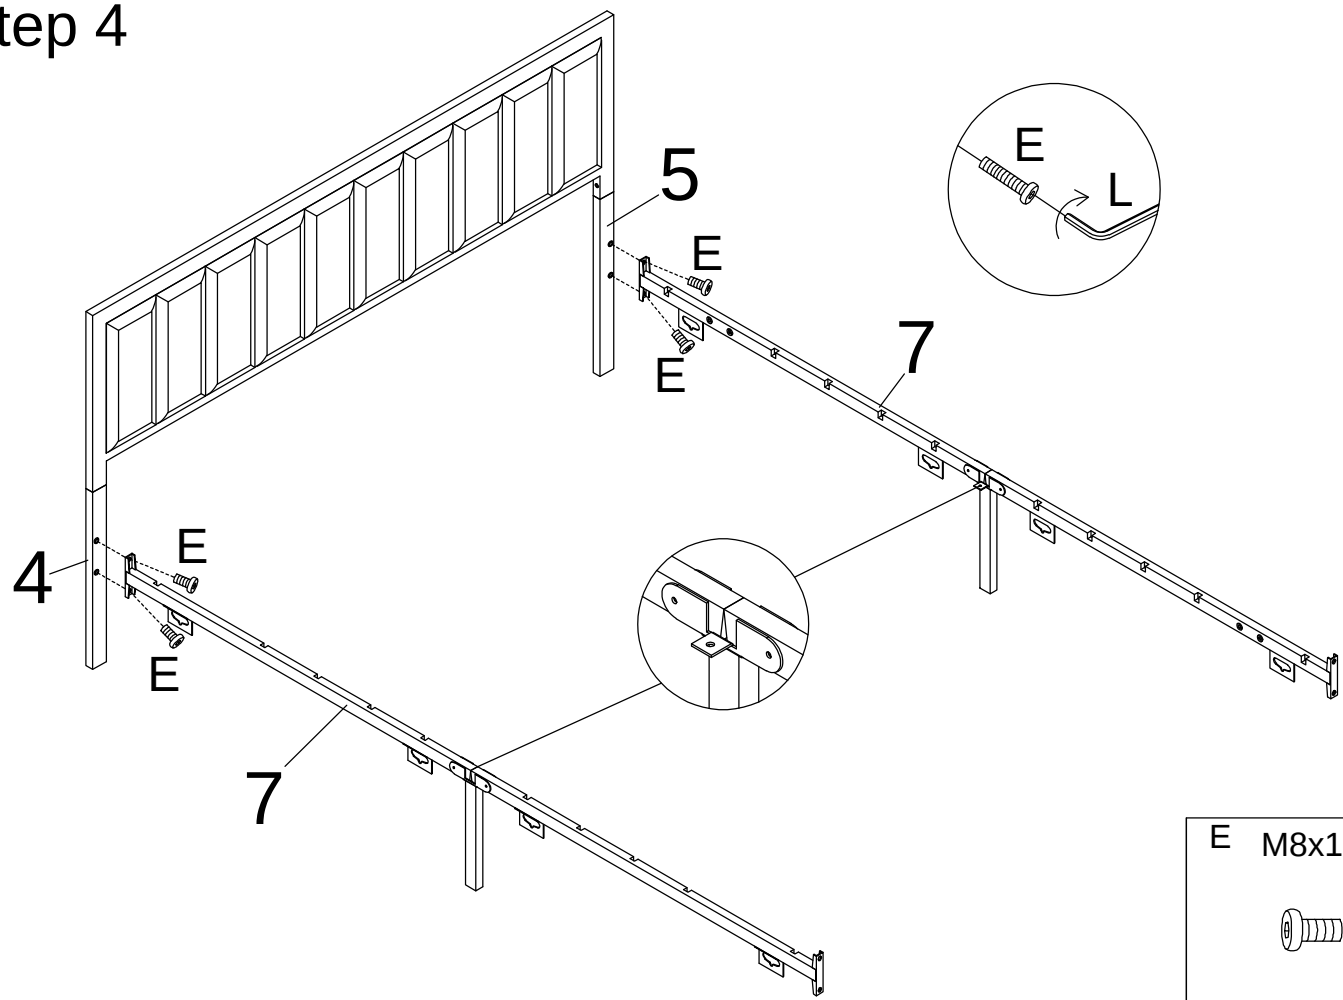


E M8x16



x4

Step 5

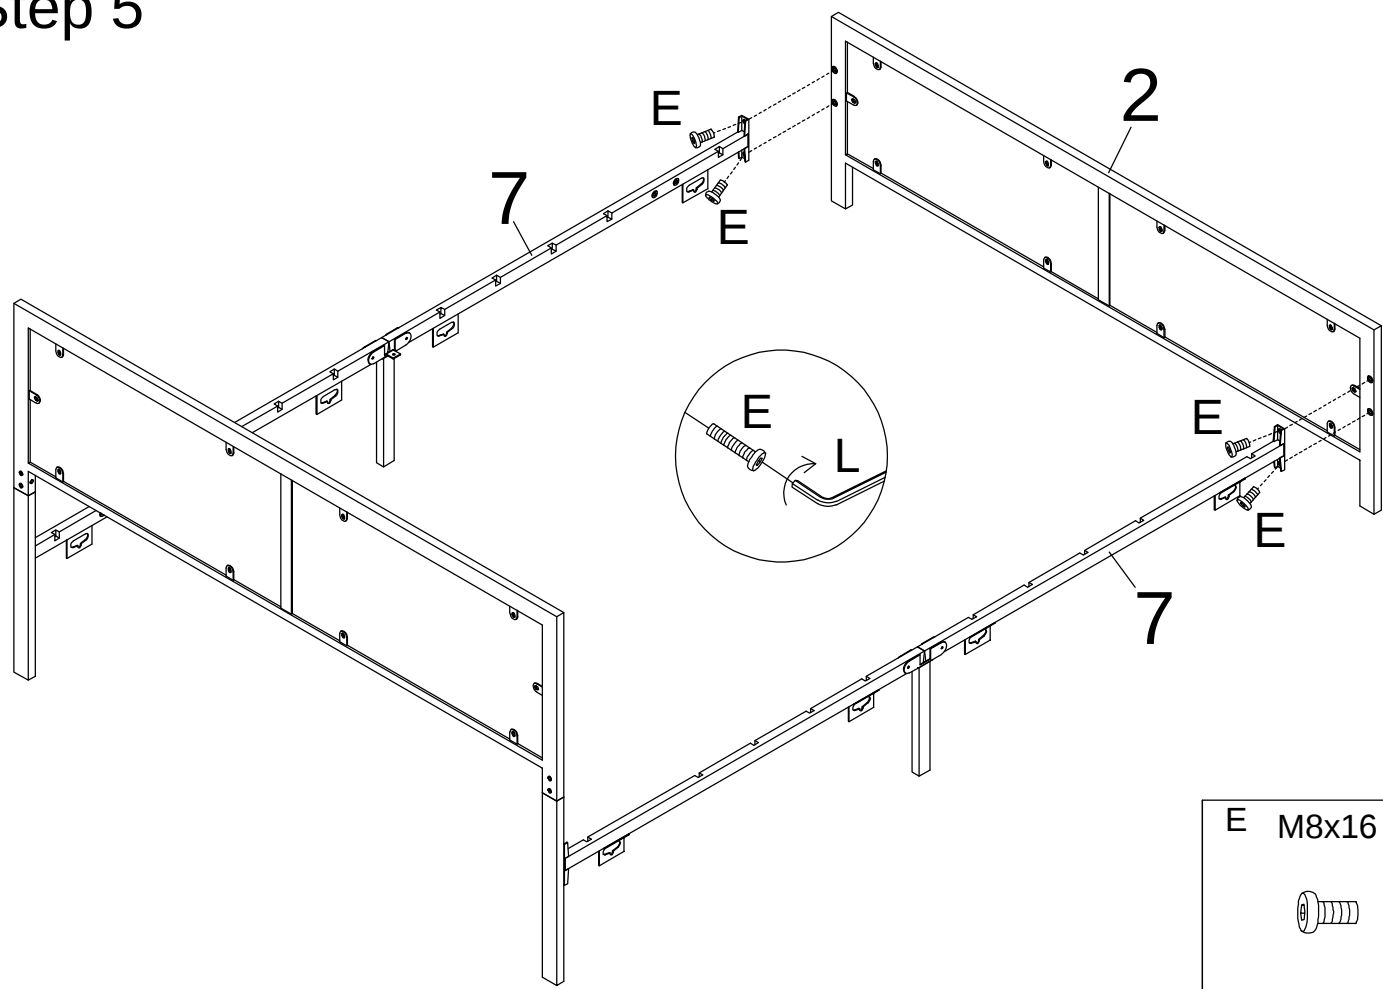


E M8x16




x4


Step 6

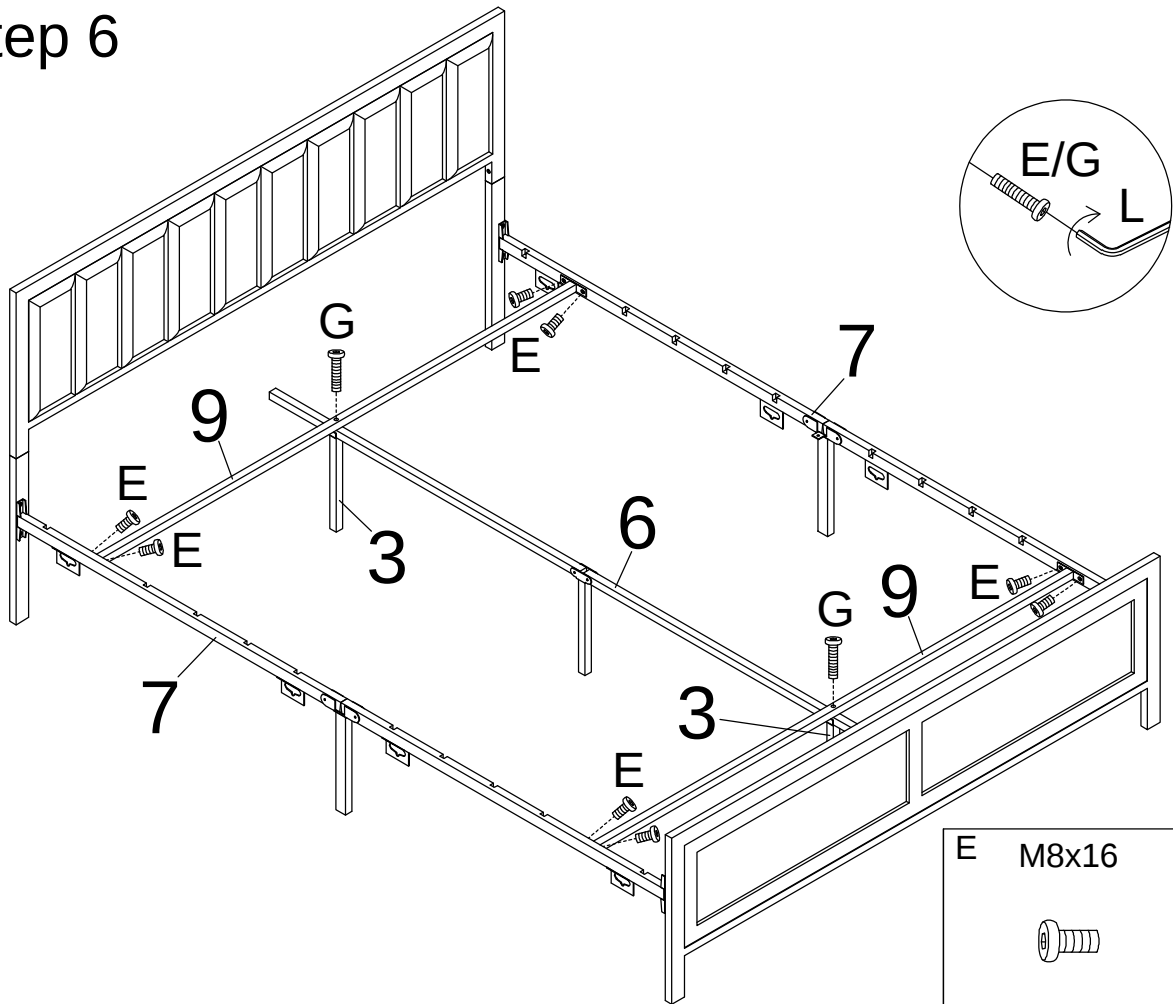


E	M8x16
	
	x8

G	M8x55
	
	x2



Step 7

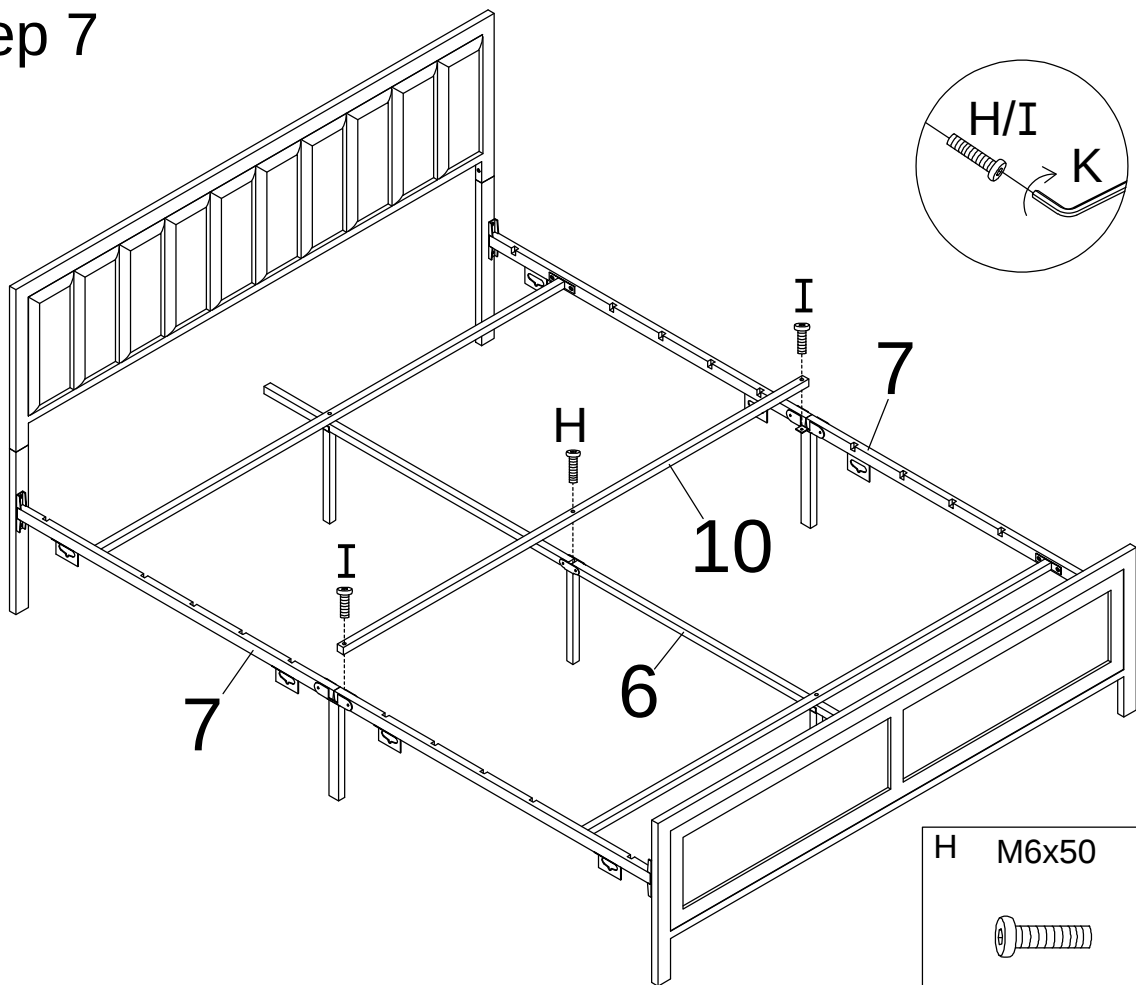


H	M6x50
	
	x1

I	M6x35
	
	x2



Step 8

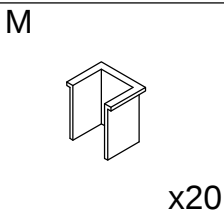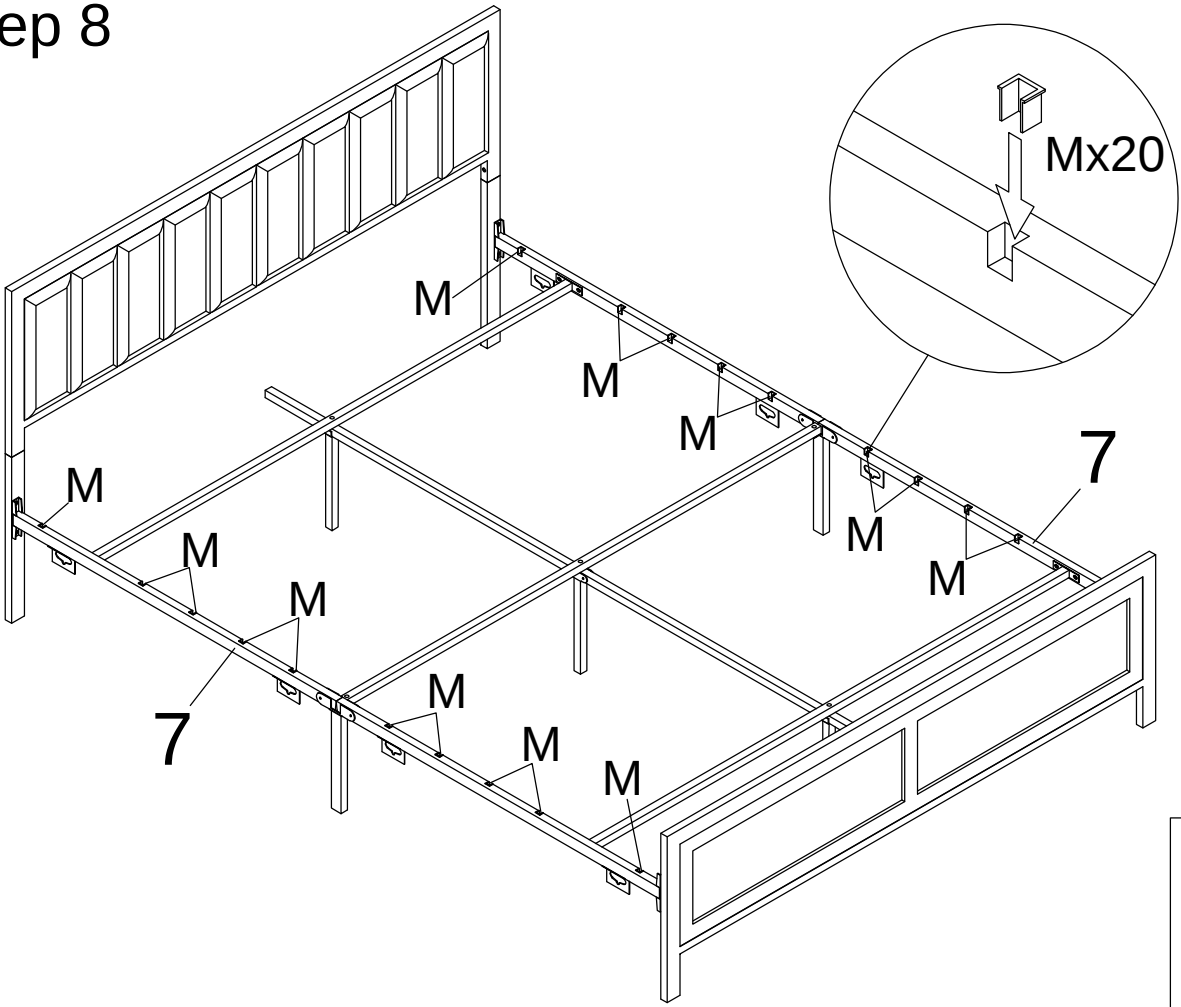

Step 9



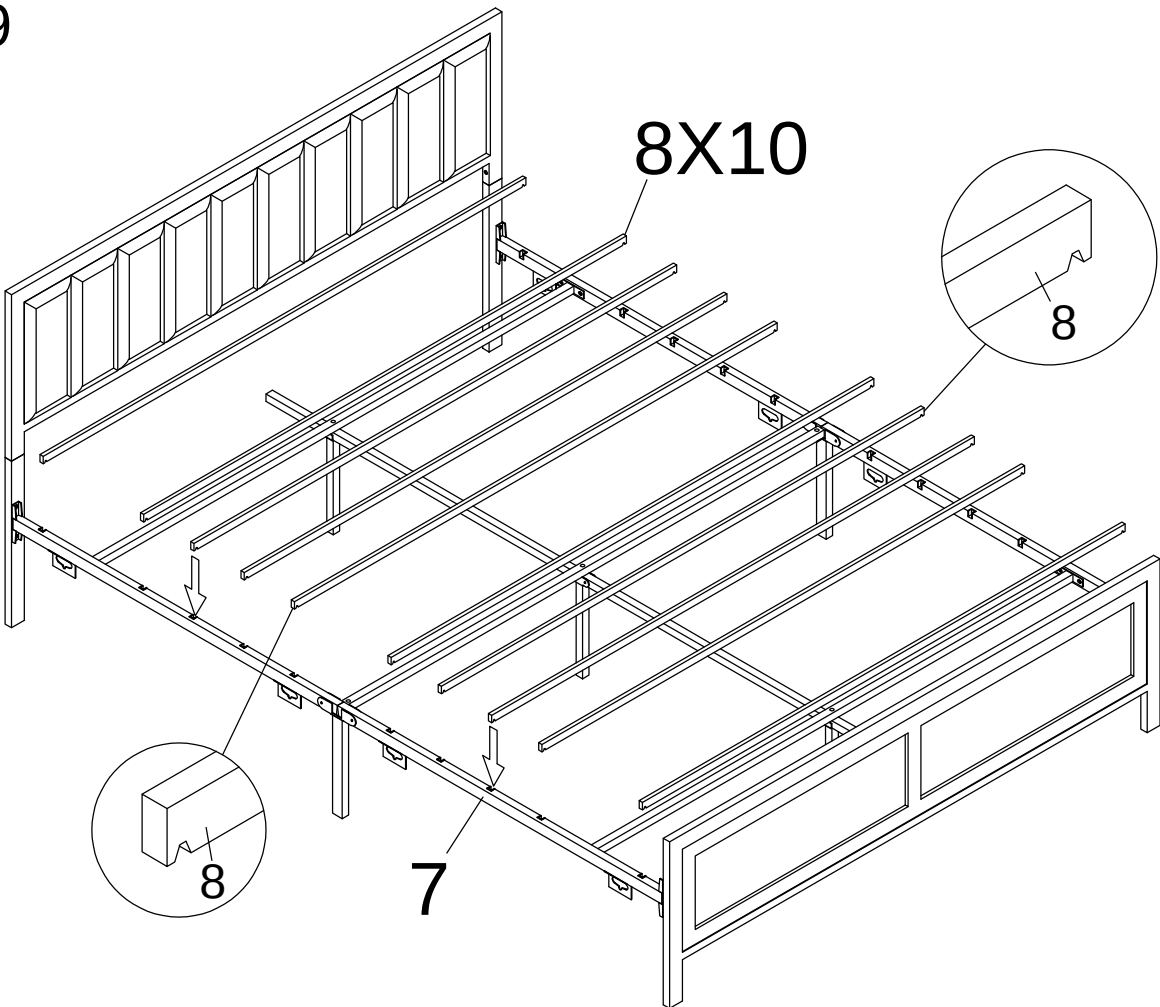


Step 10

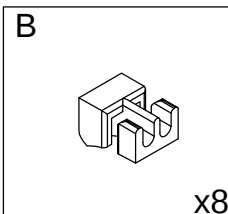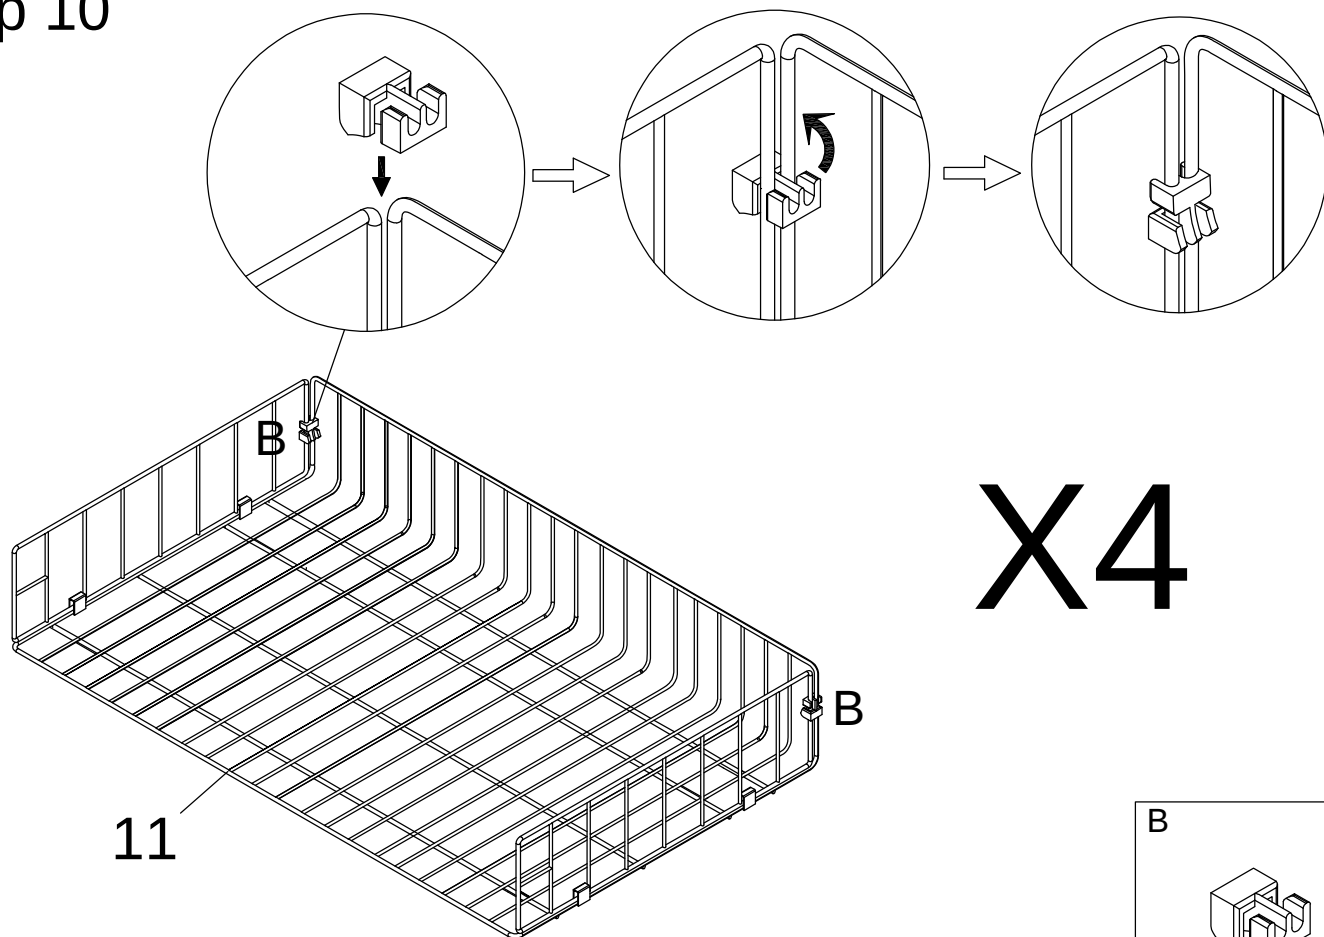


Step 11


Attention: ② make sure plastic slot stuck into one side of the tube firstly, and ③ then to stuck into another side.

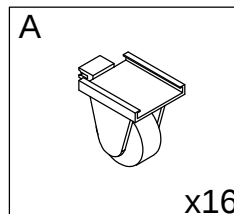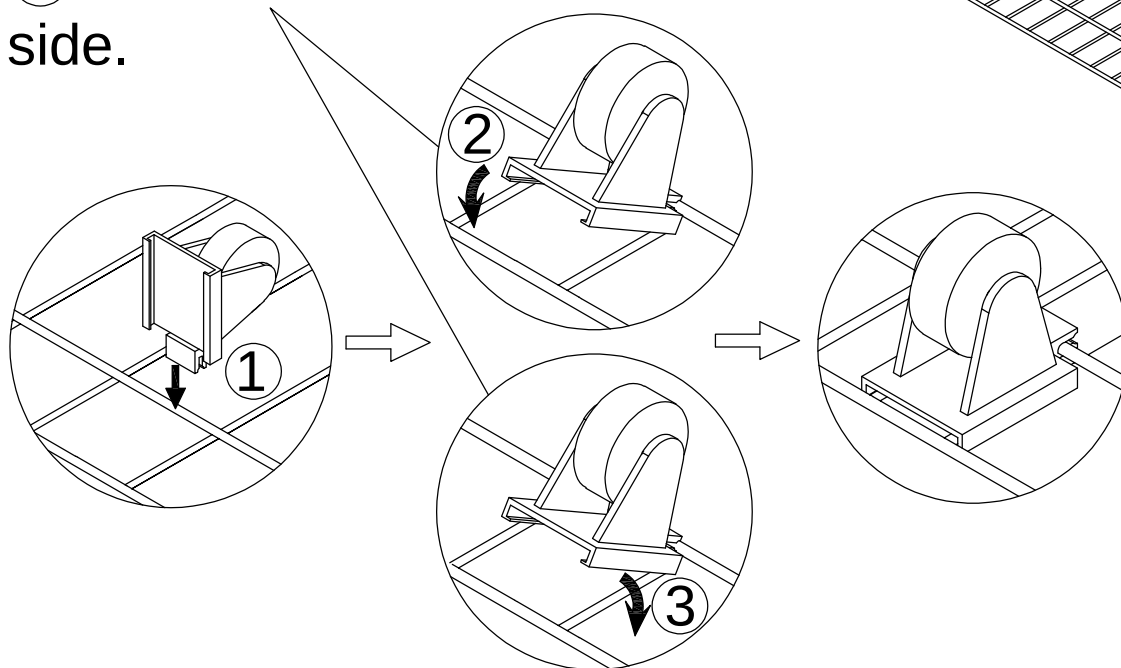
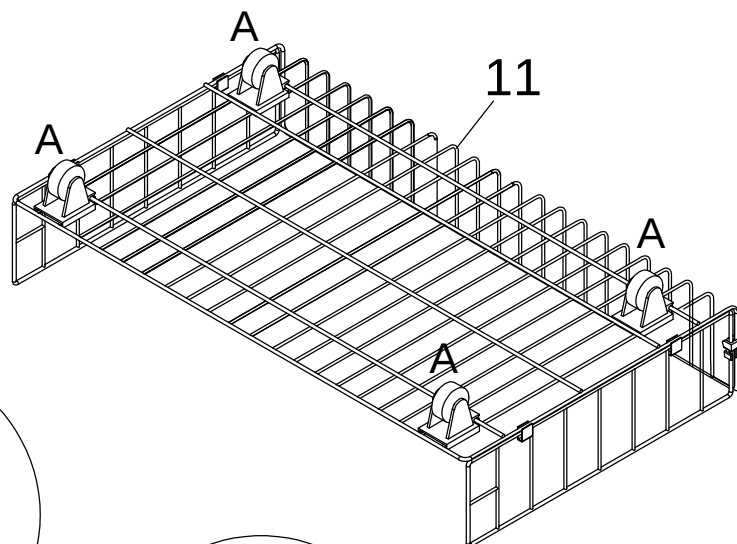


Step 12

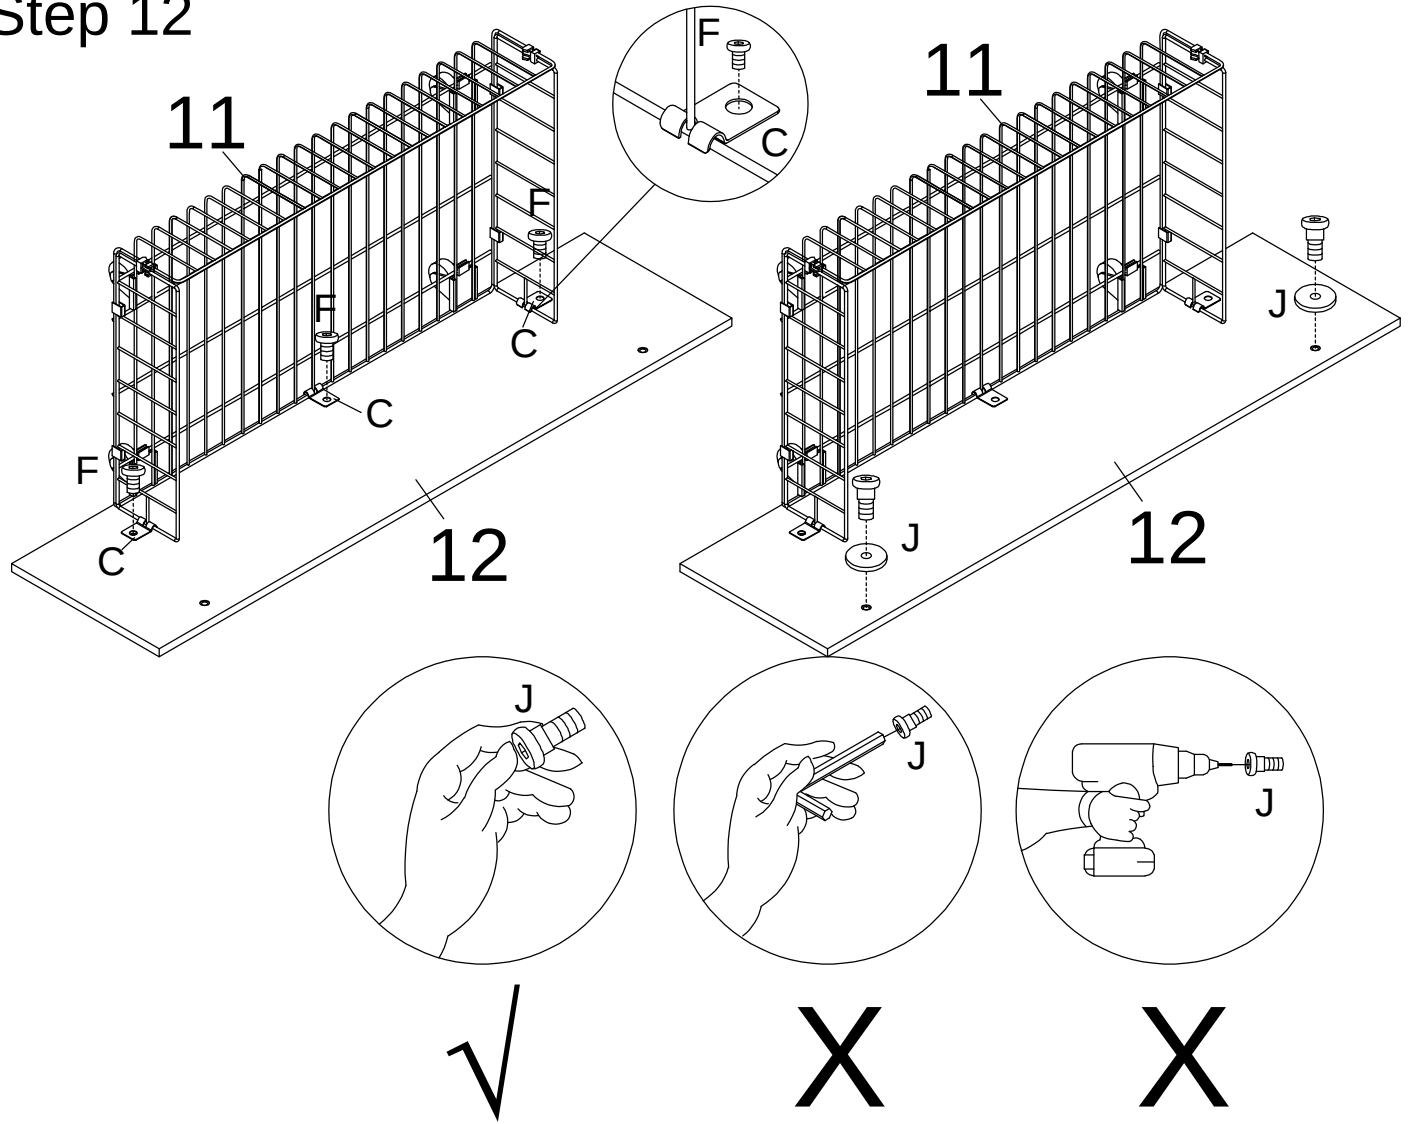


Note: Please don't fully tighten two J screws to the board.

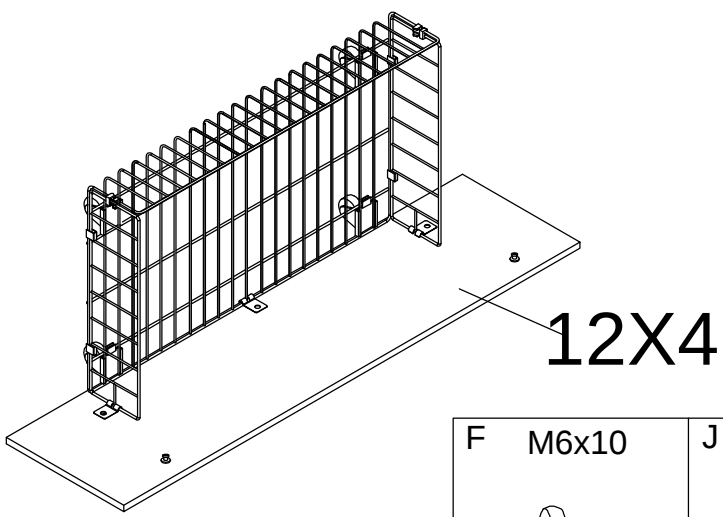

F	M6x10	J	C
			
x12	x8	x12	

Step 13

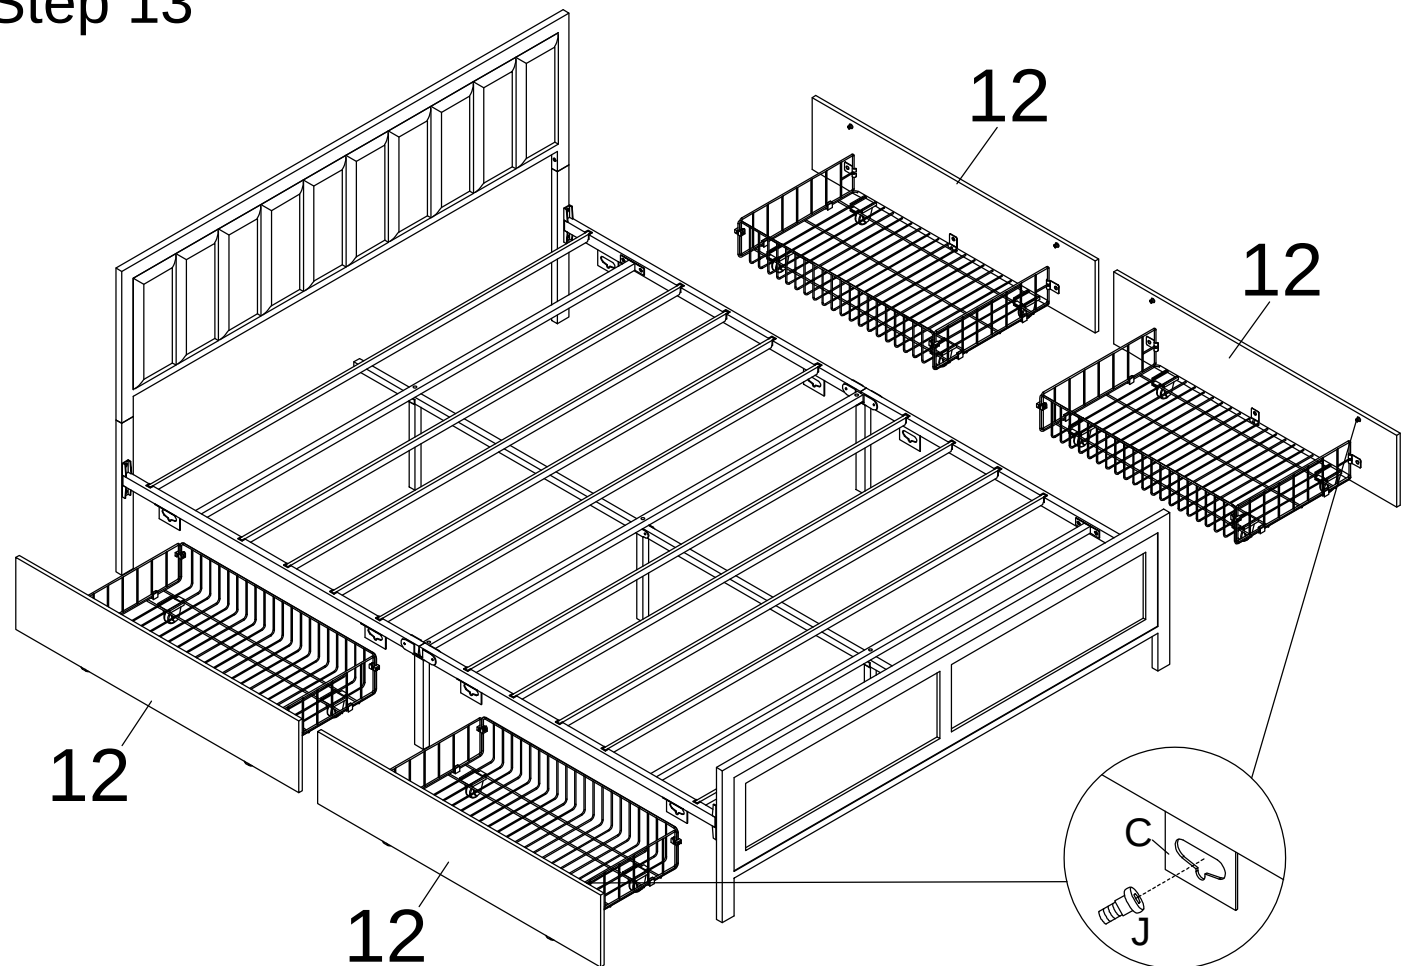

Finish !!!

