


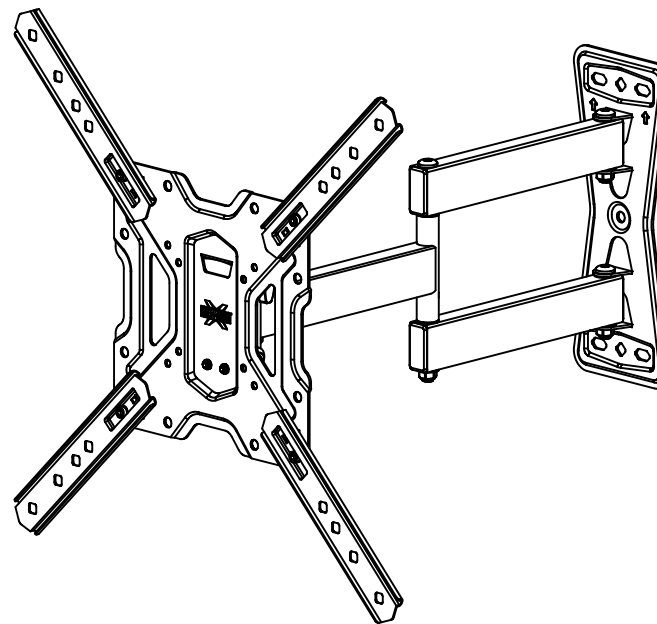

XMM006-1 INSTRUCTION MANUAL







For 26-55" TV

If you have any questions along the way, just give us a call
1-800-460-0956 or mail to customerservice@x-mount.com.

We're ready to help!


⚠ CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS.

Before getting started, let's check below lists to make sure it is just right for you!

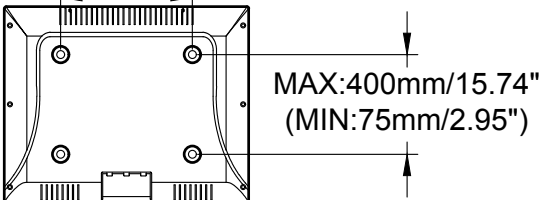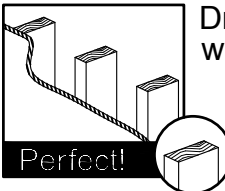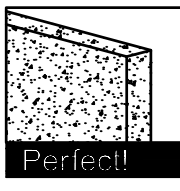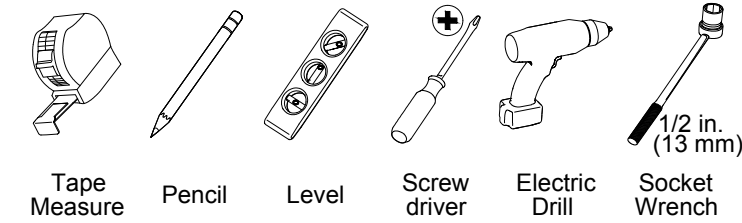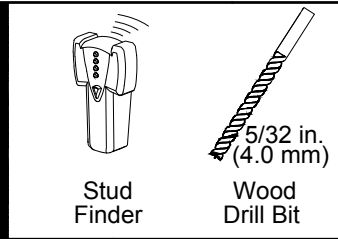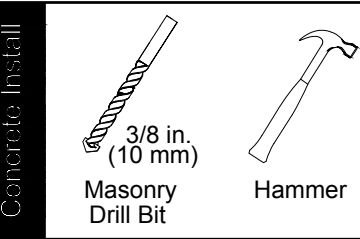
Check your TV VESA is within Min and Max size	1 MAX:400mm/15.74" (MIN:75mm/2.95")  MAX:400mm/15.74" (MIN:75mm/2.95") No? This mount is NOT compatible. Yes? Perfect !
Does your TV (including accessories) weigh MORE than 60 lbs. (27 kg)?	2  No? Perfect – you may continue. Yes? This mount is NOT compatible. ⚠ CAUTION: DO NOT exceed the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories, causing possible injury.
What is your wall made of?	3  Drywall with wood studs? Perfect! CAUTION: DO NOT install into drywall alone  Solid concrete Perfect! ? Unsure? Call Customer Service: 1-800-460-0956
Do you have all the tools needed? (NOT INCLUDE)	4 Wood Stud Install  Tape Measure Pencil Level Screw driver Electric Drill Socket Wrench (1/2 in. / 13 mm) Wood Stud Install  Stud Finder Wood Drill Bit (5/32 in. / 4.0 mm) Concrete Install  Masonry Drill Bit (3/8 in. / 10 mm) Hammer
CAUTION	5 • This product is designed for use in wood stud, solid concrete walls - DO NOT install into drywall alone • The wall must be capable of supporting five times the weight of the TV and mount itself • Do not use this product for any purpose not explicitly specified by manufacturer • Manufacturer is not responsible for damage or injury caused by incorrect assembly or use

Dimensions


TV INTERFACE

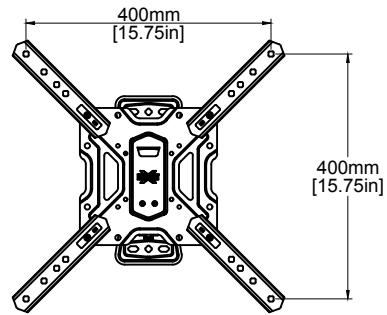


3-D

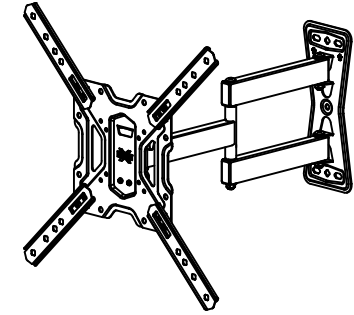


WALL PLATE

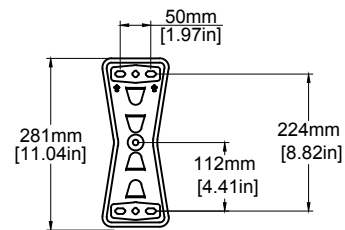


TOP VIEW - EXTENDED

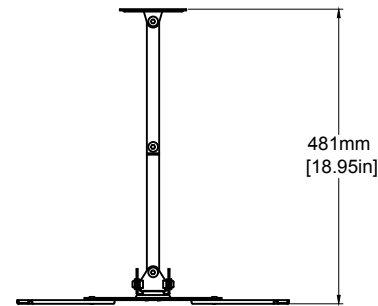


SIDE VIEW - EXTENDED

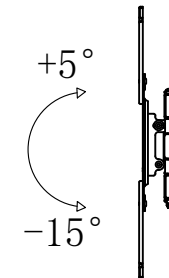

FULLY ASSEMBLED MOUNT

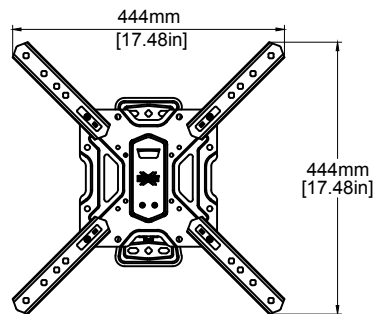

TOP VIEW - RETRACTED



SIDE VIEW - RETRACTED




Parts and Hardware

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service.
Never use damaged parts!

📋 NOTE: Not all hardware included will be used.

Parts and Hardware for STEP 1

Extended arms




05 x4

Allen Key



02 x1


M6x8mm Bolt



03 x4


TV Screws

M4x12mm




a x4

M4x30mm




d x4

M6x12mm




b x4

M6x35mm




e x4

M8x25mm

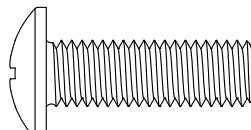

c x4


M8x45mm

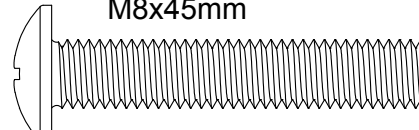

f x4


Spacers

M8x22mm

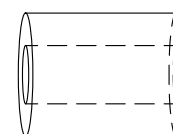

g x4

10mm




h x4

2.5mm



i x8

M6x17mm

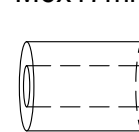

j x4


Washers

M4




k x4

M6




l x4

Parts and Hardware for STEP 2

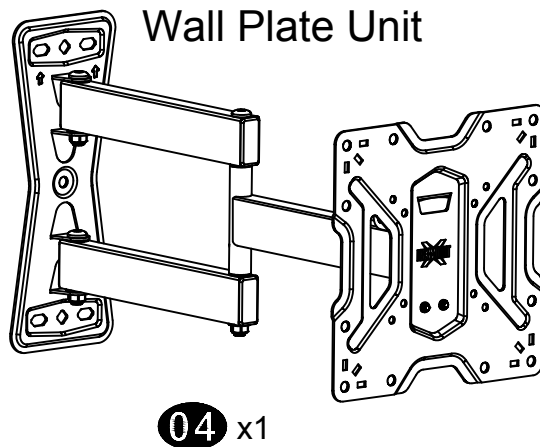

Lag Bolt



01 x4

Concrete wall anchor (NOT INCLUDED)




Concrete Wall Anchor
4pcs

Contact us at telephone 1-800-460-0956 (USA)
or mail to customerservice@x-mount.com. to have
these additional pieces shipped directly to you.

STEP 1 Attach TV Plate to TV


1-1 Disassemble Wall Plate Unit into Two Pieces

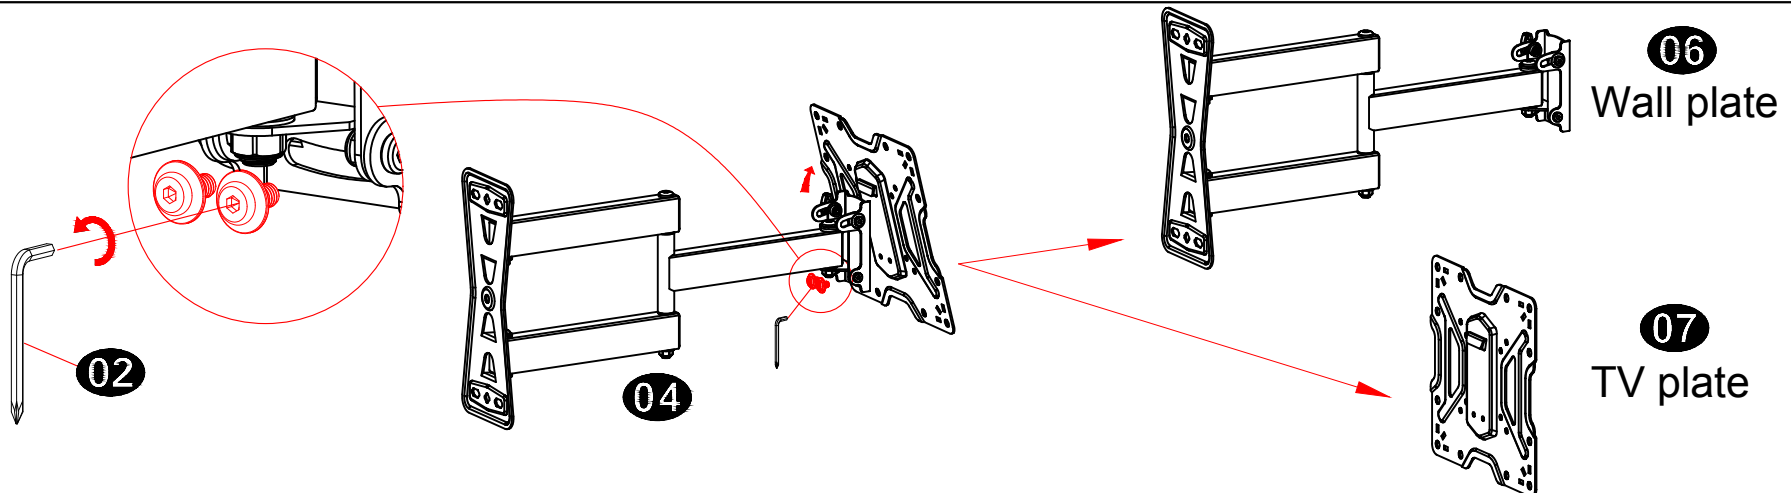

1-2 Choose Configuration


If your TV VESA size is above 200*200mm, you need to assemble extended arms **05** onto TV plate **07** using bolts **03** and Alley key **02** per below option 3 - option 6 shown.

Option 1

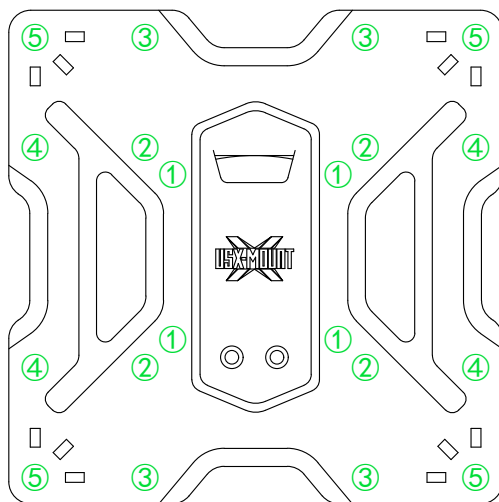


- ① 75X75
- ② 100X100
- ③ 100X200
- ④ 200X100
- ⑤ 200X200

Option 2

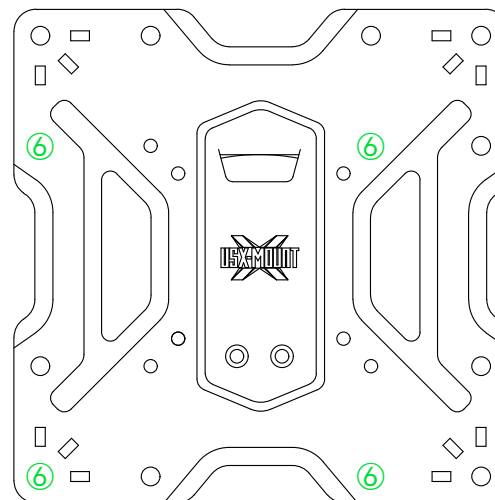


- ⑥ 150X150

Option 3

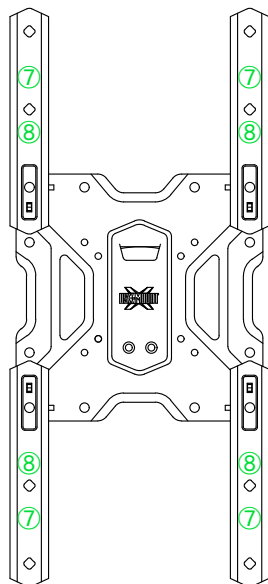


- ⑦ 200X400
- ⑧ 200X300

Option 4

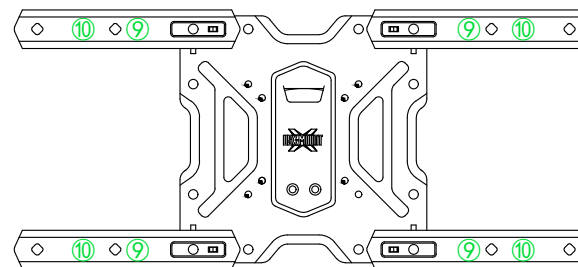


- ⑨ 300X200
- ⑩ 400X200

Option 5

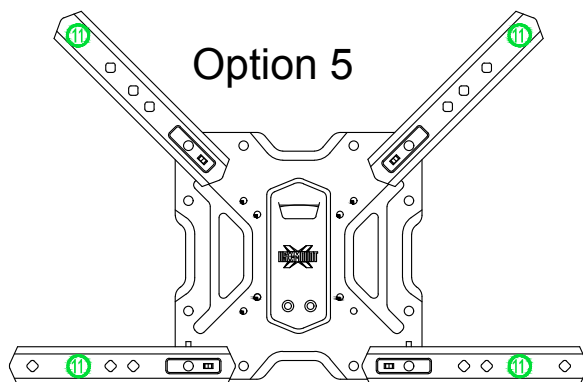

- ⑪ 400X300







Option 6

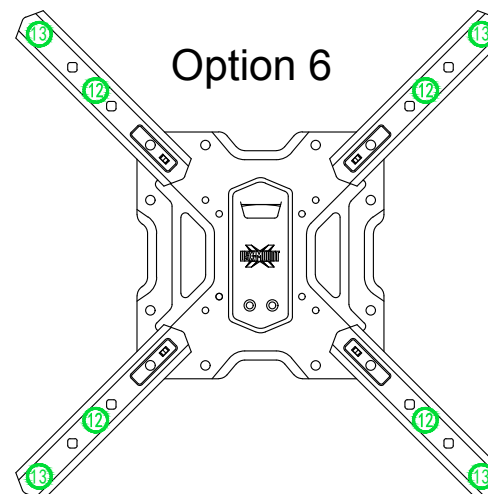

- ⑫ 300X300
- ⑬ 400X400


1-3 Select TV Screws

M4 M6 M8

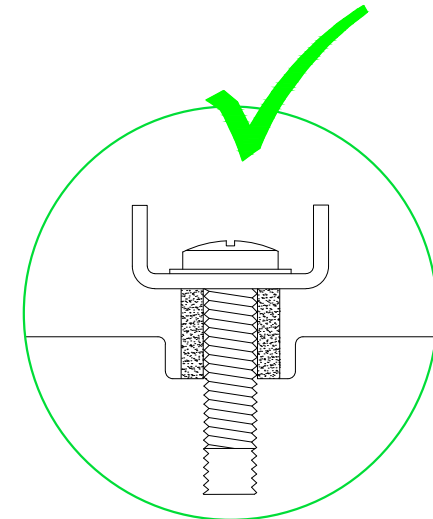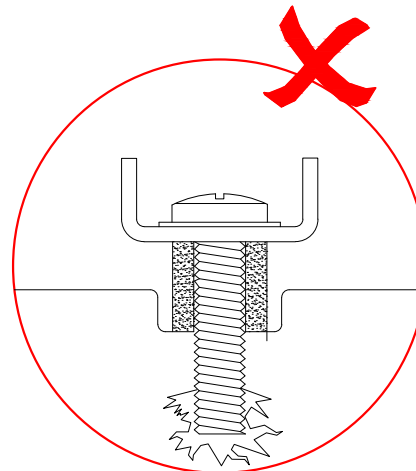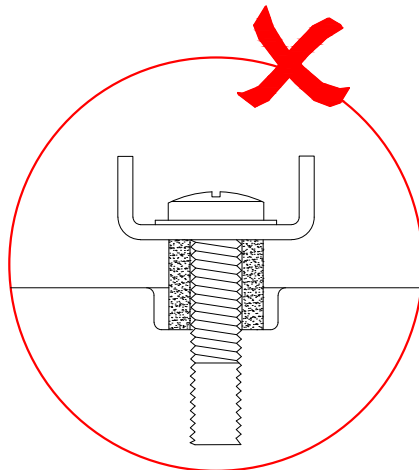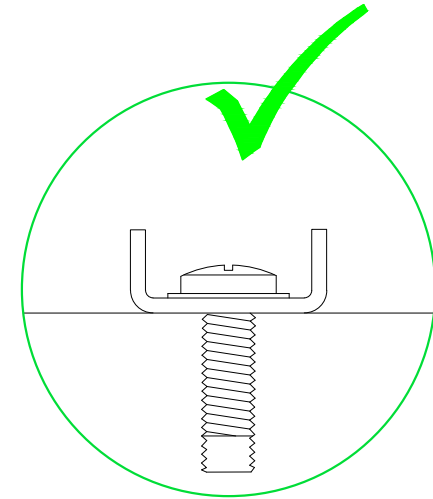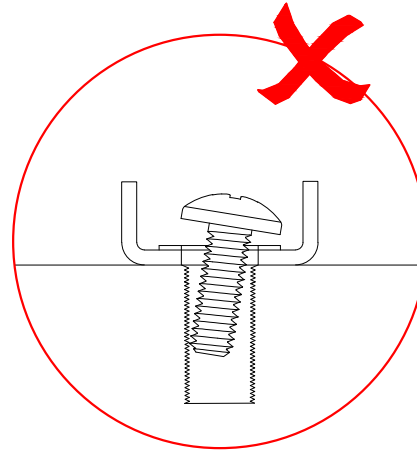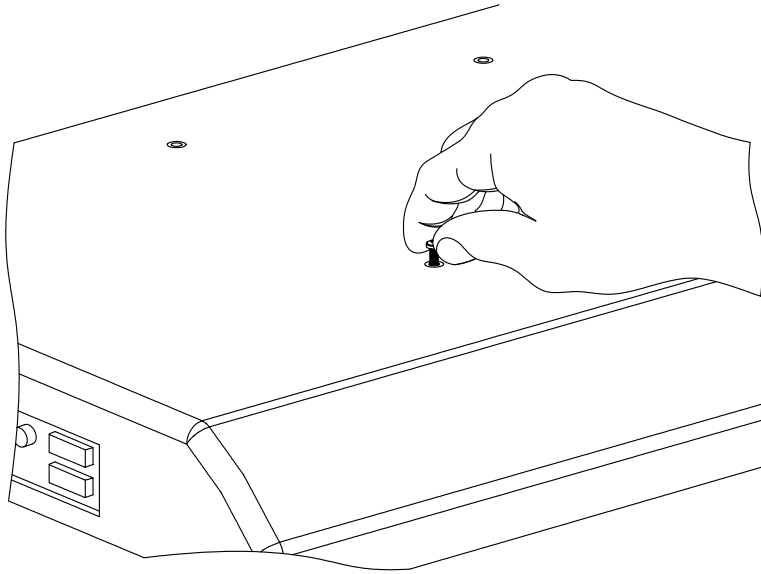


1-4 Need Spacer?

I No, choose suitable screws and washers.

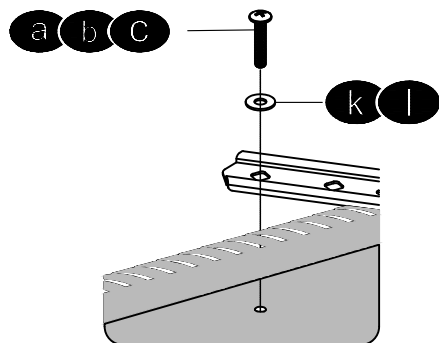


II Yes, choose suitable screws, washers and spacers.


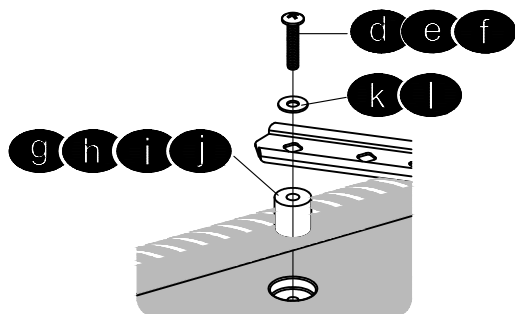


Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers(i), you have to remove the inner circle.

1-5 Attach the TV Plate

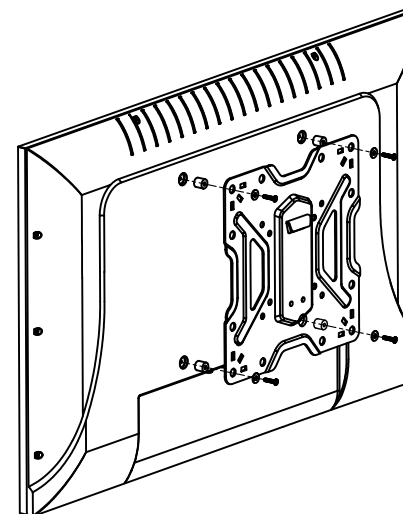

VESA≤200X200mm

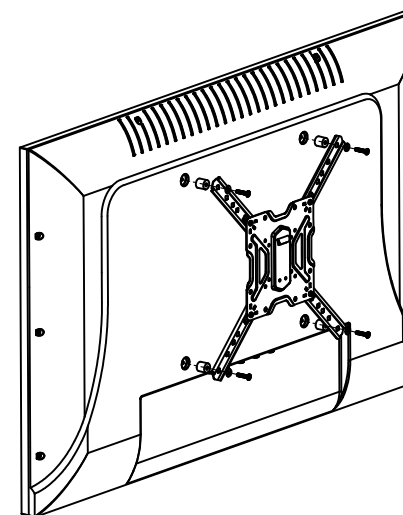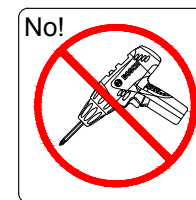



200X200mm<VESA≤400X400mm

STEP 2A Attach Wall Plate to Wall Wood Stud Option

⚠ **CAUTION:** Avoid potential personal injury or property damage!

- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum **wood stud** size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Stud center must be verified

1. Locate your studs. Verify and mark the center of the stud by finding the stud edges using a thin nail, or an edge to edge stud finder.
2. Position the wall plate **06** at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

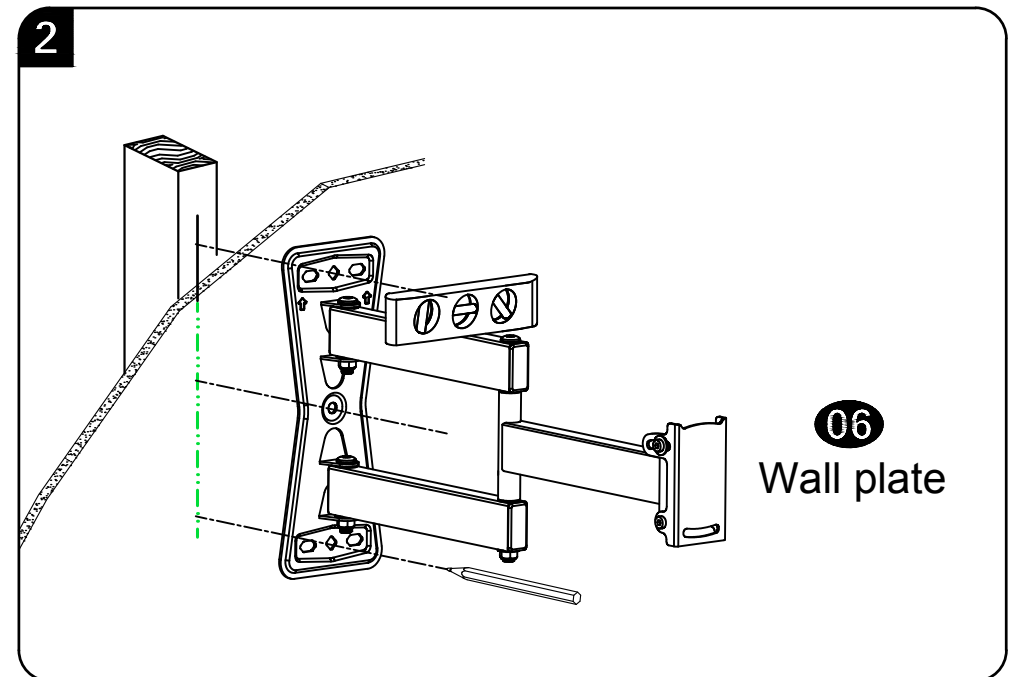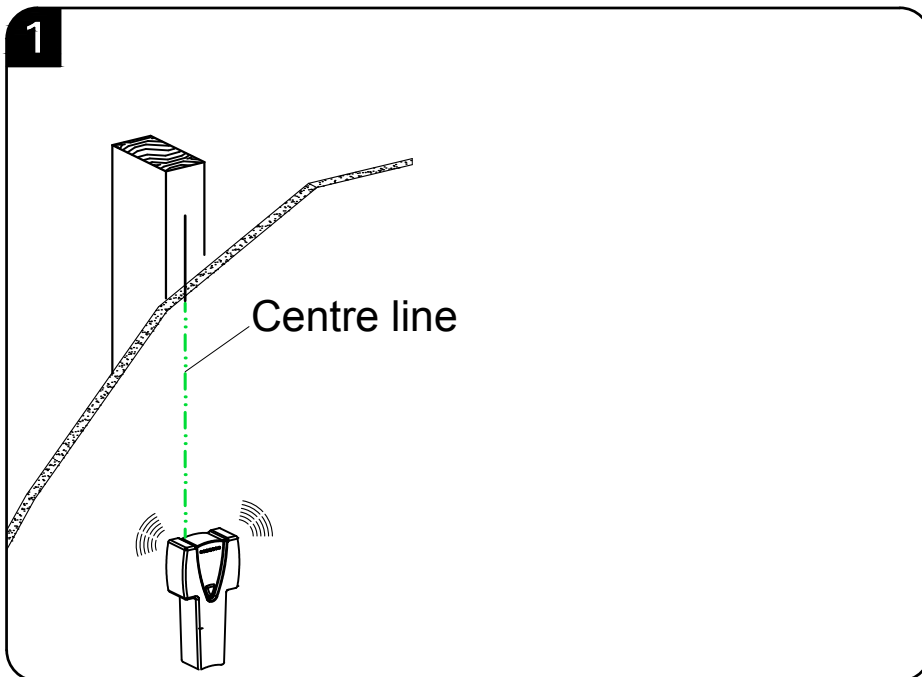



3. Drill pilot holes using a 5/32 in. (4.0 mm) diameter drill bit.

! IMPORTANT: Pilot holes must be drilled to a depth of 2.36 in. (60 mm). Be sure to drill into the center of the studs.

4. Install wall plate **06** using three lag bolts **01**. Tighten the lag bolts only until they are pulled firmly against the wall plate.

! CAUTION: Improper use could reduce the holding power of the lag bolt.
DO NOT over-tighten the lag bolts.

Go to STEP 3 on PAGE 14

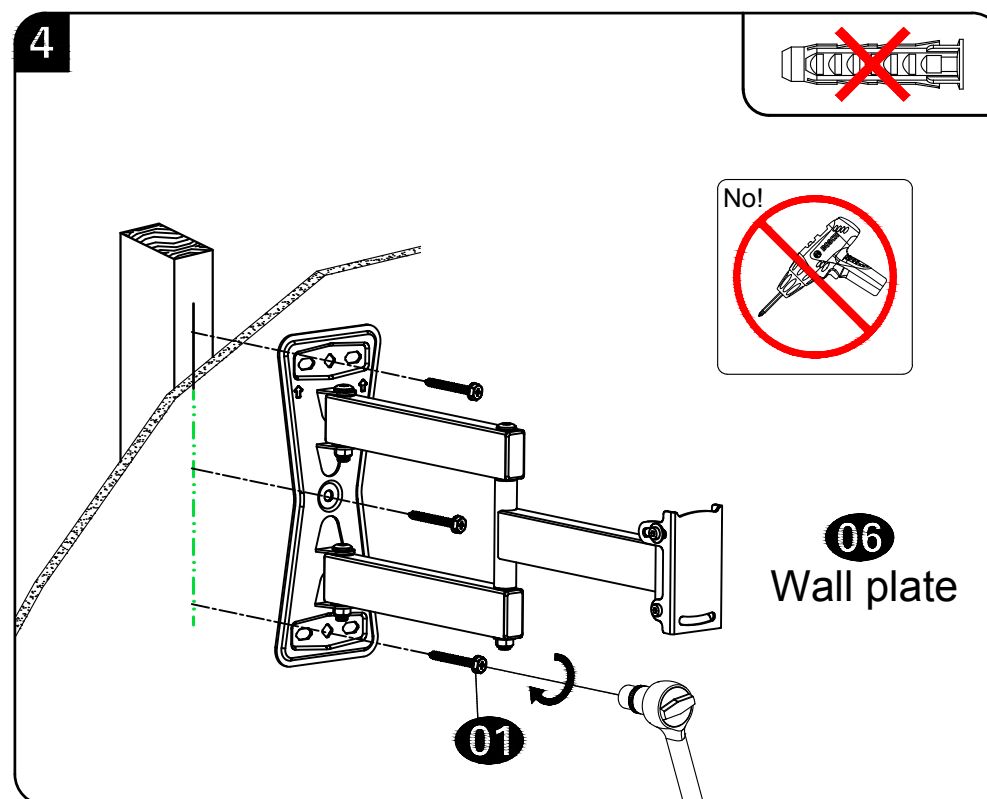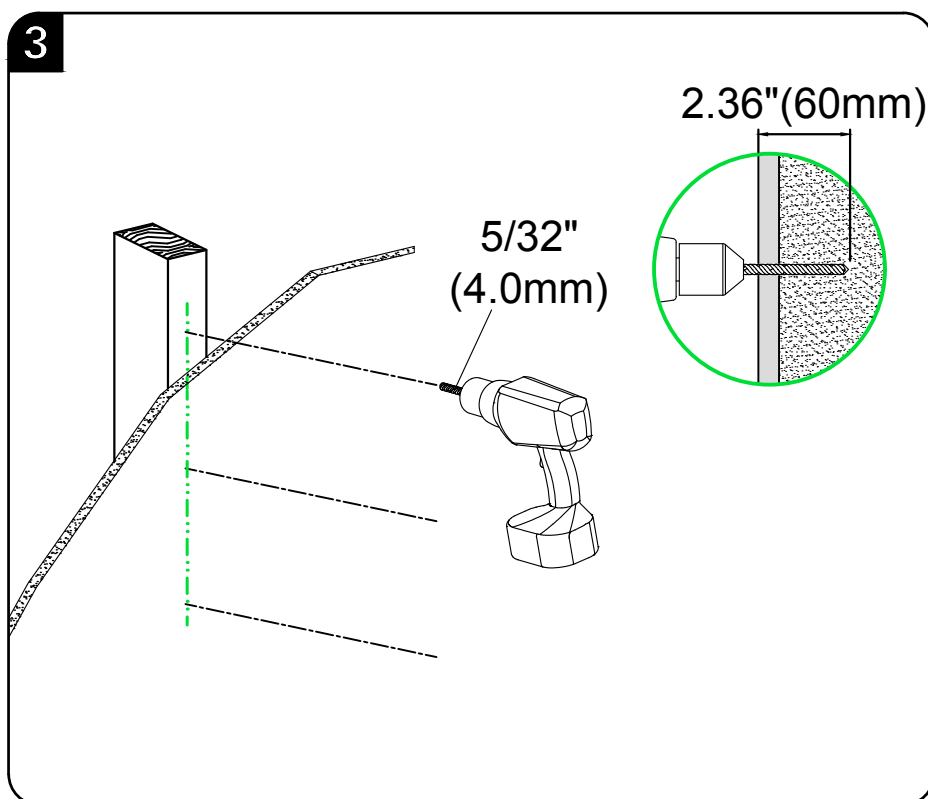



STEP 2B Attach Wall Plate to Solid Concrete Wall

⚠ **CAUTION:** Avoid potential personal injury or property damage!

- Mount the wall plate assembly 06 directly onto the concrete surface
- Minimum **solid concrete** thickness: 8 in. (203 mm)

1. Position the wall plate 06 on the wall at your desired height. Level the wall plate and mark the hole locations.
2. Drill four pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.

❗ **IMPORTANT:** Pilot holes must be drilled to a depth of 2.36 in. (60 mm).

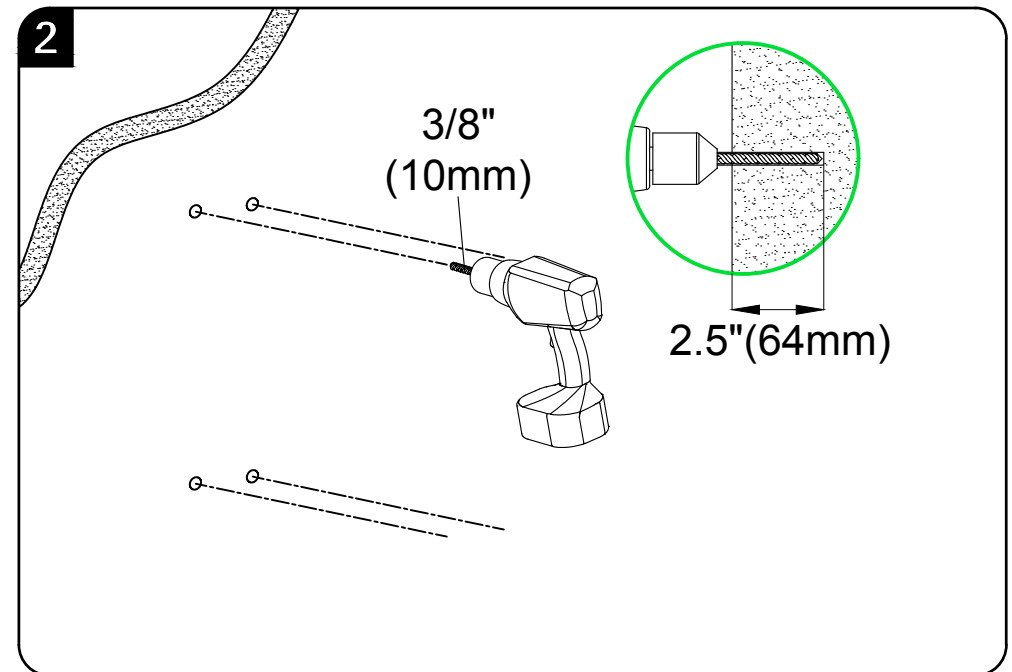
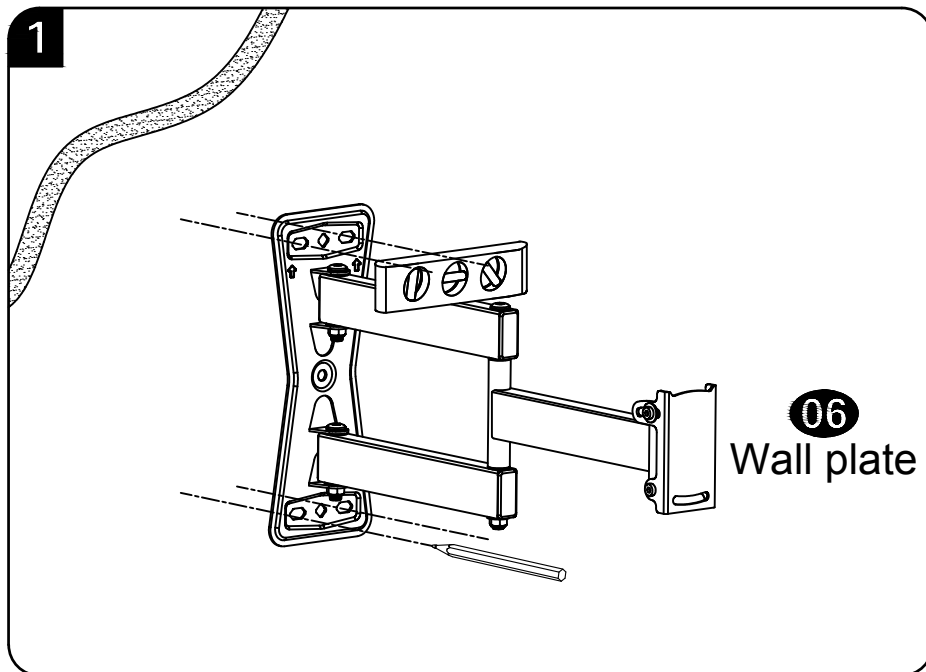


3. Insert four anchors.

⚠ CAUTION: Be sure the anchors are seated flush with the concrete surface.


4. Insert wall plate **06** using four lag bolts **01**. Tighten the lag bolts only until they are pulled firmly against the wall plate.

⚠ CAUTION: Improper use could reduce the holding power of the lag bolt.
DO NOT over-tighten the lag bolts.

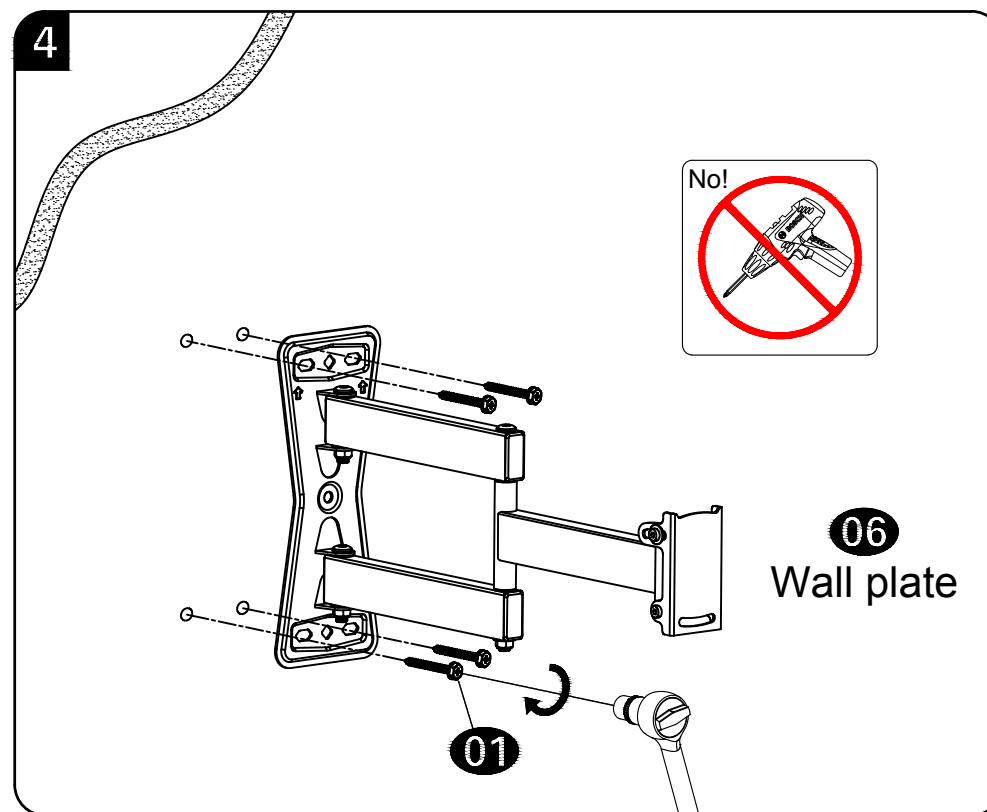
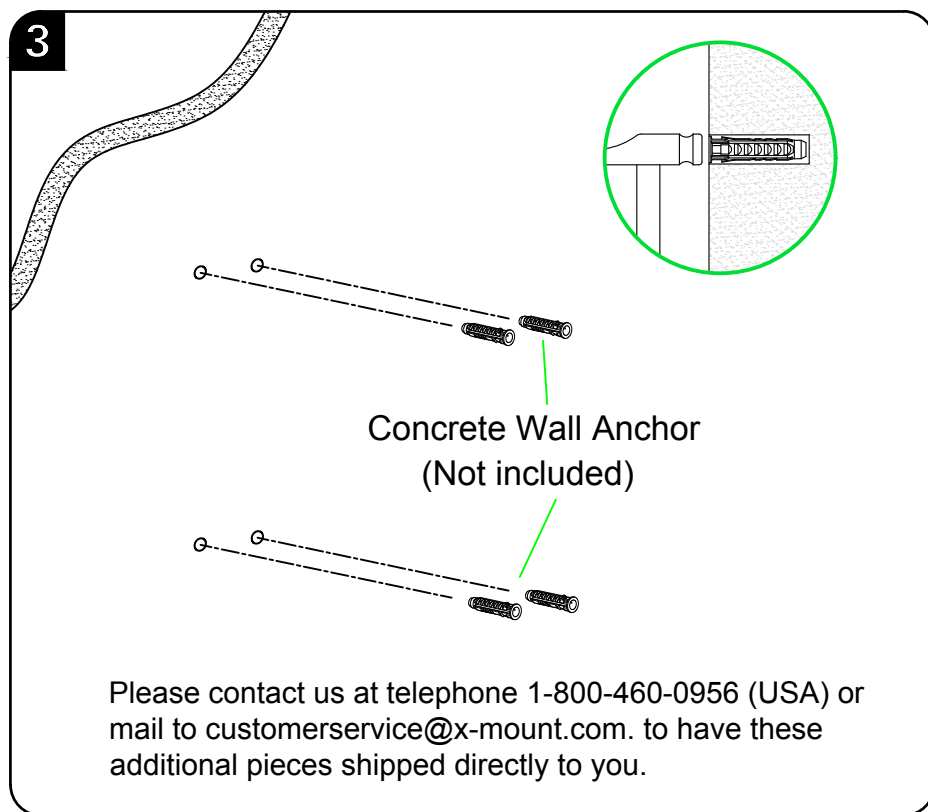


STEP 3 Wall Plate Installation Integrity Test

Before hanging TV, please try to pull the mount to make sure that it has been assembled on the wall tightly.

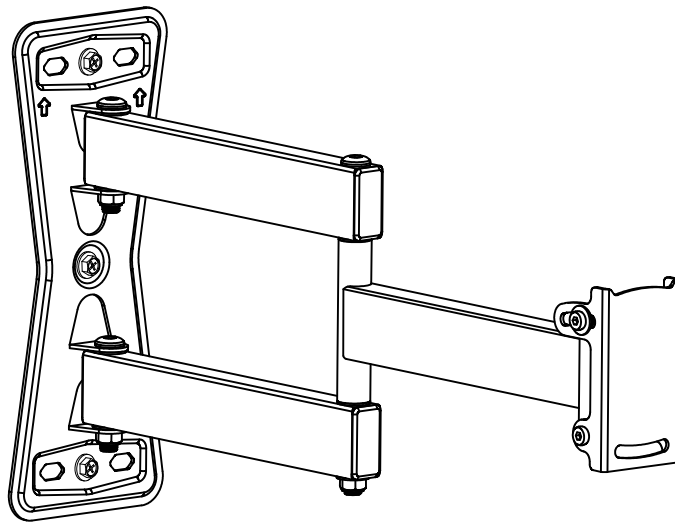


06
Wall plate

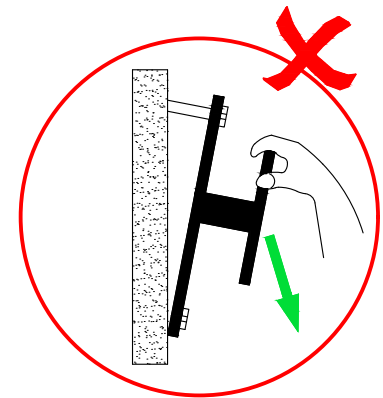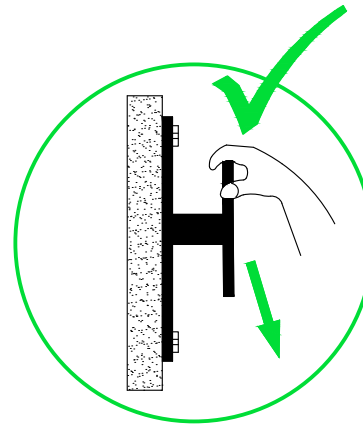

60 LBS (27 KG)



STEP 4 Hang and Secure TV to Wall Plate

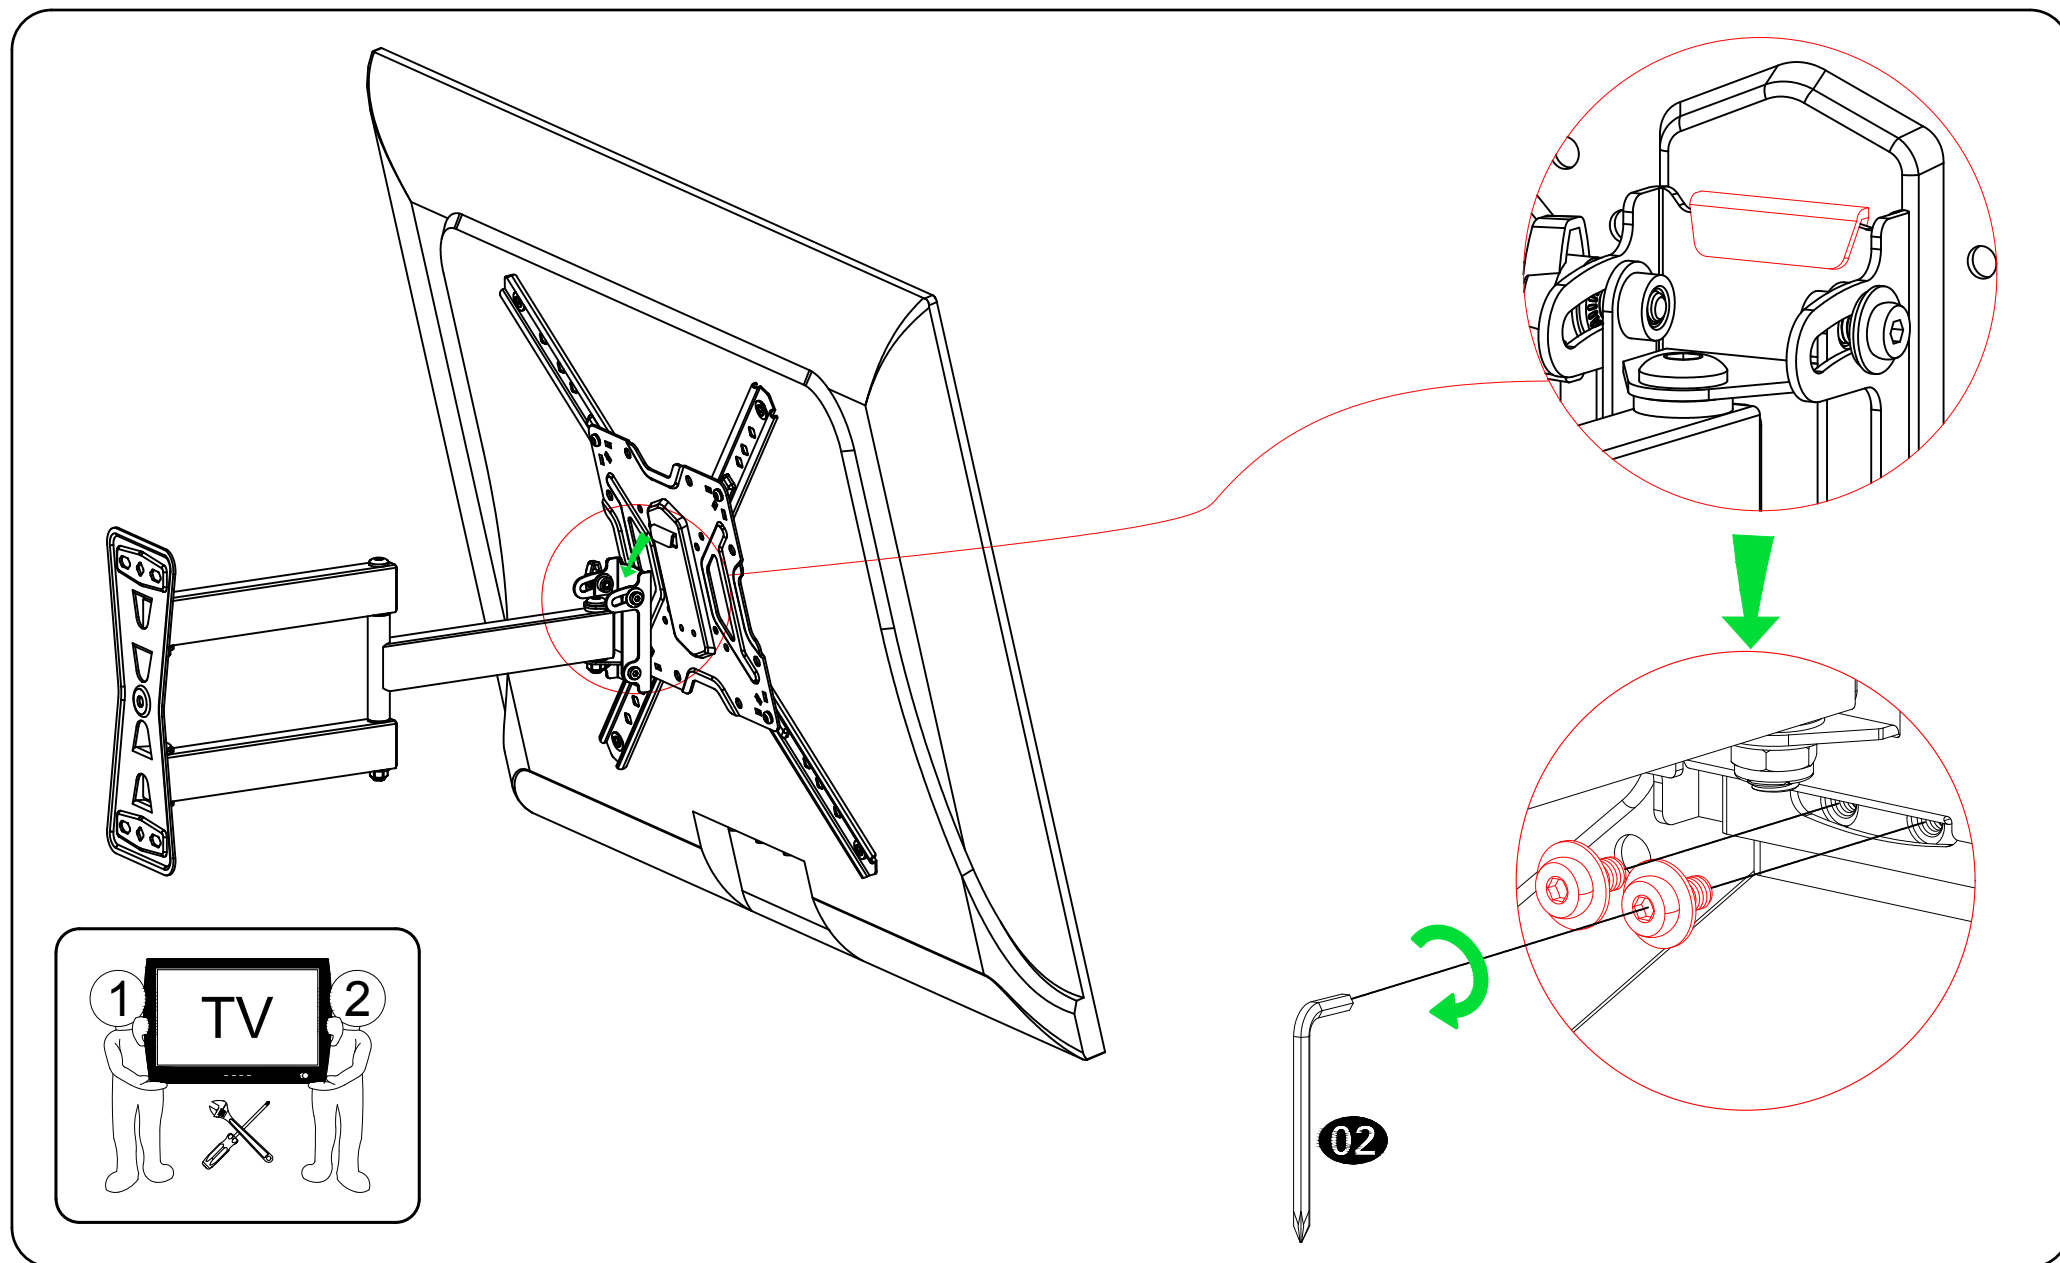

STEP 5 Adjustments

5-1 TV leveling adjustment ($\pm 4^\circ$):

Loosen 2 leveling bolts on the rear of TV plate by maximum 2 turns, adjust to level, and retighten to secure.

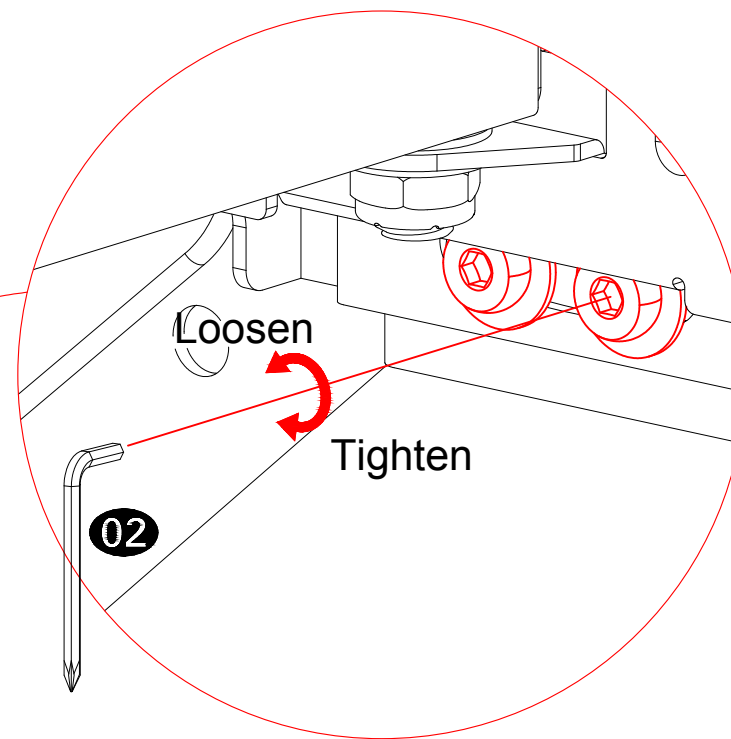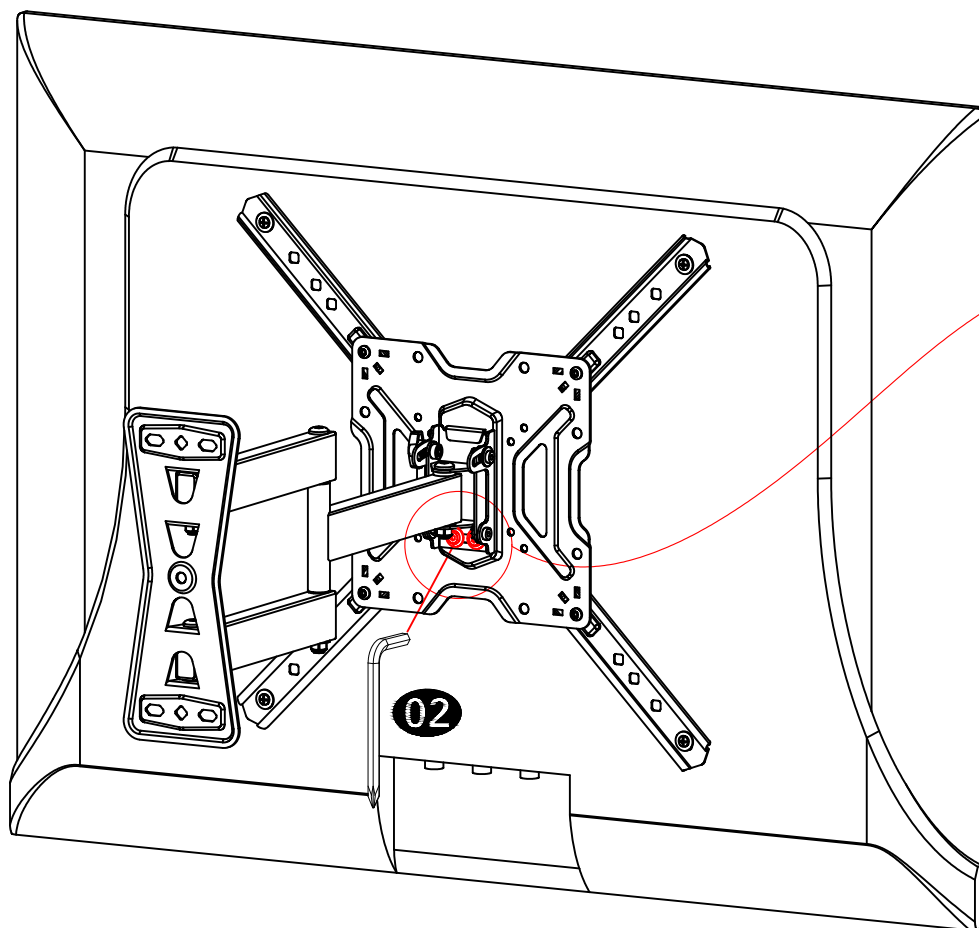

5-2 Tilting angle adjustment (+5°/-15°):

Pull TV to your desired angle then fasten 2 tilting bolts with Allen key **02**.

