


ASSEMBLY INSTRUCTIONS

TWIN/FULL BUNK BED WITH 2 DRAWERS

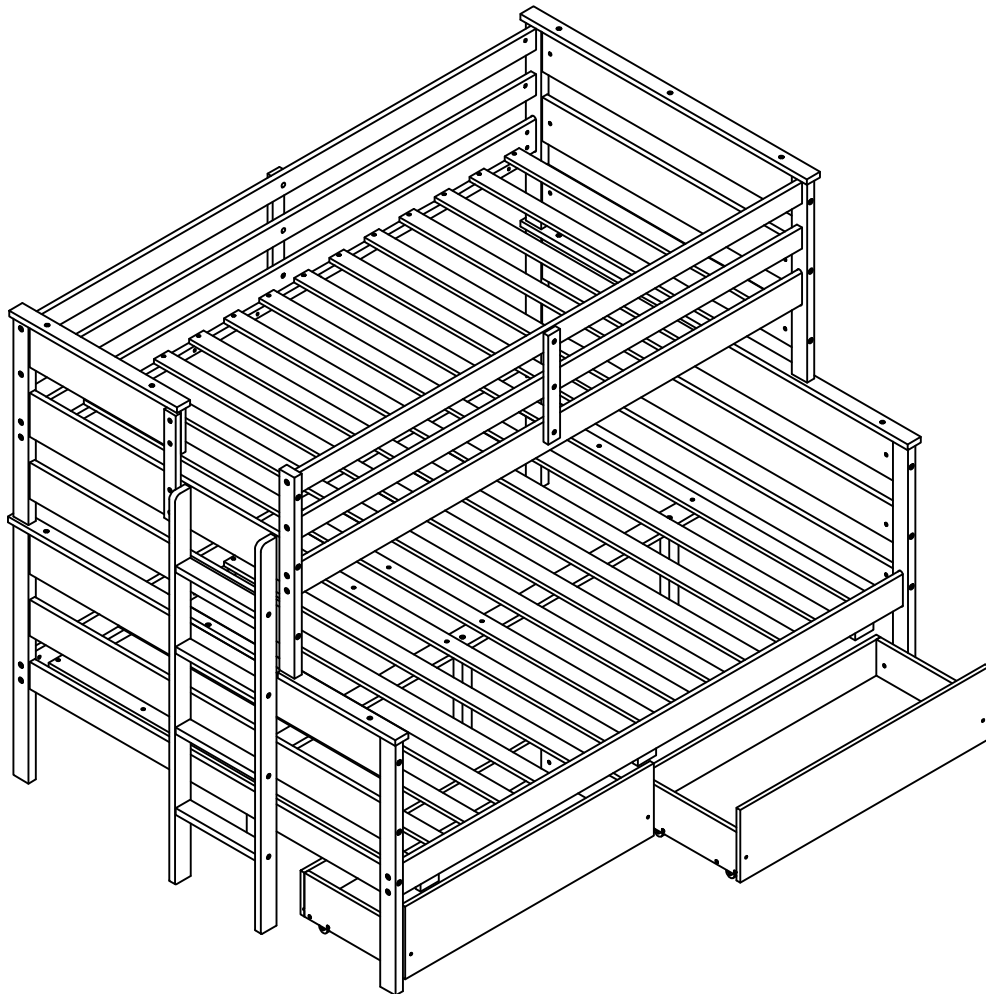

WF312645/WF312646

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


THIS BED IS DESIGNED TO USE A TWIN MATTRESSES 38 1/2" WIDE X 74"-75" LONG WITH THE TOTAL THICKNESS NOT EXCEEDING 6" FOR UPPER BUNK, FOR THE LOWER FULL-SIZE SHOULD BE 54" WIDE X 74"-75" LONG, WIDE WITH 8" THICKNESS.

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:


















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View

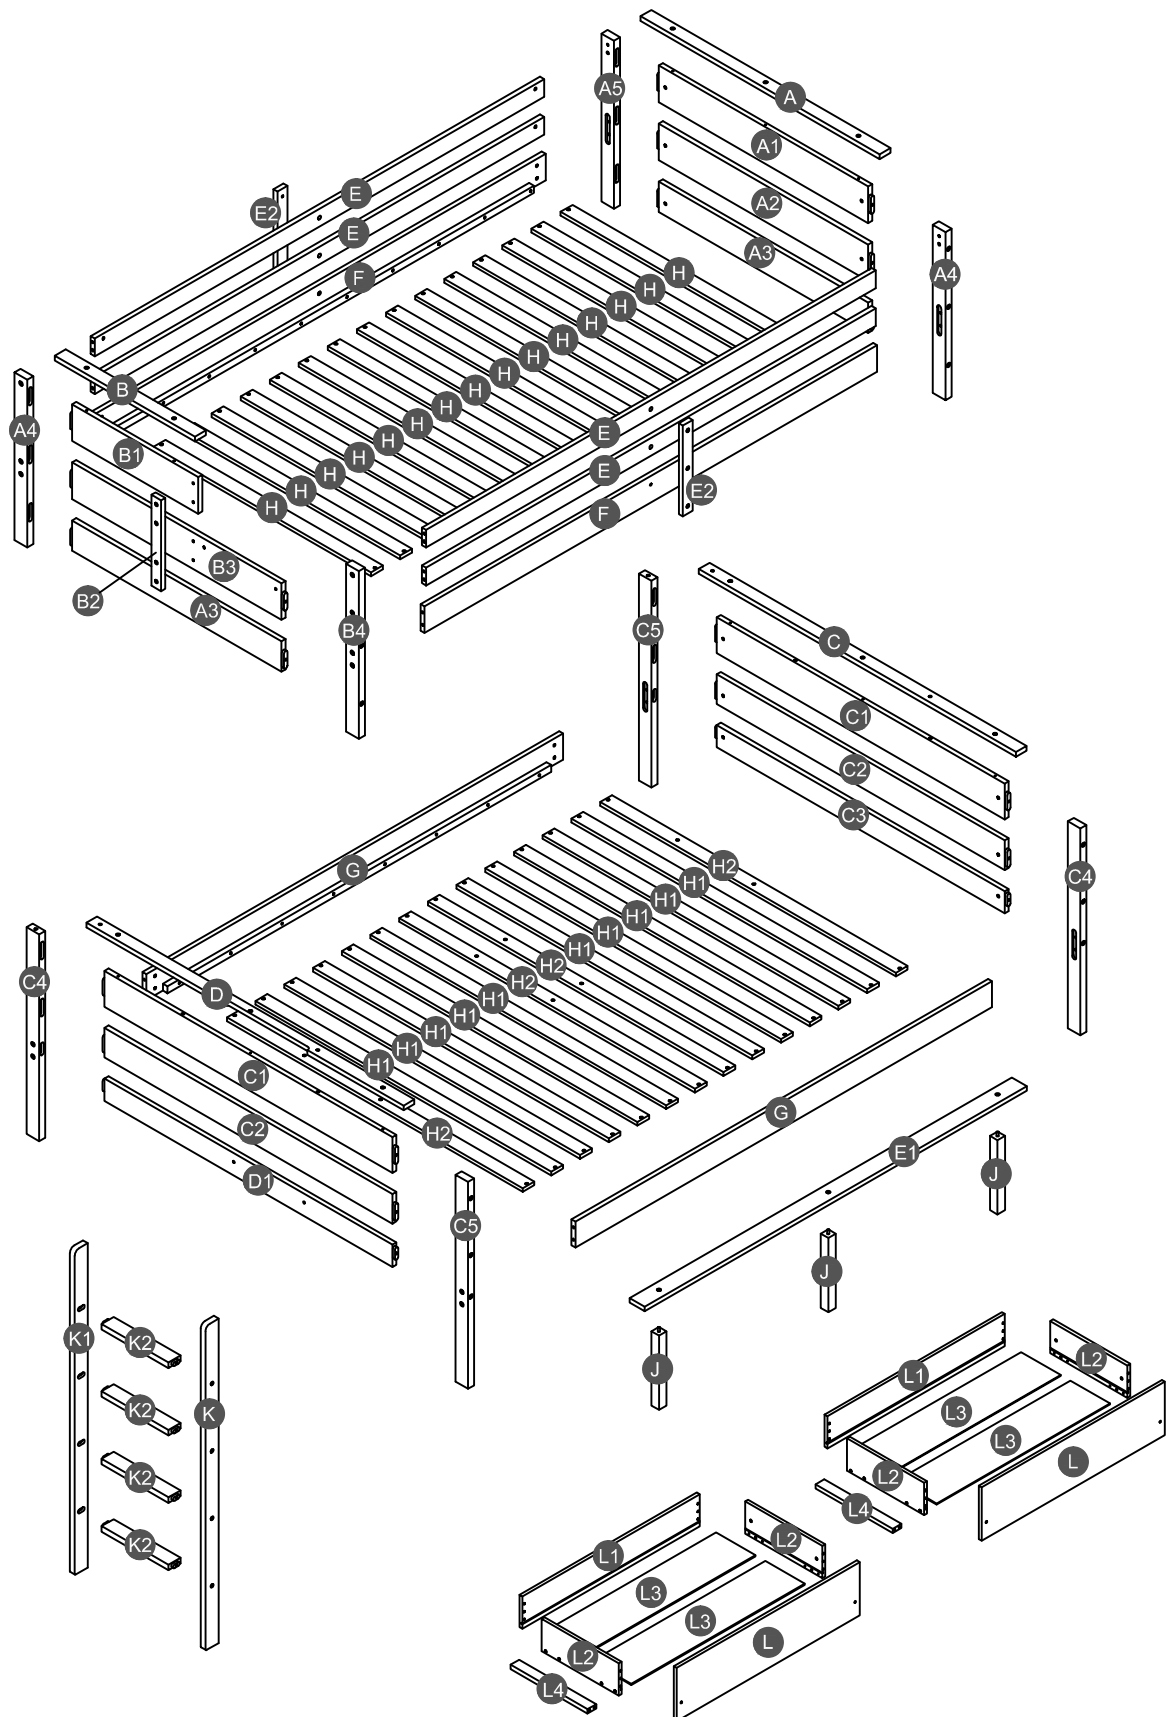











Part List

WF312645






A  Cap for upper HB - 1pc	A1  Upper horizontal bar HB - 1pc	A2  Divider horizontal bar HB - 1pc
A3  Lower horizontal bar HB/FB - 2pcs	A4  Upper leg (Left Back /Right Front) - 2pcs	A5  Upper leg (Right Back) - 1pc
B  Cap for upper FB - 1pc	B1  Upper horizontal bar FB - 1pc	B2  Vertical guard rail FB - 1pc
B3  Divider horizontal bar FB - 1pc	B4  Upper leg (Left Front) - 1pc	E  Upper Guard rail (Front/Back) - 4pcs
E2  Vertical guard rail - 2pcs	F  Upper side rail (Front/Back) - 2pcs	H  Slats - 14pcs
L  Front drawer panel - 2pcs	L3  Drawer bottom - 4pcs	L4  Support drawer - 2pcs

Part List


WF312646 + Hardware inside

C  Cap for lower FB - 1pc	C1  Upper horizontal bar HB/FB - 2pcs	C2  Divider horizontal bar HB/FB - 2pcs
C3  Lower horizontal bar HB - 1pc	C4  Lower leg (Left Back/Right Front) - 2pcs	C5  Lower leg (Left Front/Right Back) - 2pcs
D  Cap for lower HB - 1pc	D1  Lower horizontal bar FB - 1pc	E1  Lower support slat - 1pc
G  Lower side rail (Front/Back) - 2pcs	H1  Slats - 10pcs	H2  Slats - 4pcs
J  Leg support - 3pcs	K  Side ladder (Front) - 1pc	K1  Side ladder (Back) - 1pc
K2  Step ladder - 4pcs	L1  Back drawer panel - 2pcs	L2  Left / right drawer panel - 4pcs

Hardware List WF312646


1  $\varnothing 10 \times 40 \text{mm}$ Wood dowel (8pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (23pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (24pcs)
4  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (16pcs)	5  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (4pcs)	6  $(\varnothing 12) 1/4" \times 30 \text{mm}$ Hex-Head bolts (10pcs)
7  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (11pcs)	8  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (63pcs)	9  $\varnothing 9 \times 90 \text{mm}$ Connecting bar (4pcs)
10  $\varnothing 4 \times 30 \text{mm}$ Wood screws (82pcs)	11  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	12  $70 \times 35 \times 19 \text{mm}$ Drawer stopper (3pcs)
13  $100 \times 20 \times 54 \text{mm}$ Wheels (8pcs)	14  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (8pcs)	15  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (24pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:

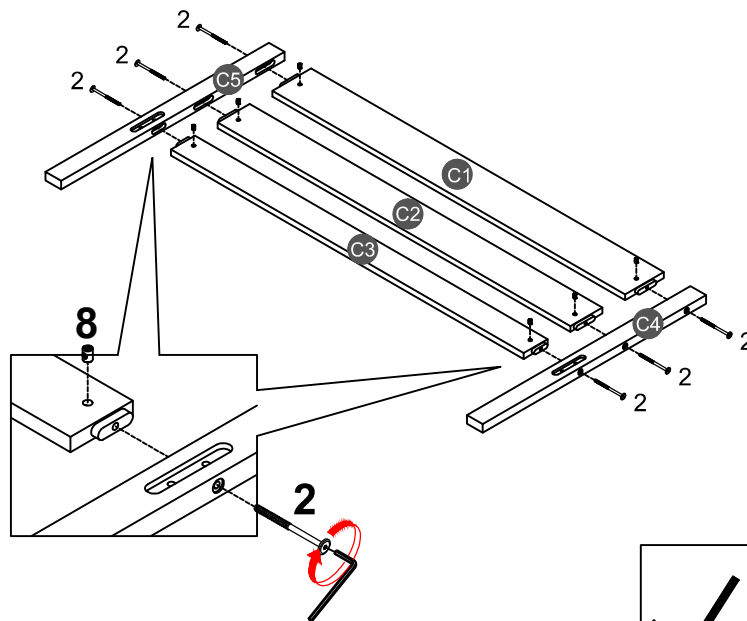


2	8
6PCS	6PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

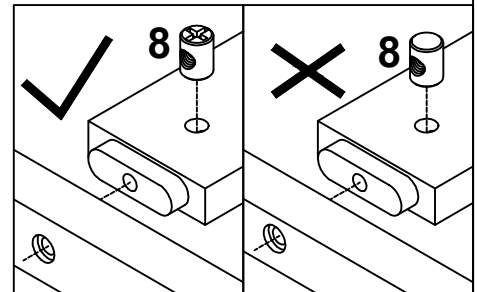


STEP 2:

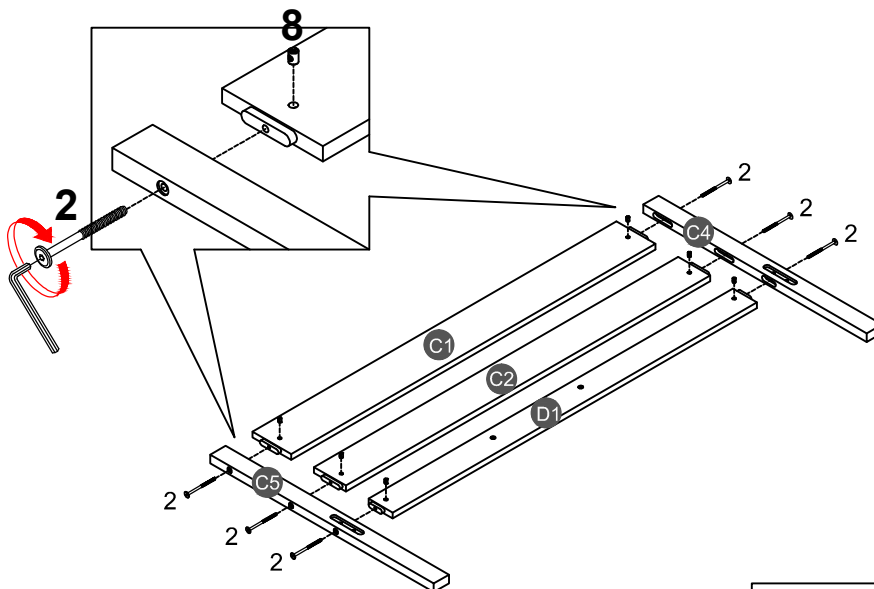

2	8
6PCS	6PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

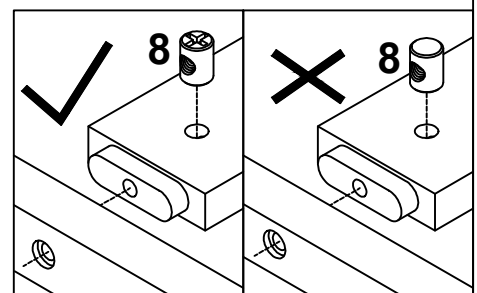


STEP 3:

7



6PCS

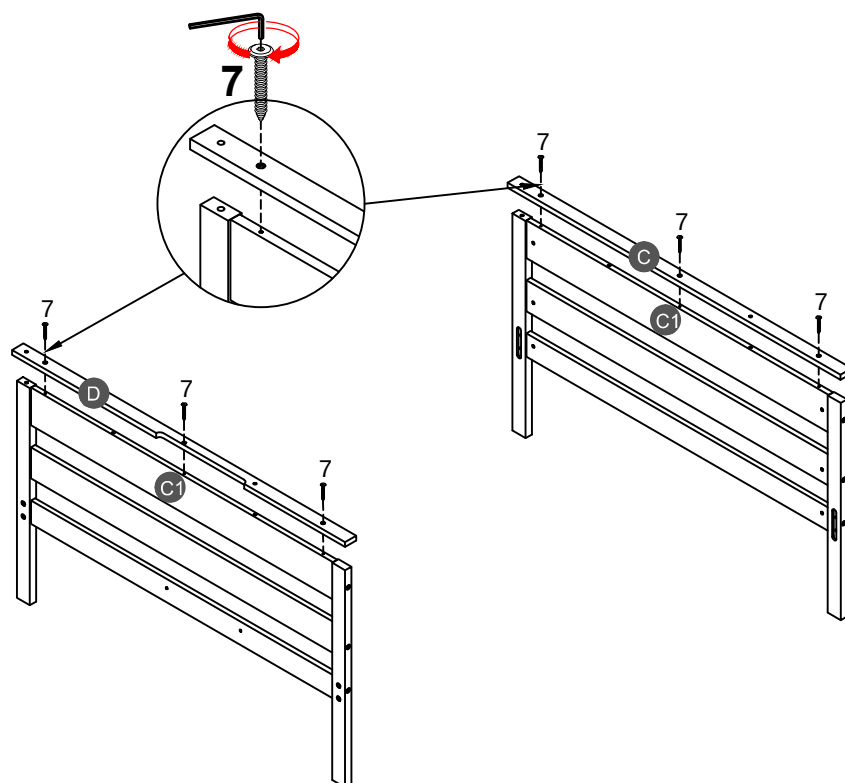

STEP 4:

10




6PCS

12




3PCS

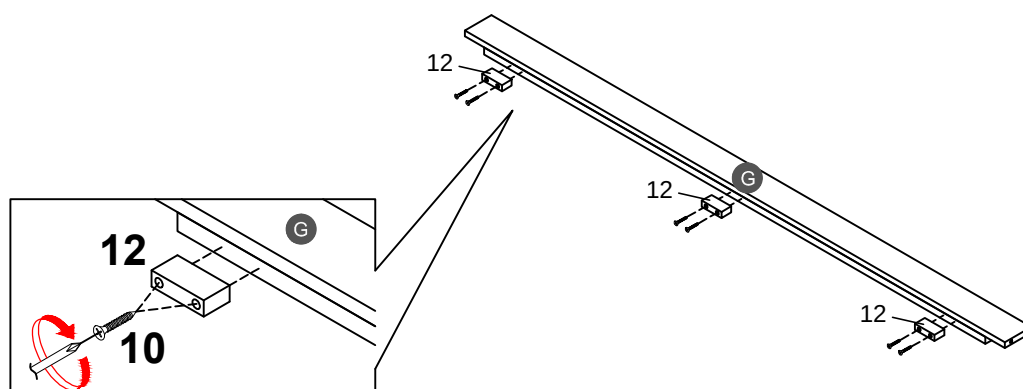


Drawer stopper (12) with lower side rail front (G) by using screw (10).

STEP 5:

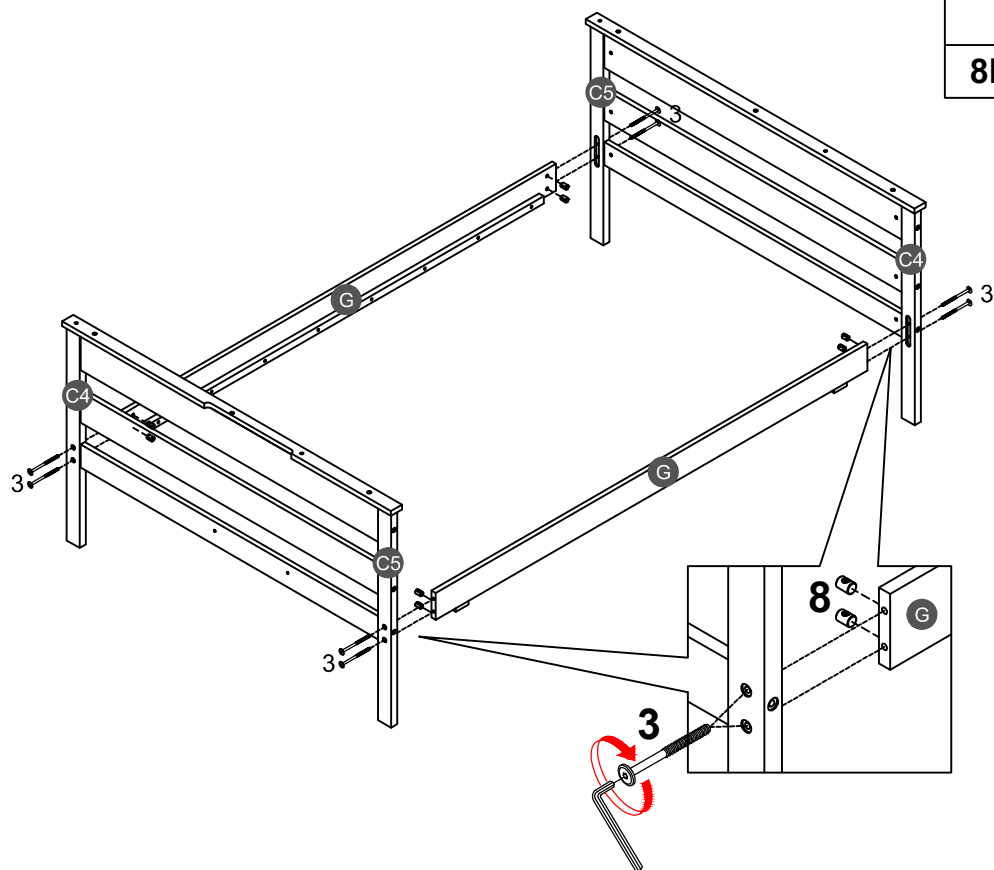


STEP 6:

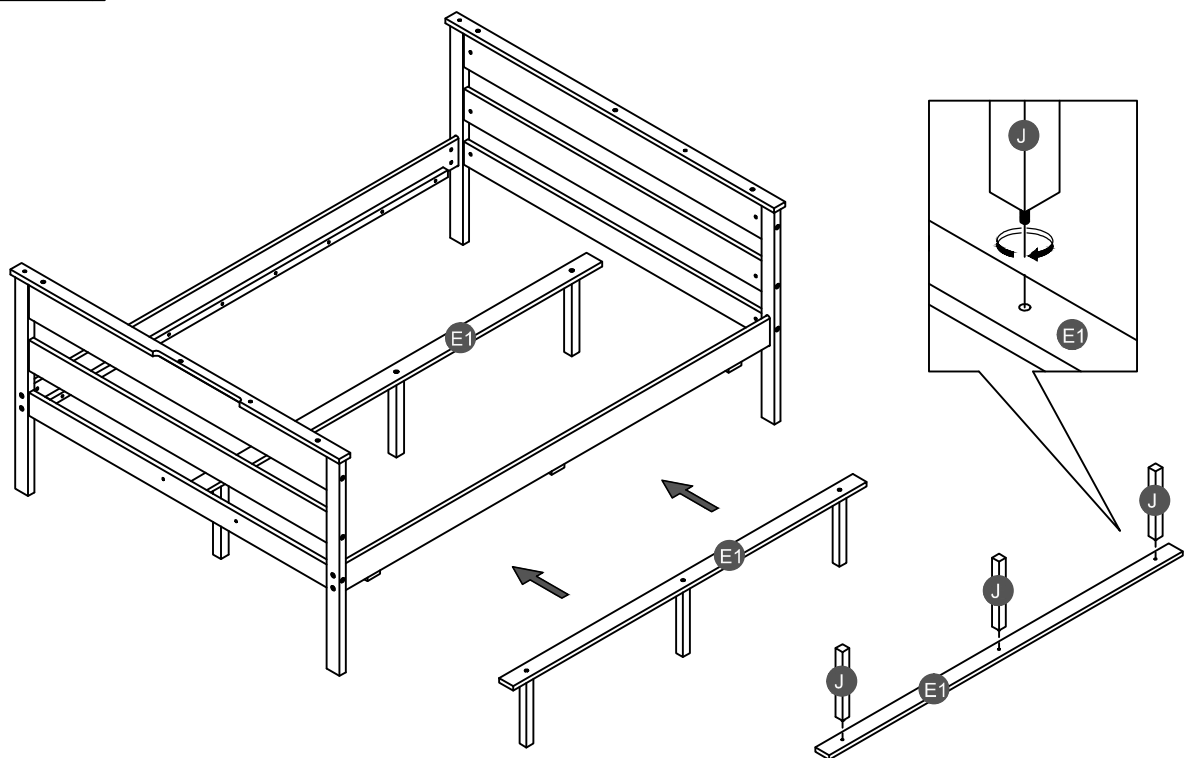


Assembling leg support (J) with lower support slat (E1) later rotate, Move support slat inside bunkbed.

STEP 7:

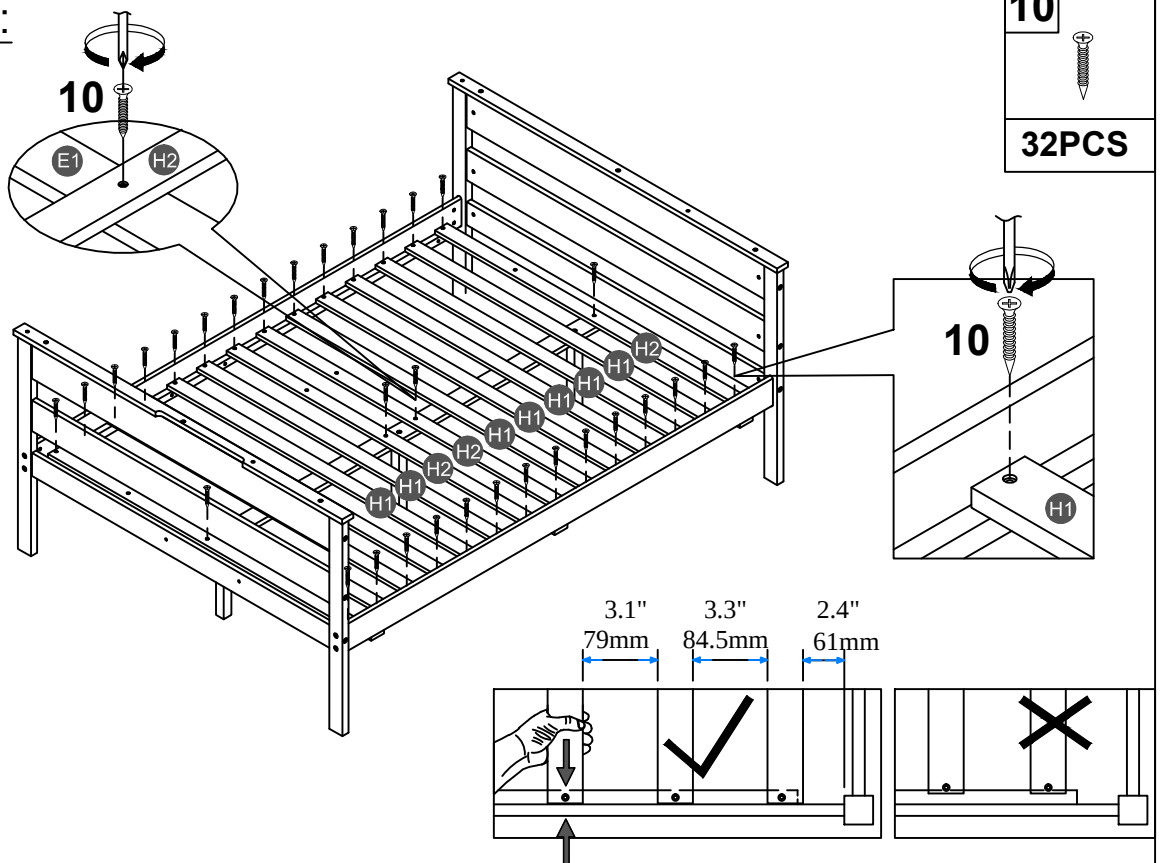


NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 8:

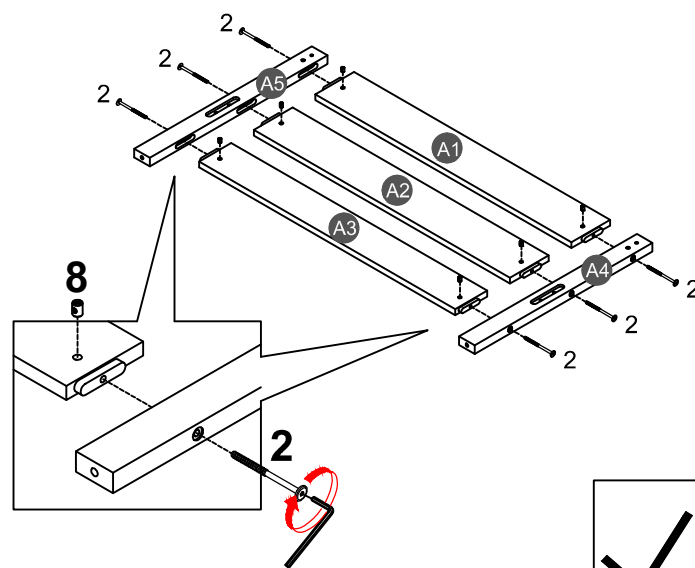


2	8
6PCS	6PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

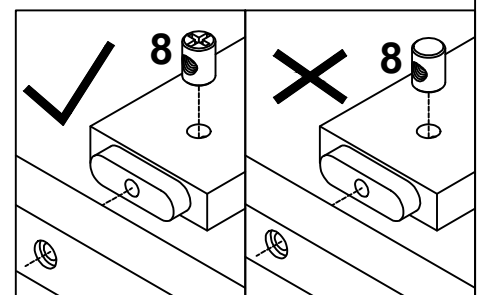

STEP 9:

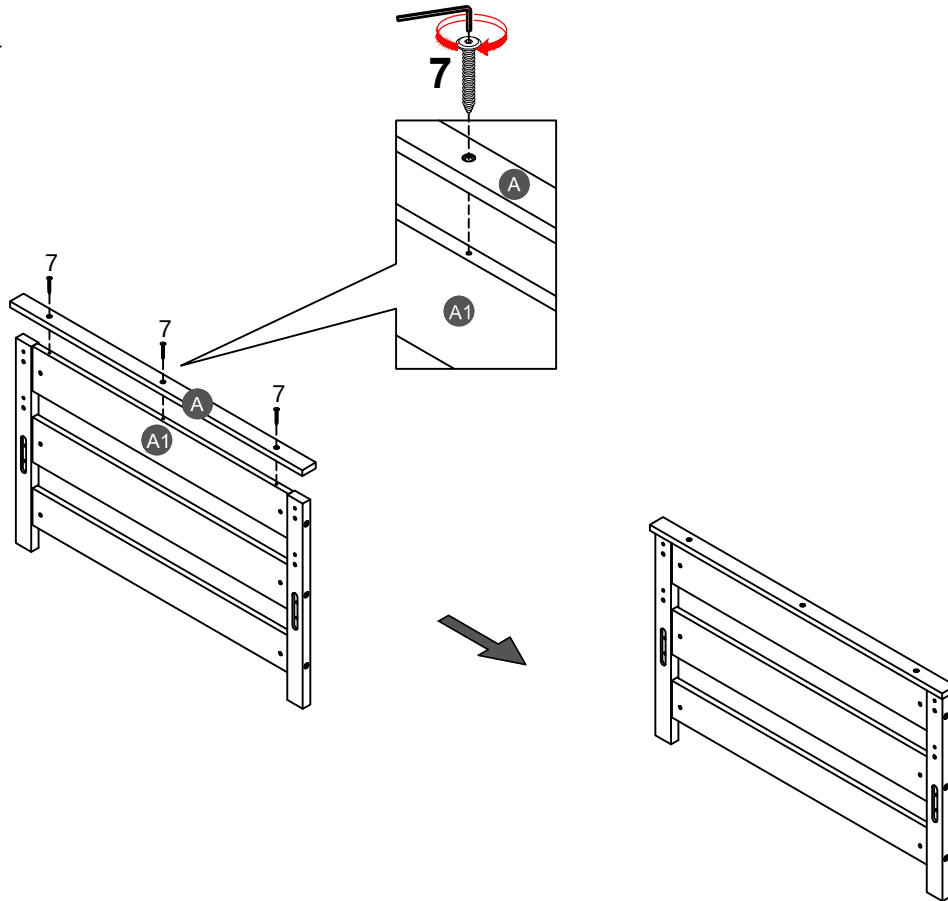


7



3PCS

STEP 10:

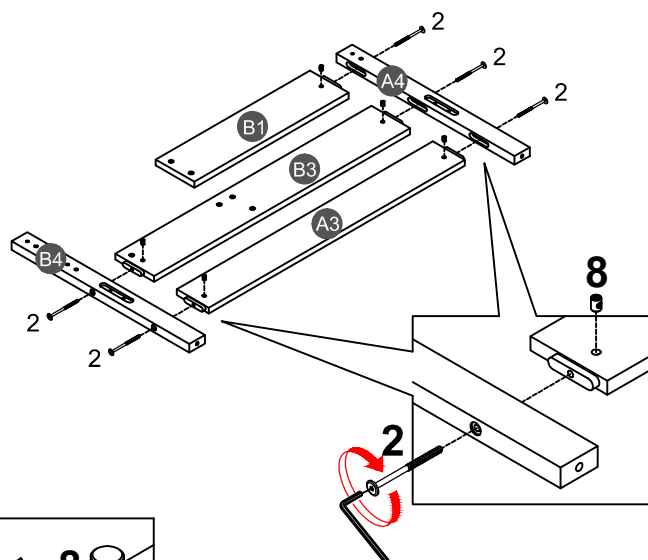

2




5PCS

8




5PCS

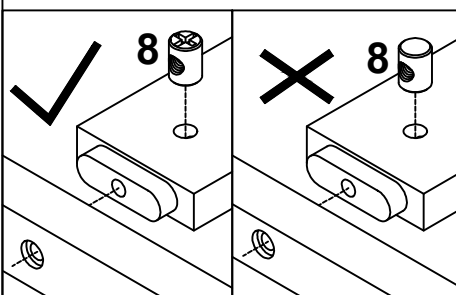


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 11:

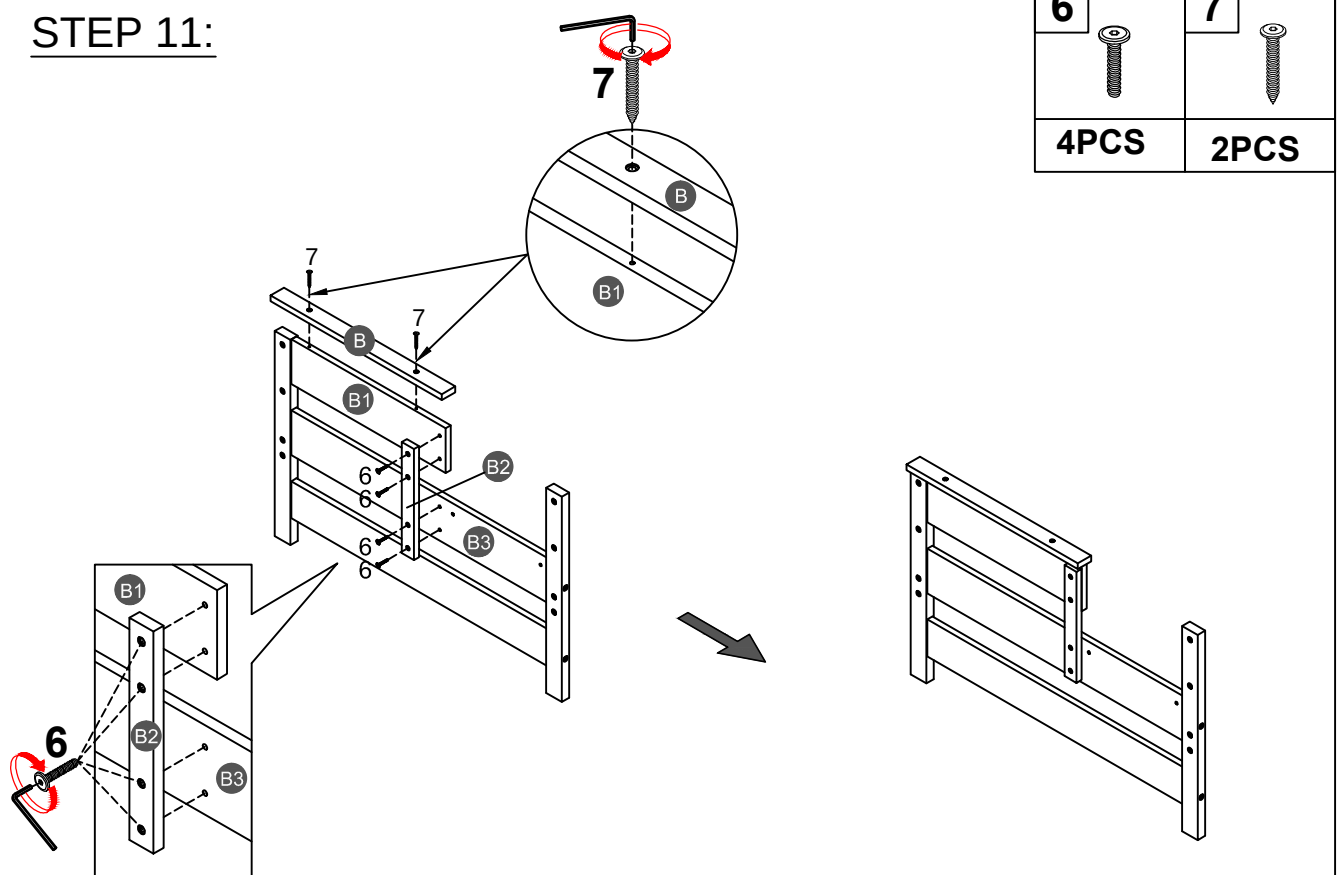

STEP 12:

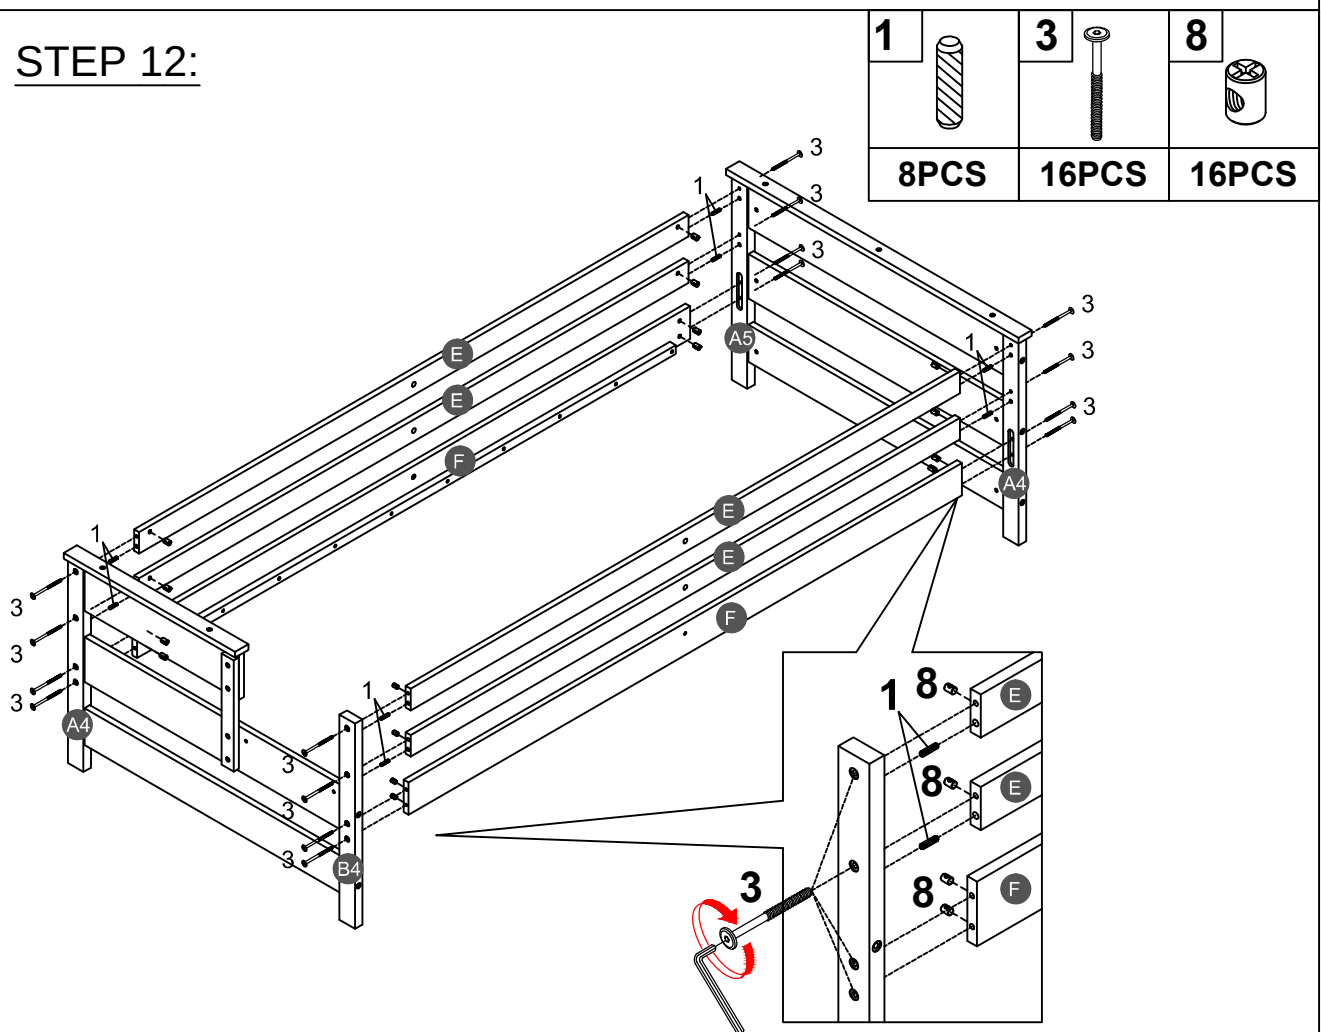

STEP 13:

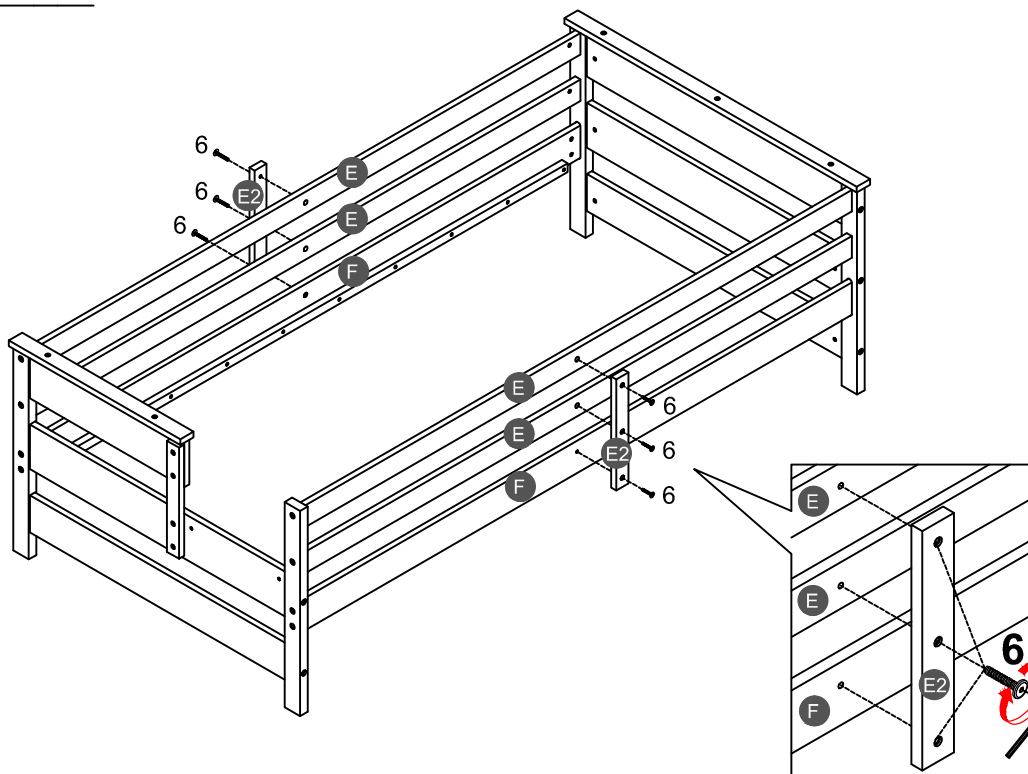


6



6PCS

STEP 14:

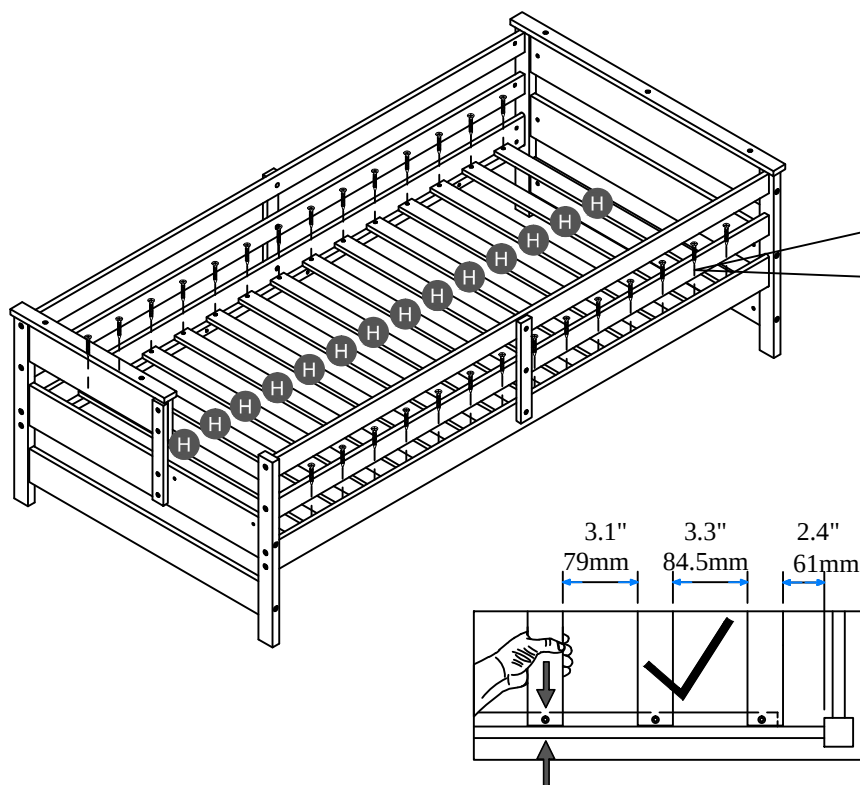

10




28PCS



NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 15:

9



4PCS

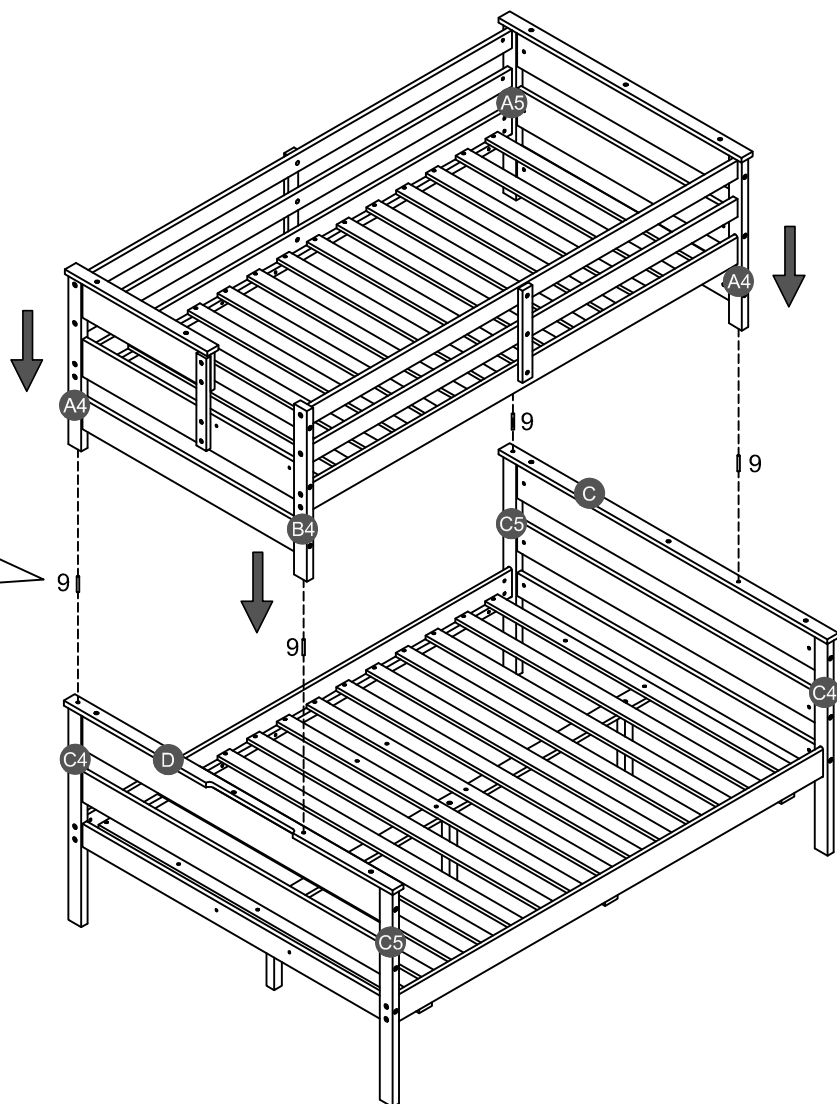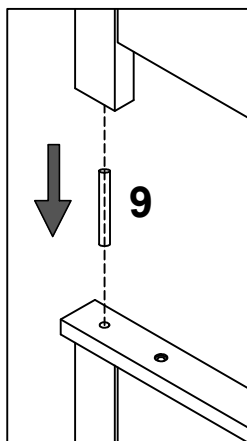

STEP 16:

4




8PCS

8



8PCS




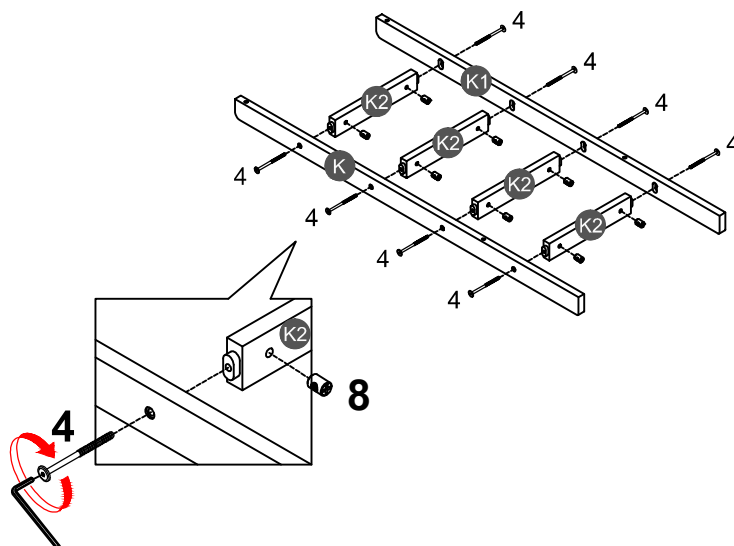


STEP 17:


5



4PCS

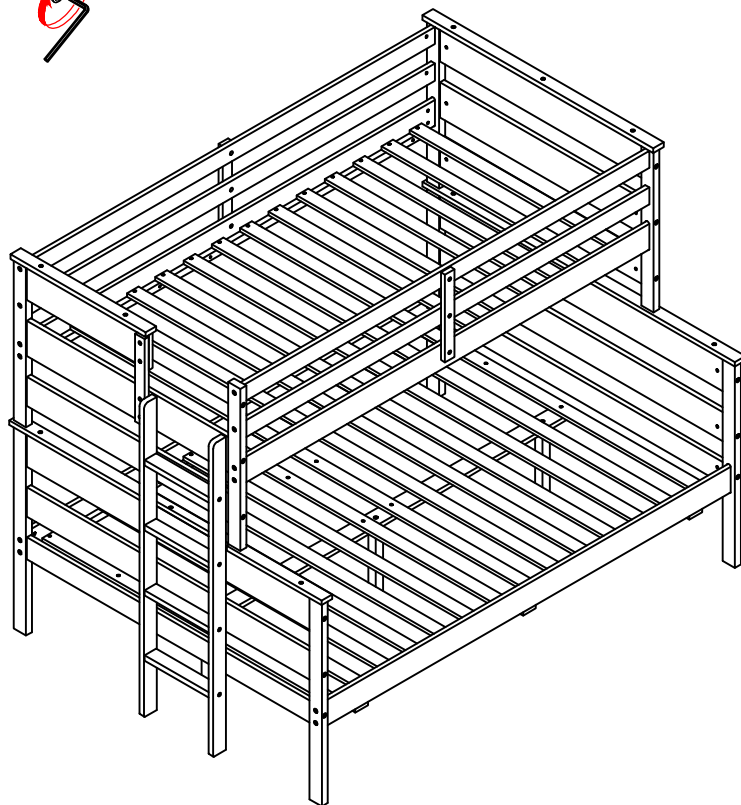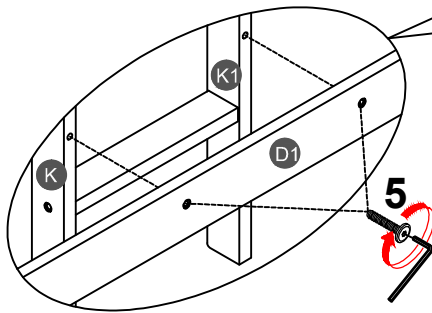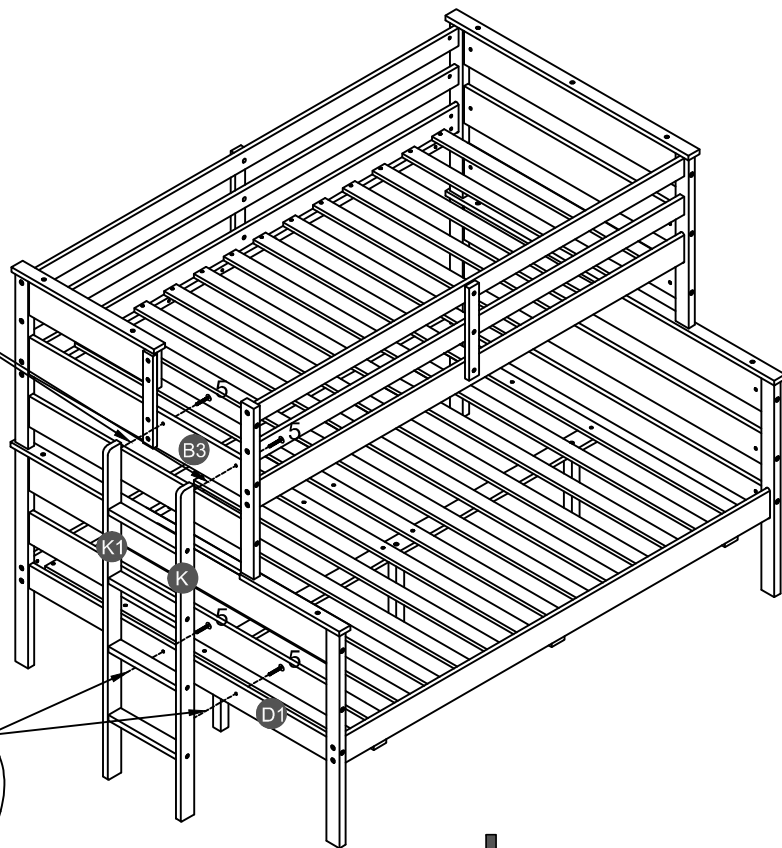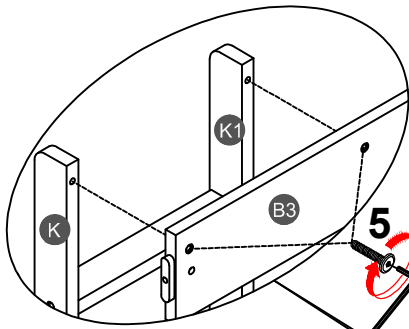


STEP 18:

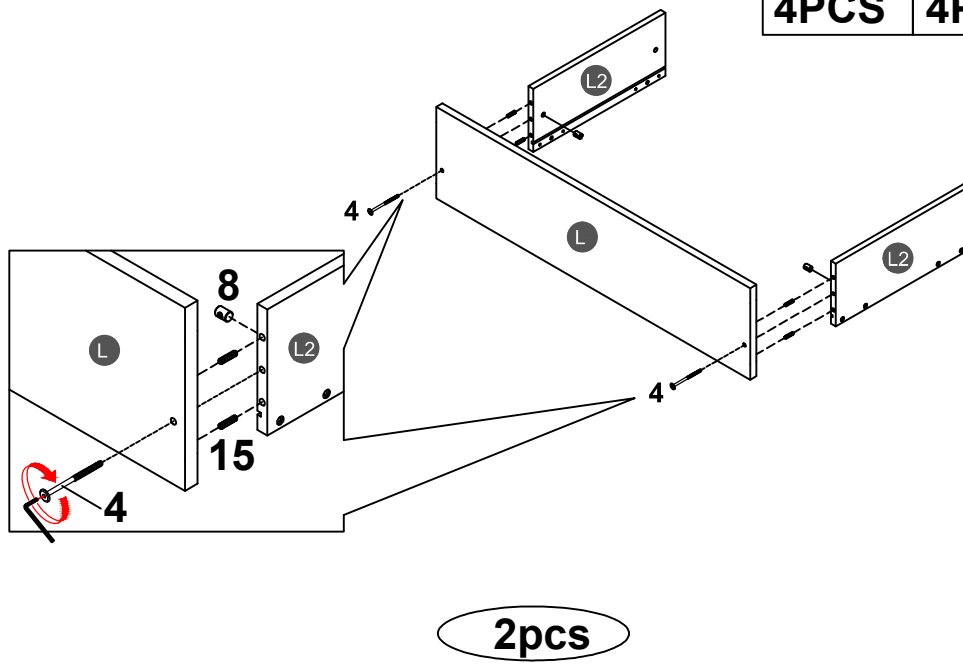

4	8	15
		
4PCS	4PCS	8PCS


STEP 19:

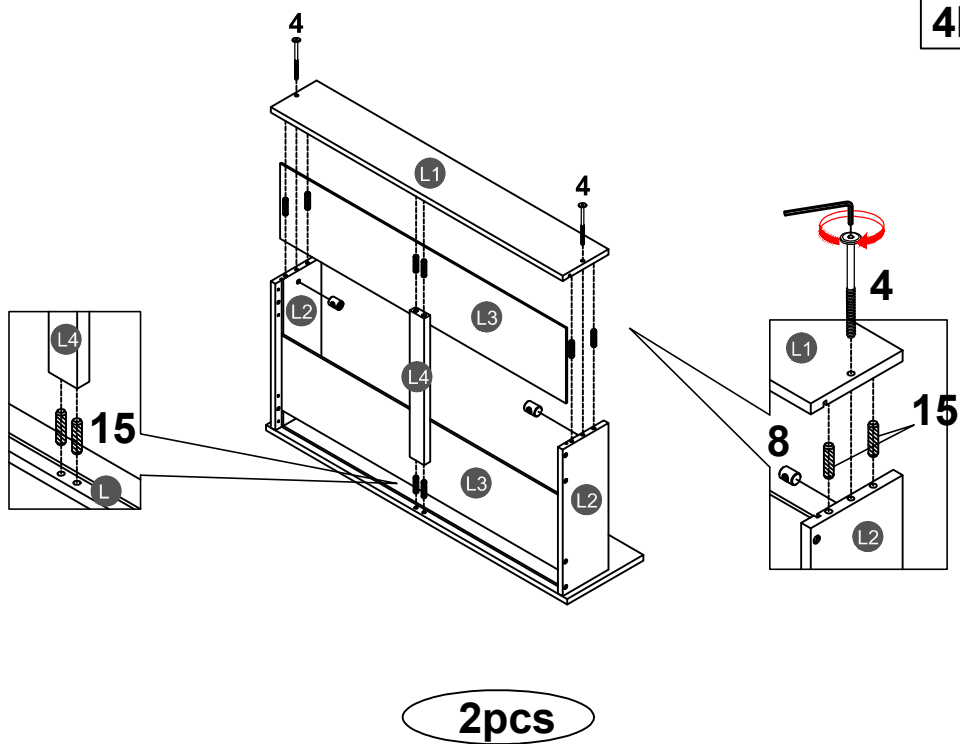


4		8	
4PCS		4PCS	
		15	
		16PCS	

STEP 20:


10	13	14
		
16PCS	8PCS	8PCS

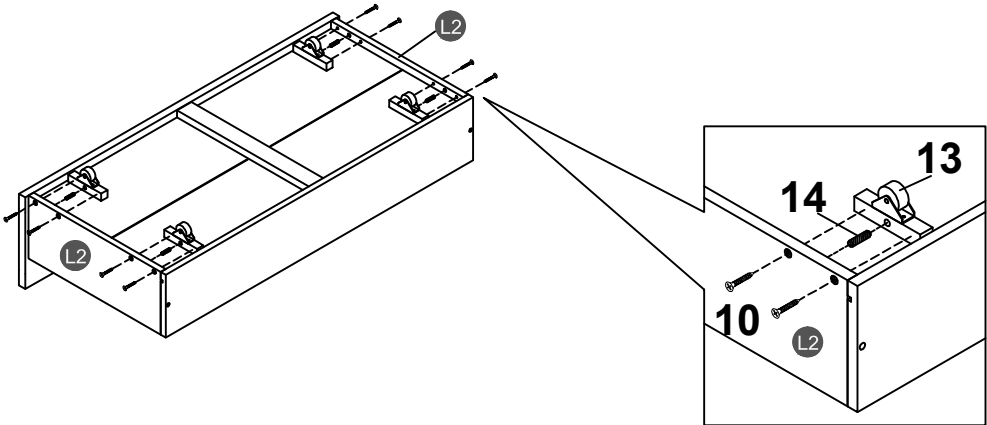


2pcs

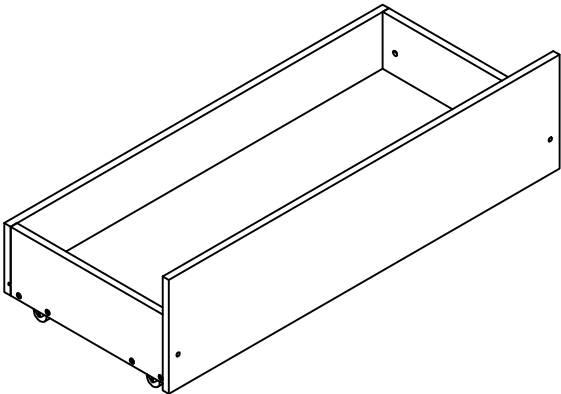

STEP 21:

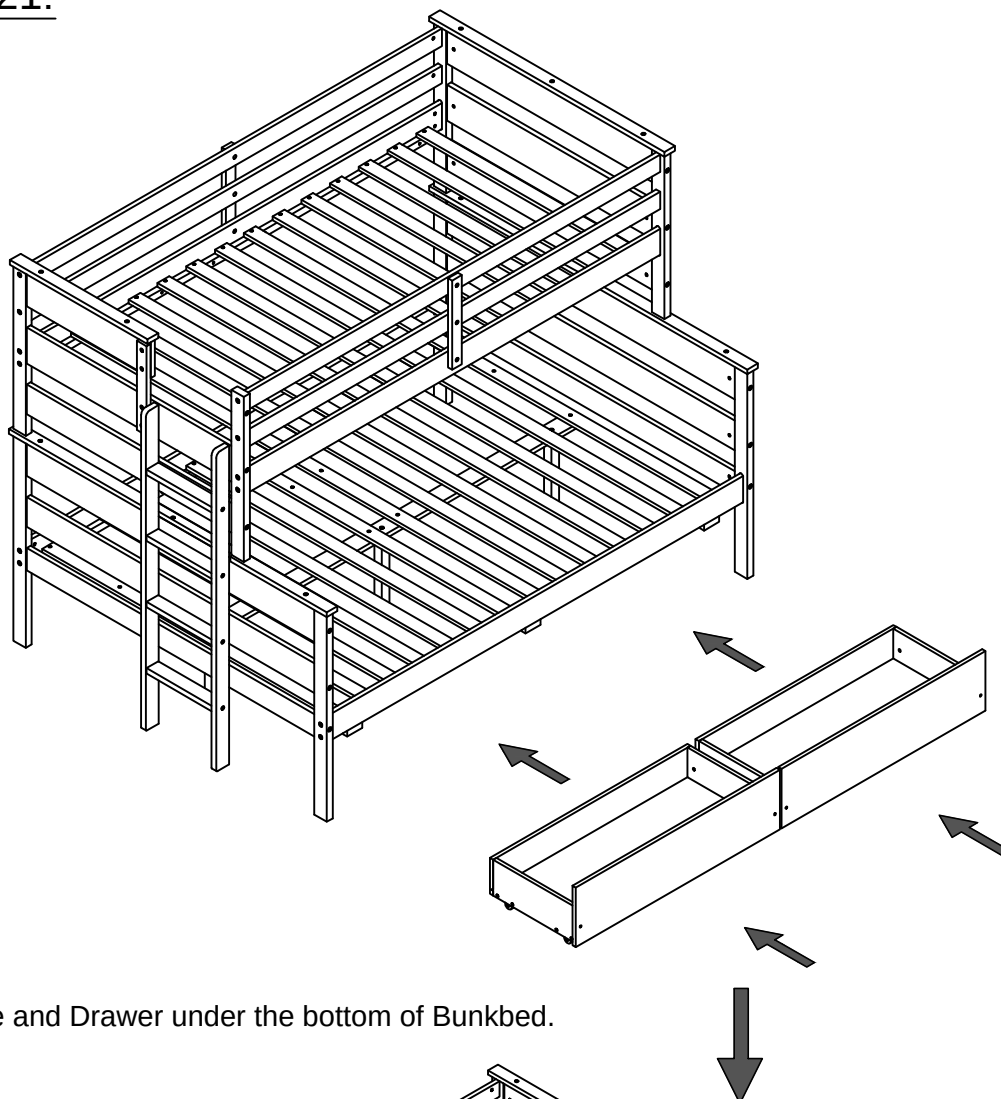

Push Trundle and Drawer under the bottom of Bunkbed.

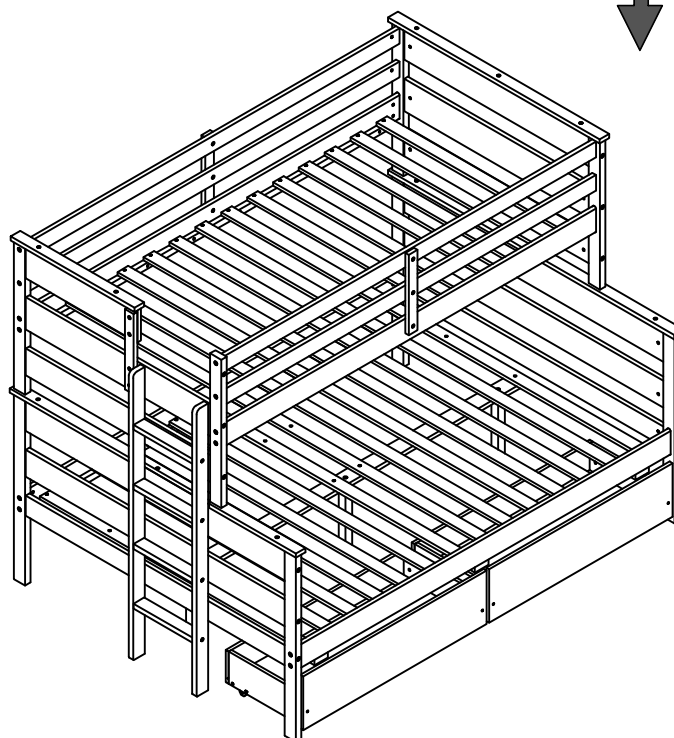

Make sure to tighten all the screws of the bed.