


CONTEMPORARY SOFA

Assembly Instruction

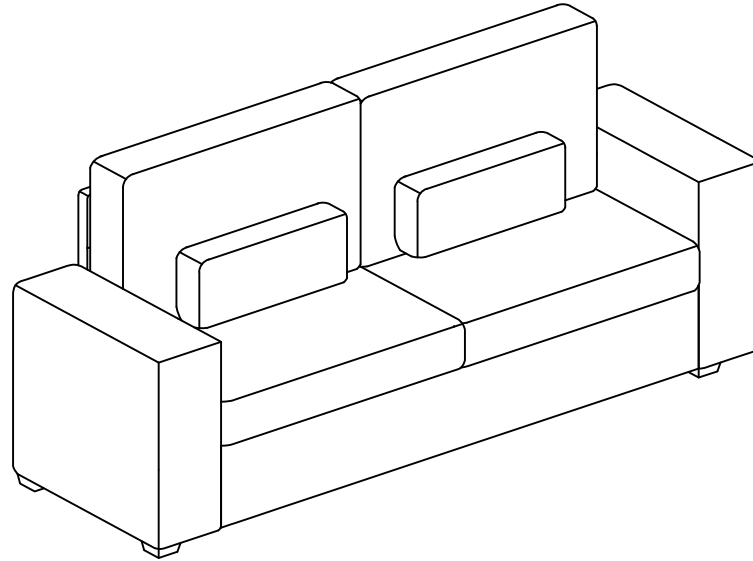




Safety and Care Advice

Important - Please read these instructions fully before starting assembly


Thanks for your purchase. Before the assembly, please follow the instructions to check if all the spare parts and screws are intact.

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area in the room that it is intended for. Approximate assembly time: 30 minutes.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.
- Please do not throw away any of the packaging or instruction until all the components and hardware have been checked and the furniture is fully assembled. Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Please do not take off the cover, and do not wash.


Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

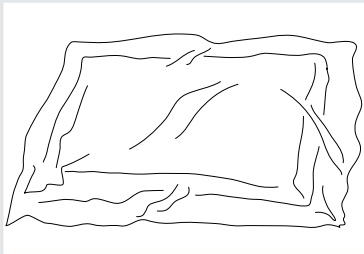


Open the vacuum bag carefully.

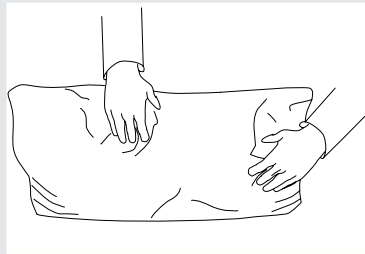

Press and tap with both hands from the side to fully inhale air.

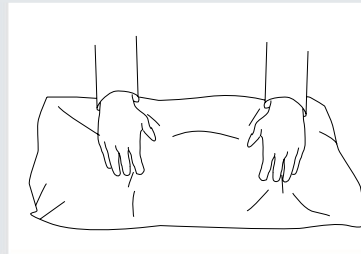


Press and tap with both hands from the front to fully inflate.

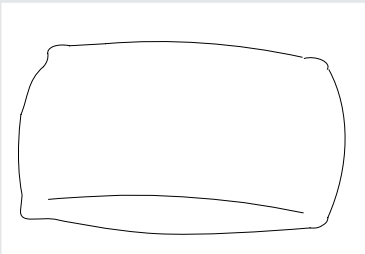






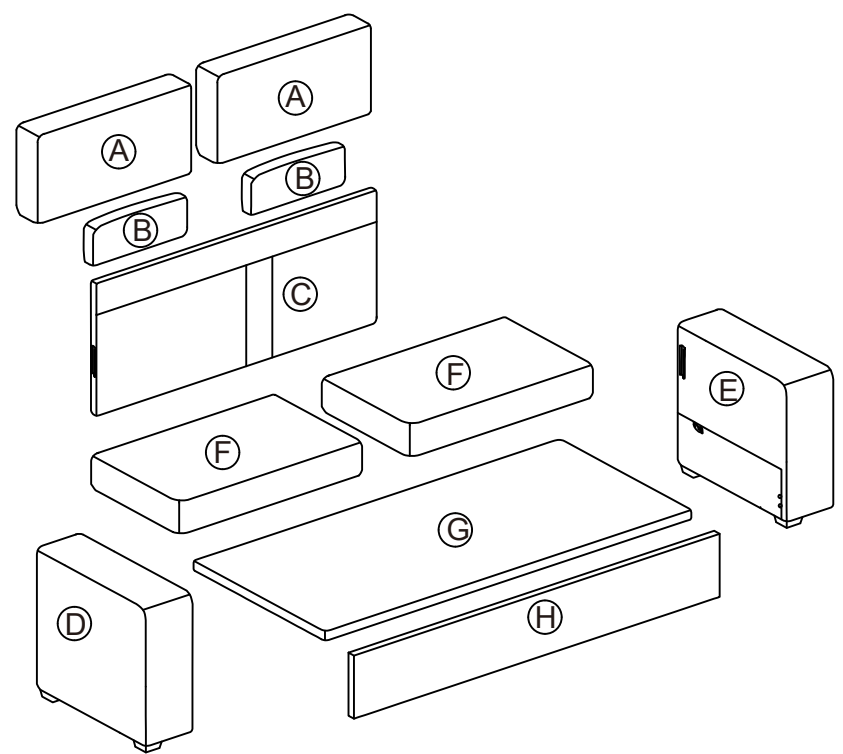



Carefully smooth out each section until the surface is even.









SOFA




Hardware parts

a Sofa Leg 13cm  x4	b Plastic washer  x4	c Assist sofa leg  x1	d Screw M6*20MM  x10	e Washer Φ8*20*2MM  x8
f Allen key M6  x1	g Connector  x2	h Connector  x2	i Screw M8*60MM  x4	

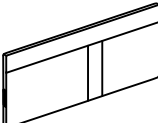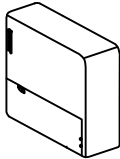
Main structure accessories

A Backrest  x2	B Accent pillows  x2	C Back metal frame  x1	D Armrest (L)  x1	E Armrest (R)  x1
F Seat Cushion  x2	G Seat metal base  x1	H Seat front frame  x1		


STEP 1

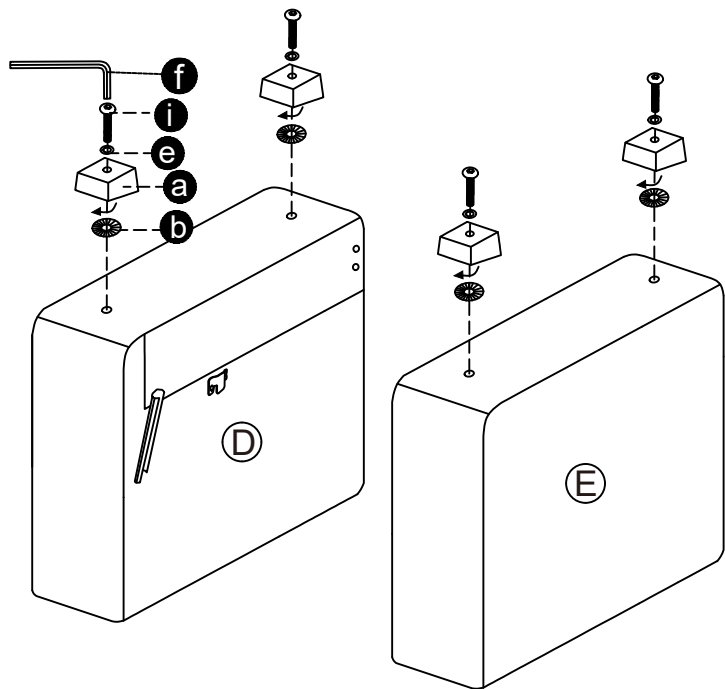


STEP 2

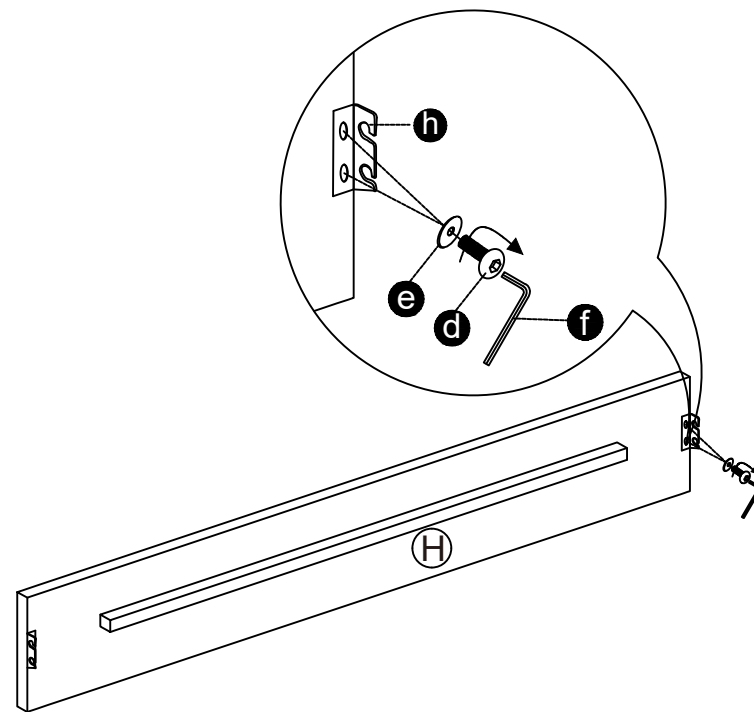


STEP 3

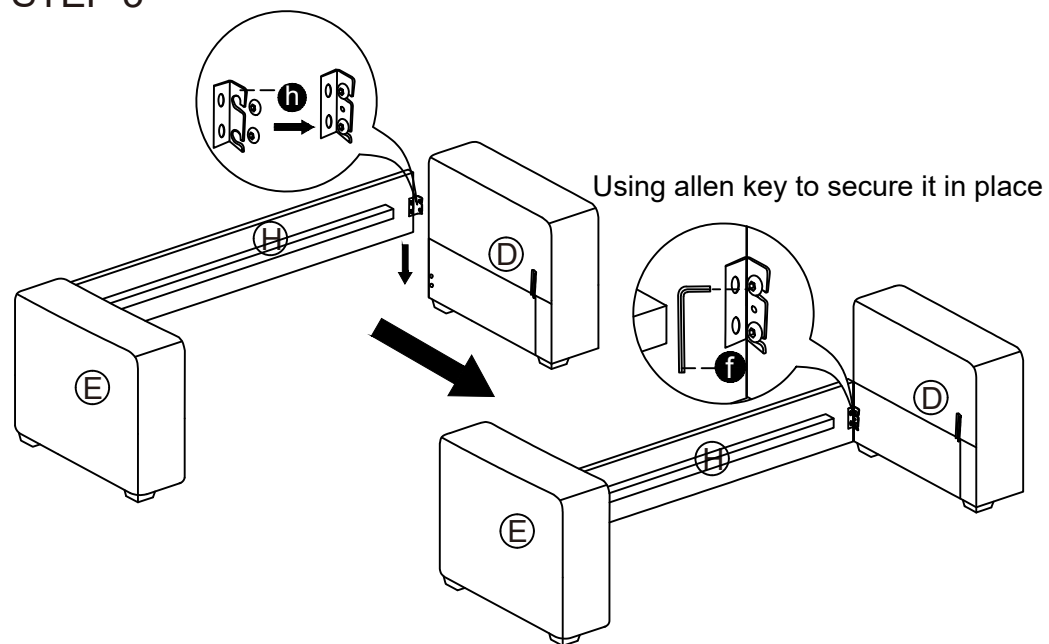


STEP 4

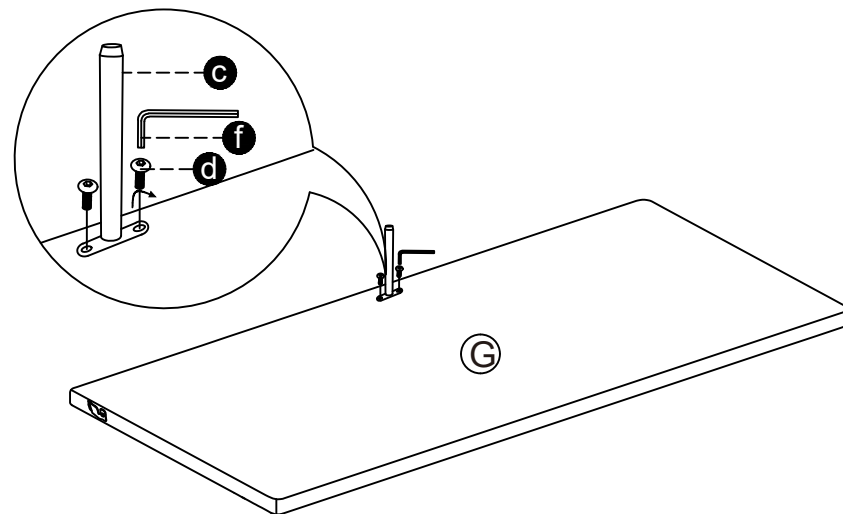


STEP 5

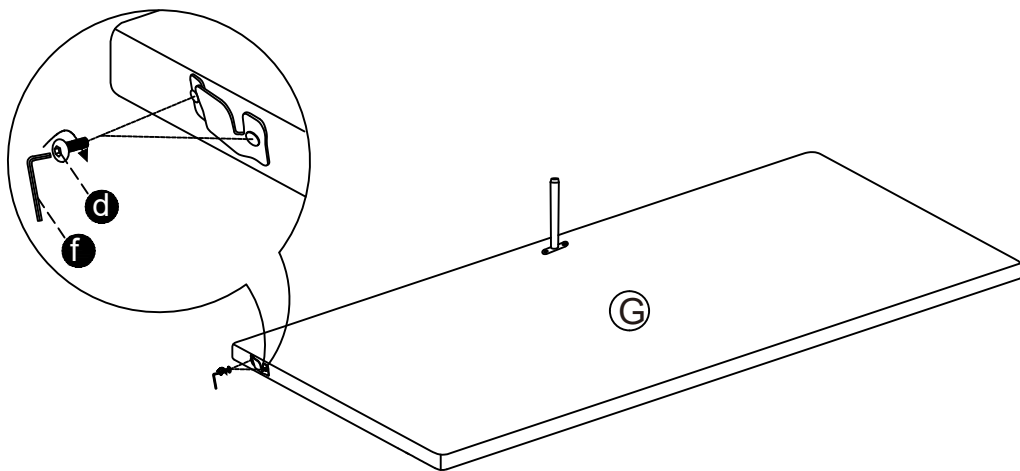


STEP 6

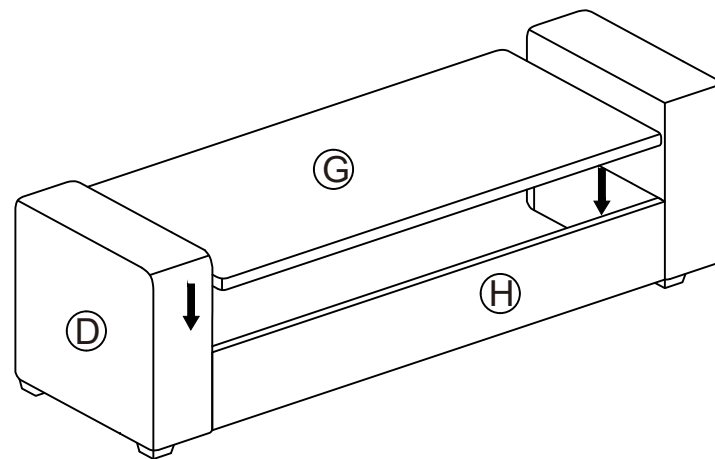


STEP 7

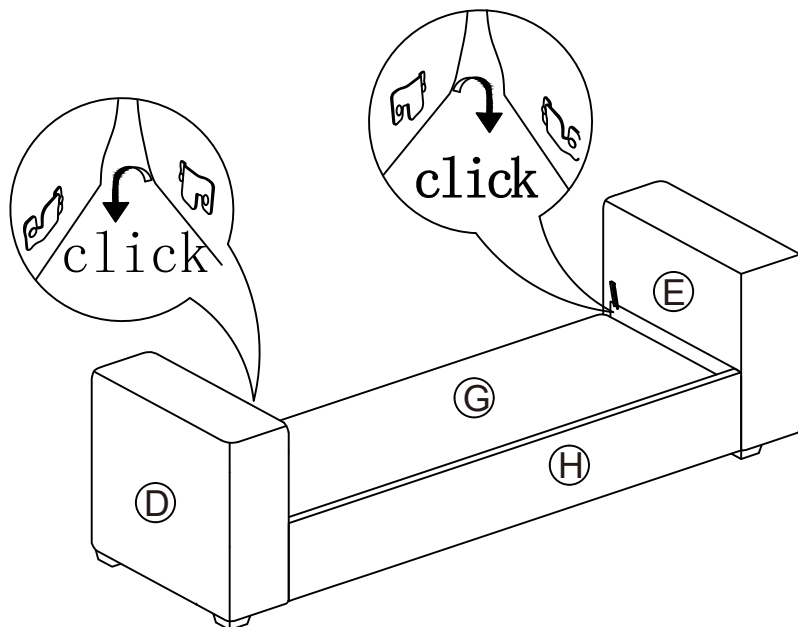


STEP 8

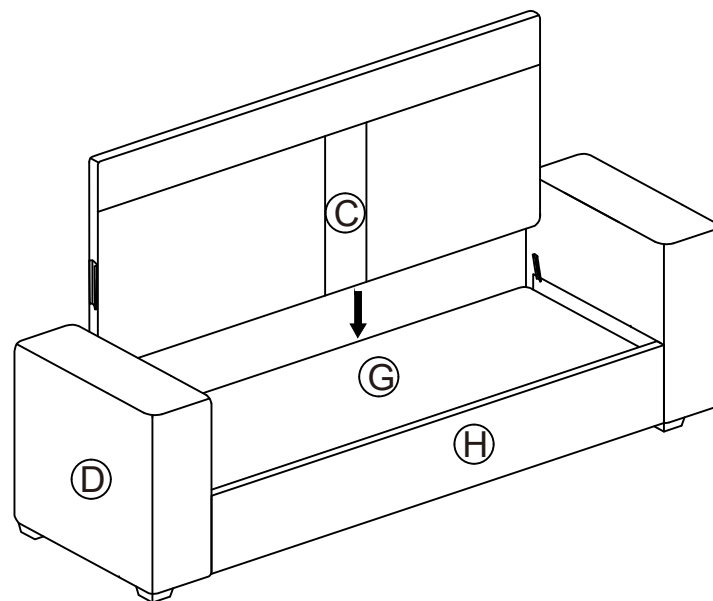


STEP 9

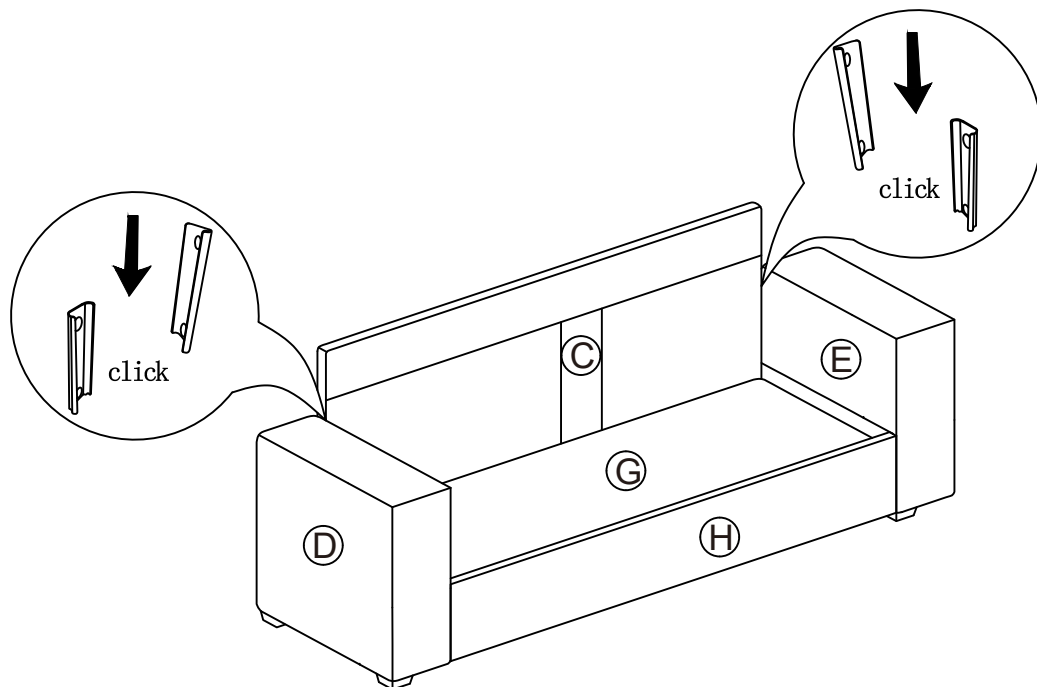


STEP 10

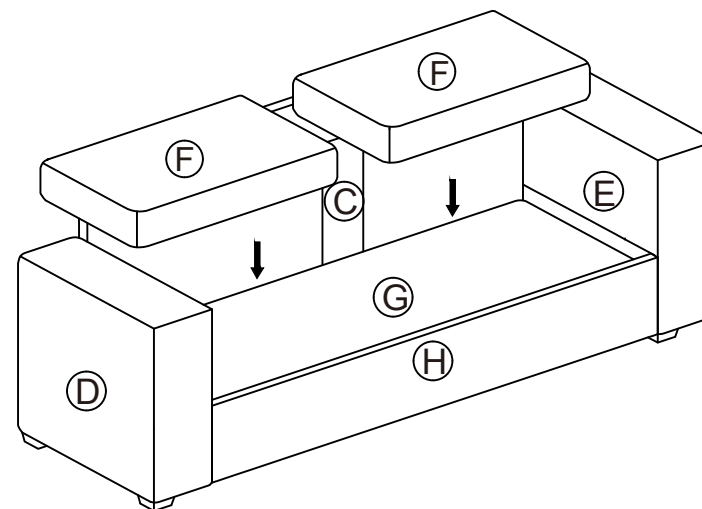


STEP 11

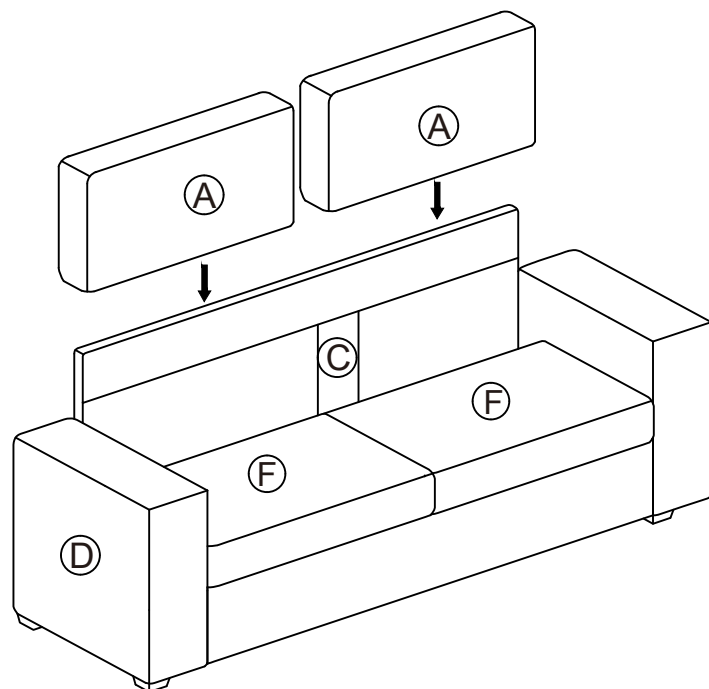


STEP 12

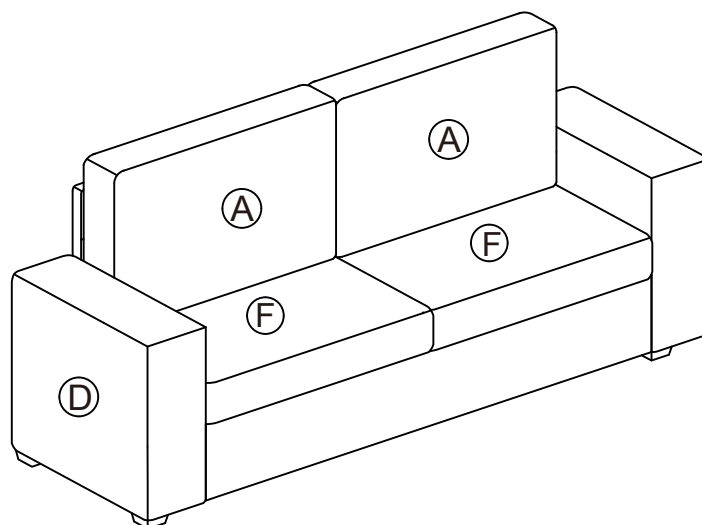

STEP 13

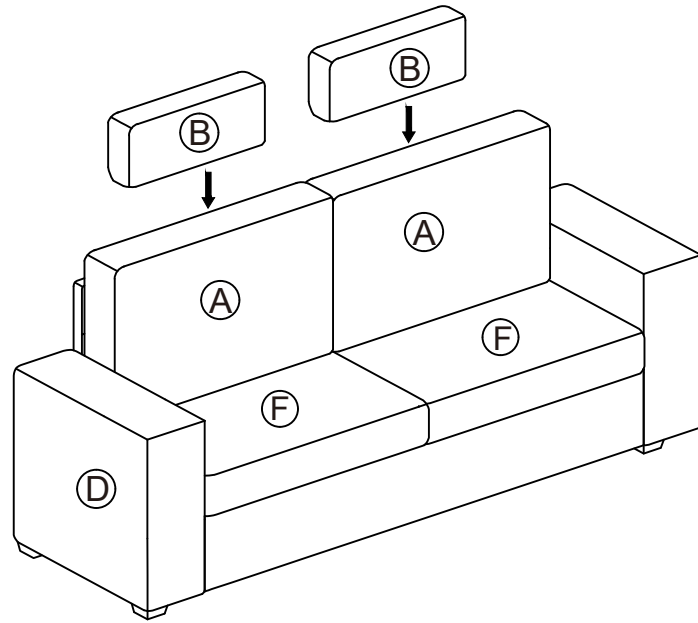

STEP 14

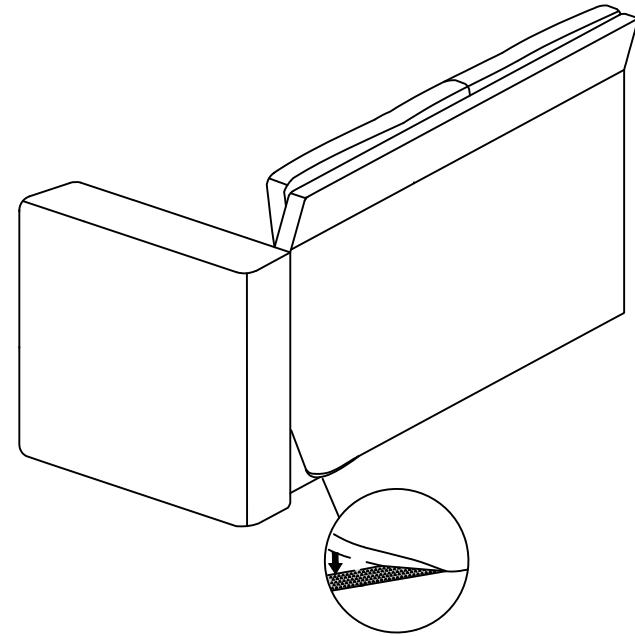

Using Nylon fastener to secure it in place

STEP 15

