




ModernMate

ASSEMBLY INSTRUCTIONS

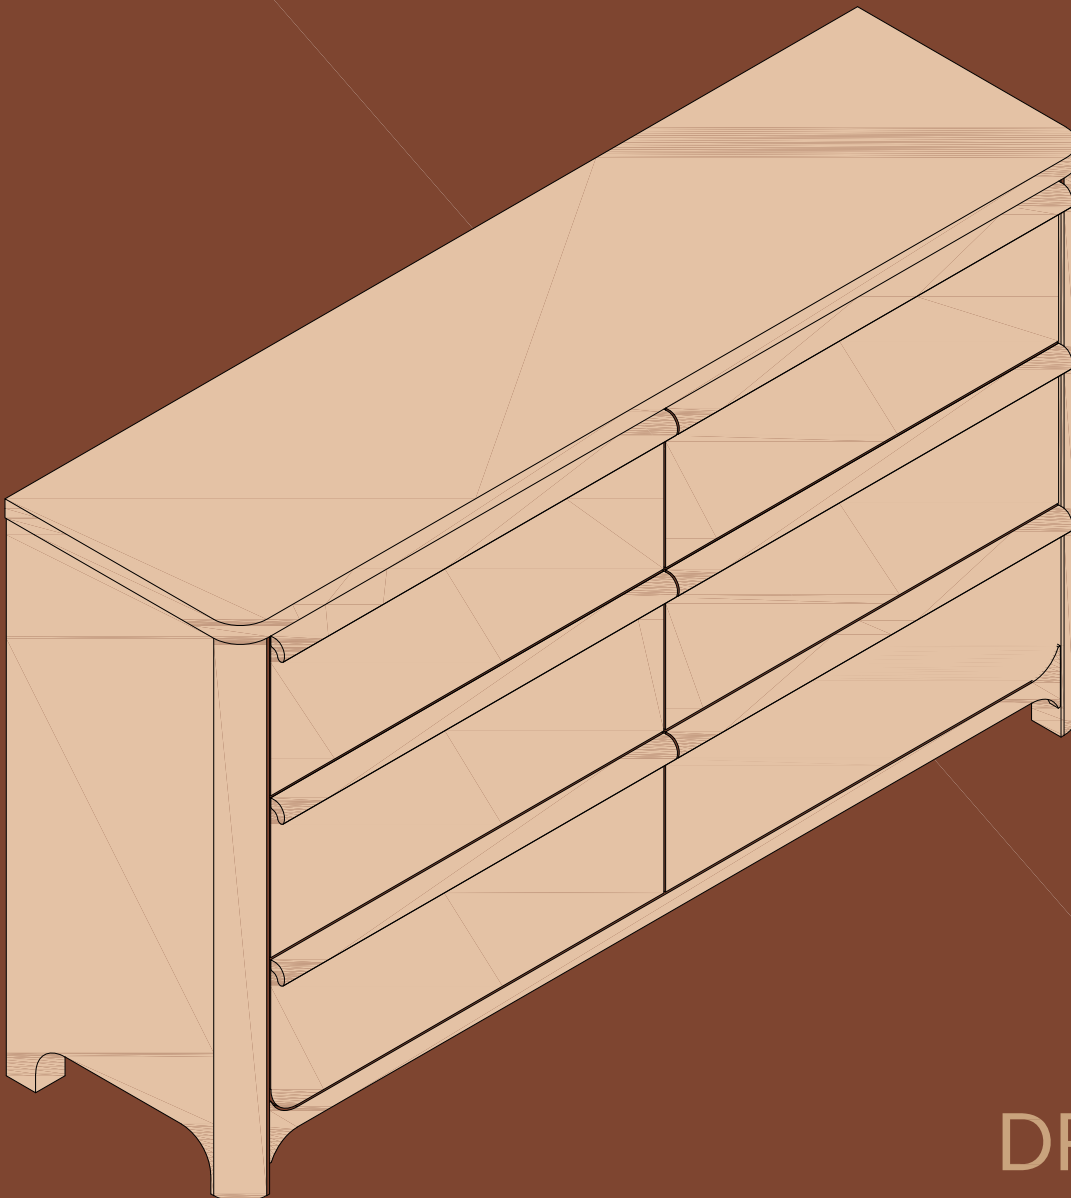

DRESSER

CANTENTS

Precautions	01
Parts List	02-03
Hardware List	04
Tools List	05
Assembly Process	06-28

INTRODUCTION

Thank you for your purchase. Please read all instructions carefully prior to assembly and retain this manual for future reference. If you require assistance, please contact our Customer Support team.

IMPORTANT SAFETY GUIDELINES

1. This package contains multiple components and hardware. Verify all items against the Parts List prior to beginning assembly.

WARNING: Choking hazard. Keep small parts away from children.

2. **NOTICE:** Assemble the unit on a clean, non-abrasive surface (such as carpet or flattened cardboard) to prevent scratching the finish.

3. **CAUTION:** Heavy components. Two-person assembly is highly recommended to prevent injury or product damage.

4. **WARNING:** Tip-over hazard. The unit may be unstable during assembly. Do not move or use the product until assembly is complete and all fasteners are securely tightened.









5. Should you encounter issues during assembly, contact our Customer Support team for immediate assistance.







WARNING: Failure to strictly follow these assembly instructions may result in product damage or serious personal injury.

For further assistance, please contact Customer Support.





Hotline: (800) 661-5928

Parts List Box A

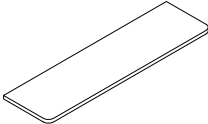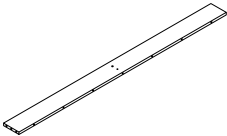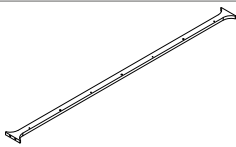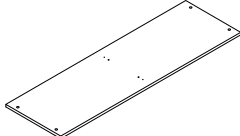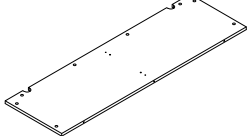ID	Description	QTY
1		1
2		1
3		1
4		1
5		1
6		2
7		2
8		1




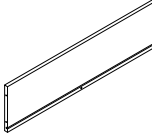
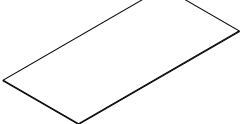
ID	Description	QTY
9		1
10		6
11		6
12		6
13		6
15		6


Parts List Box B

ID	Description	QTY
14		6
16		1
17		1
18		1


ID	Description	QTY
----	-------------	-----

Hardware List all hardware in box –B

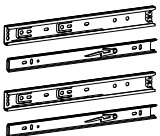
ID	Description	QTY
A	 Ø6*33	56+1
B	 Ø15*9.5	56+1
C	 Ø8*30mm	34+1
D	 Ø6*30mm	24+1
E	 Ø4*12mm	60+2
F	 Ø4*32mm	30+1
G		6
H	 Ø8*20mm	12+1
I	 M4*22	18+1
J	 Ø5*48	5

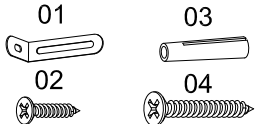ID	Description	QTY
k		2
L	 Ø25	56+1


Tool List

ID	Description	QTY
Z1		1


Required Tools (Not Included)

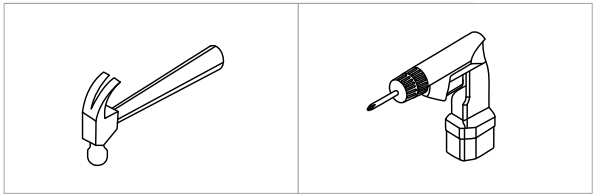


 **Wall mounting only**
These tools are not required for product assembly.

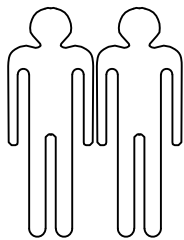


Multi-person installation

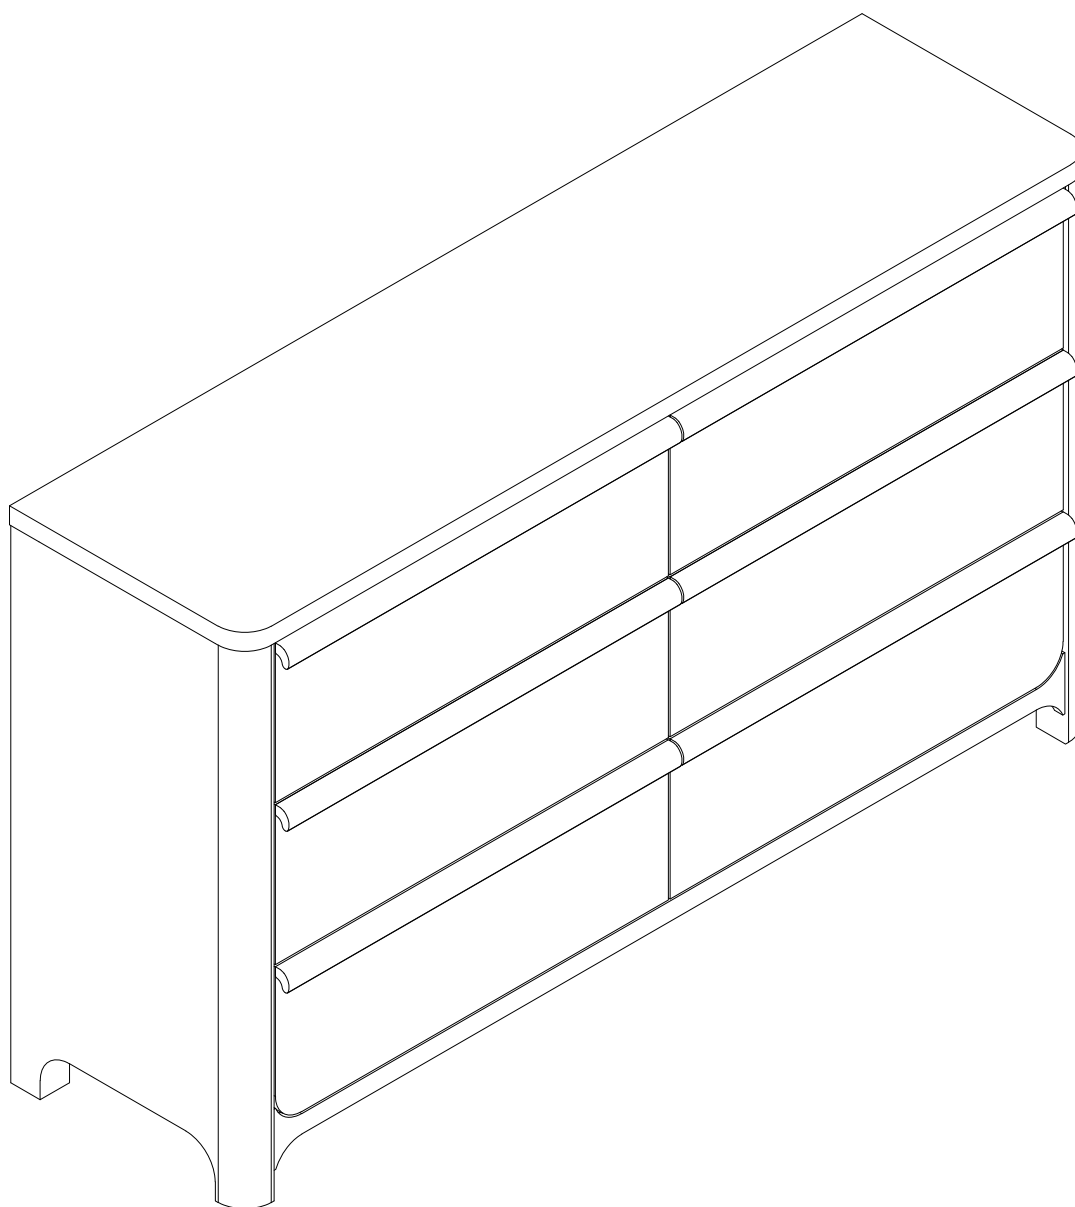


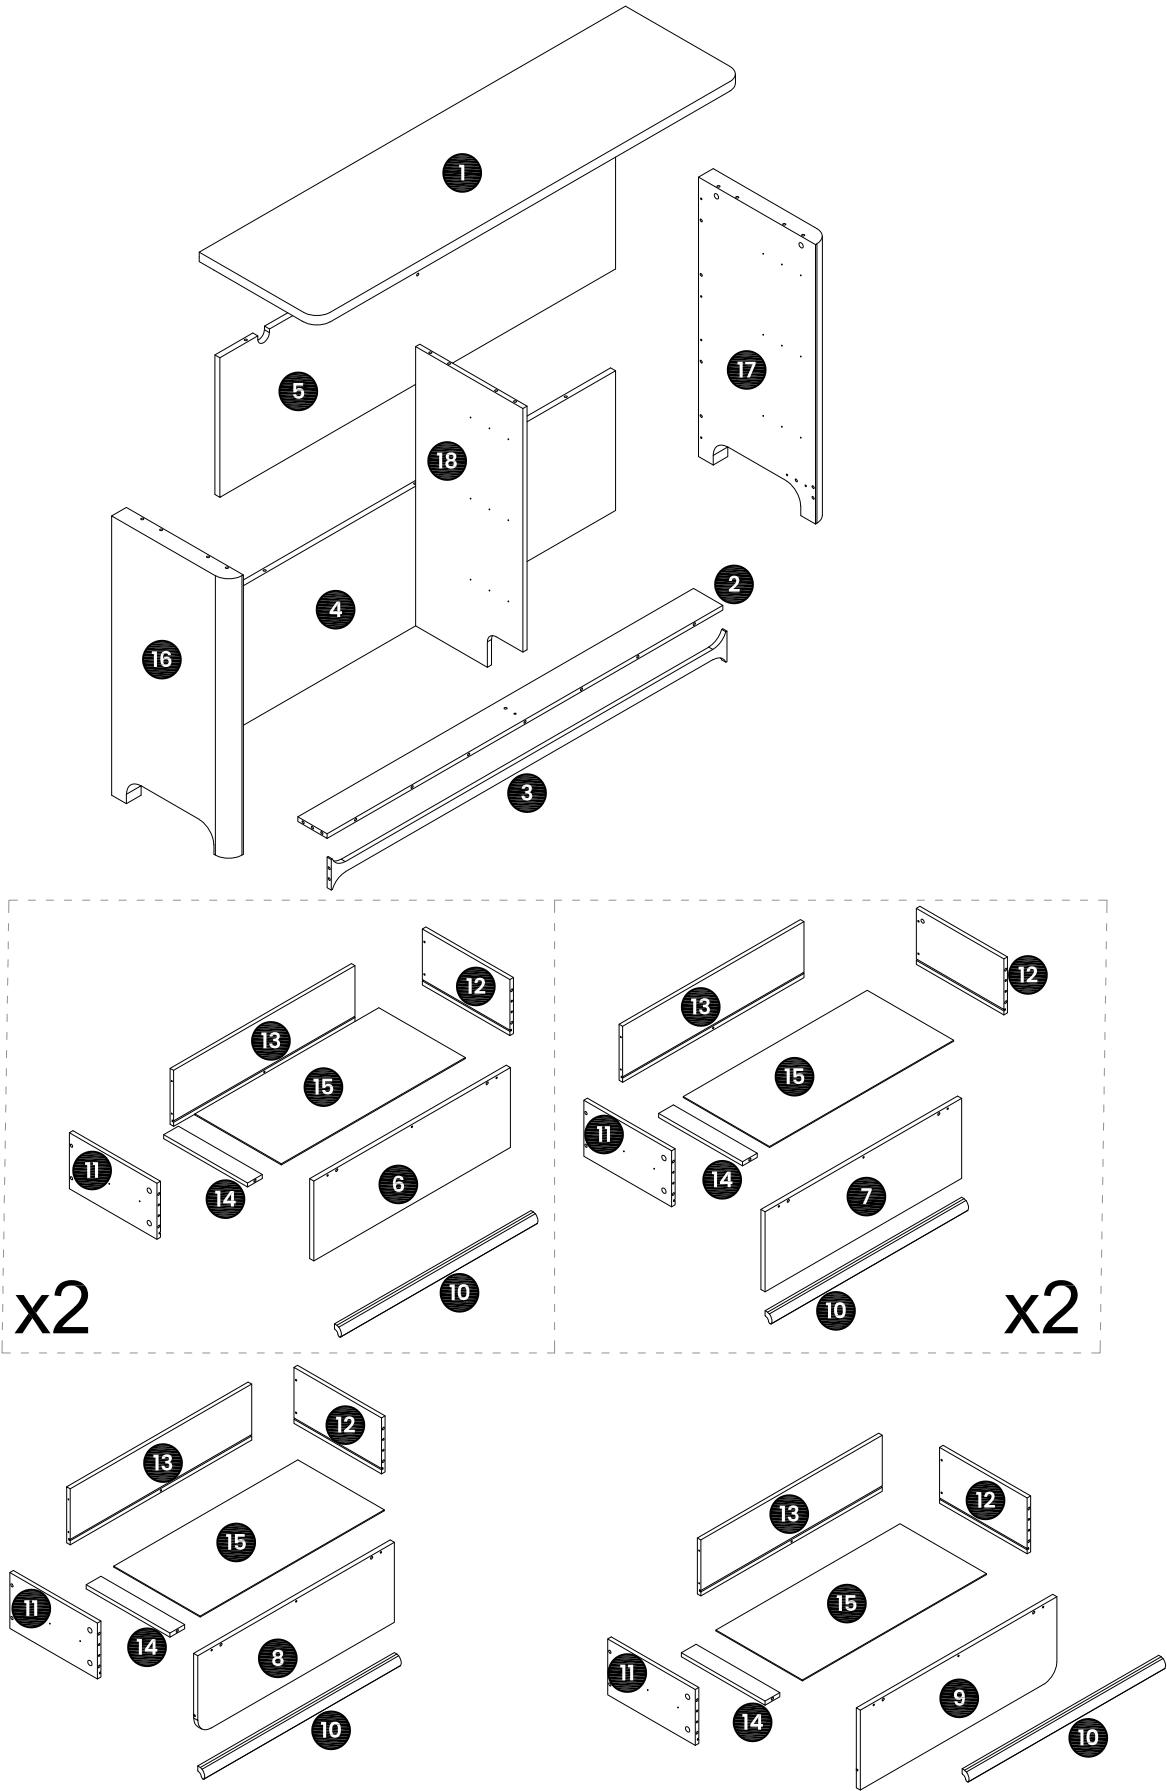




STEP 1

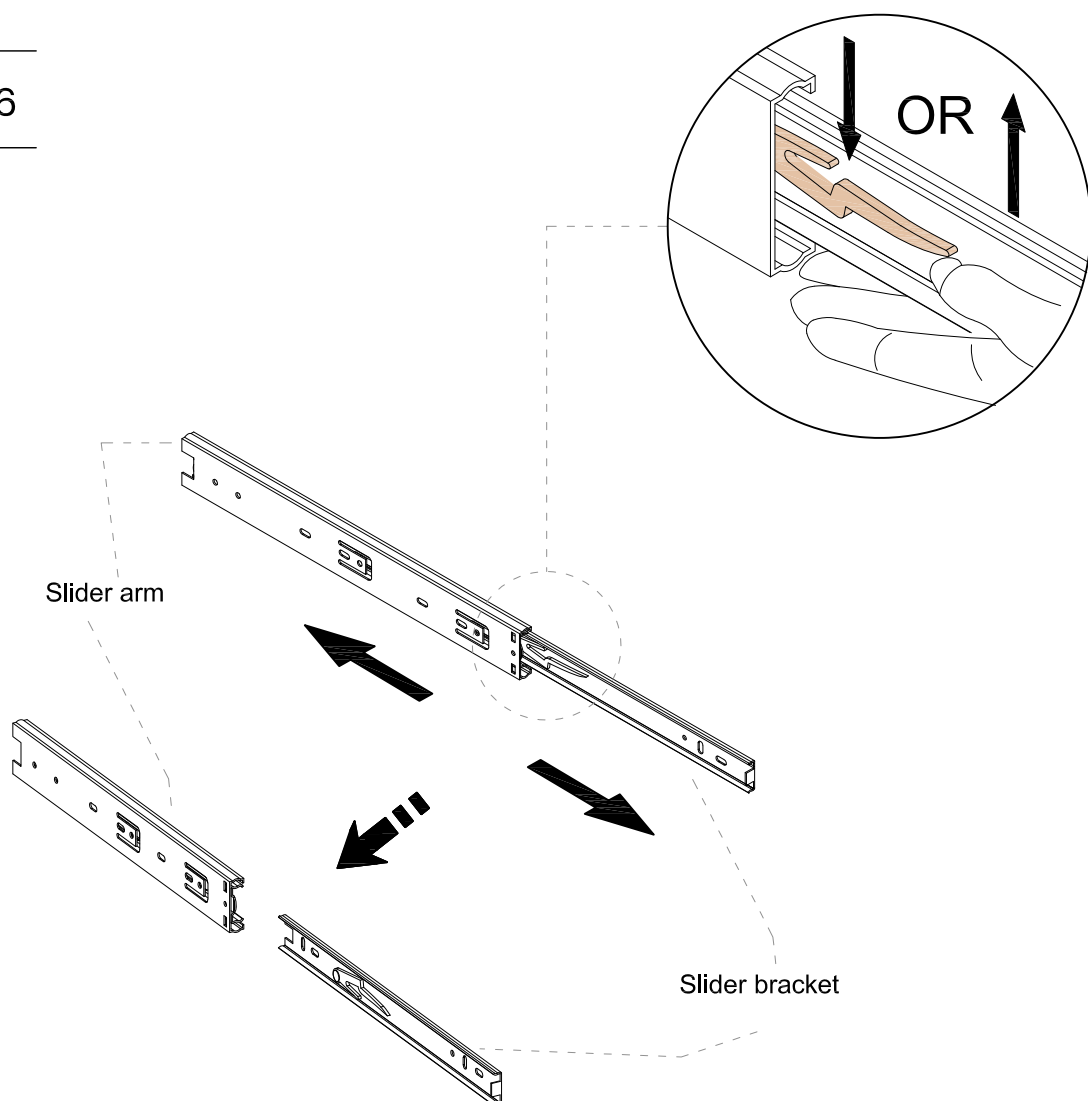


STEP 2

 **A** X12

 **E** X18


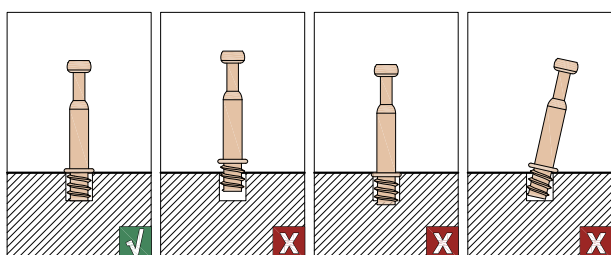
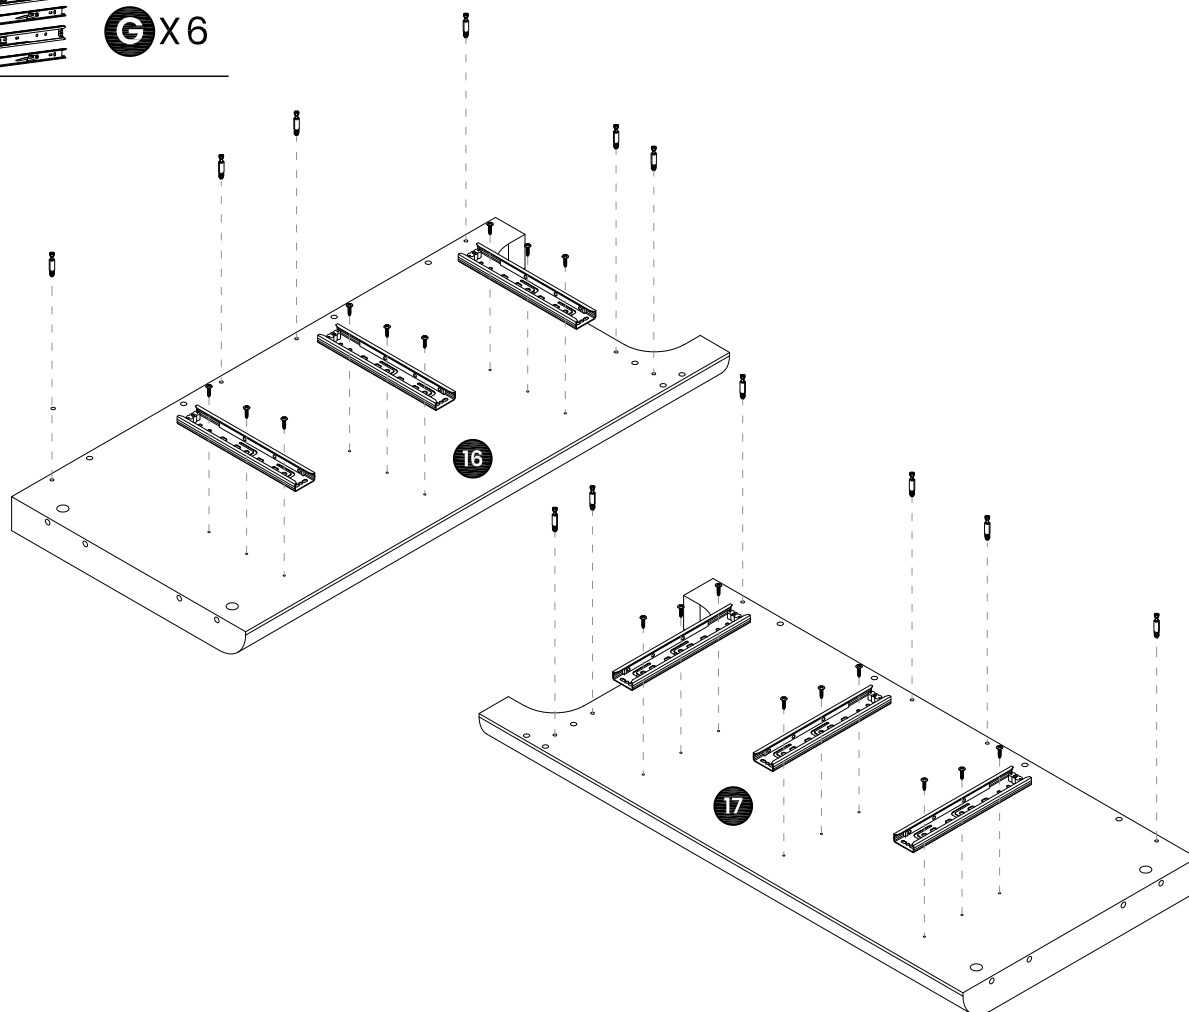
 **G** X6


Install the screw
correctly to secure
the screw.

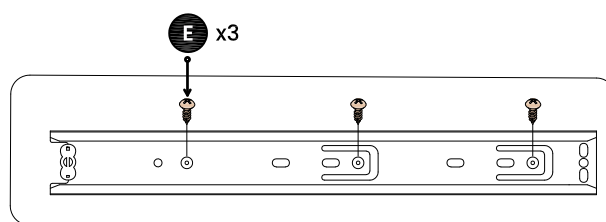



! Pay attention to the position of the screws

STEP 3

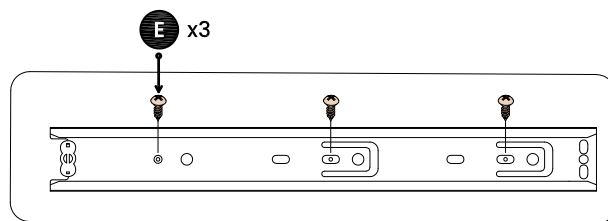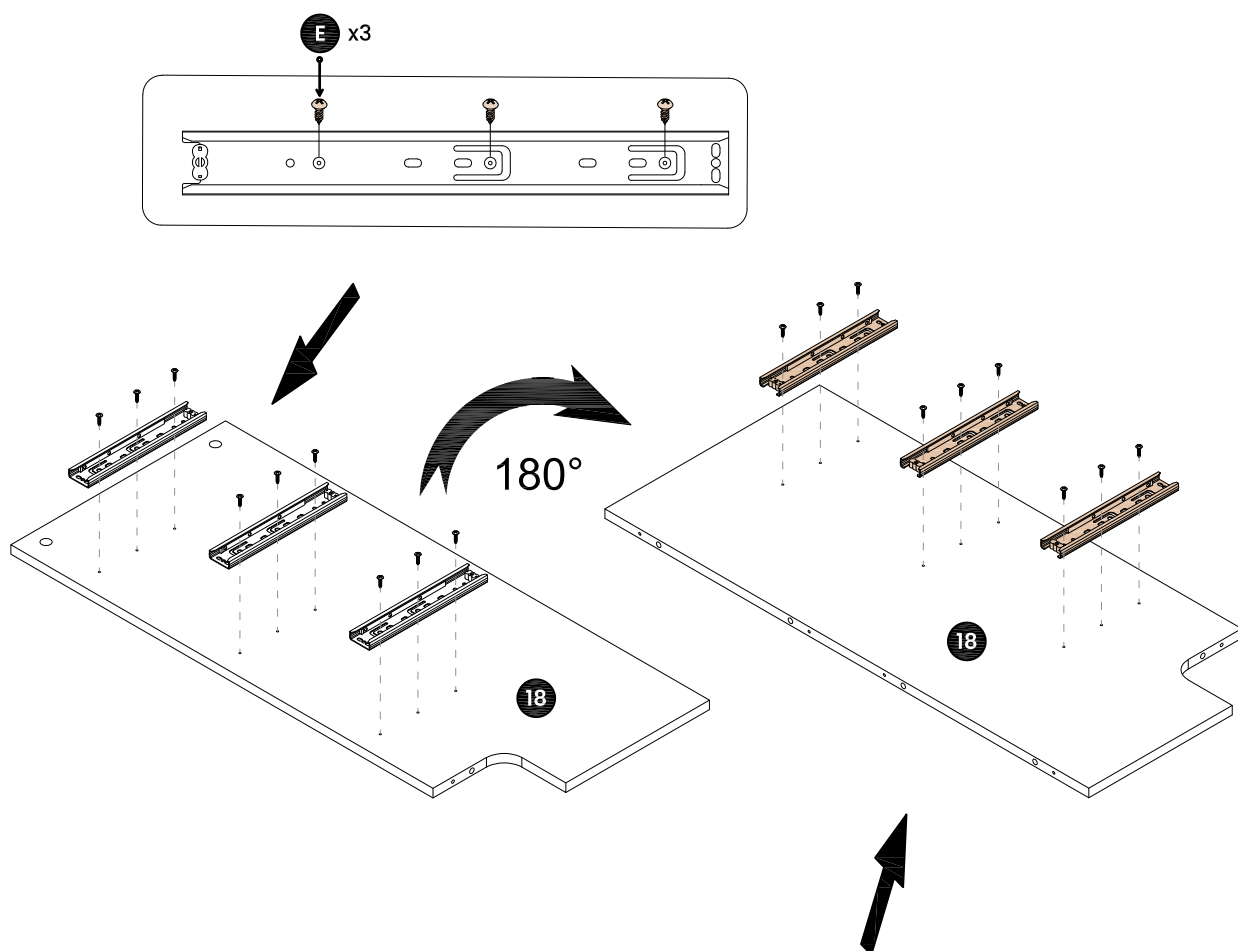**E** x18**G** x6


 Pay attention to the position of the screws

STEP 4


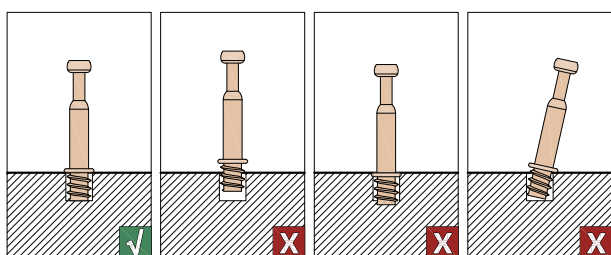
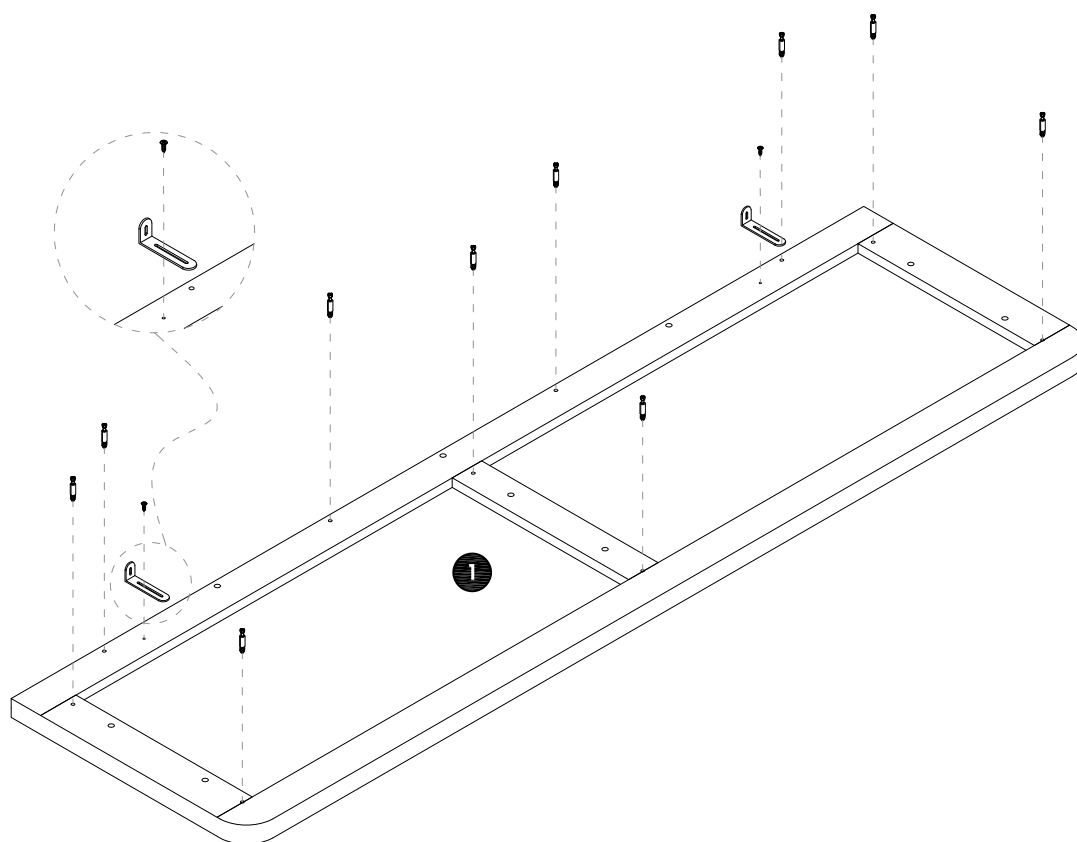


Install the screw
correctly to secure
the screw.

STEP 5**C** X3

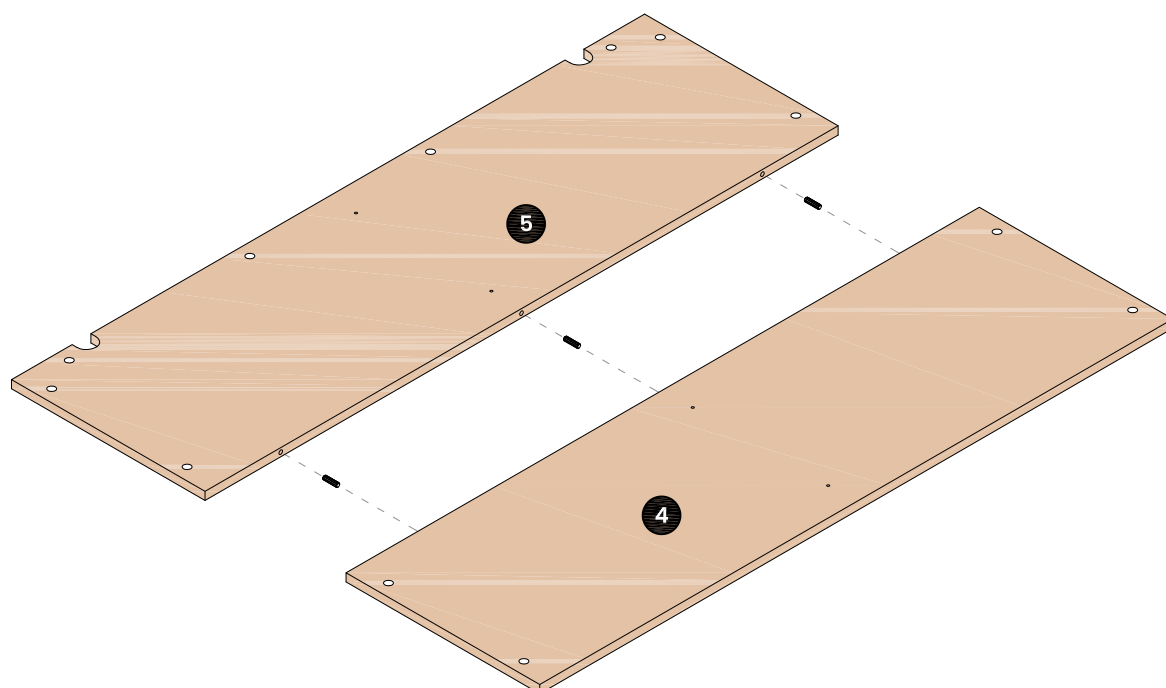


STEP 6

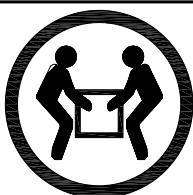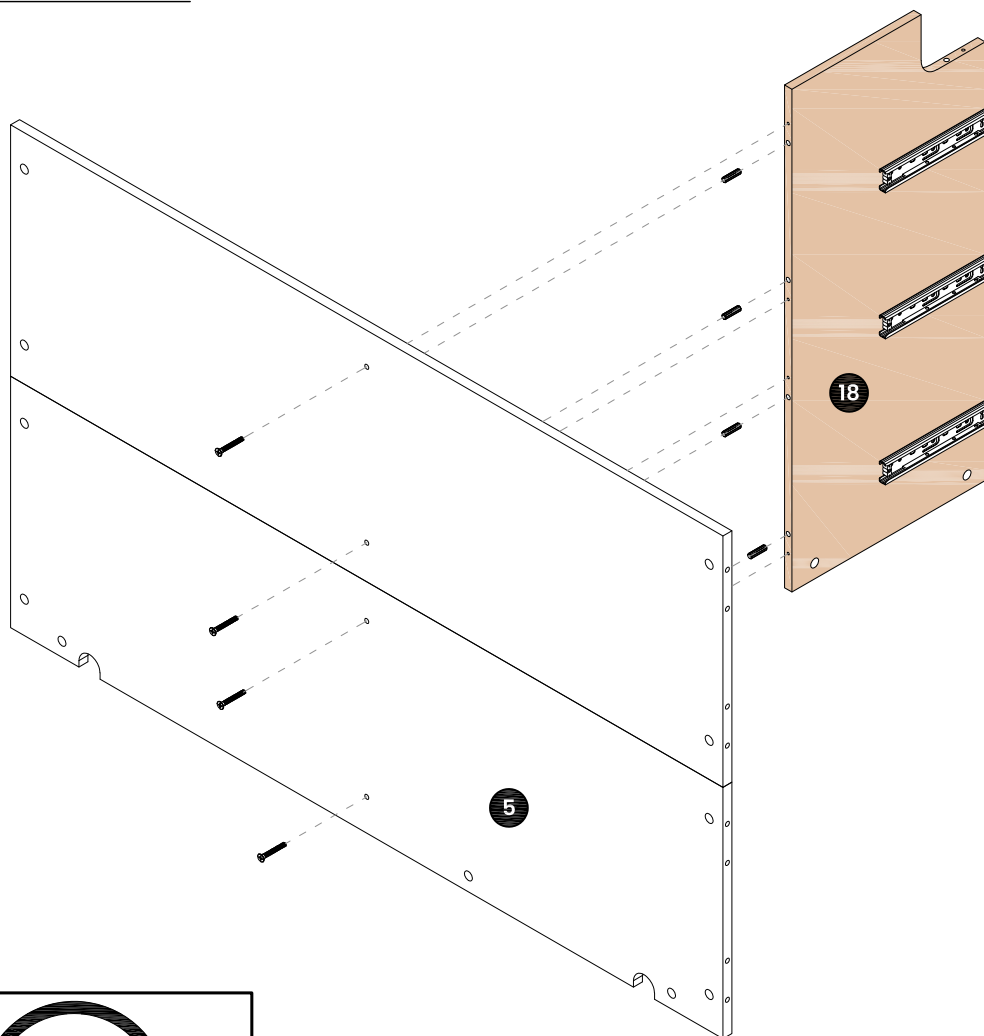



CAUTION: Heavy! You may need assistance with this step.

STEP 7


 **A** X4

 **B** X4



 **C** X3

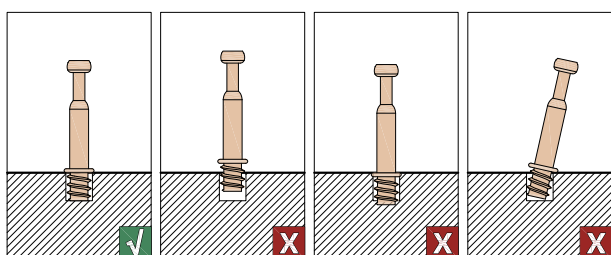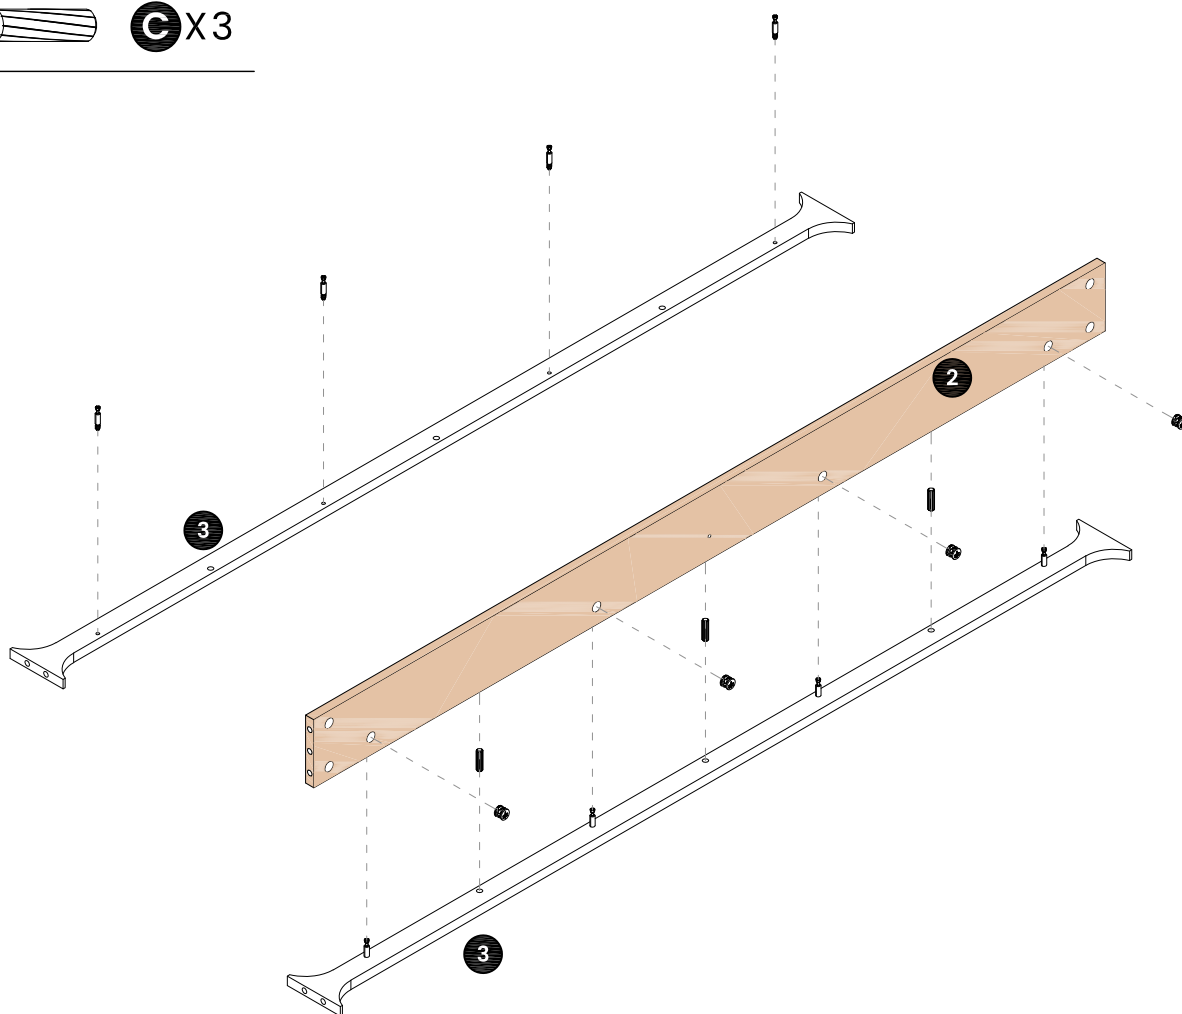

Install the screw
correctly to secure
the screw.

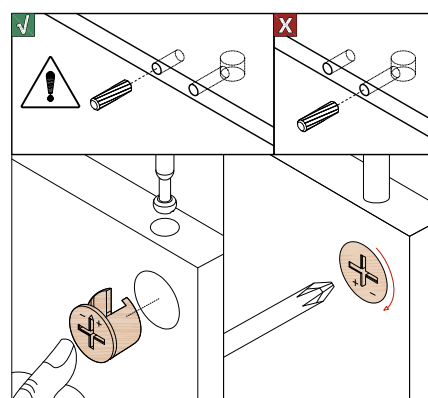

STEP 8

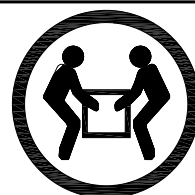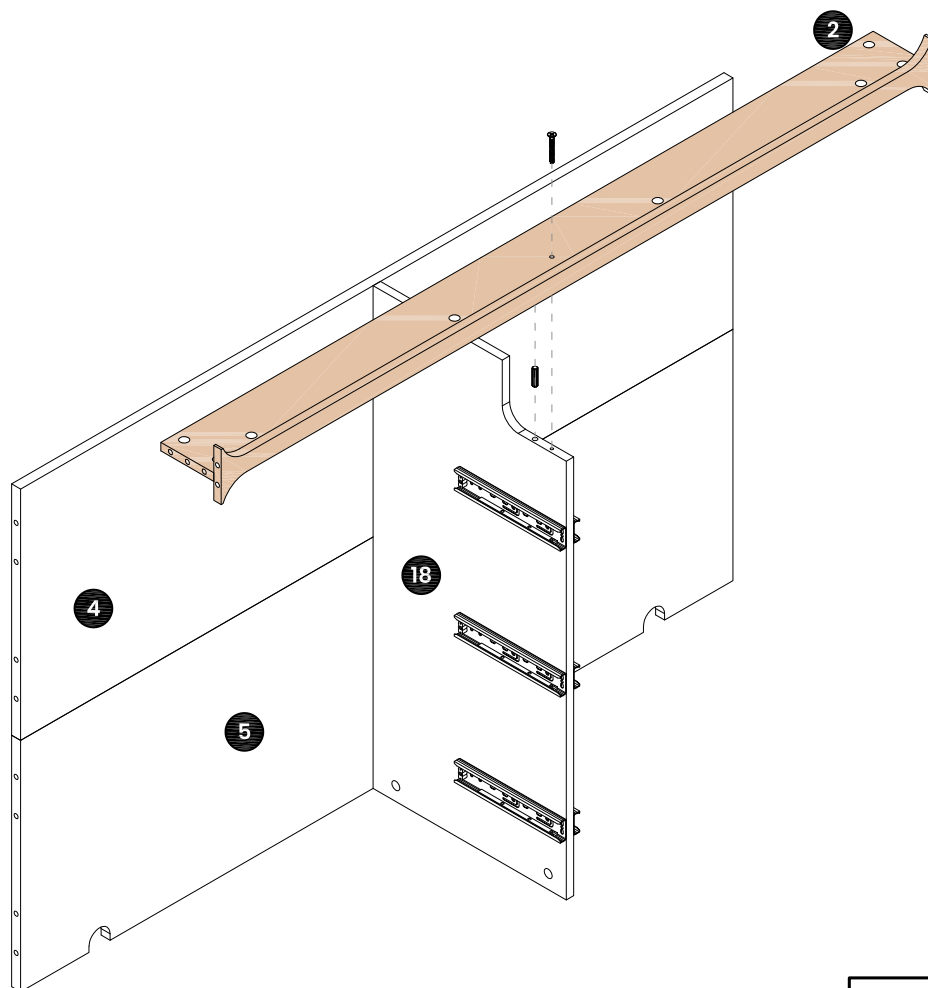

CAUTION: Heavy! You may need assistance with this step.



STEP 9




B X6



C X7

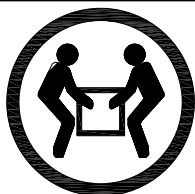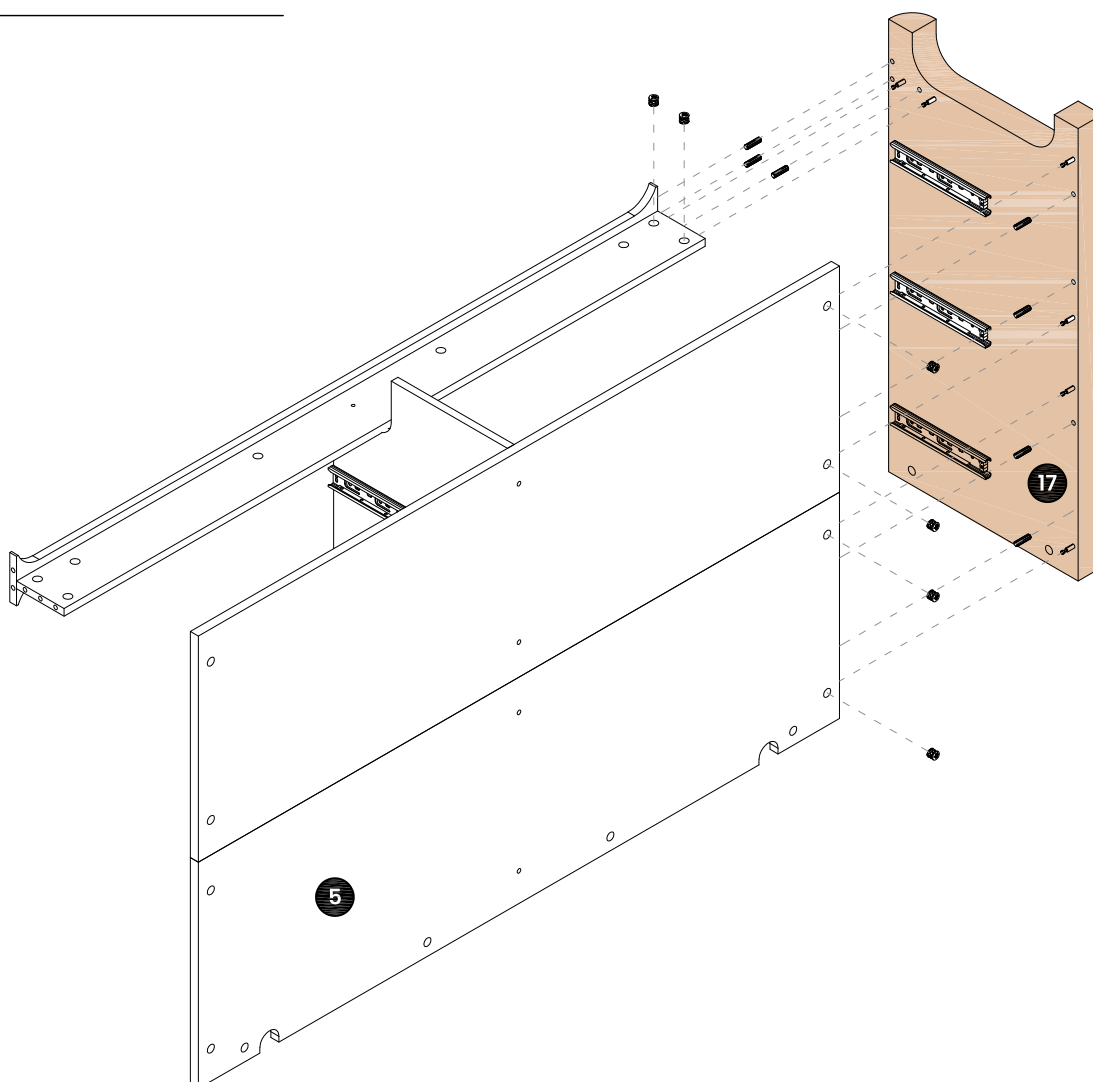


CAUTION: Heavy! You may need assistance with this step.

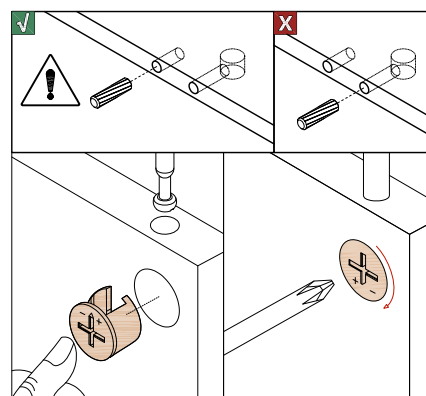


STEP 10

-  **B** X6
-  **C** X7

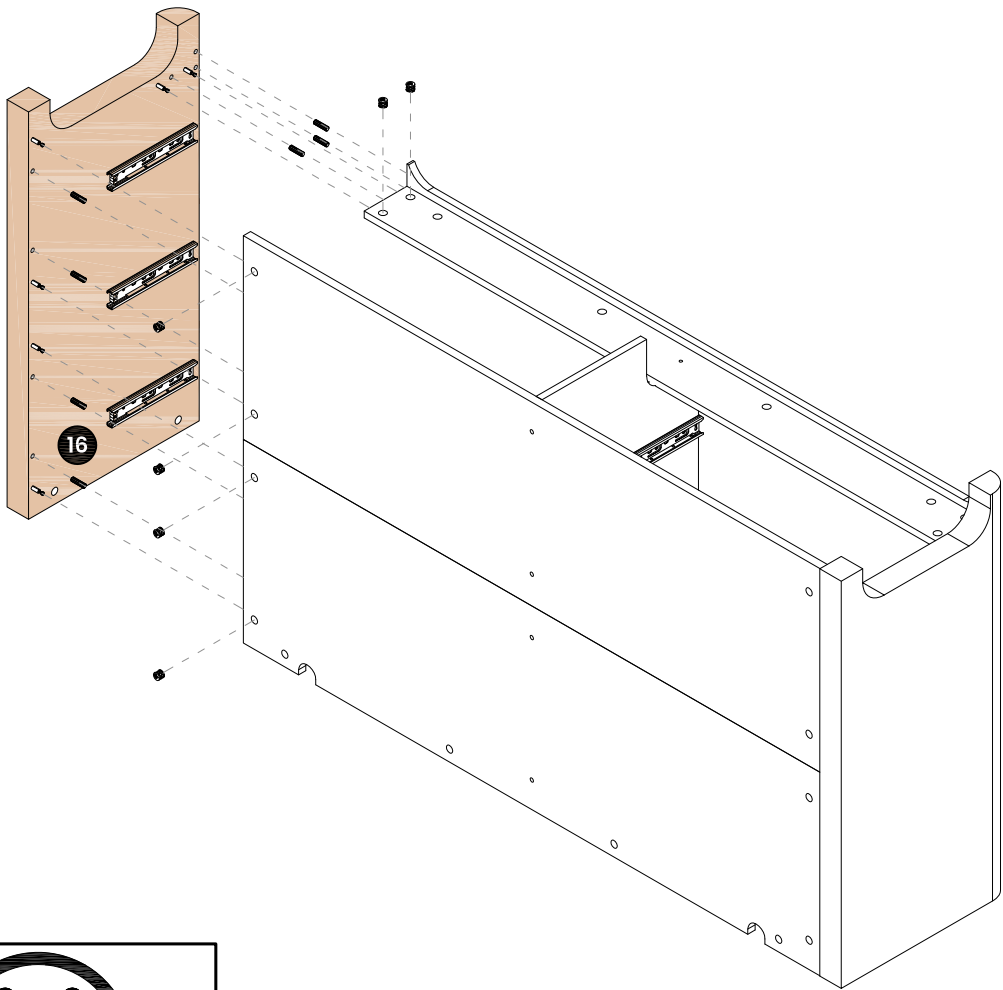



CAUTION:Heavy! You may need assistance with this step.

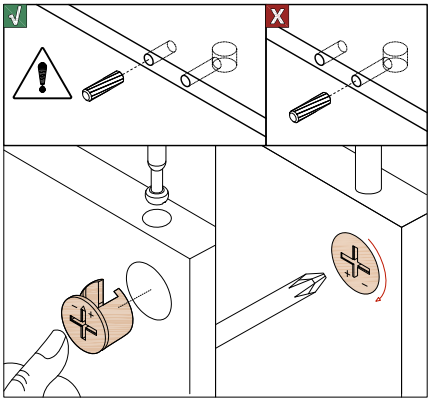



STEP 11




B X10



C X9

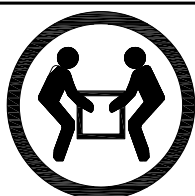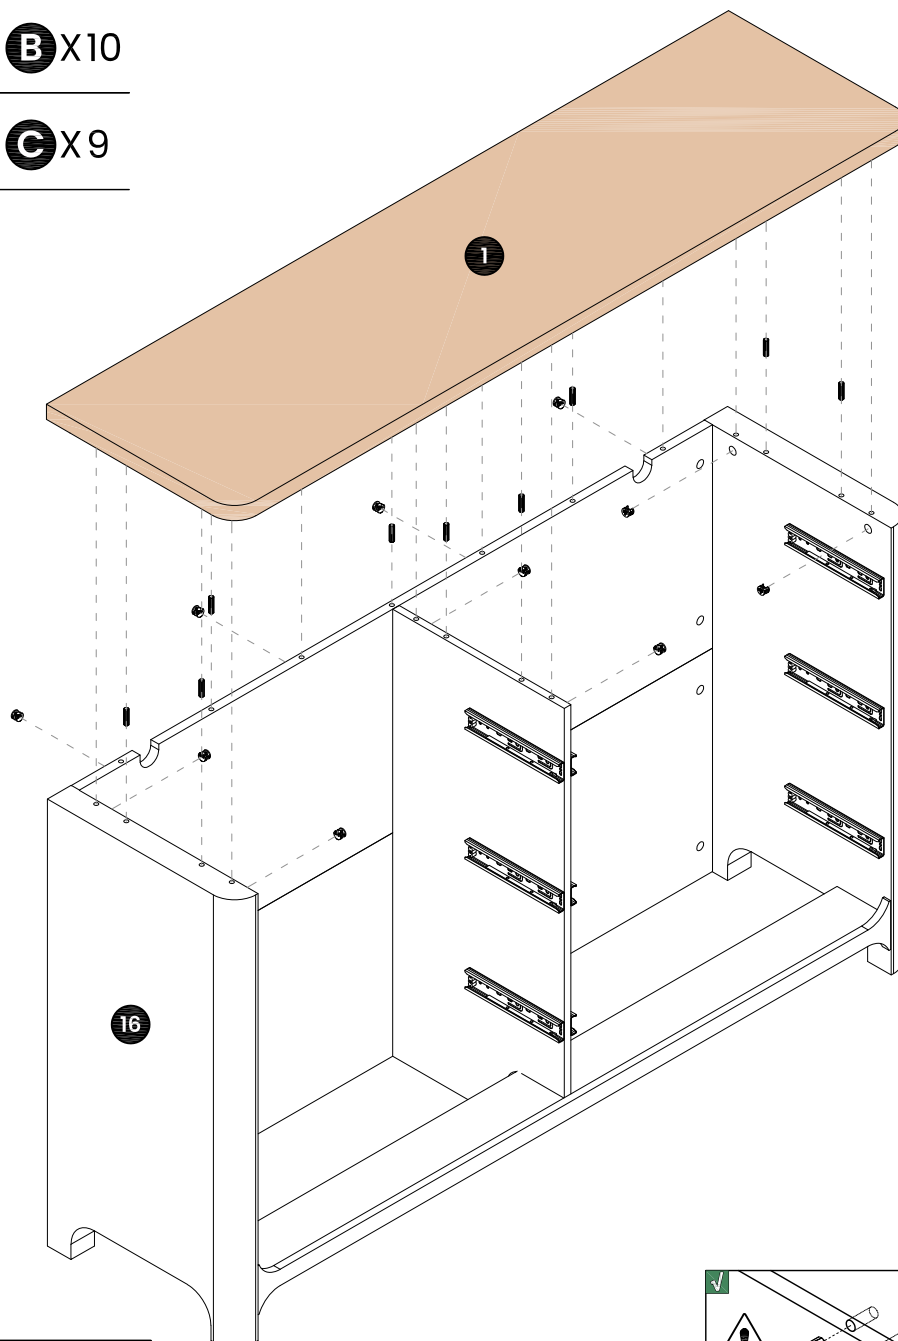


CAUTION: Heavy! You may need assistance with this step.

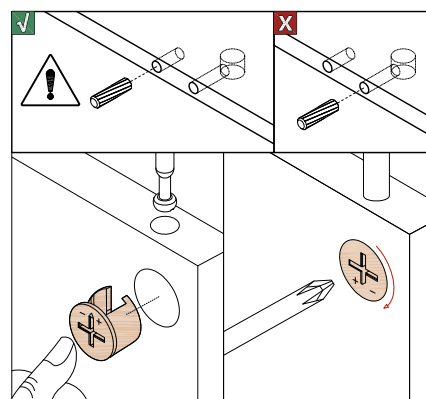


STEP 12

- **E** X24
- **G** X6


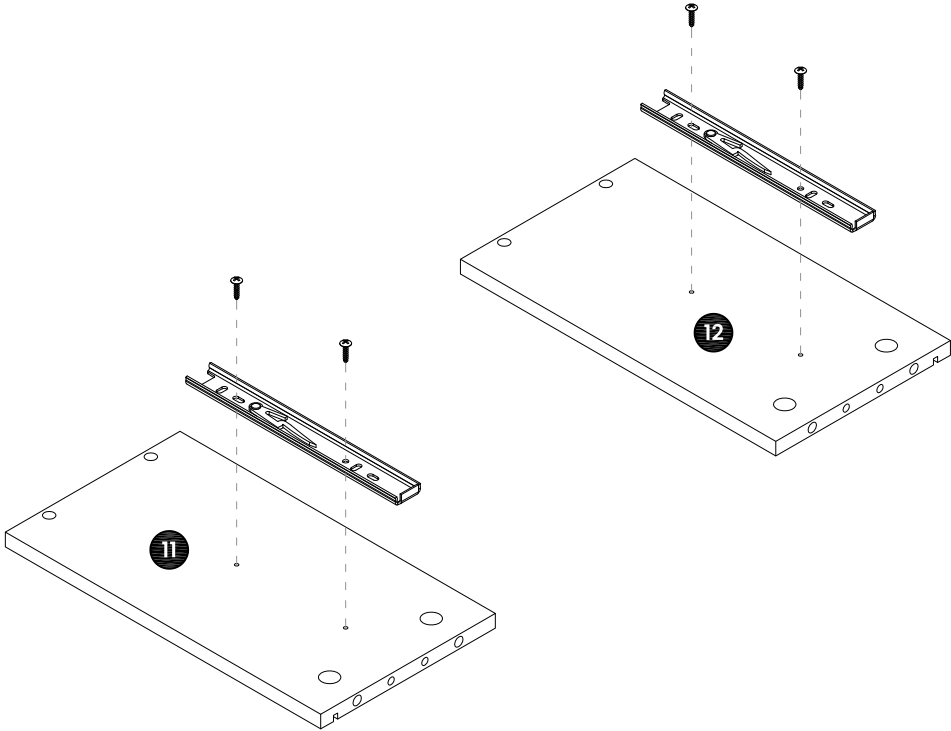


x6

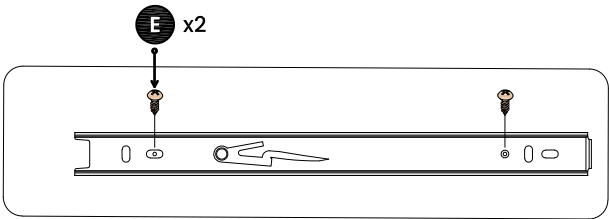



⚠ Pay attention to the position of the screws

STEP 13

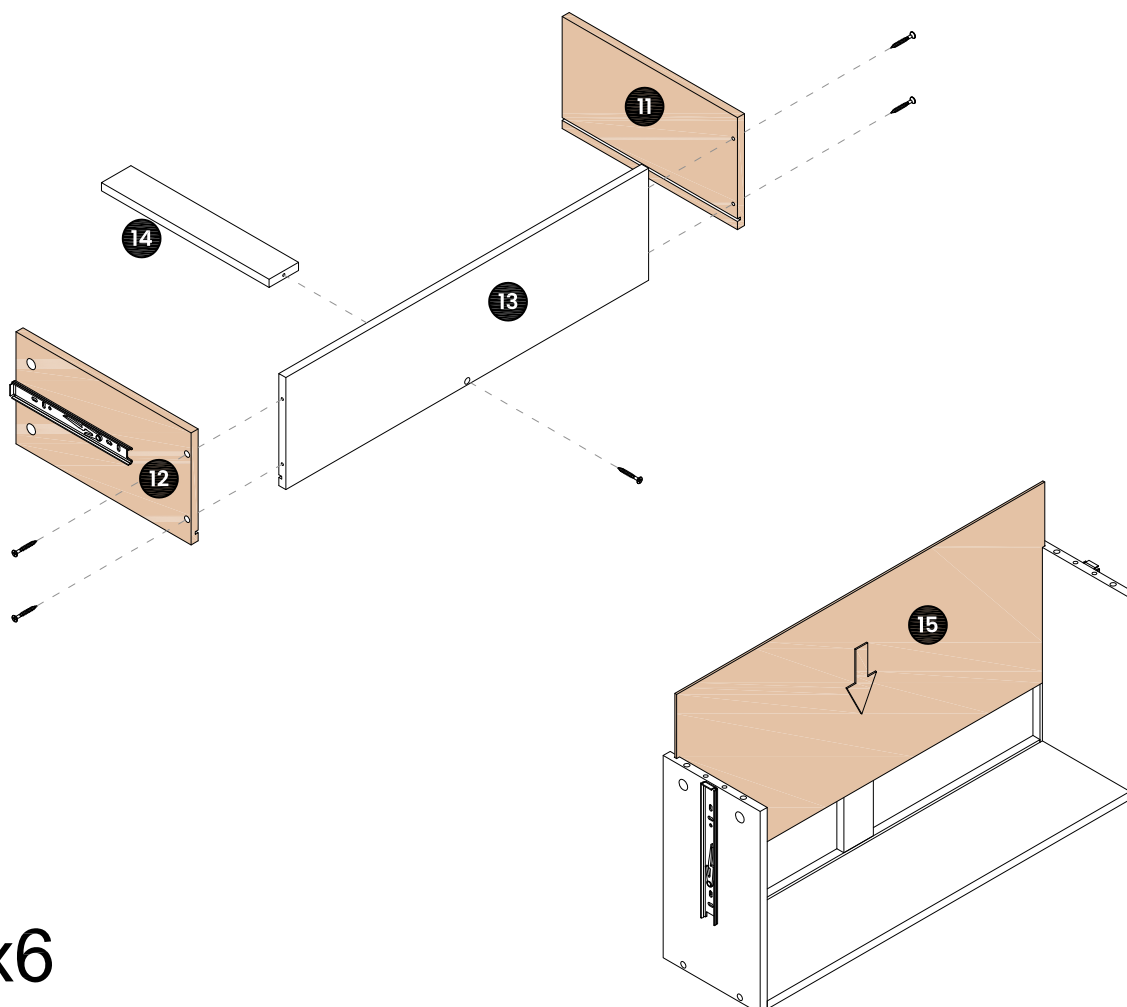


x6

STEP 14


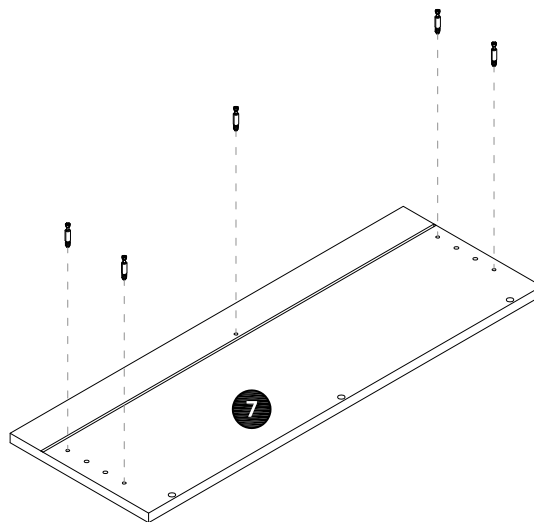
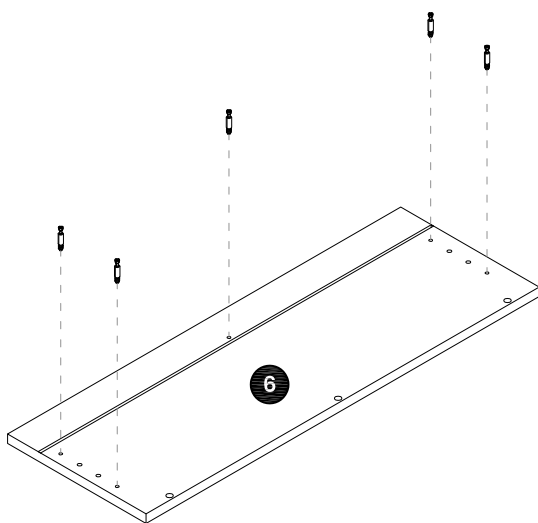


x2

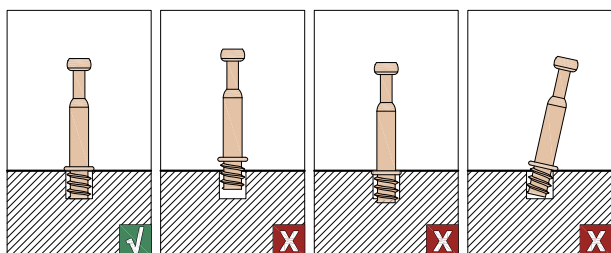

Install the screw
correctly to secure
the screw.

STEP 15

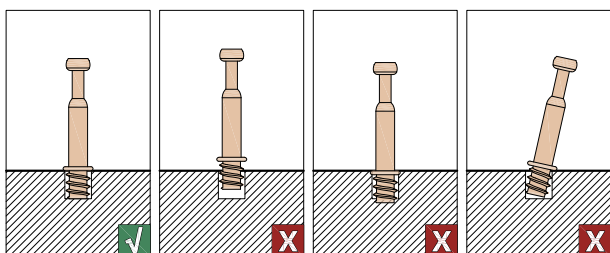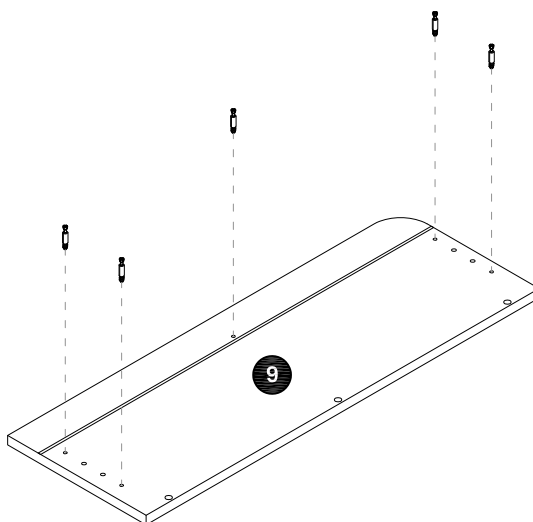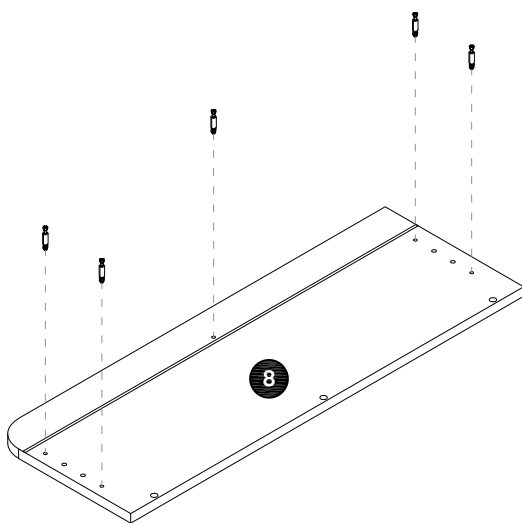

Install the screw
correctly to secure
the screw.

STEP 16



B X10





D X8



H X4



I X6

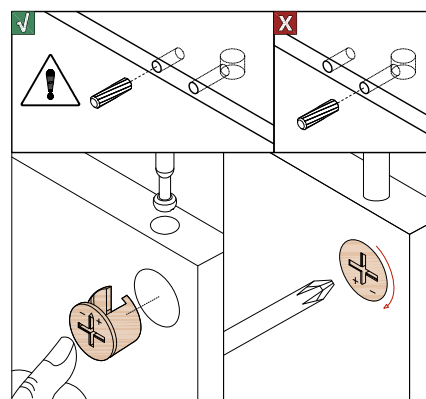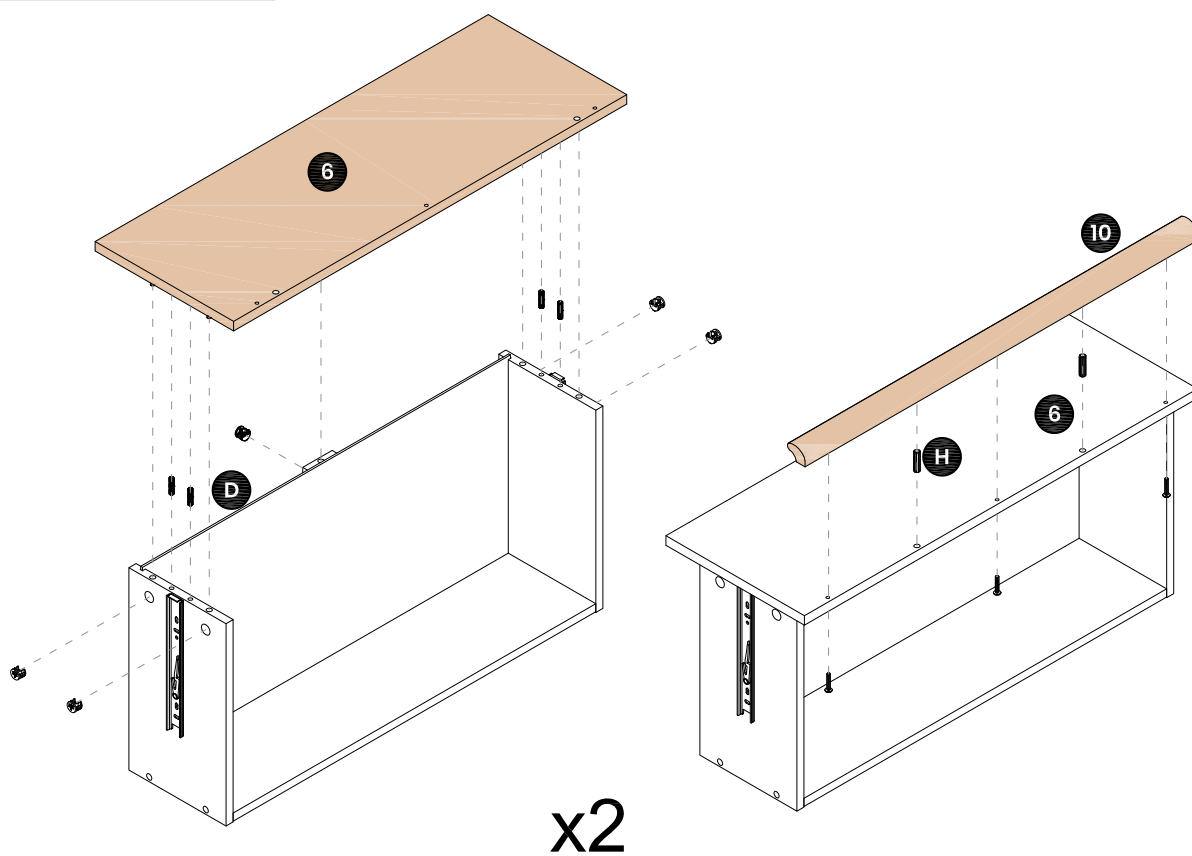

STEP 17



B X10





D X8



H X4



I X6

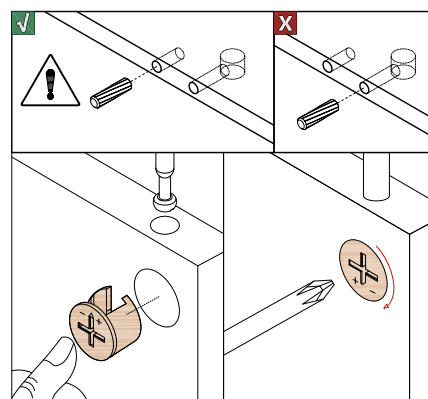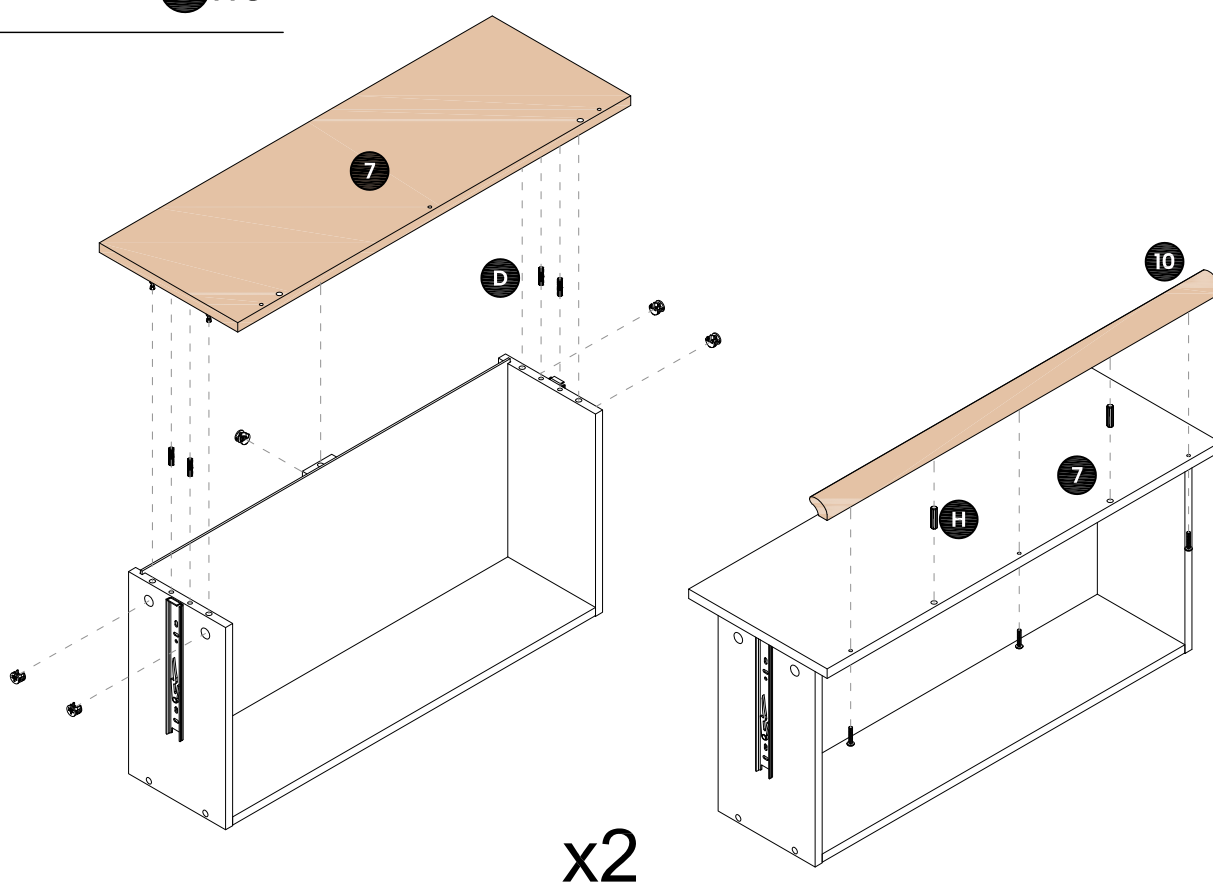

STEP 18



B X5






D X4



H X2



I X3

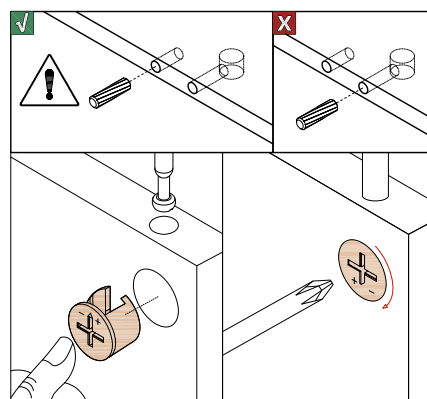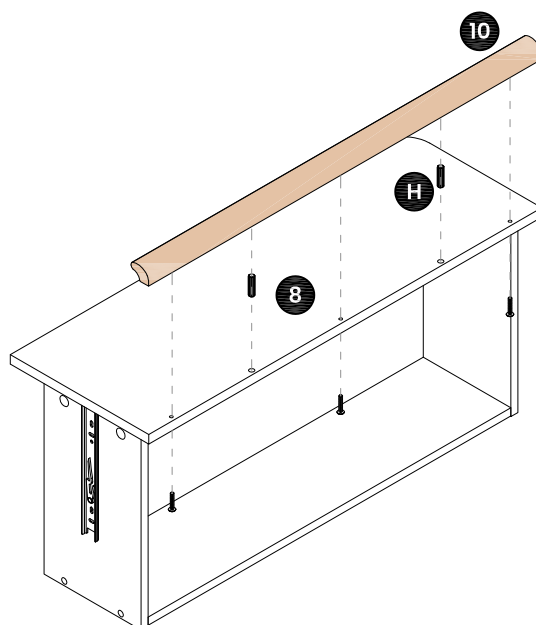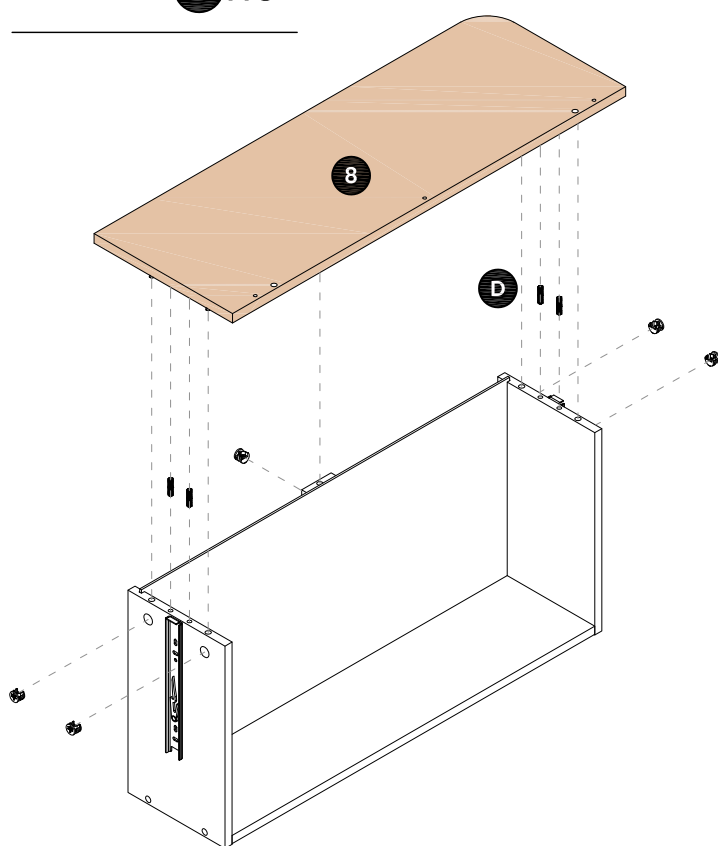

STEP 19



B X5






D X4



H X2





I X3

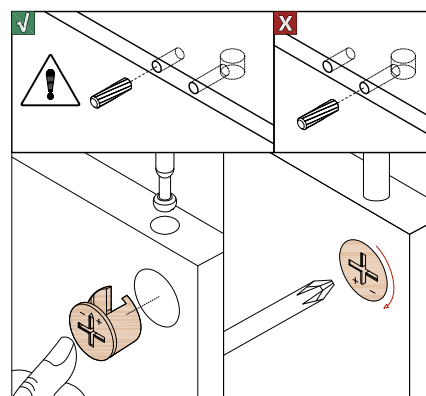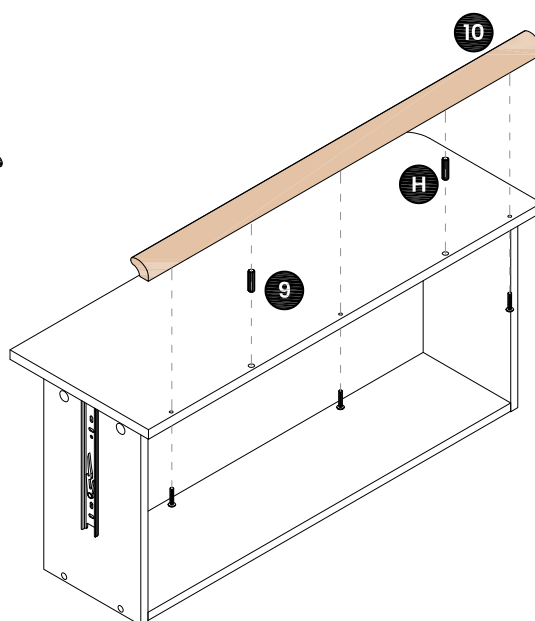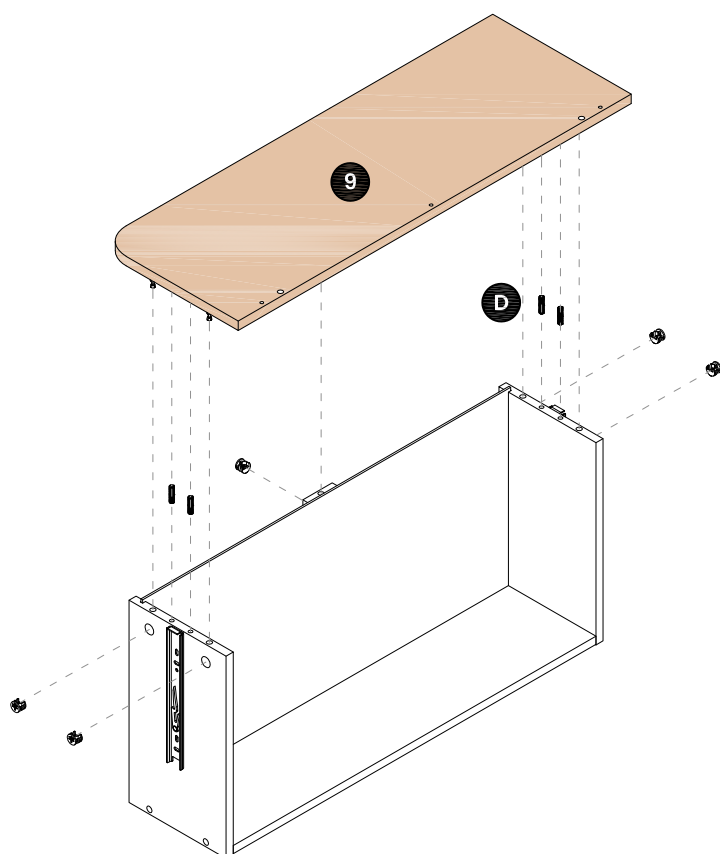

STEP 20




L-type anti-tip bracket

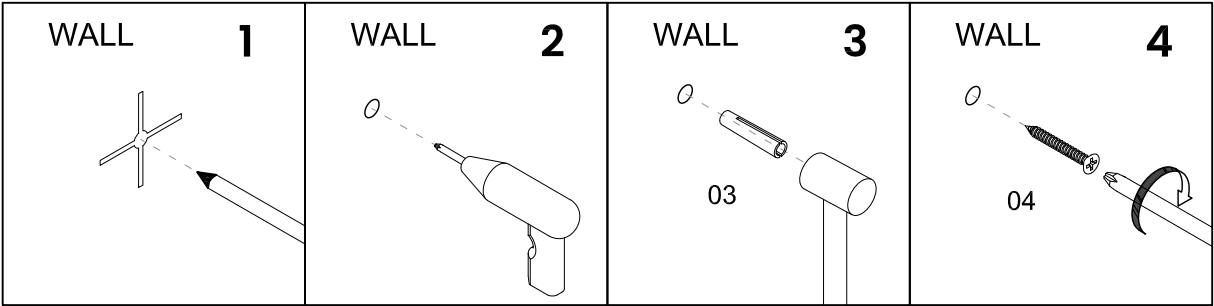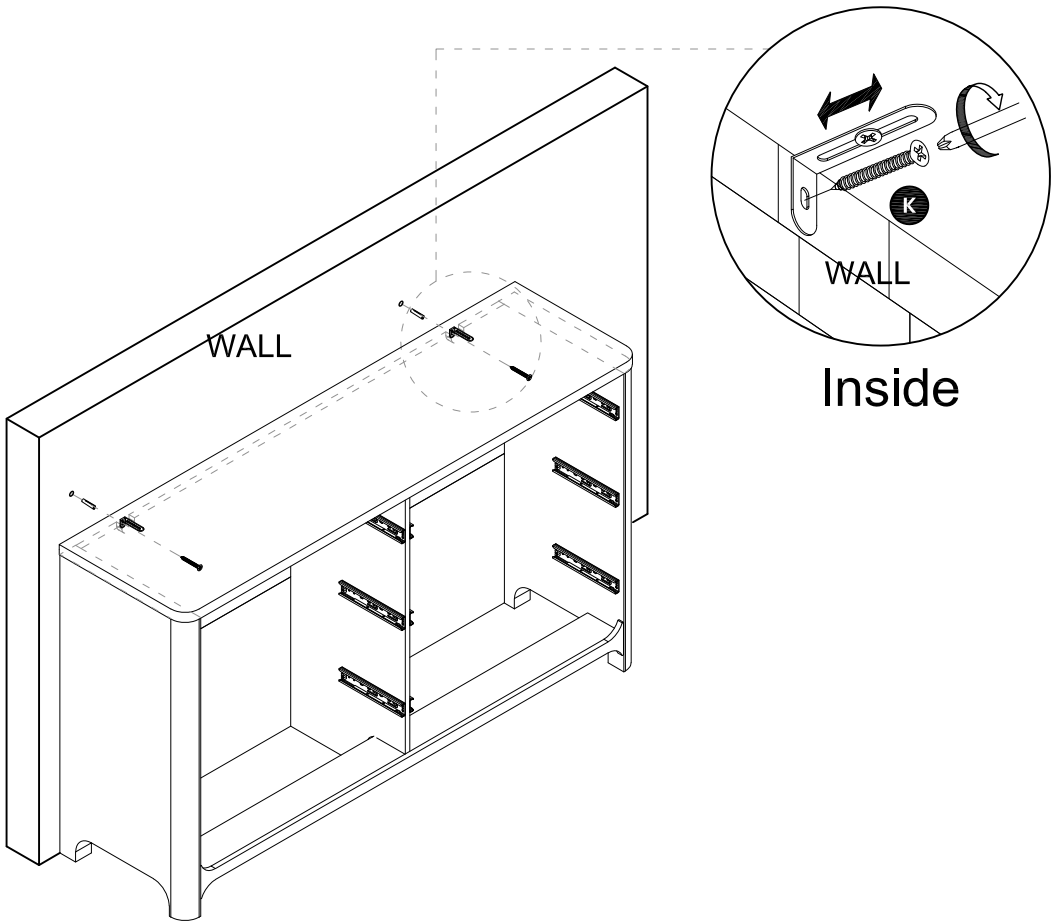

STEP 21



L X20

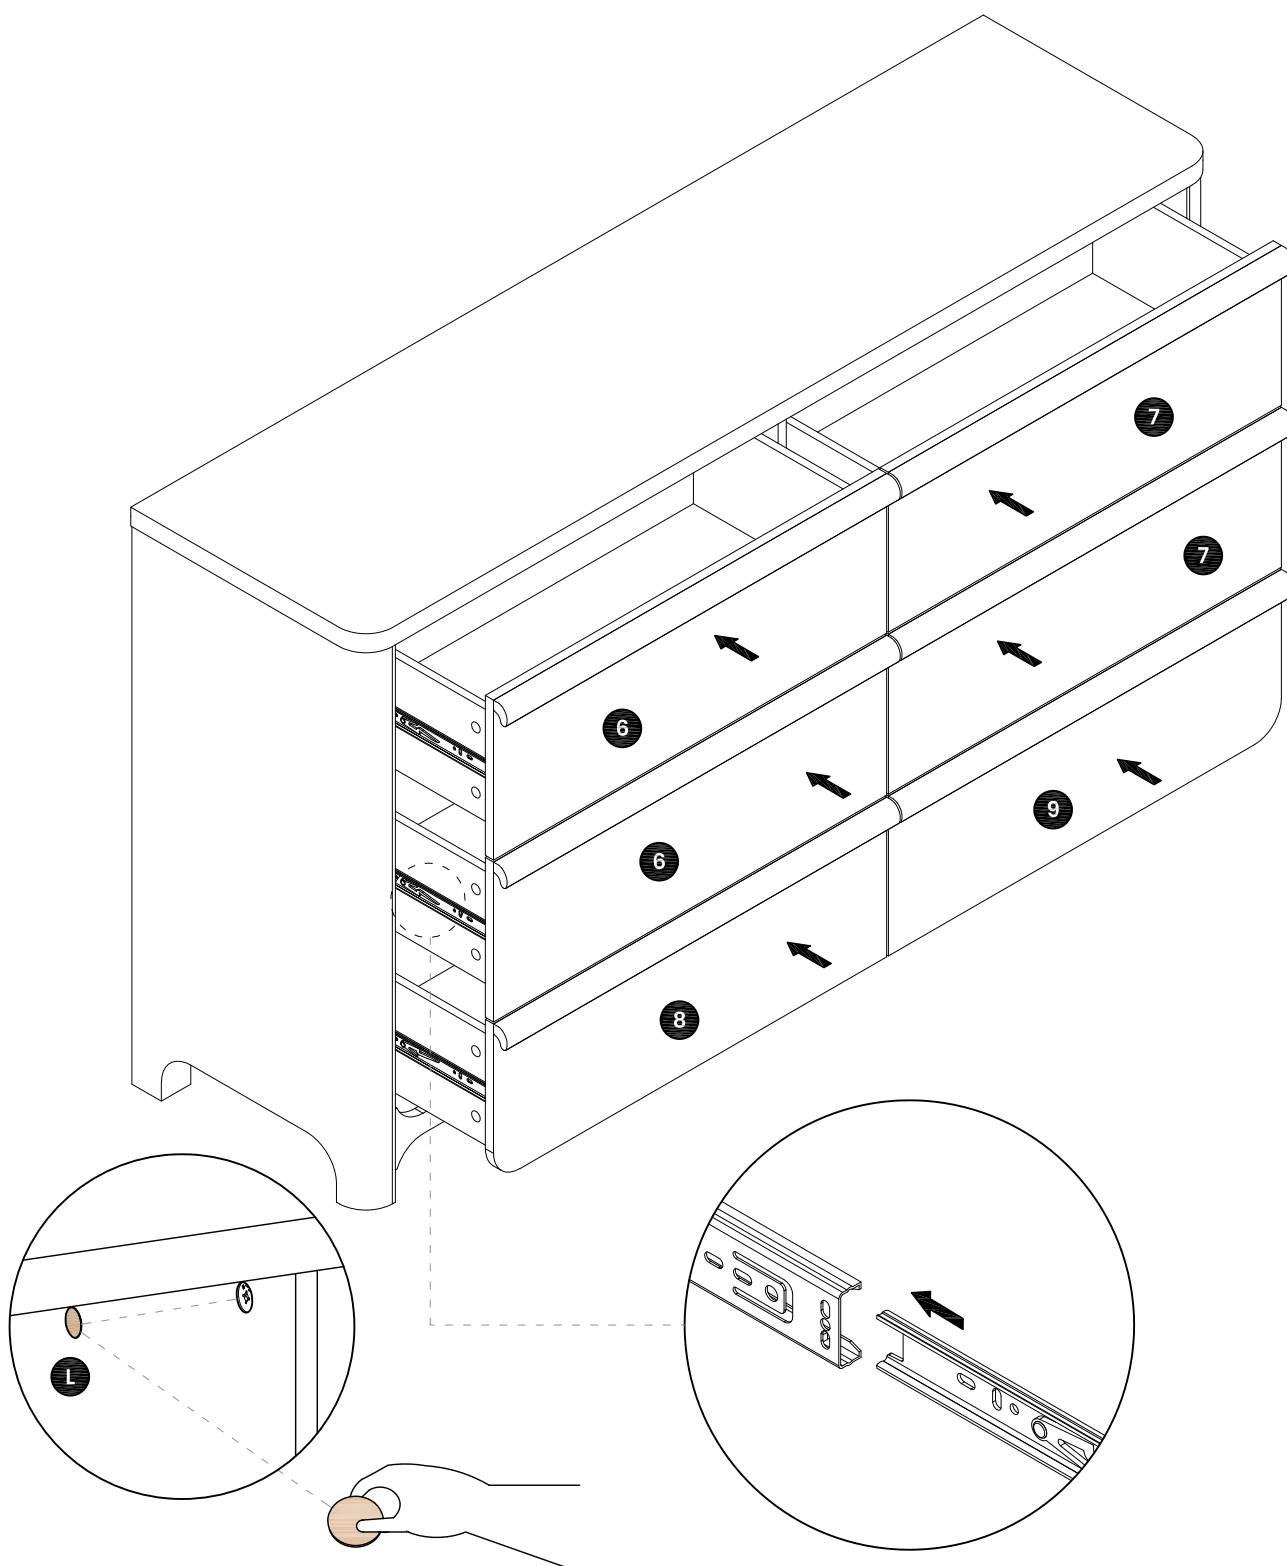

**Nhuan My Furniture Company
Limited**

**Lot No 31, Map No 14, Hamlet 4, Tan Uyen
Ward, Ho Chi Minh City,**

Viet Nam Date of manufacture: 2026/07

Made in VIET NAM



After-Sales Service Hotline: (800) 661-5928
Support Hours: Mon-Fri, 9:00 am-5:00 pm PST/PDT