

ASSEMBLY INSTRUCTIONS

MODEL:B6593 HUGO QUEEN HEADBOARD GRAY & NATURAL / B6593 HUGO KING HEADBOARD GRAY & NATURAL

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:

(BOX 1) BOX OF HEADBOARD			
ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1
B		HB LEG POST (L/R)	2
C		BOTTOM RAIL	1


(BOX 1) BOX OF HEADBOARD (HARDWARE LIST)				
ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
D		ALLEN KEY M5	5 X 35 X 120MM	1
E		ALLEN KEY M4	4 X 35 X 55MM	1
F		CONNECTION BOLT (JCBC M8x35mm) W/SPRING WASHER & WASHER MEDIUM		4
G		CONNECTION BOLT (JCBC M6x35mm) W/SPRING WASHER & WASHER MEDIUM		2

STEP 1 :ATTACH AND TIGHTEN THE LEG POST (L/R) (B) TO THE HEADBOARD (A).INSERT CONNECTION BOLT (F) WITH WASHER TO AFFIX.

STEP 2 :AFFIX THE BOTTOM RAIL (C) TO THE HEADBOARD LEG (B) USING CONNECTION BOLT (G) WITH WASHER.

NOTE:MUST TIGHTEN SCREW PERIODICALLY.WITH USE SCREW WILL BECOME LOOSE CHECK TIGHT OF ALL SCREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTION
AFTER ASSEMBLED,CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

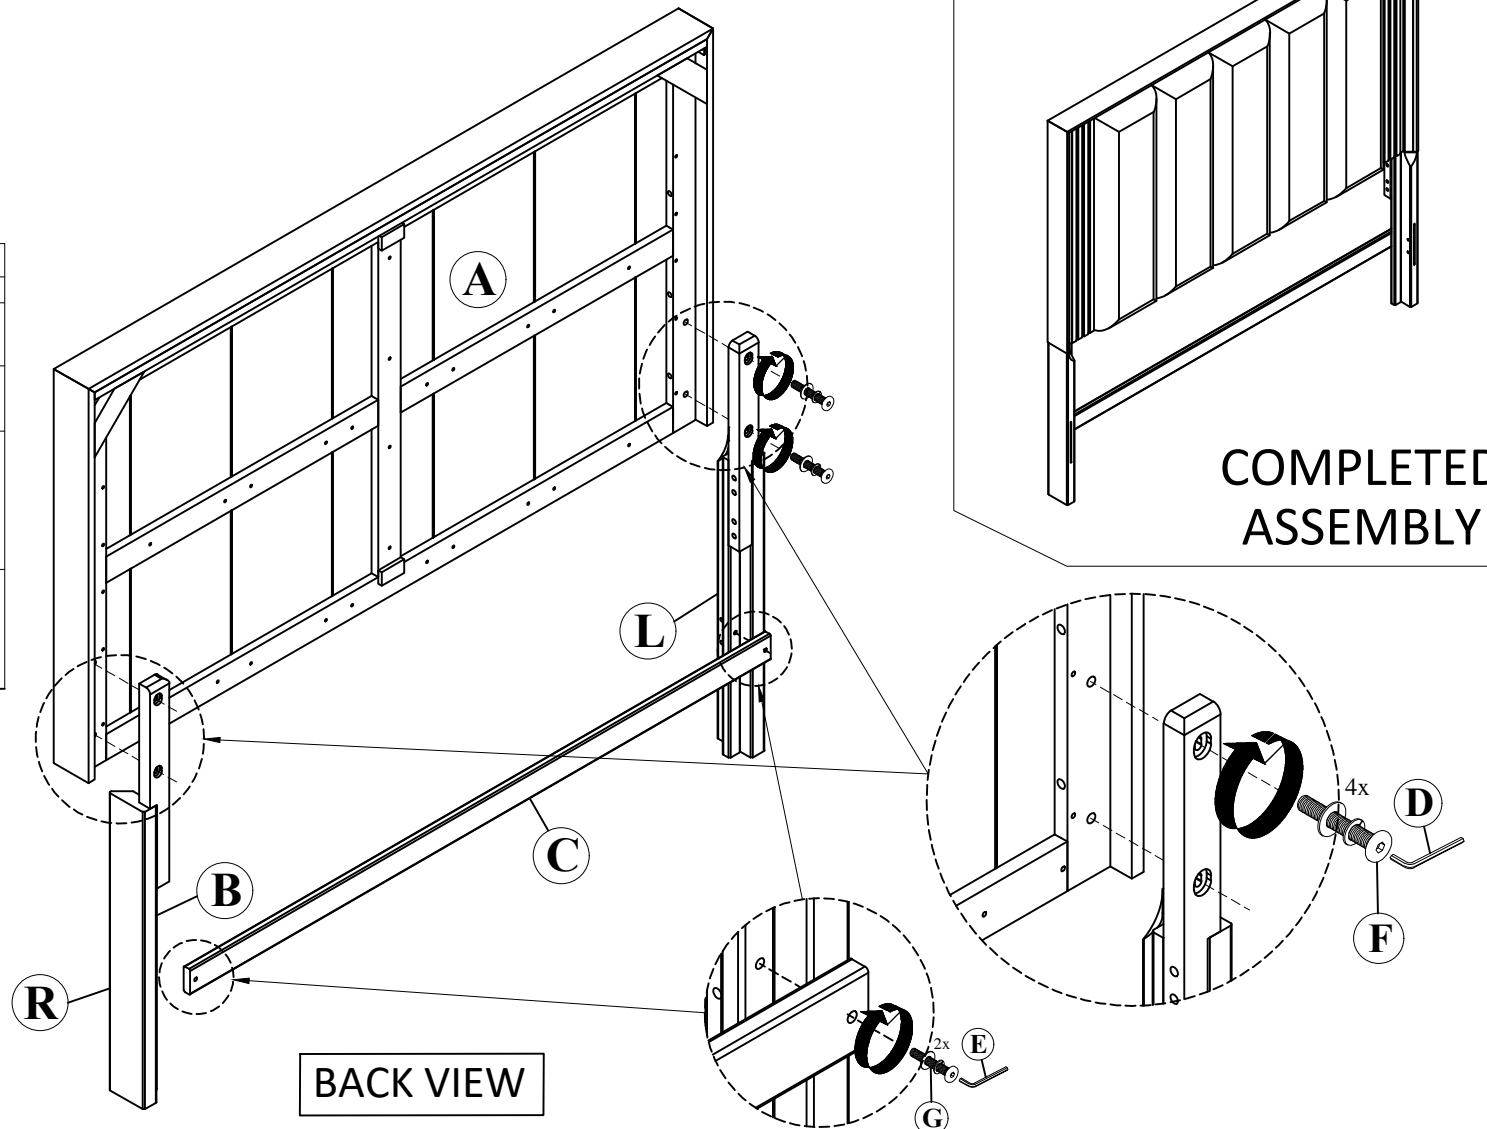

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA


ASSEMBLY INSTRUCTIONS

MODEL: B6593 HUGO KING STORAGE FOOTBOARD GRAY & NATURAL /
B6593 HUGO QUEEN & KING SIDE RAILS GRAY & NATURAL

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:


Affix the Wooden Slat (F) to the Wooden Panel (E) using the C/B screw (L) and a screwdriver.

STEP 1

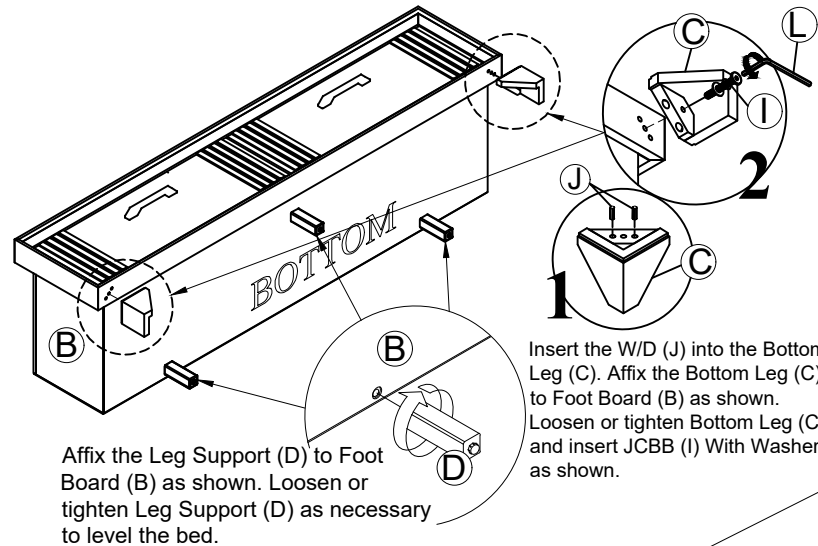


Affix the Leg Support (D) to Foot Board (B) as shown. Loosen or tighten Leg Support (D) as necessary to level the bed.

STEP 4

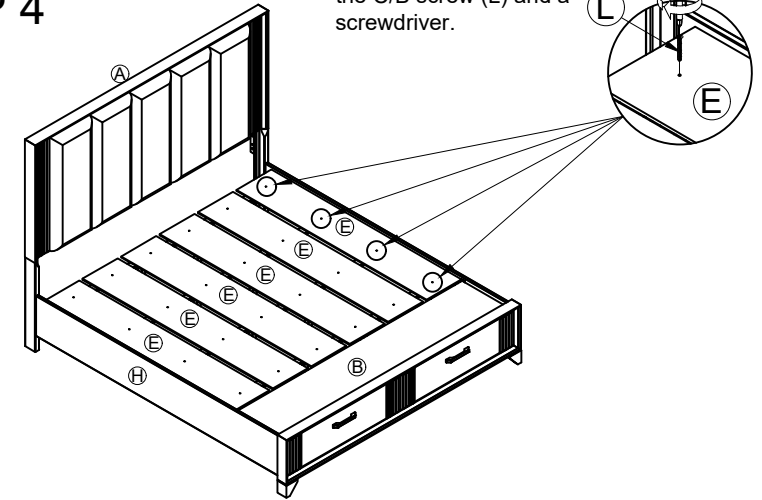

STEP 3

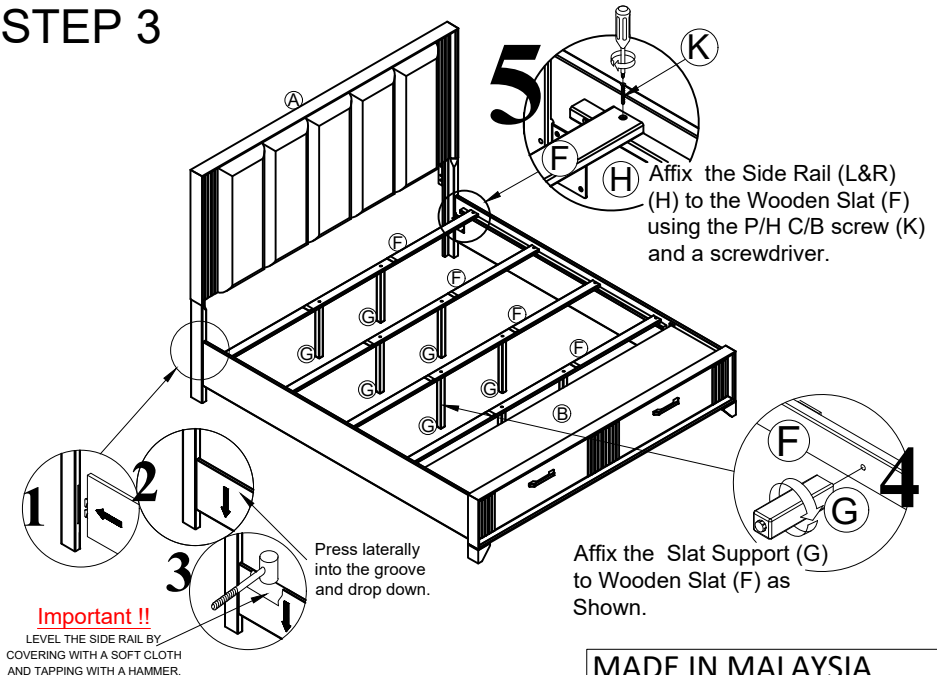

Affix the Side Rail (L&R) (H) to the Wooden Slat (F) using the P/H C/B screw (K) and a screwdriver.

MADE IN MALAYSIA


(BOX 1) BOX OF HEAD BOARD			
ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1

(BOX 2) BOX OF FOOT BOARD			
ITEM	DRAWING	DESCRIPTION	QTY
B		FOOT BOARD	1
C		BOTTOM LEG	2
D		LEG SUPPORT FOR FB	3
E		WOODEN PANEL	6
F		WOODEN SLAT	4
G		SLATS SUPPORT	8

(BOX 3) BOX OF SIDE RAILS			
ITEM	DRAWING	DESCRIPTION	QTY
H		SIDE RAIL (L&R)	2

(BOX 2) BOX OF FOOT BOARD (HARDWARE LIST)				
ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
I		JCBB (M6) WITH WASHER	6 x 35MM	2
J		W/D M8	8 x 25MM	4
K		P/H C/B SCREW	8 x 30MM	8
L		C/B SCREW	M3.5 x 20MM	24
M		ALLEN KEY M4	4 x 35 x 120MM	1

Screw Driver is not included



THE HARDWARE IS LOCATED IN THE PACKING ITEMS

NOTE: MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREW WILL BECOME LOOSE. CHECK TIGHT OF ALL SCREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTION
AFTER ASSEMBLED, CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

COMPLETED
ASSEMBLY

Important !!
LEVEL THE SIDE RAIL BY
COVERING WITH A SOFT CLOTH
AND TAPPING WITH A HAMMER.