


1. Install the arm 2 on the canopy with lock nut and teeth lock washer 1.  
(ground line is between the teeth lock washer and lock nut)

**B0069A-1**

**Please read carefully before installation!!!**

**Note : Please make sure that the electricity is powered off during installation !  
Only a professional electrician should install this kind of product !**

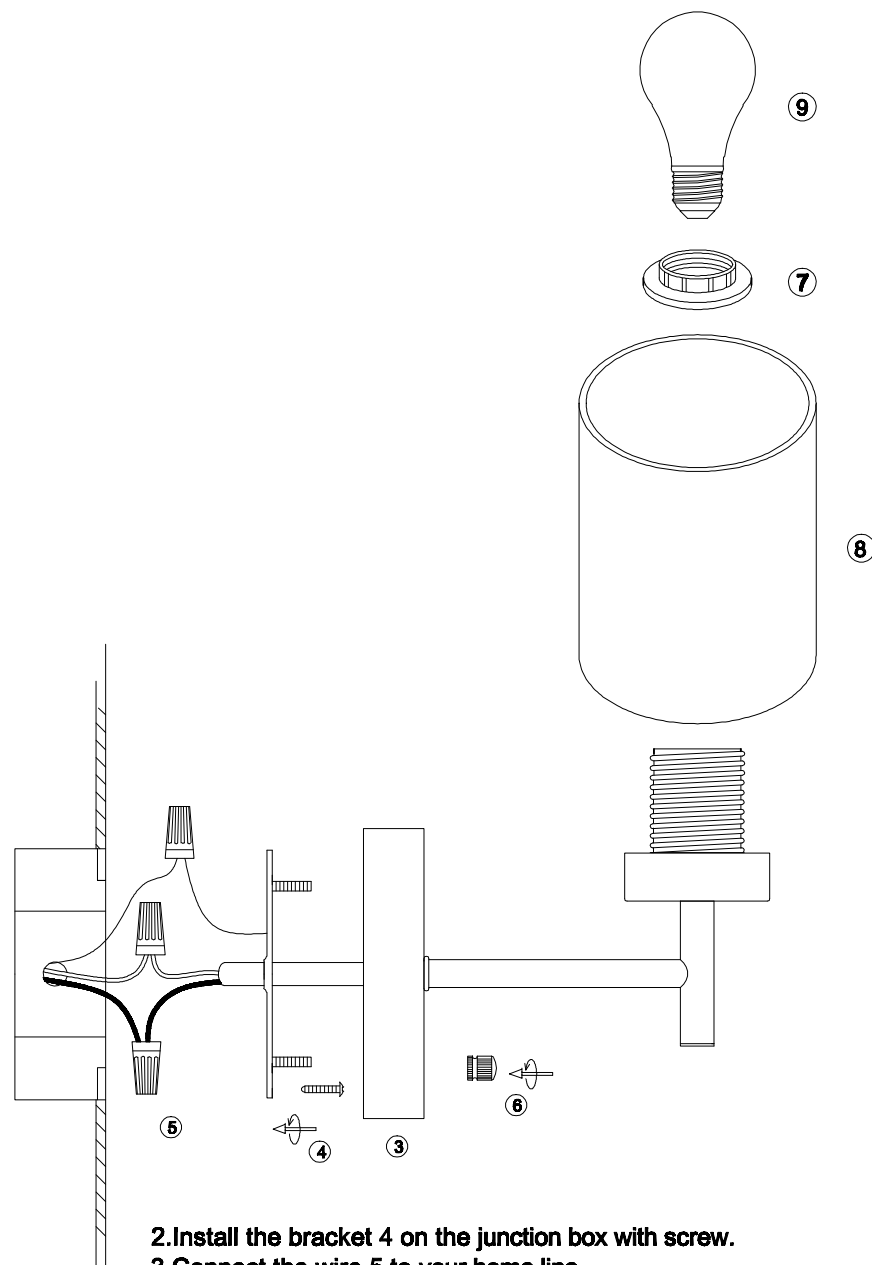

2. Install the bracket 4 on the junction box with screw.  
3. Connect the wire 5 to your home line.  
4. Install the fixture on the bracket with cap nut 6.  
5. Install the glass lampshade on the bulbholder with ring 7,  
and install the bulb 9.