

**COUNTER HEIGHT BAR STOOL WITH  
BLACK PU SEAT**

---

**ASSEMBLY INSTRUCTIONS**



## ASSEMBLY TIPS:







1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.








### Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

## PARTS IDENTIFICATION

A		CHAIR BACK	2PCS
B		FRONT LEG FRAME	2PCS
C		SIDE RAIL	4PCS
D		CUSHION SEAT	2PCS
E		LEFT SIDE STRETCHER	2PCS
F		RIGHT SIDE STRETCHER	2PCS


## HARDWARE IDENTIFICATION

1		ALLEN WRENCH	1PC
2		BOLT	12PCS
3		LOCK WASHER	12PCS
4		SHORT PAN HEAD SCREW	6PCS
5		LONG PAN HEAD SCREW	8PCS

**NOTE : QUANTITIES SHOWN ARE FOR TWO CHAIRS**


## STEP 1

Align and fasten side rail to front leg frame using bolt and lock washer and tighten with Allen wrench. Insert left and right stretchers into the correct legs.

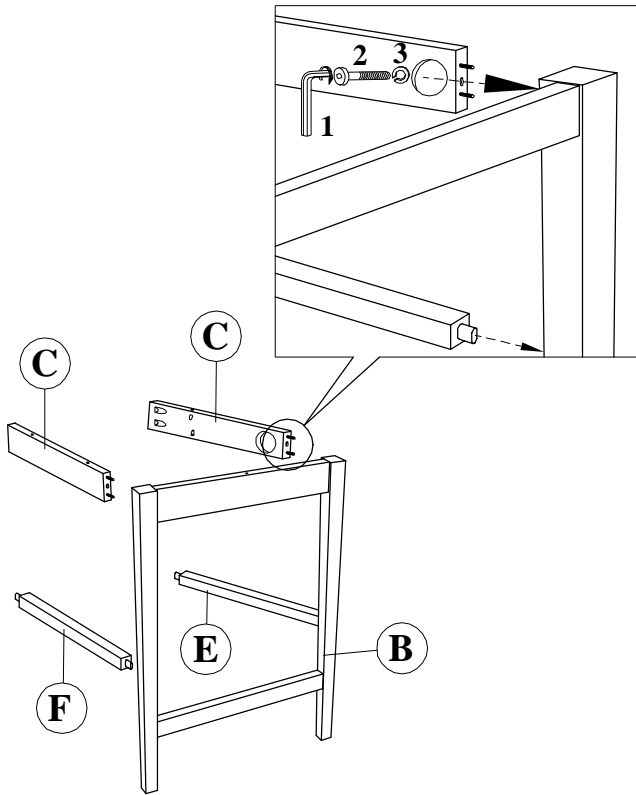


## STEP 2

Insert left and right stretchers into back legs. Align and fasten side stretchers to chair back using bolt and lock washer and tighten with Allen wrench.

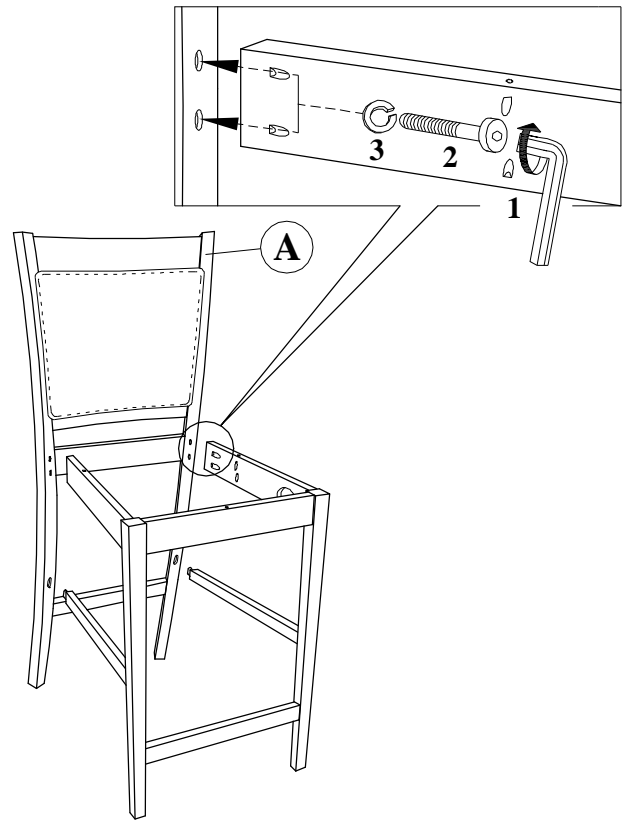

## STEP 3

Fasten left and right stretchers to front and back leg using screws and tighten with screw driver (Not included).

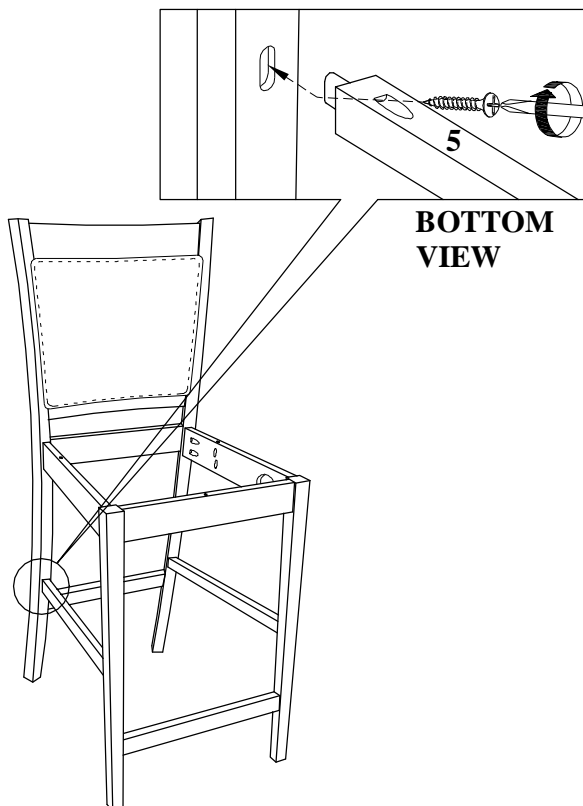

## STEP 4

Align and fasten cushion seat to side rails using screws and tighten with screw driver (Not included).

