

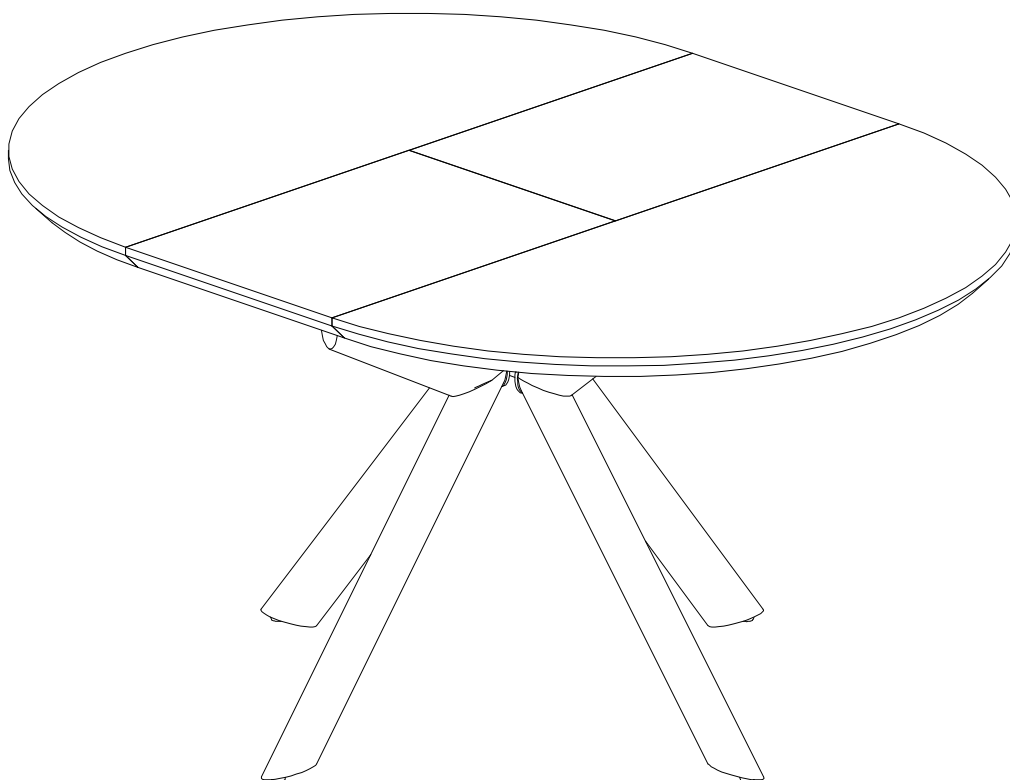
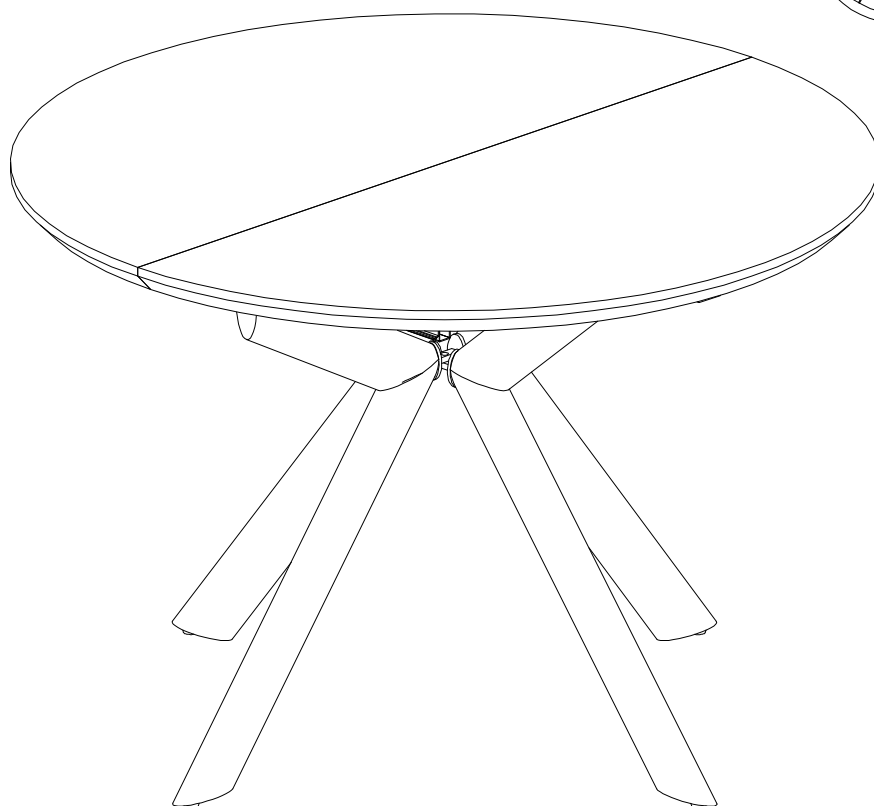
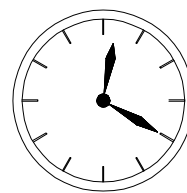
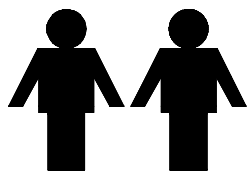
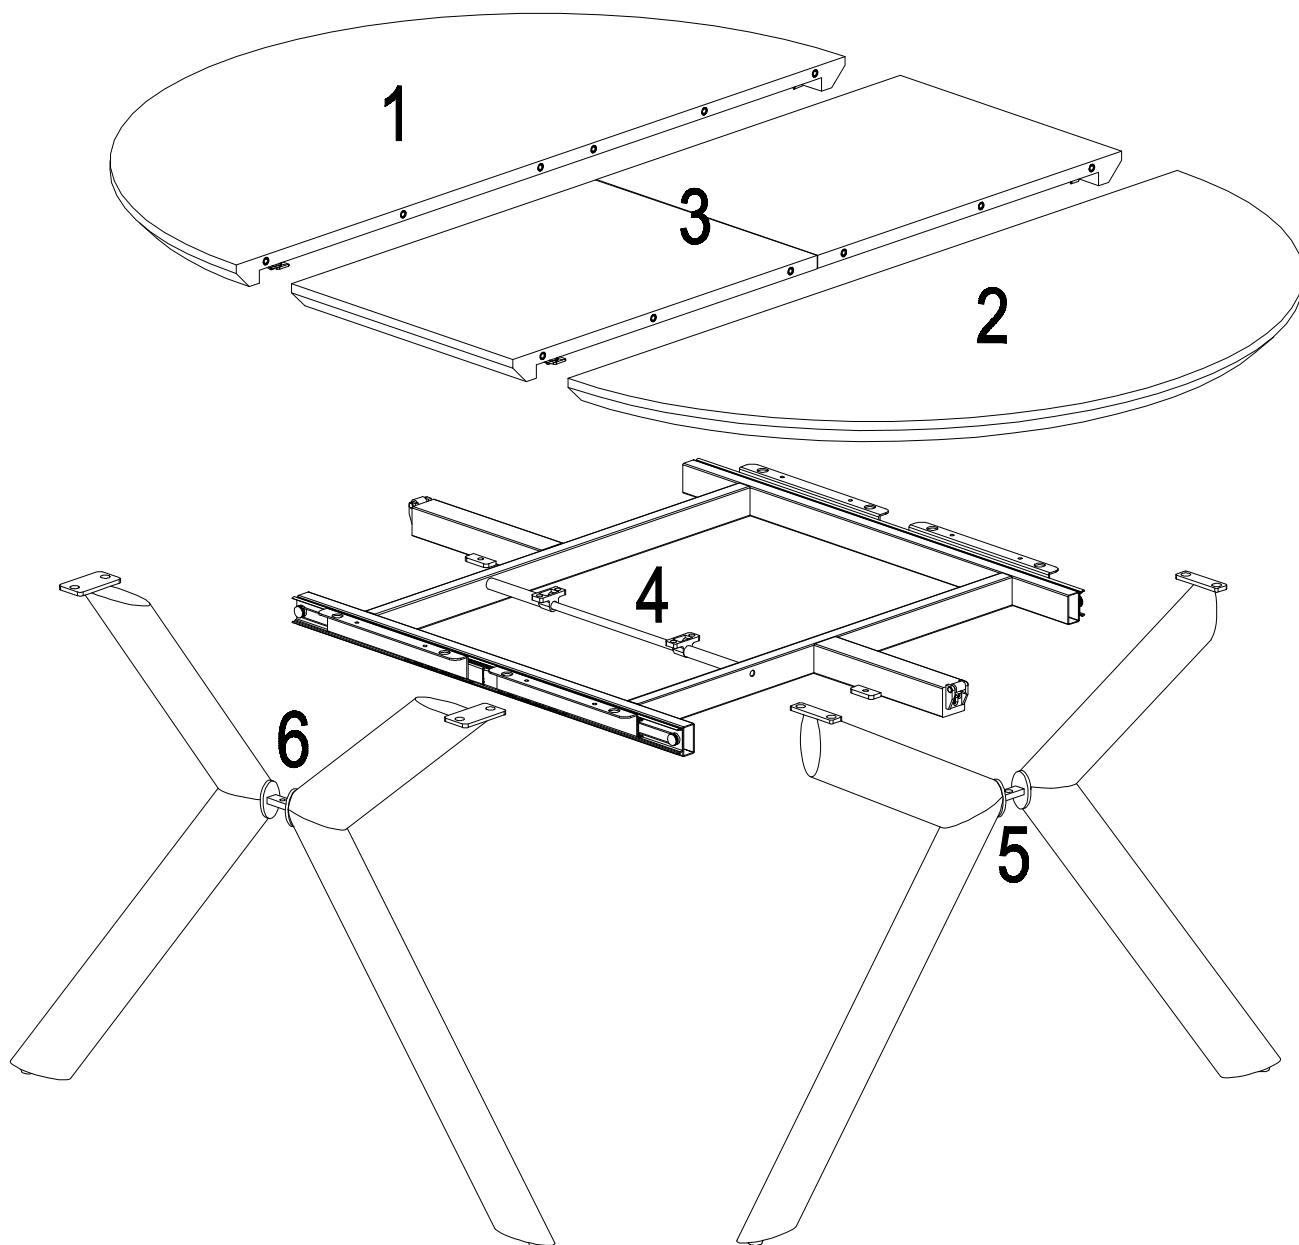











ASSEMBLY INSTRUCTIONS






+Spare X 2 A x 18  M8*18mm	+Spare X 1 B x 9  Ø20*1.5mm	+Spare X 2 C x 19  	+Spare X 1 D x 5  M6*15mm	E x 2 
+Spare X 2 F x 22  4*14mm	G x 4  	H x 4  	+Spare X 1 I x 10  Ø16*1.5mm	+Spare X 1 J x 2  M8*25mm
K x 1  4mm	L x 1  5mm	M x 1  		

1

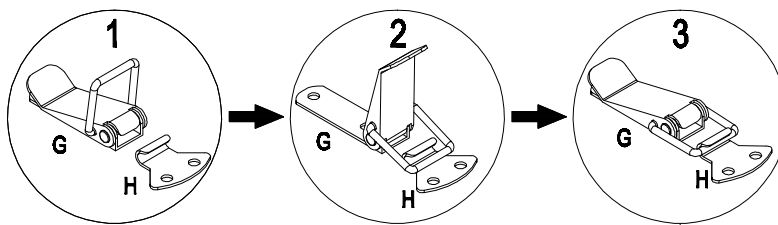


G	x4	H	x4
M	x1	F	x16
			4*14mm
K	x1		
			4mm

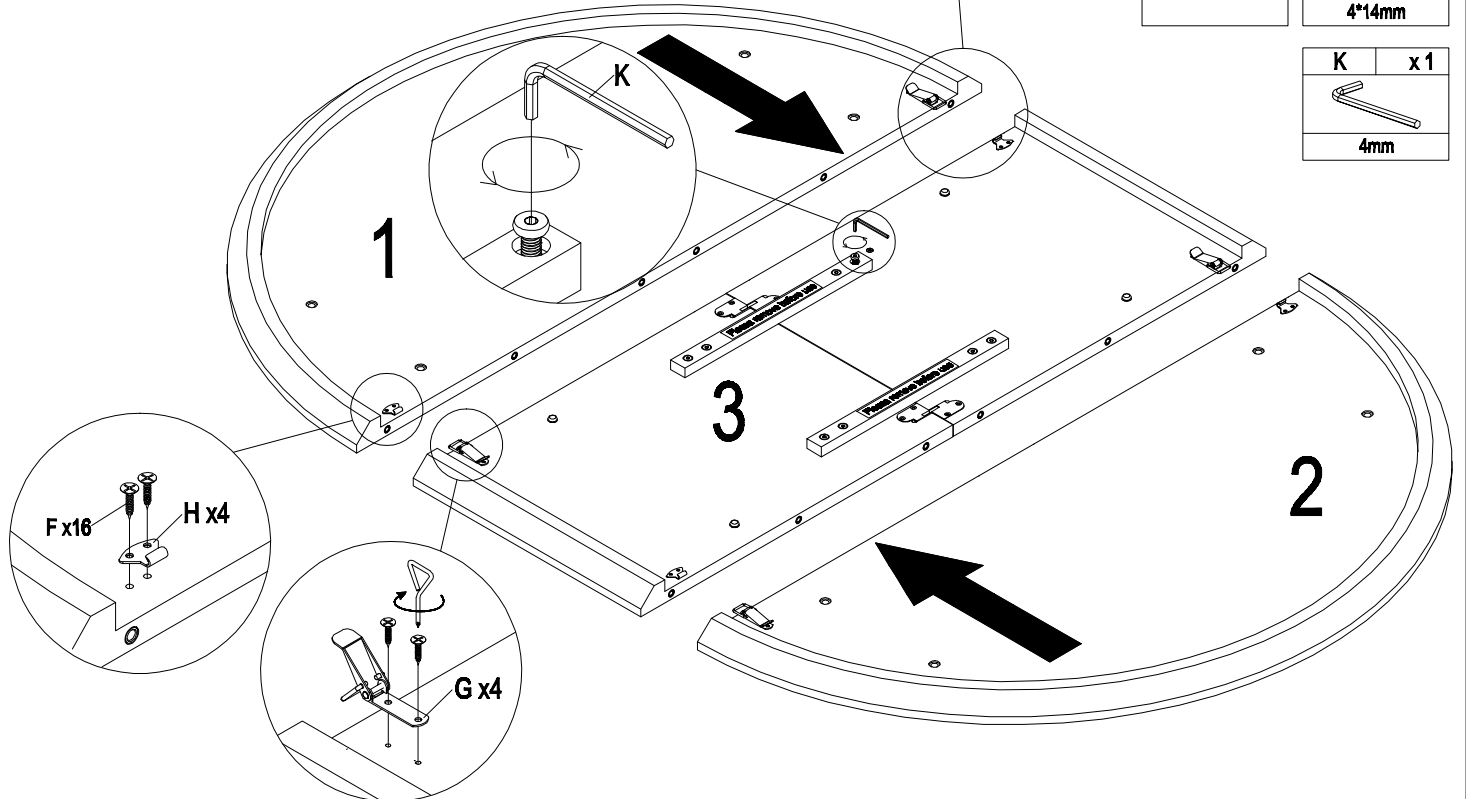

2


A	x8	B	x8	C	x8	D	x4
	M8*18mm		Ø20*1.5mm				M8*15mm
F	x4	E	x2				
	4*14mm						

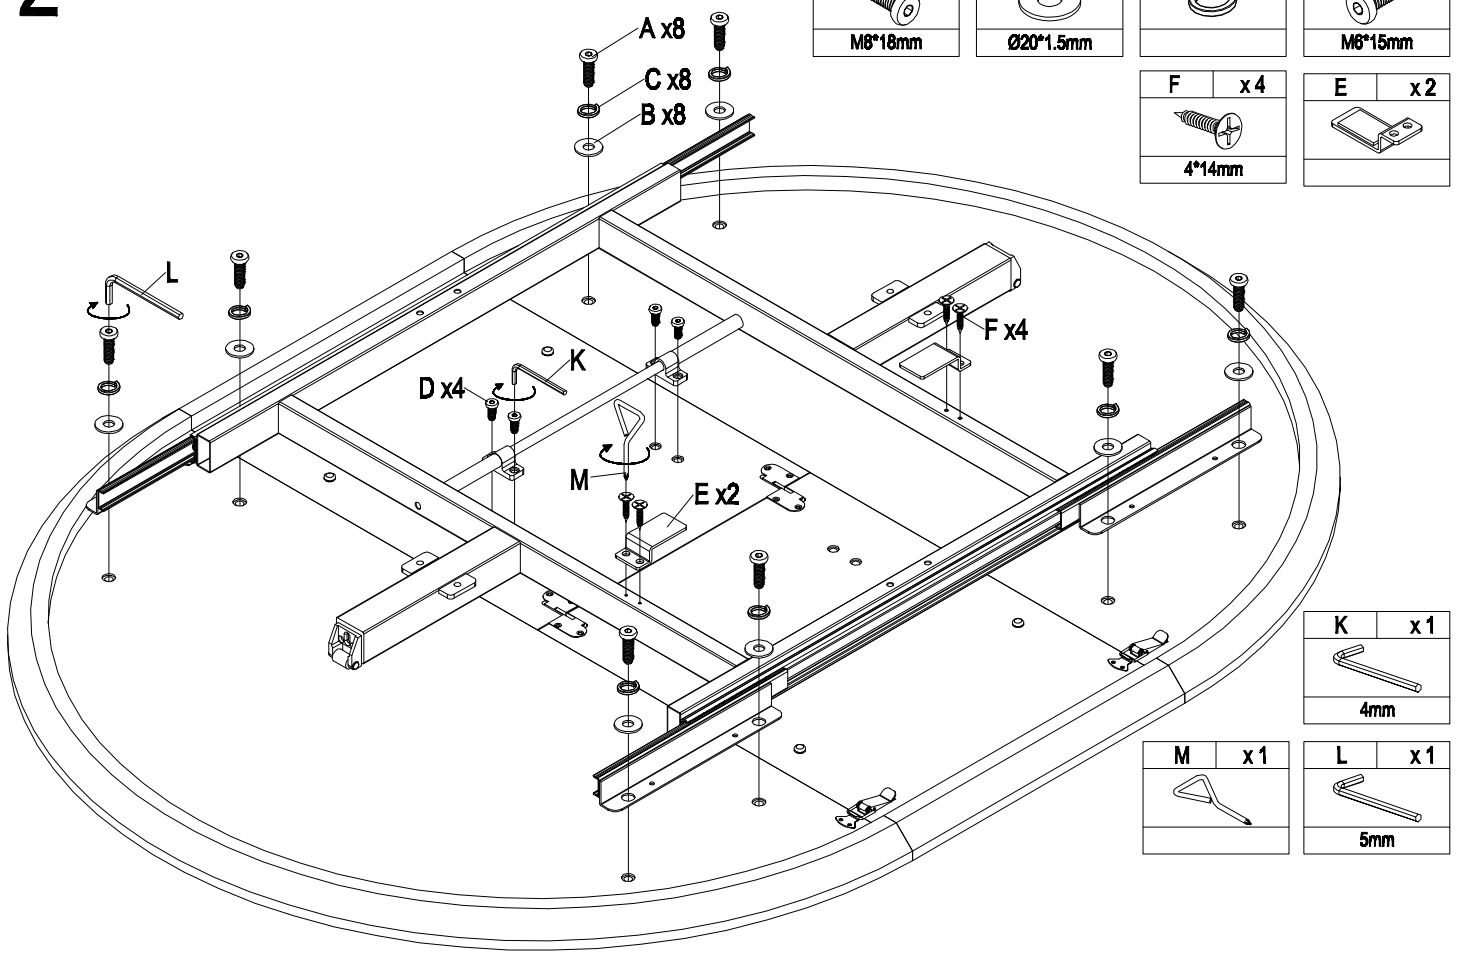

K	x1
	4mm


M	x1	L	x1
			5mm

3

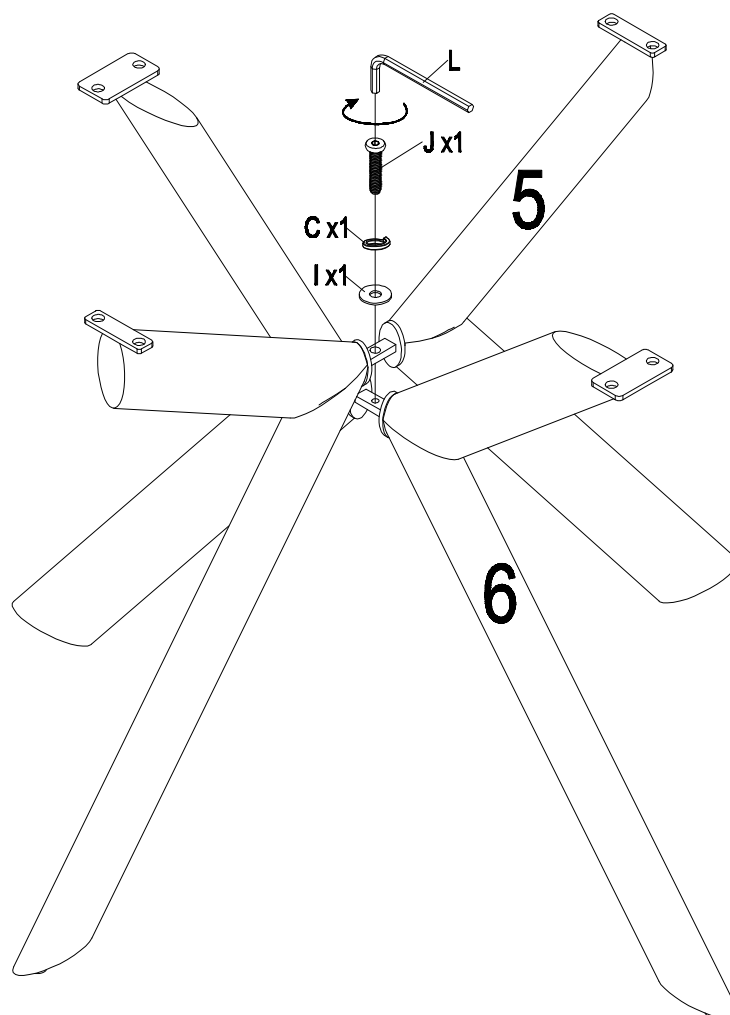


L	x1
5mm	
C	x1
Ø14mm	
I	x1
Ø16*1.5mm	
J	x1
M8*25mm	

4

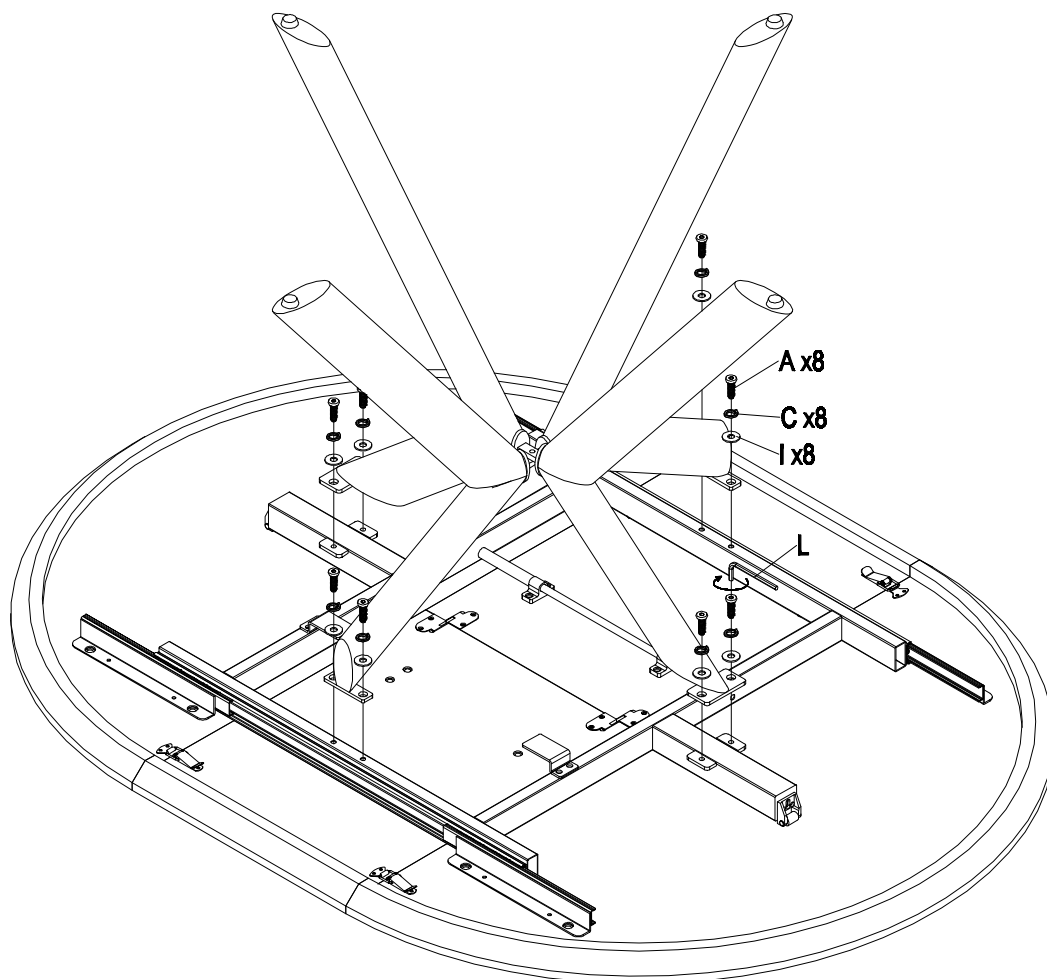


L	x1
5mm	
C	x8
I	x8
Ø16*1.5mm	
A	x8
M8*18mm	


5

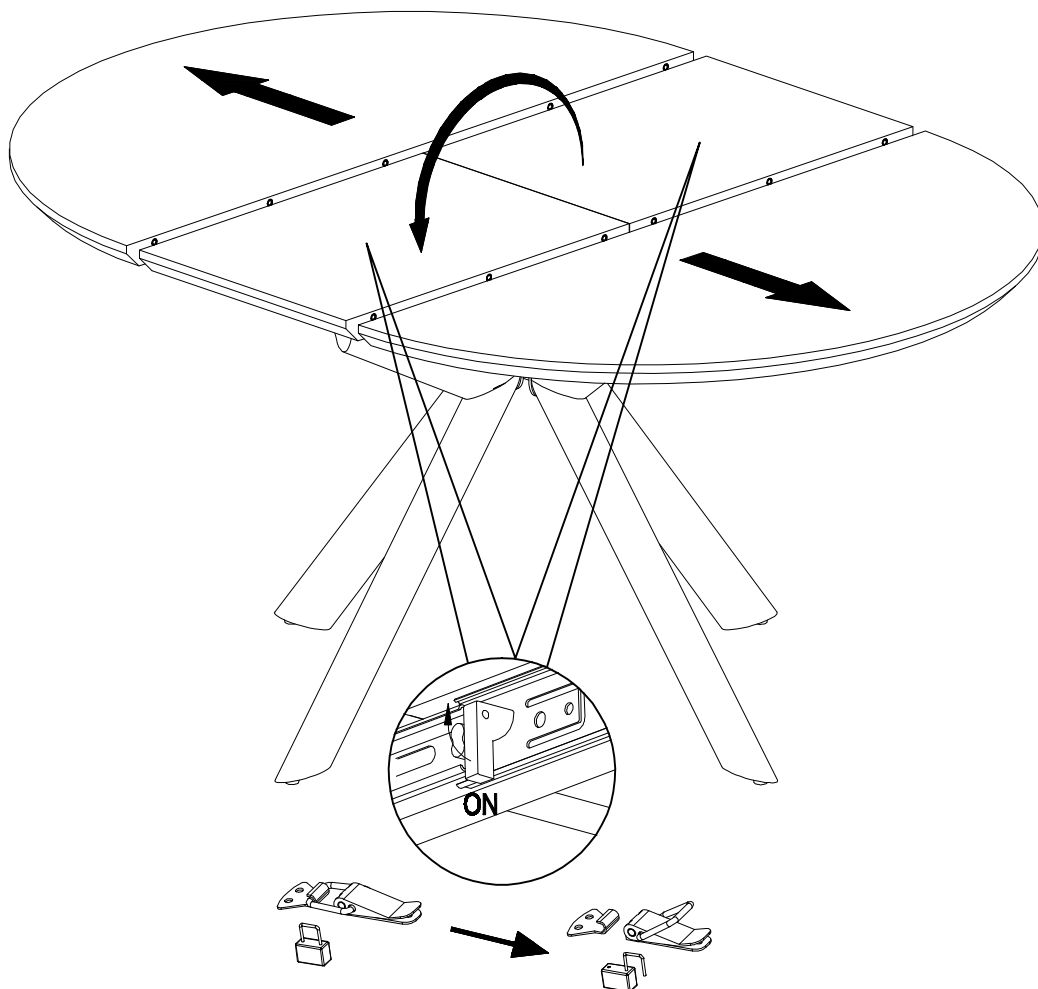

6

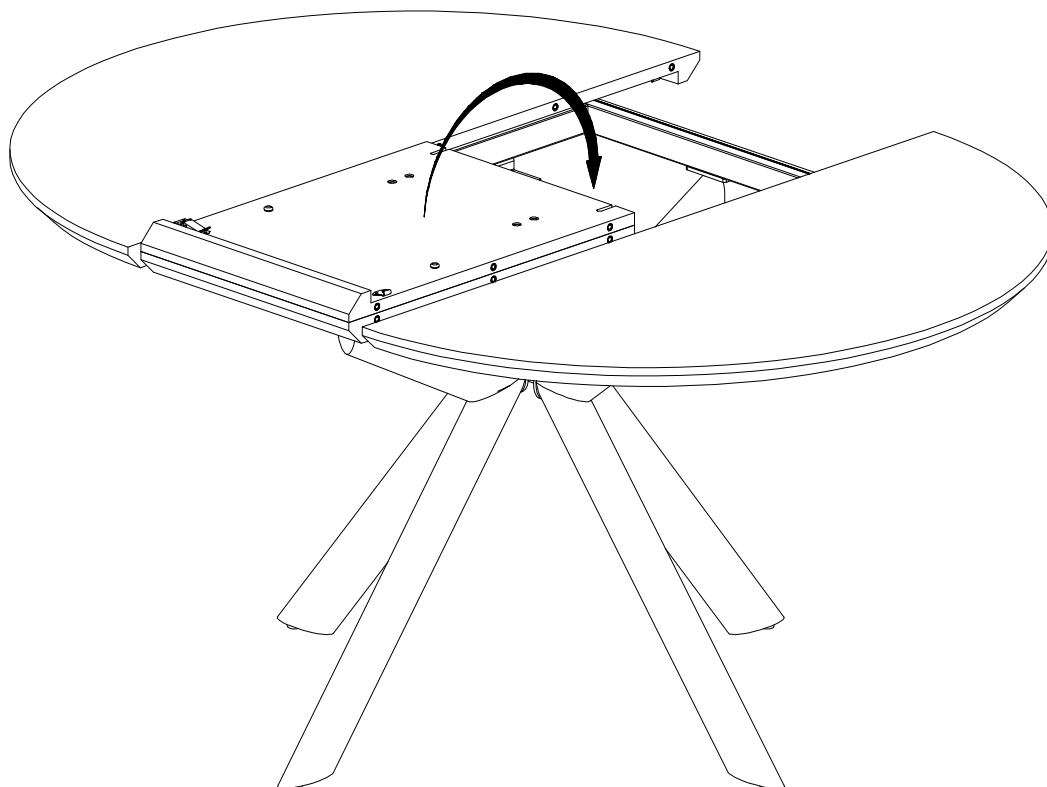

7

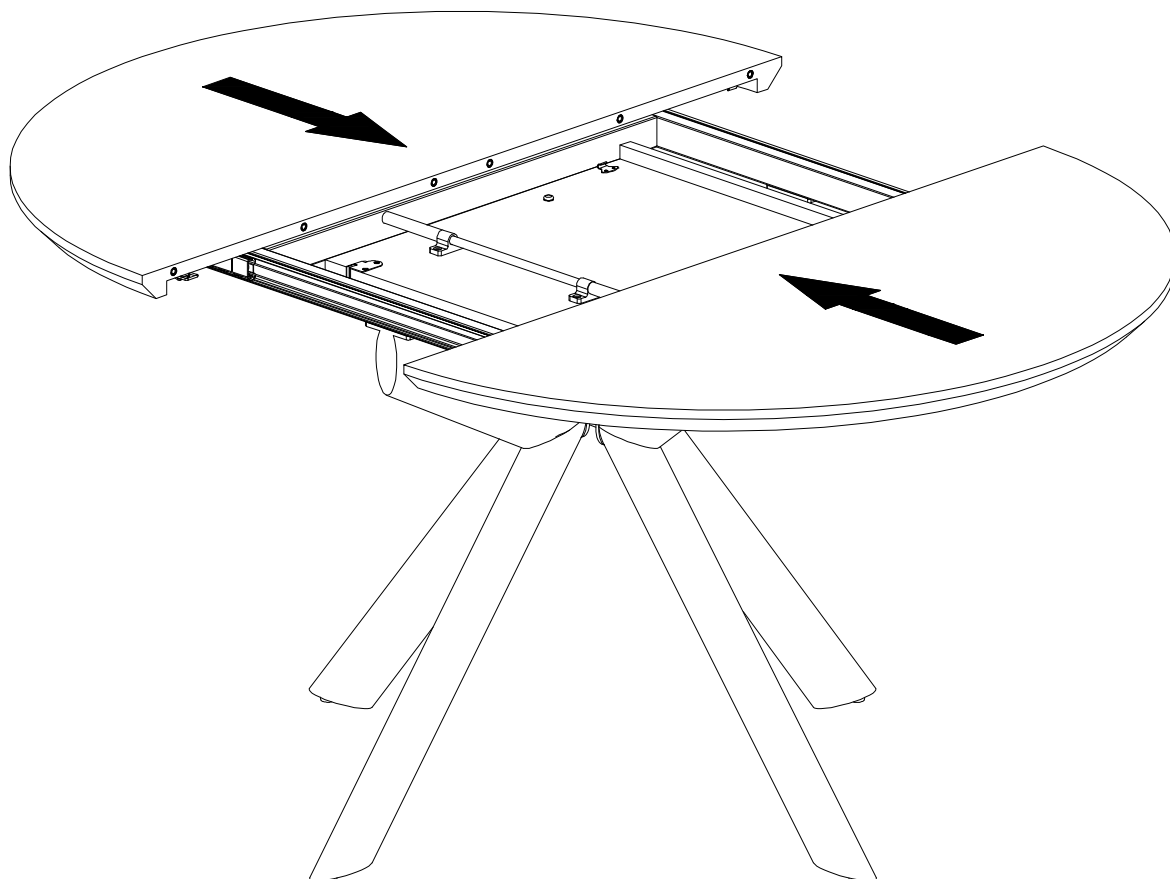

8

