


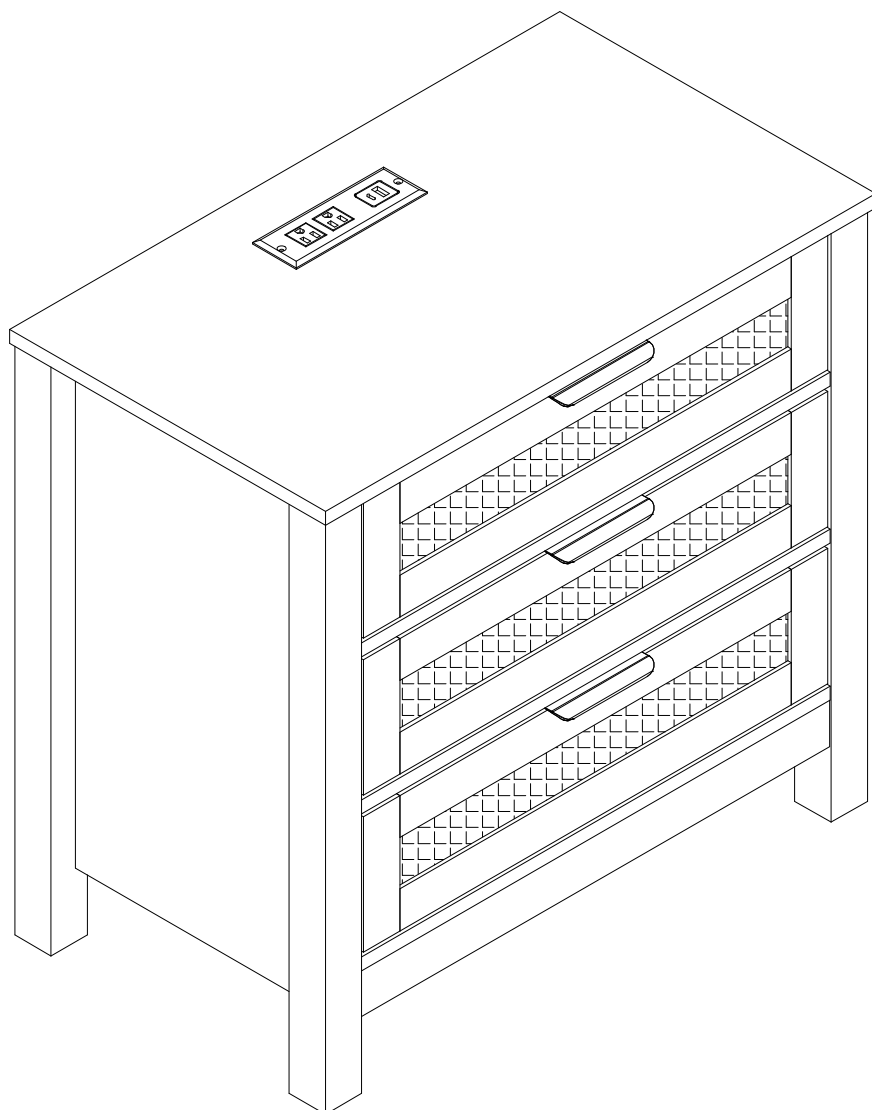

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product


- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

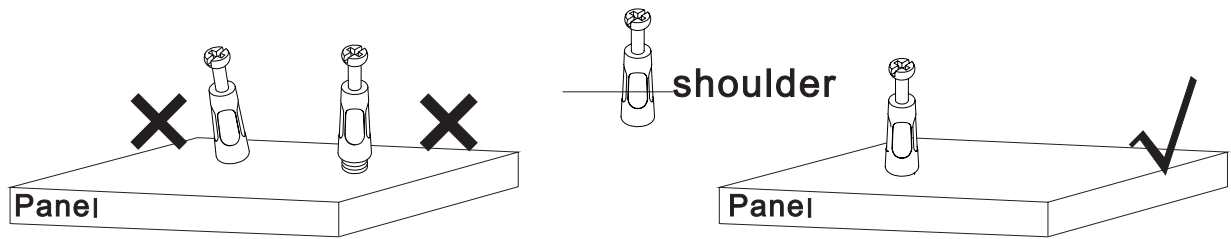


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

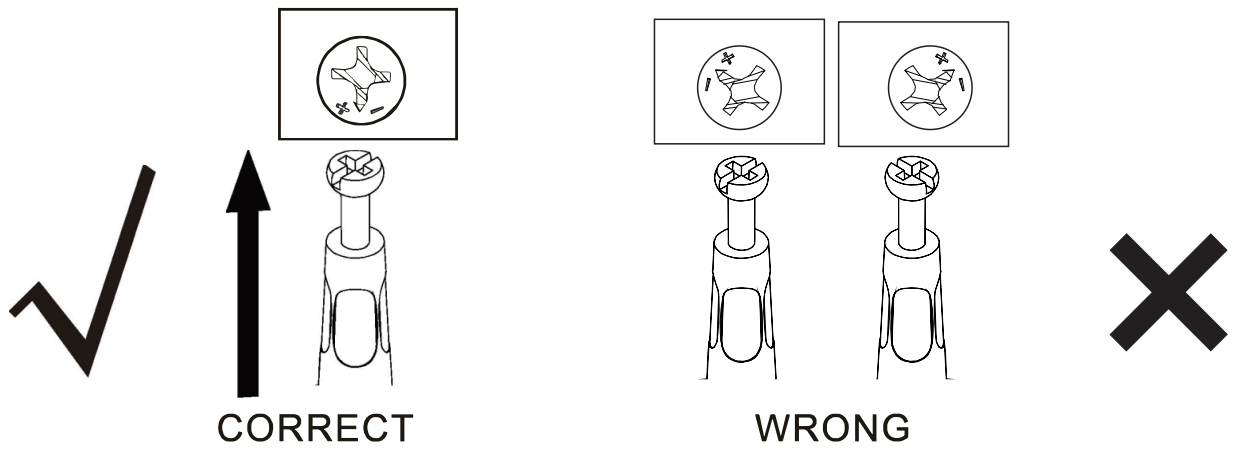

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.


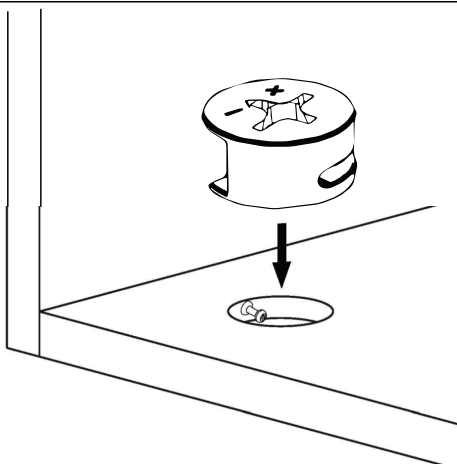


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.















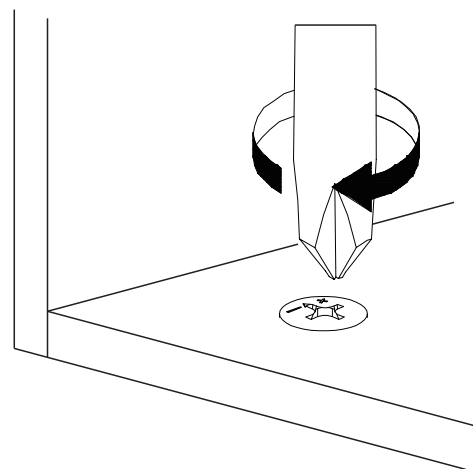


Turn cam lock clockwise to tighten.





PART LIST

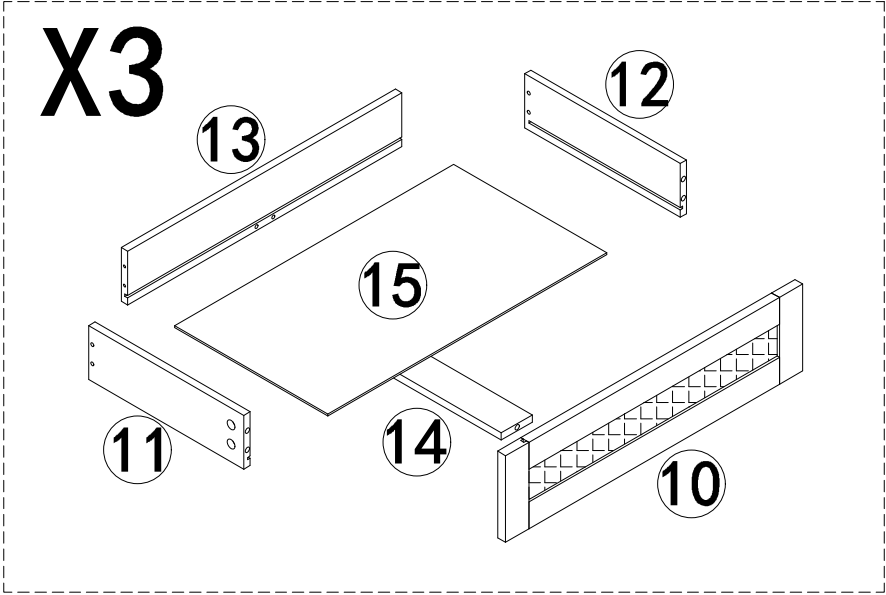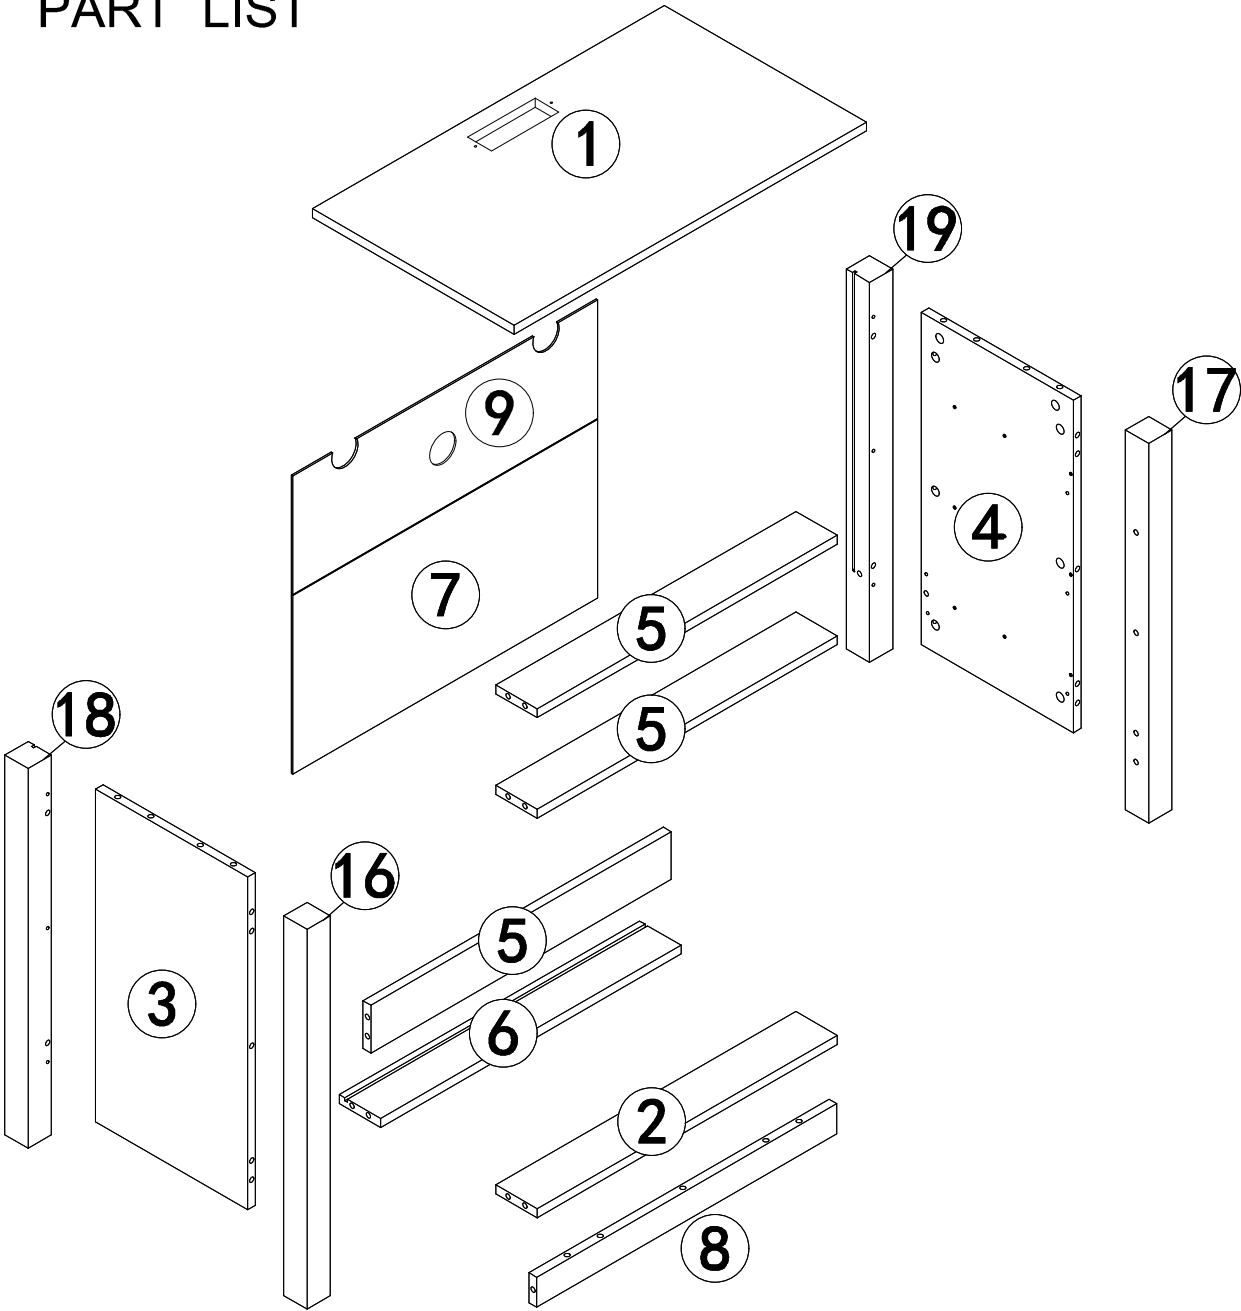







PART LIST

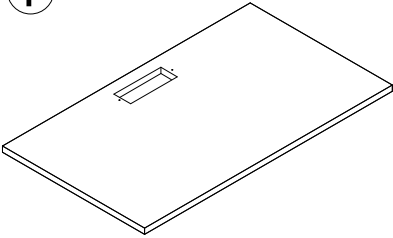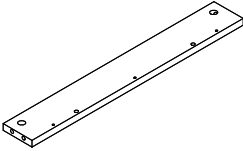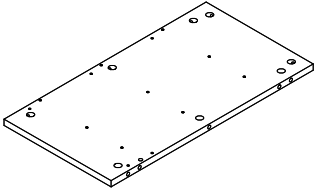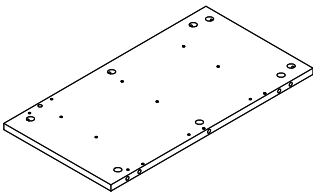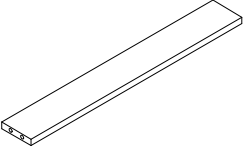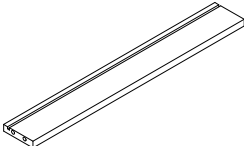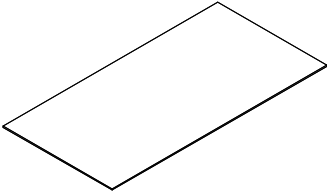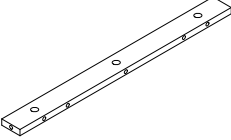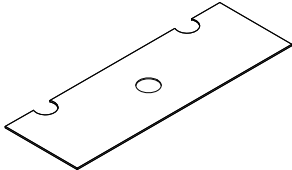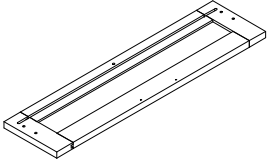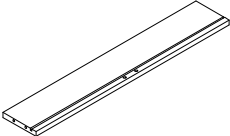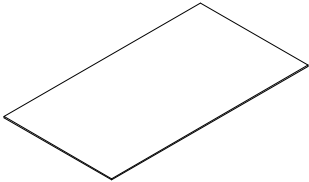①  1PC	②  1PC	③  1PC
④  1PC	⑤  3PCS	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  3PCS	⑪  3PCS	⑫  3PCS
⑬  3PCS	⑭  3PCS	⑮  3PCS

PART LIST

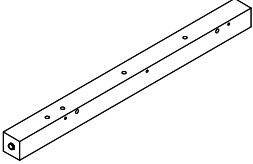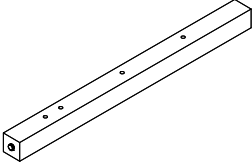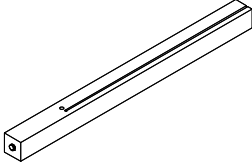
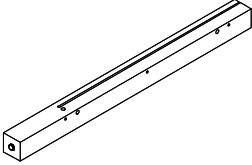
16  1PC	17  1PC	18  1PC
19  1PC		

HARDWARE LIST

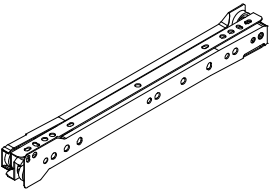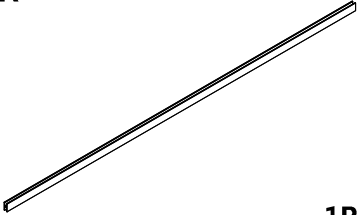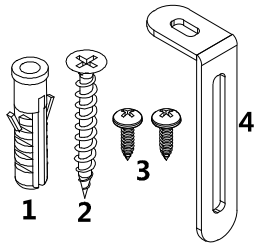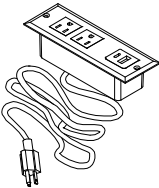
A  ø6X35 (44+3)PCS	B  ø15X9.5 (44+3)PCS	C  ø8X30 (26+2)PCS
D  ø5X40 (18+2)PCS	E  3PCS	F  (8+1)PCS
G  ø3X15 (8+1)PCS	H  3SET	I  ø3X12 (26+2)PCS
J  ø4X12 (18+2)PCS	K  1PC	L  2SET
M  1PC	 1PC	 1PC




H X 3SET

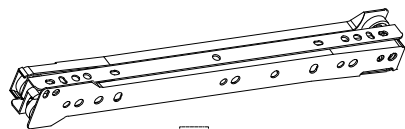

CL



CR




DL




DR




L =




1



2





3

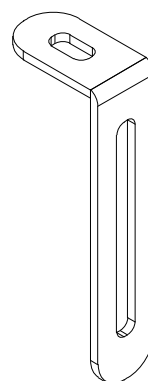


4

STEP 1


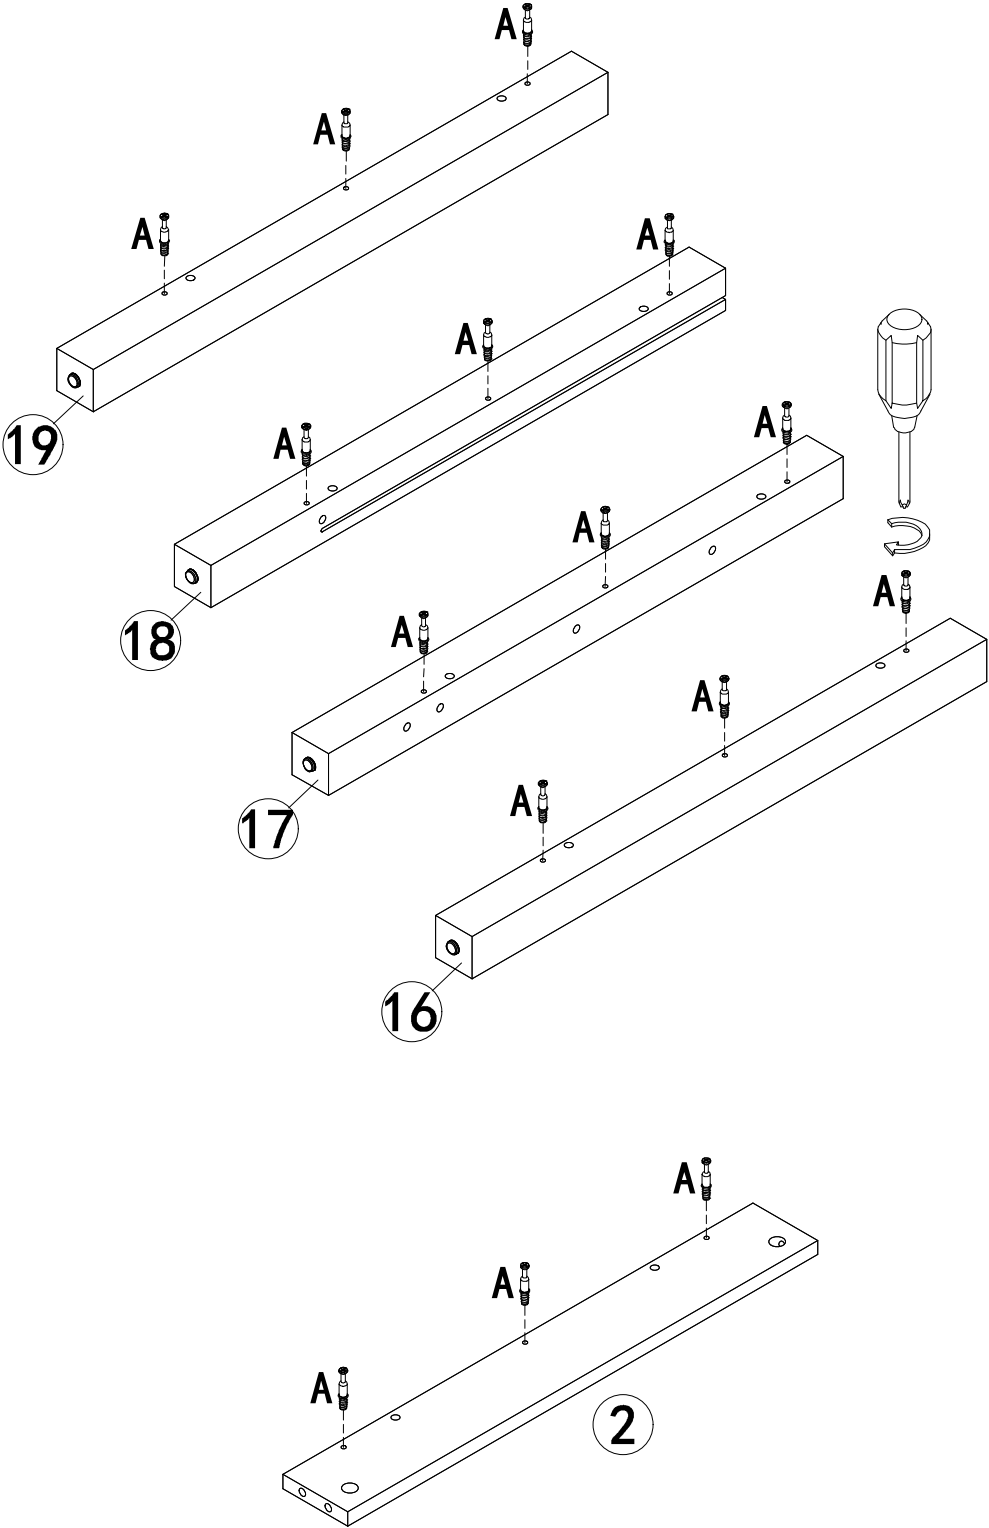


A X 15PCS

STEP 2


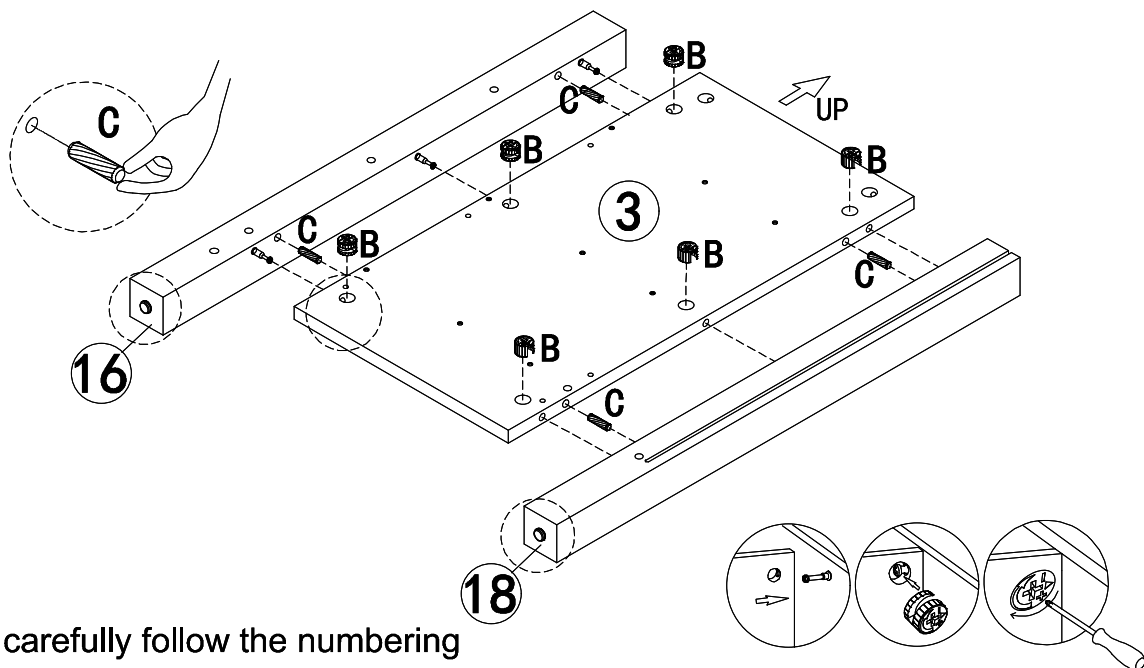


Please carefully follow the numbering and hole positions in the diagram to avoid assembly errors

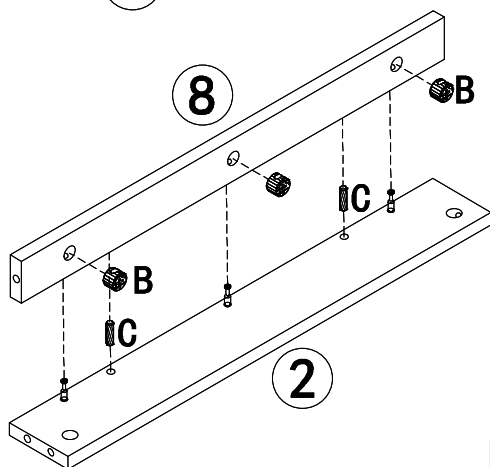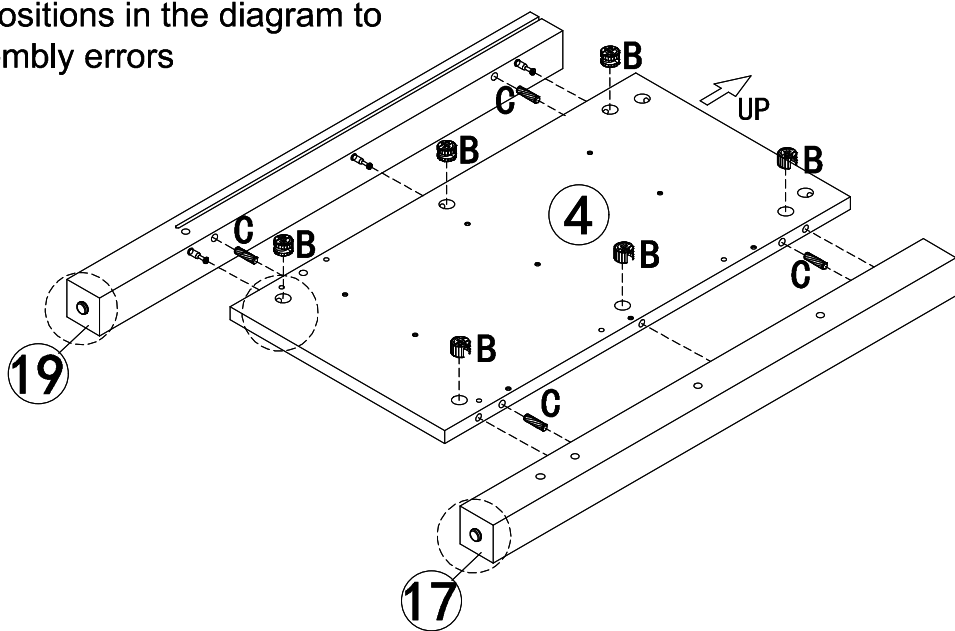




	B X 15PCS
	C X 10PCS

STEP 3

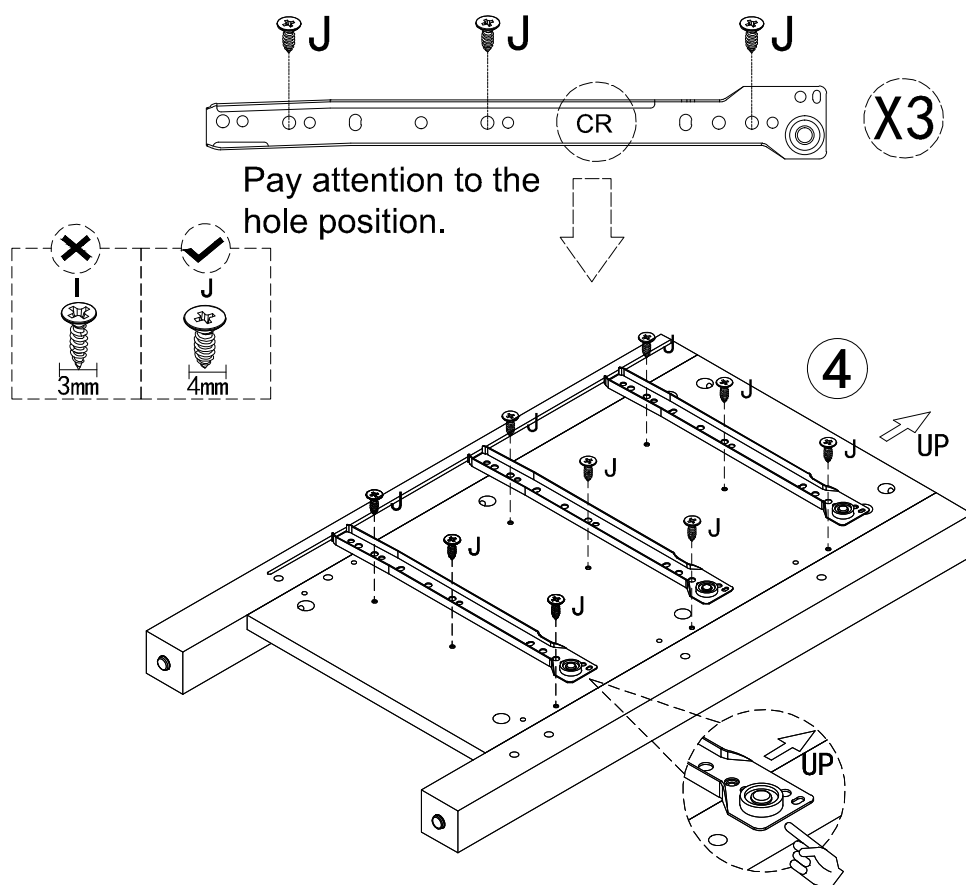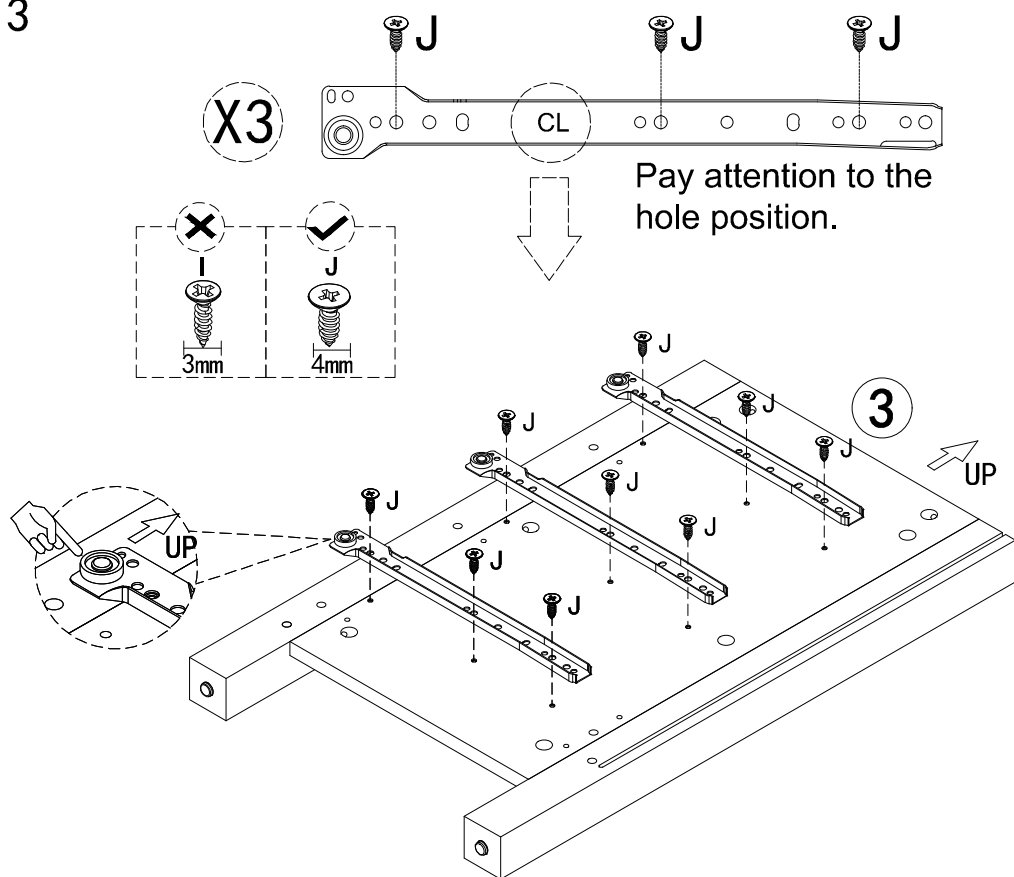


J X 18PCS

STEP 4

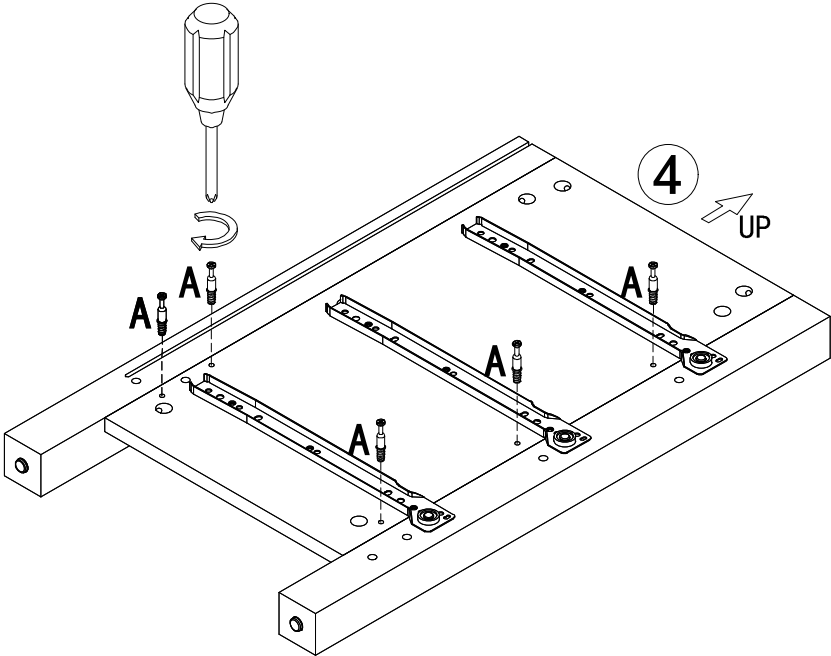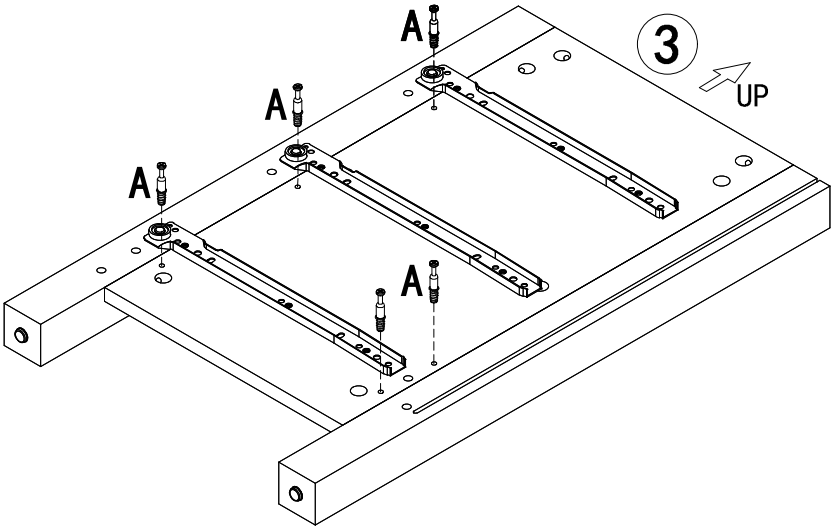


A X 10PCS

STEP 5

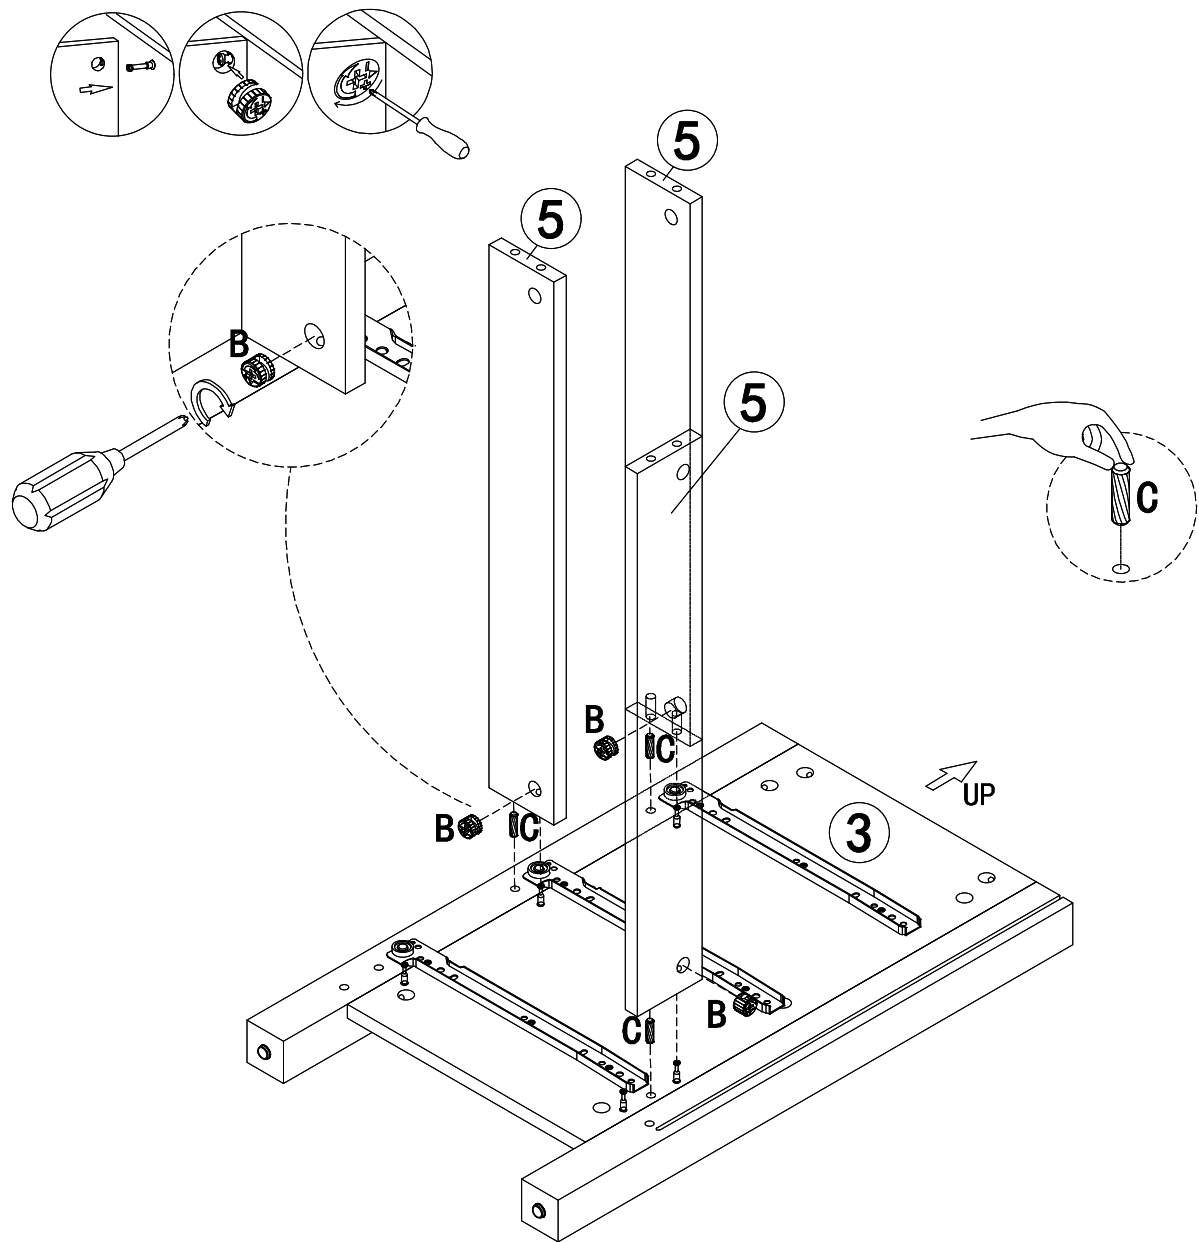


	B X 3PCS
	C X 3PCS

STEP 6

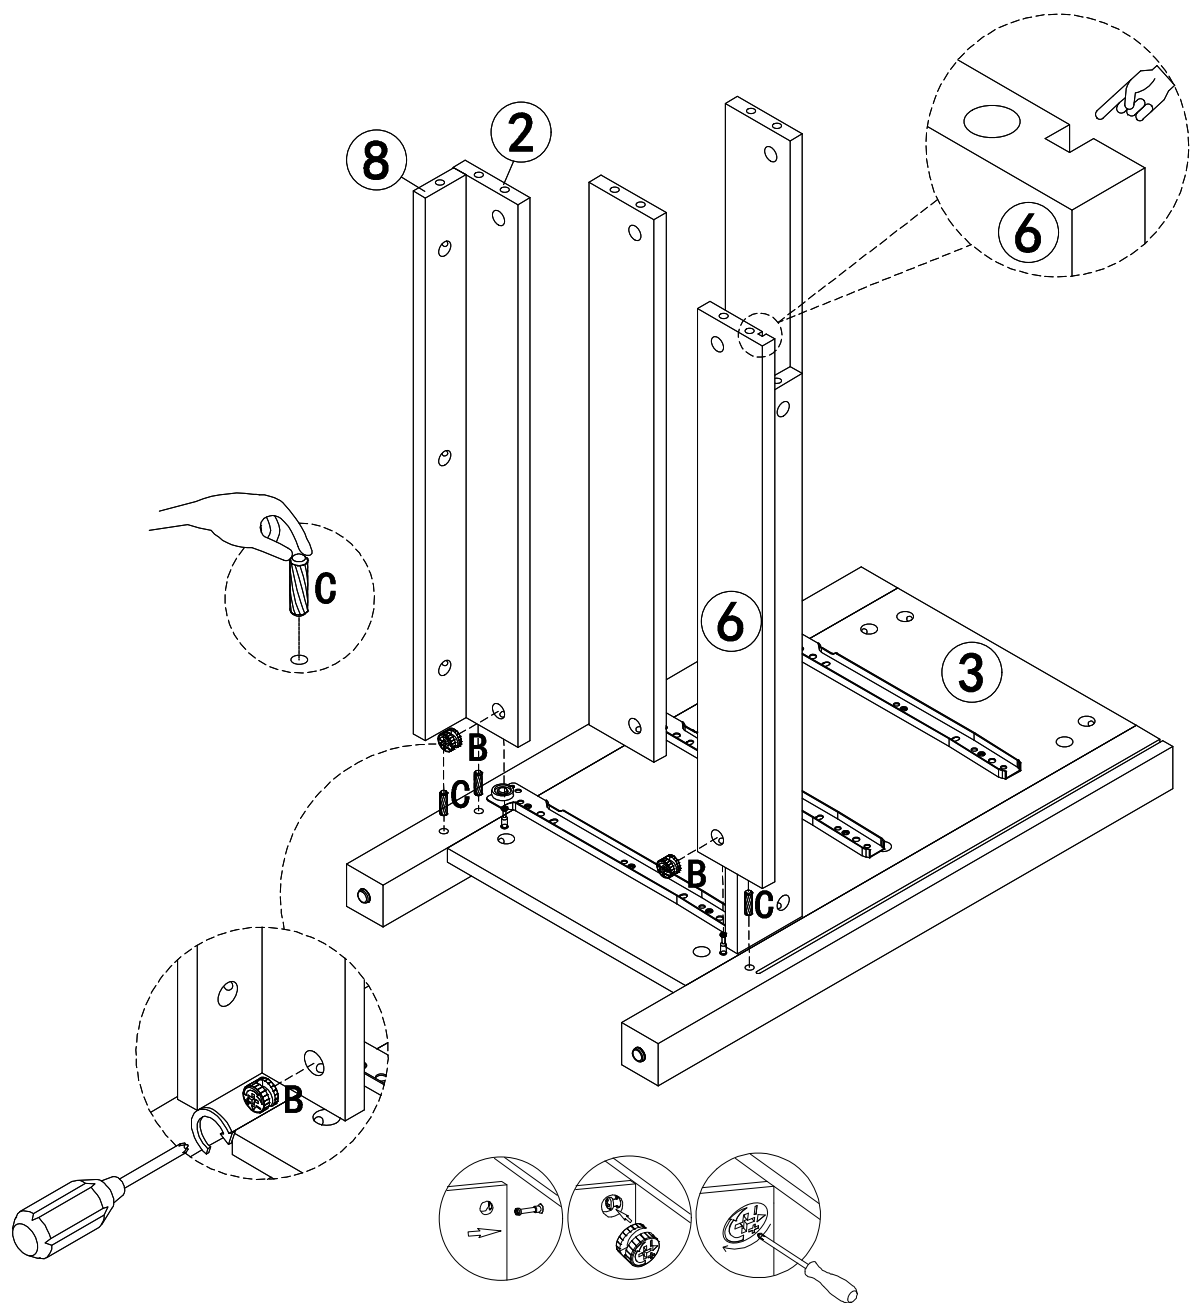


	B X 2PCS
	C X 3PCS

STEP 7


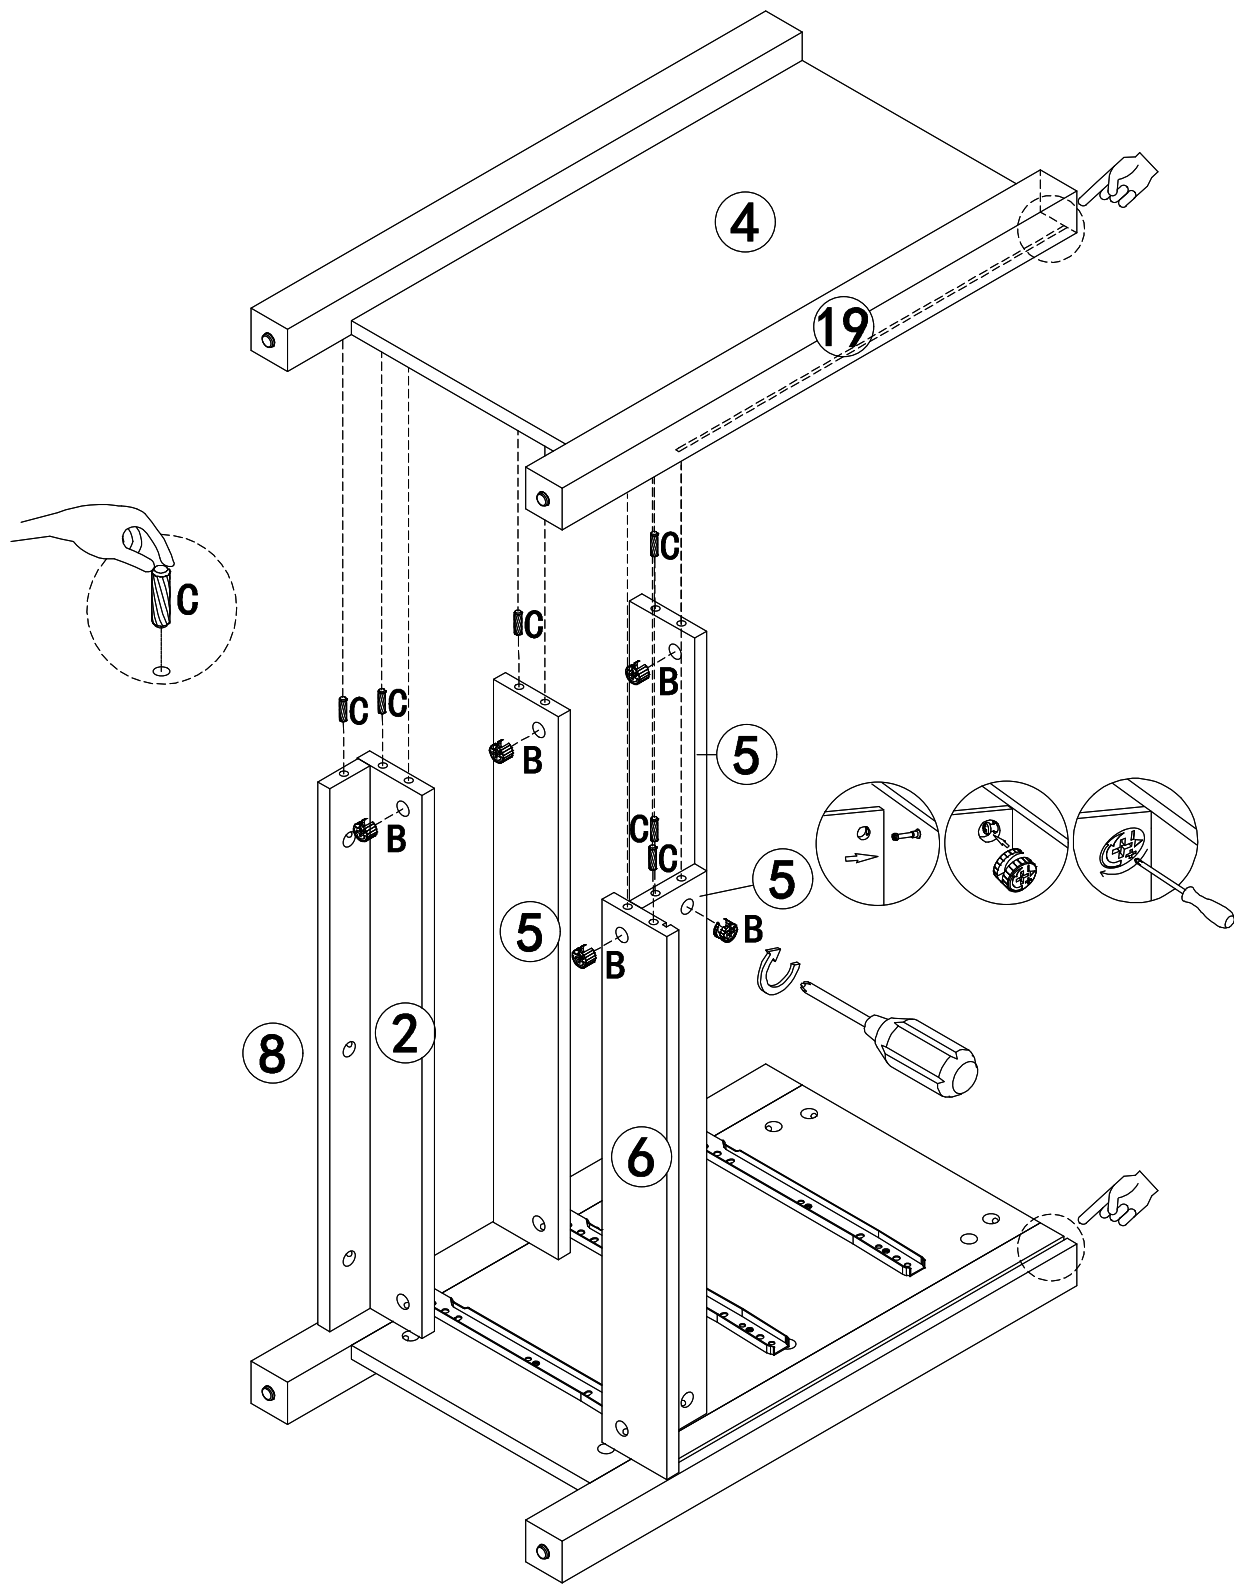


STEP 8

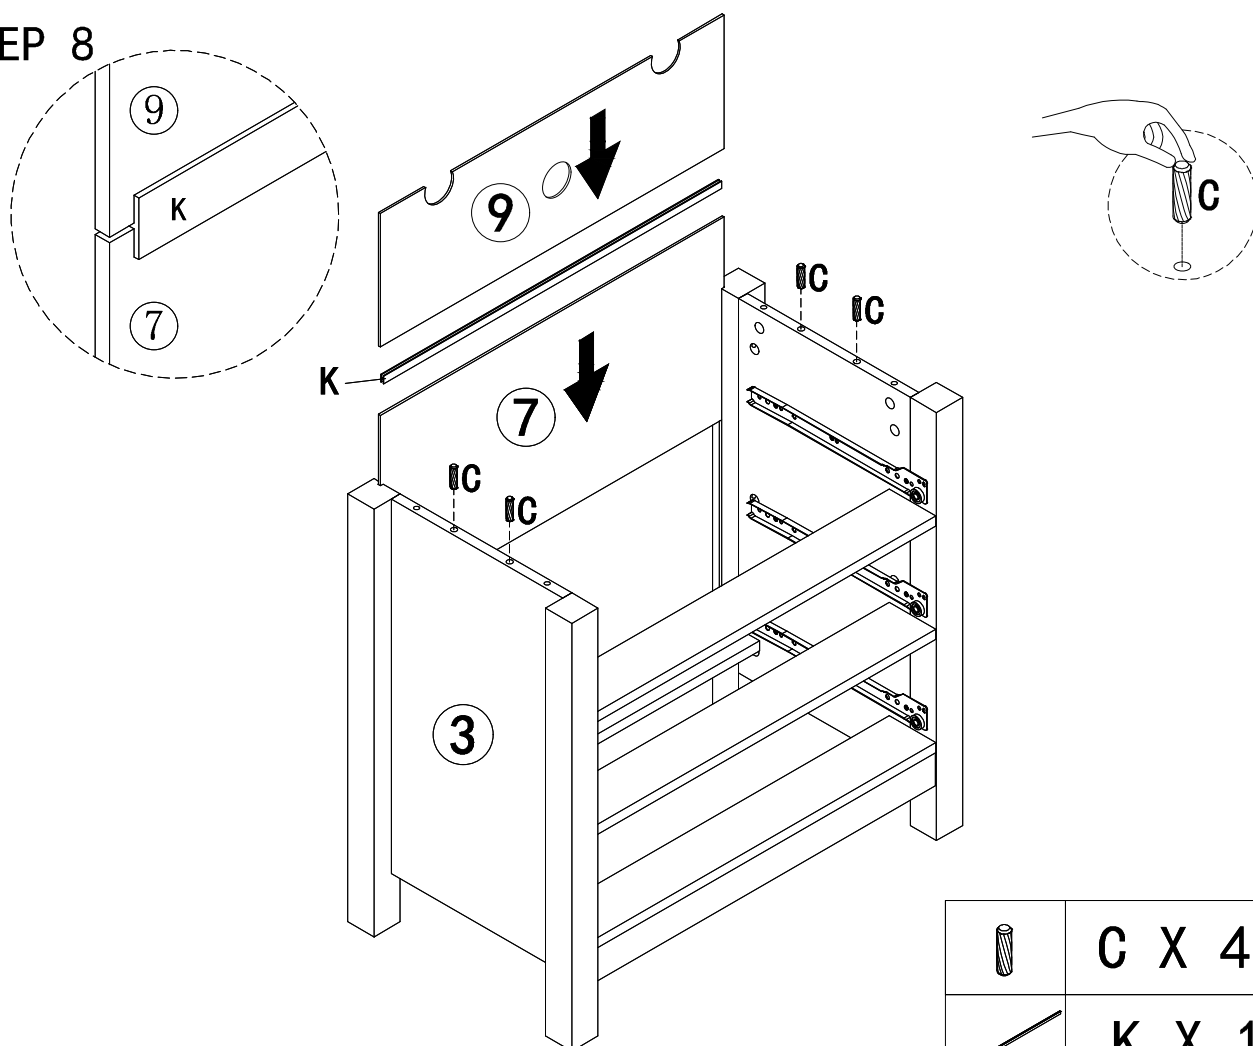



	C X 4PCS
	K X 1PC

STEP 9

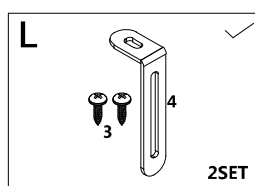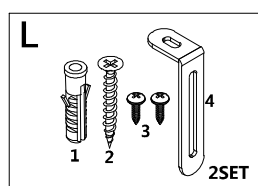


Note: Put the anti-tip device L4 on the top, near the back side, and fix it with a screw L3.

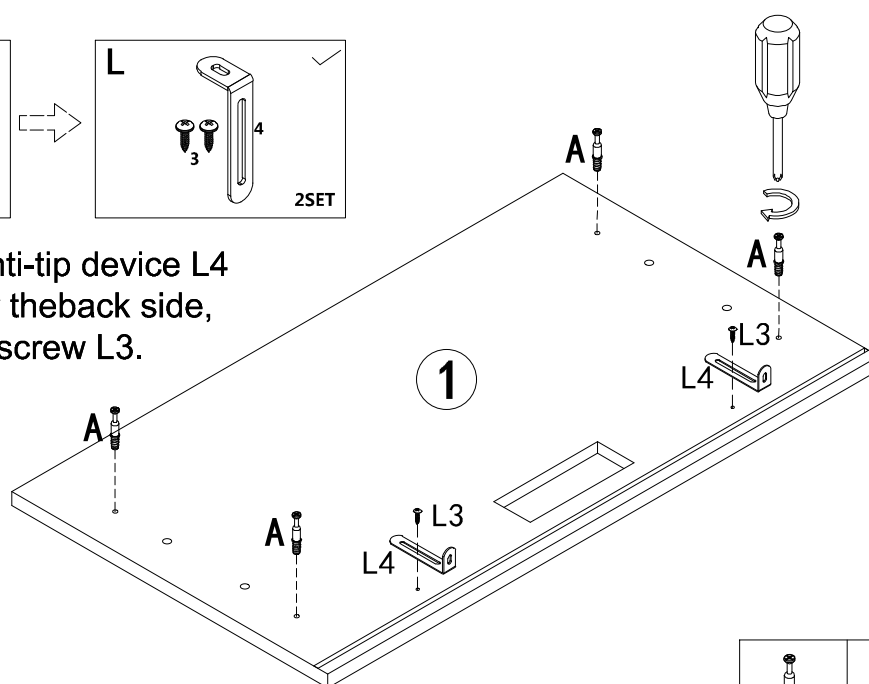

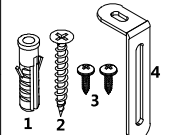
	A X 4PCS
	L X 2SET

STEP 10

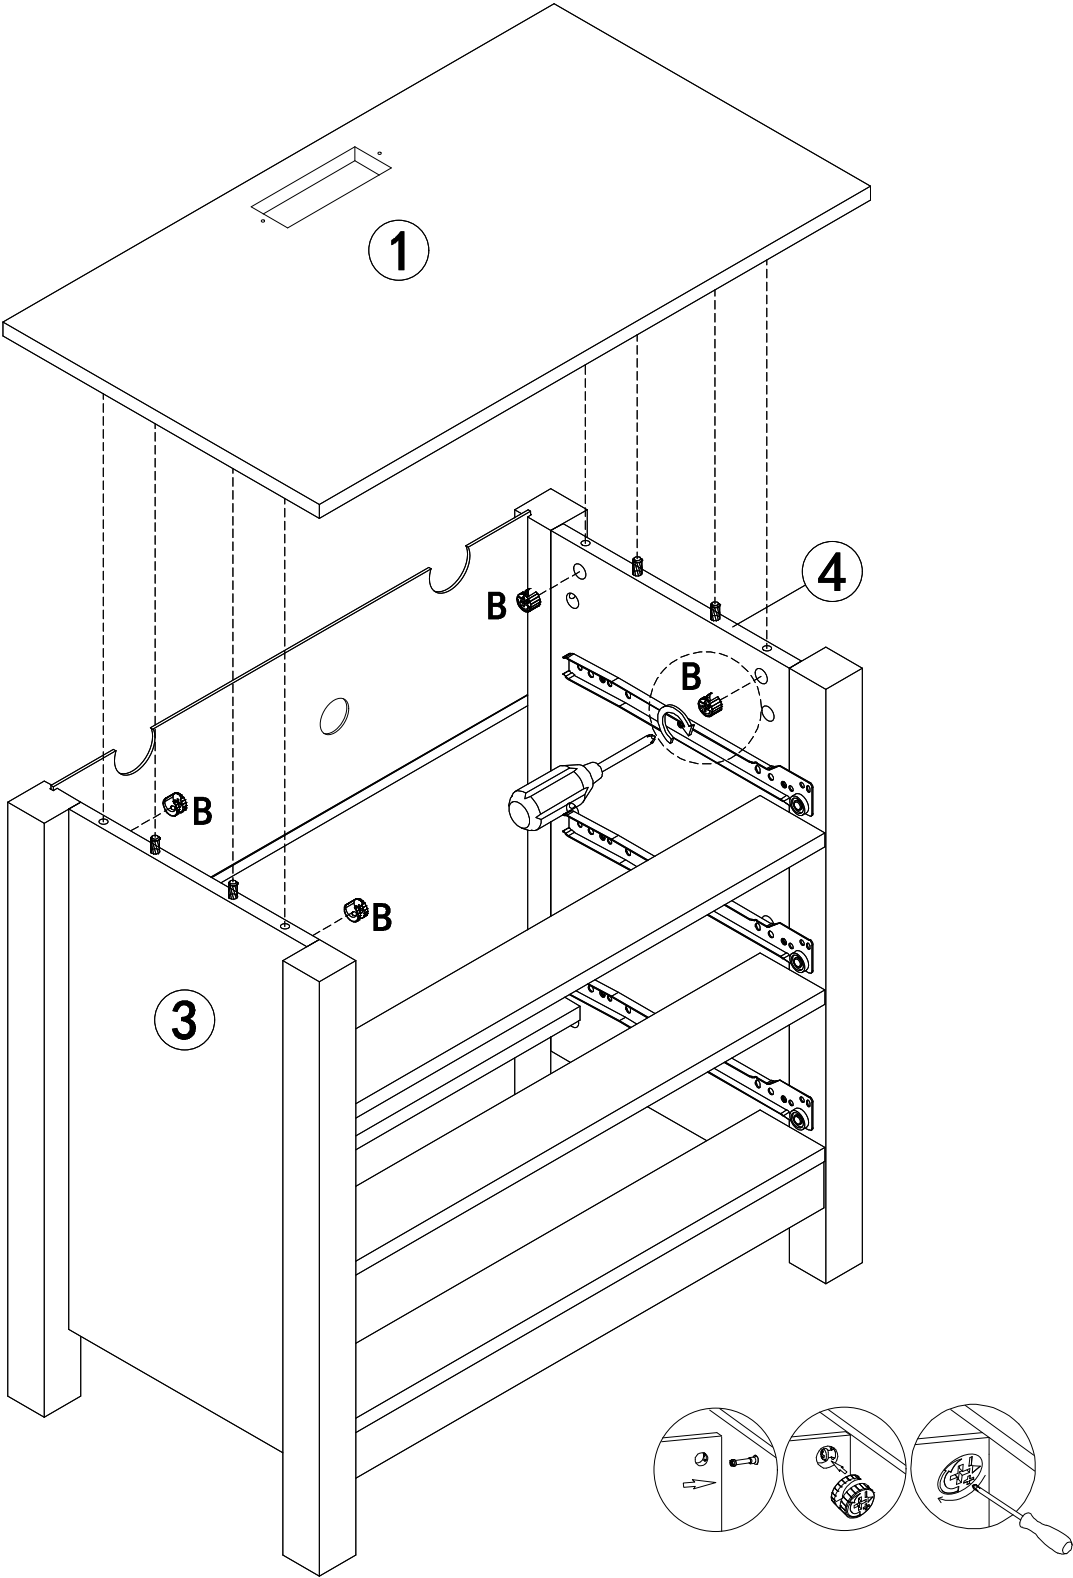


STEP 11

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

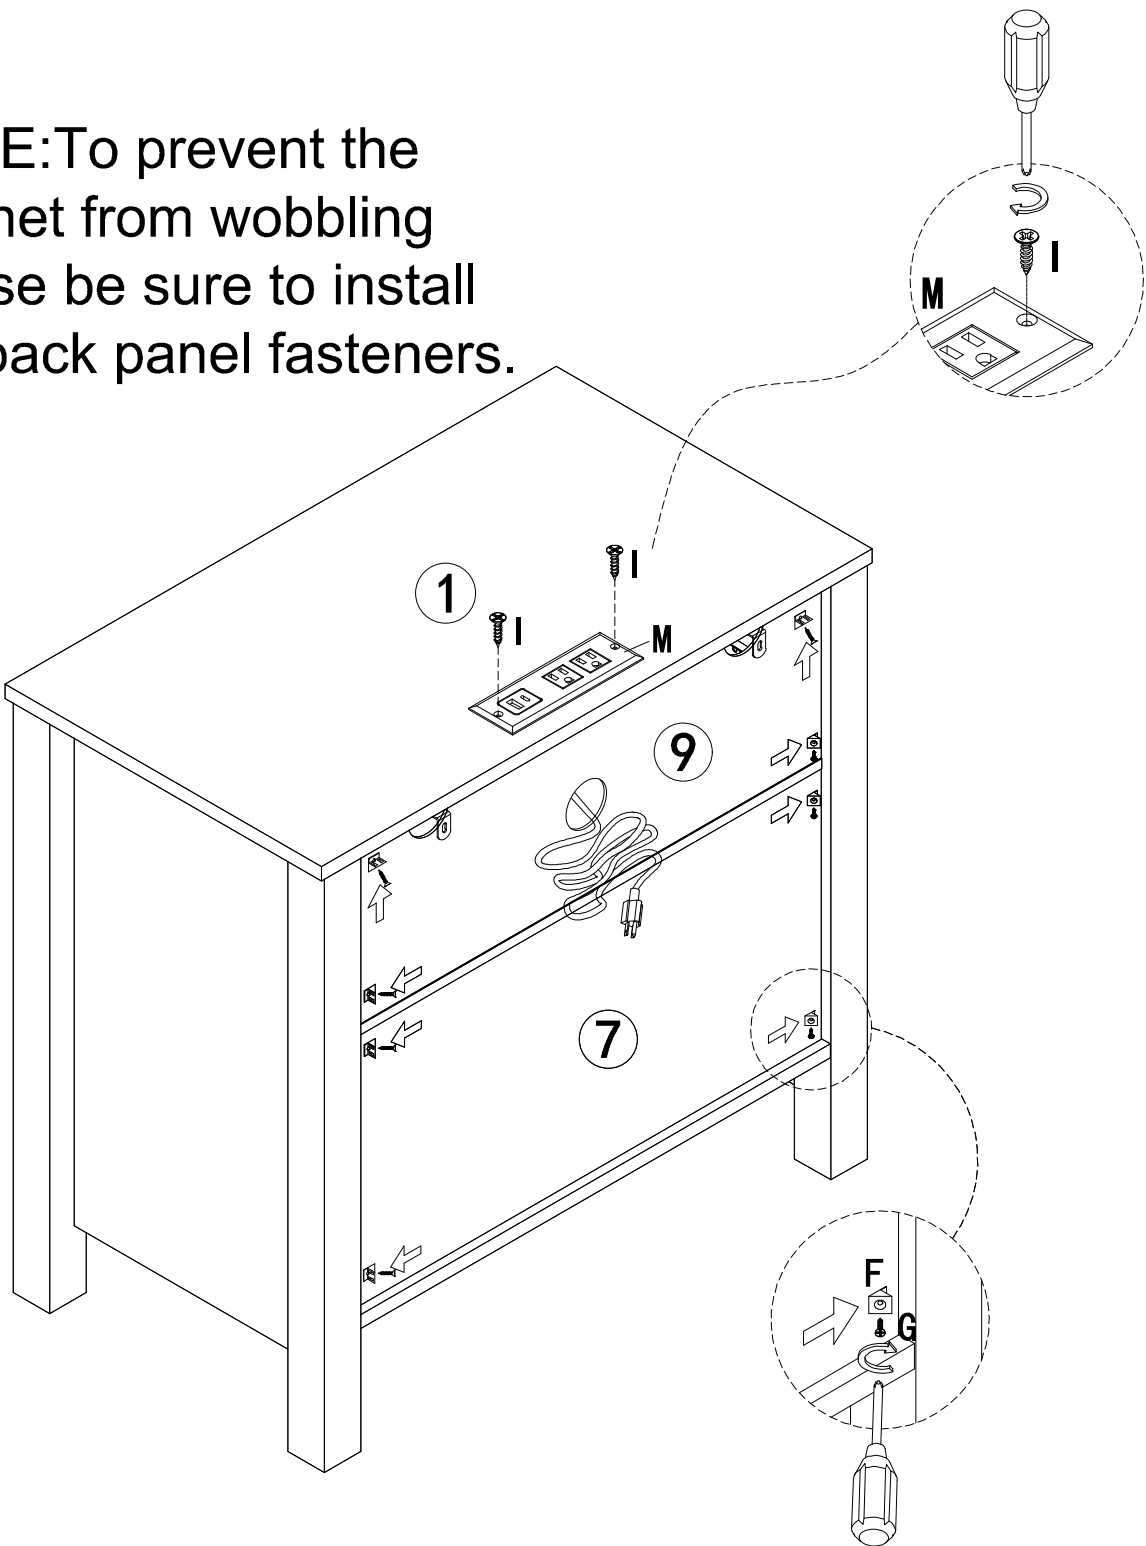

	F X 8PCS
	G X 8PCS
	I X 2PCS
	M X 1PC




STEP 12

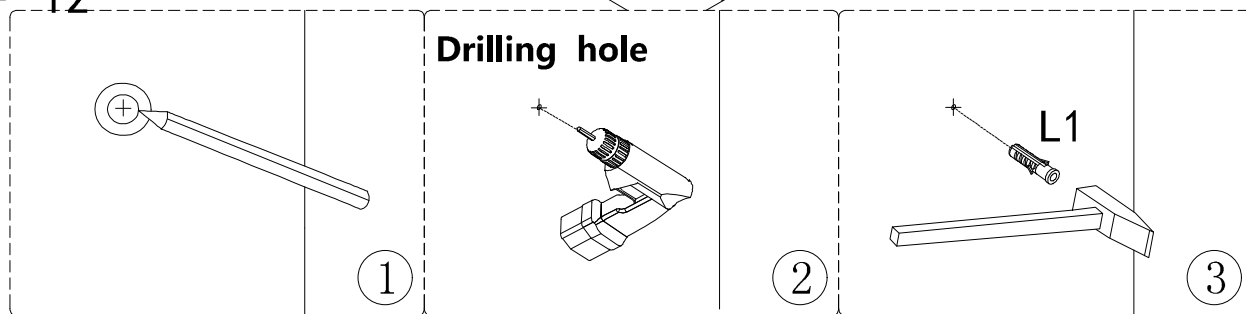



Drill a hole in the wall, then hammer the L1 into the wall with a hammer

WALL


Note: Follow step
Link L4 and L1 with a L2 using a
screwdriver, and assembly it tightly.

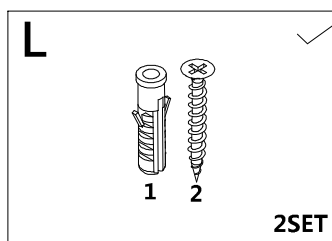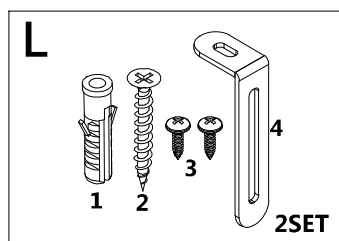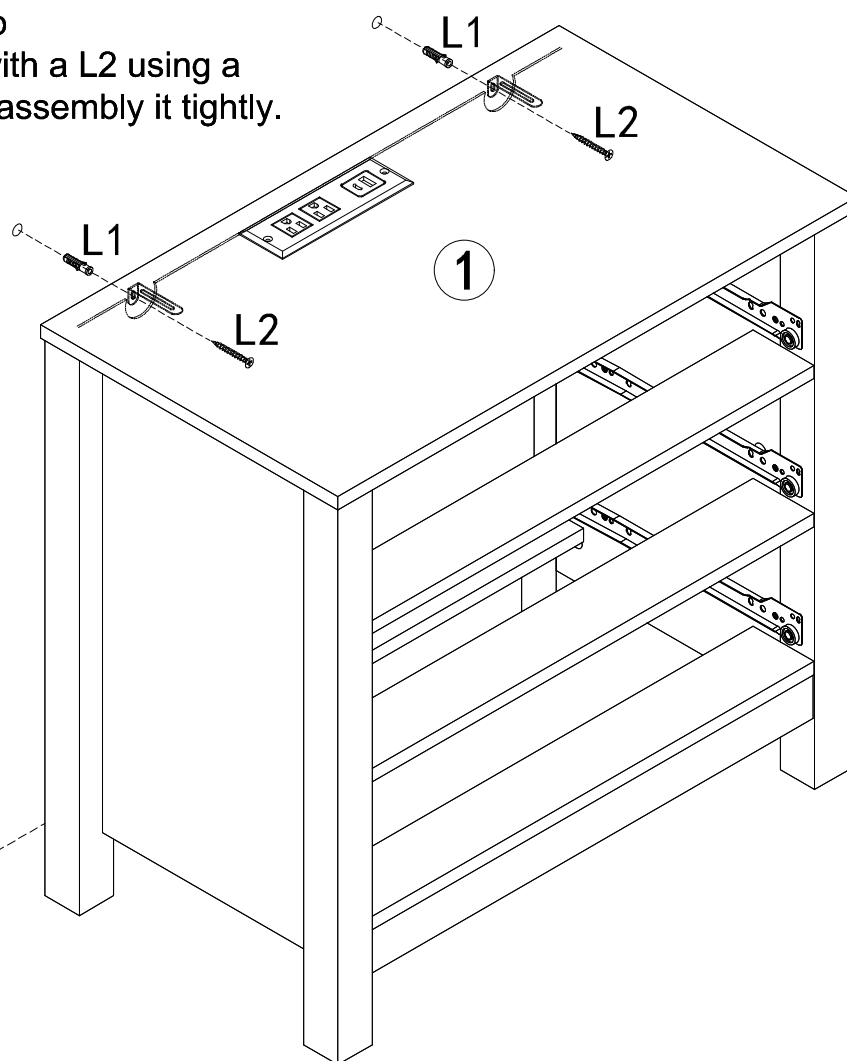

STEP 13

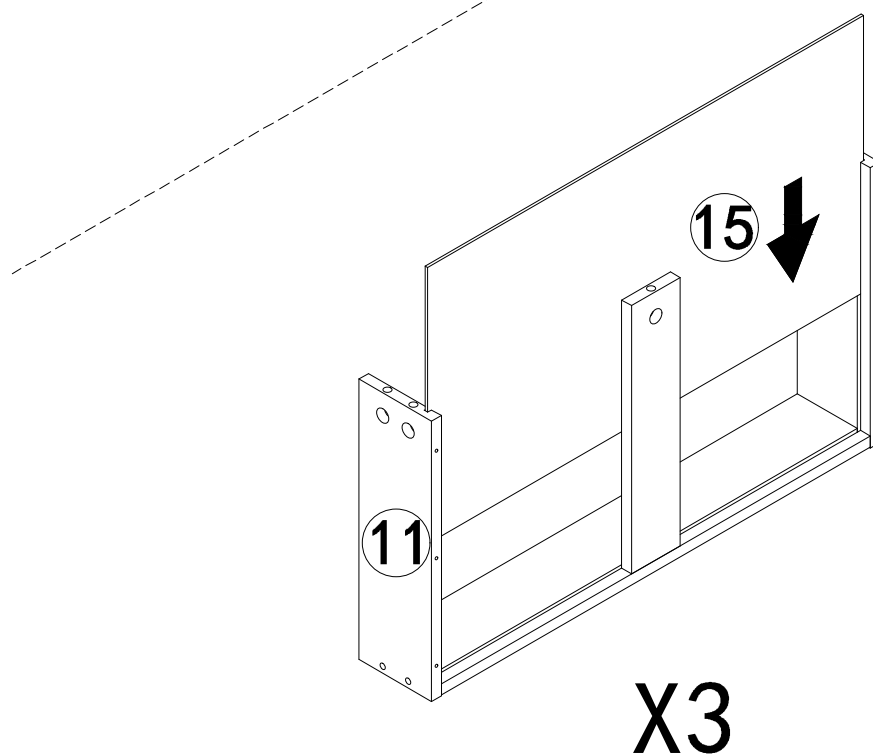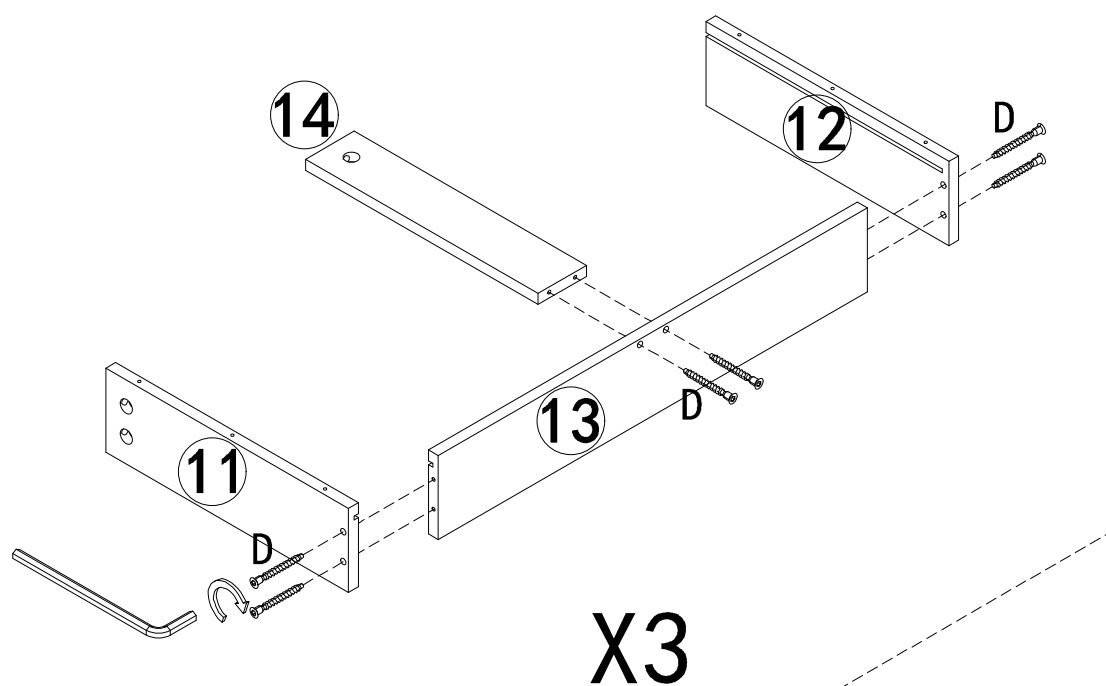




STEP 14

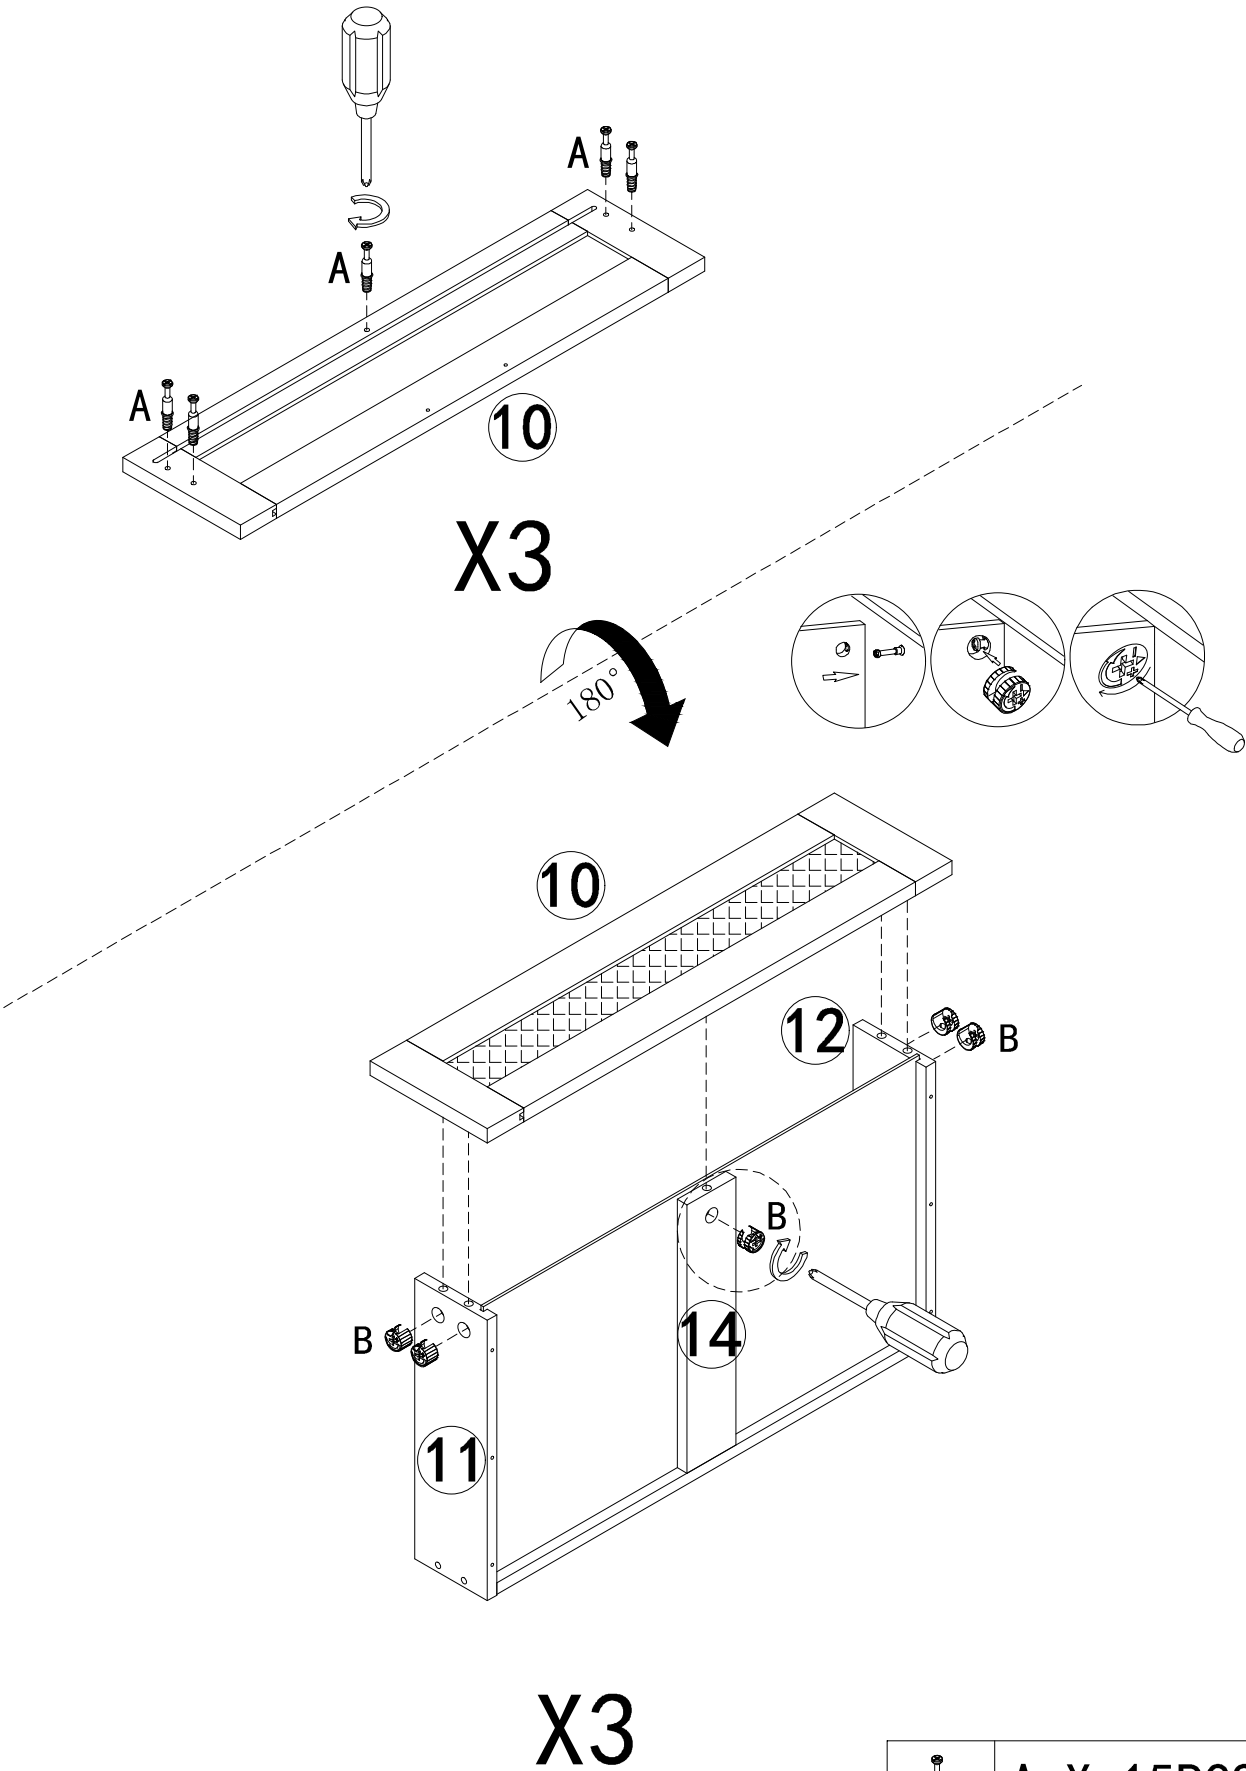

	A X 15PCS
	B X 15PCS

STEP 15

Pay attention to the hole position.

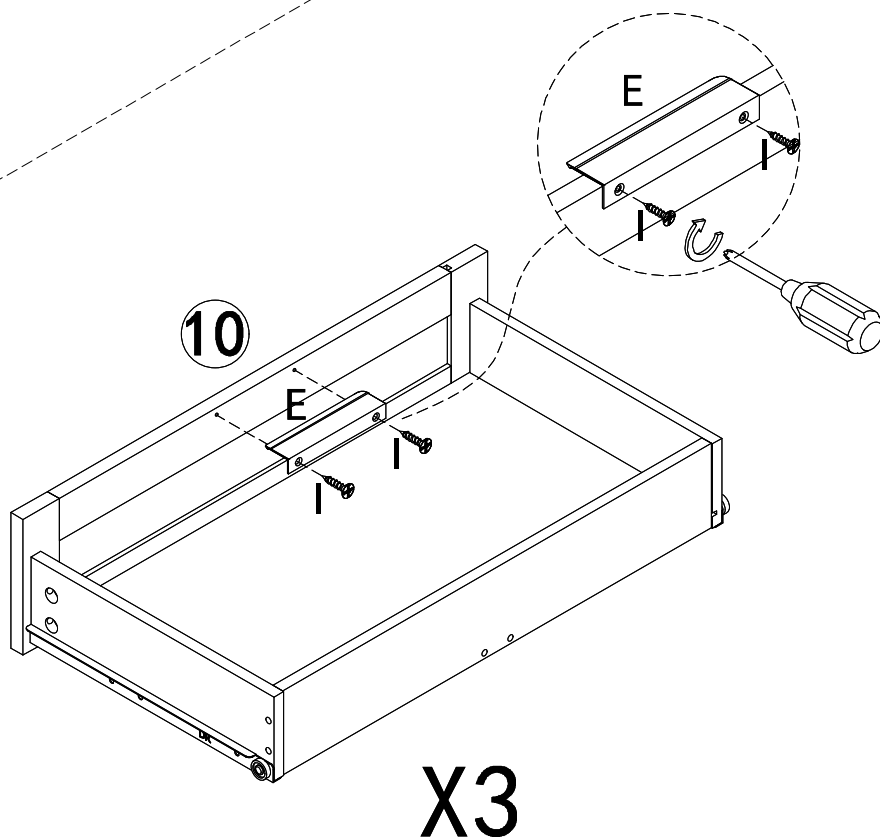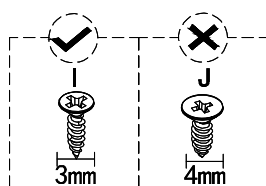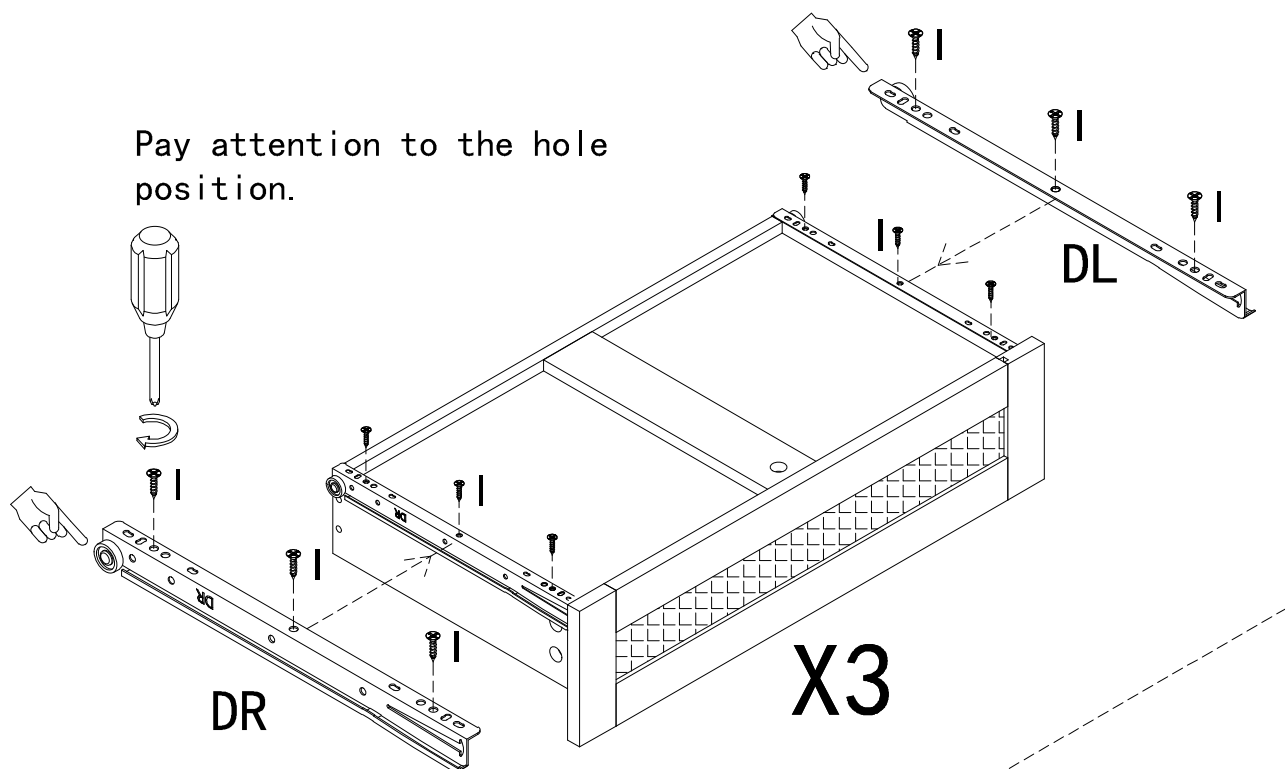

	E X 3PCS
	I X 24PCS

STEP 16

