


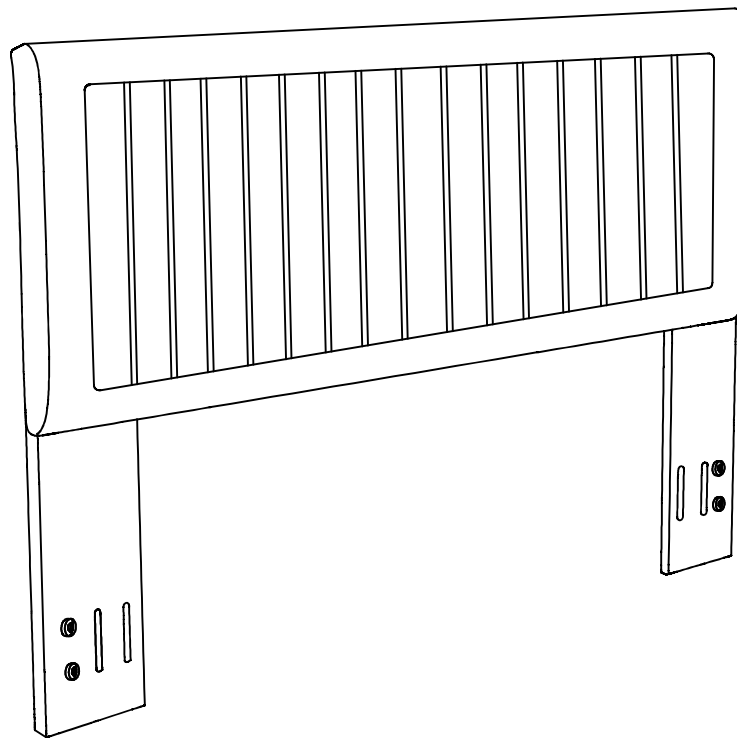


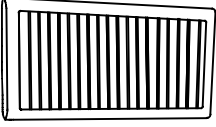





Upholstered Headboard



PARTLIST


<div data-bbox="150 174 188 219" data-label="Text">A</div> 	<div data-bbox="410 174 448 219" data-label="Text">B</div> 	<div data-bbox="675 174 713 219" data-label="Text">C</div> 
<div data-bbox="172 465 359 492" data-label="Text">Headboard Panel</div> <div data-bbox="242 510 295 537" data-label="Text">1 PC</div>	<div data-bbox="422 465 643 492" data-label="Text">Left Headboard Post</div> <div data-bbox="507 510 560 537" data-label="Text">1 PC</div>	<div data-bbox="681 465 901 492" data-label="Text">Right Headboard Post</div> <div data-bbox="766 510 818 537" data-label="Text">1 PC</div>

HARDWARE LIST

<div data-bbox="150 1209 188 1254" data-label="Text">#1</div>  <div data-bbox="172 1438 379 1464" data-label="Text">5/16"x1-3/4"L</div>	<div data-bbox="410 1209 448 1254" data-label="Text">#2</div> 	<div data-bbox="675 1209 713 1254" data-label="Text">#3</div> 	<div data-bbox="938 1209 976 1254" data-label="Text">#4</div> 	<div data-bbox="1201 1209 1240 1254" data-label="Text">#5</div>  <div data-bbox="1305 1438 1358 1464" data-label="Text">M5</div>
<div data-bbox="242 1505 295 1532" data-label="Text">Bolt</div> <div data-bbox="199 1550 347 1576" data-label="Text">15PCS(Extra1)</div>	<div data-bbox="450 1505 611 1532" data-label="Text">Spring Washer</div> <div data-bbox="450 1550 611 1576" data-label="Text">19PCS(Extra1)</div>	<div data-bbox="730 1505 863 1532" data-label="Text">Flat Washer</div> <div data-bbox="730 1550 879 1576" data-label="Text">19PCS(Extra1)</div>	<div data-bbox="1040 1505 1093 1532" data-label="Text">Nut</div> <div data-bbox="997 1550 1145 1576" data-label="Text">5PCS(Extra1)</div>	<div data-bbox="1248 1505 1396 1532" data-label="Text">Allen Wrench</div> <div data-bbox="1305 1550 1358 1576" data-label="Text">1 PC</div>
<div data-bbox="150 1608 188 1653" data-label="Text">#6</div>  <div data-bbox="226 1908 316 1935" data-label="Text">Wrench</div> <div data-bbox="242 1953 295 1980" data-label="Text">1 PC</div>				

Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

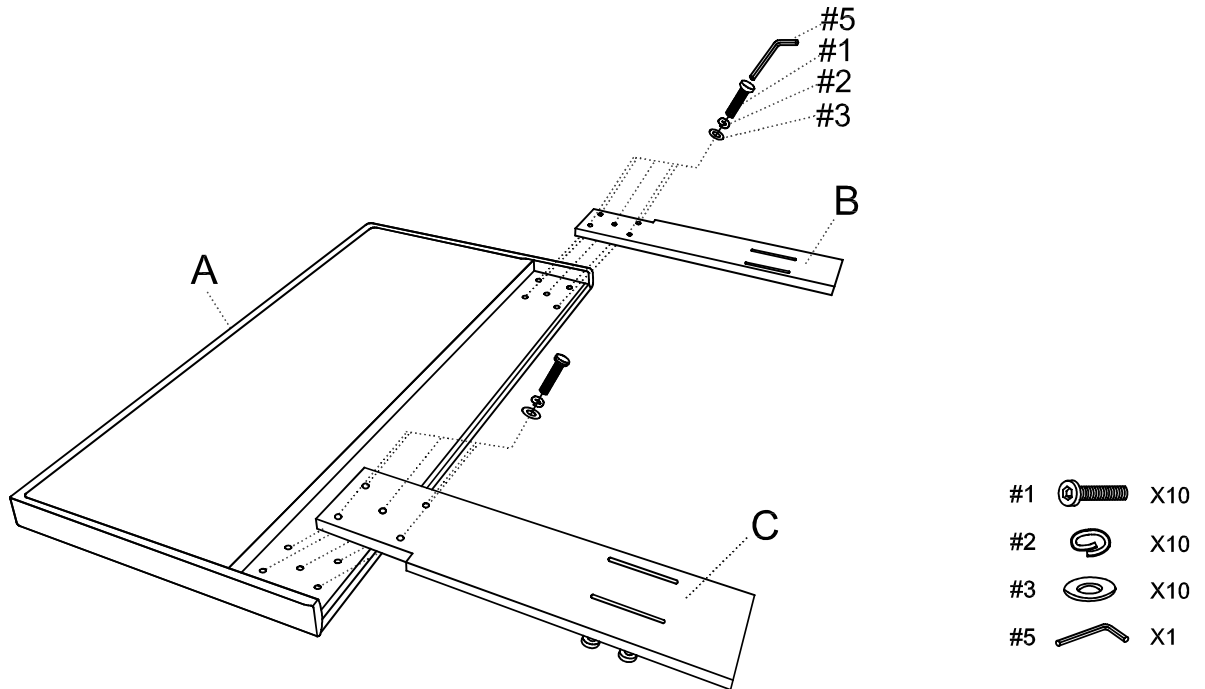

Step 2. Screw out the bolts on the headboard posts using allen wrench (part #5). Attach bed frame (*Not Included) to left headboard post (part B) and right headboard post (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3), nuts (part #4), allen wrench (part #5) and wrench (part #6).

