

Cordless Bamboo Shade - Installation Instructions

Congratulations on purchasing the best in class cordless bamboo shade on the market. You will be overjoyed with this superior product in which quality was never compromised.

Parts Included: Shade Width	Brackets	Anchor	Screw A (large)	Screw B (small)
18" to 29"	2	8	8	2
30"+	3	12	12	2

Step 1 – Select your shade positioning

Select the method of mounting your shade that best suits your purpose and determine the shade's precise location.

- 1) Inside the window frame.
- 2) On the outside of frame
- 3) On the overhead surface ceiling.

Step 2 - Installing the mounting brackets

Bracket should be placed at the end of the width of the shade's head rail 4 inches from each end. If your shade is supplied with the support brackets, position them evenly between the end mounting brackets. Use the larger screws and *anchors to attach the brackets. Make sure the support bracket is in line with the end mounting brackets.


**Note the anchors may be appropriate for many wall-types; however, you will want to ensure that the anchors provided are appropriate for your walls. Your local hardware shop can help with this if you are unsure.*

Step 3 - Fitting the shade into the brackets

Slide the top-inside-forward portion of the head rail onto the metal hook at the front of the bracket (labeled-1), and push the rest of the head rail towards the back (labeled-2) of the bracket to lock the head rail in place. Check carefully to assure that each bracket is properly secured.

Step 4 – Install Bottom Shade Stiffener

On the bottom back of your shade are two pieces of wood that can be slid upwards to stiffen the bottom of your shade. This will allow you to easily push your shade up. Use Screw B to permanently attach the stiffeners

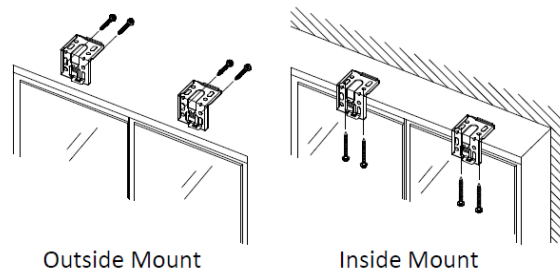

Use brackets and Screw A (large screw) + anchor

