


Tribesigns

DESIGNED FOR LIFE

Assembly Instructions

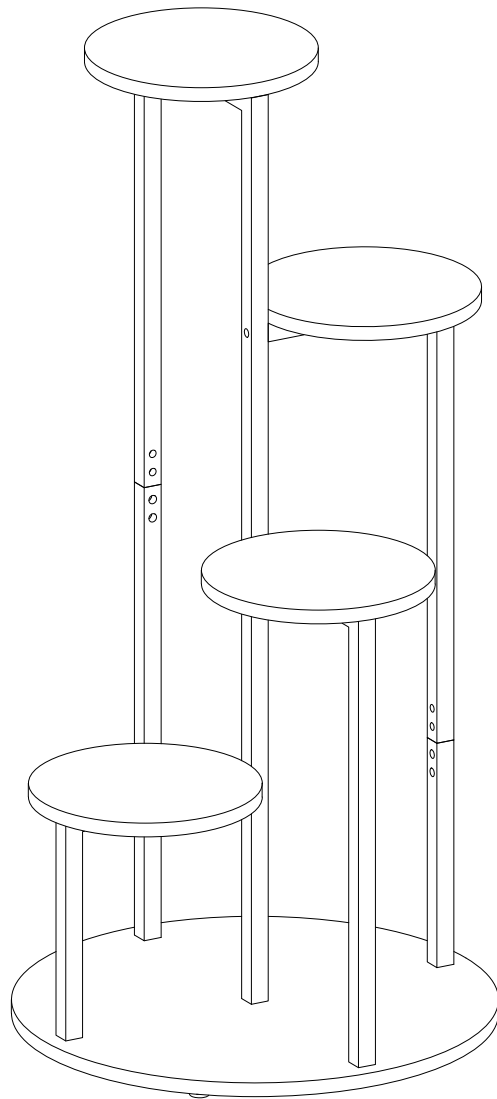

Flower Rack

Model No.
HOGA-U0181
HOGA-U0183

 **LITTLE TREE**
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.


How to Get the Assembly Video

Step 1 Scan the QR code.






Installation Video

Step 2 Search with the Model No. (on the bottom left corner of the title page)

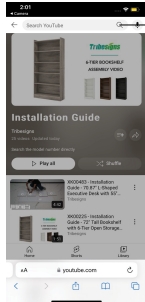


HOGA-U0181


Note: If you can't find the assembly video, please contact us.

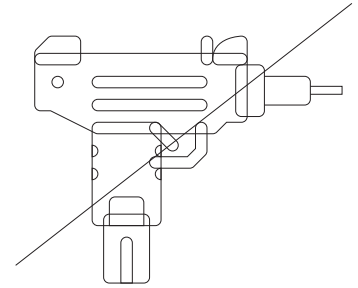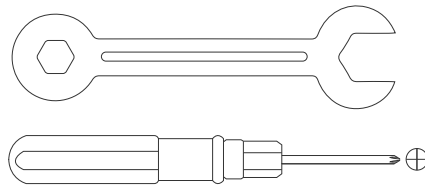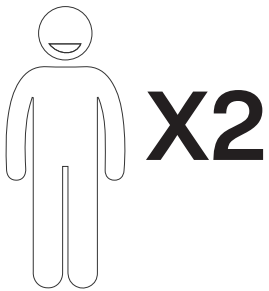

We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

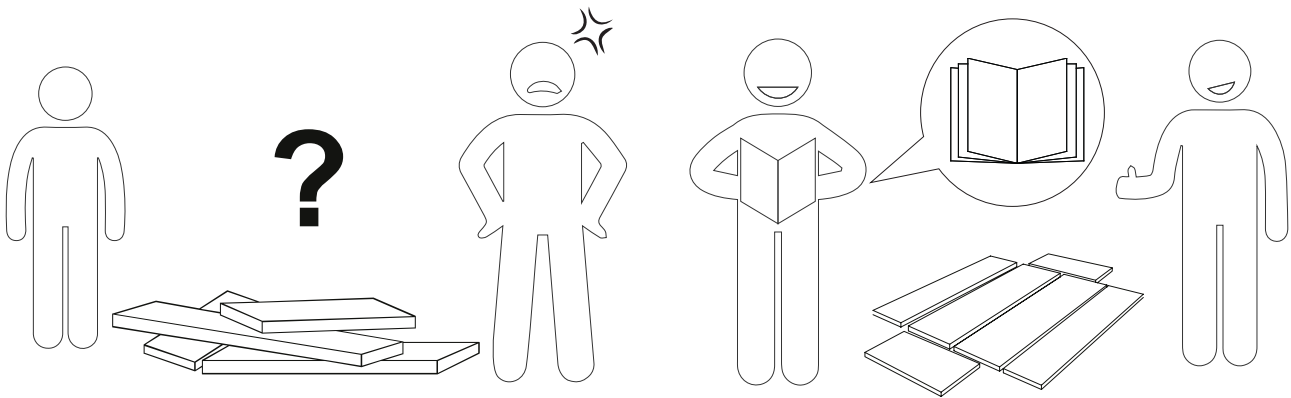


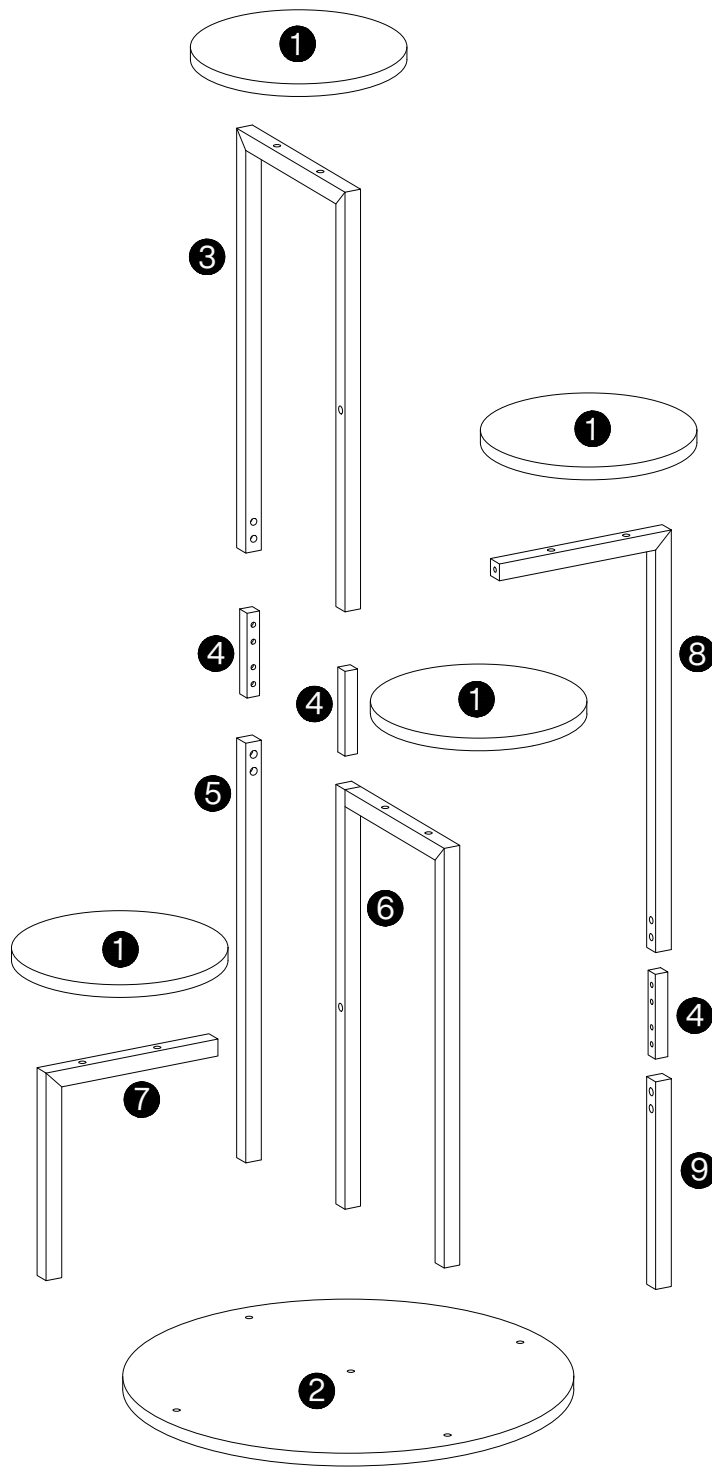


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List



① 4 pcs

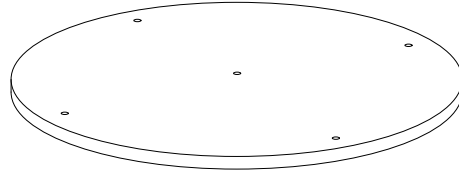


② 1pc




③ 1pc




④ 3 pcs




⑤ 1pc



⑥ 1pc

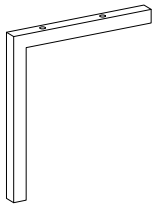

⑦ 1pc

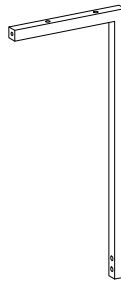

⑧ 1pc



⑨ 1pc



Hardware List

A	X12+1	B	X8+1	C	X5+1	D	X2+1	E	X1	F	X4
M6X12 mm		M6X30 mm		M6X35 mm		M6X40 mm		M4X55 mm		M6XØ20 mm	



1



screw down

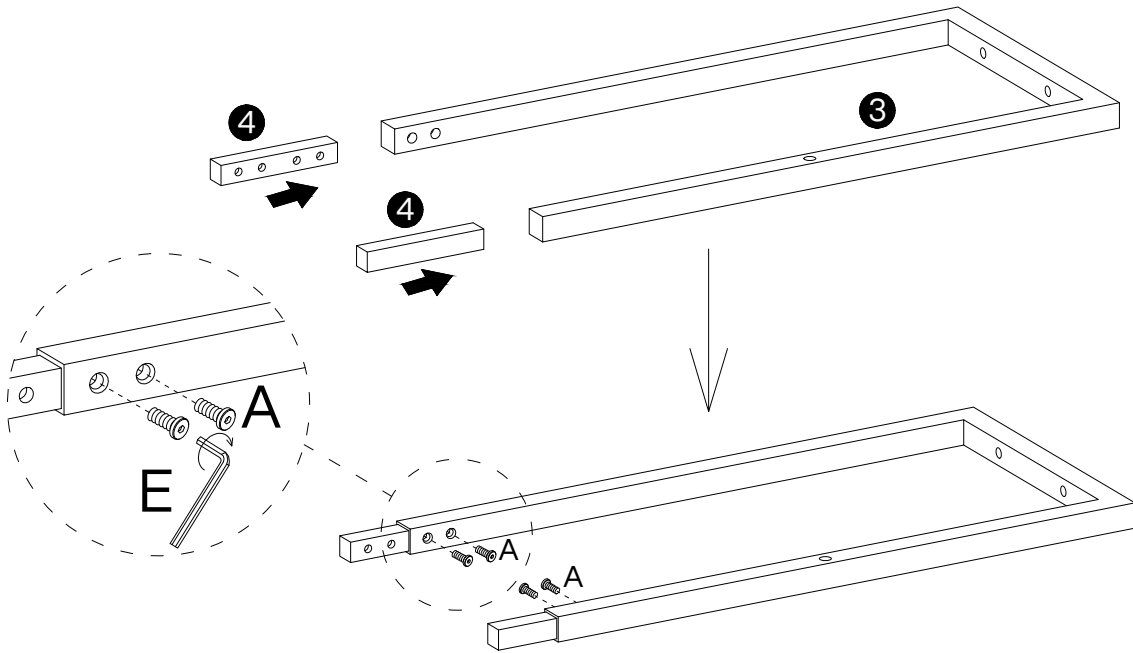

A	X4	E	X1
M6X12 mm		M4X55 mm	

2

screw down

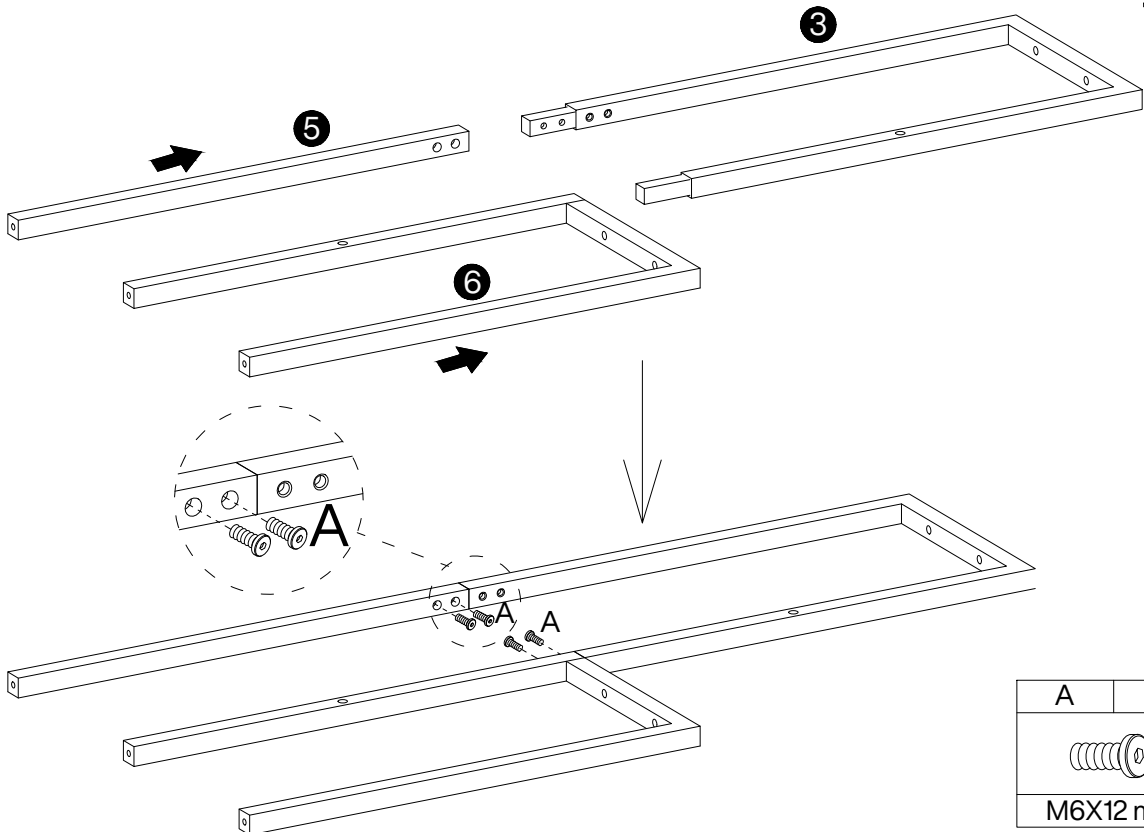


A	X4
M6X12 mm	



3


screw down

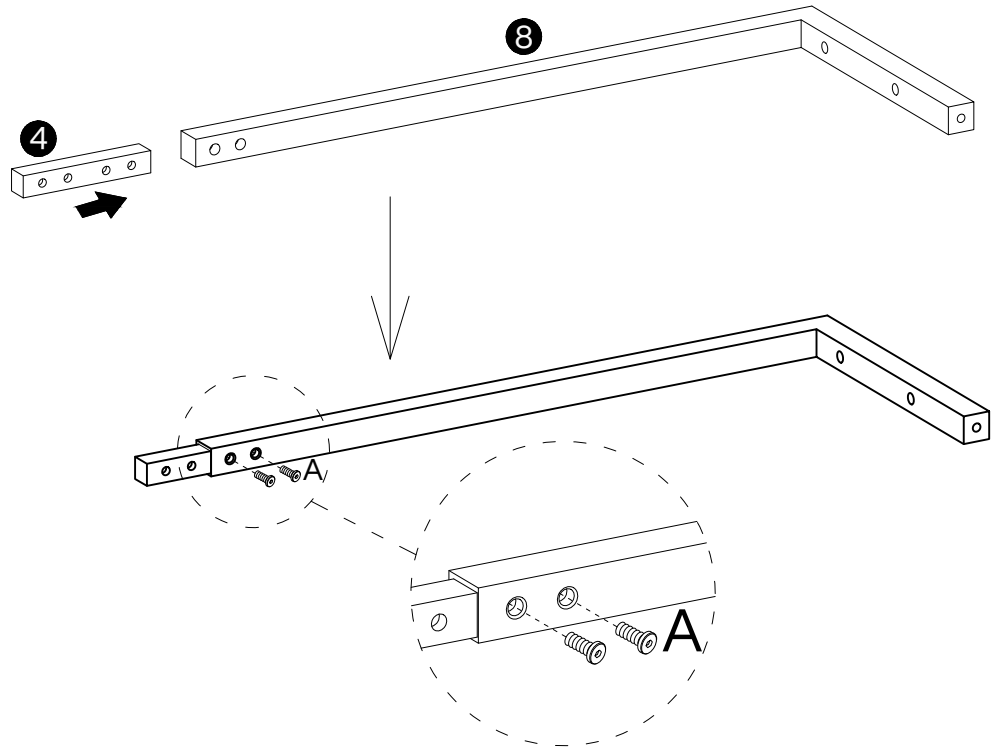

A	X2
M6X12 mm	

4

screw down


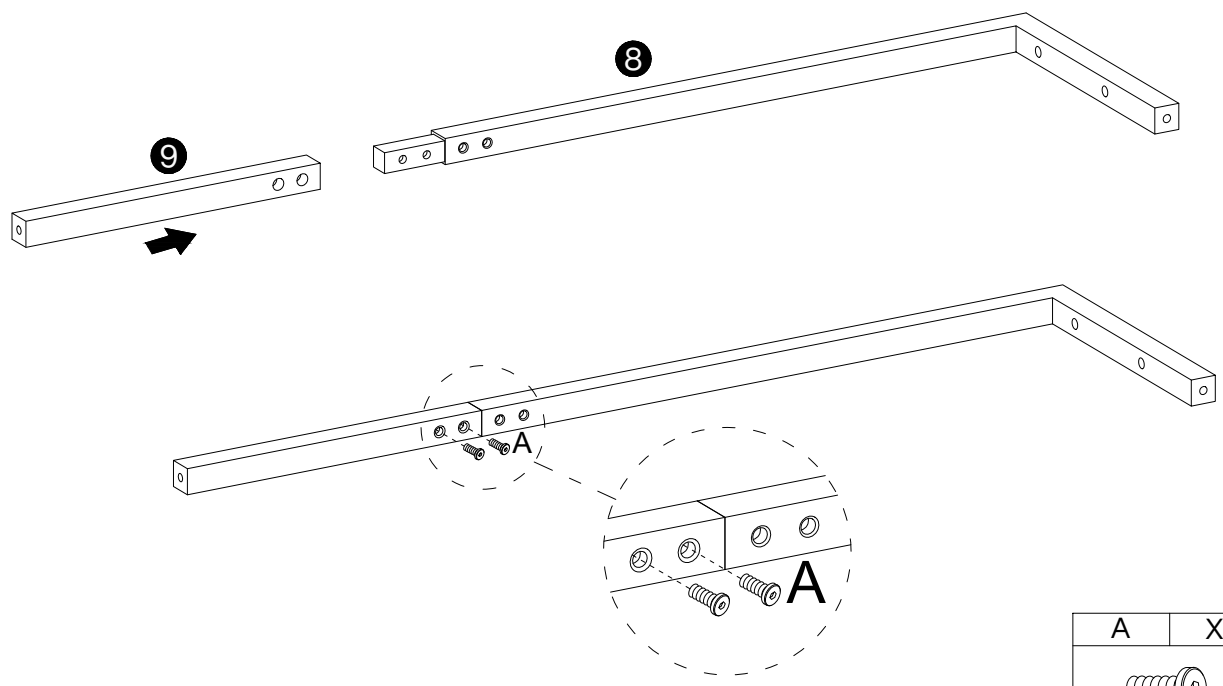


A	X2
M6X12 mm	



5



pre-drill 70%

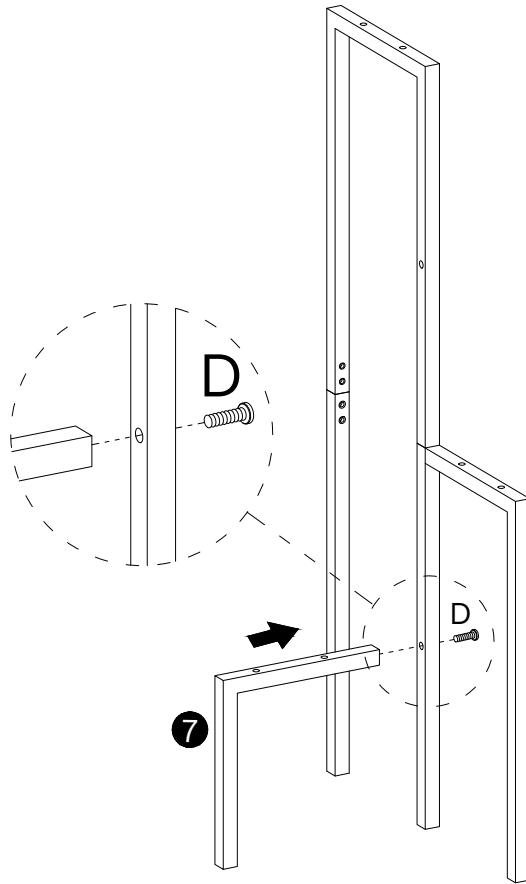

D	X1
M6X40 mm	

6


pre-drill 70%

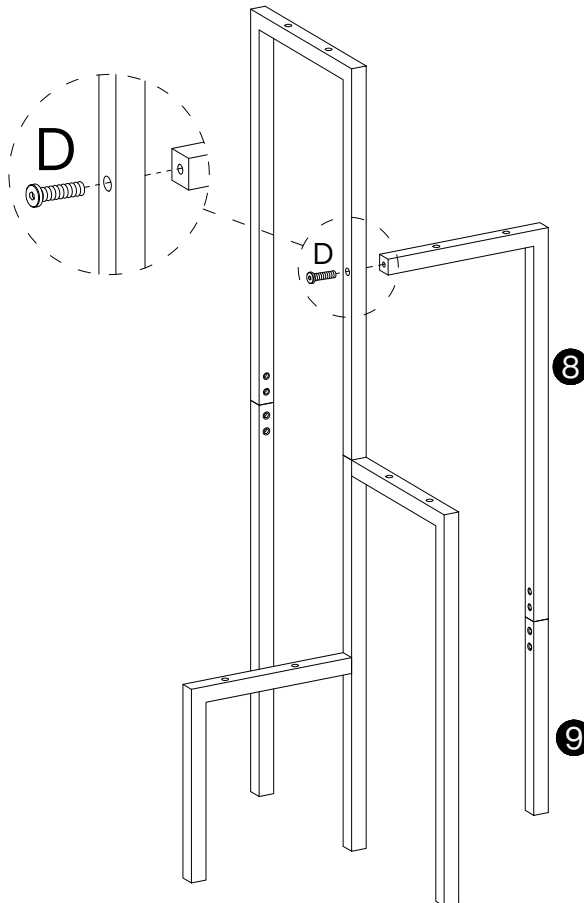


D	X1
M6X40 mm	



7

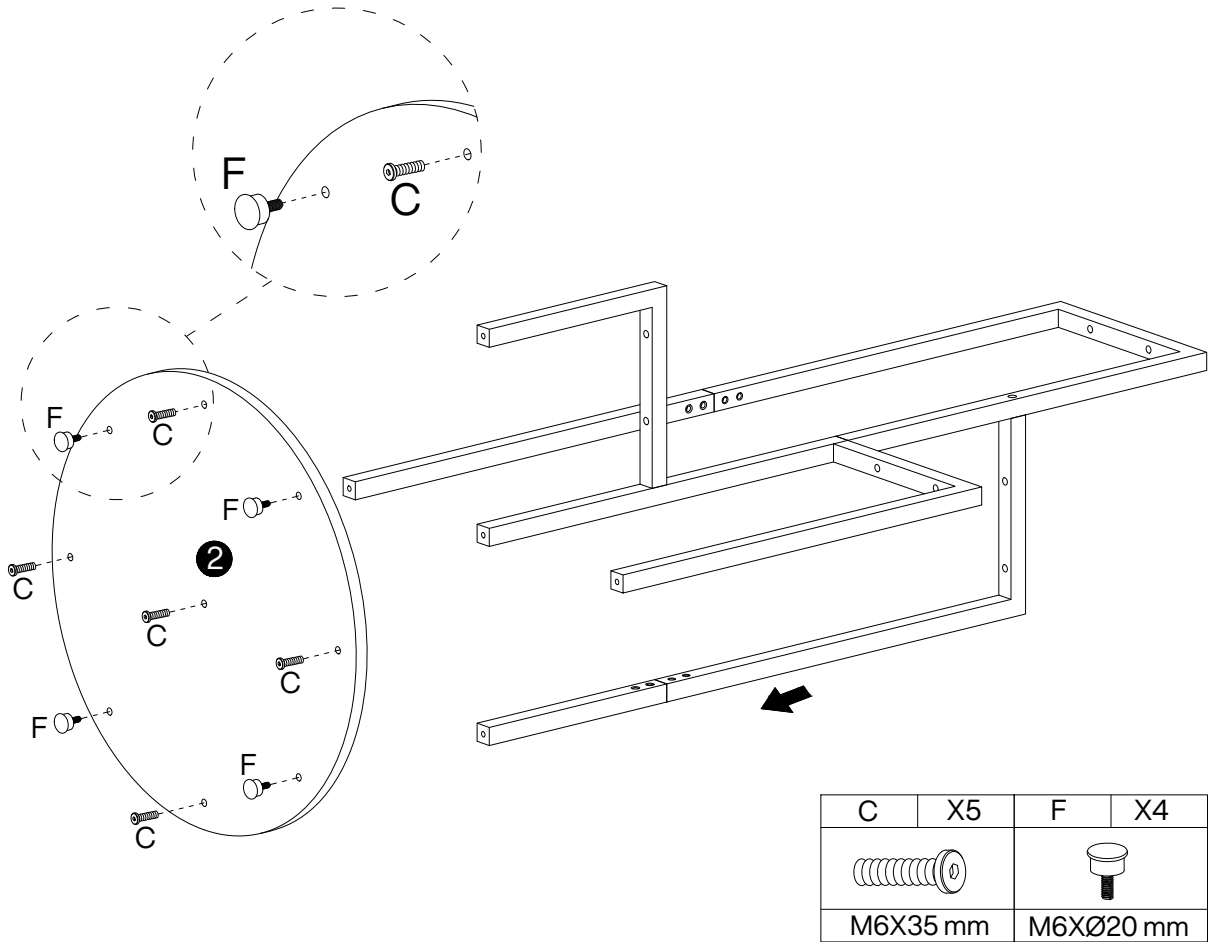


8

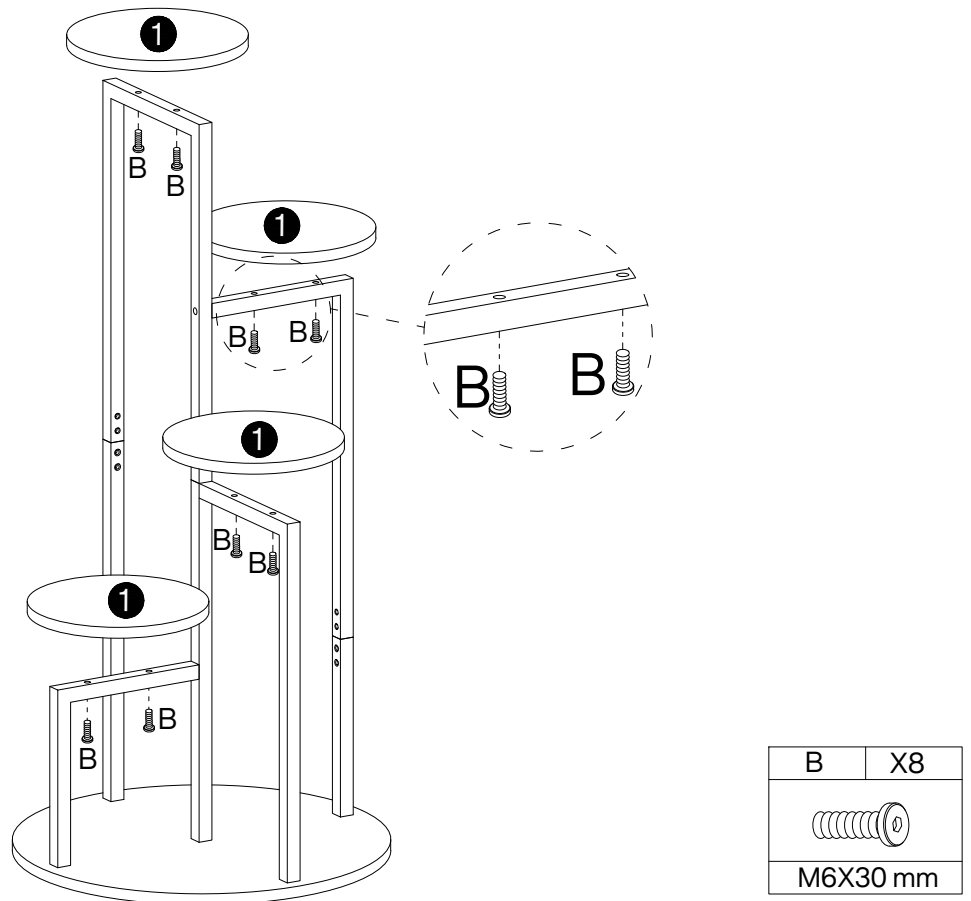



DESIGNED FOR LIFE

Thank you for your support!

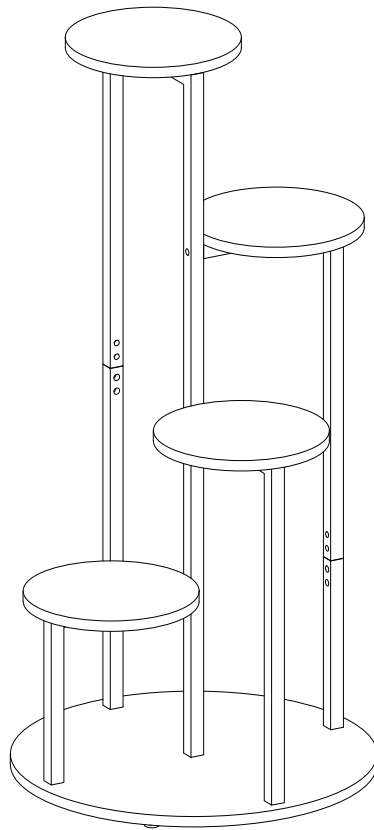

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

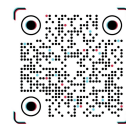

TikTok



WhatsApp