
ASSEMBLY INSTRUCTIONS

MB01 Murphy Bed

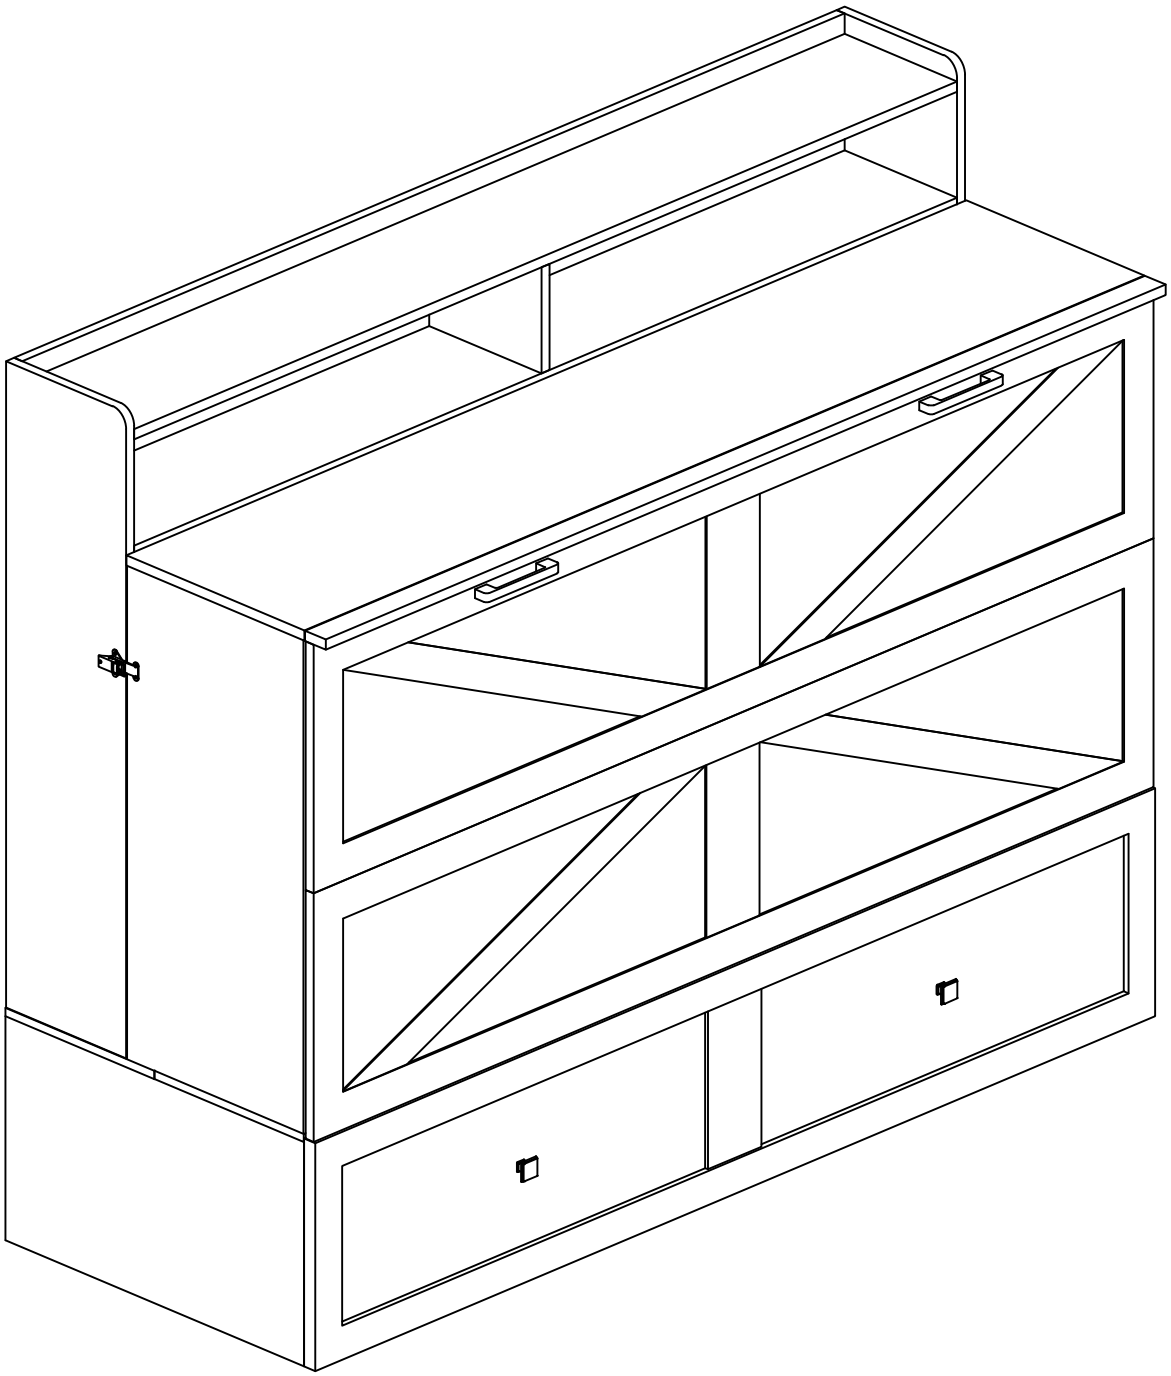

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damaged parts or hardware.Please also tell us your "Order ID", We will solve for you as soon as possible.

EMAIL: customerservice@hkfoam.com

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.Contact customer service for missing parts.

3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. Keep all hardware parts out of reach of children.

2. Dispose plas c packaging material immediately to avoid any risk of suffoca on to children and animals..

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.

2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.

3. Iden fy all of the parts, hardware and quan es required for each step.

4. During assembly, do not over- ghten any fi ngs as this may cause damage.

5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.

6. Always place the product on a flat, level surface.

7. Do not sit or stand on the par ally assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.


- Check all the fi ngs periodically and re- ghten as necessary. Do not use the product if any of the parts is damaged or broken.

- Never allow any kind of liquid to remain on your furniture. Absorp on can cause wood to warp or delaminate.

- Do not place hot items (e.g. hot drinks) directly onto the wood surface.



















Part List

Please check if all the pieces listed below are received

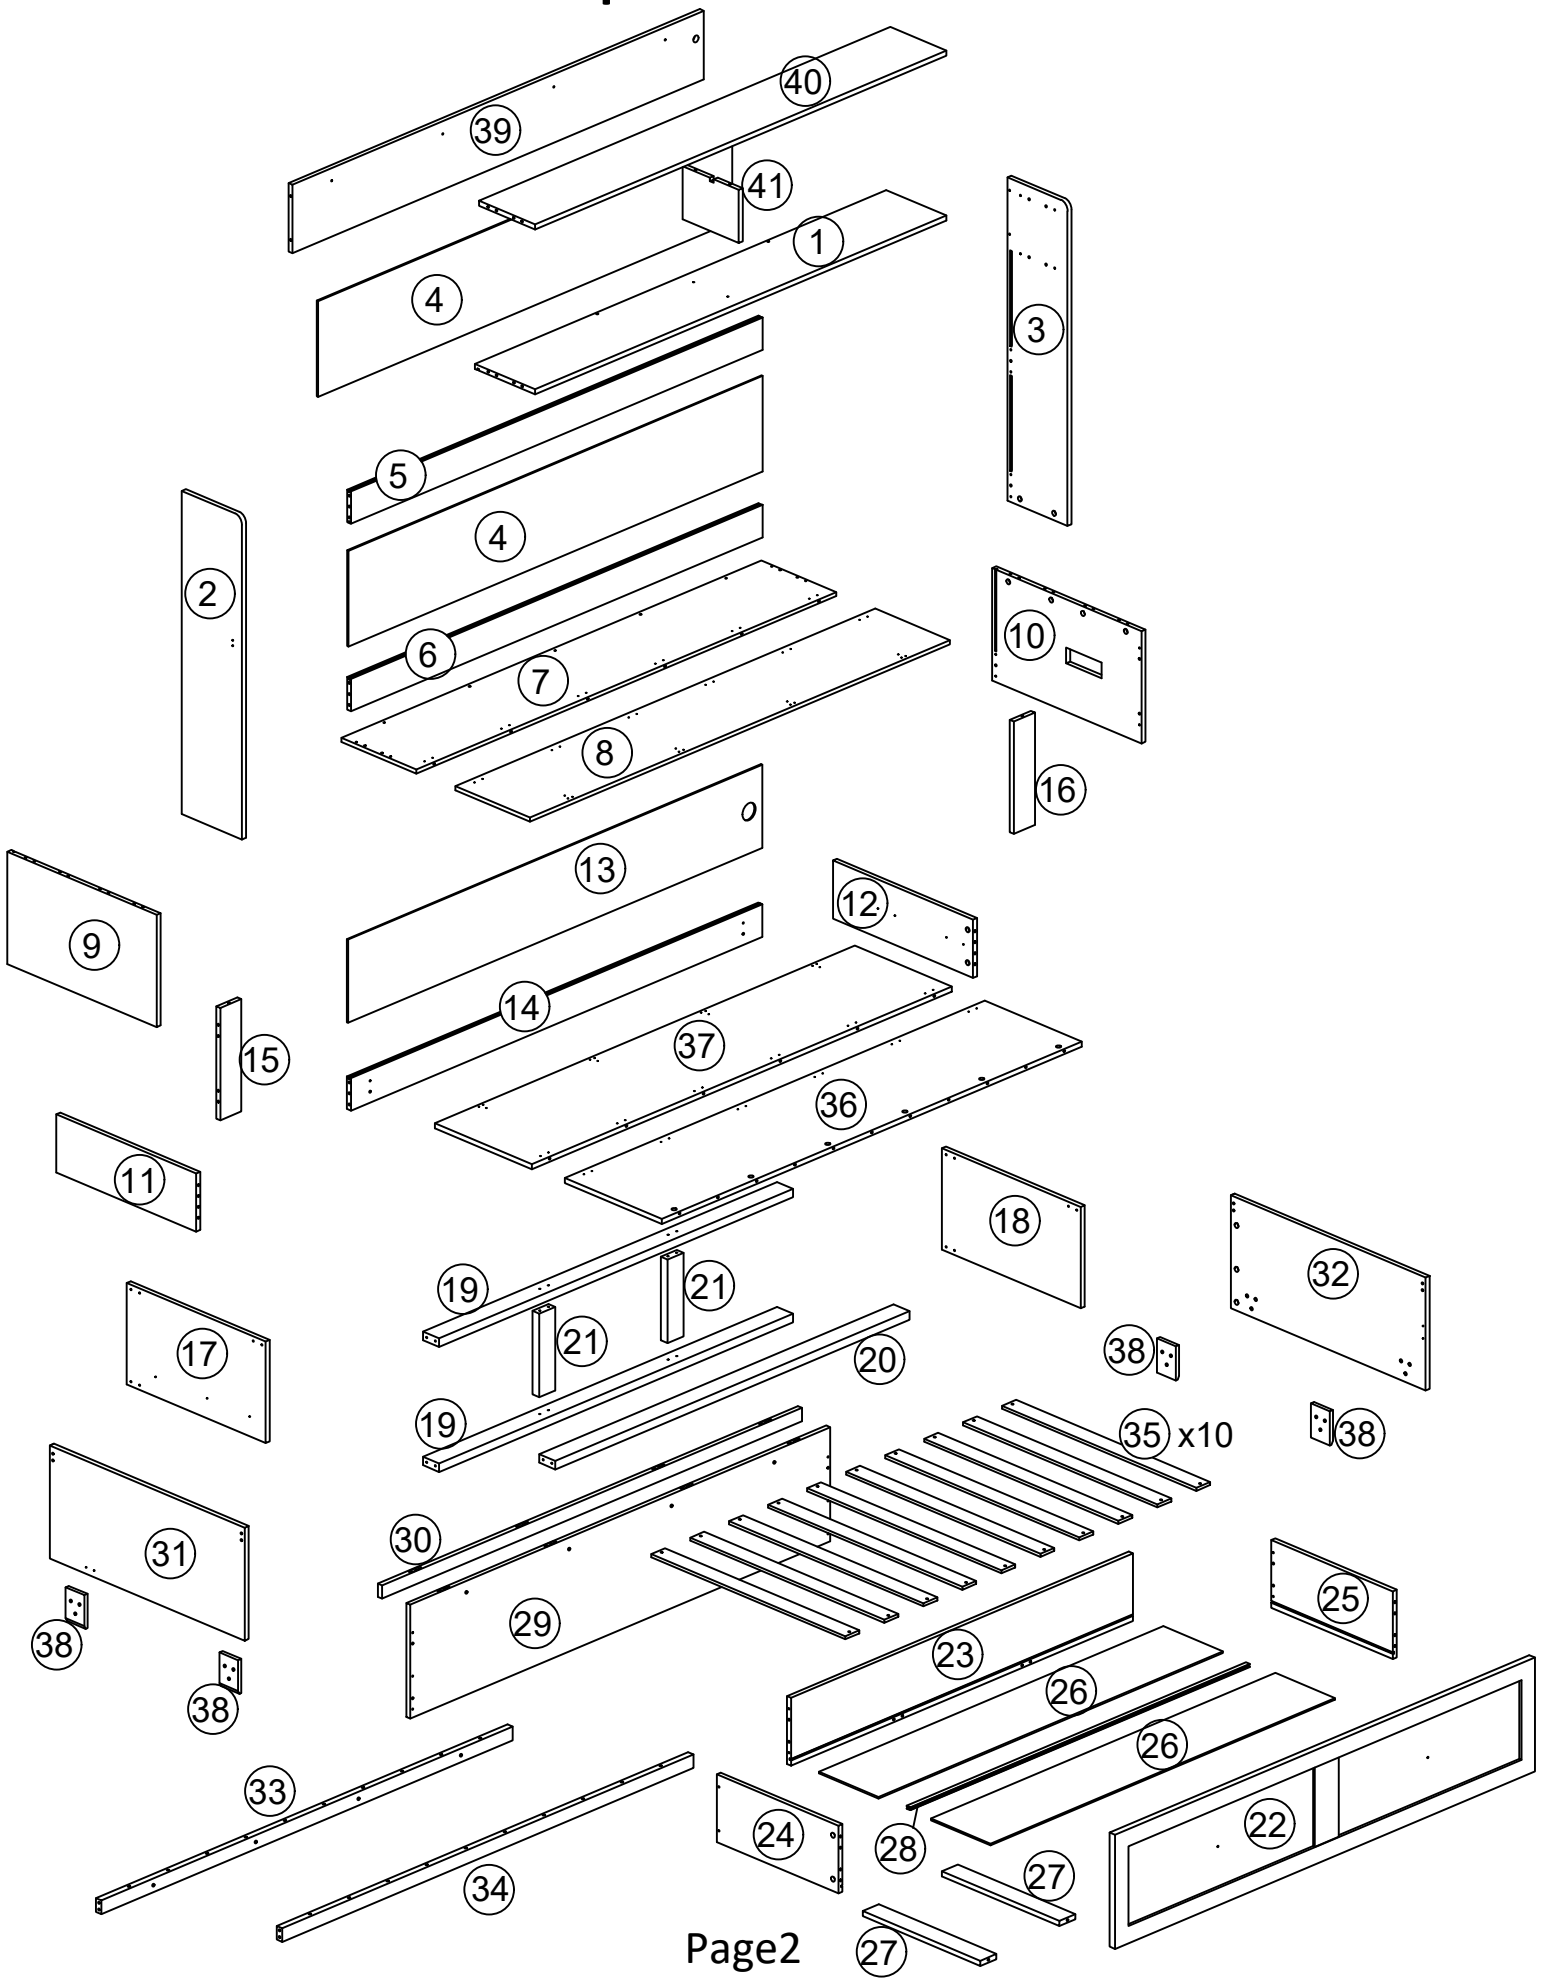












Parts List / Teile Liste

Please check if all the pieces listed below are received

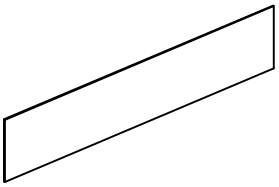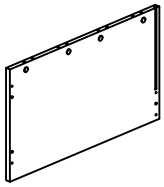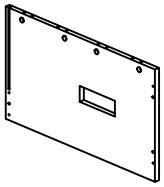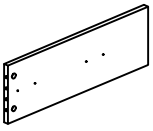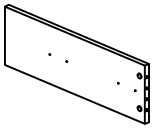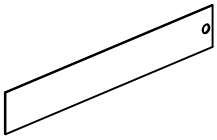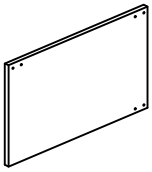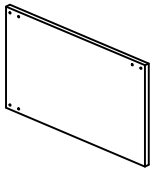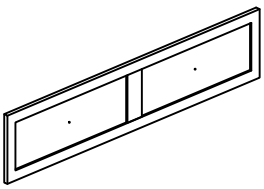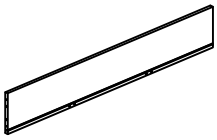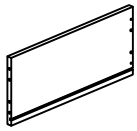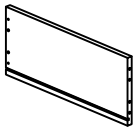 1 x1	 2 x1	 3 x1	 4 x2	 5 x1
 6 x1	 7 x1	 8 x1	 9 x1	 10 x1
 11 x2	 12 x1	 13 x1	 14 x1	 15 x1
 16 x1	 17 x1	 18 x1	 19 x2	 20 x1
 21 x2	 22 x1	 23 x1	 24 x1	 25 x1






Parts List / Teile Liste

Please check if all the pieces listed below are received

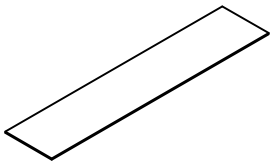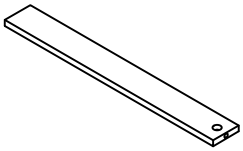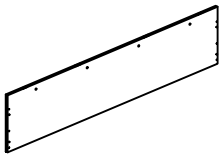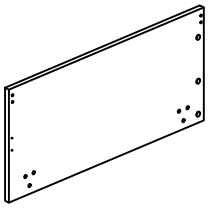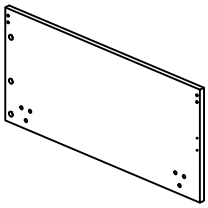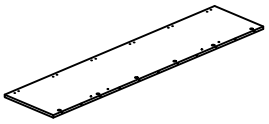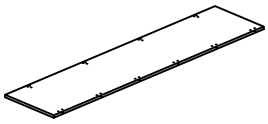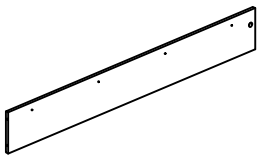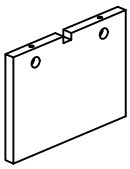 26 x2	 27 x2	 28 x1	 29 x1	 30 x1
 31 x1	 32 x1	 33 x1	 34 x1	 35 x10
 36 x1	 37 x1	 38 x4	 39 x1	 40 x1
 41 x1				























Hardware List

Please check if all the pieces listed below are received

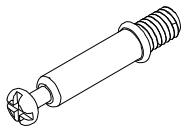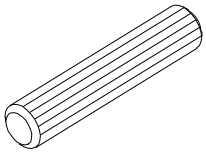A	B	C	D	E
 Cam bolt Ø6*35mm Qty: 73+5	 Cam lock Ø15*9mm Qty: 53+2	 Screw D5*40mm Qty: 52+5	 Wood dowel Ø6*30mm Qty: 55+5	 Screw D3.5*12mm Qty:130+5


Hardware List

Please check if all the pieces listed below are received

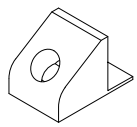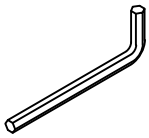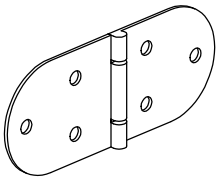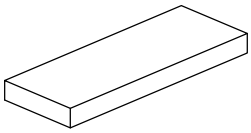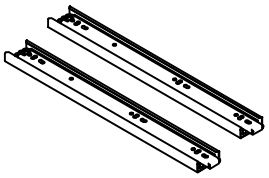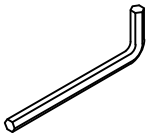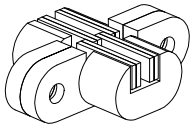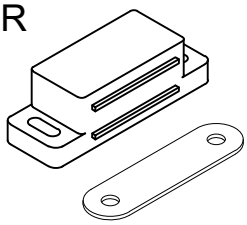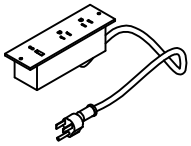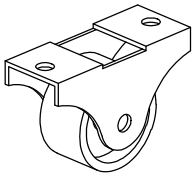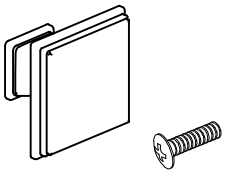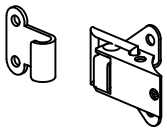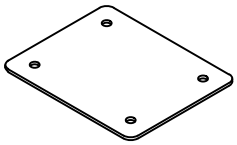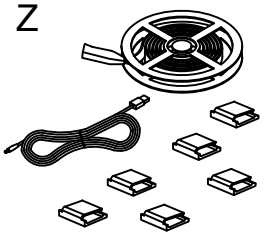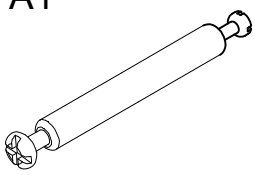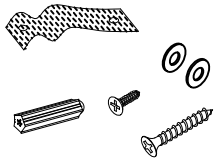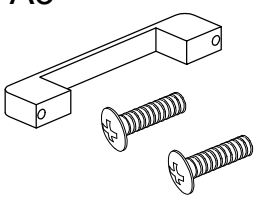F  Plastic wedge Qty: 14+1	G  Screw D3*16mm Qty:14+1	H  Hex screwdriver #3 Qty: 1	J  Screw M6X30mm Qty: 12+1	K  Screwdriver Qty: 1
L  Hinge Qty: 4	M  Rubber pad Qty: 4	N  Screw M6X20mm Qty:32+3	O  Slide rail Qty: 1	P  Hex screwdriver #4 Qty: 1
Q  Hinge Qty: 4	R  Magnetic catch Qty: 2	S  T-connector plate Qty: 2	T  Power strip Qty: 1	U  Wheel Qty: 8+1
V  Handle Qty: 2	W  Latch M6X20mm Qty: 2	X  Screw D3.5*25mm Qty:16+1	Y  Metal plate Qty:12	Z  Light strip Qty:1
A1  Cam bolt Ø6*64mm Qty: 12+1	A2  Anti-tip kit Qty: 2	A3  Handle Qty: 2		

ASSEMBLY REQUIREMENTS


3-4 Hours Assembly Time (Approximate)


2 -Person Assembly 

Tools Required (Not Provided):

Power Drill 


How the knock down assembly system works

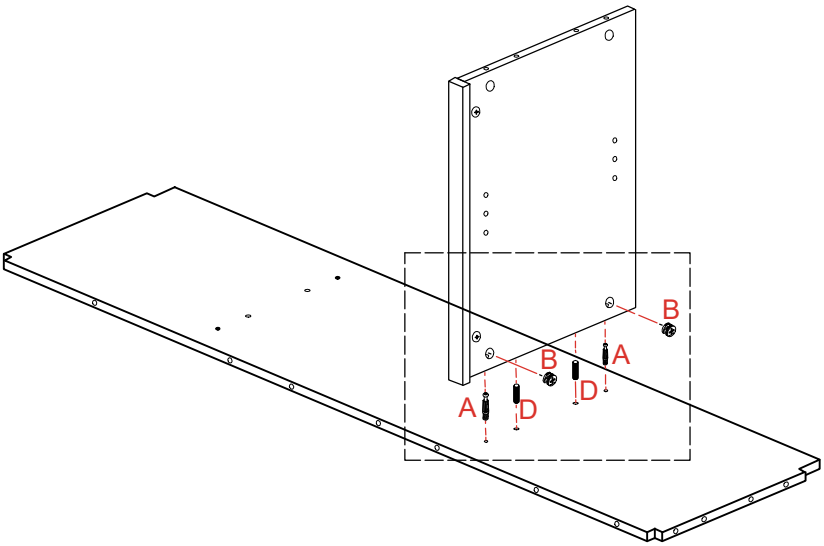

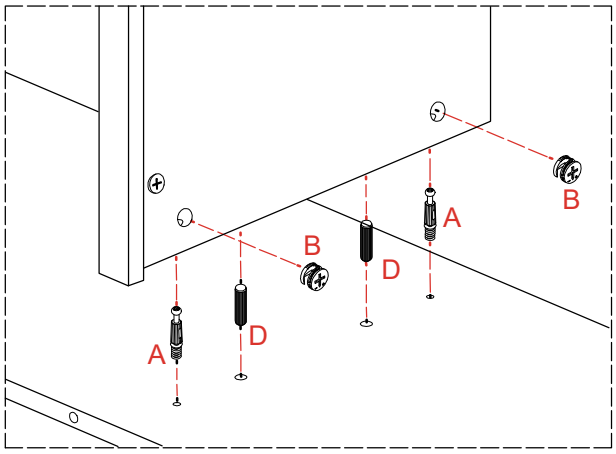


How to Install Wood Dowel


Insert the wood dowel (D) at least half wat by tapping lightly with a rubber mallet,IF NECESSARY.

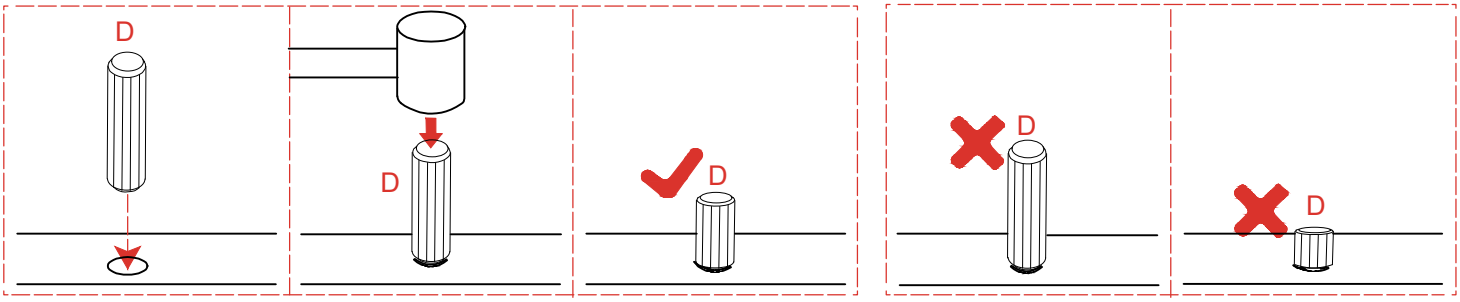

CAM LOCK SYSTEM OPERATION

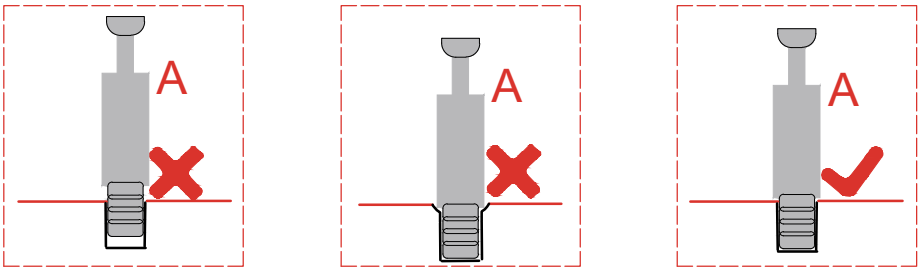

1.Screw the cam bolt (A) into the threaded insert on the panel.
2.Connect both panels together making sure cam bolt (A) goes into the pre-drilled large gole on the end of panel for cam lock (B).
3.Insert the cam lock (B) into the pro-drilled large hole on the panel. Make sure the cross slot of cam lock (B) faces out (The arrow should point towards Screw No. A) .
4.Rotate the cam lock (B) clockwise with a self-supplied phillips screwdriver to lock the cam bolt (A) in place (Rotate 100-180 degrees until tight) .

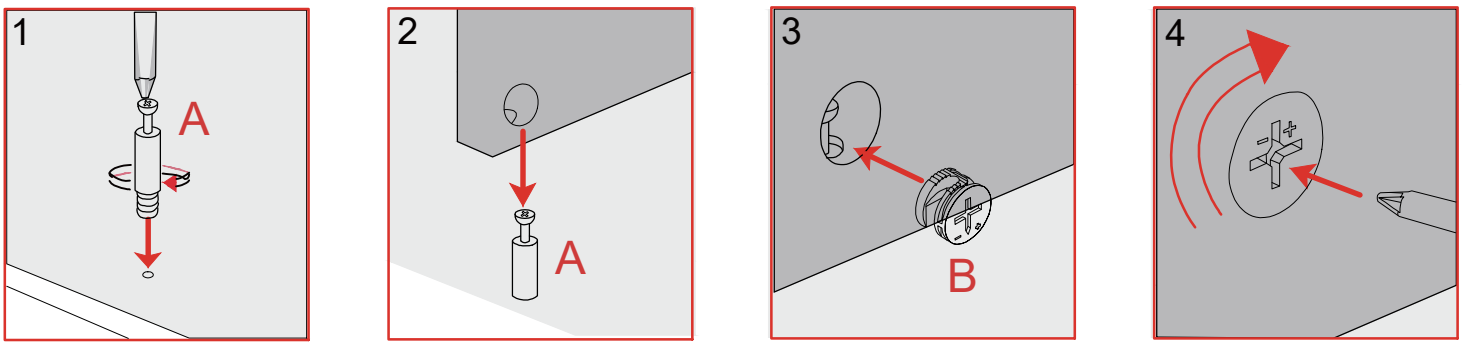


Step 1

Hardware installation demonstration

- Before installing the drawer rails,you need to split rail No.O into outer rail No.O1 and inner rail No.O2

1.Place the rail No.O as shown in picture, Then Pull out the O2

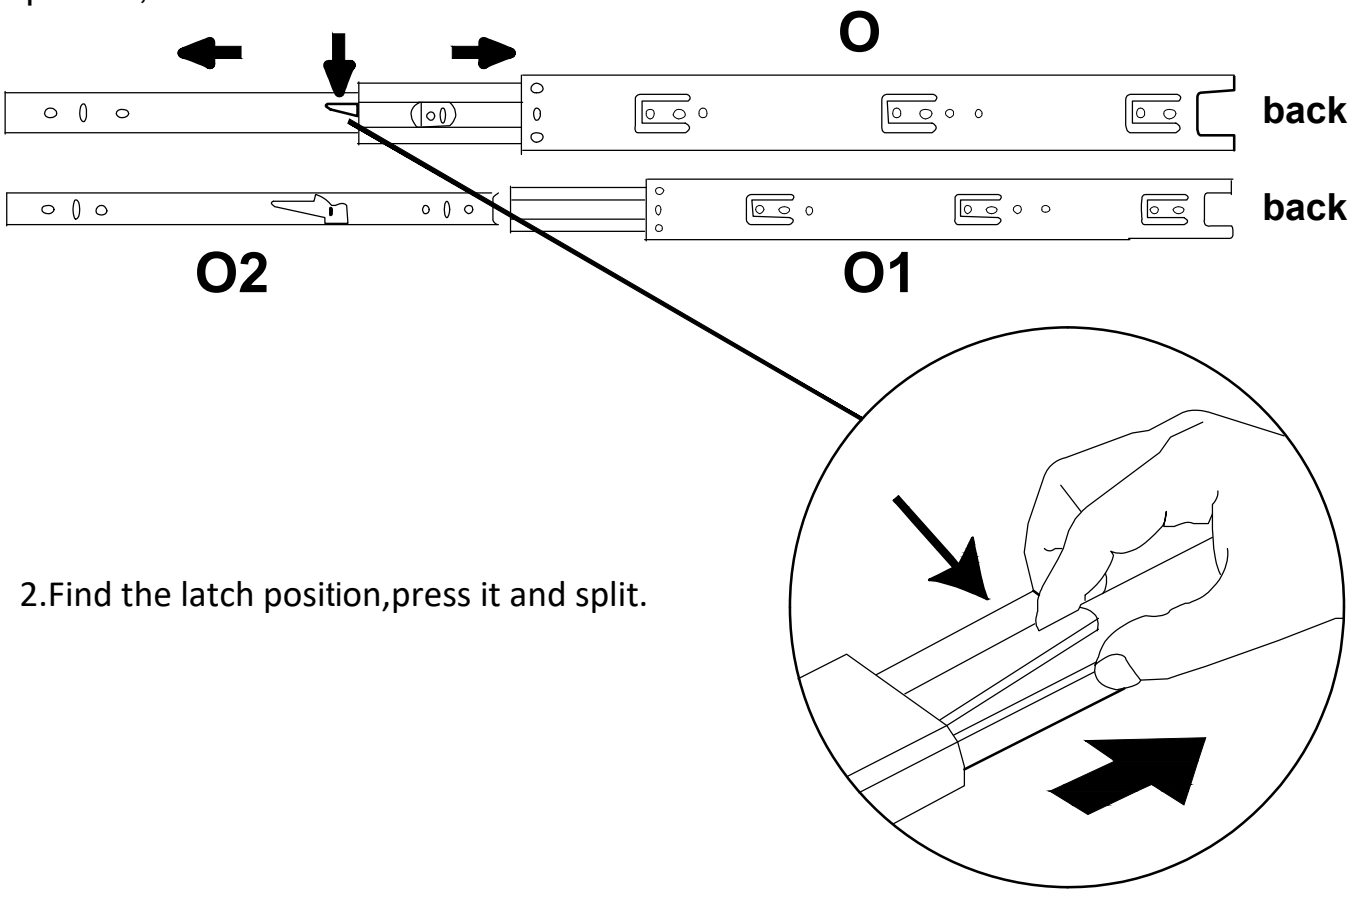


2.Find the latch position,press it and split.


Warm Reminder:Press it and split


Step 2


A x8



l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (9、10).

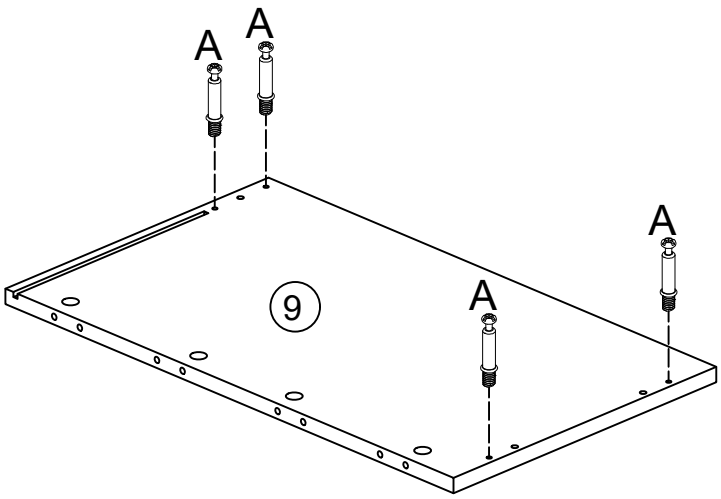

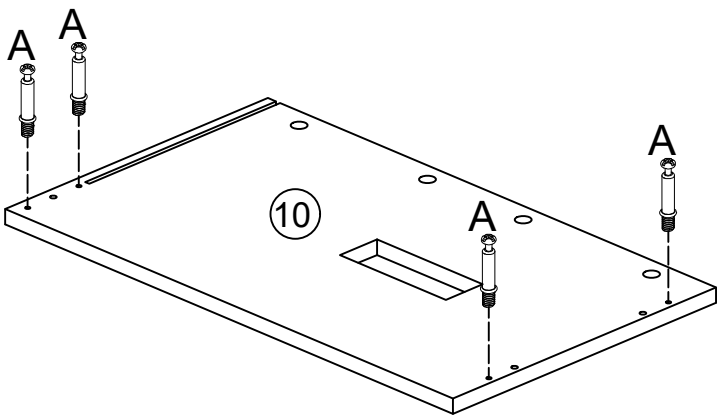


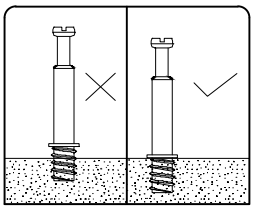



Step 3

A x4



l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (15、16).

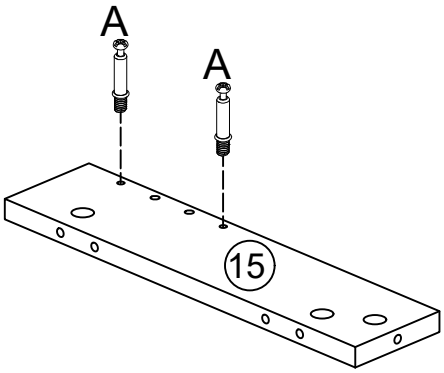

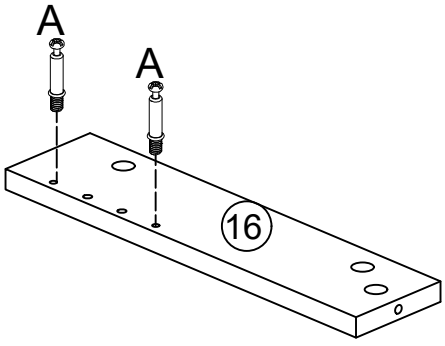


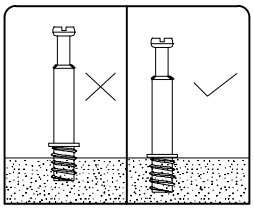



Step 4


E x8	O1 x1
	

I. Use screws (E) to attach slide rail (O1) to panels (11、12).

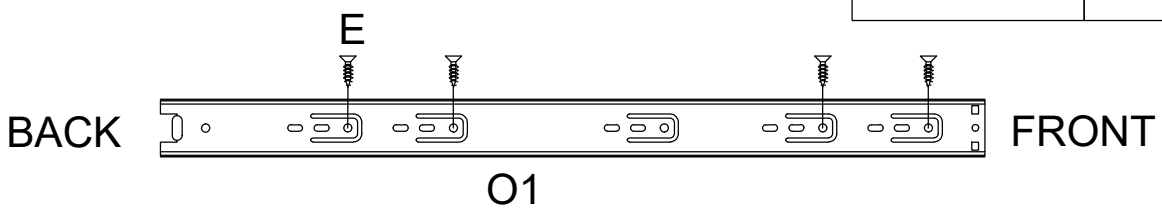


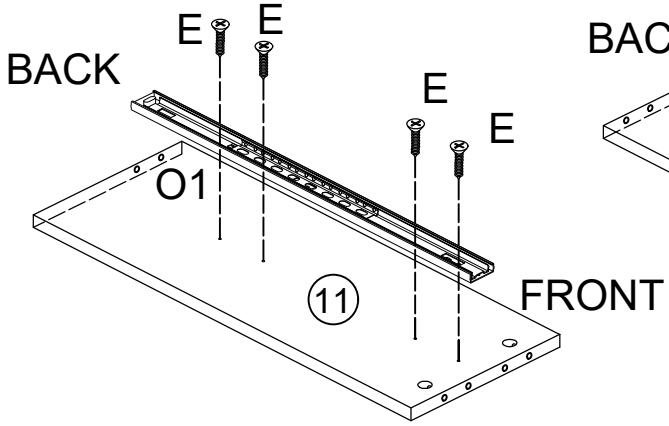

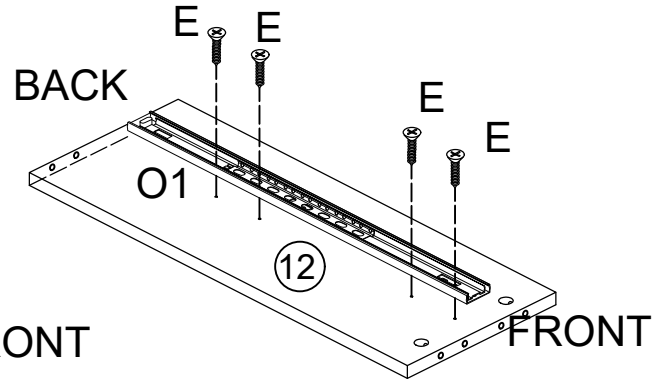

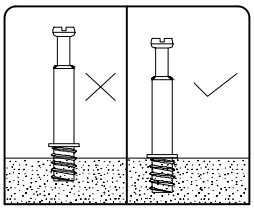


Step 5


B x4	D x4
	

I. Insert the wood dowel (D) into the panels (15、16).

II. As shown in the illustration, connect the panel (15) to panel (11), insert the cam lock (B) into the corresponding holes on panel (11), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).


III. As shown in the illustration, connect the panel (16) to panel (12), insert the cam lock (B) into the corresponding holes on panel (12), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

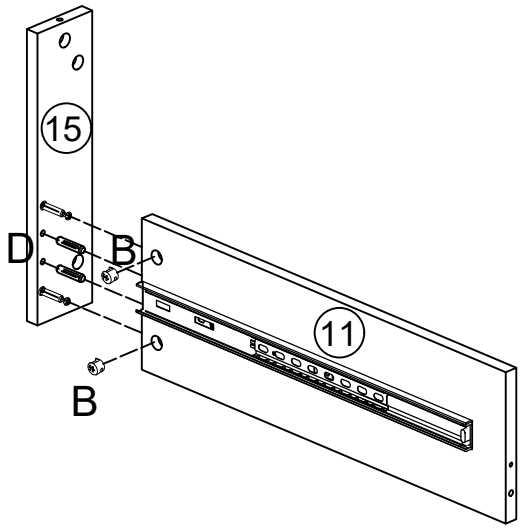


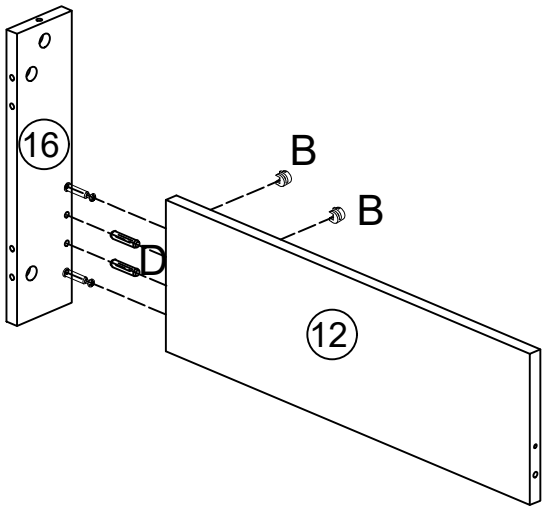

Step 6


I. Insert the wood dowel (D) into the panels (11、12).
II. Use screws (C) to attach panel (14) to panels (11、12).

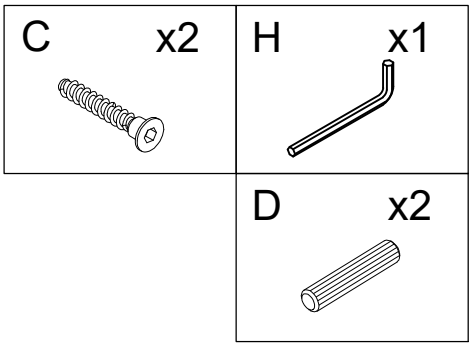


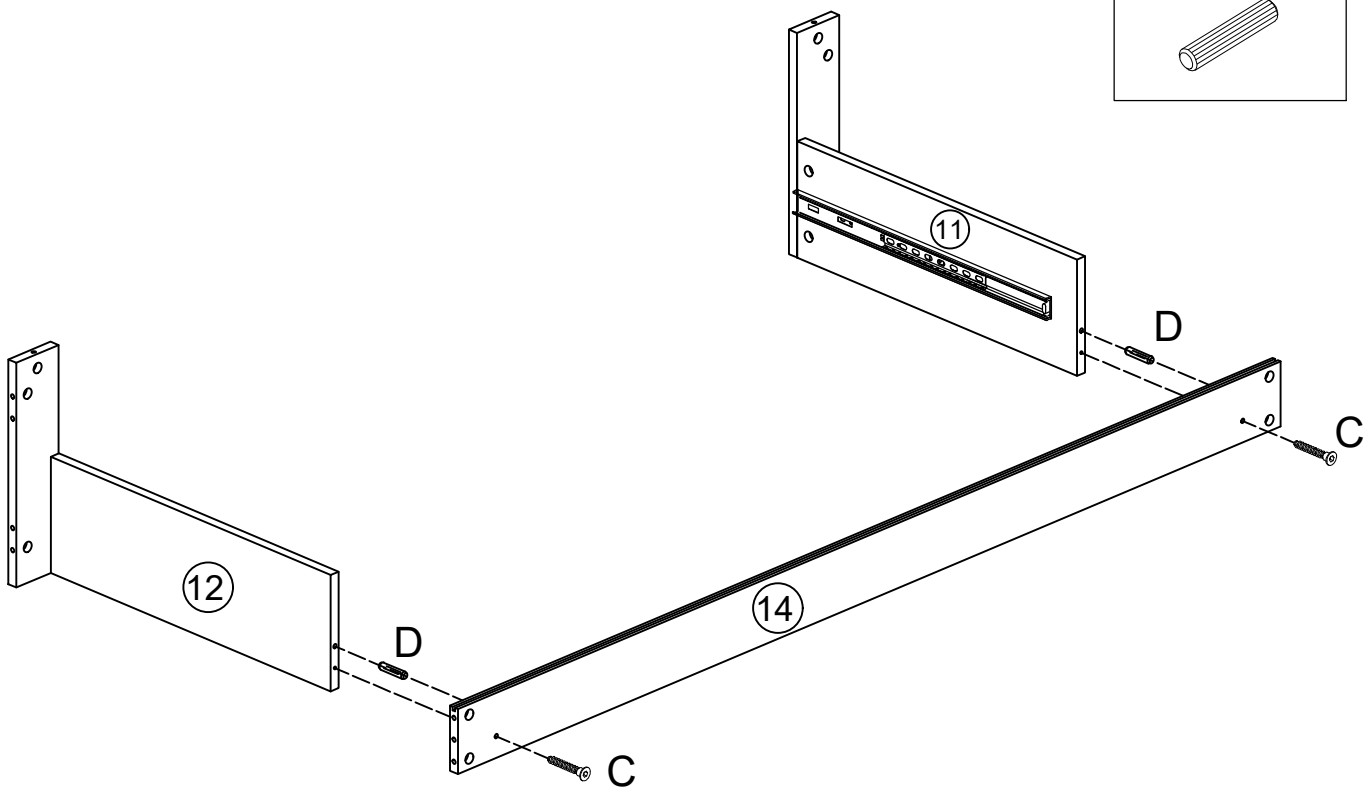

Step 7


I. Insert the wood dowel (D) into the panels (9、10).
II. As shown in the illustration, connect the panels (9、10) to panels (14、15、16), insert the cam lock (B) into the corresponding holes on panels (14、15、16), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

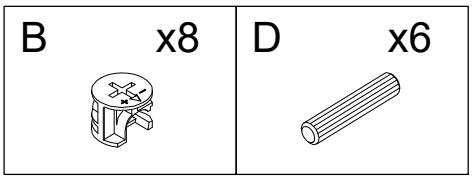

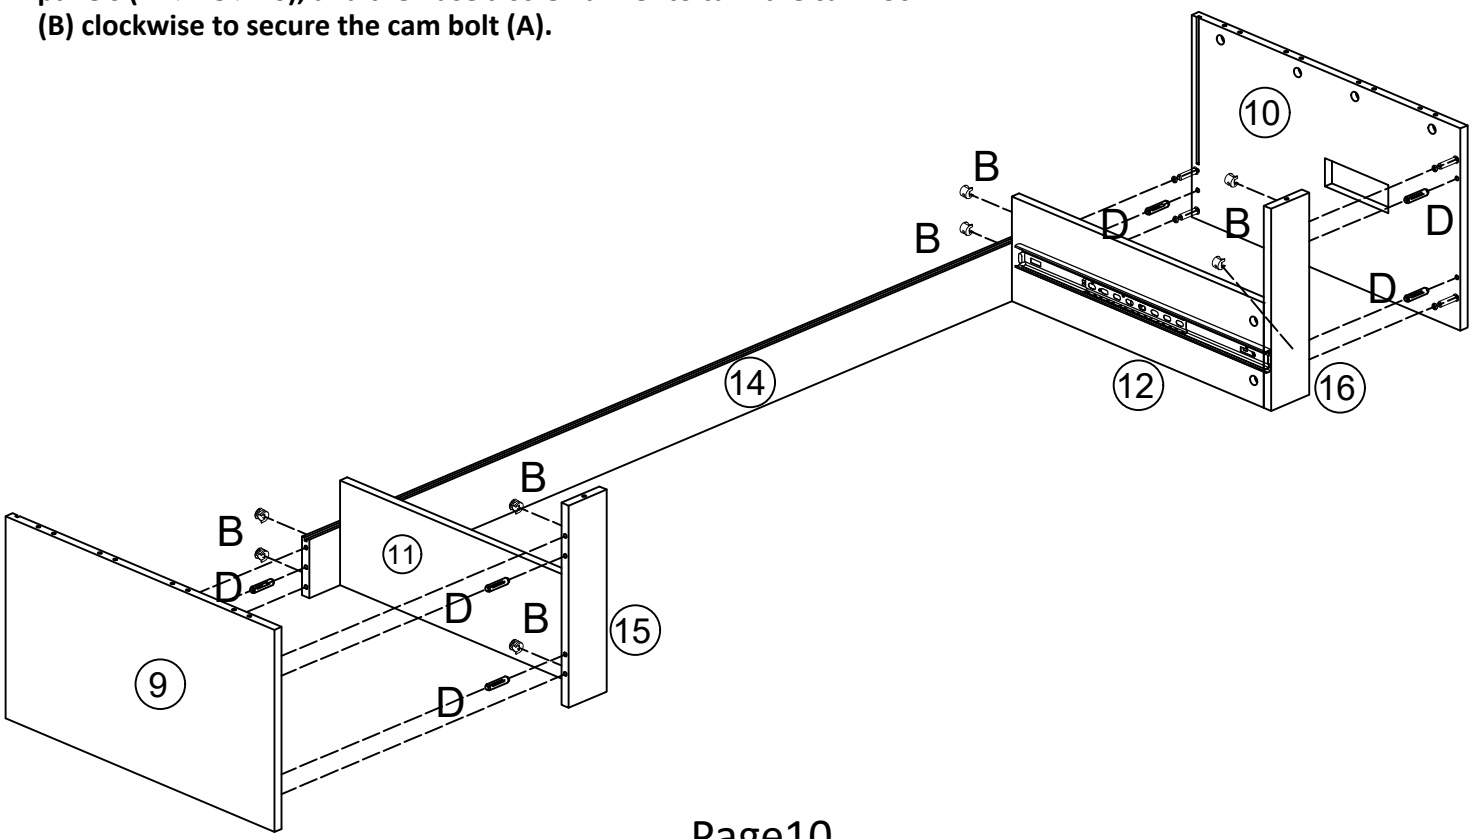


Step 8


l. Install panel (13) as per diagram and slide them into the grooves until they are fully seated.

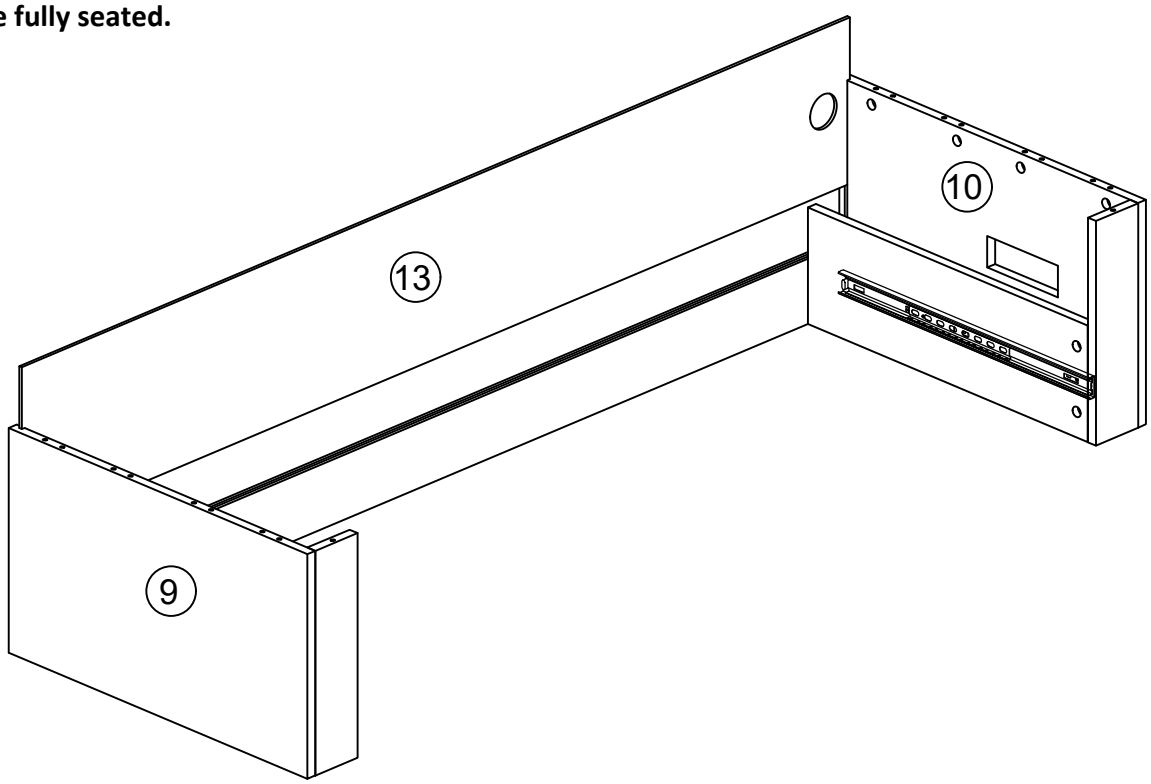



Step 9

l. Use cam bolt (A1) to attach panel (7) to panel (8).

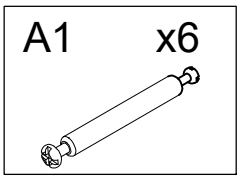


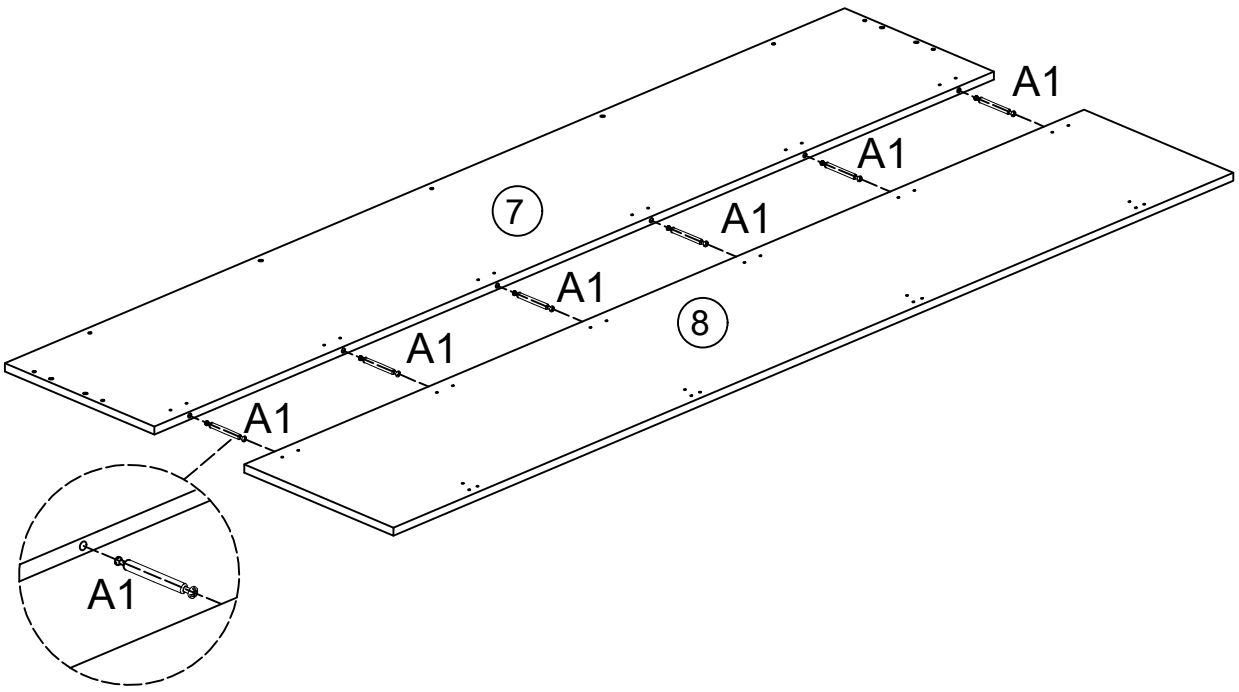

Step 10

E	x24	Y	x6
			


l. Connect panels (7) and (8) together. Use screws (E) to attach metal plate (Y) to panels (7) and (8).

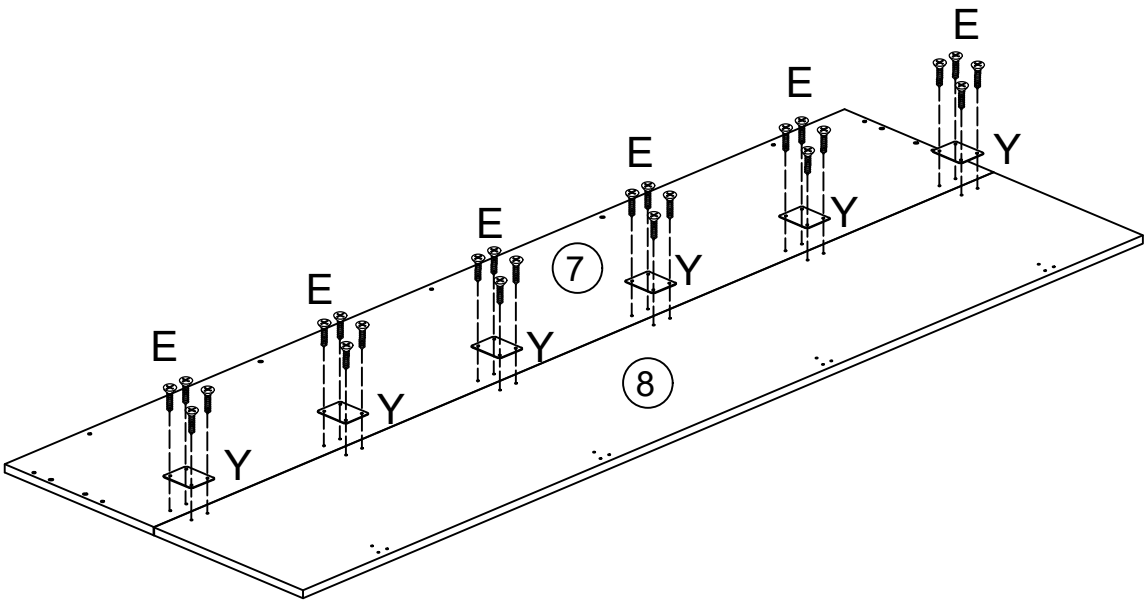


Step 11


A	x7
	

l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (7).

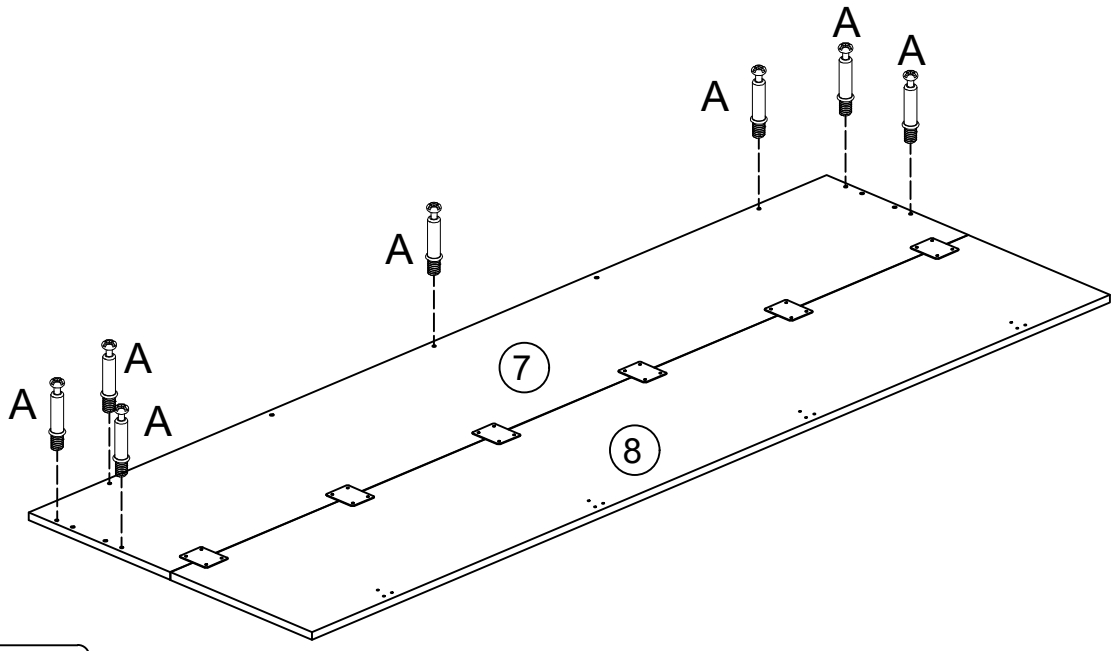


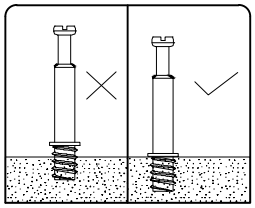


Step 12

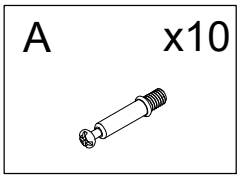


I. Flip panel (7) and panel (8) from Step 11 180 degrees. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (7、8).

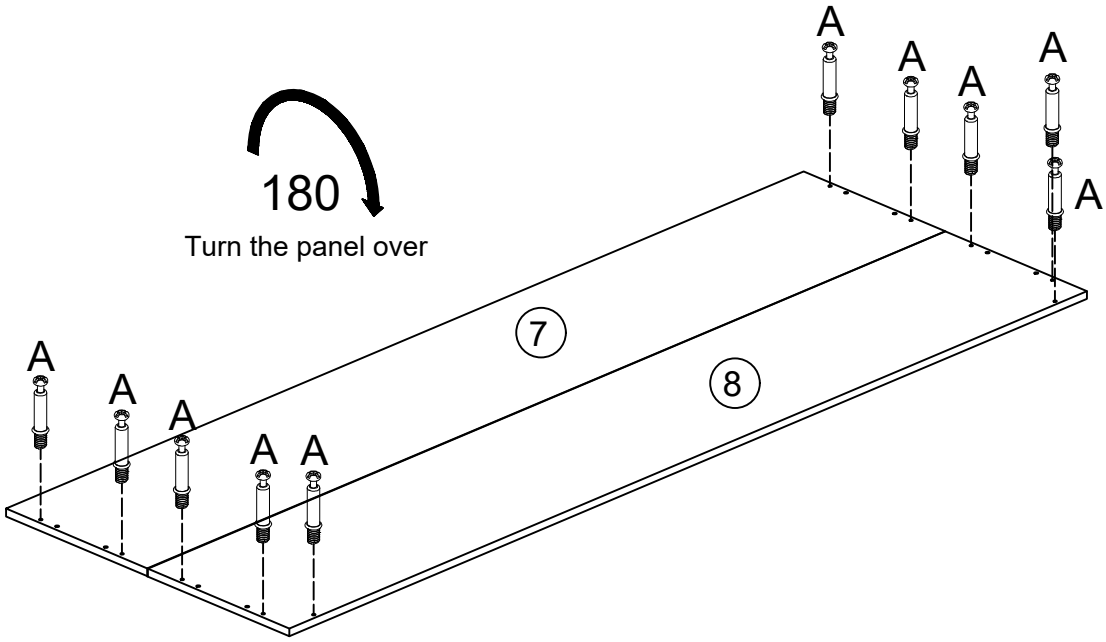


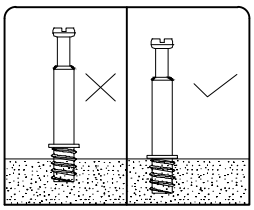

Step 13

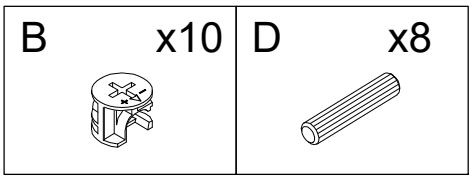


I. Insert the wood dowel (D) into the panels (9、10).
II. As shown in the illustration, connect the panels (7、8) to panels (9、10、15、16), insert the cam lock (B) into the corresponding holes on panels (9、10), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

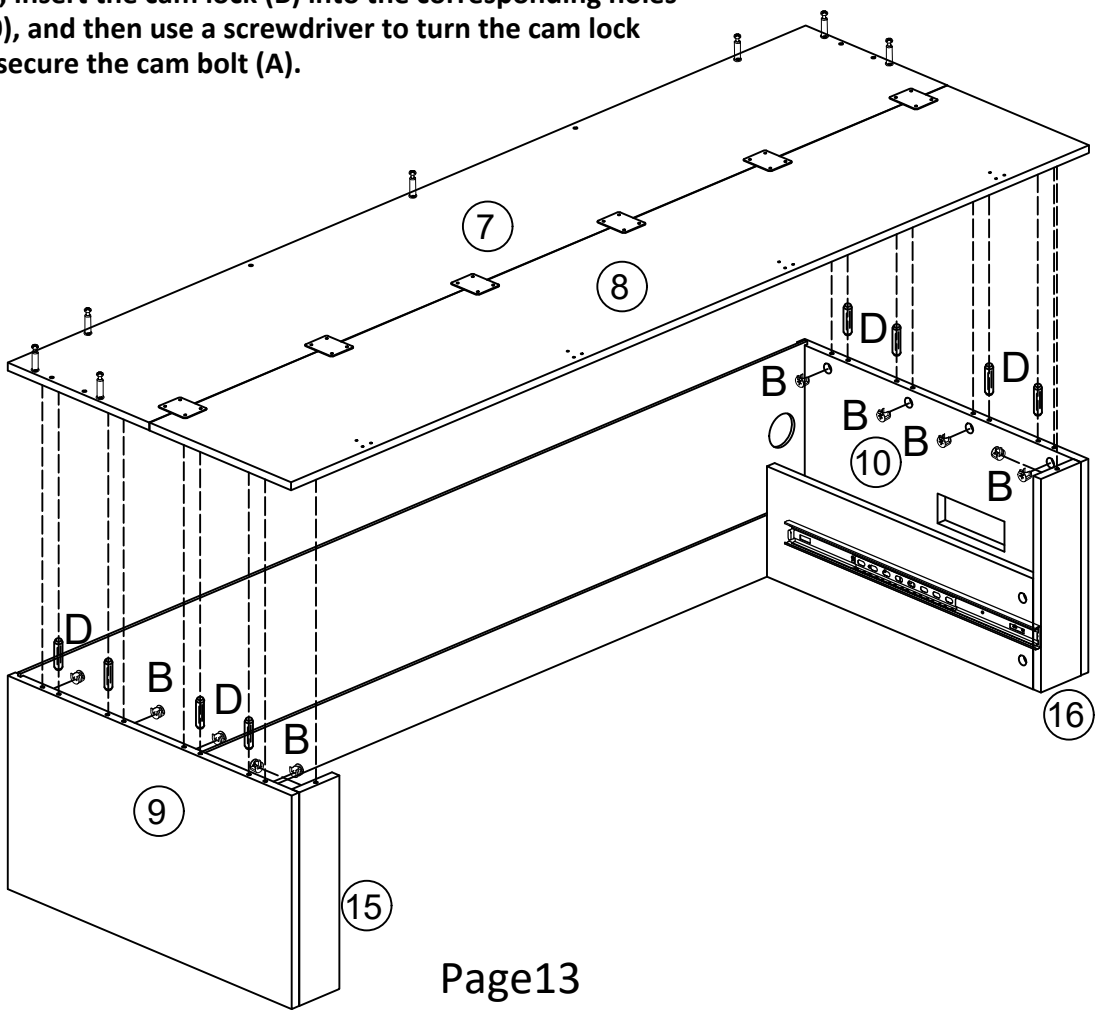



Step 14

A x10




l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (3).

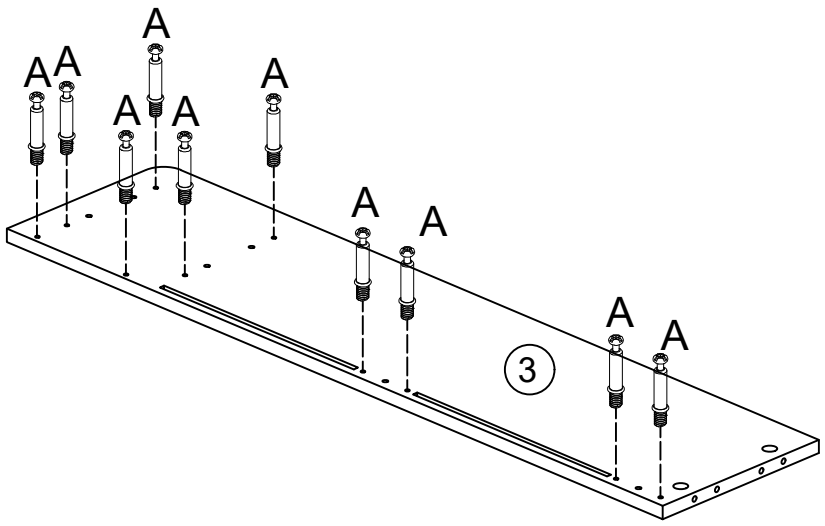

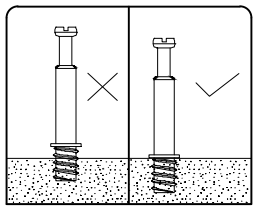



Step 15

A x10



l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (2).

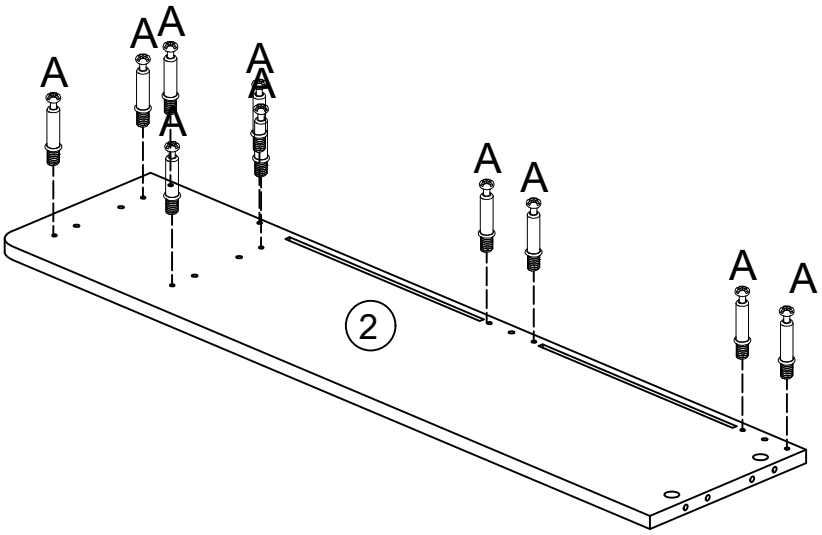

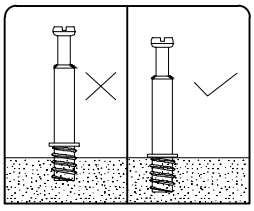



Step 16

A x6



l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (1、39、40).

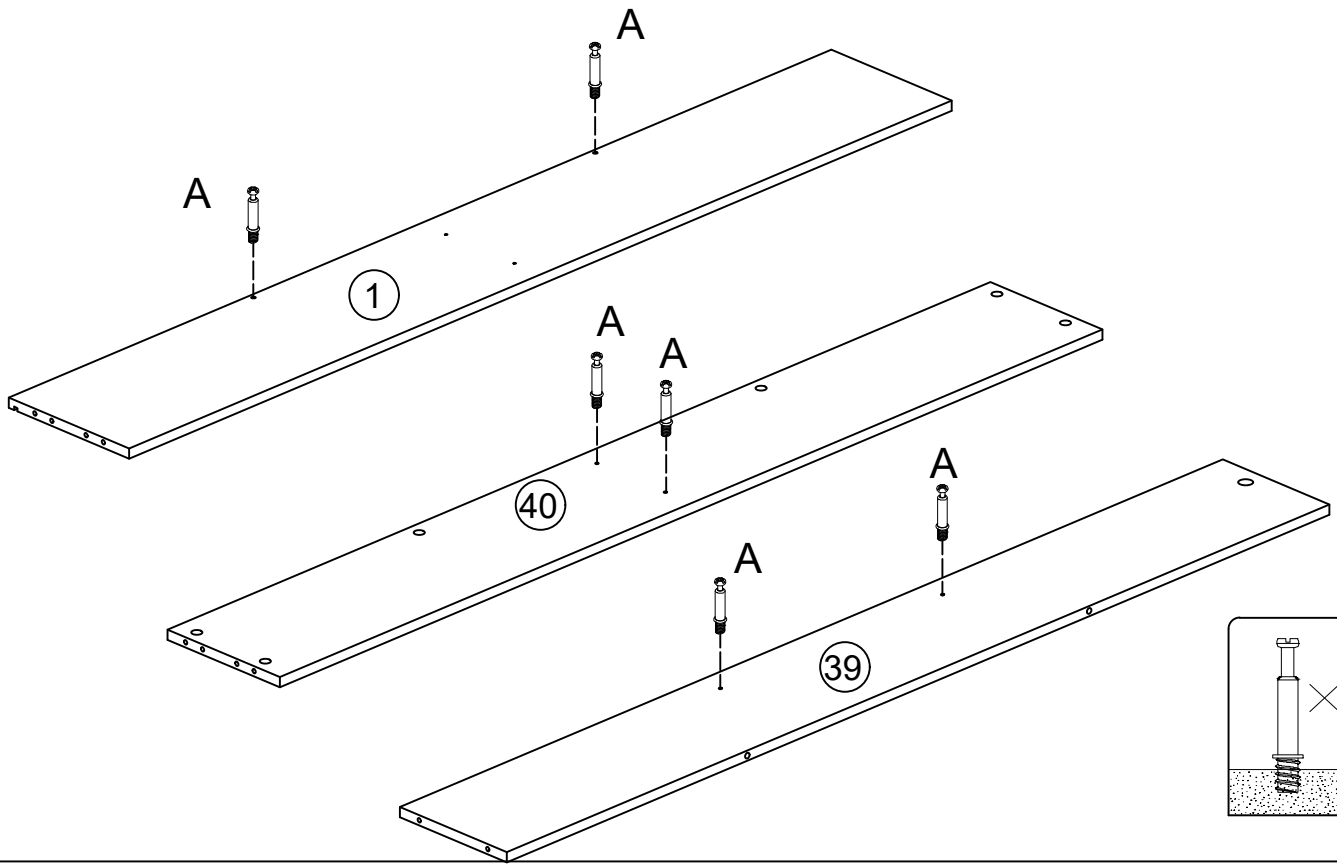

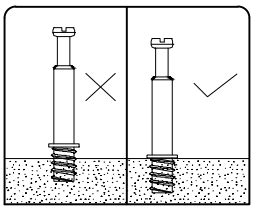


Step 17

B x2




l. As shown in the illustration, connect the panel (41) to panels (40), insert the cam lock (B) into the corresponding holes on panels (41), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

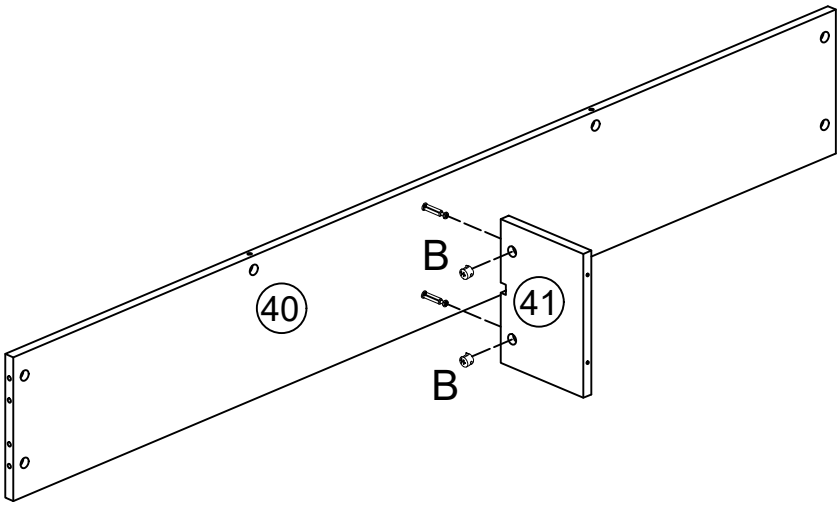


Step 18

B x2




I. As shown in the illustration, connect the panel (39) to panels (40), insert the cam lock (B) into the corresponding holes on panels (40), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

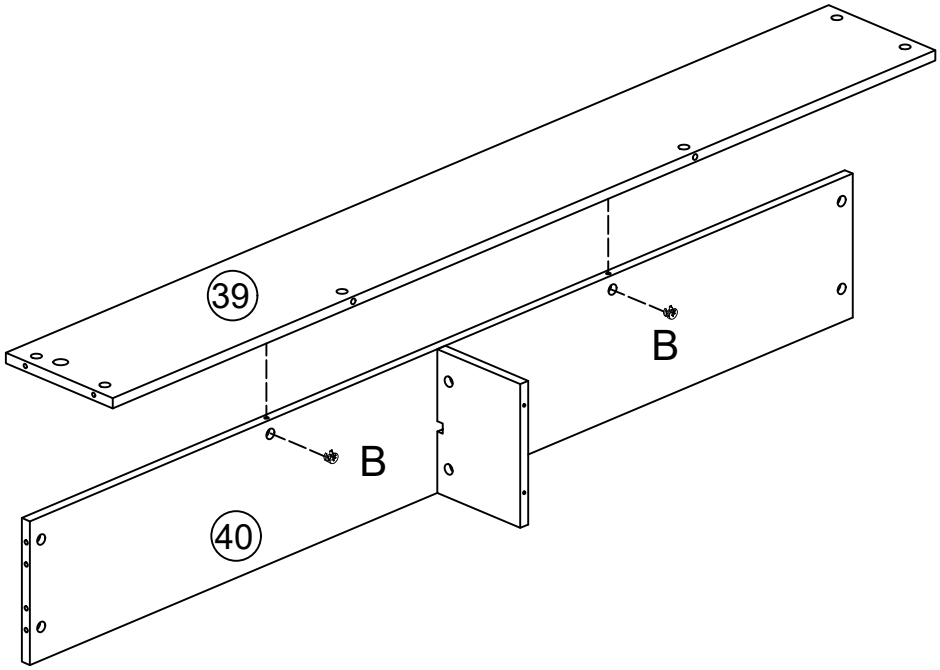


Step 19


C x2



H x1




B x2




I. As shown in the illustration, connect the panel (1) to panels (39), insert the cam lock (B) into the corresponding holes on panels (39), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).


II. Use screws (C) to attach panel (1) to panel (41).

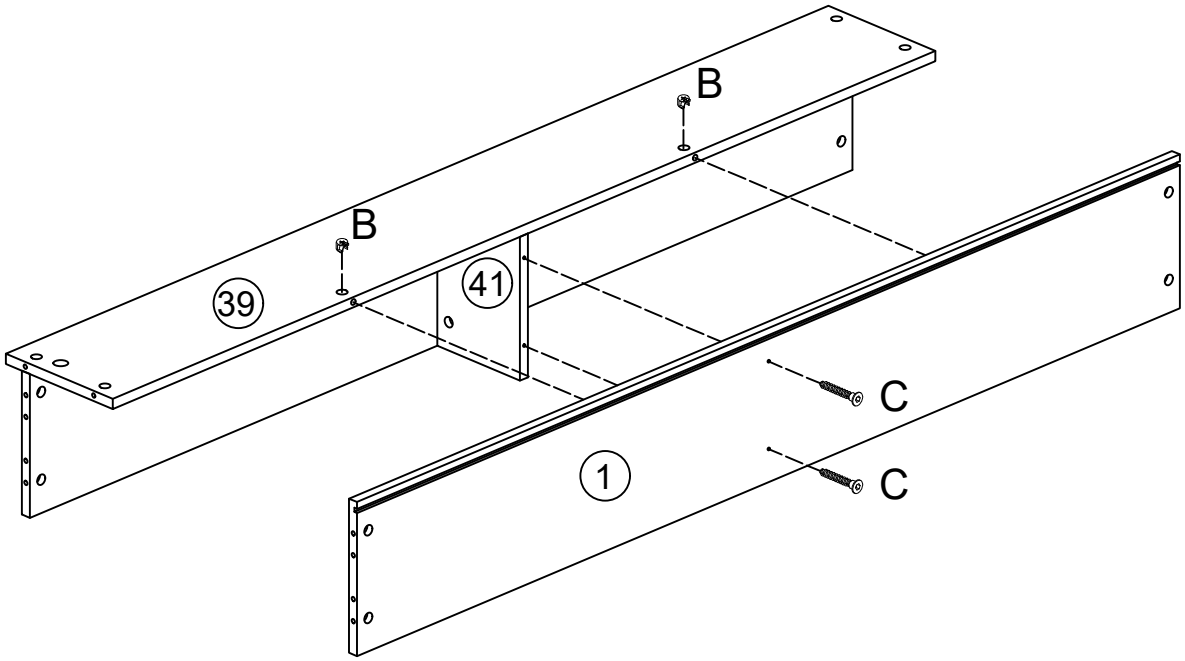

Step 20


B x6	D x4
	

l. Insert the wood dowel (D) into the panel (3).
ll. As shown in the illustration, connect the panels (1、39、40) to panel (3), insert the cam lock (B) into the corresponding holes on panels (1、39、40), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

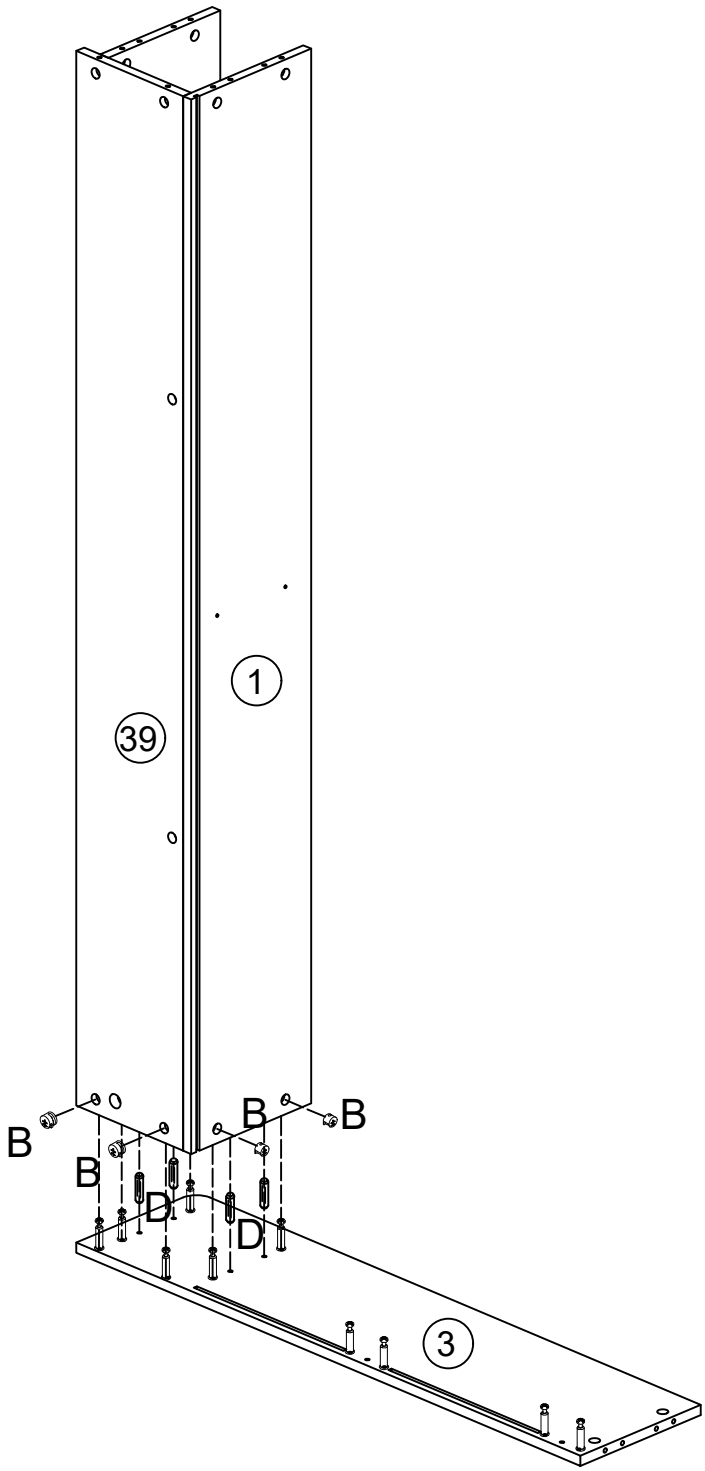


Step 21


l. Install panel (4) as per diagram and slide them into the grooves until they are fully seated.

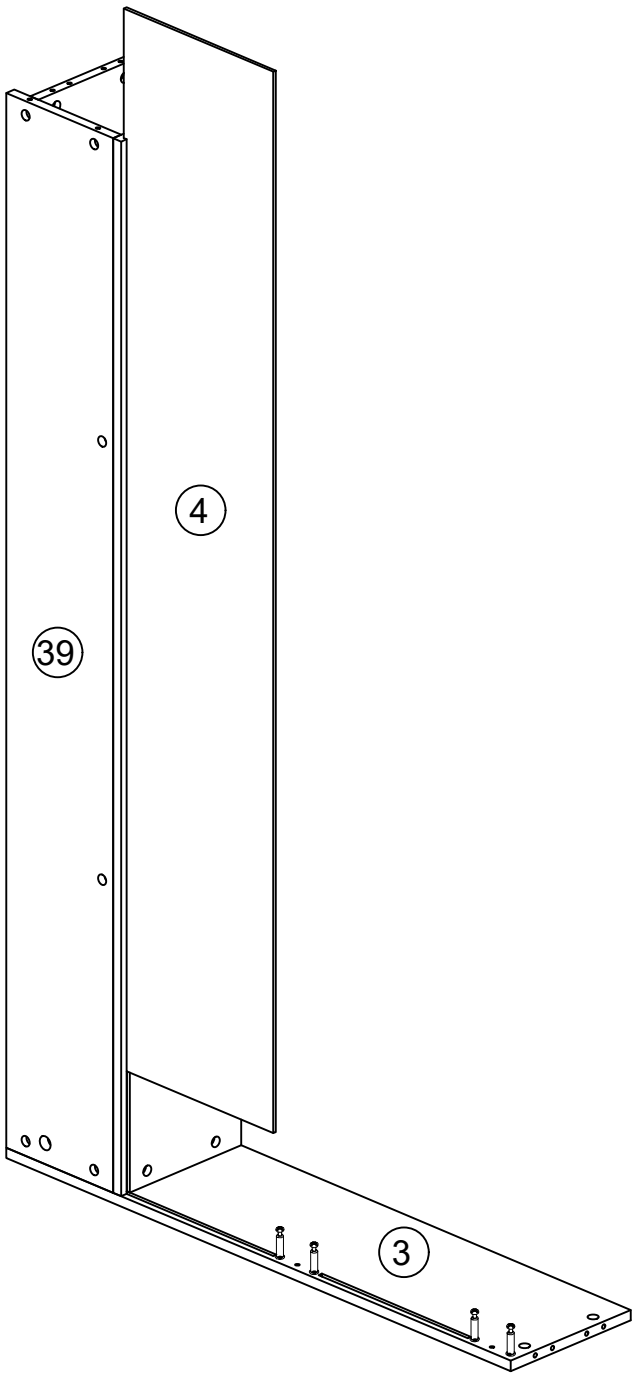

Step 22


B x2	D x1
	

l. Insert the wood dowel (D) into the panel (3).
ll. As shown in the illustration, connect the panel (5) to panel (3), insert the cam lock (B) into the corresponding holes on panel (5), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

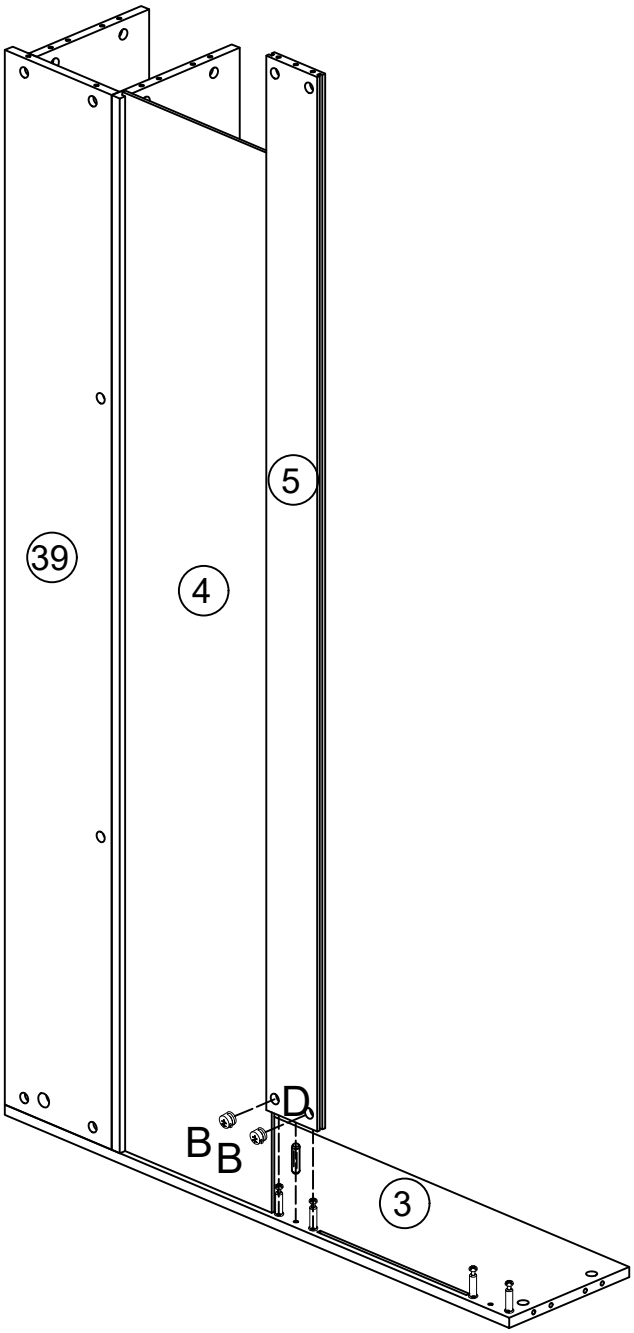


Step 23


l. Install panel (4) as per diagram and slide them into the grooves until they are fully seated.

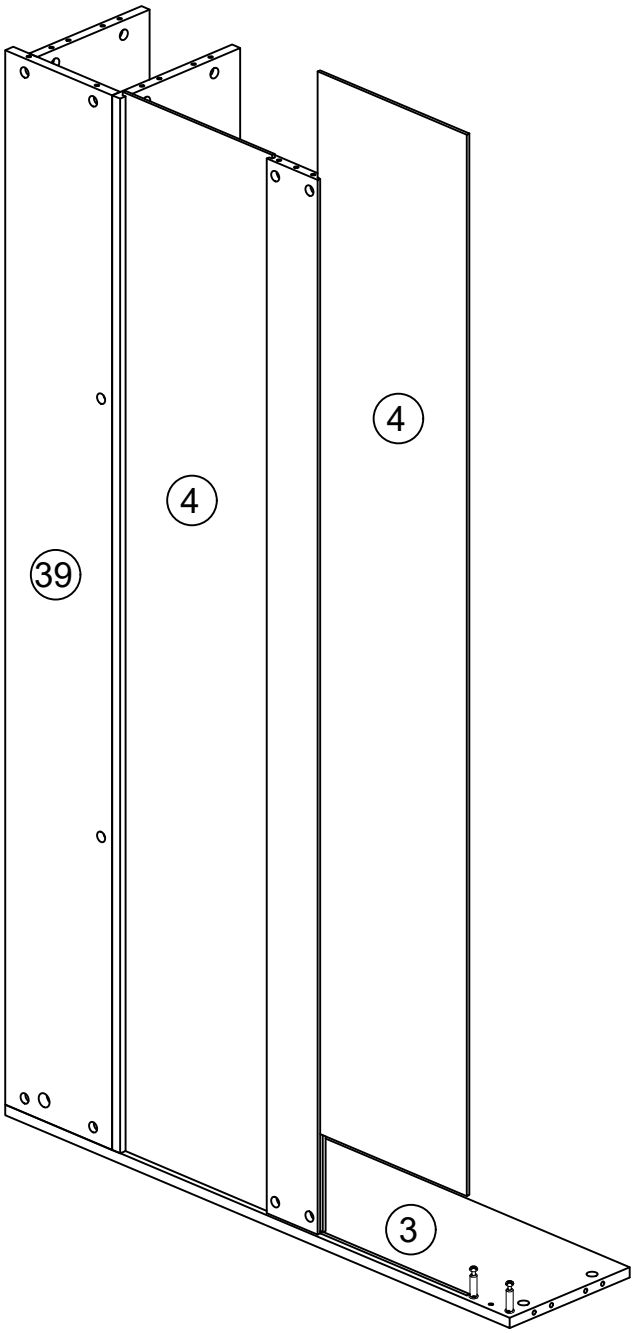


Step 24

B x2	D x1
	


l. Insert the wood dowel (D) into the panel (3).
ll. As shown in the illustration, connect the panel (6) to panel (3), insert the cam lock (B) into the corresponding holes on panel (6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

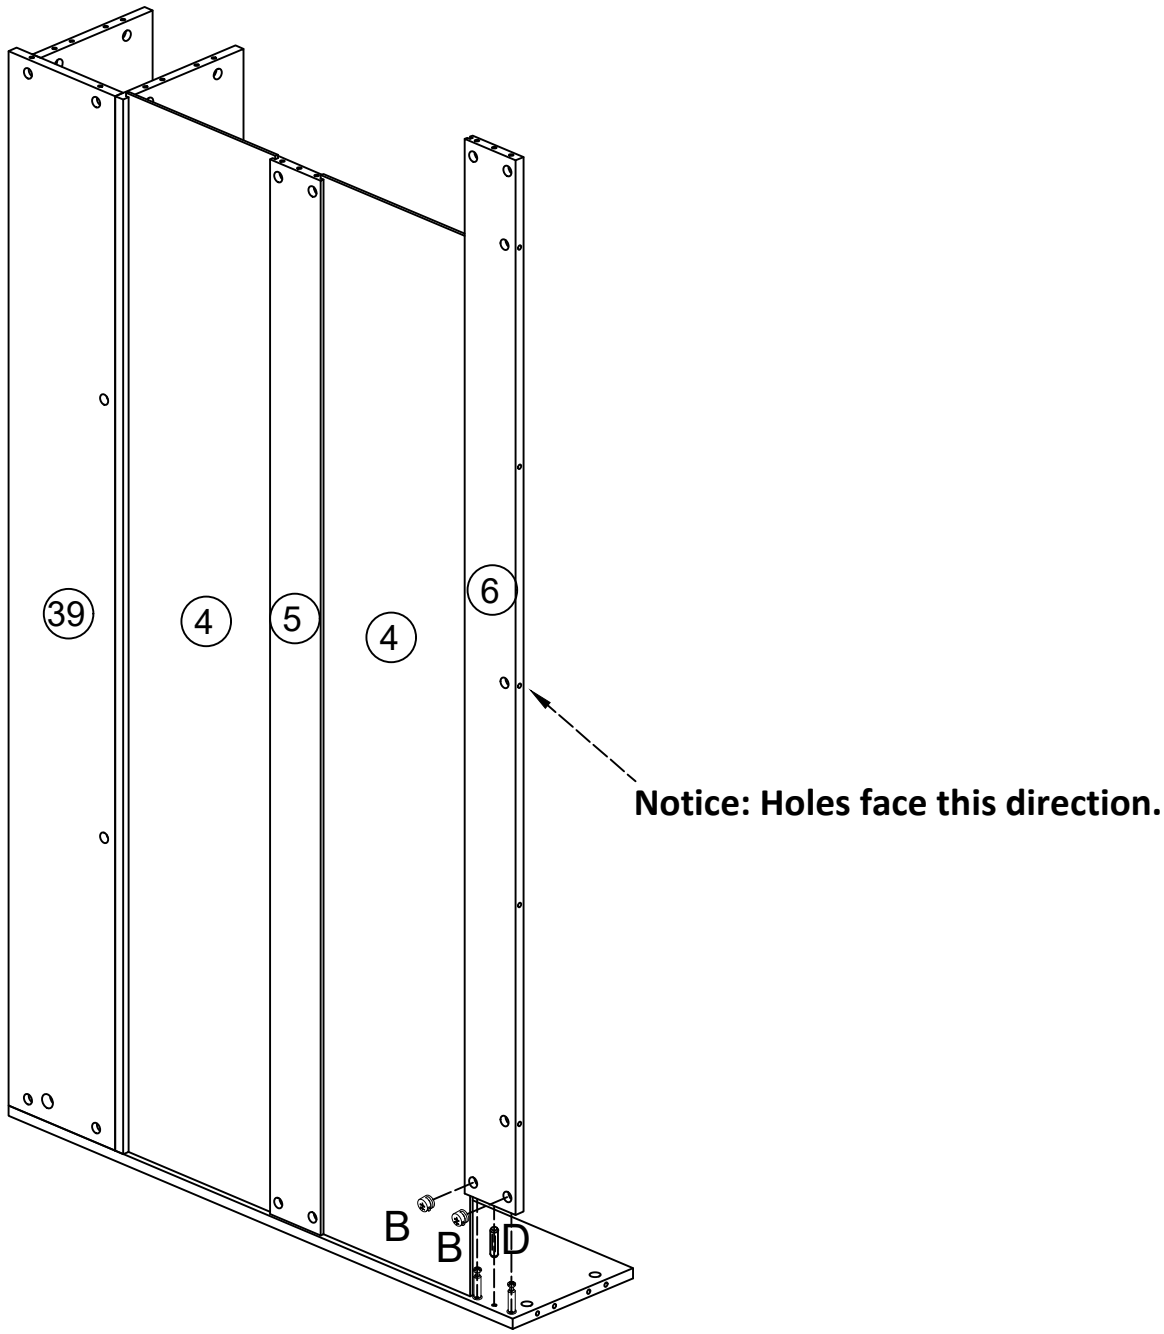


Step 25

B x10	D x6
	


l. Insert the wood dowel (D) into the panel (1、5、6、40).
ll. As shown in the illustration, connect the panel (2) to panels (1、5、6、39、40), insert the cam lock (B) into the corresponding holes on panels (1、5、6、39、40), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

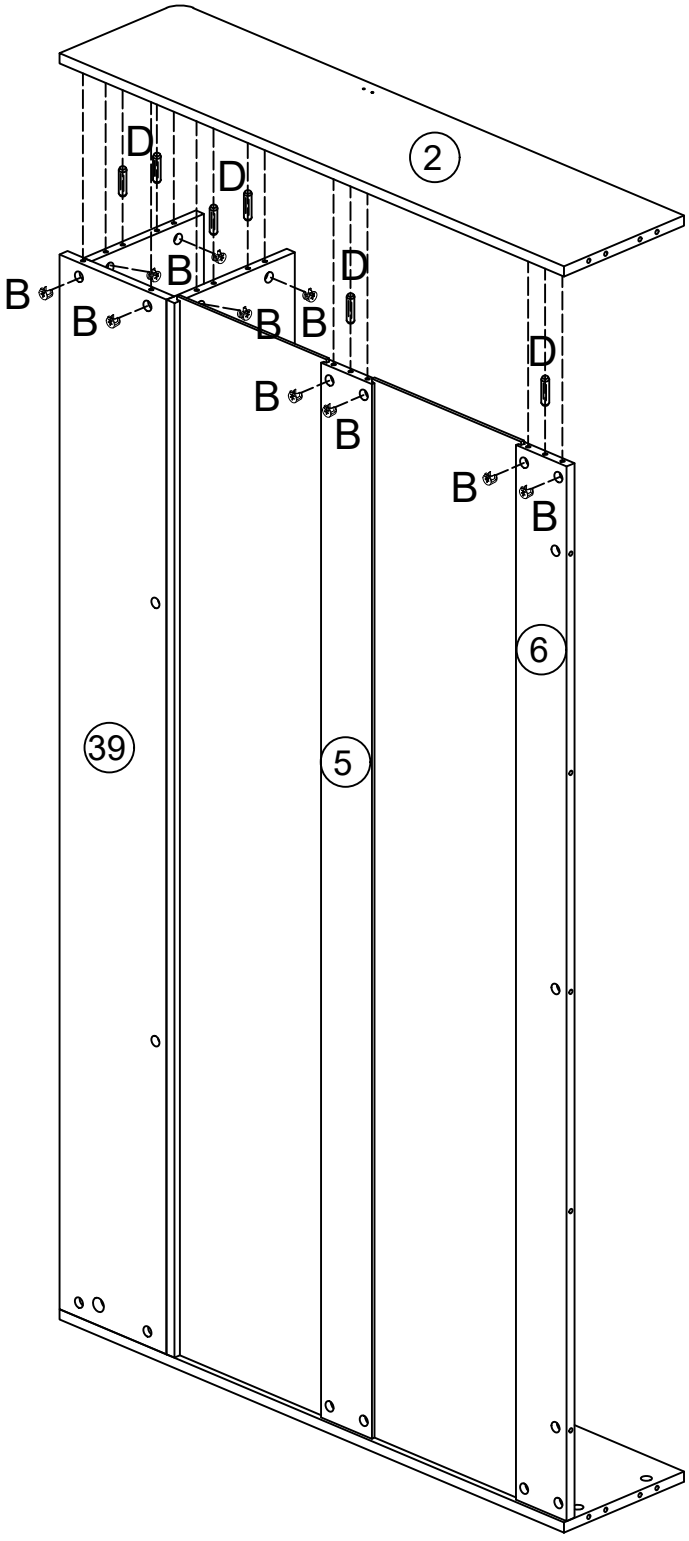





Step 26

B x7	D x6
	

l. Insert the wood dowel (D) into the panel (7).
ll. As shown in the illustration, connect the panels (2、3、6) to panel (7), insert the cam lock (B) into the corresponding holes on panels (2、3、6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).


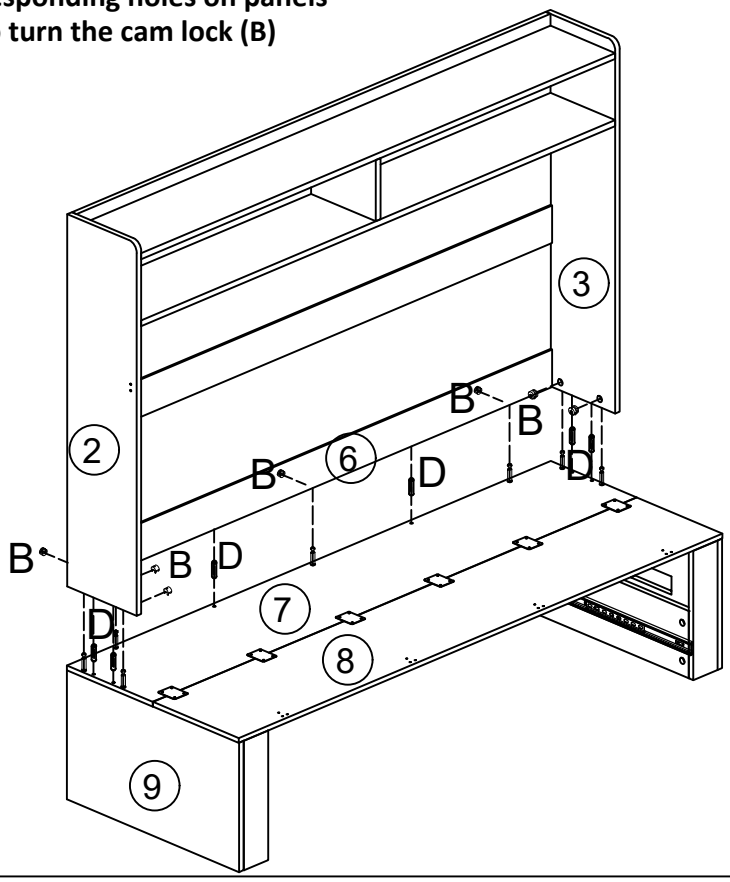


Step 27

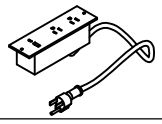
F x14	G x14
	
T x1	E x2
	


l. Insert the thinnest side of the plastic wedge (F) into the gap between the back panel and the cabinet, then secure it with screws (G).
ll. Secure the power strip (T) to panel (10) with screws (E).


Step 28

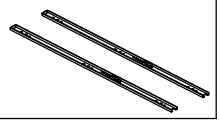E x6	O2 x1
	



l. **Attach slide rails (O2) to panels (17) and (18) using screws (E).**

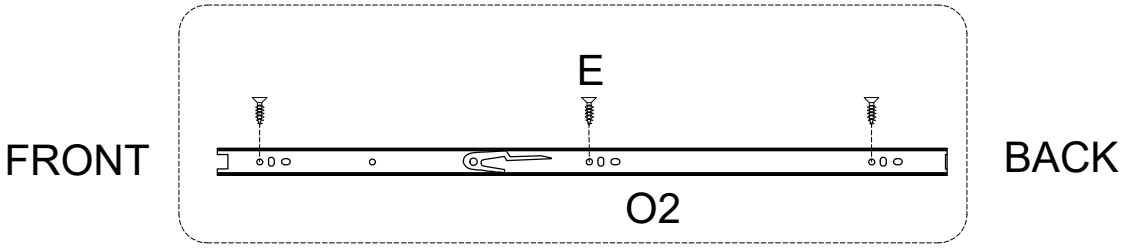

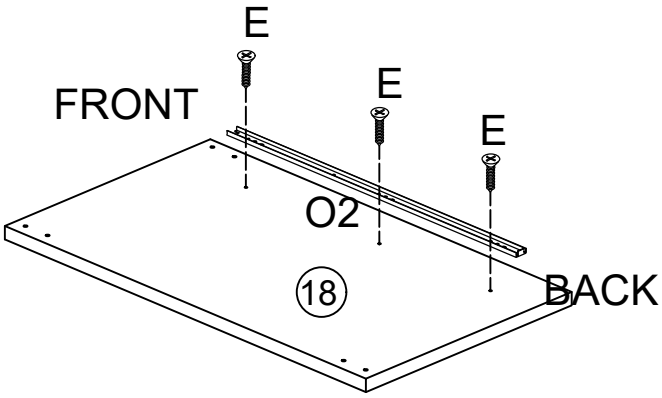


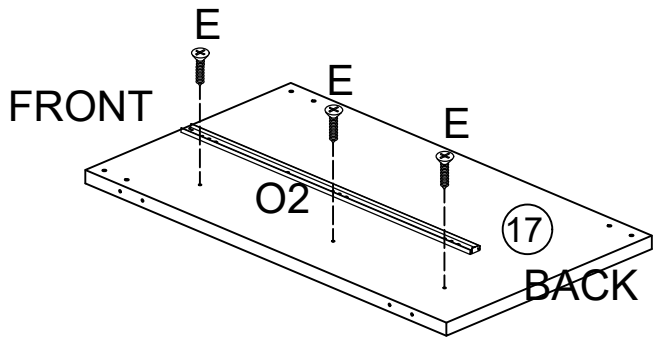

Step 29


C x8	H x1
	

l. **Attach panel (19) to panel (21) using screws (C).**

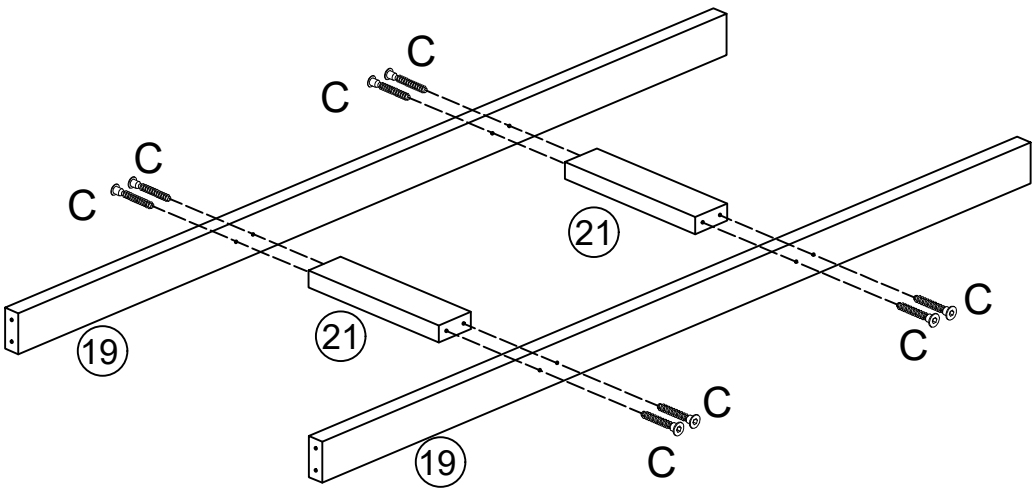

Step 30

I. Attach wheel (U) to panels (17) and (18) using screws (E).
II. Attach panels (17) and (18) to panels (19) and (20) using screws (C).

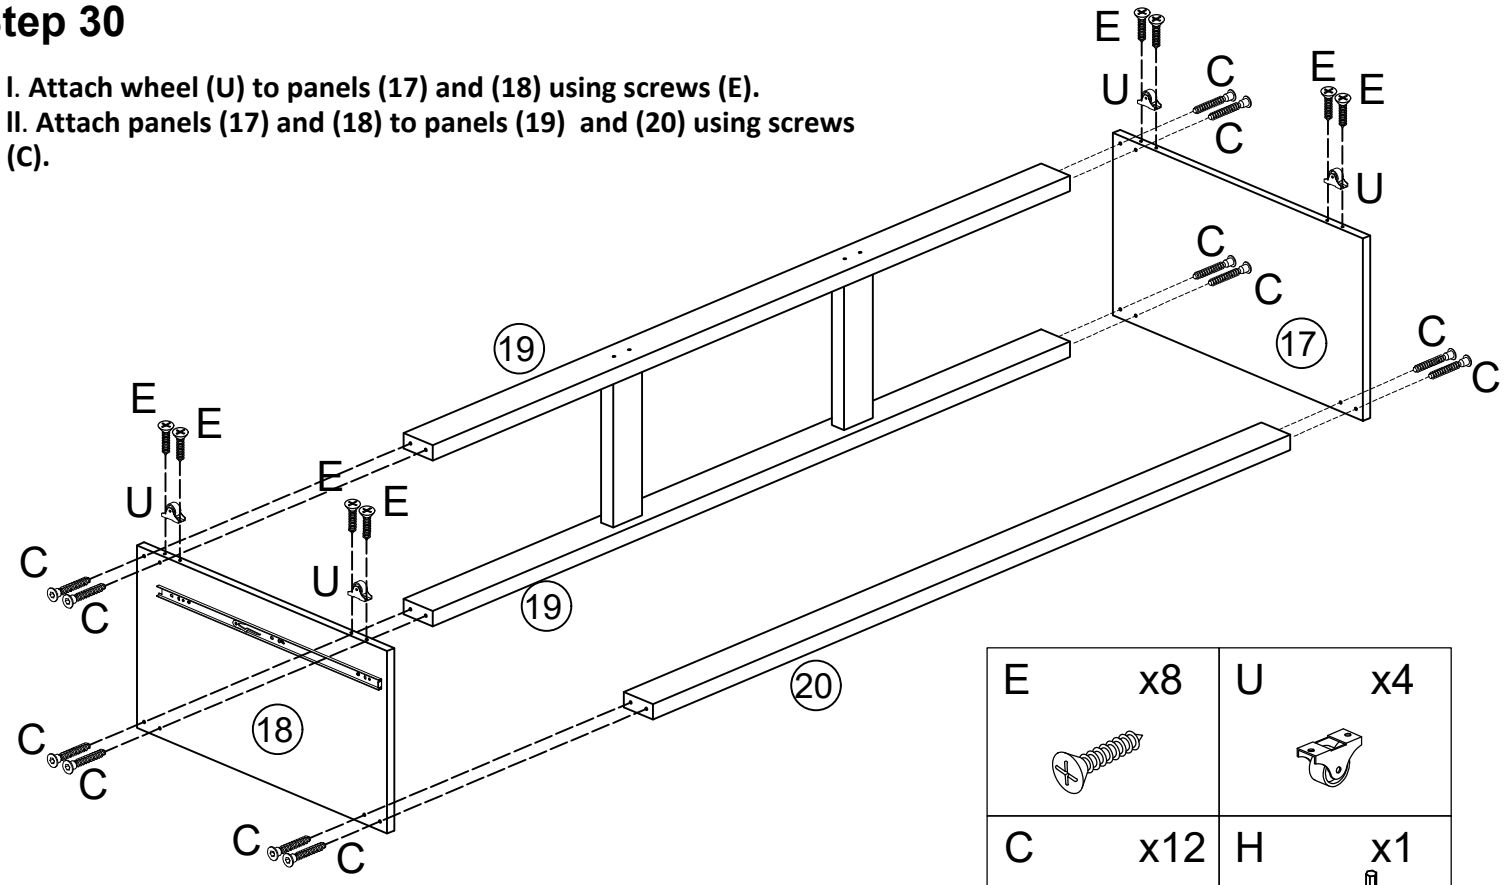



E x8	U x4
C x12	H x1

Step 31

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

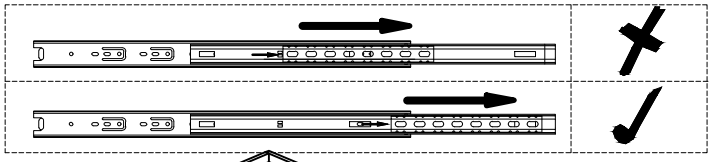


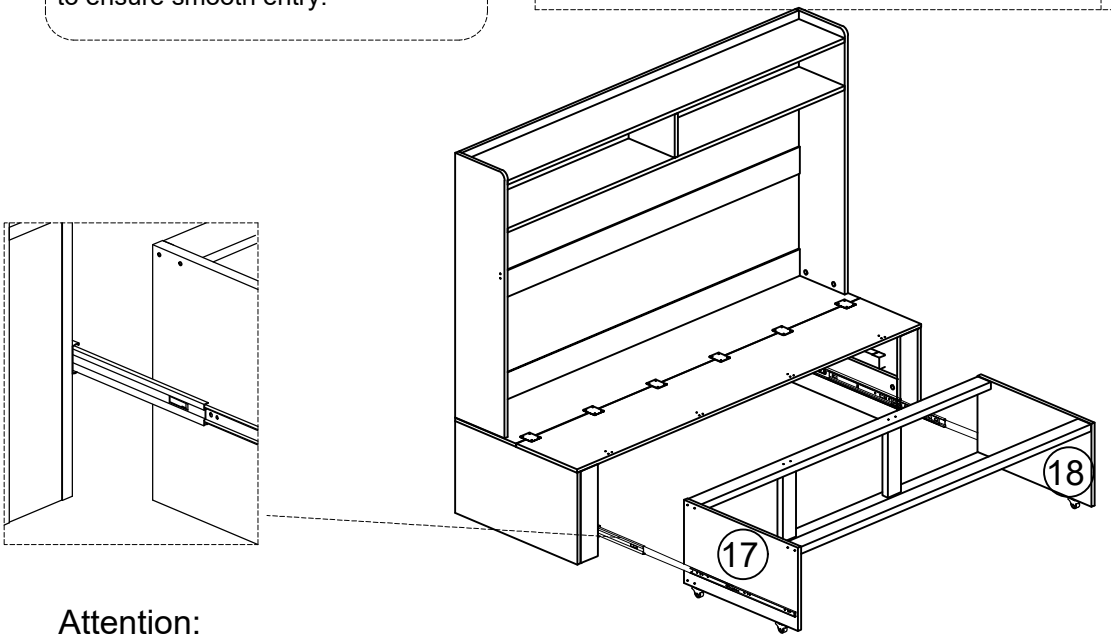


Attention:
1.Pull out the railinstalled on the cabinet.
2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
★If the drawer does not go in smoothly please take it out and repeat the steps.

Step 32


l. Use cam bolt (A1) to attach panel (36) to panel (37).
ll. Attach handles (A3) to panel (36) using screws (A3).

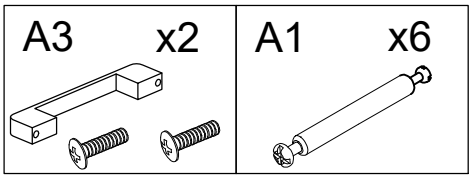


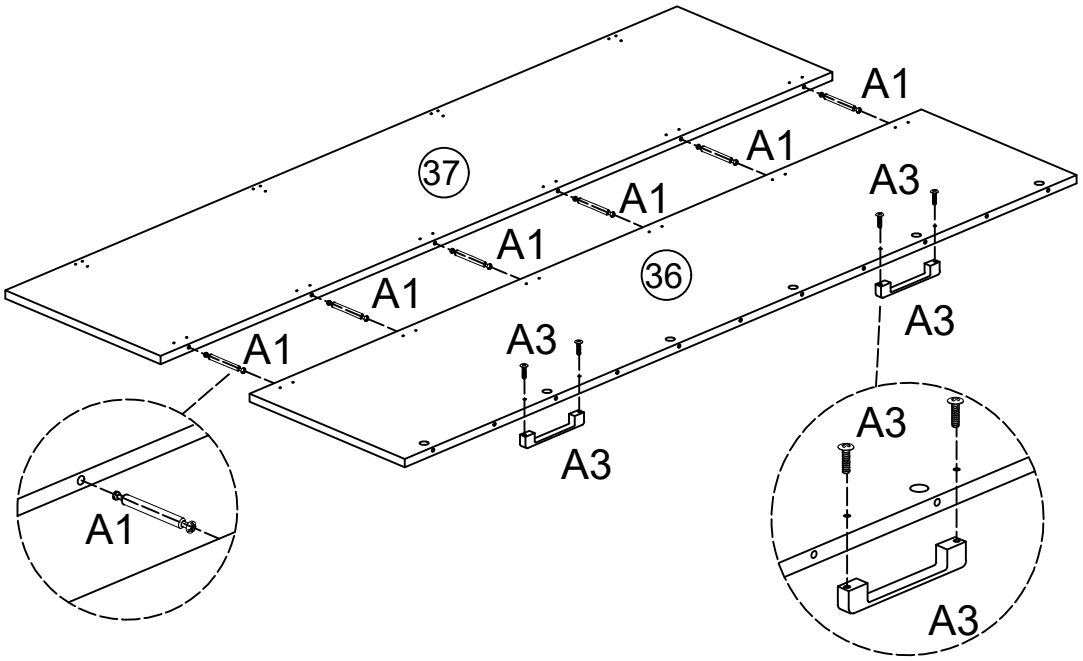

Step 33


l. Attach metal plate (Y) to panels (36) and (37) using screws (E).

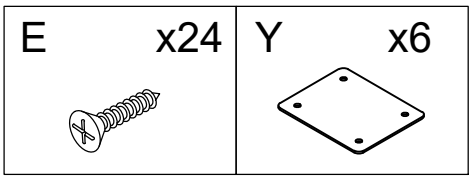

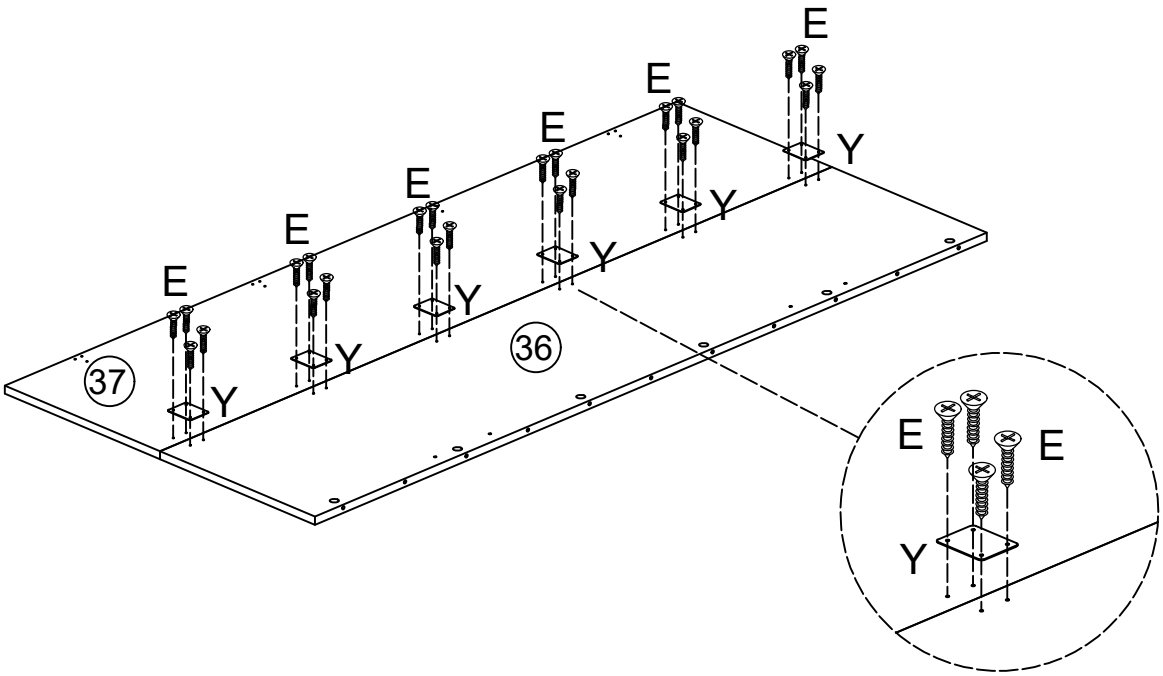


Step 34

M x4




I. Apply rubber pads (M) to panels (17) and (18).

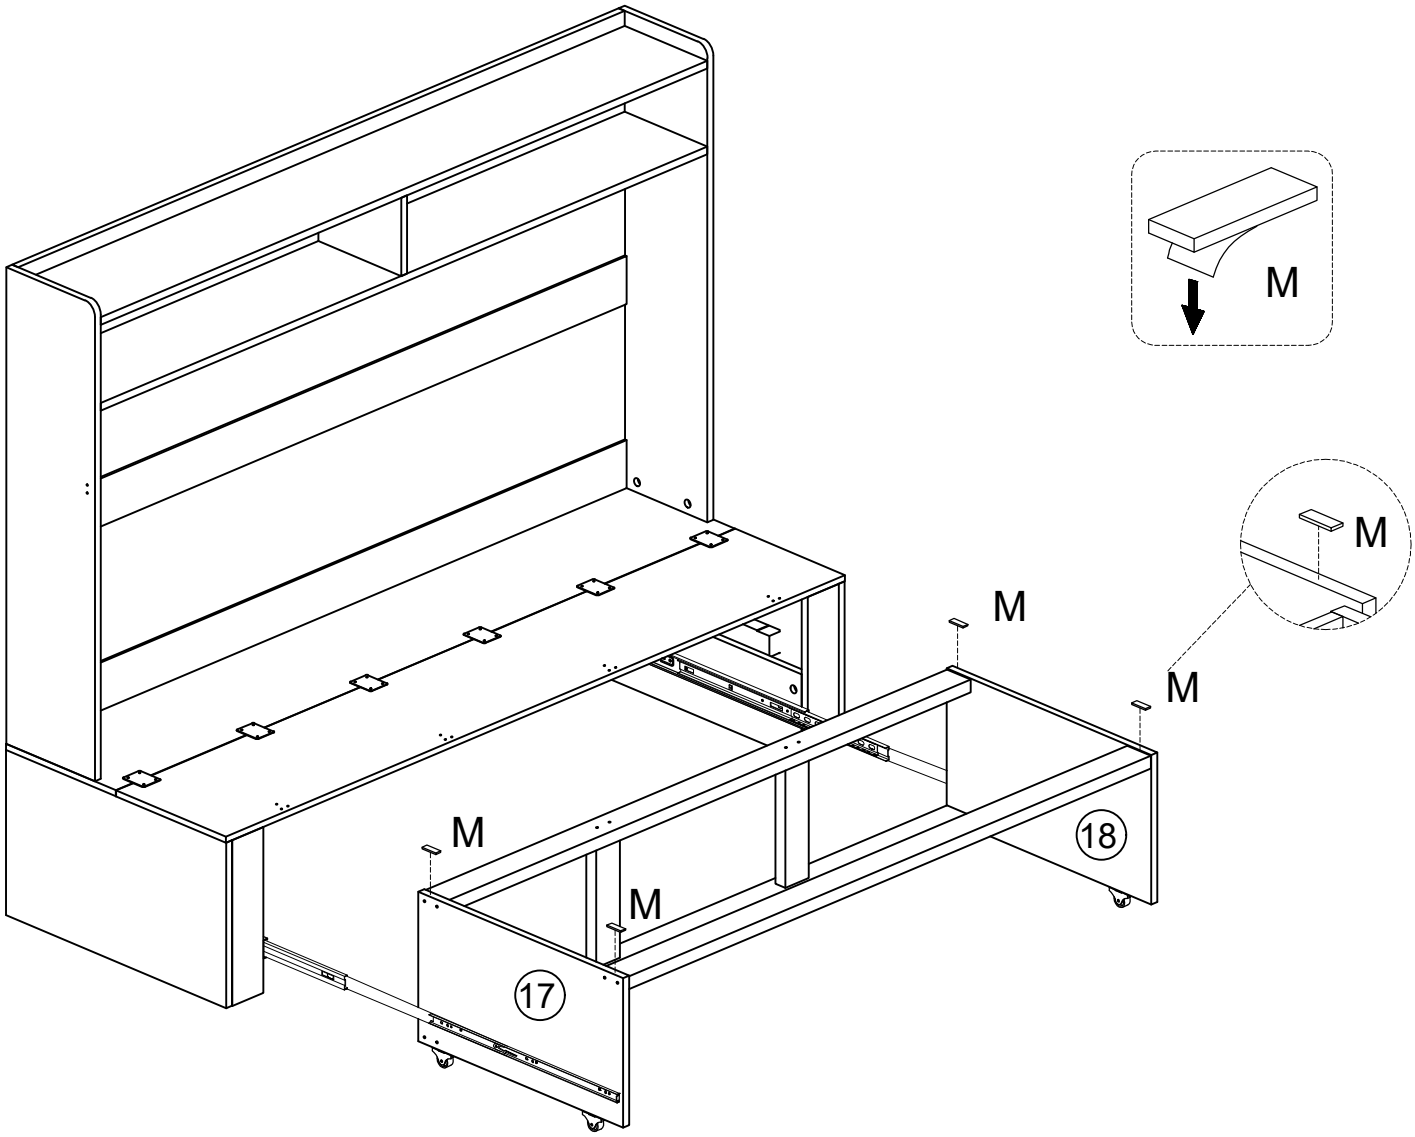

Step 35

L x4	E x24
	


l. Attach hinge (L) to panels (8) and (37) using screws (E).

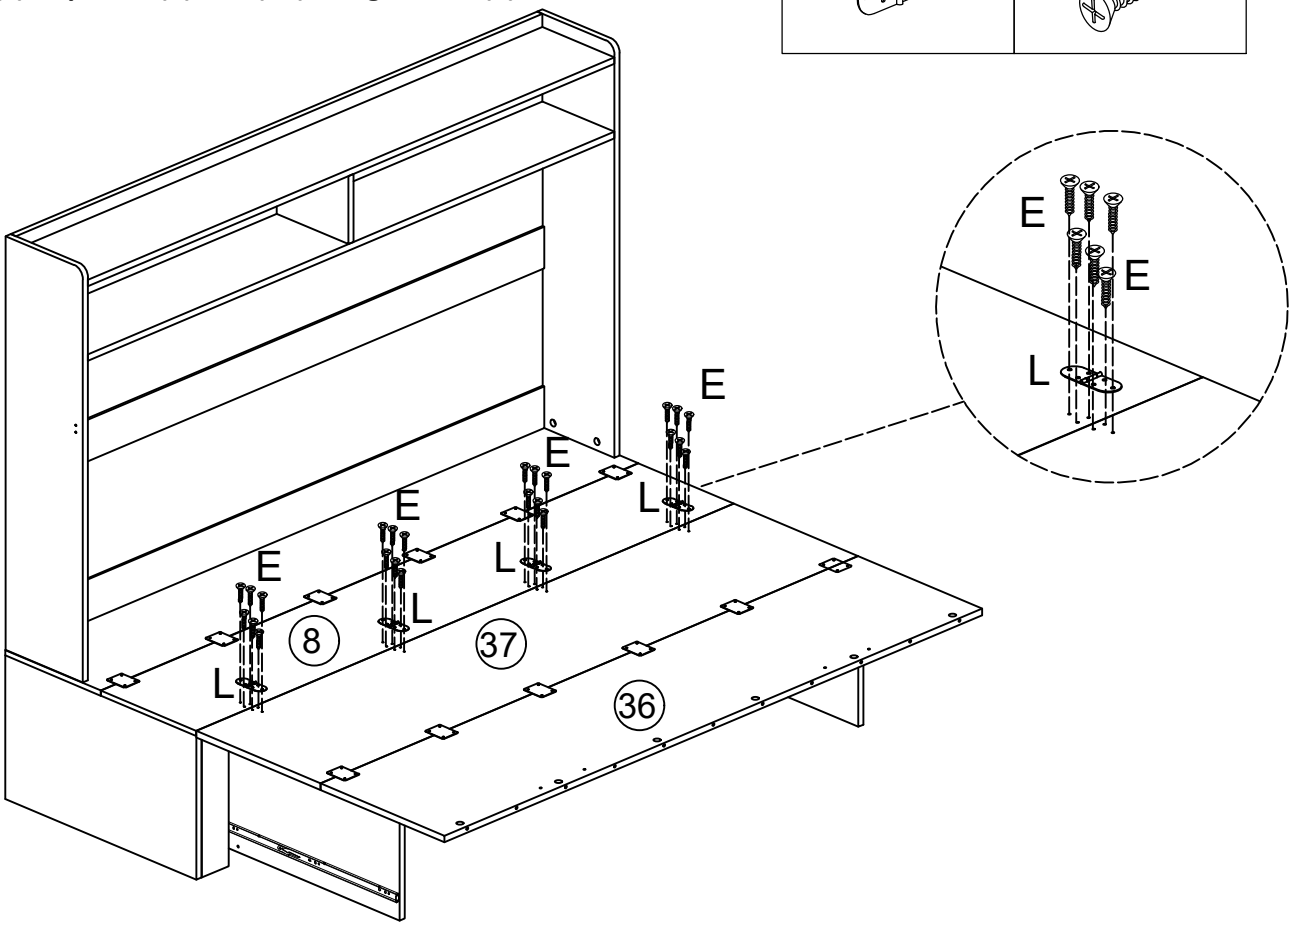


Step 36

A x6



l. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (30).

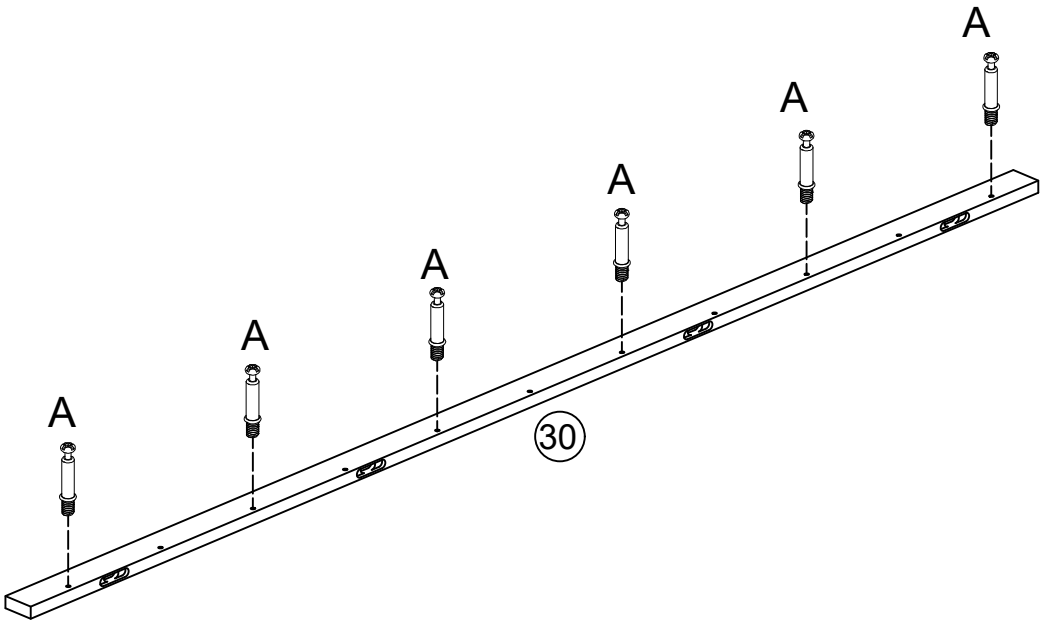



Step 37

B x6	D x5
	


l. Insert the wood dowel (D) into the panel (36).
ll. As shown in the illustration, connect the panel (30) to panel (36), insert the cam lock (B) into the corresponding holes on panels (36), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

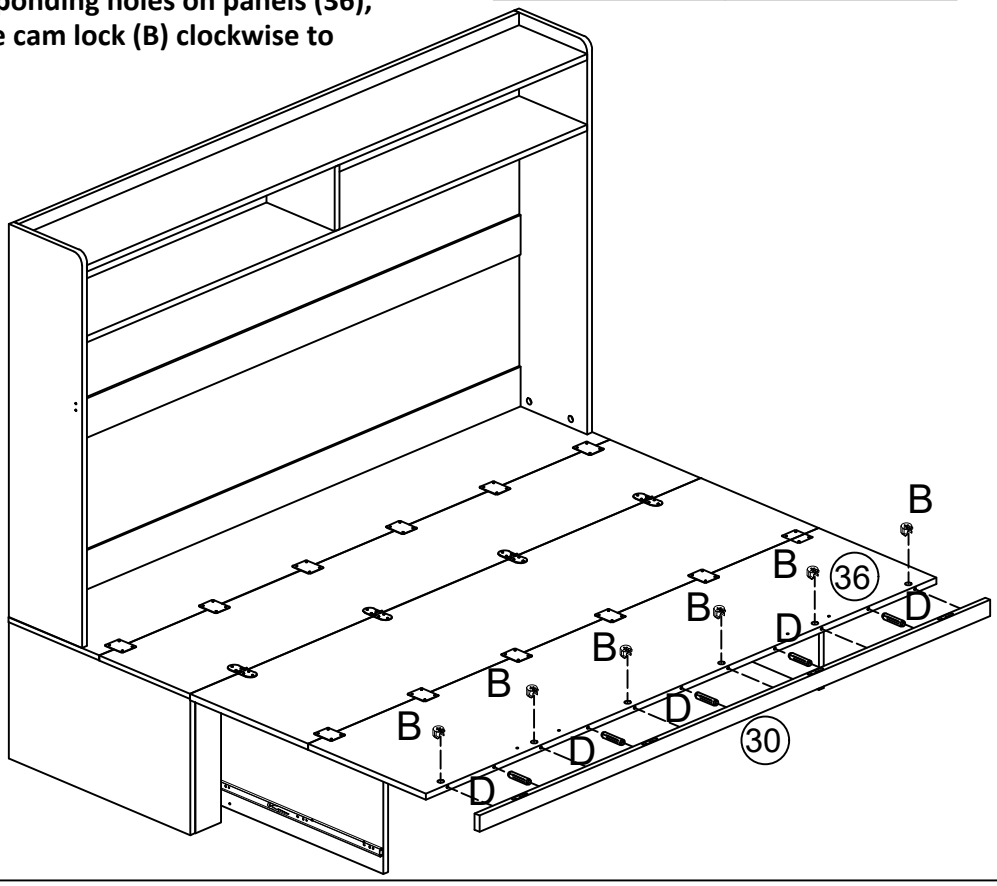

Step 38


N x12	P x1
	


l. Attach panel (38) to panel (31) using screws (N).

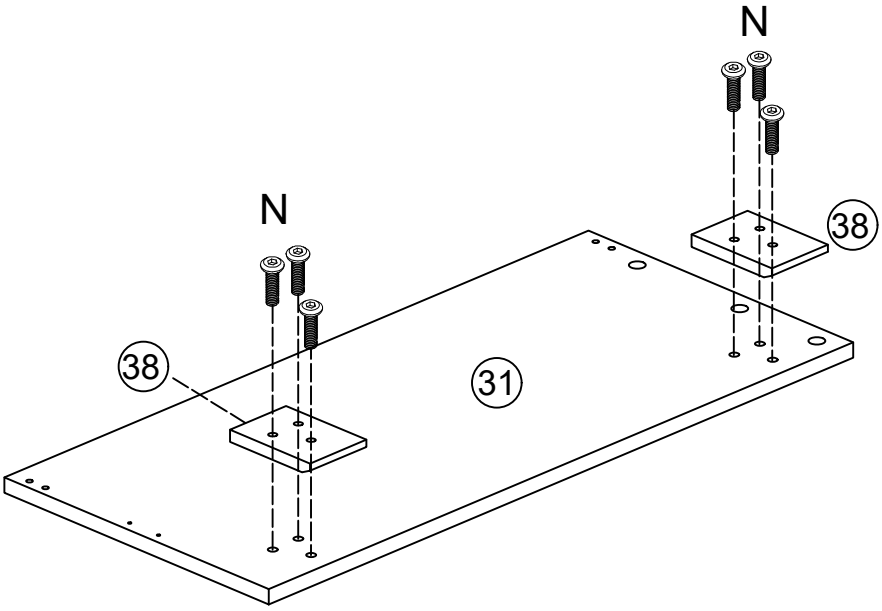

Step 39


l. **Attach panel (38) to panel (32) using screws (N).**

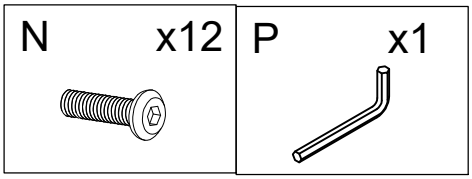


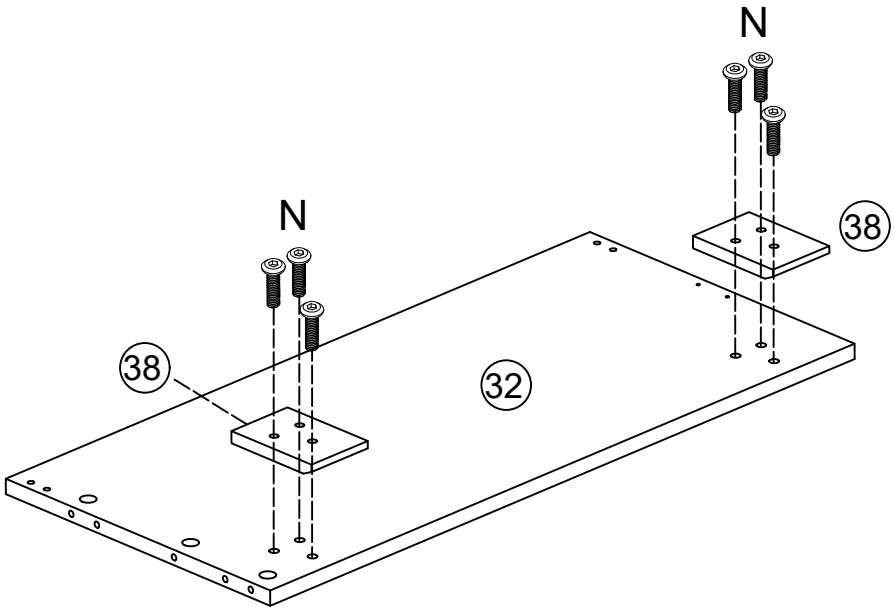

Step 40


l. **Attach steel tube (33) and (34) to panel (32) using screws (J).**

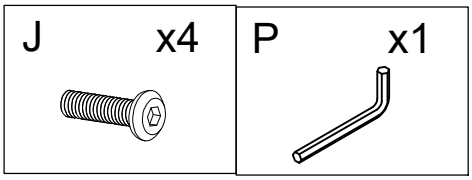


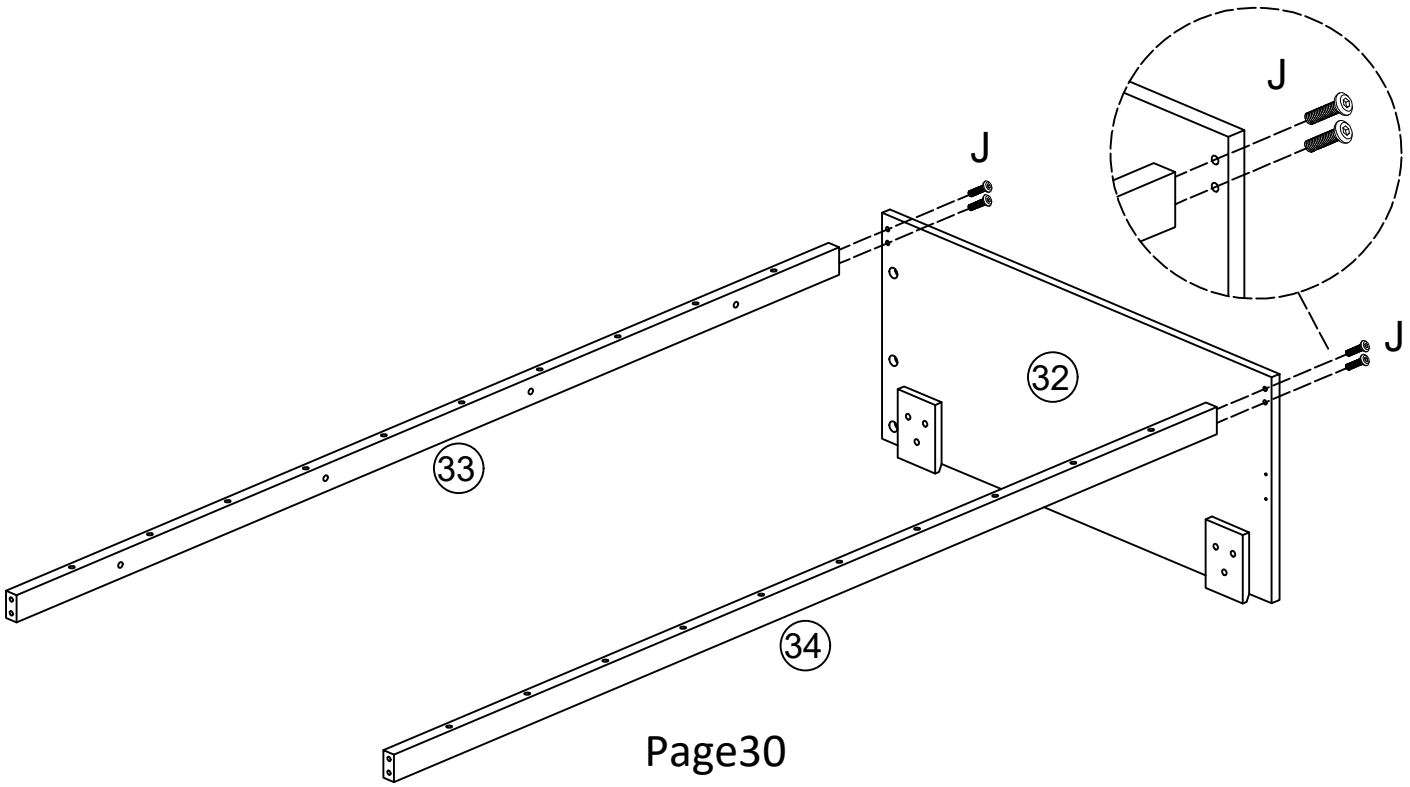

Step 41


l. **Attach steel tube (33) and (34) to panel (31) using screws (J).**

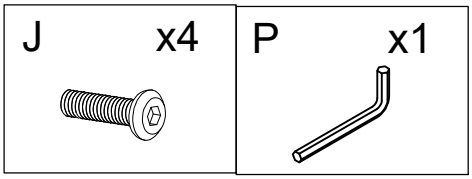


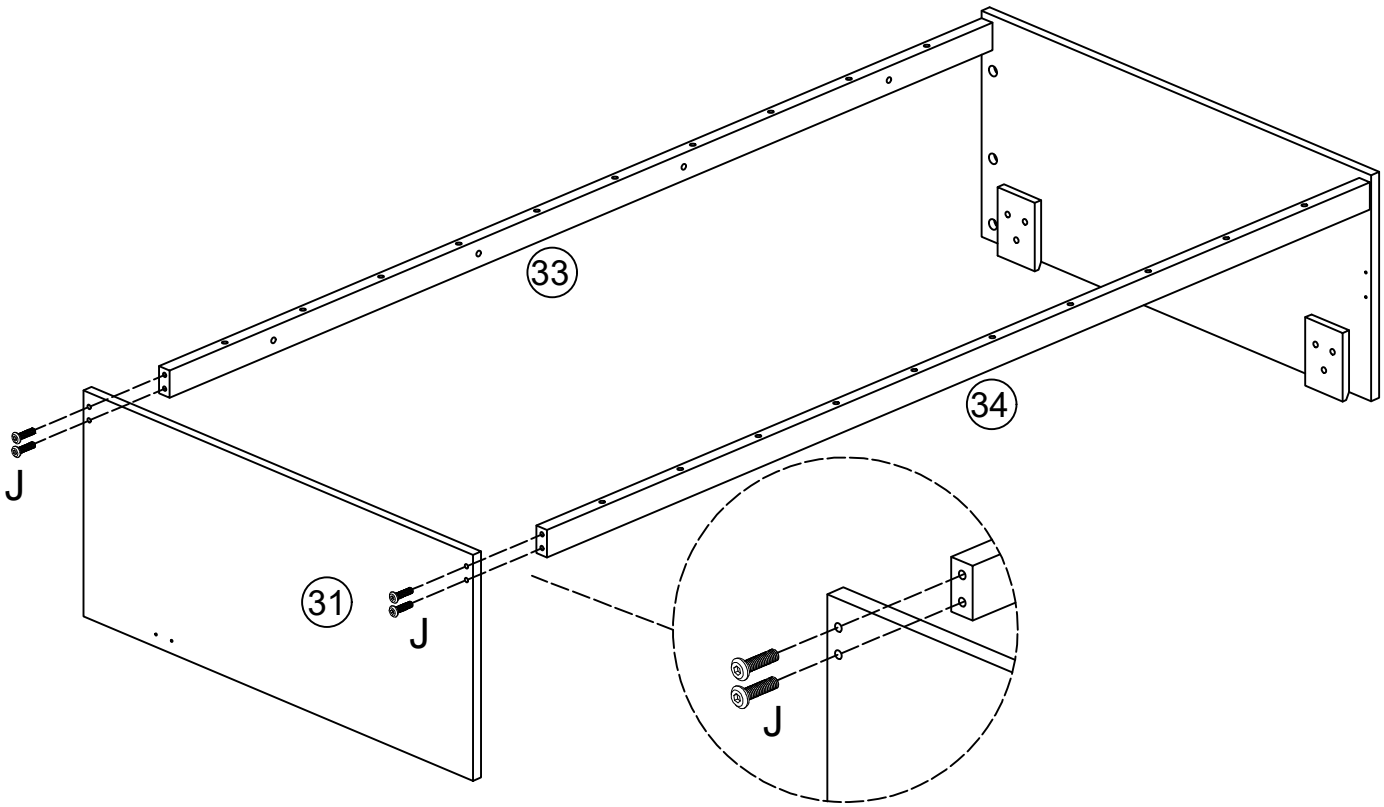


Step 42

l. **As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (29).**

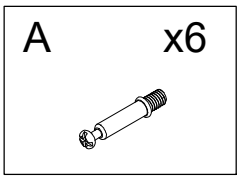

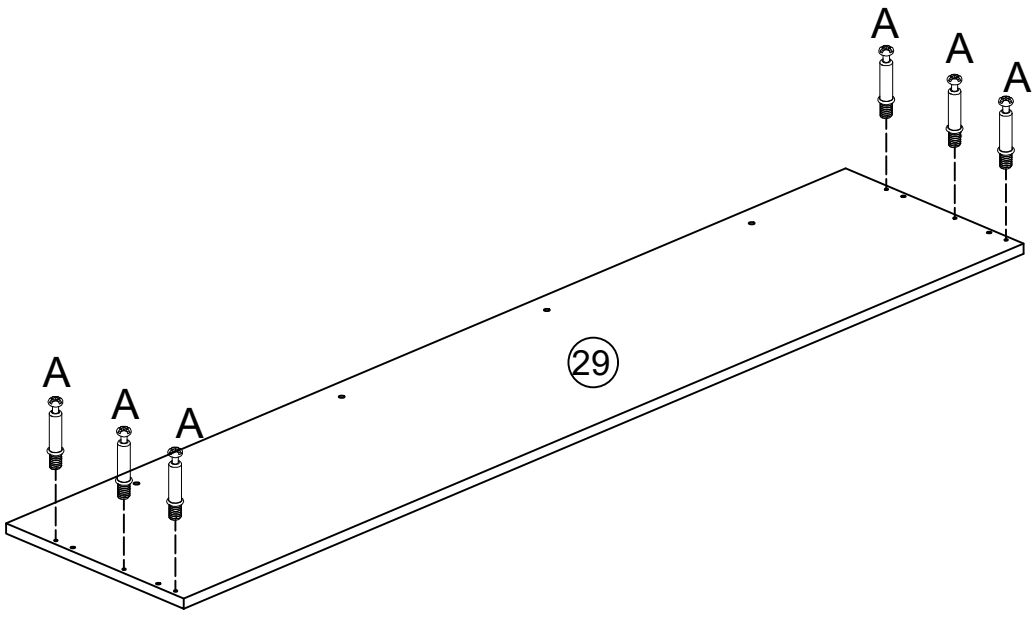


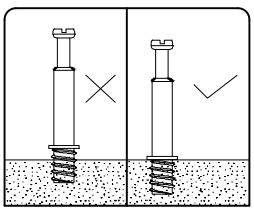

Step 43

B x6	D x4
J x4	P x1


l. Insert the wood dowel (D) into the panel (29).
ll. As shown in the illustration, connect the panel (29) to panels (31、32), insert the cam lock (B) into the corresponding holes on panels (31、32), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).
lll. Use screws (J) to attach panel (33) to panel (29).

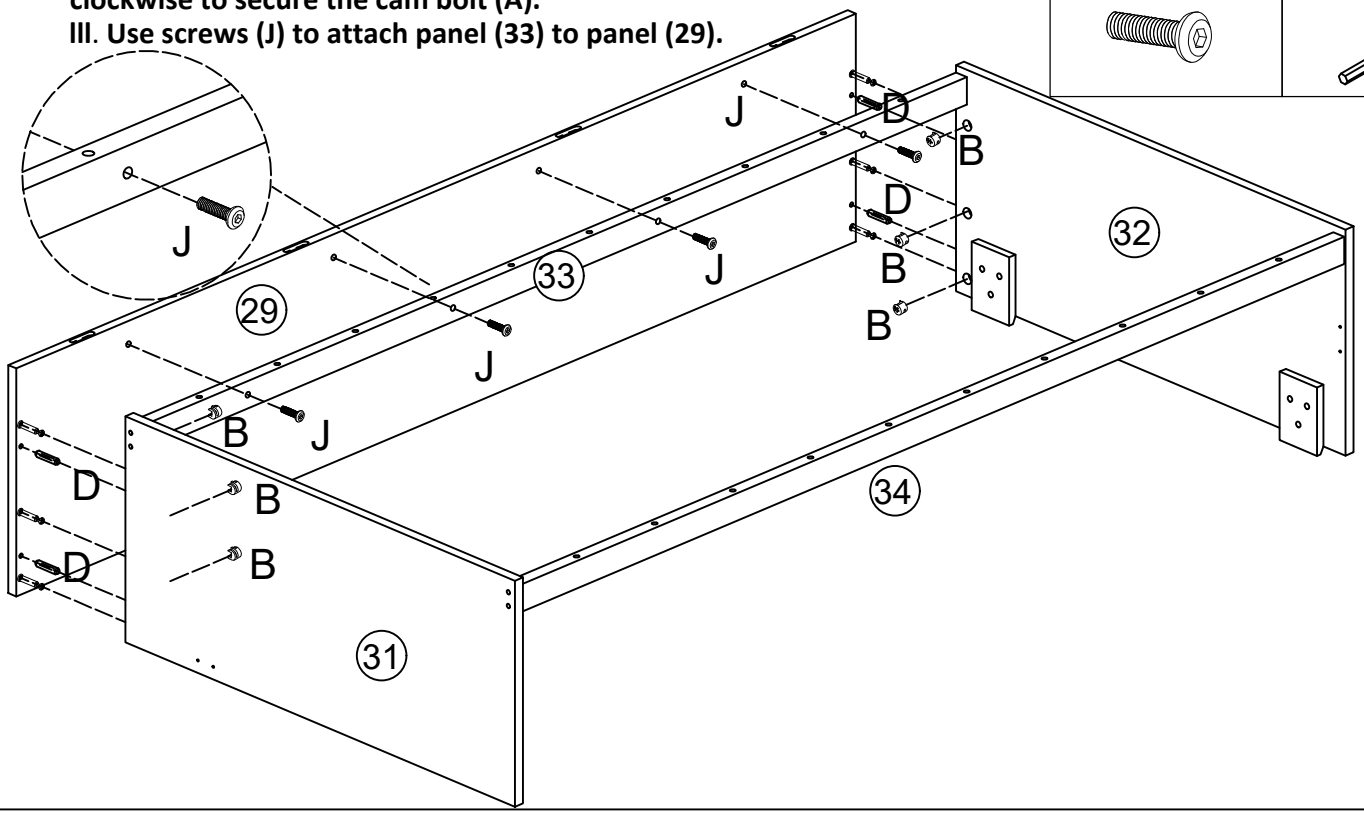

Step 44





Q x4	X x16

l. Use screws (X) to attach the hinges (Q) to the panel (29) and panel (30).

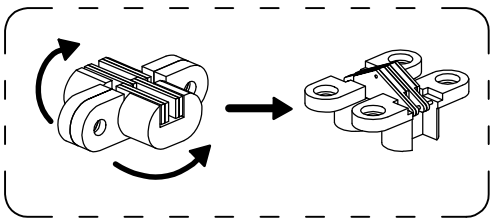





Step 45

l. Use screws (E) to attach panel (35) to panels (33) and (34).
ll. Use screws (E) to attach the magnetic catches (R) to panels (31) and (32).



N x20 	P x1 
R x2 	E x4 

Step 46


l. Insert the wood dowel (D) into the panel (23).
ll. Attach panels (24) and (25) to panel (23) using screws (C).
lll. Attach wheel (U) to panels (24) and (25) using screws (E).

C x4 	H x1 
U x4 	D x4 
	E x8 

Step 47


C x4	H x1
	

I. Attach panels (27) and (27) to panel (23) using screws (C).

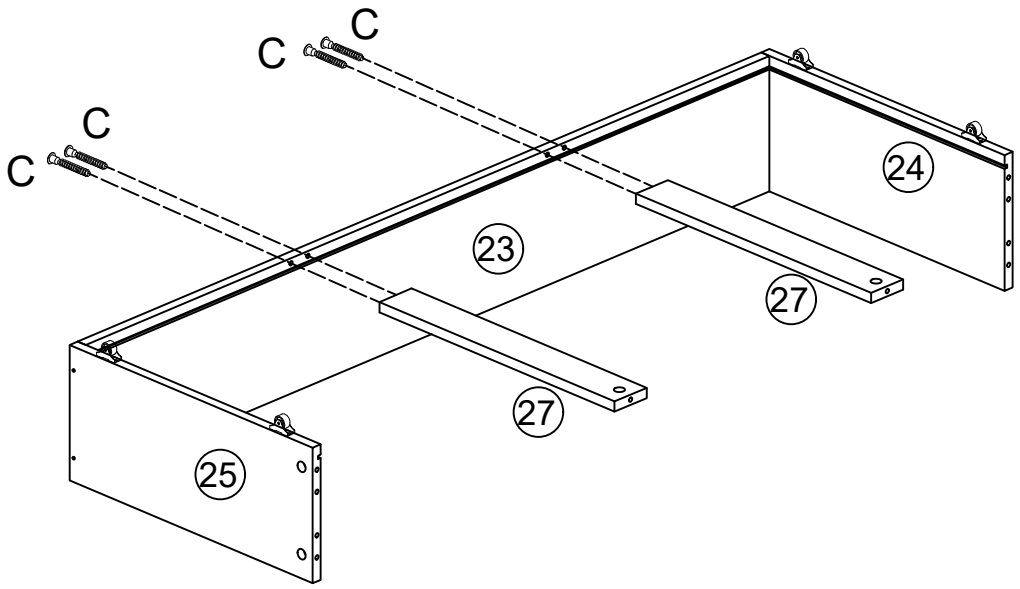


Step 48


I. Install panel (26) as per diagram and slide them into the grooves until they are fully seated.
II. Attach the back panel strip (28) to panel (26).
III. Attach the panel (26) to back panel strip (28).

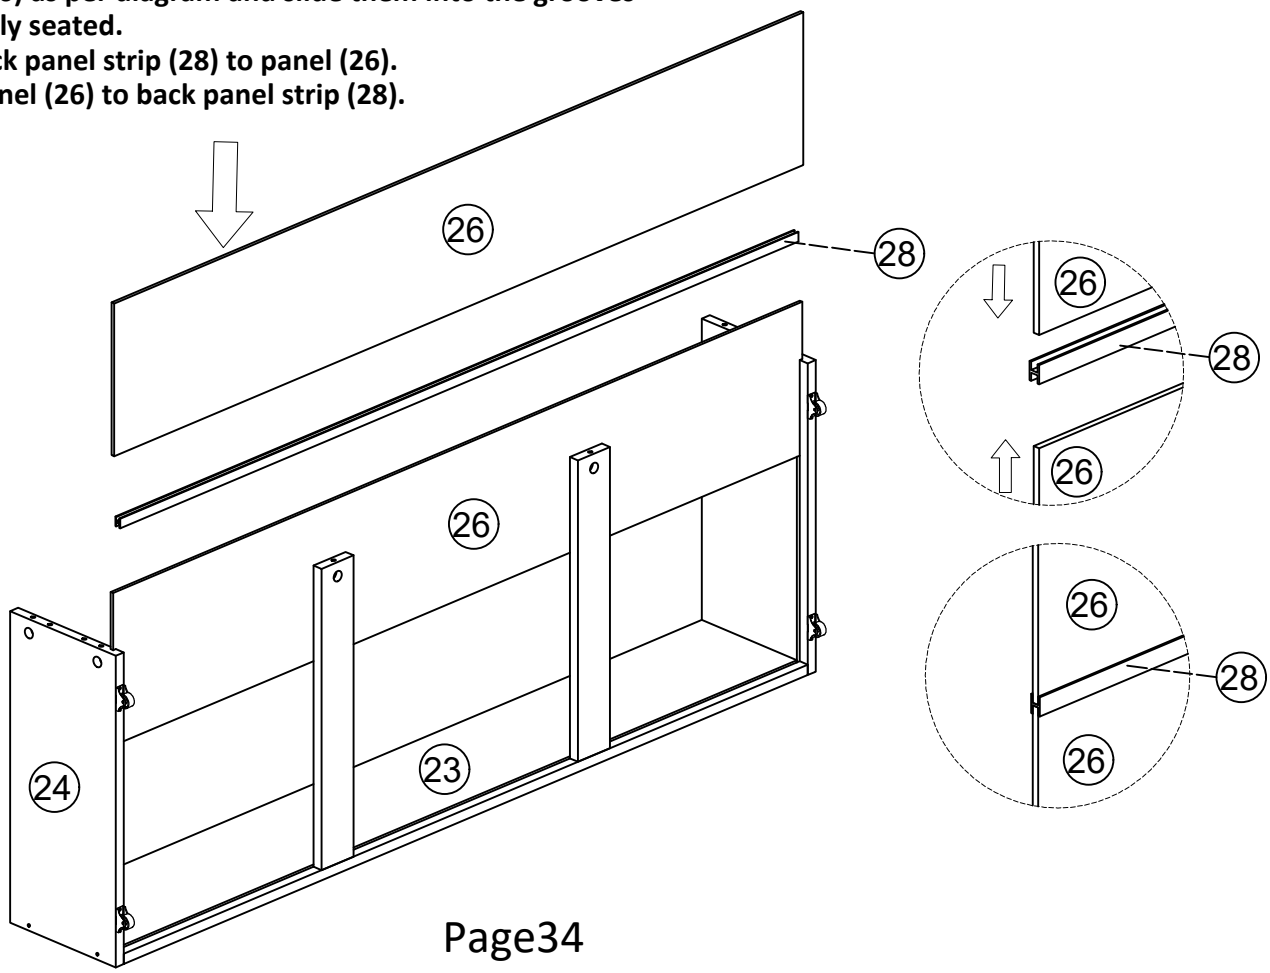

Step 49


I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (22).
II. Attach handles (V) to panel (22) using screws (V).
III. Use screws (E) to attach the magnetic catches (R) to panel (22).

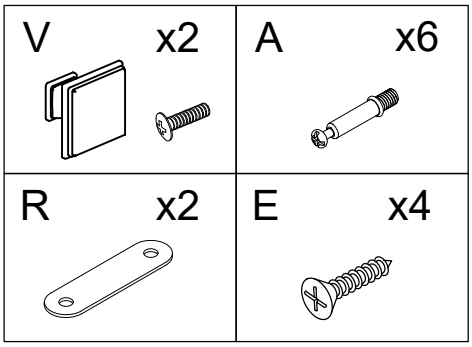


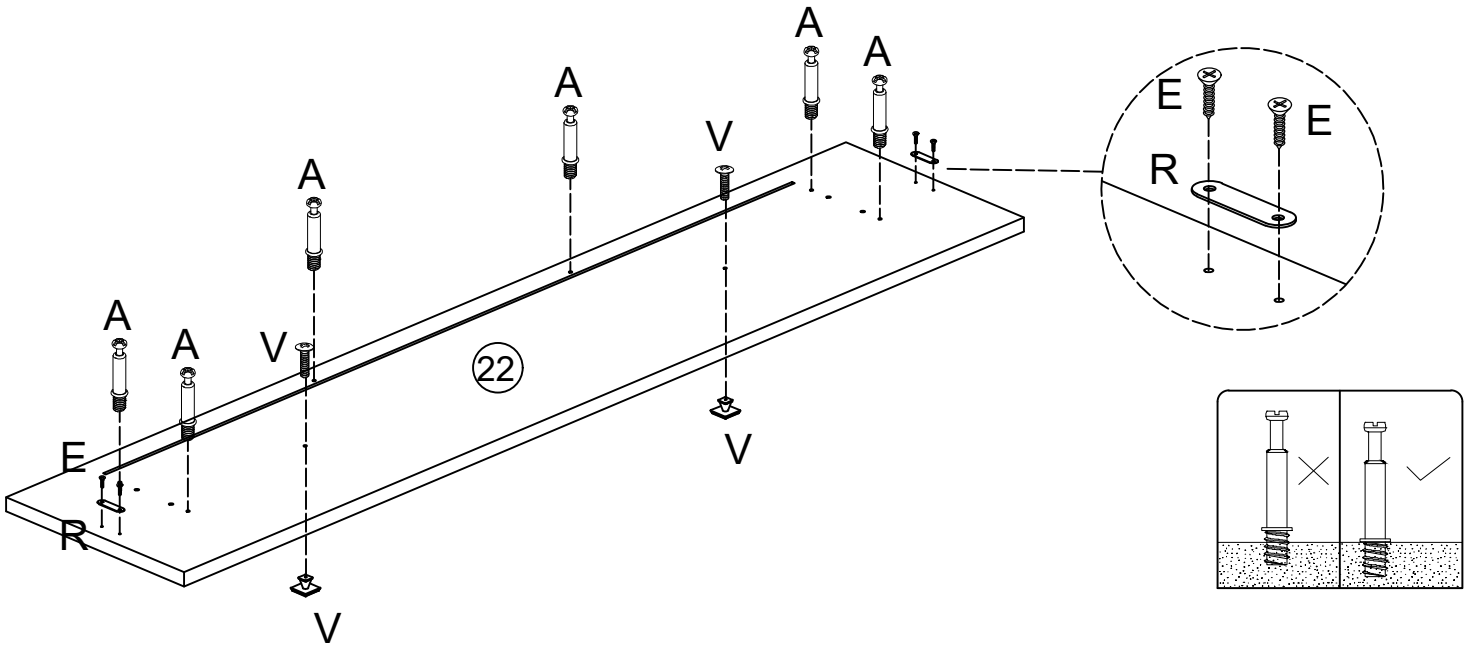

Step 50


I. Insert the wood dowel (D) into the panel (24、25).
II. As shown in the illustration, connect the panel (22) to panels (24、25、27), insert the cam lock (B) into the corresponding holes on panels (24、25、27), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

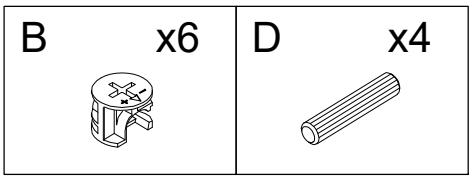

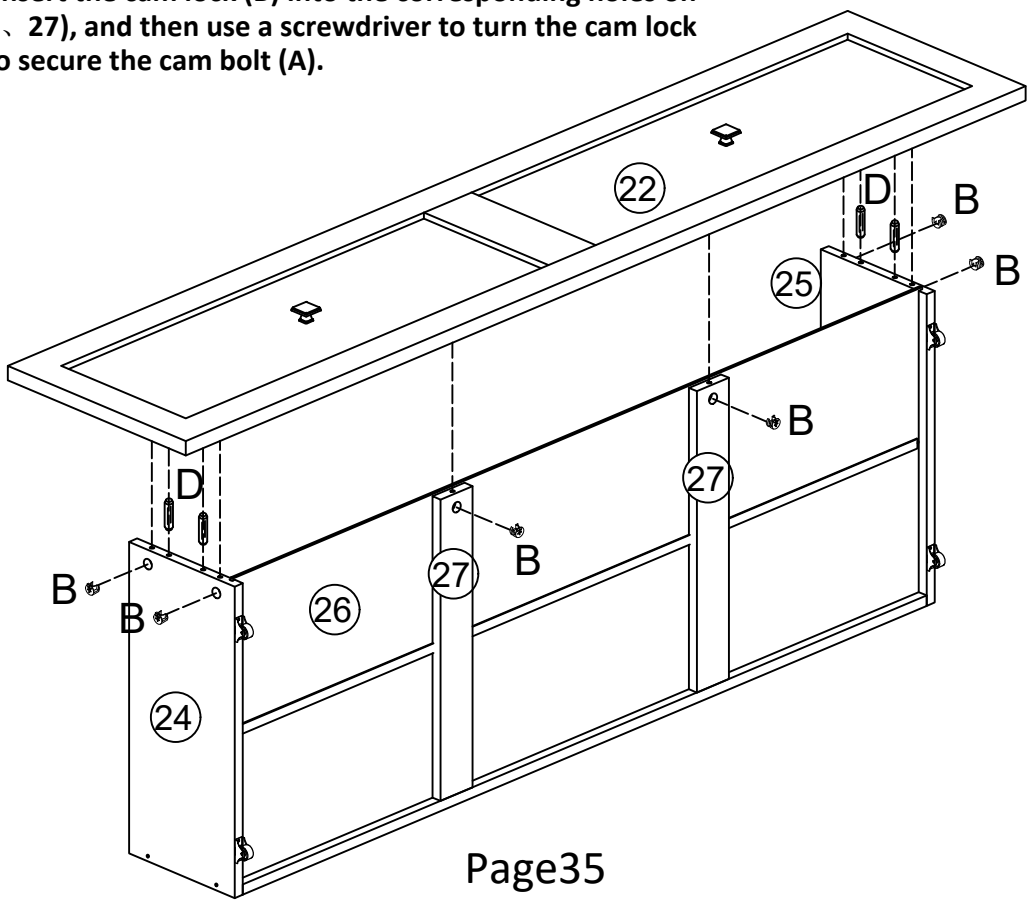


Step 51

l. Push the drawer fully into the designated position.

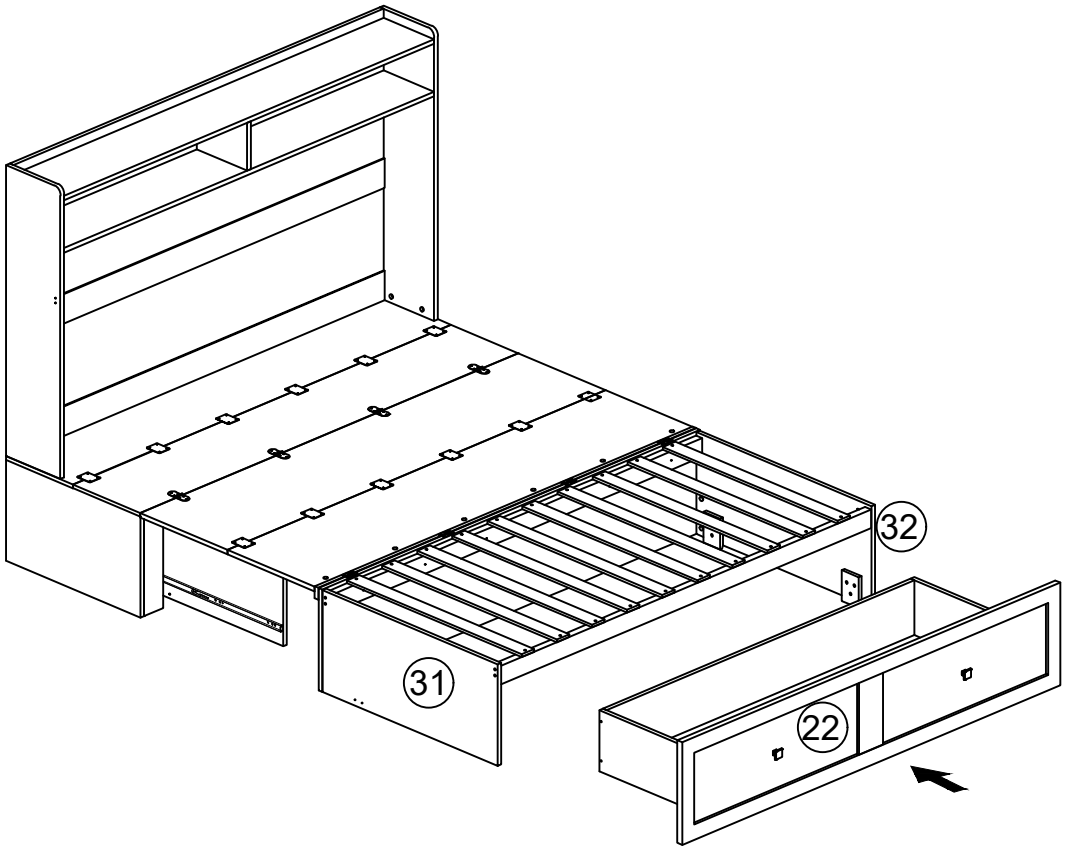


Step 52

l. Pull out the drawer.

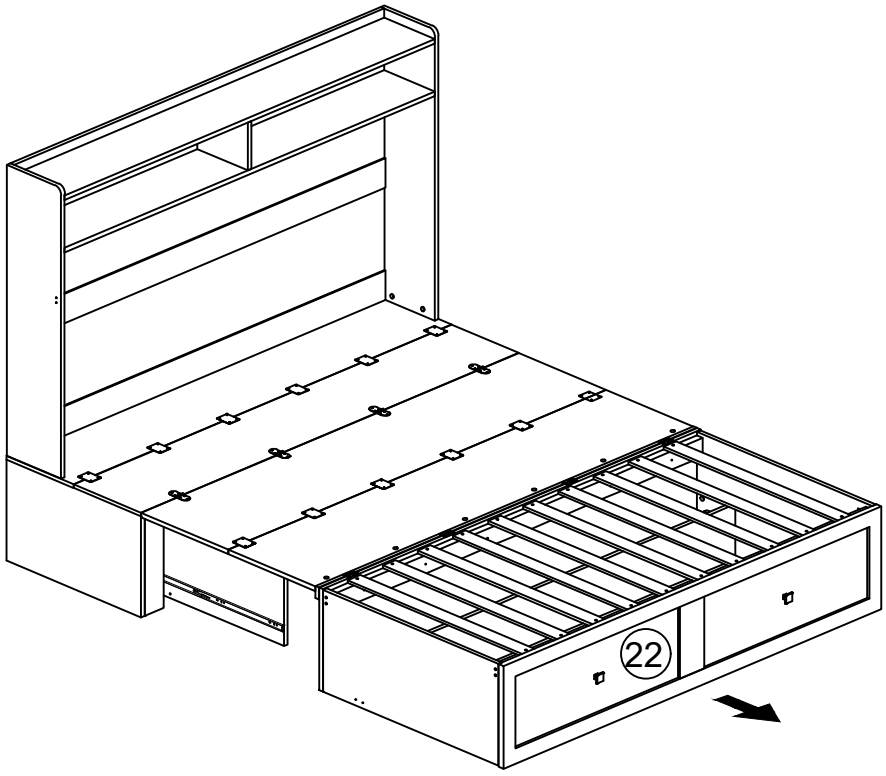


Step 53

l. Flip the front section backward.

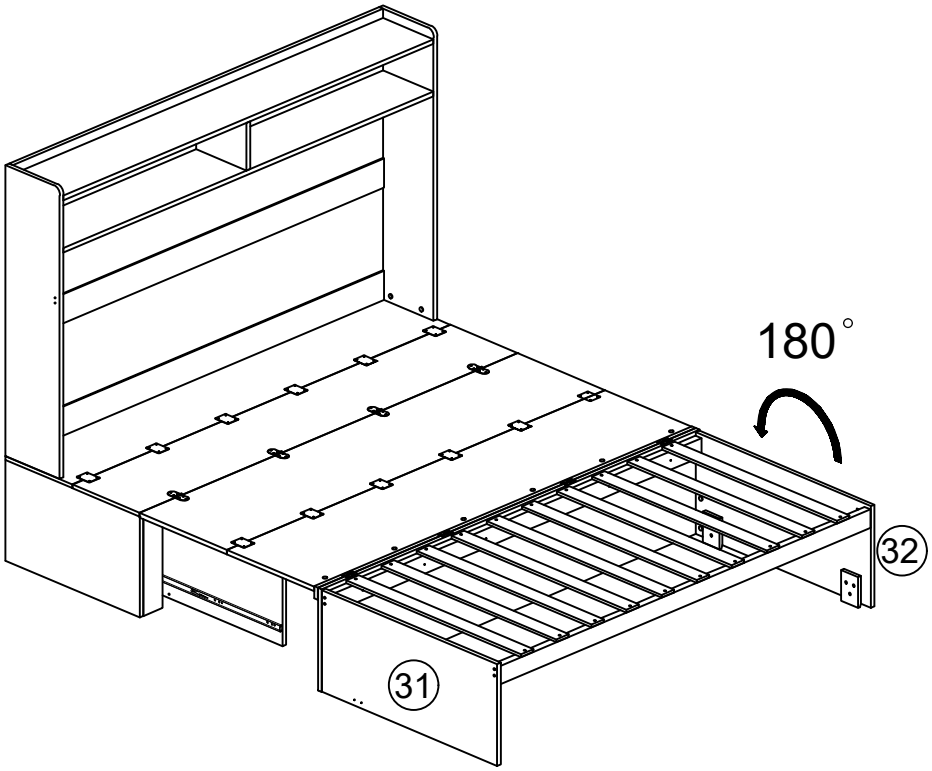

Step 54


l. Flip the middle section backward.

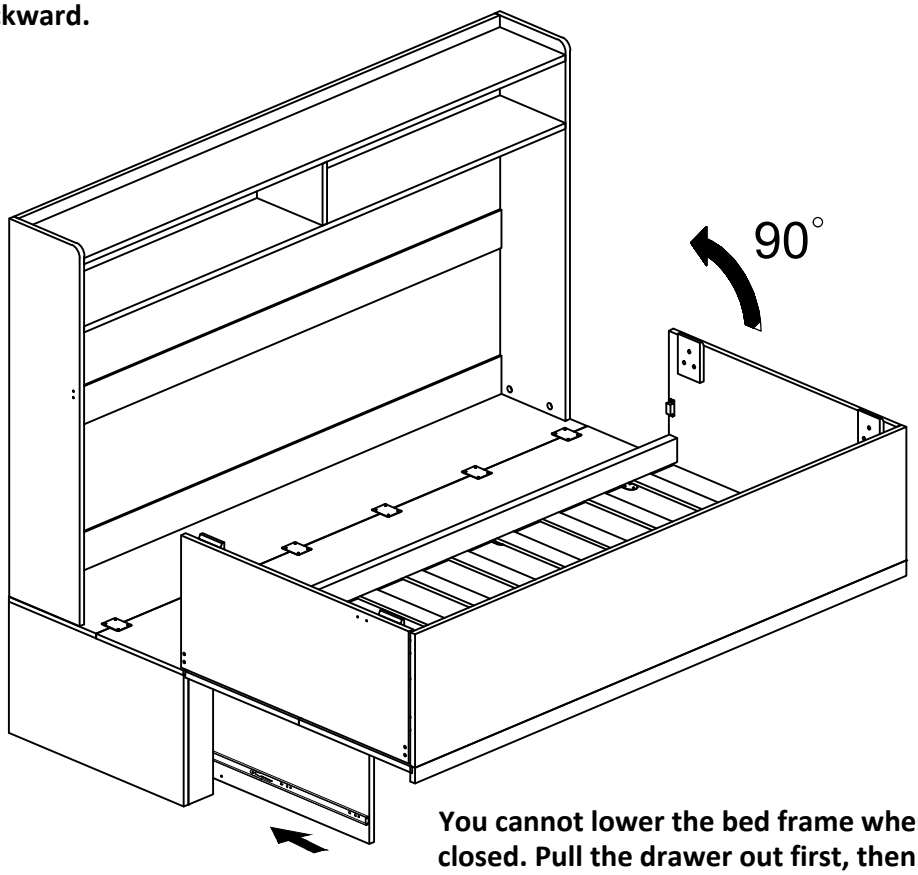


You cannot lower the bed frame when the drawer is closed. Pull the drawer out first, then you can lower the bed frame.

Step 55


I. Attach latch (W) to panel (2) and panel (31) respectively with screws (E).

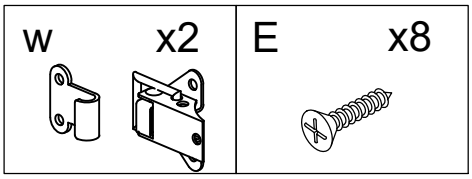


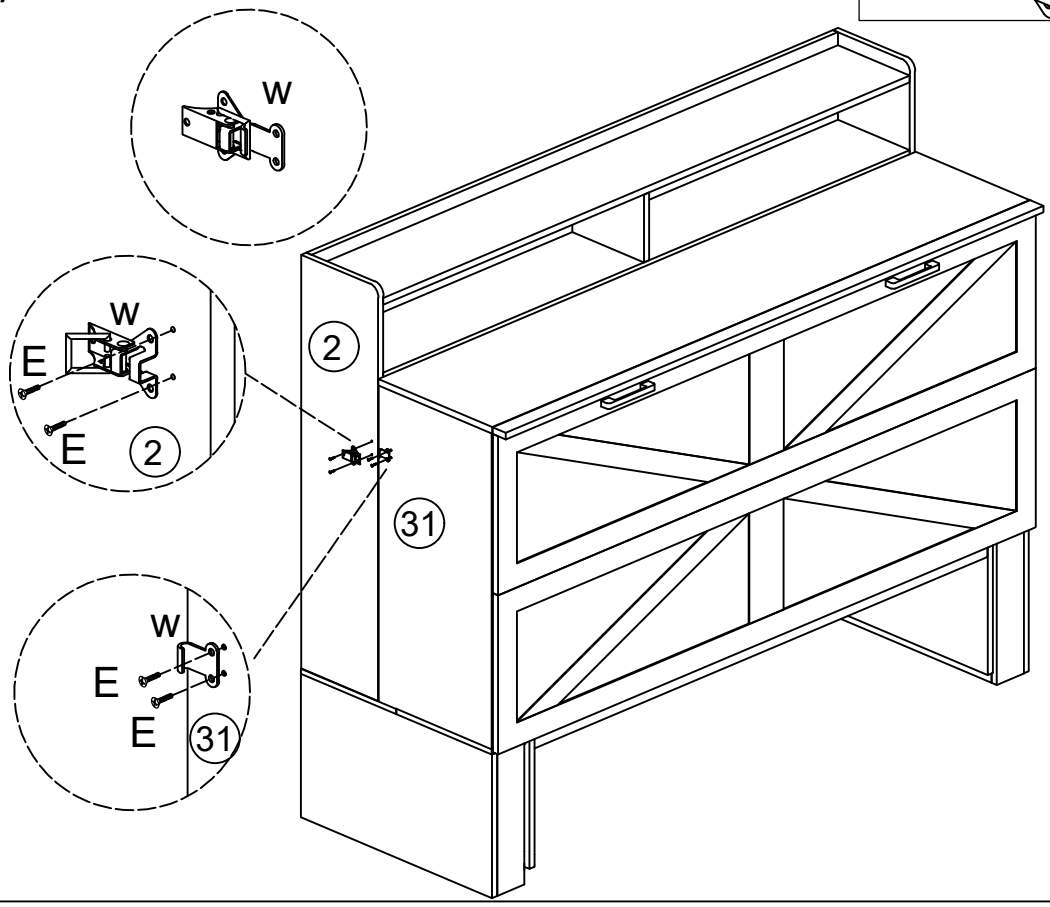

Step 56


I. Peel off the adhesive backing from the light strip (Z) and the light strip clips (Z).
II. Attach the light strip (Z) to this side of the cabinet inside panel (40), routing it through the groove on panel (41). Use the light strip clips (Z) to hold the light strip (Z) in place for added stability.

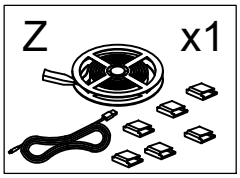

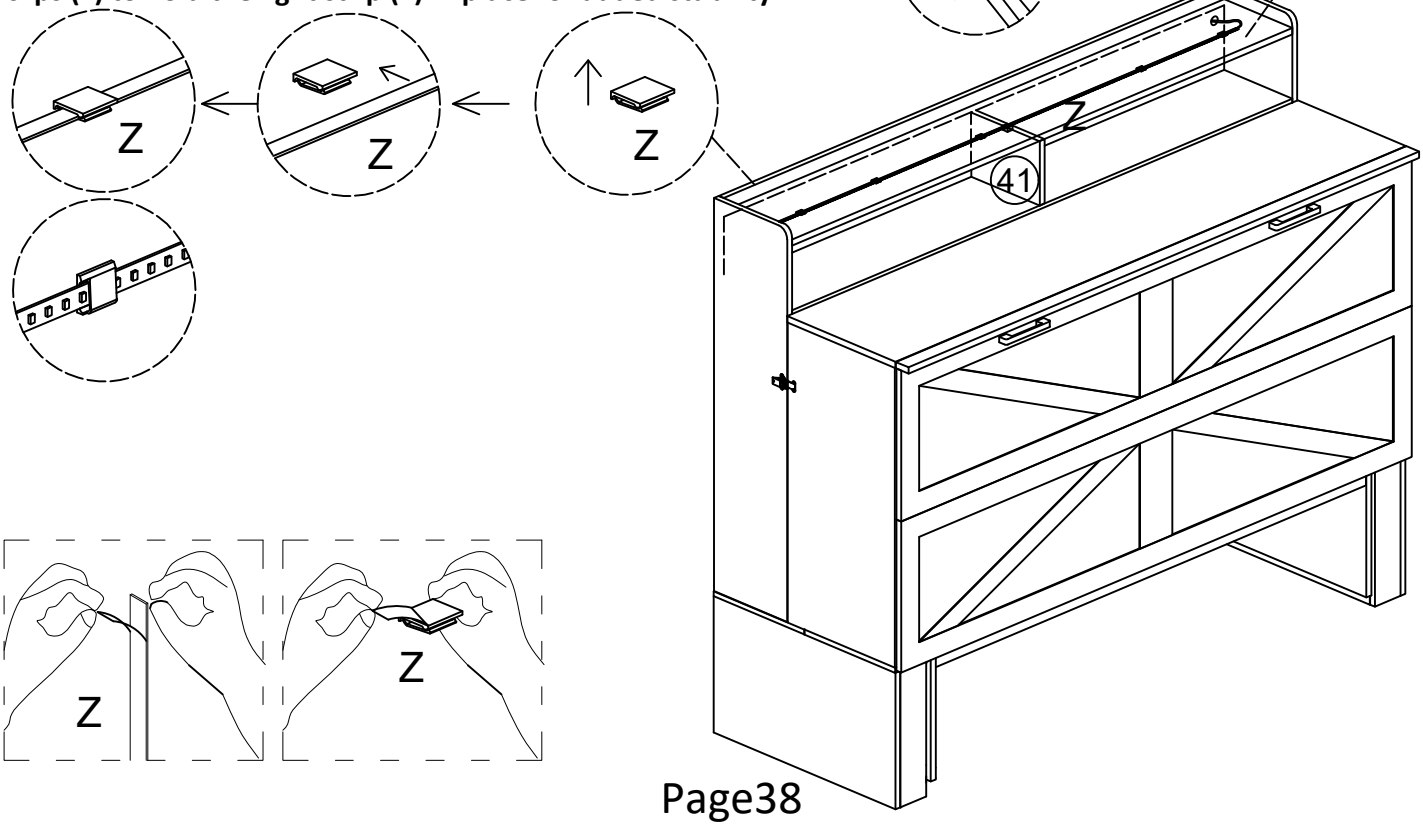


Step 57

l. Push the drawer fully into the designated position.

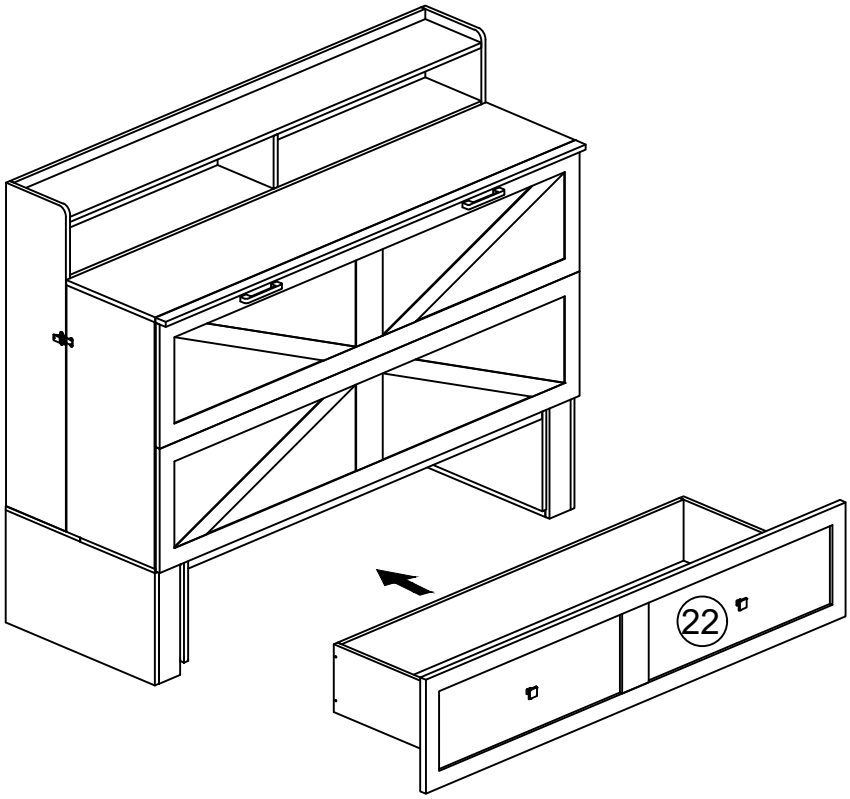


Step 58


l. Button the latches (W) together

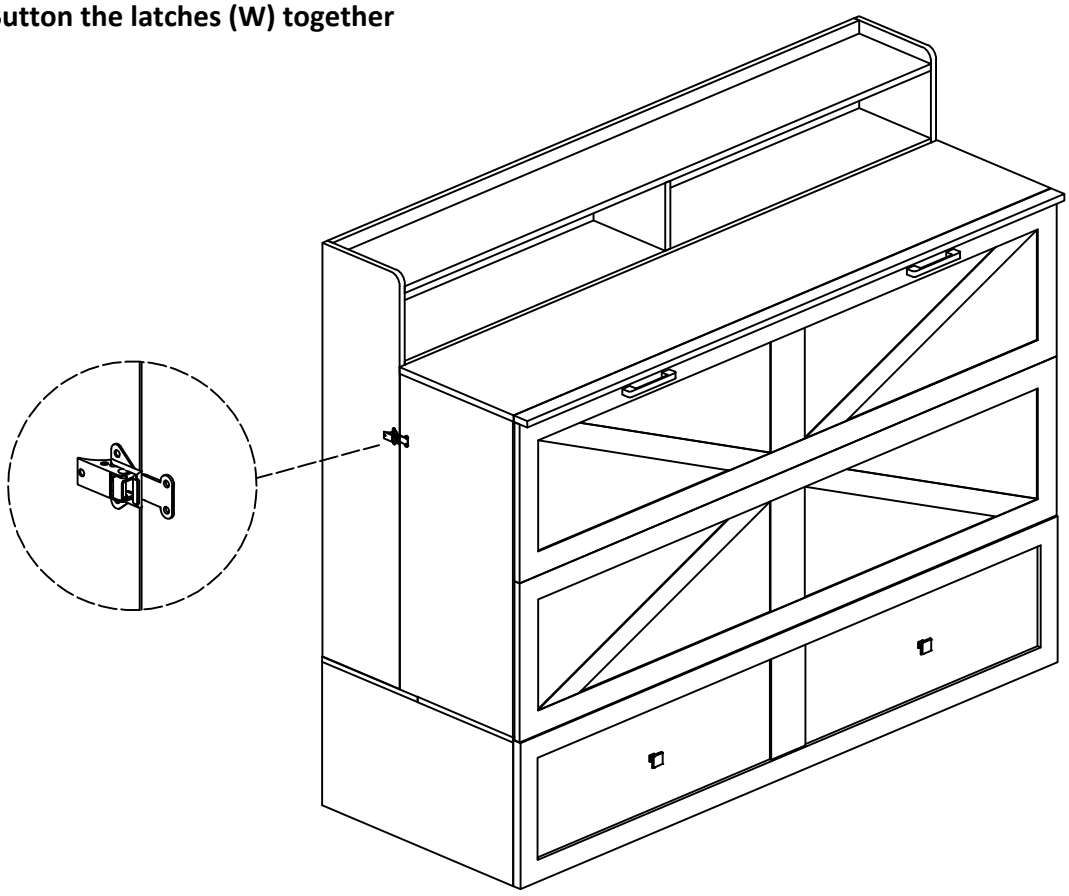


Step 59


I. Install the anti-tip kit (A2) on panel (39) and secure it to the wall.
II. Secure T-connector plate (S) to the corresponding panels with screws (E).

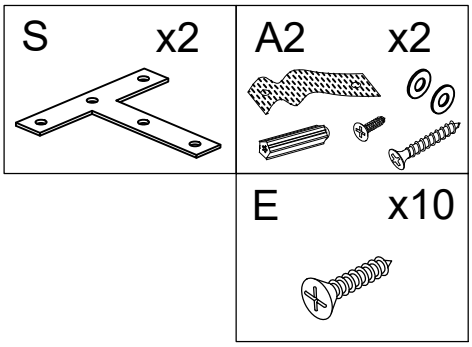


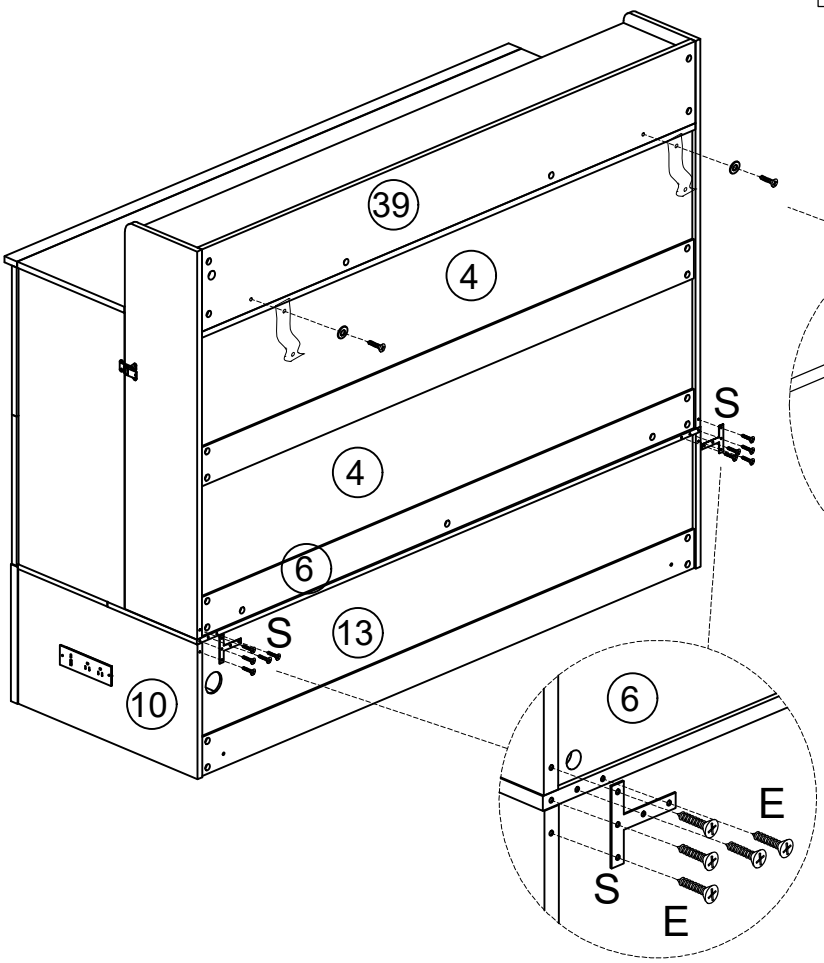

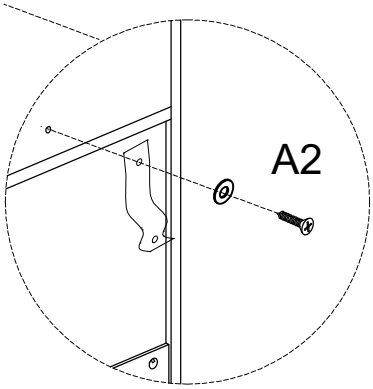

Please read the Guide to Wall Mounting & Fixings on the last page before excuting this step.

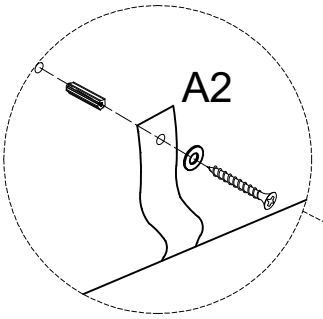

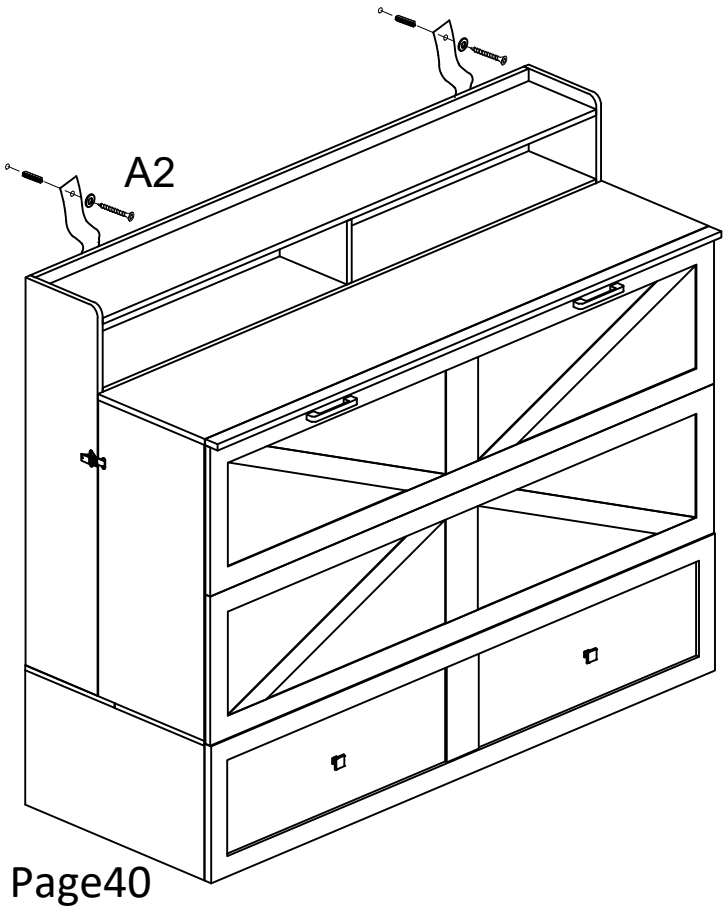

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1.Move the unit into desired position.
2.Mark the wall with a suitable scribe the position of the fixing holes.

Warning:
Before driling,check wall for hidden pipes and cables.

3.Drill holes and insert wall plug.
4.Attach strap(A2) to the wall.