

ASSEMBLY INSTRUCTIONS

Twin House Bunk Bed with Drawers and LED Light

SKU:


LX-TC1215T-XX-BL

LX-TC1215T-XX-WHT

Important: Read all instructions carefully
before assembly.

Keep this manual for future reference.

ASSEMBLY INSTRUCTIONS

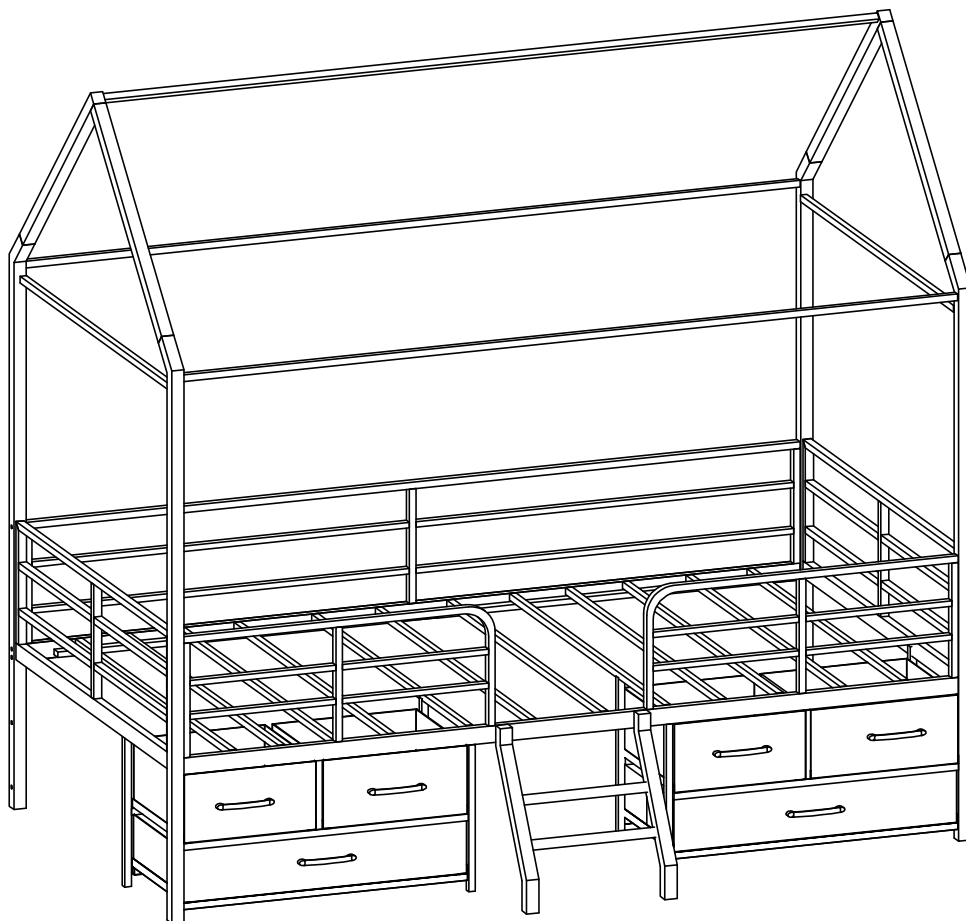

SAFETY WARNINGS AND GENERAL NOTES

- Adult assembly required.
- Check all bolts and screws periodically and retighten if needed.
- Do not allow jumping or rough play on the bed.
- Do not exceed the weight capacity. See product specifications.
- Mattress must fit securely within the frame.
- Always secure the bed to the wall using the anti-tip kit.
- Use the recommended mattress size only.
- Keep small parts away from children during assembly.
- Place the bed on a flat, level surface.
- Only install the supplied LED decorative light in the location shown in Step 19. Do not attach any other cords, ropes, or hanging items to the bed frame.
- This product must be secured to a wall using the included anti-tip hardware. Failure to do so may result in serious injury or death.

Before Assembly:

- Check all parts and hardware against the parts list
- Do not fully tighten bolts until instructed

The top surface of the mattress must be at least 5 inches below the upper edge of the guardrails.

- Do not use water mattresses or sleep flotation mattresses.

STRANGULATION HAZARD: Never attach or hang items to any part of the bed that are not designed for use with the bed.

- Assembly requires 2 adults
- Estimated assembly time: 1 - 2 hours

Mattress size for each bed.


Bed type: Twin standard

Length: 75 inches

Width: 38 inches

Max Mattress thickness: 6 inches


Bed Parts View

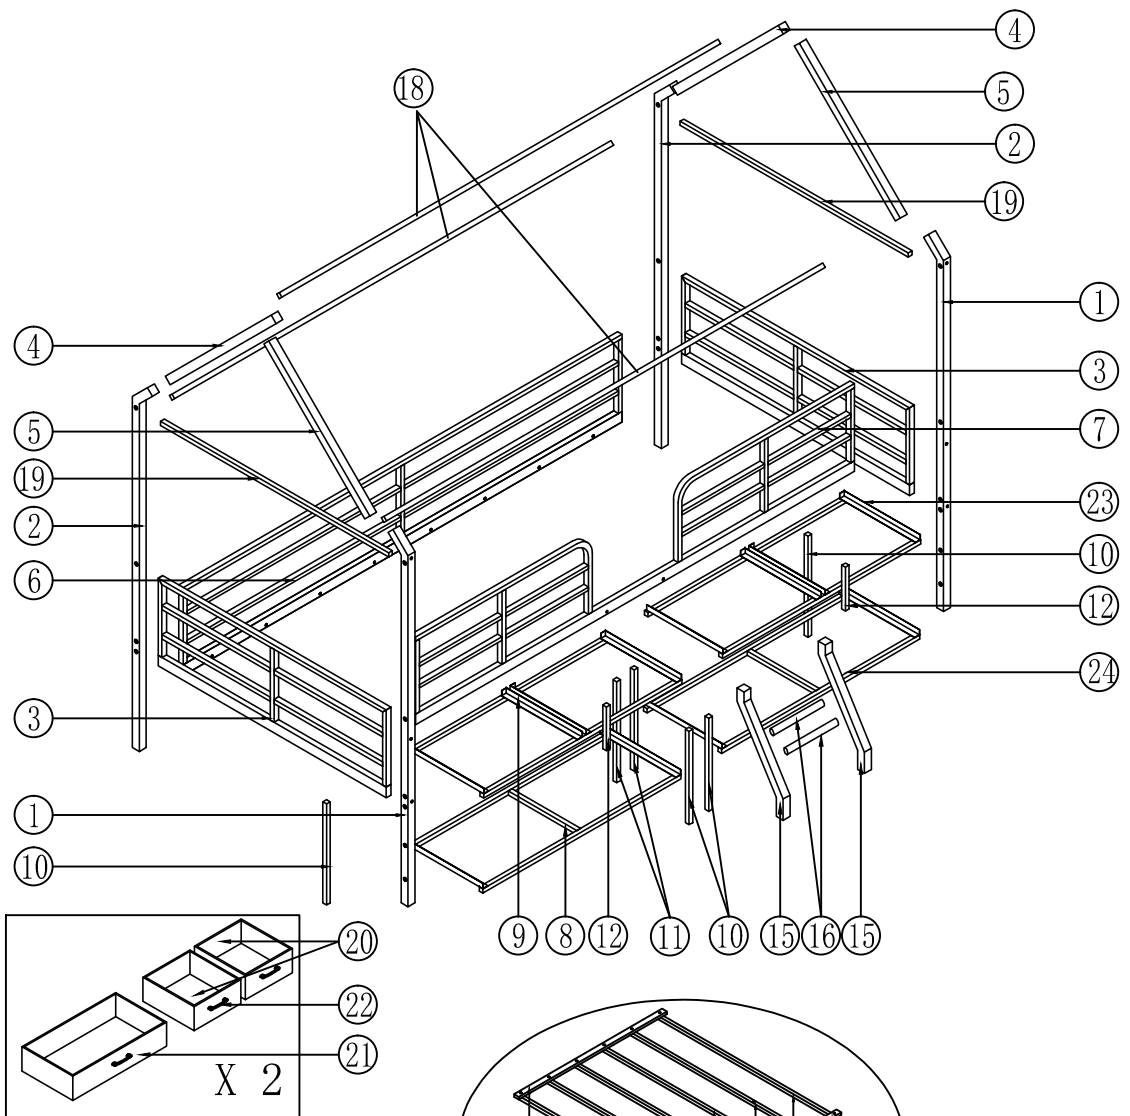


Recommended for assembly
by 2 adults.

A power drill with a hex bit is
recommended to speed up
assembly, but do not
overtighten the hardware.


Part List

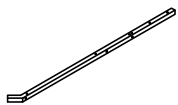


1-2PCS

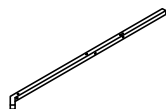


2-2PCS

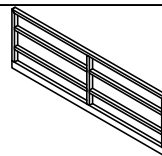


3-2PCS

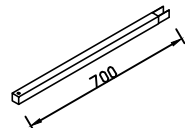


4-2PCS

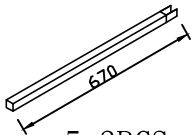


5-2PCS




6-1PC



7-1PC



8-1PC



9-1PC




10-4PCS




11-2PCS



12-2PCS




13-10PCS




14-2PCS




15-2PCS




16-2PCS



17-4PCS

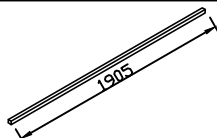


18-3PCS

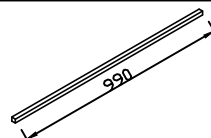


19-2PCS




20-4PCS

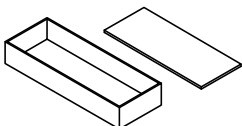


21-2PCS

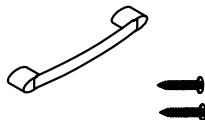

22-6PCS



23-1PC



24-1PC

Hardware List



A-Bolt 6*19mm
28PCS



B-Bolt 6*38mm
48PCS




C-Bolt 6*50mm
30PCS



D-Bolt 6*63mm
6PCS



E- Barrel Nut
6*19mm
4PCS




F-Wall Anchor Set
4PCS



4mm
G
1PC



4mm
H
1PC

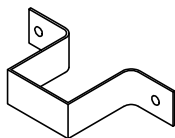

I-2PCS




J-1PC






K-1SET



Step 1: Attach part #1、#2 to part #3 using screws B、C and E

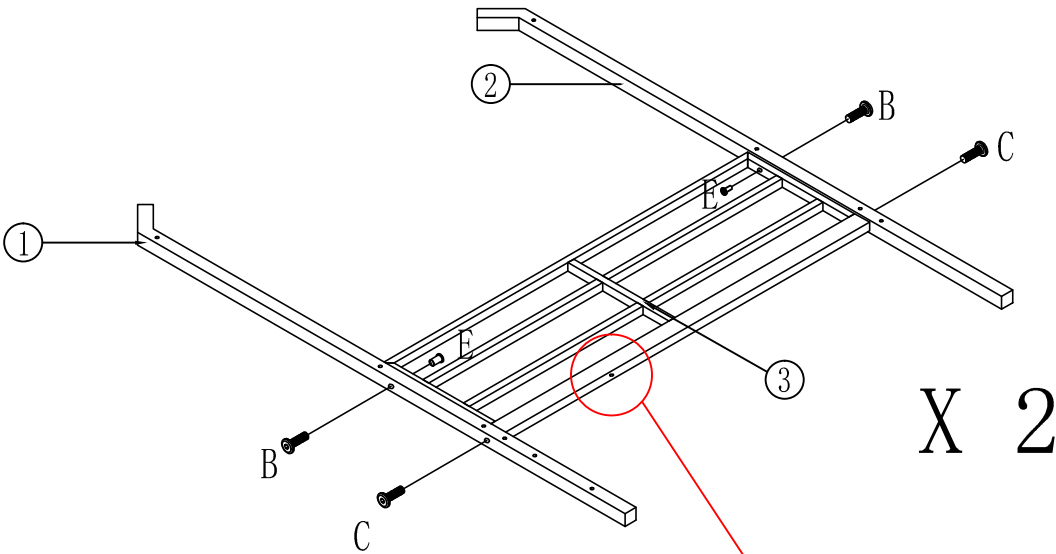


Pay attention to the hole positions

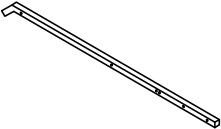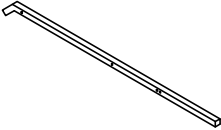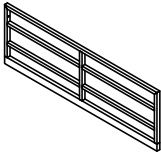 1-2PCS	 2-2PCS	 3-2PCS	 6*50mm C-4PCS
 6*38mm B-4PCS	 6*19mm E-4PCS	 4mm G-1PC	 4mm H-1PC

Step 2: Attach part #4 to part #5 using screws B

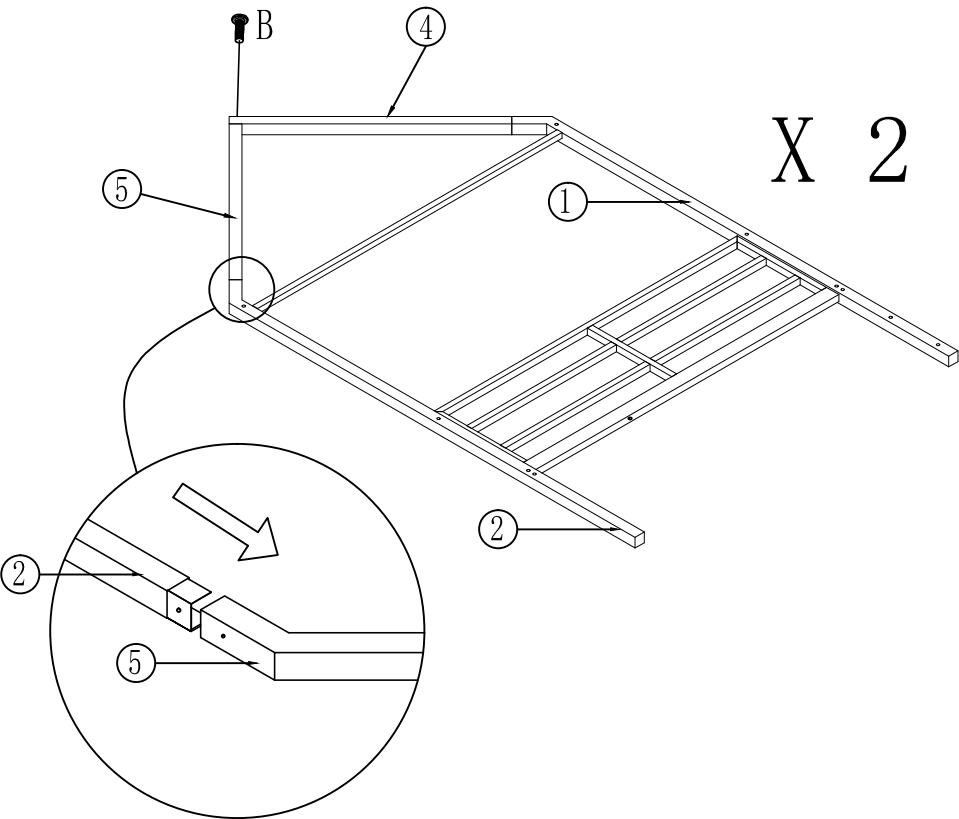


4-2PCS



5-2PCS




6*38mm
B-2PCS




G-1PC

Step 3: Attach part #1 to part #2 using screws A


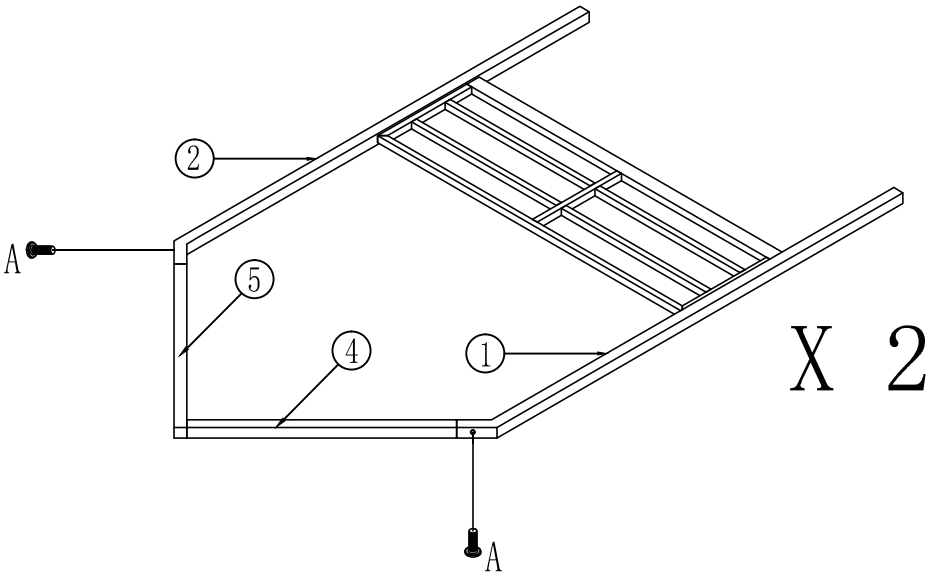


6*19mm
A-4PCS



G-1PC

Step 4: Attach part #19 with part #1、#2 using screws C

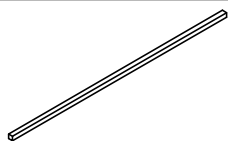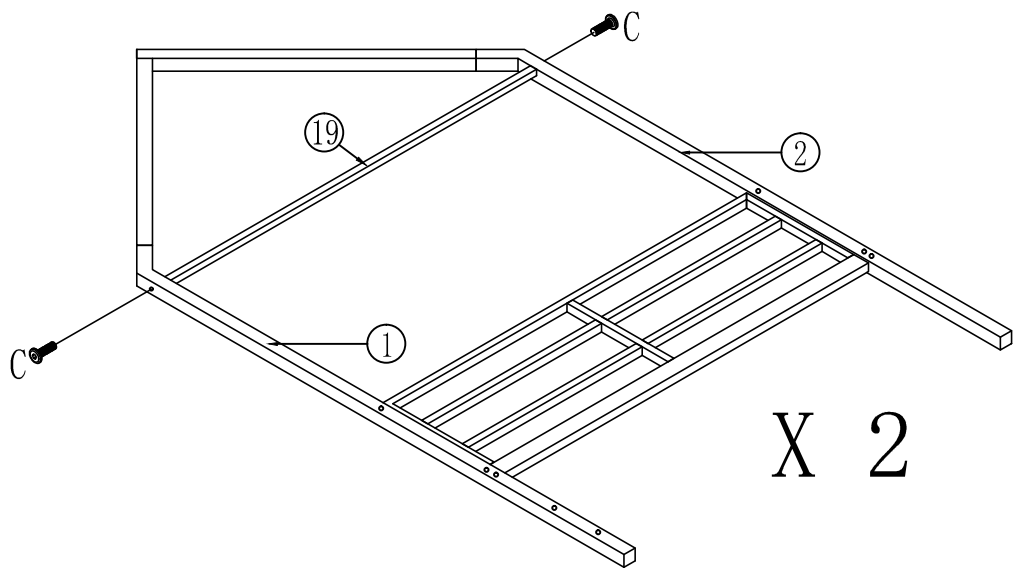

19-2PCS





6*50mm
C-4PCS



G-1PC

Step 5: Attach part #6 with bed frame using screws C

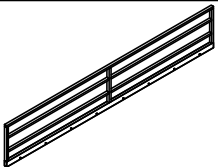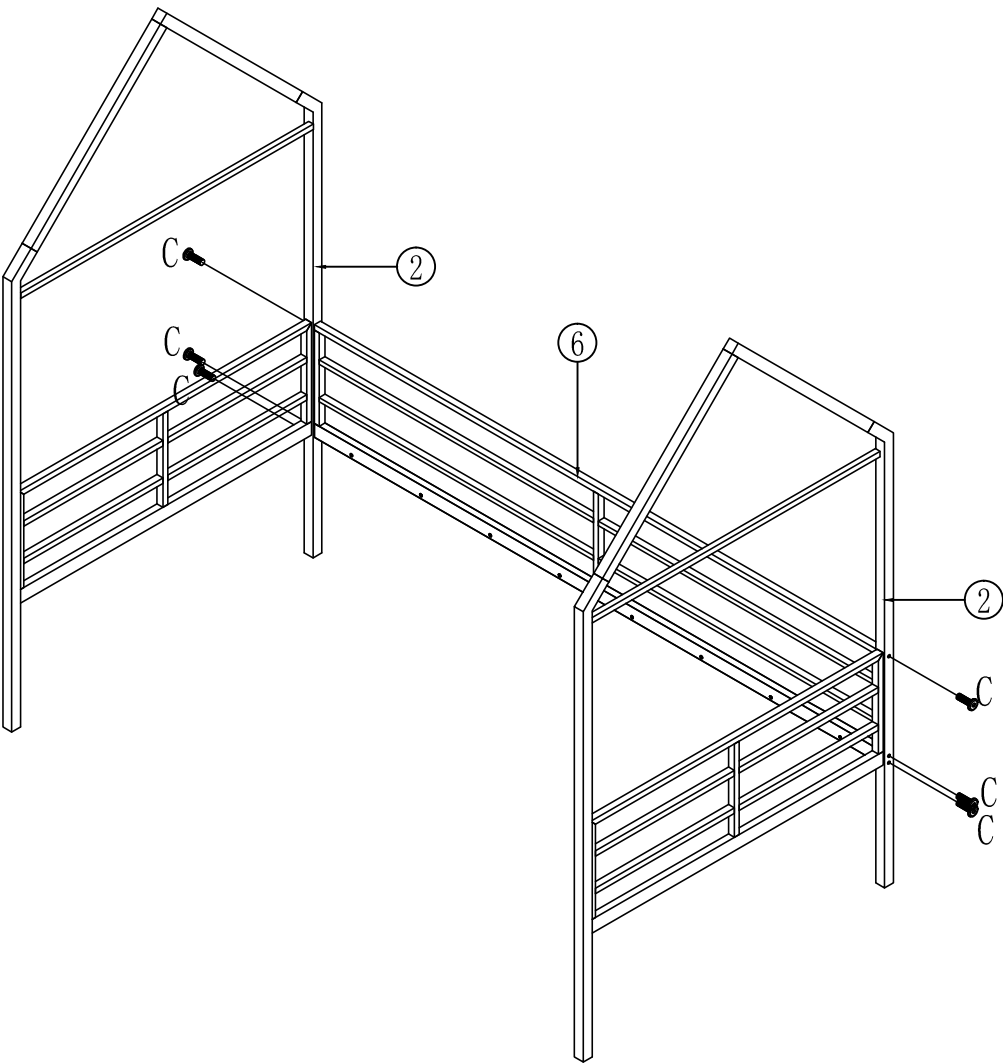

6-1PC





6*50mm
C-6PCS



G-1PC

Step 6: Attach part #7 with bed frame using screws C

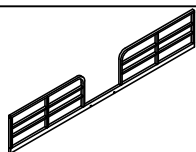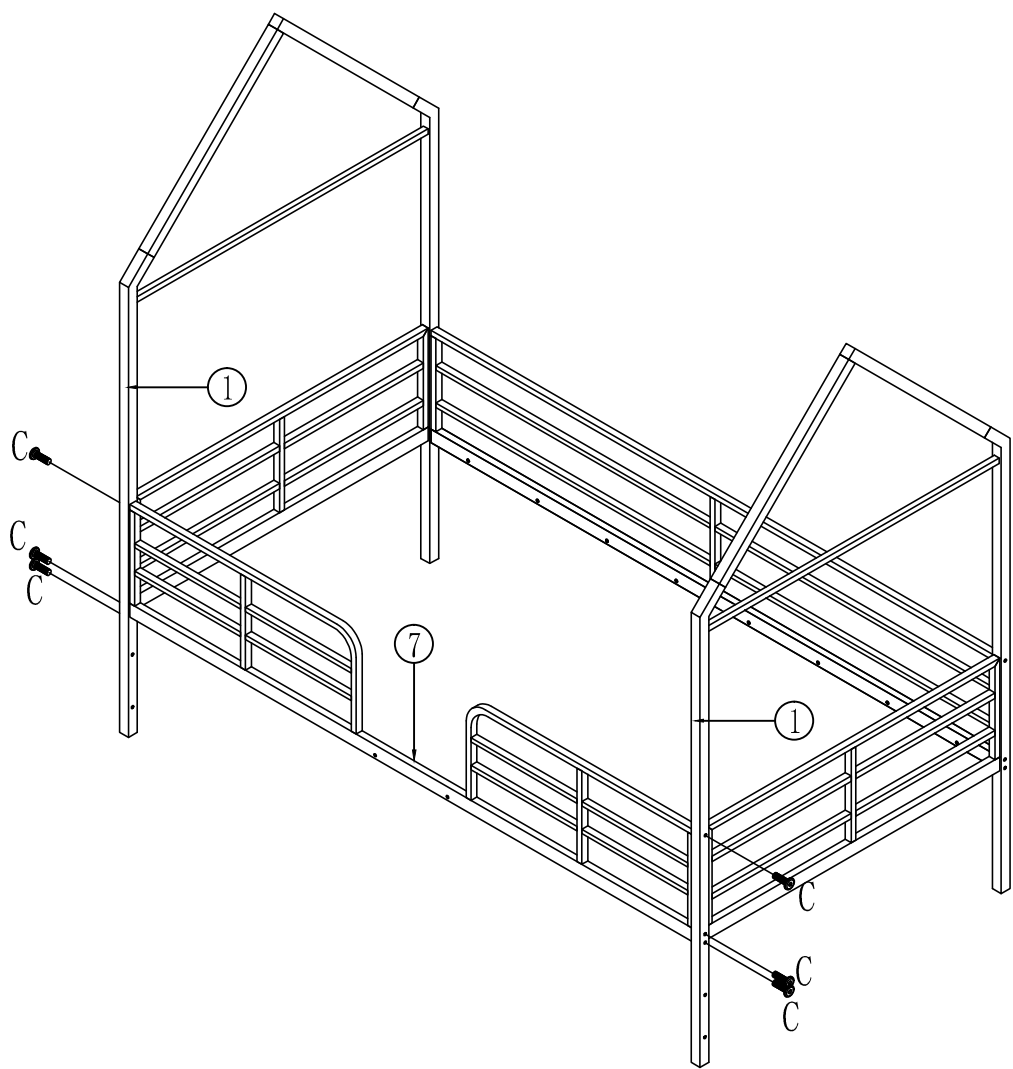

7-1PC





6*50mm
C-6PCS



G-1PC

Step 7: Attach part #18 with the top of bed using screws C

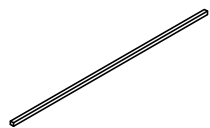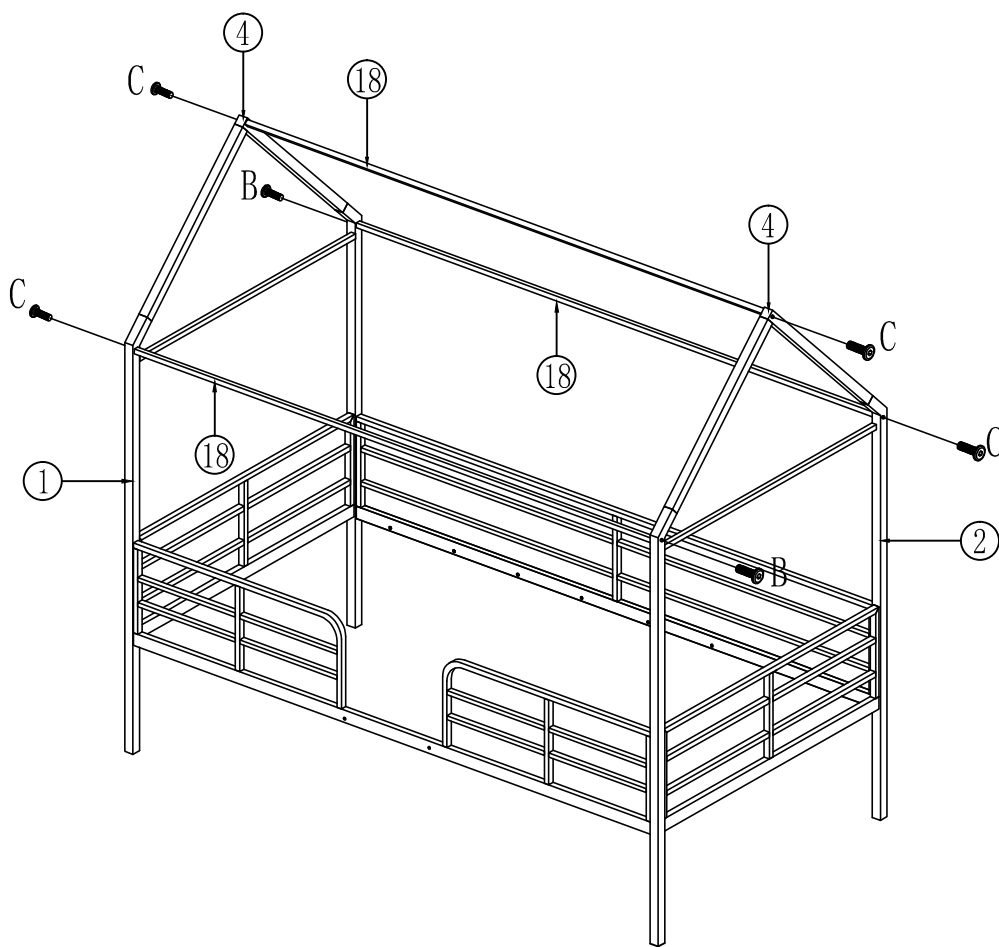

18-3PCS



6*50mm
C-6PCS



G-1PC

Step 8: Build two slat assemblies as shown.


Use two Parts #17, five Parts #13, and one Part #14 for each assembly.





Secure them with Bolts A using Allen Key G.

Make sure Part #14 is installed in the exact position and direction shown.


Do not reverse Part #14.

After assembly, carefully flip each slat assembly over for installation.

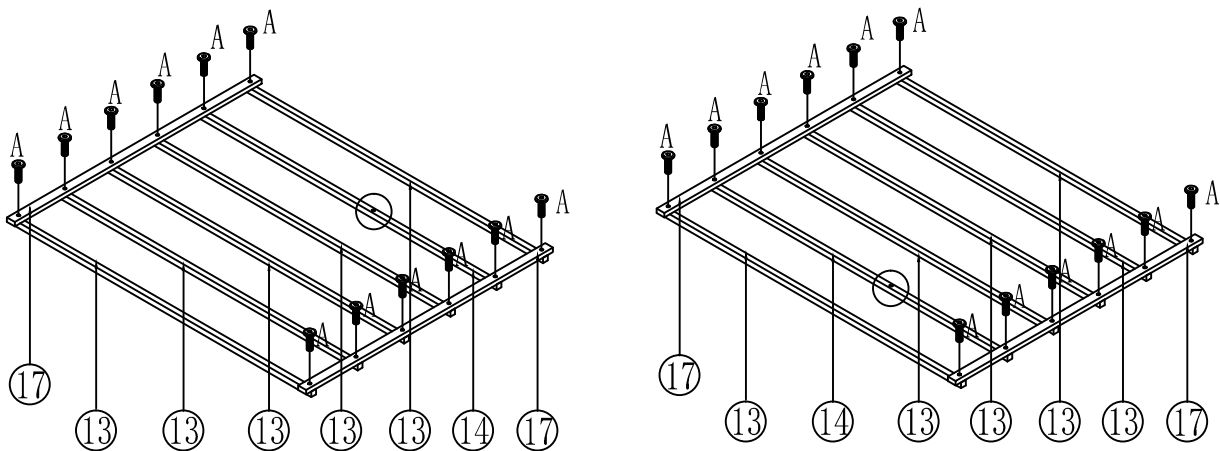


 17-4PCS			
 13-10PCS	 14-2PCS	 6*19mm A-24PCS	 4mm G-1PC

Step 9: Install the two slat assemblies onto the bed frames using bolts B

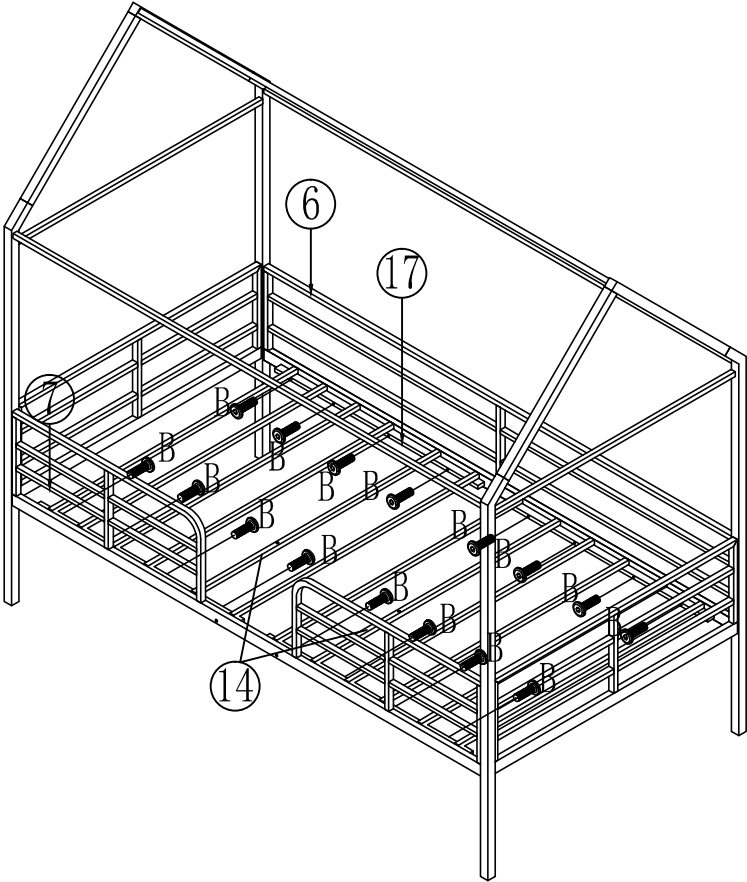

6*38mm


B-16PCS







4mm

G-1PC



Step 10: Attach part #8、#10 to part #11 using screws B
and also attach part#10, #11 to part#24 using screws B.

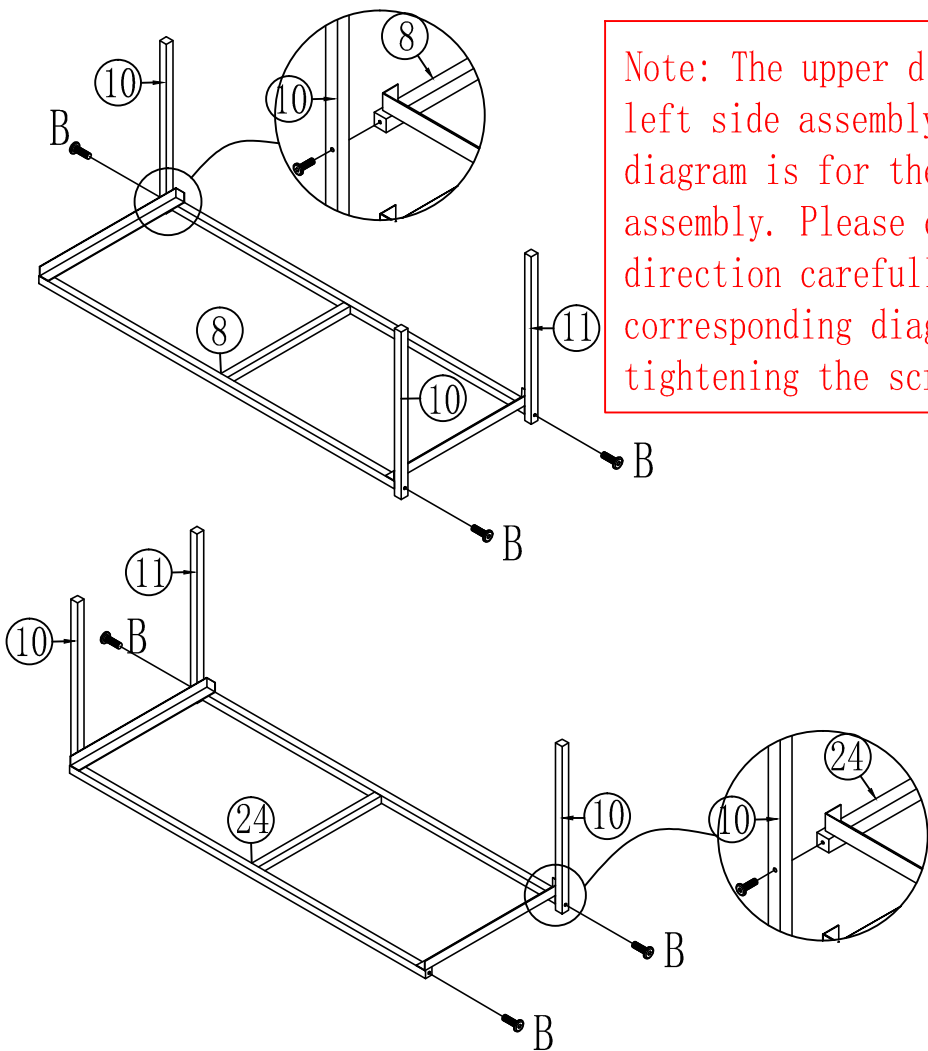


Note: The upper diagram is for the left side assembly, and the lower diagram is for the right side assembly. Please check the part direction carefully and follow the corresponding diagram before tightening the screws.

 8-1PC	 24-1PC		
 10-4PCS	 11-2PCS	 6*38mm B-6PCS	 4mm G-1PC


Step 11: Attach part #9、#12 to part #10、# 11 using screws B
and also attach #12、#23 to part#10、#11 using screws B

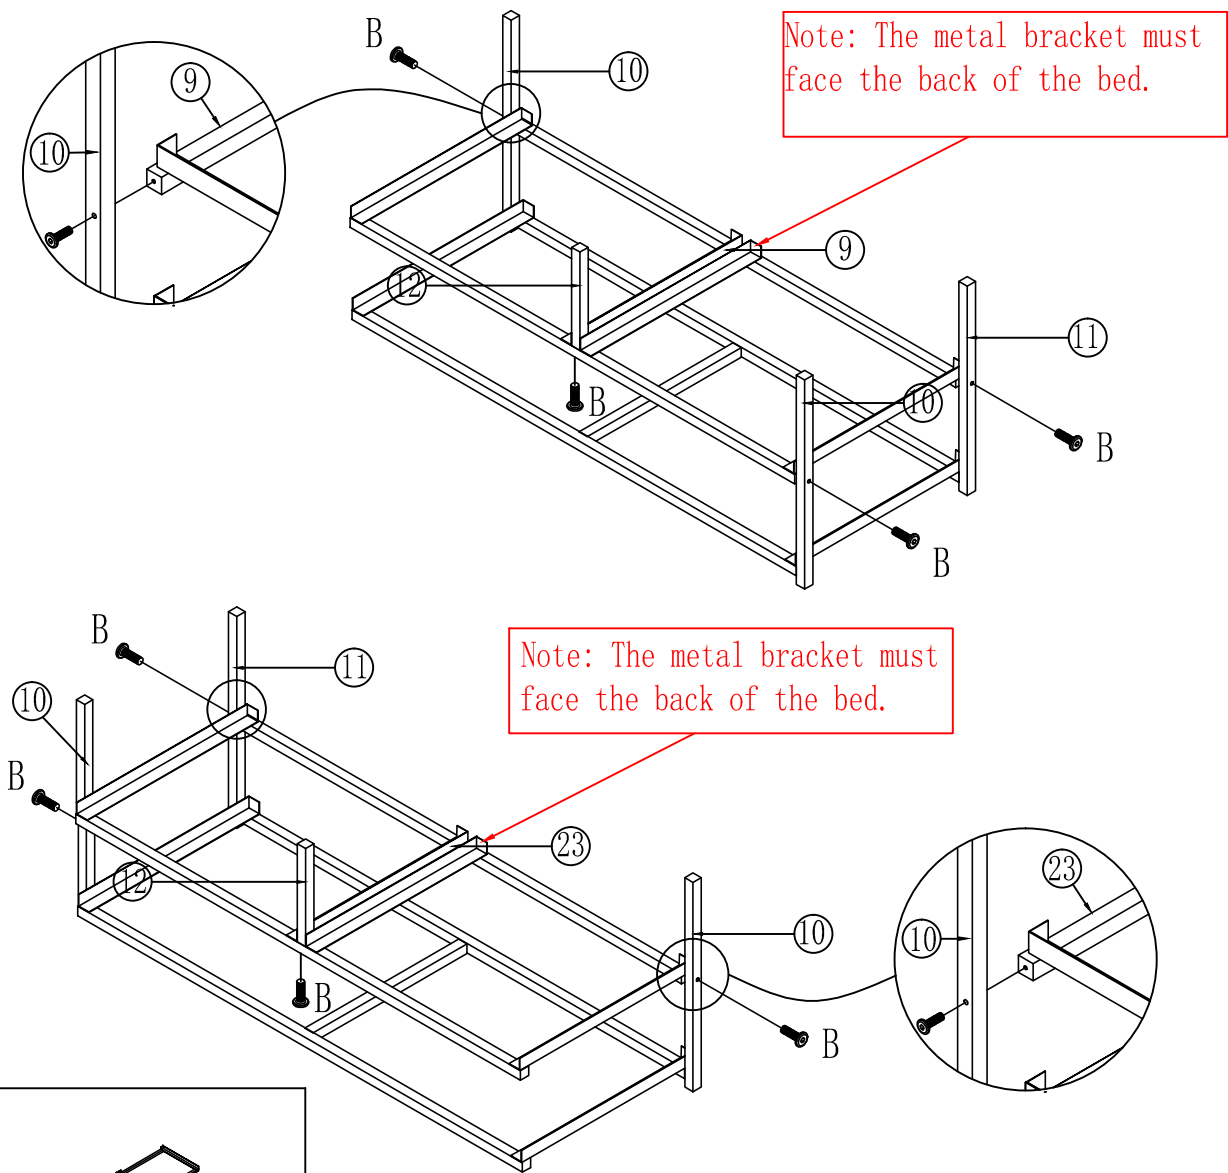

23-1PC



9-1PC




12-2PCS



6*38mm


B-8PCS



4mm

G-1PC

Step 12: Attach the two metal drawer frames to the two front bed posts using bolts B and C.

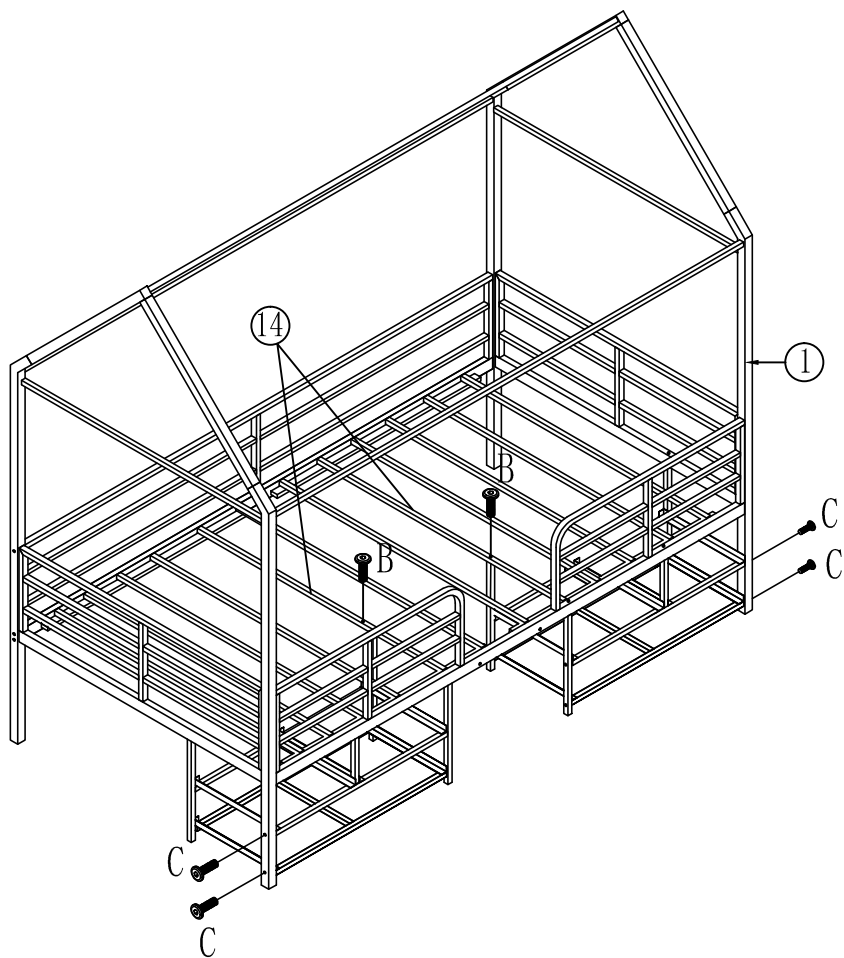

6*50mm

C-4PCS



6*38mm


B-2PCS



4mm


G-1PC

Step 13: Attach the two metal drawer frames to the bed frame using bolts D.

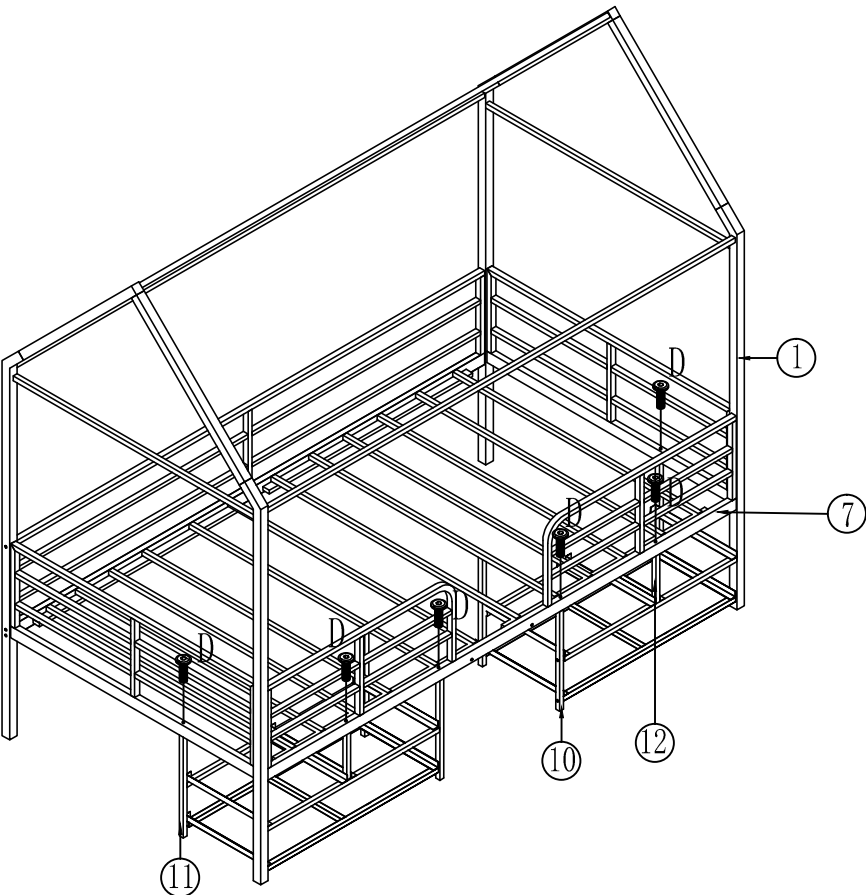

6*63mm


D-6PCS




4mm

G-1PC


Step 14: Assemble six drawer boxes as shown. Make sure each panel is aligned before tightening the screws. Repeat this step to build six drawers.

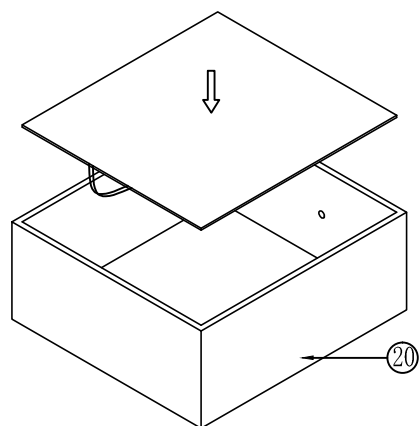


X 4

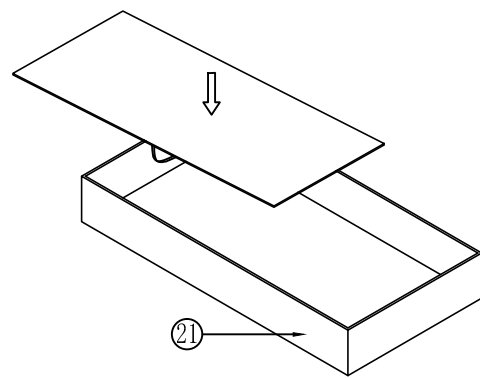


X 2

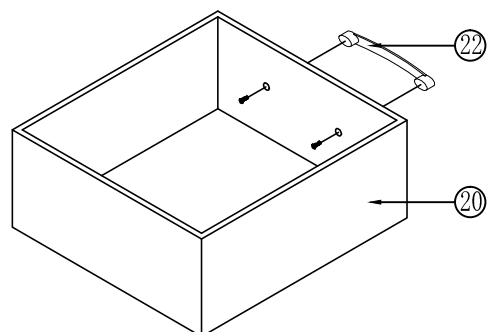


X 4

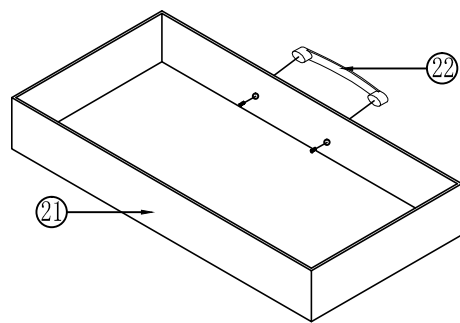


X 2




20-4PCS

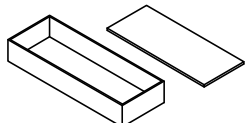

21-2PCS




22-6PCS




H-1PC


Step 15: Push the drawers in as per the arrows direction .

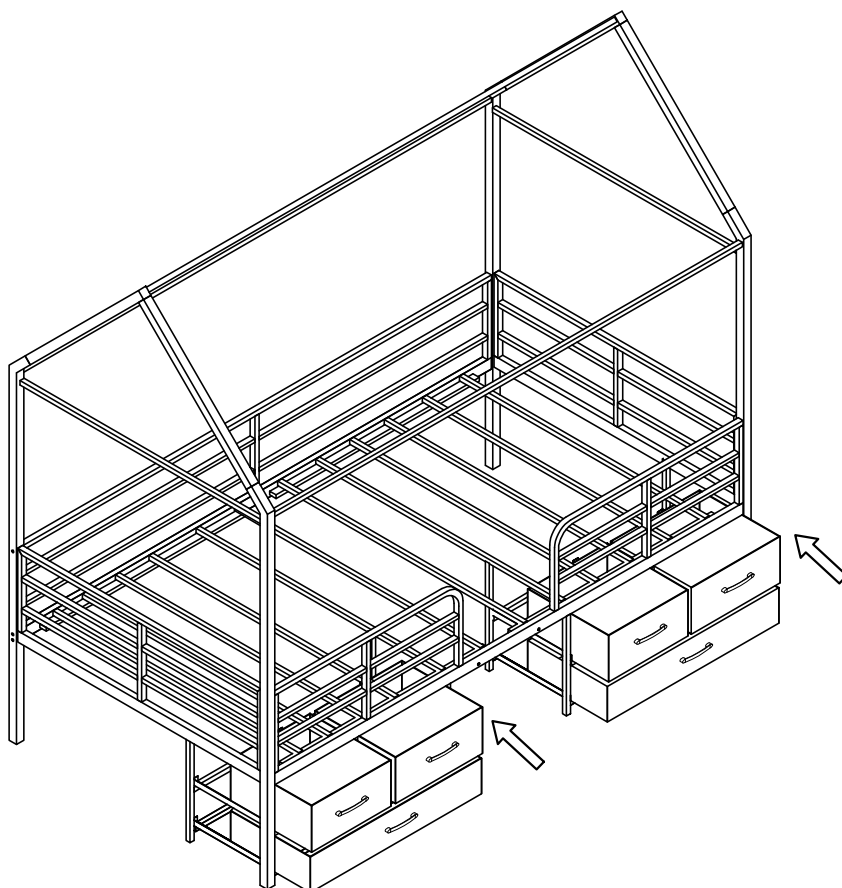

Step 16: Attach part #15 to part #16 using screws B

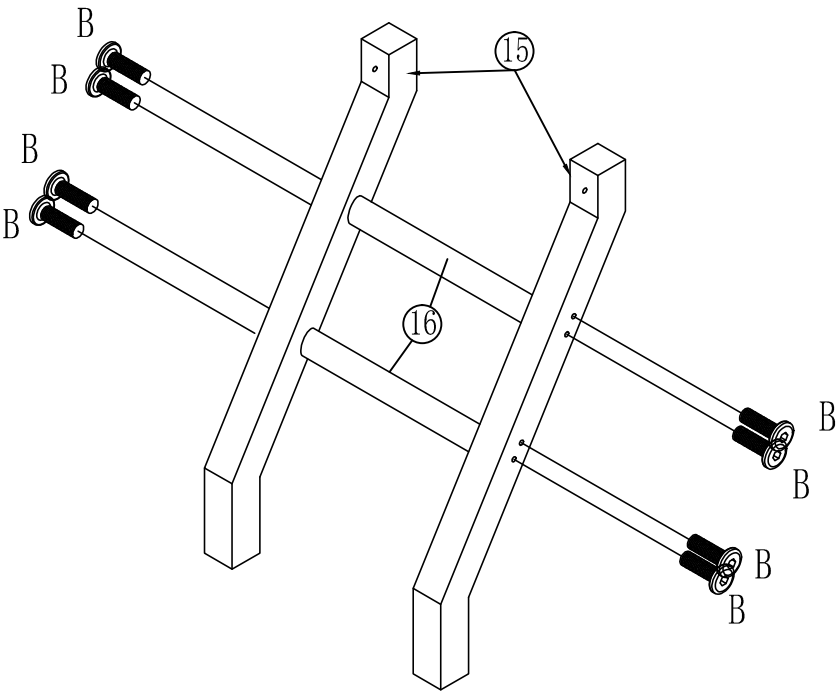

15-2PCS




16-2PCS



6*38mm


B-8PCS



4mm

G-1PC

Step 17: Attach the step ladder with part #7 using screws B

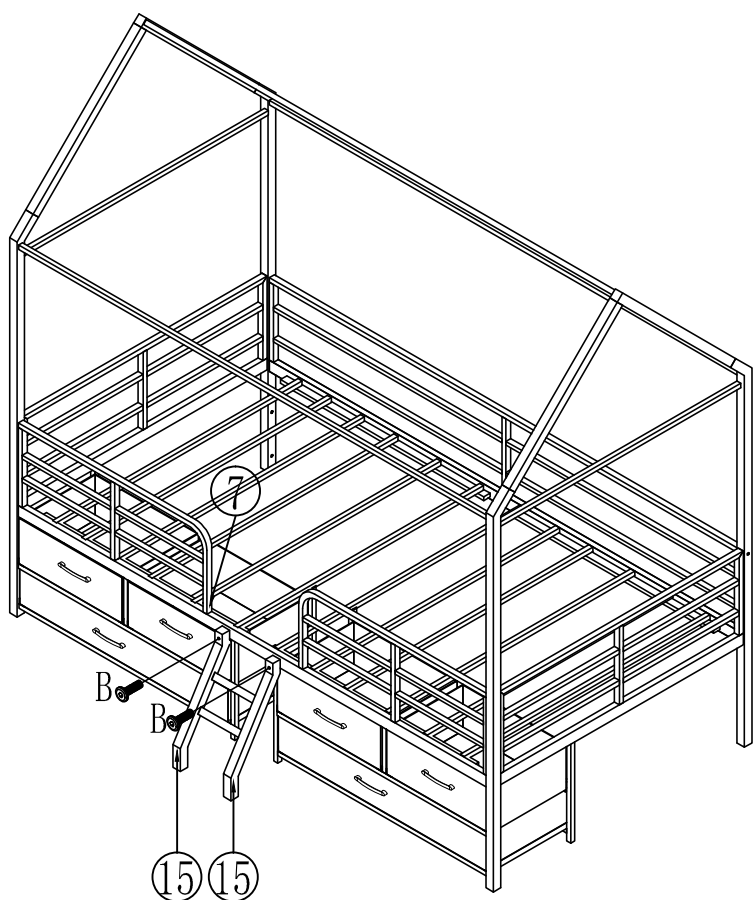

6*38mm

B-2PCS




4mm

G-1PC


Step 18: Secure the Bed to the Wall - Required Before Use.

This bed must be anchored to the wall before use.

Secure the bed to the wall using the included anti-tip hardware before use. For best results, attach the anti-tip brackets to wall studs when possible. If mounting to drywall, masonry, or another wall type, use anchors suitable for that wall material.

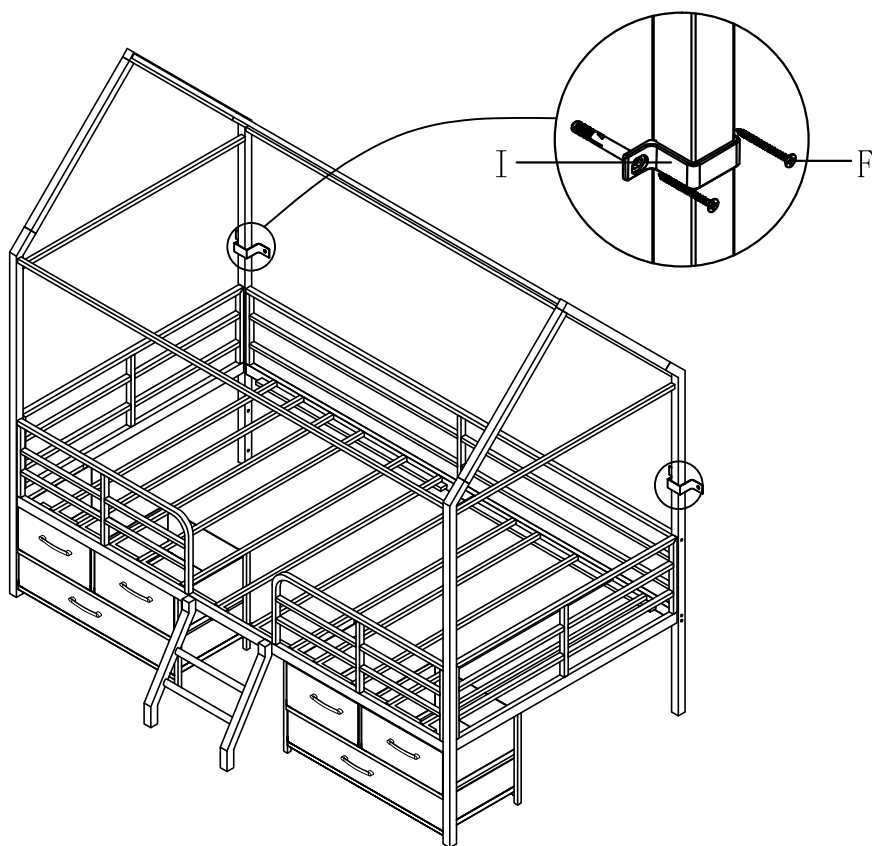

Step 19: Install the supplied star and moon LED decorative light around part #18 as shown. Keep the light cord neat and away from moving parts, drawers, and climbing areas. Use only the supplied LED light.

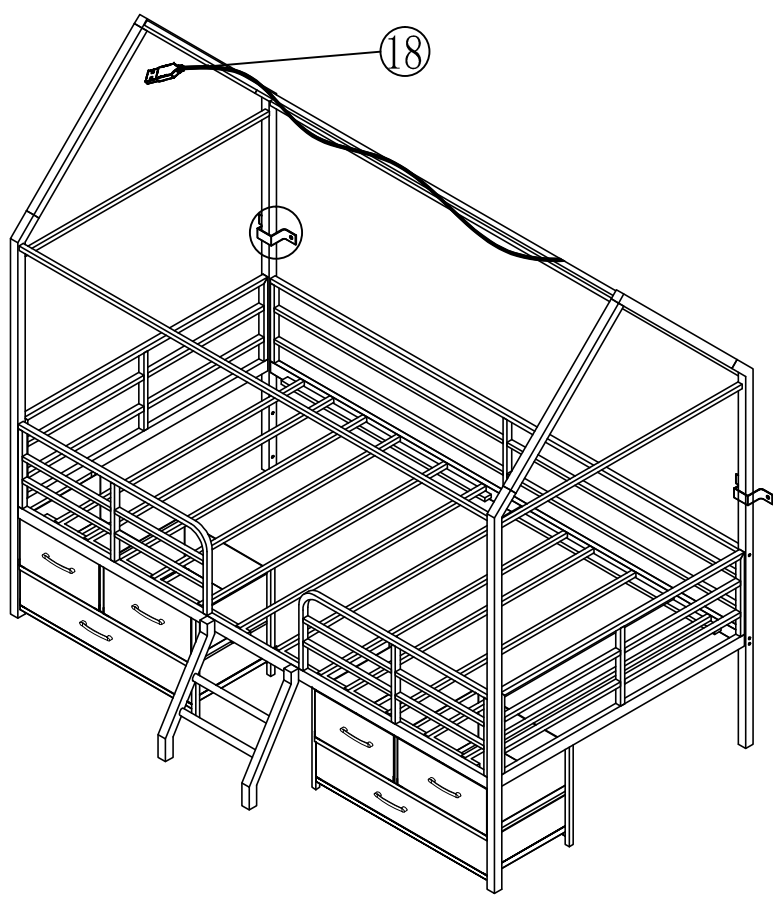

Final Check:
Make sure all bolts and screws are fully tightened.
Confirm the ladder is securely attached.
Confirm the bed is secured to the wall with the anti-tip hardware.
Confirm all slat panels are fully secured.
Place the correct mattress on each bed frame before use.



J-1PC