
ASSEMBLY INSTRUCTION

PATIO FURNITURE SETS

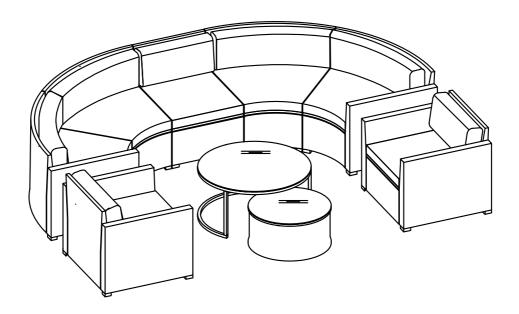



WF300788; WF300789 WF300790; WF300791


Notice:


- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- the assembly process.

 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

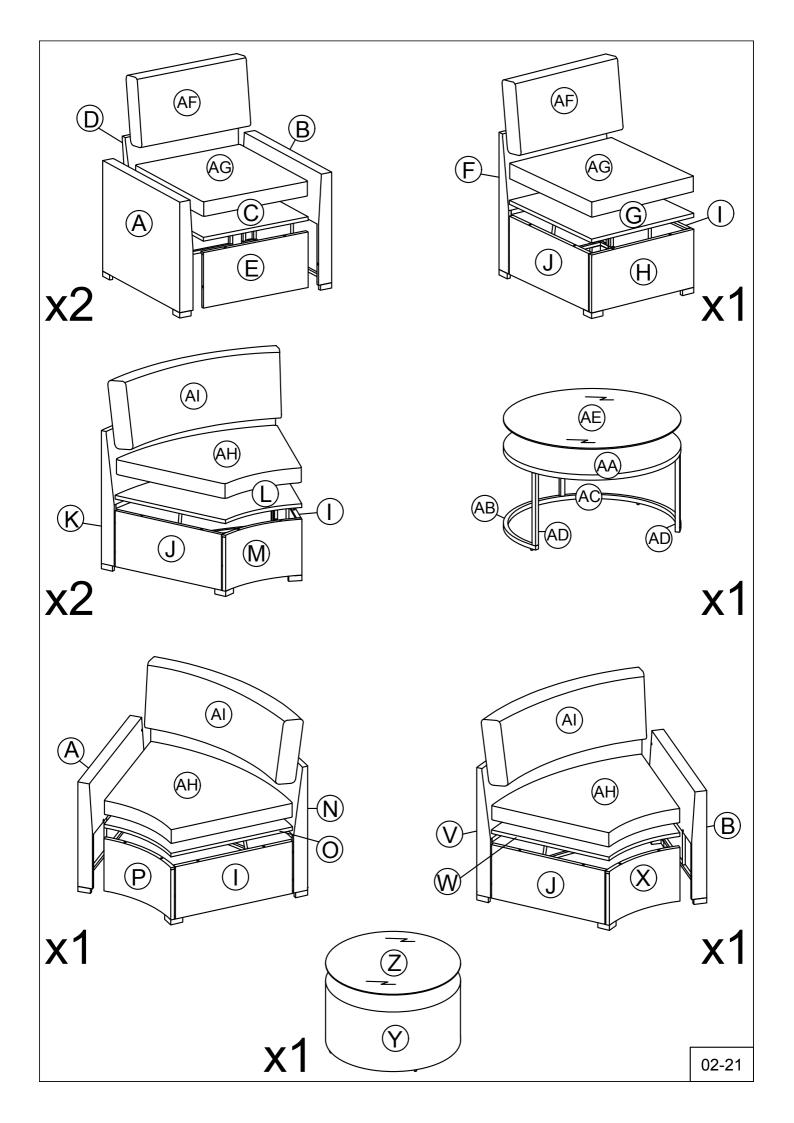

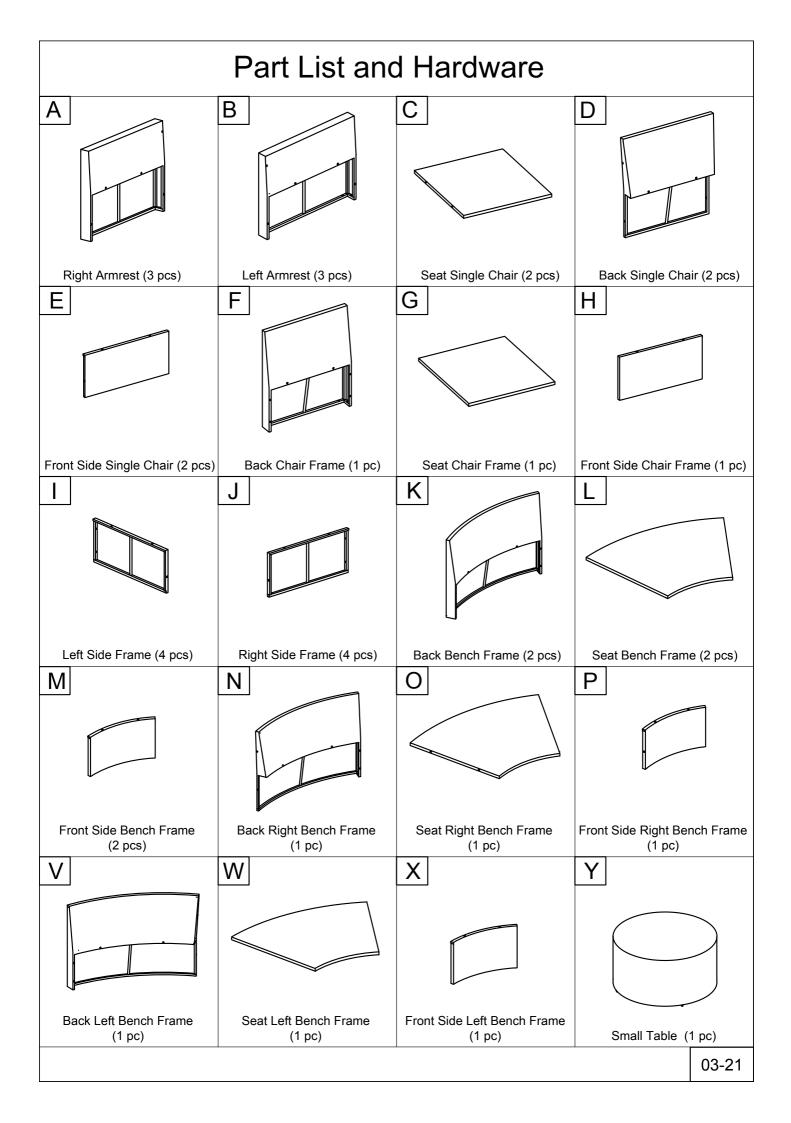

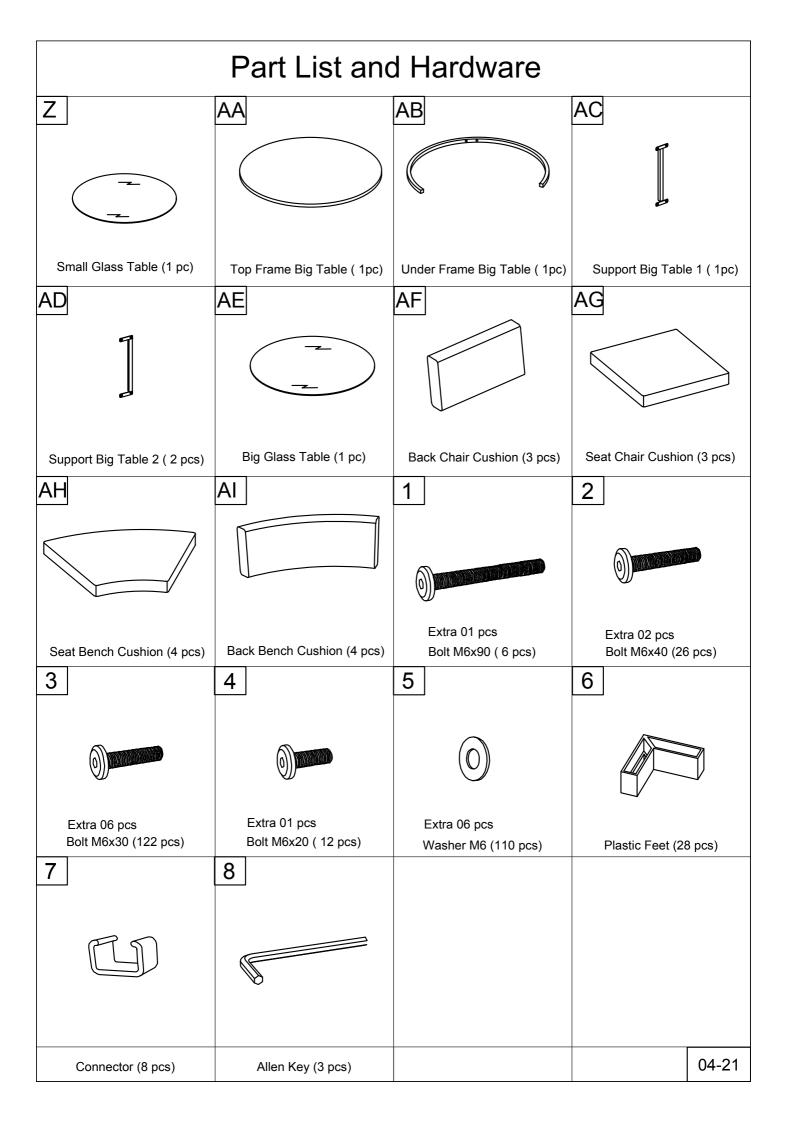

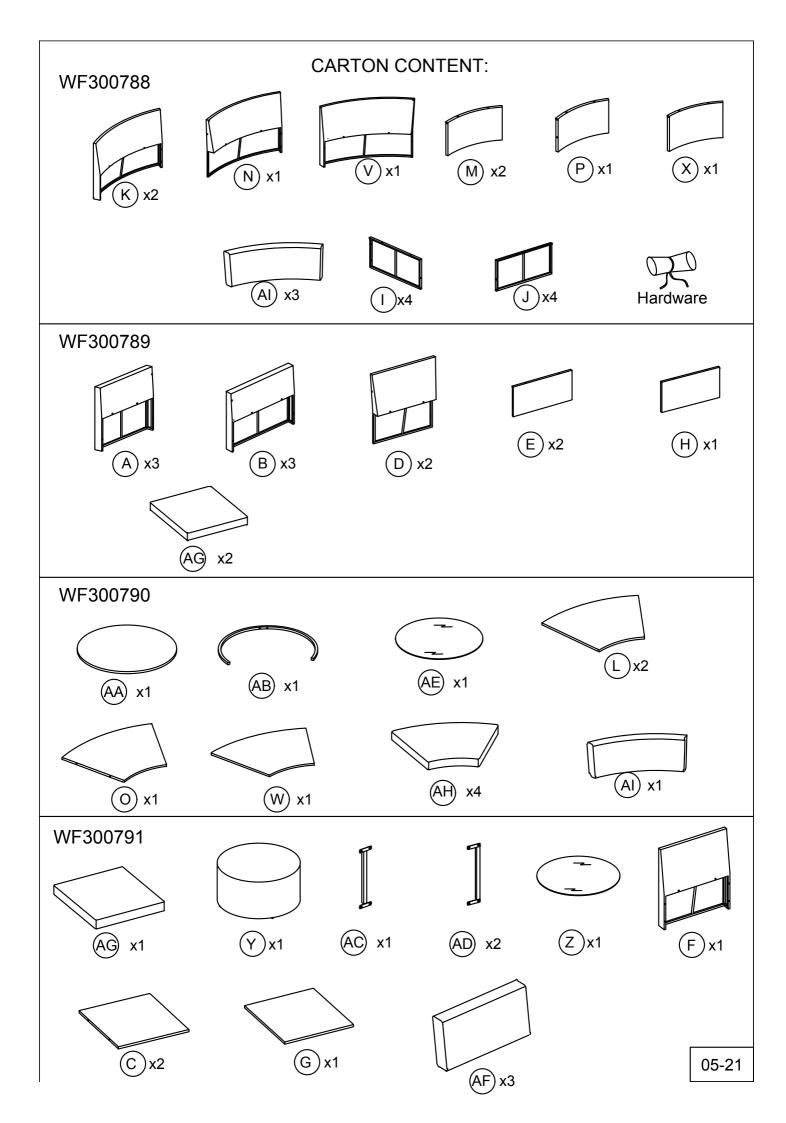




F x1

G x1

② x2

⑤ x2

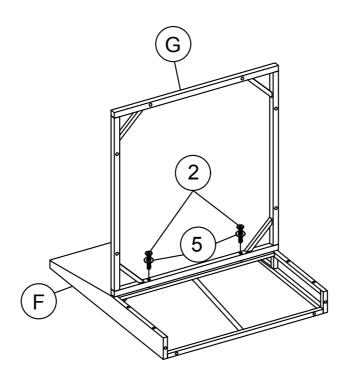




Connect Back Chair Frame (F) & Seat Chair Frame (G) with Bolt (2), washer (5), Allen Key (8).

STEP 2

H x1

③ x2

⑤ x2

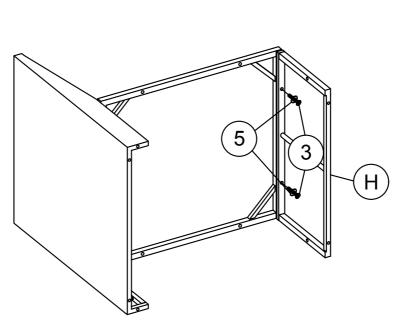




Connect the Part from Step 1 & Front Side Chair Frame (H) with Bolt (3), washer (5), Allen Key (8).





③ x10

⑤ x10

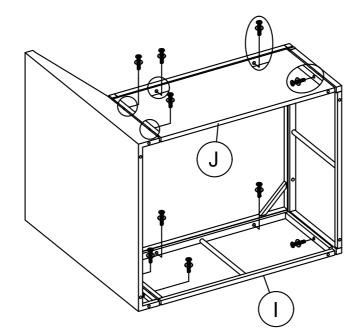




Connect the Part from Step 2 & Left Side Frame (I), Right Side Frame (J), with Bolt (3), washer (5), Allen Key (8).

STEP 4

6 x4

③ x8

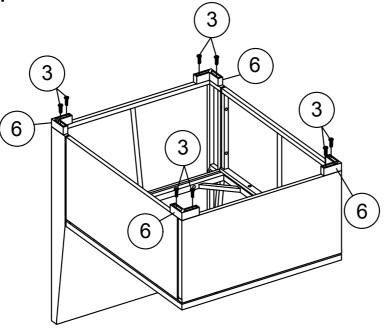




Connect the Part from Step 3 & Plastic Feet (6) with Bolt (3), Allen Key (8).





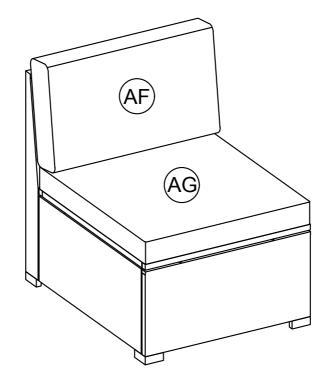





Put the Seat Chair Cushion (AG) and Back Chair Cushion (AF) to Finish Chair.

STEP 6

C x1 D x1


② x2




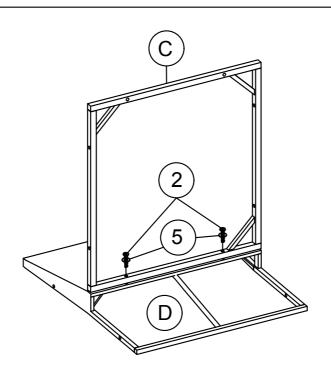



Connect Back Single Chair Frame (D) & Seat Single Chair Frame (C) with Bolt (2), washer (5), Allen Key (8).

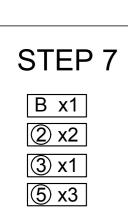

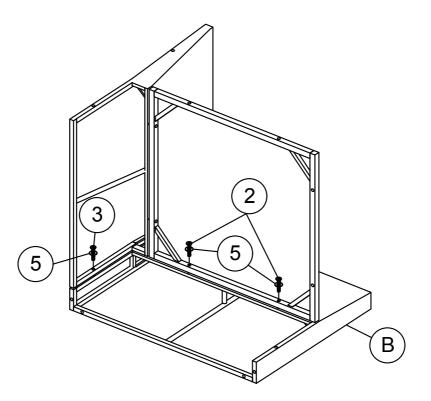



x2


Connect the Part from Step 6 & Left Armrest Frame (B) with Bolt (2),(3) washer (5),Allen Key (8).

STEP 8

A x1 2 x2

③ x1


⑤ x3

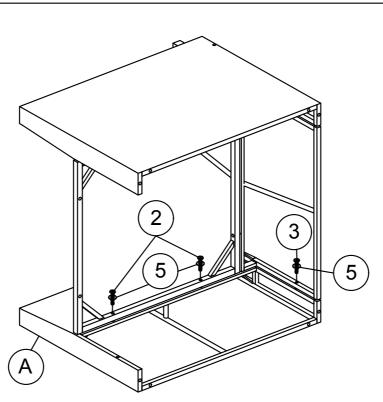




x2

Connect the Part from Step 7 & Right Armrest Frame (A) with Bolt (2),(3) washer (5),Allen Key (8).

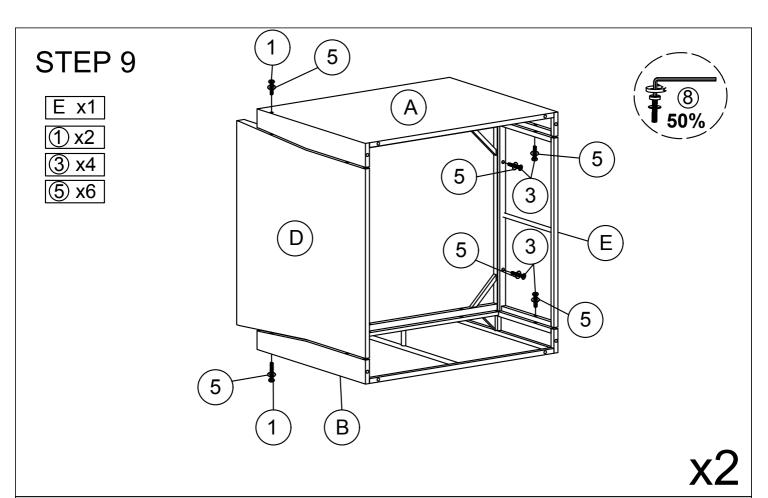


Connect Right Armrest Frame (A) ,Left Armrest Frame (B) & Back Single Chair (D), Front Side Single Chair (E) with Bolt (1),(3),washer (5),Allen Key (8).

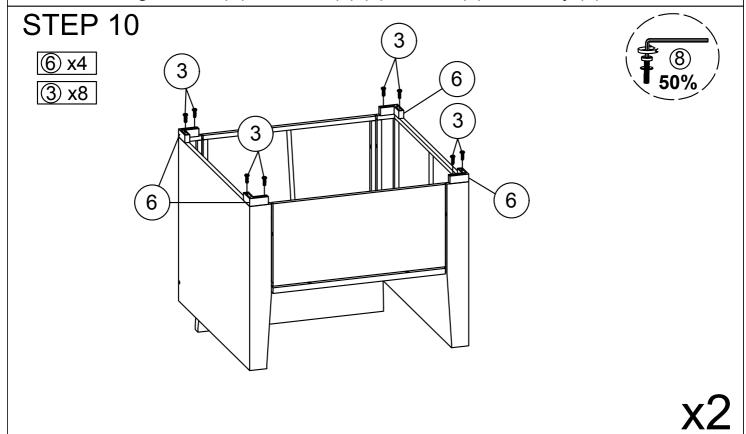

Connect the Part from Step 9 & Plastic Feet (6) with Bolt (3), Allen Key (8).





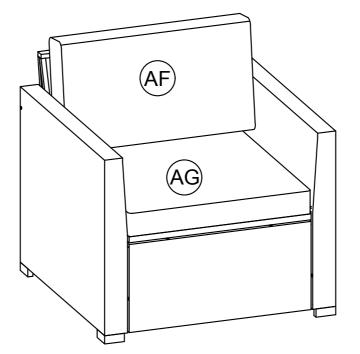



x2


Put the Seat Chair Cushion (AG) and Back Chair Cushion (AF) to Finish Single Chair.

STEP 12

L x1

② x2

⑤ x2

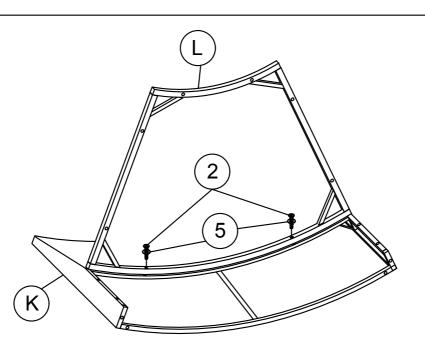




x2

Connect Back Bench Frame (K) & Seat Bench Frame (L) with Bolt (2), washer (5), Allen Key (8).





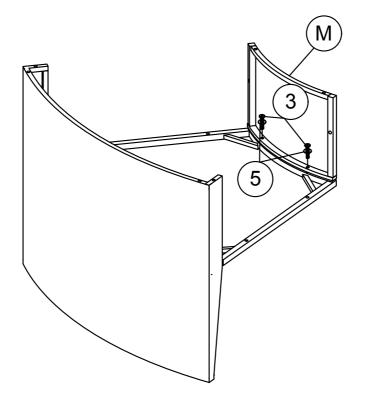



Connect the Part from Step 12 & Front Side Bench Frame (M) with Bolt (3), washer (5), Allen Key (8).




I x1

J x1


3 x10

⑤ x10

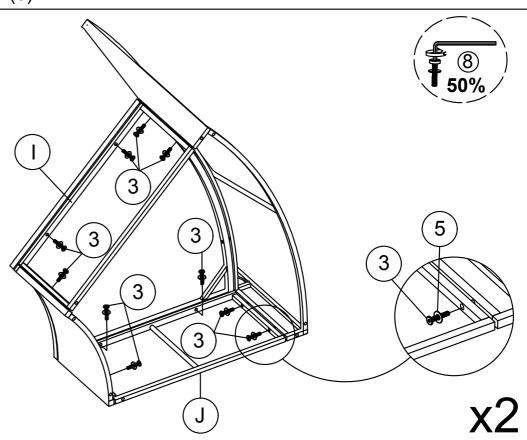

Connect the Part from Step 13 & Left Side Frame (I), Right Side Frame (J), with Bolt (3), washer (5), Allen Key (8).

Connect the Part from Step 14 & Plastic Feet (6) with Bolt (3), Allen Key (8).

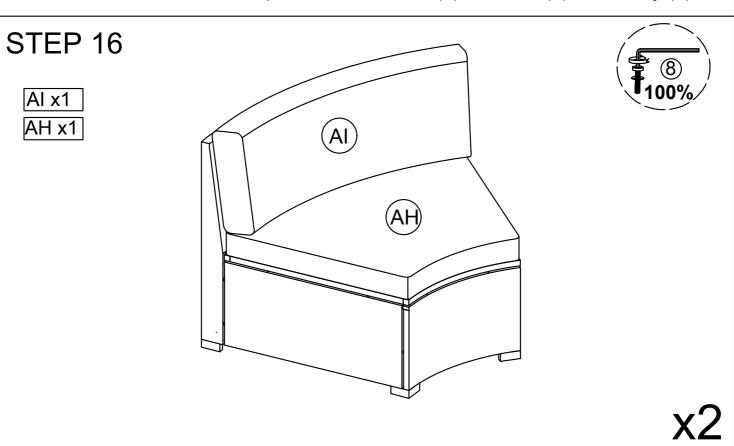

Put the Seat Bench Cushion (AH) and Back Bench Cushion (AI) to Finish Bench.



V x1


W x1

X x1

② x2

③ x2

⑤ x4

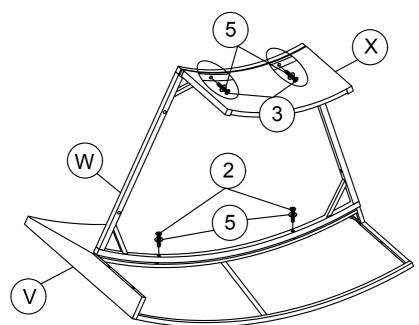




Connect Back Left Bench Frame (V) & Seat Left Bench Frame (W)& Front Side Left Bench Frame(X) with Bolt (2),(3),washer (5),Allen Key (8).

STEP 18


J x1
3 x5

⑤ x5

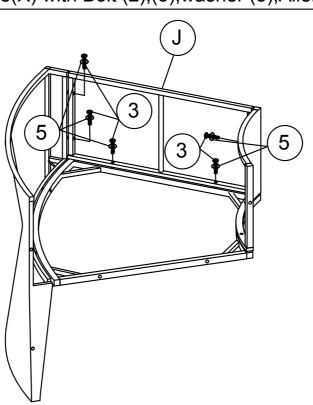





Connect the Part from Step 17 & Right Side Frame (J), with Bolt (3), washer (5), Allen Key (8).

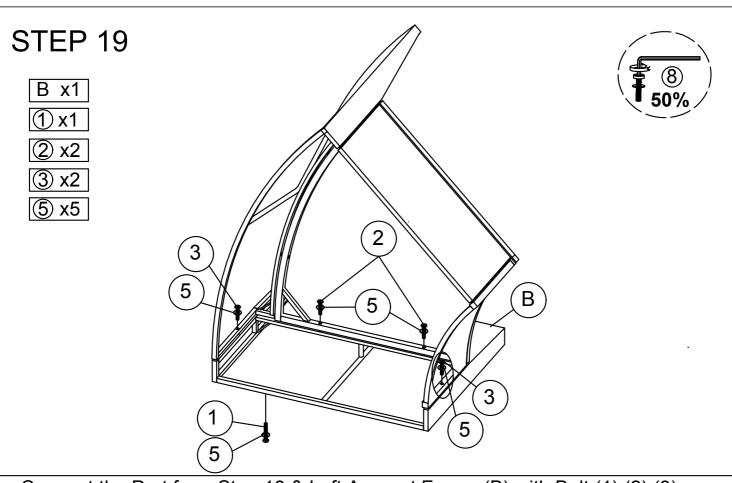


Connect the Part from Step 18 & Left Armrest Frame (B) with Bolt (1),(2),(3) washer (5),Allen Key (8).

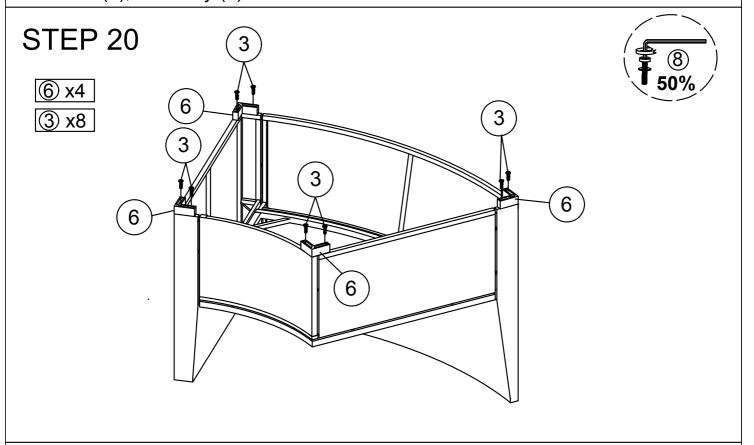


Connect the Part from Step 19 & Plastic Feet (6) with Bolt (3), Allen Key (8).

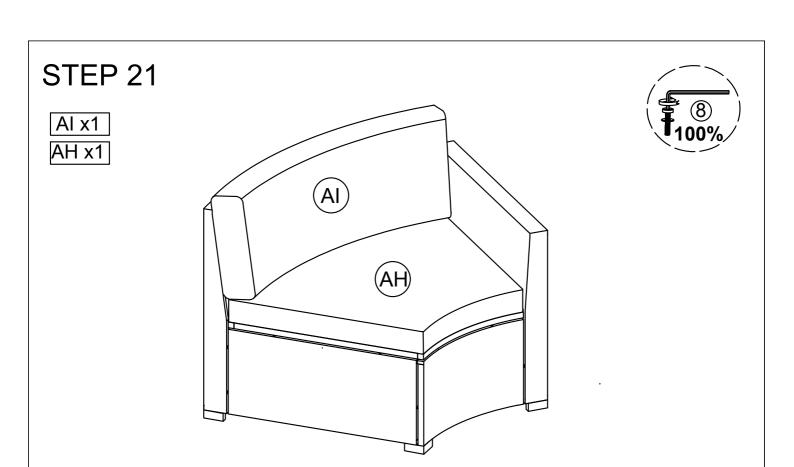


Put the Seat Bench Cushion (AH) and Back Bench Cushion (AI) to Finish Left Bench.

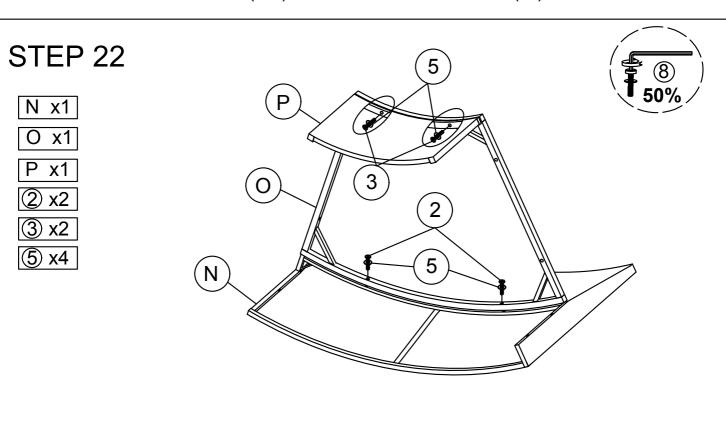


Connect Back Right Bench Frame (N) & Seat Right Bench Frame (O)& Front Side Right Bench Frame(X) with Bolt (2),(3),washer (5),Allen Key (8).

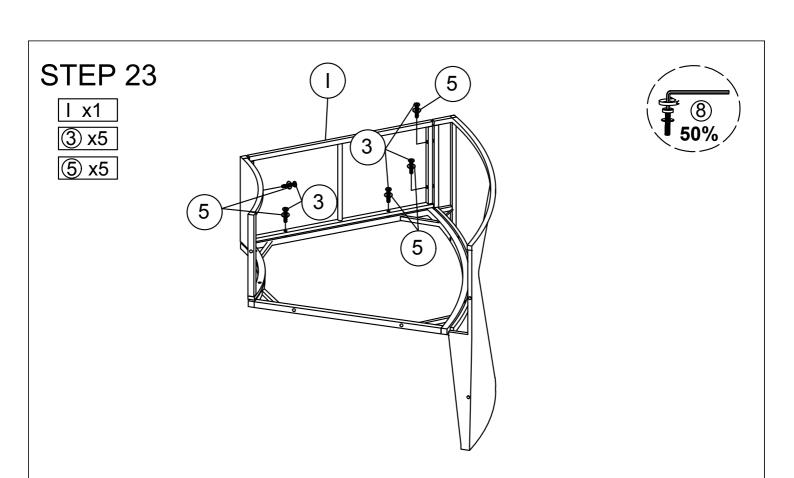


Connect the Part from Step 22 & Letf Side Frame (I), with Bolt (3), washer (5), Allen Key (8).

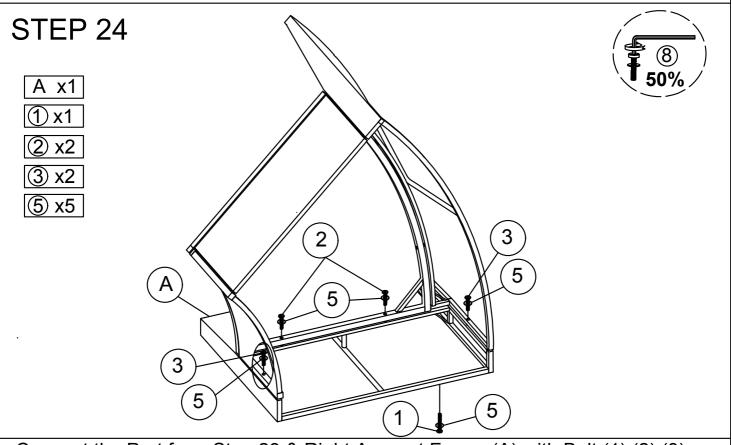

Connect the Part from Step 23 & Right Armrest Frame (A) with Bolt (1),(2),(3) washer (5),Allen Key (8).

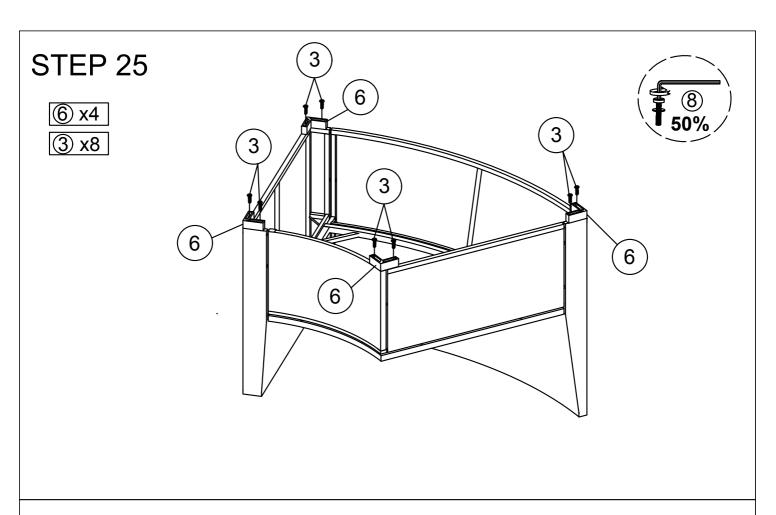

Connect the Part from Step 24 & Plastic Feet (6) with Bolt (3), Allen Key (8).

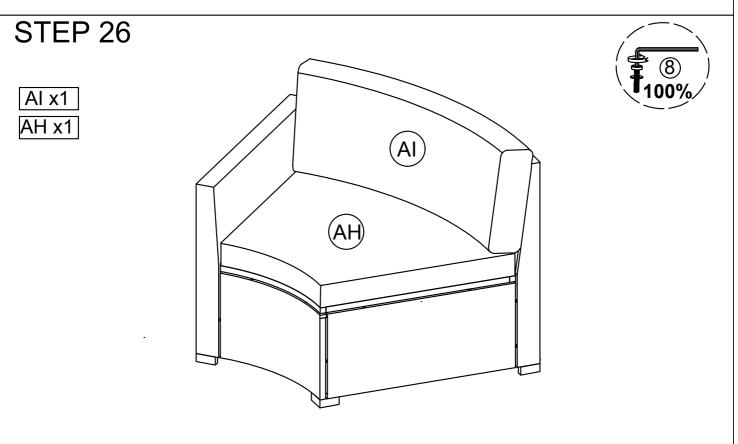


Put the Seat Bench Cushion (AH) and Back Bench Cushion (AI) to Finish Right Bench.



Z x1

Y x1

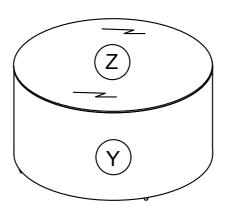

Put the Small Glass Table (Z) to Finish .

STEP 28


AB x1

AC x1

AD x2

4 x6

⑤ x6

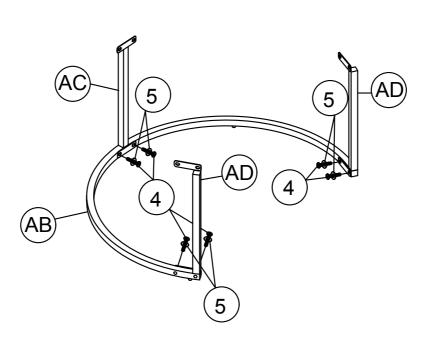



Connect Under Frame Big Table (AB) & Support Big Table1,2 (AC),(AD) with Bolt (4),washer (5),Allen Key (8).


STEP 29



④ x6

⑤ x6




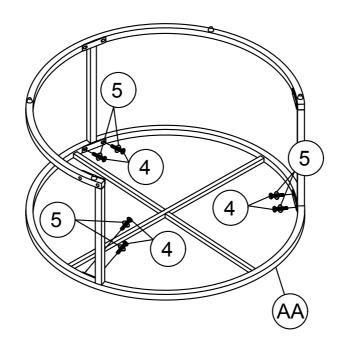

Connect the Part from Step 28 & Top Frame Big Table (AA) with Bolt (4), Washer (5) ,Allen Key (8).


STEP 30

AE x1

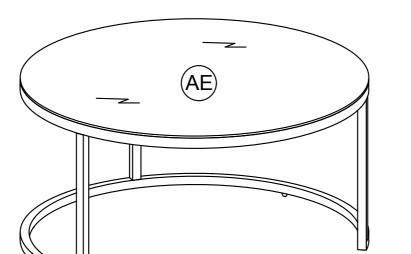




Put the Big GlassTable (AE) to Finish.

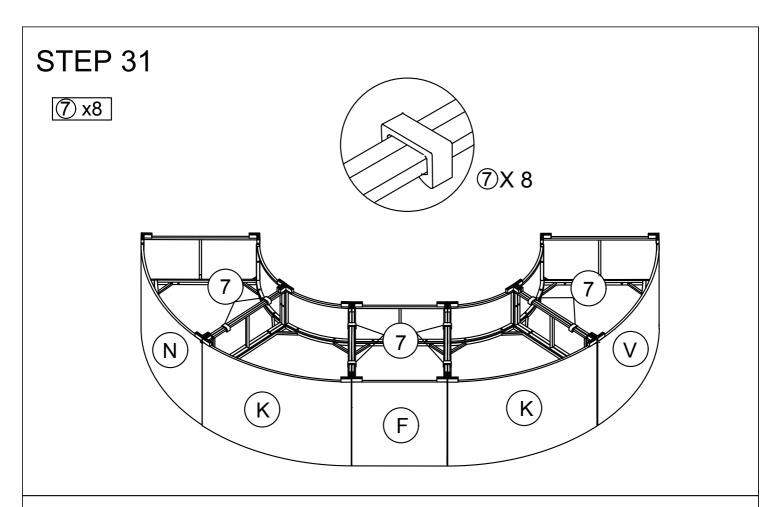

Connect the Bench & Chair with Connector (7) by Hand.

STEP 32

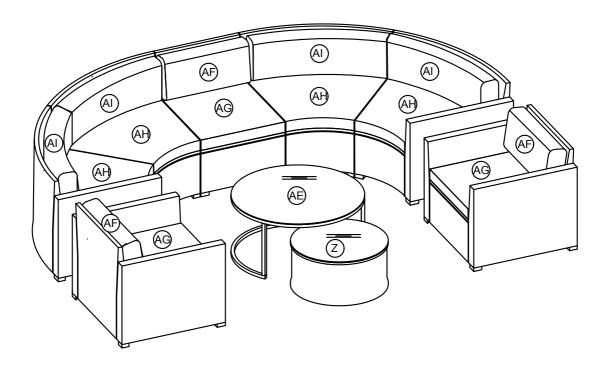

Finish.