



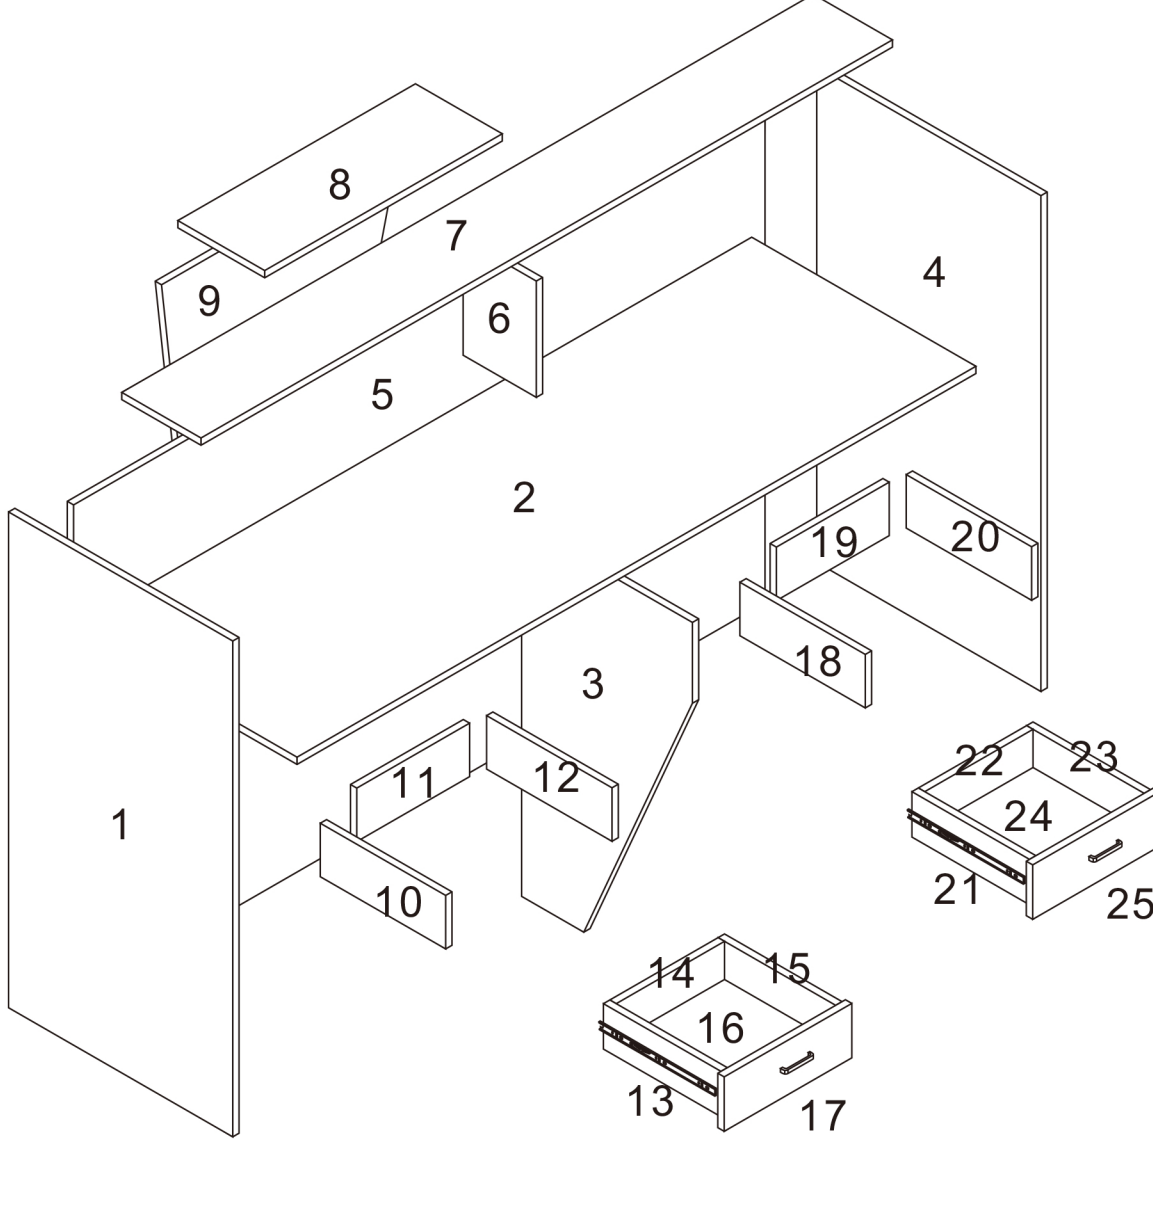

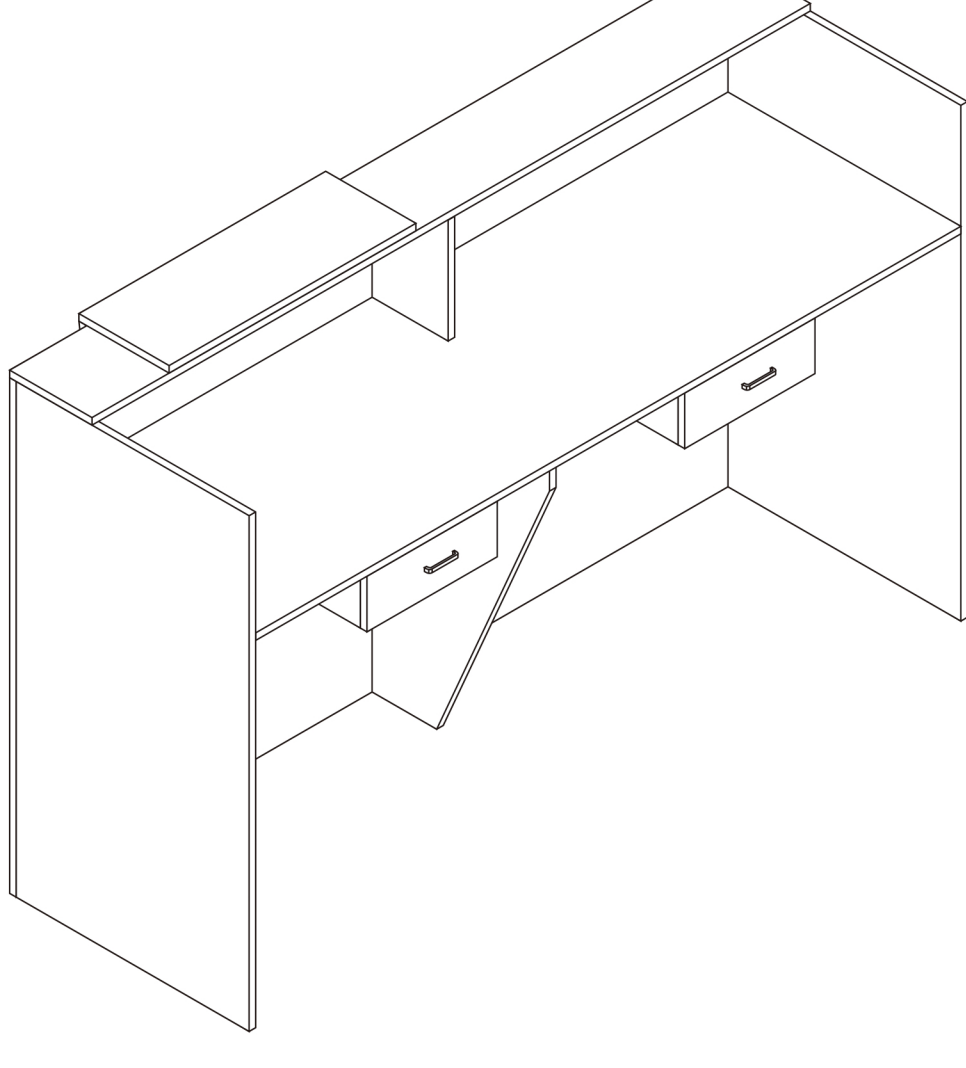




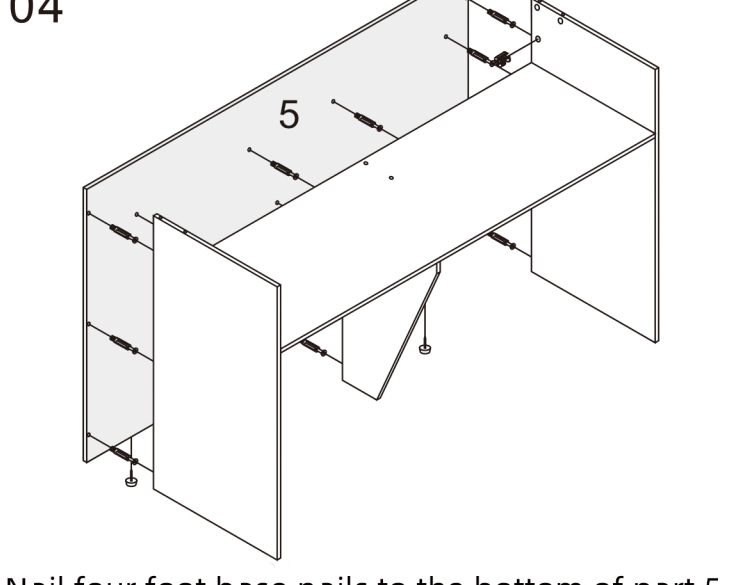
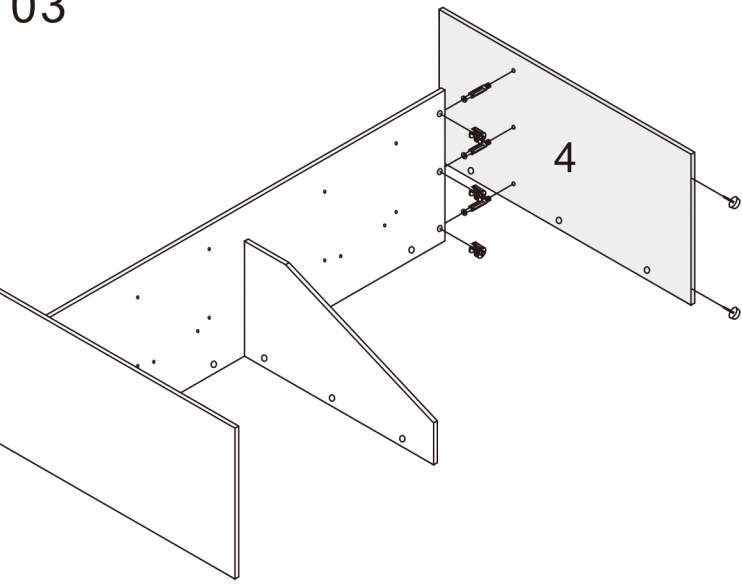
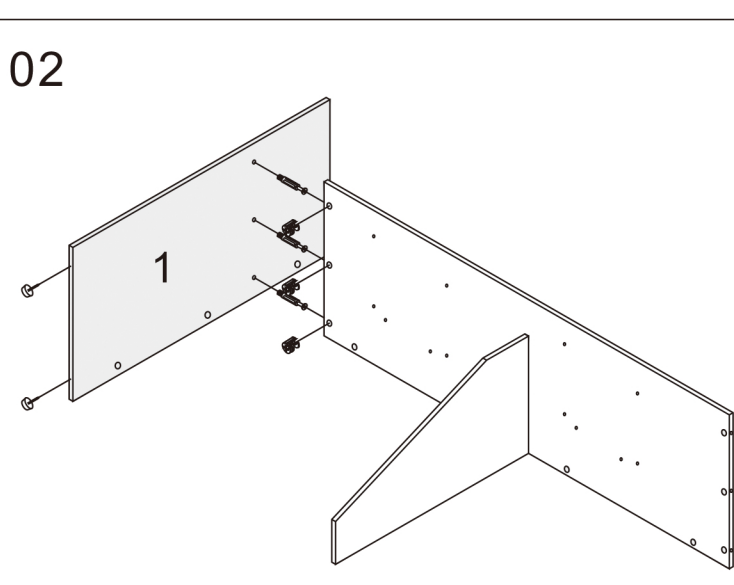
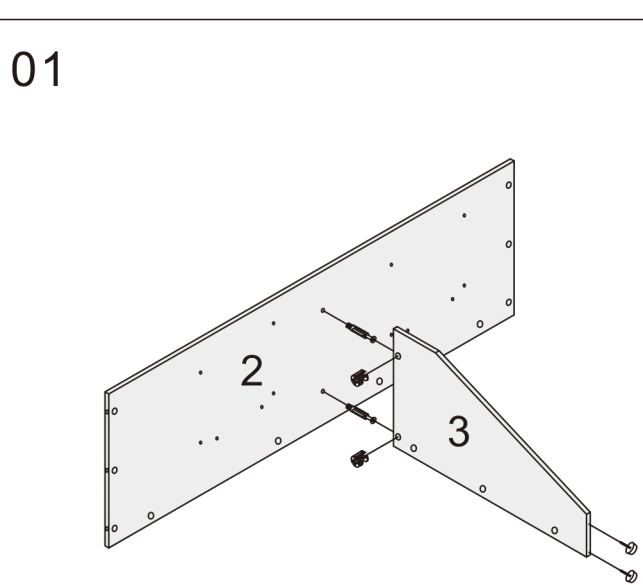





Assembly Instructions




A  Three in one screw	B  Lock catch	C  foot nails	D  Flat head screw	E  doorknob
F  Drawer lock	G  Self-tapping screw	H  Silent drawer slides	I  Wire hole box	



Nail four foot base nails to the bottom of part 5. Install thirteen three-in-one screws, attach them to the front desk, and tighten the lock catches.

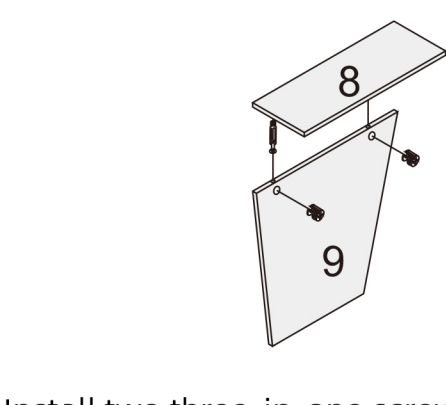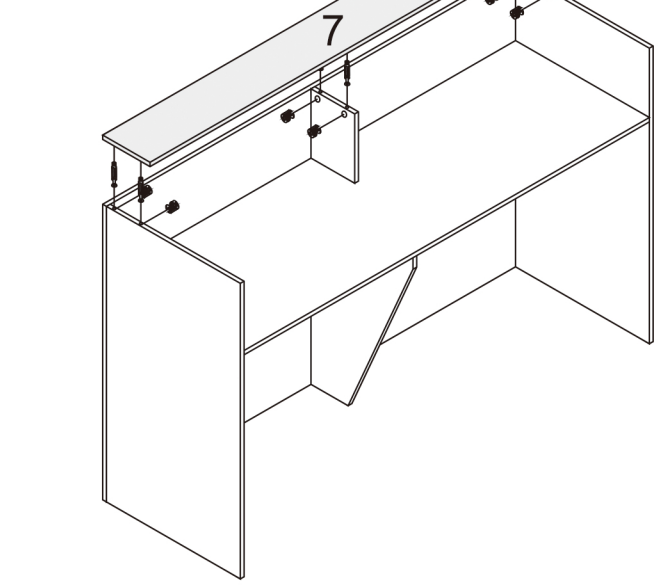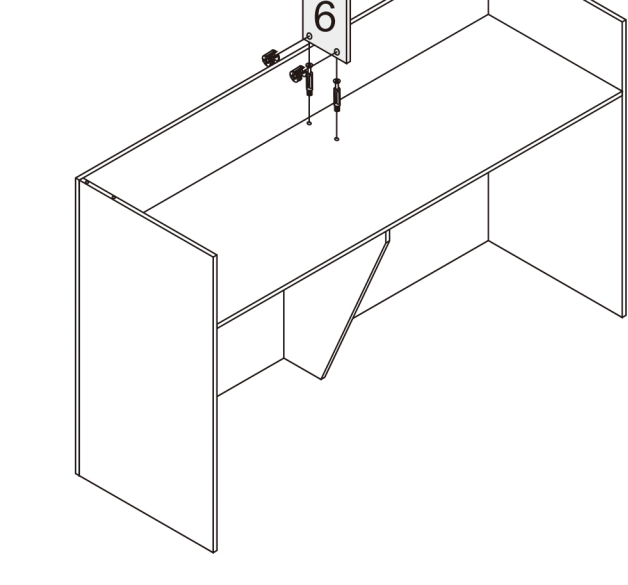

Install two three-in-one screws on part 8. Assemble part 9 beneath part 8. Tighten the lock catches. Insert two white rubber pads into both parts 8 and 9.

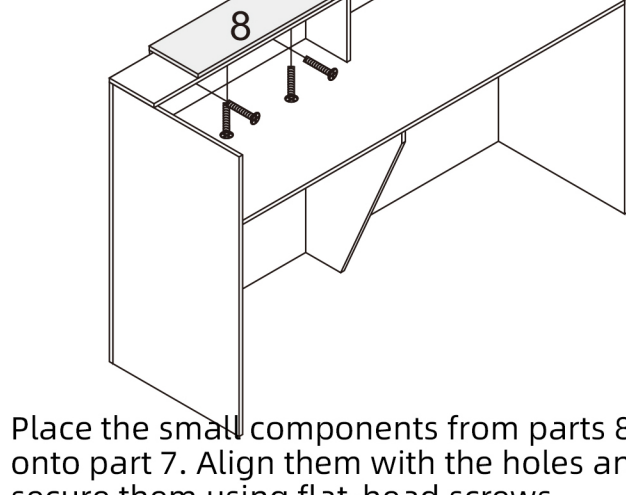

Place the small components from parts 8 and 9 onto part 7. Align them with the holes and secure them using flat-head screws. Use two long screws for the upper section and two short screws for the lower section.

