


ASSEMBLY INSTRUCTIONS

T-TS26-1375-58


PF078

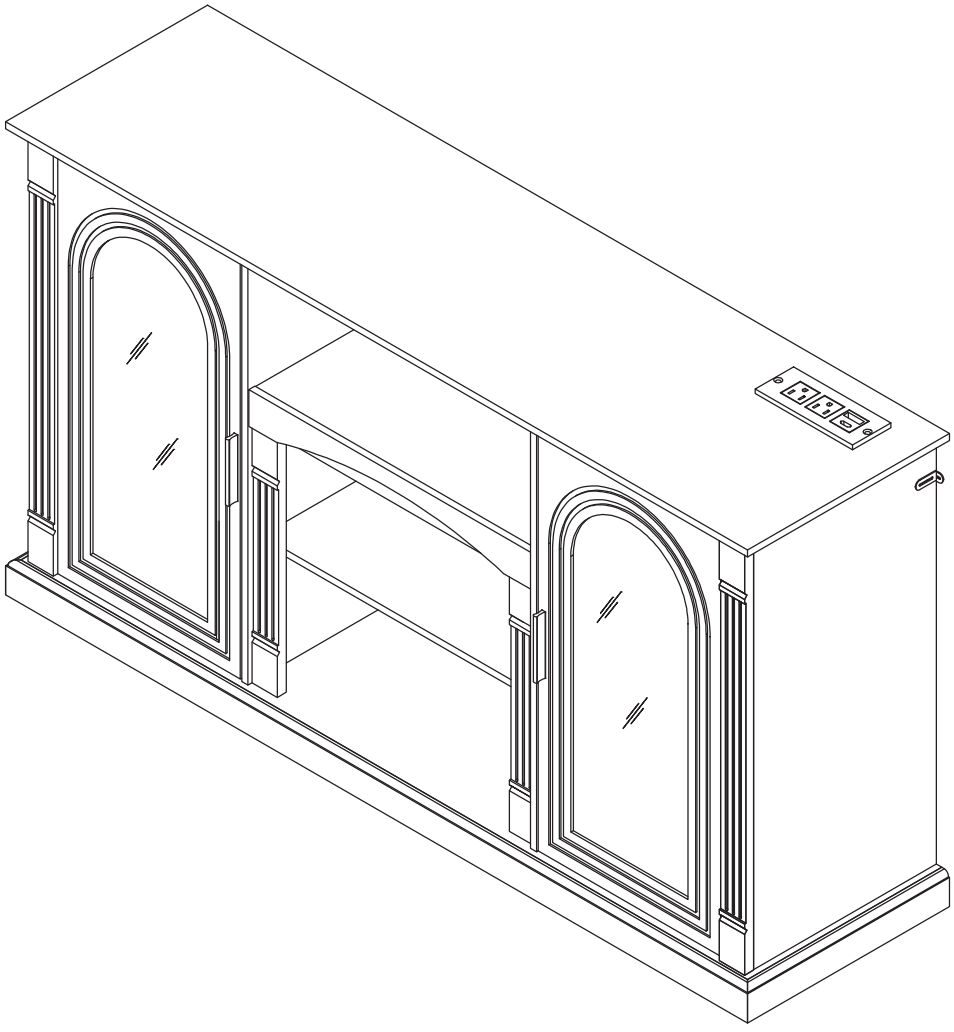

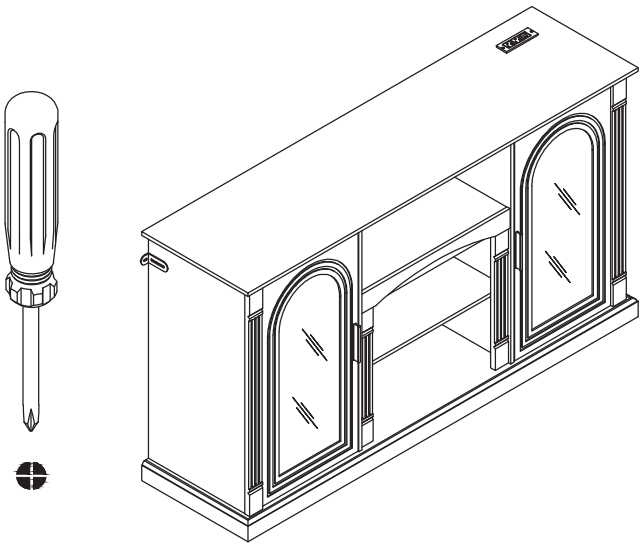

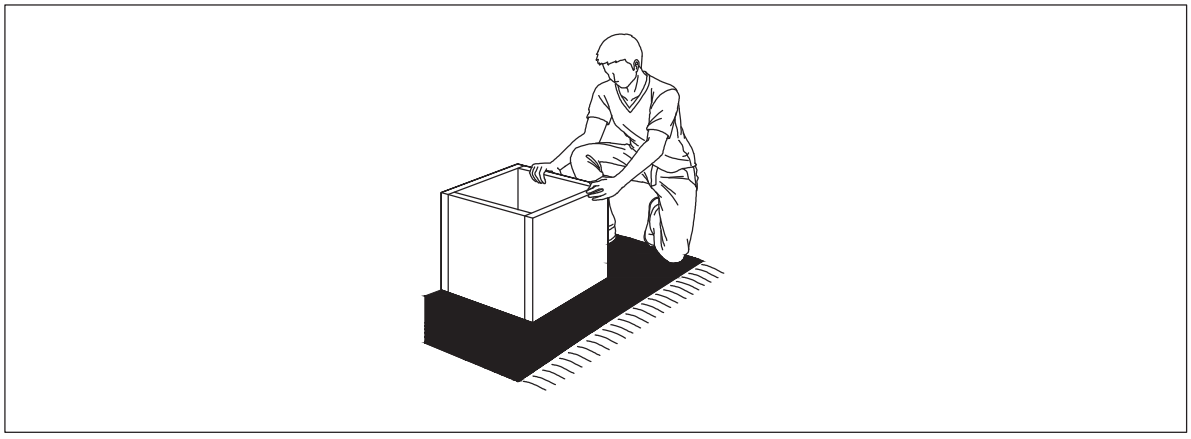

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

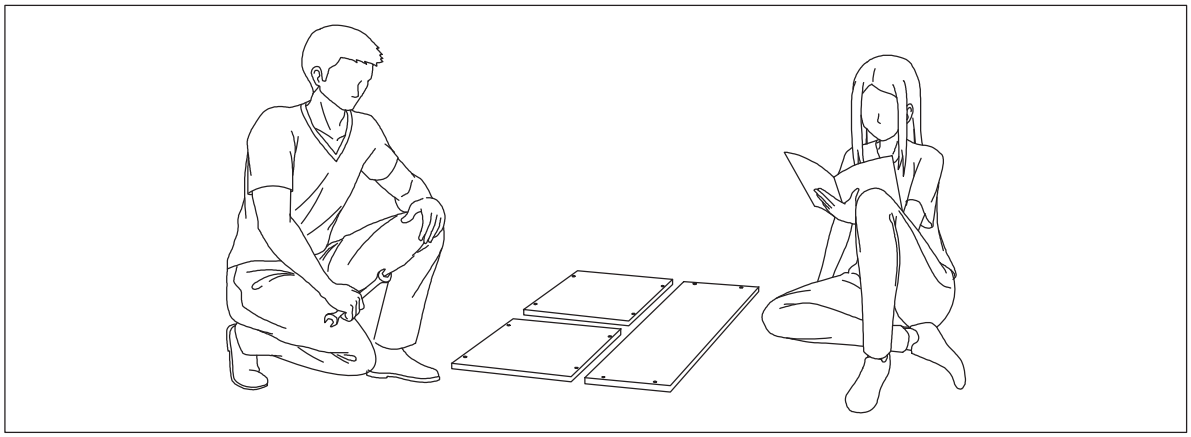


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

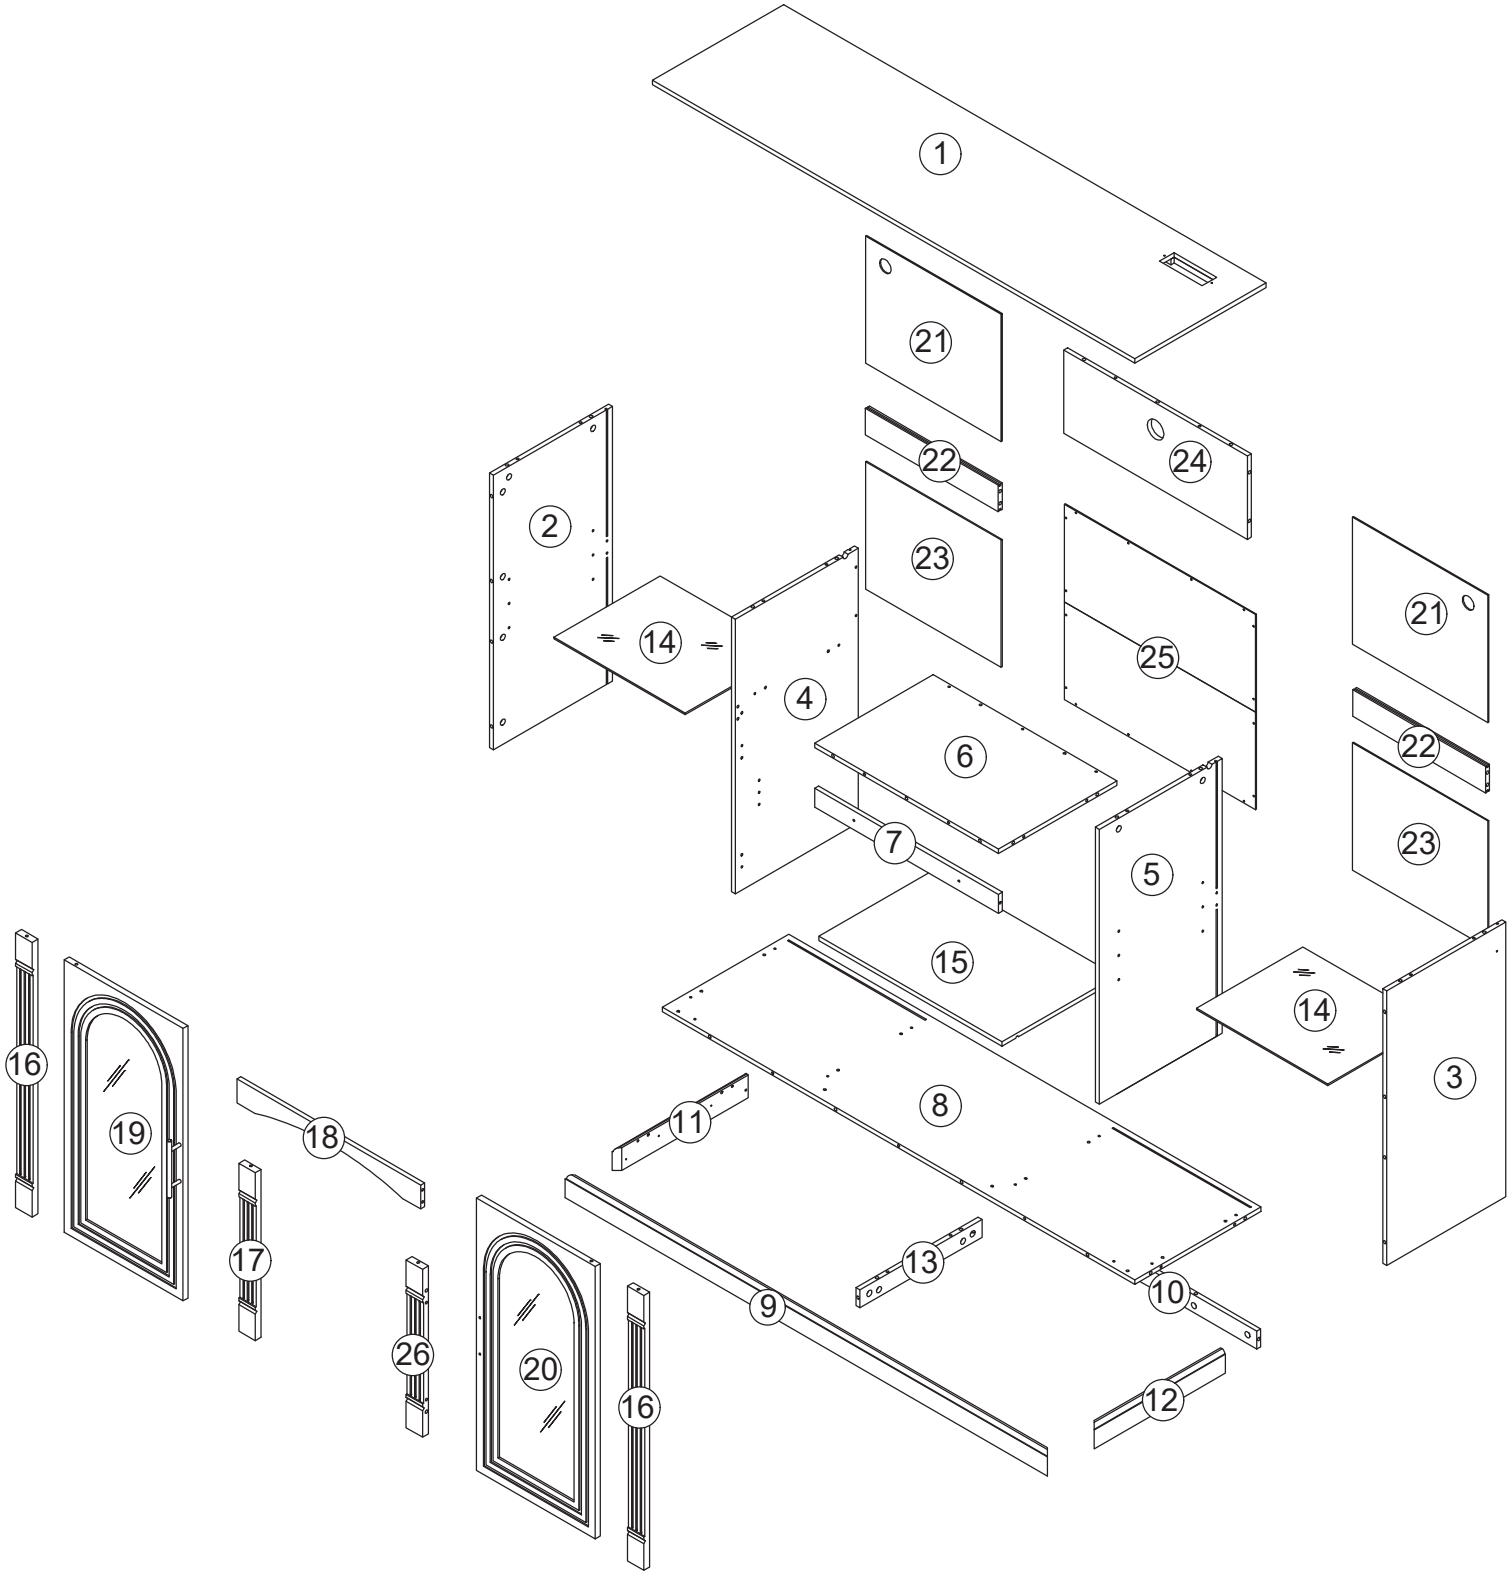


BOARD IDENTIFICATION


Not actual size

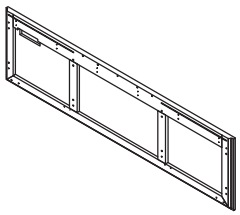


① x1

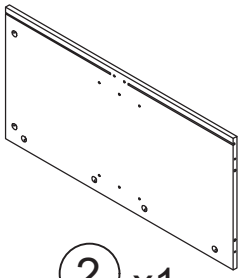


② x1

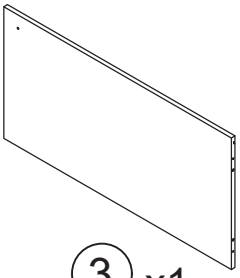


③ x1

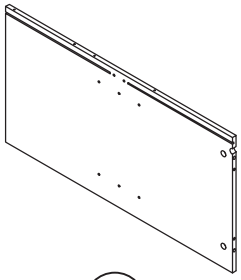


④ x1

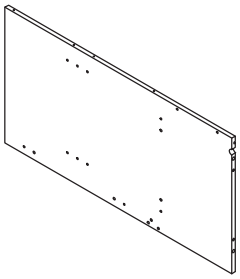


⑤ x1

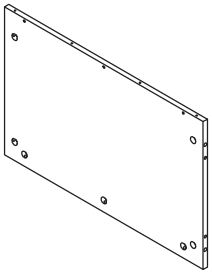


⑥ x1

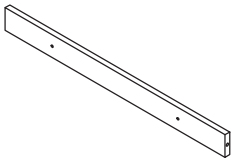


⑦ x1

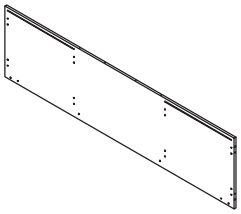


⑧ x1

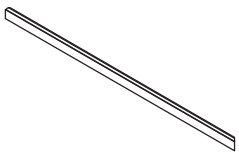


⑨ x1

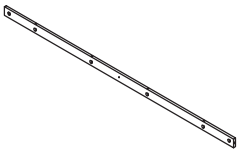


⑩ x1

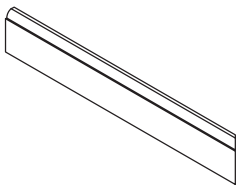


⑪ x1

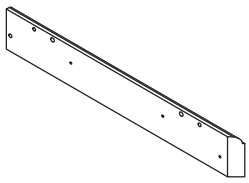


⑫ x1

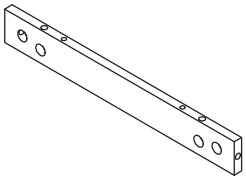


⑬ x1

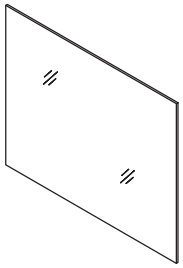

⑭ x2

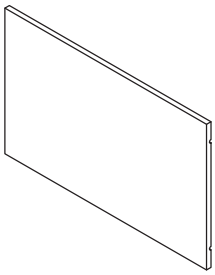


⑮ x1

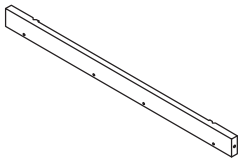


⑯ x2

BOARD IDENTIFICATION


Not actual size

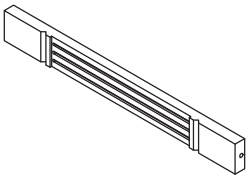


17 x1

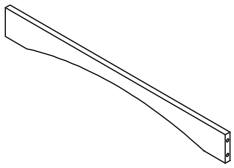


18 x1

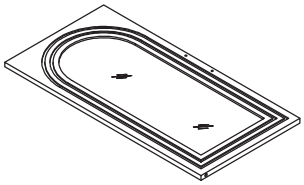


19 x1

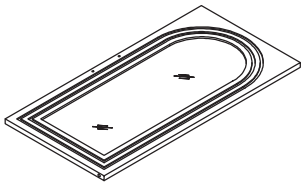


20 x1

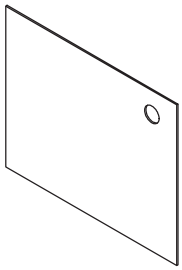


21 x2

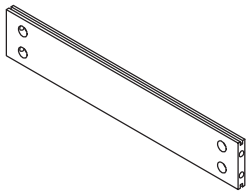


22 x2

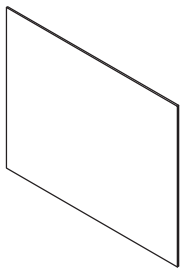


23 x2

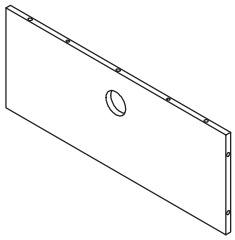

24 x1

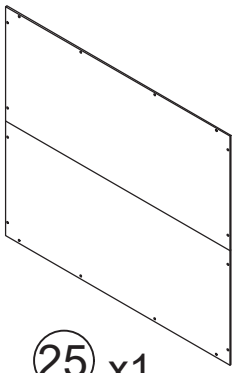

25 x1

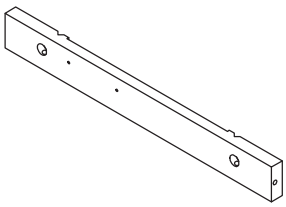


26 x1

HARDWARE LIST




A	x60+3



Ø15x9.5

B	x60+3




Ø6x30

C	x53+3




Ø5x40

D	x11+1



Ø3.5x12

E	x22+2




Ø3x16

F	x16+1



Ø3.5x20


G	x2+1

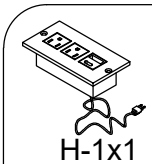

Ø3.5x12


H-1x1 H-2x2+1

H	x1




I-1 I-2x6+1 I-3x12+2

I	x1




J	x14+1




Ø3x14mm

K	x16+2




L	x4+1




Ø5x16


M	x4+1



N	x10




O	x8+1

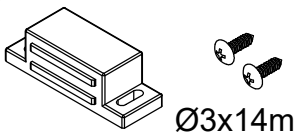


Ø3x14mm

P	x2




Q	x2



M4x18mm

R-1 R-2

R	x2




S	x2+1




Ø21

T	x60+3



U	x1

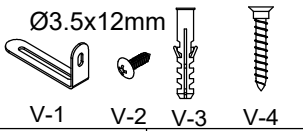

Ø4x40mm

Ø3.5x12mm


V-1 V-2 V-3 V-4

V	x2


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

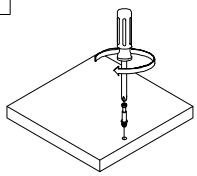

2

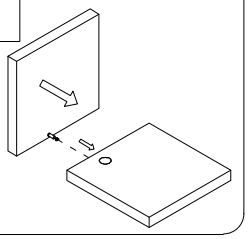


3

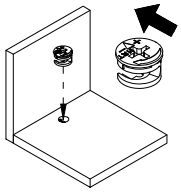


The opening must point toward the edge of the board


4

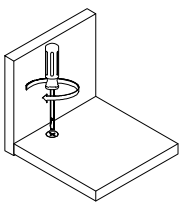


STEP 1

PF078

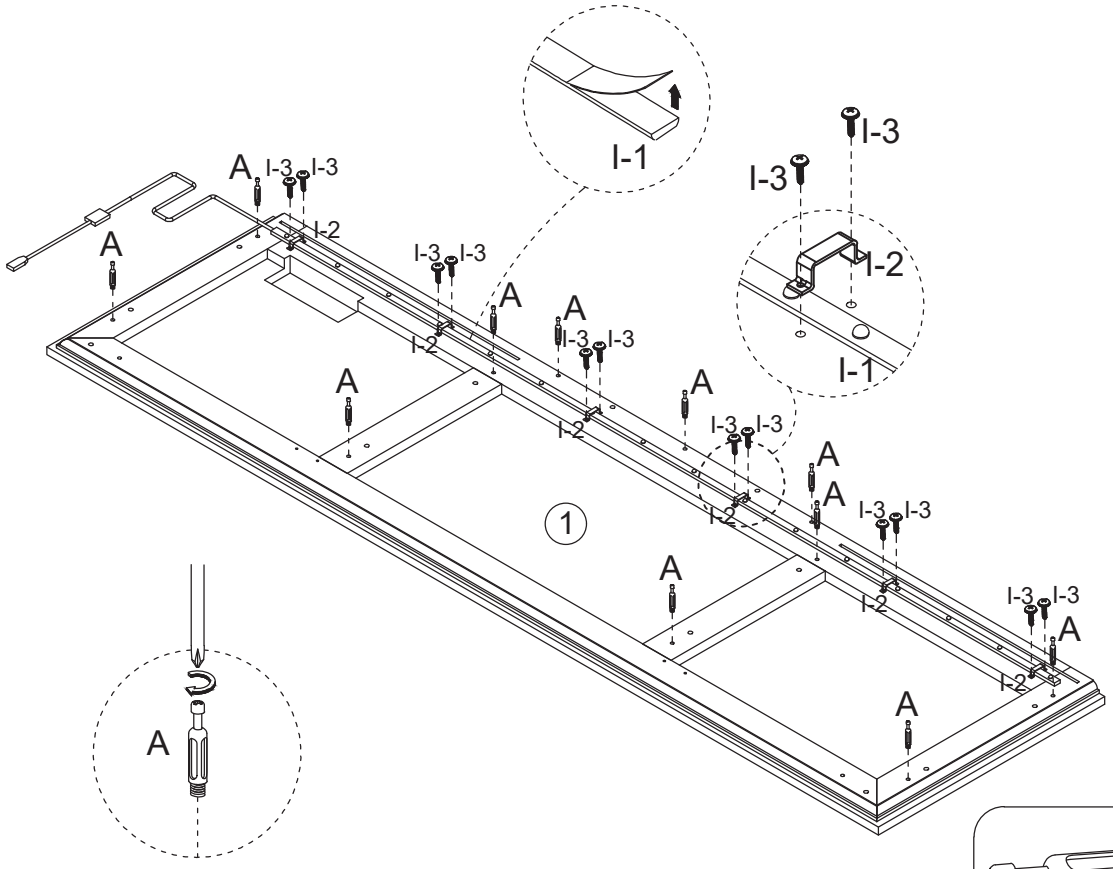

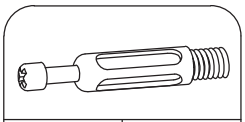



A	x 11

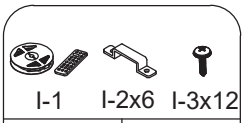

I	x 1

STEP 2

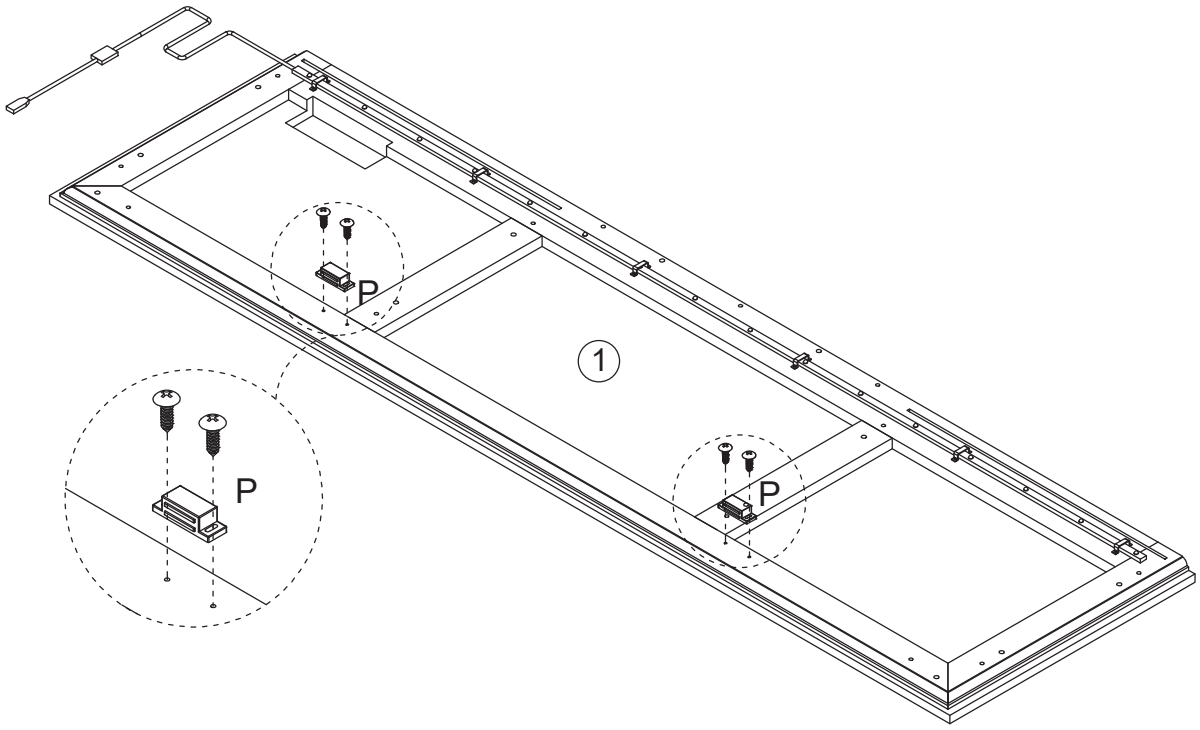




P	x 2


STEP 3

PF078

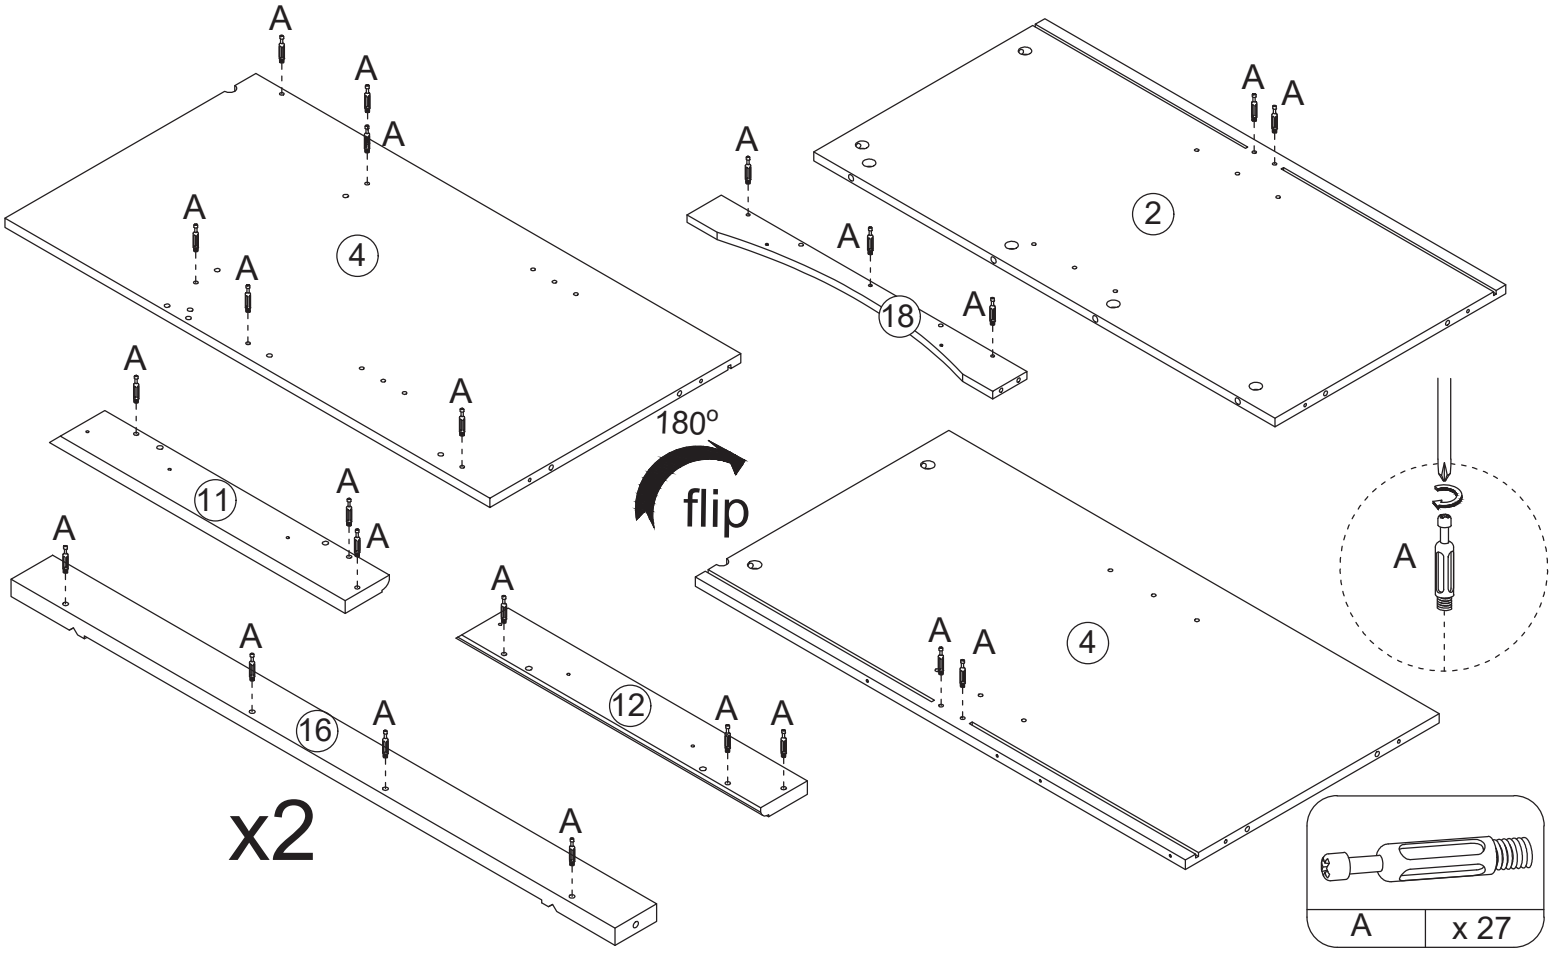

A	x 27


STEP 4

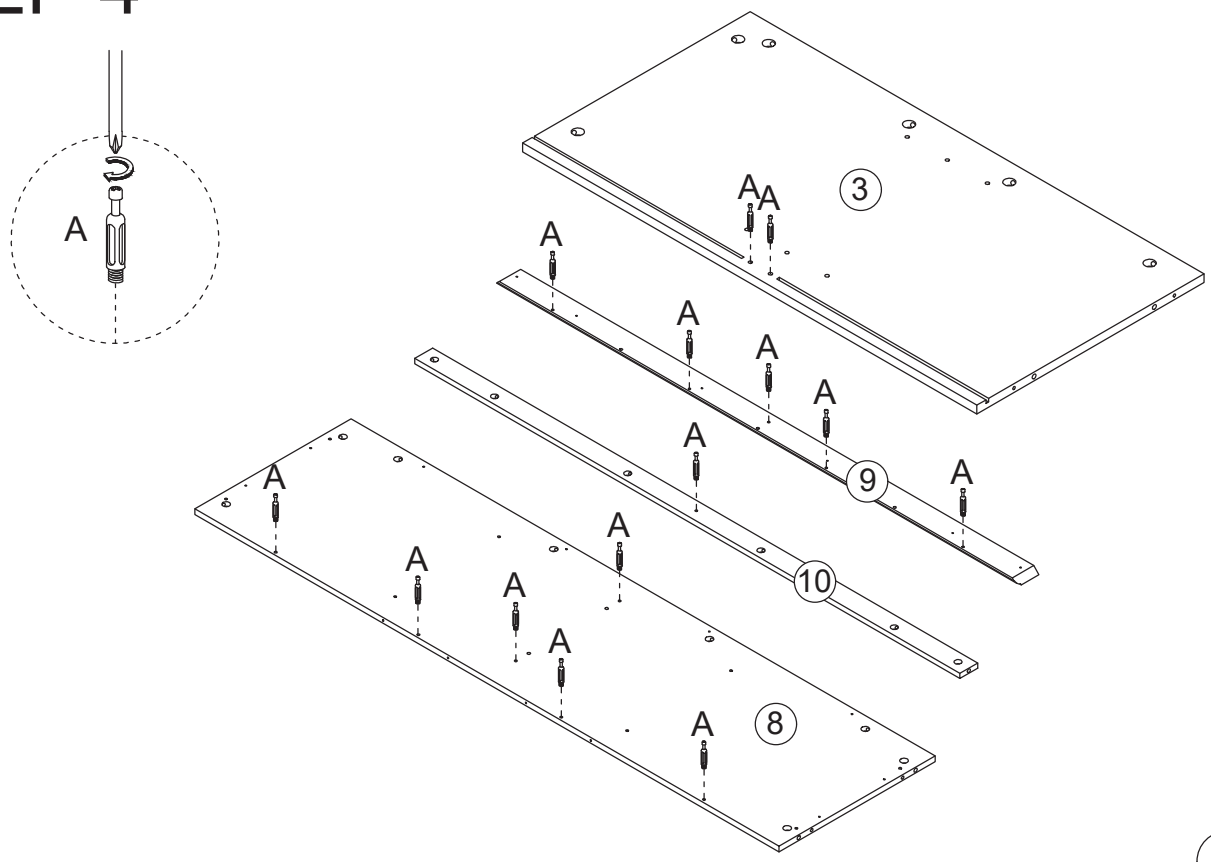


A	x 14

STEP 5


PF078

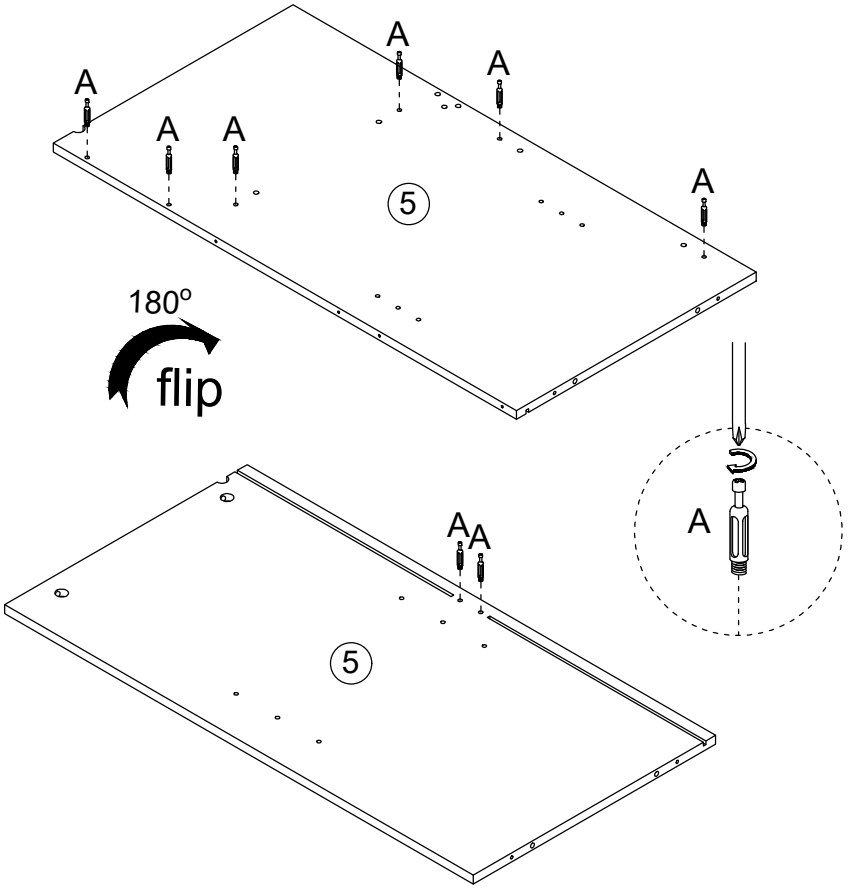


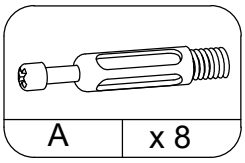

A	x 8

STEP 6

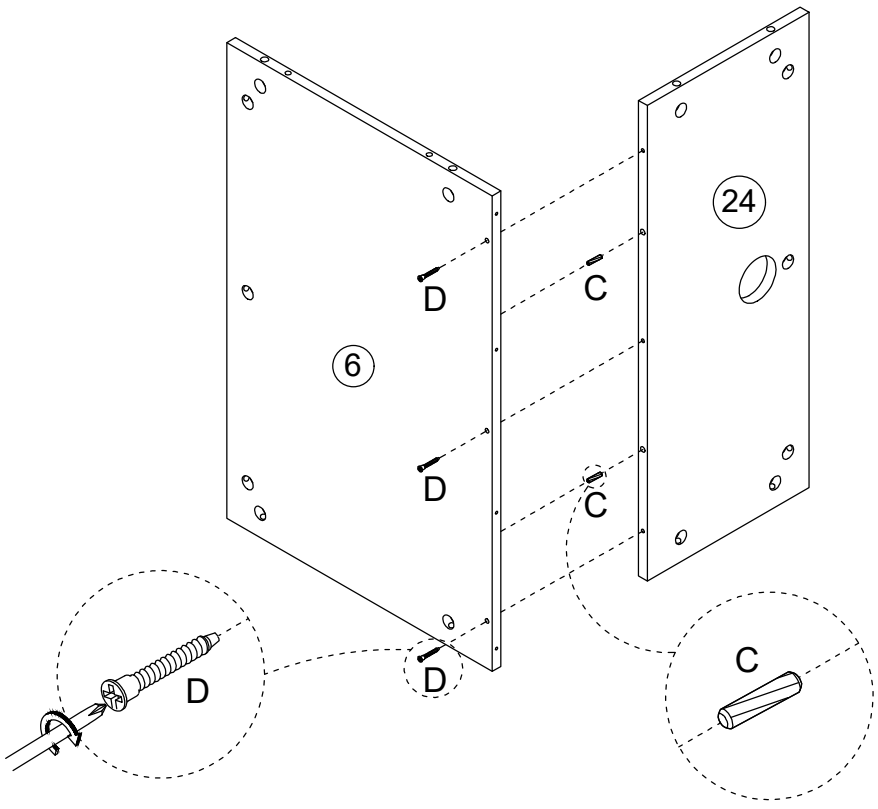




Ø6x30	
C	x2




Ø5x40	
D	x 3


STEP 7


PF078

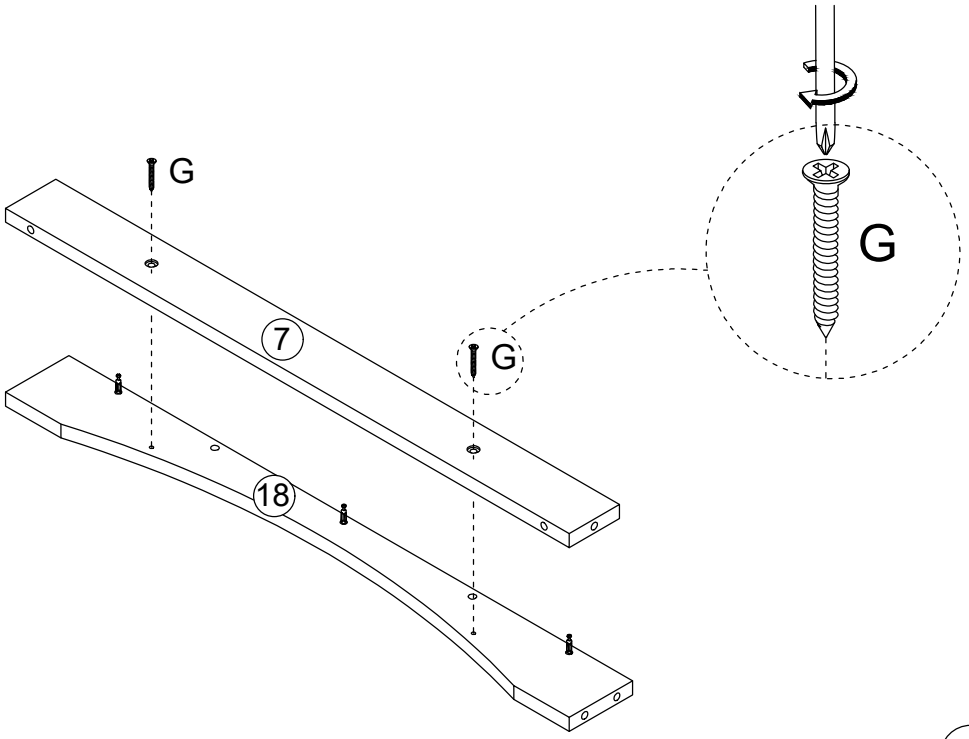


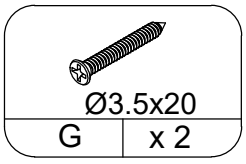


STEP 8

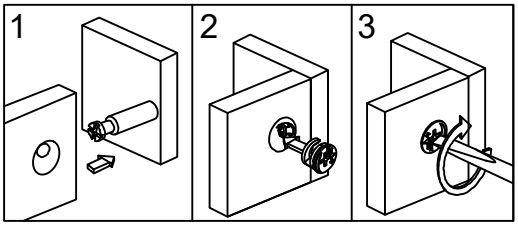


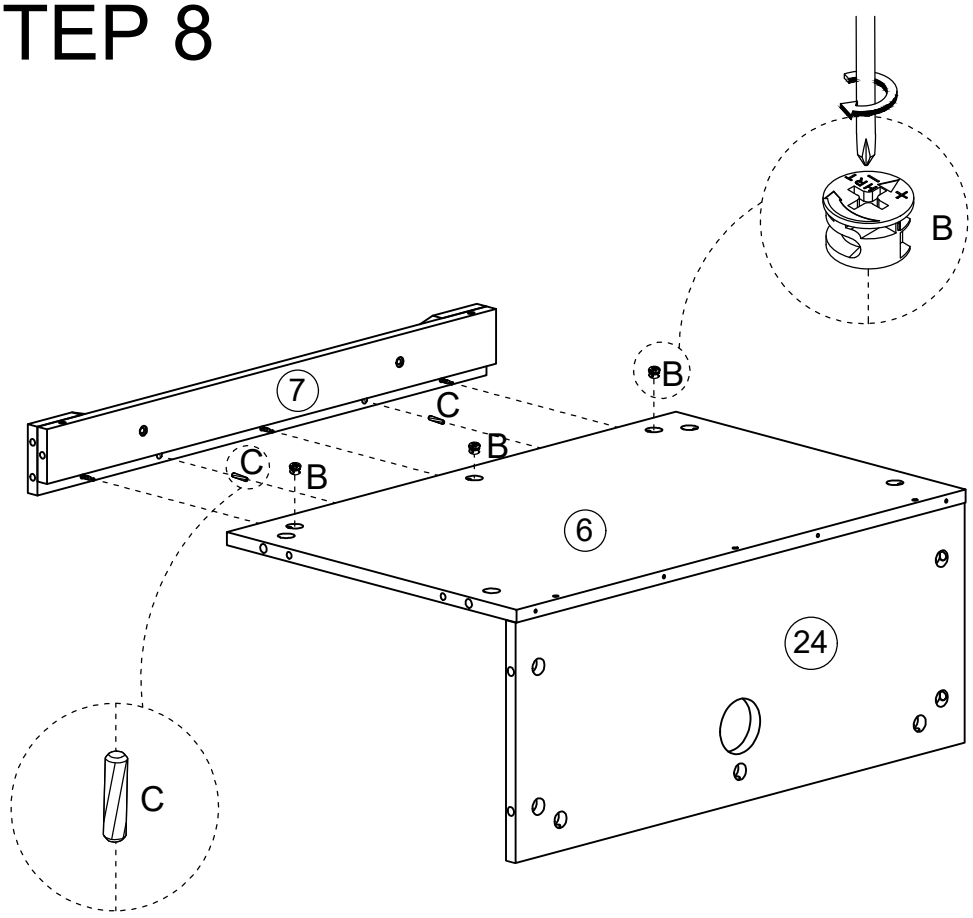


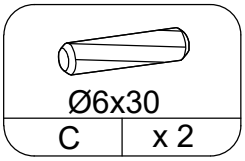

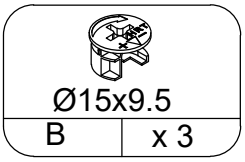



STEP 9

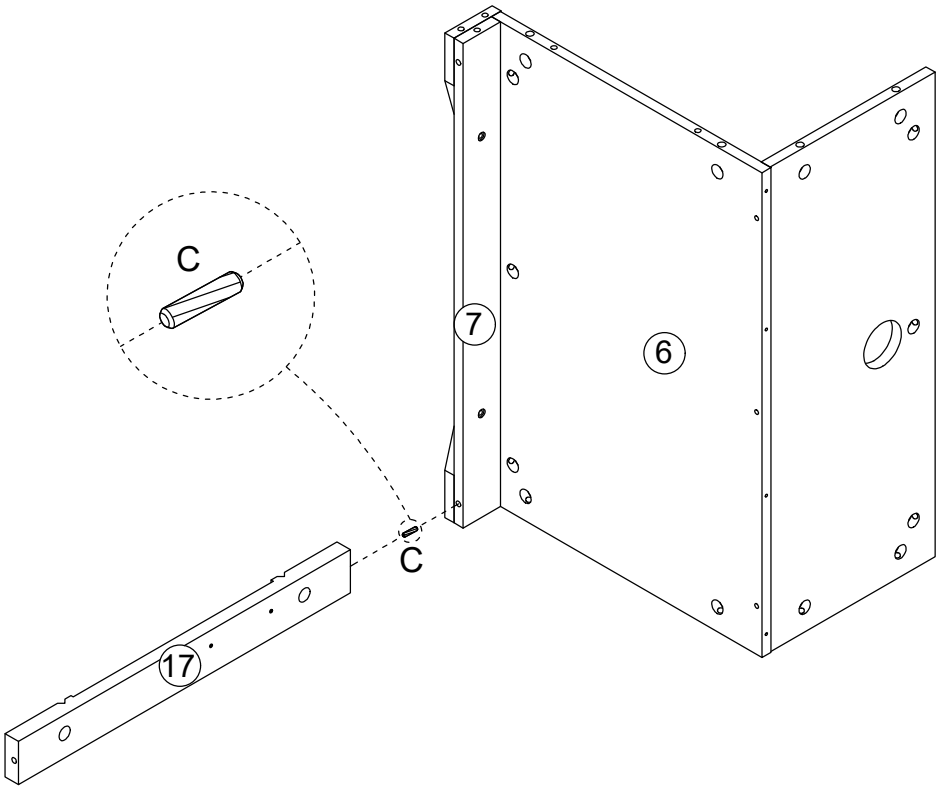


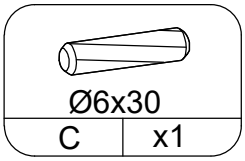

STEP 10

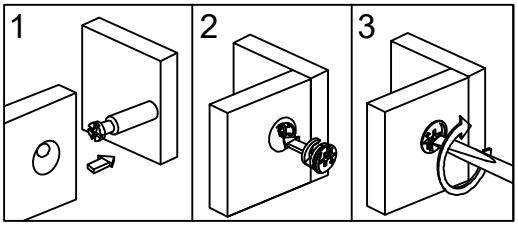


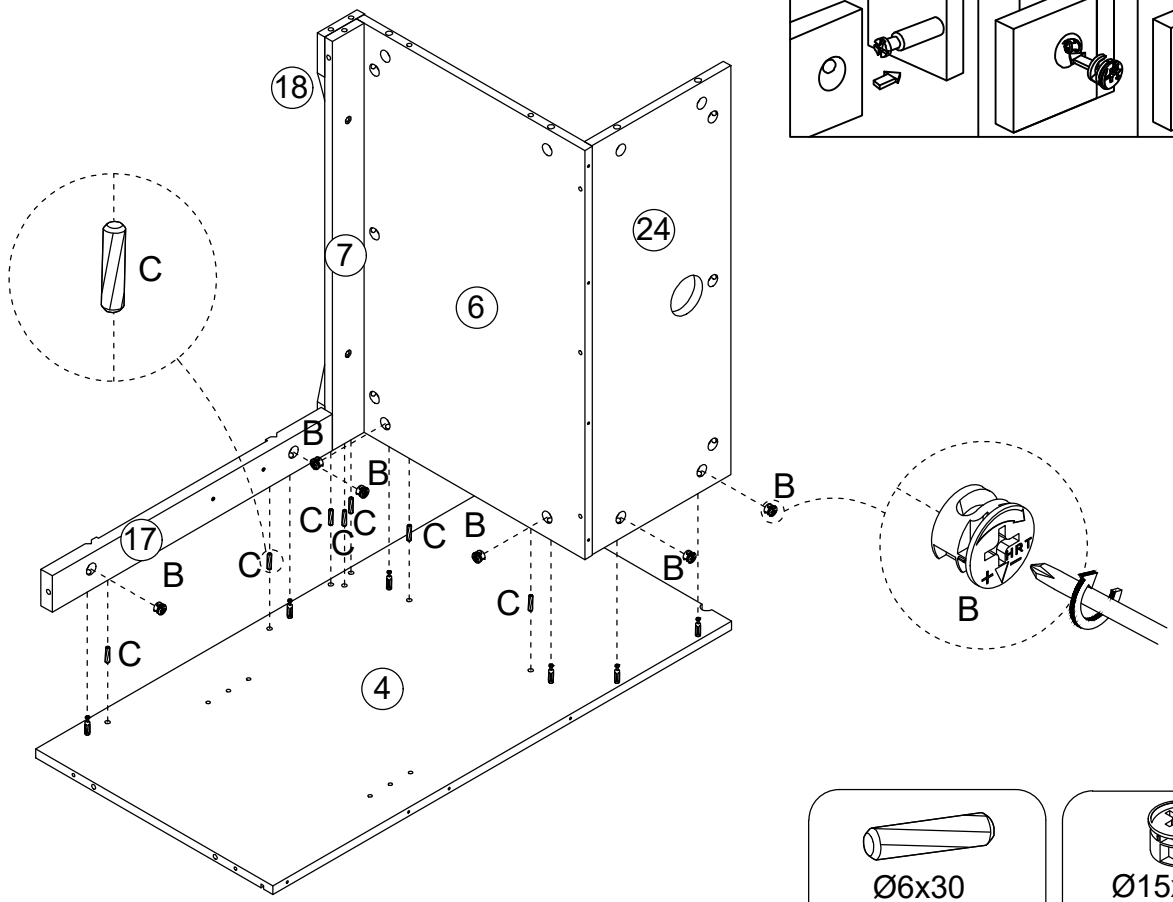


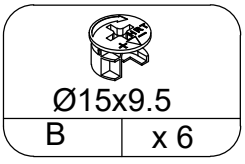


STEP 11


PF078

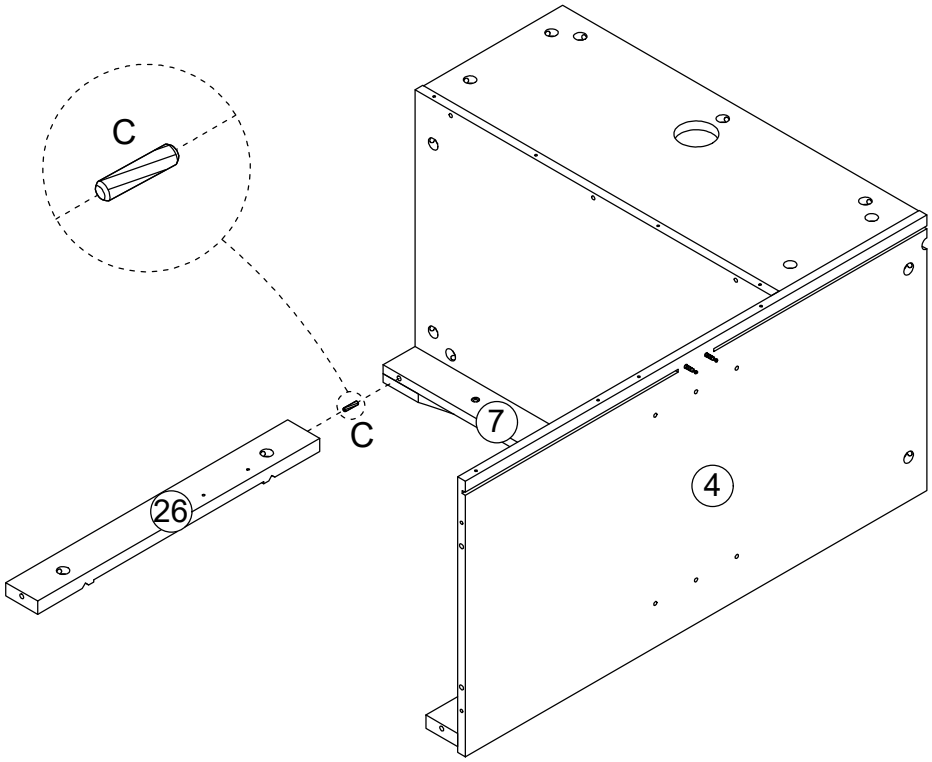


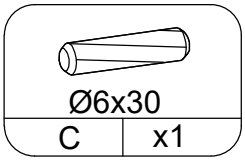


STEP 12

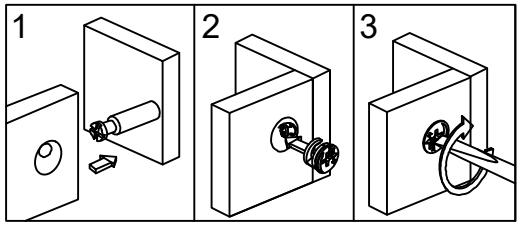

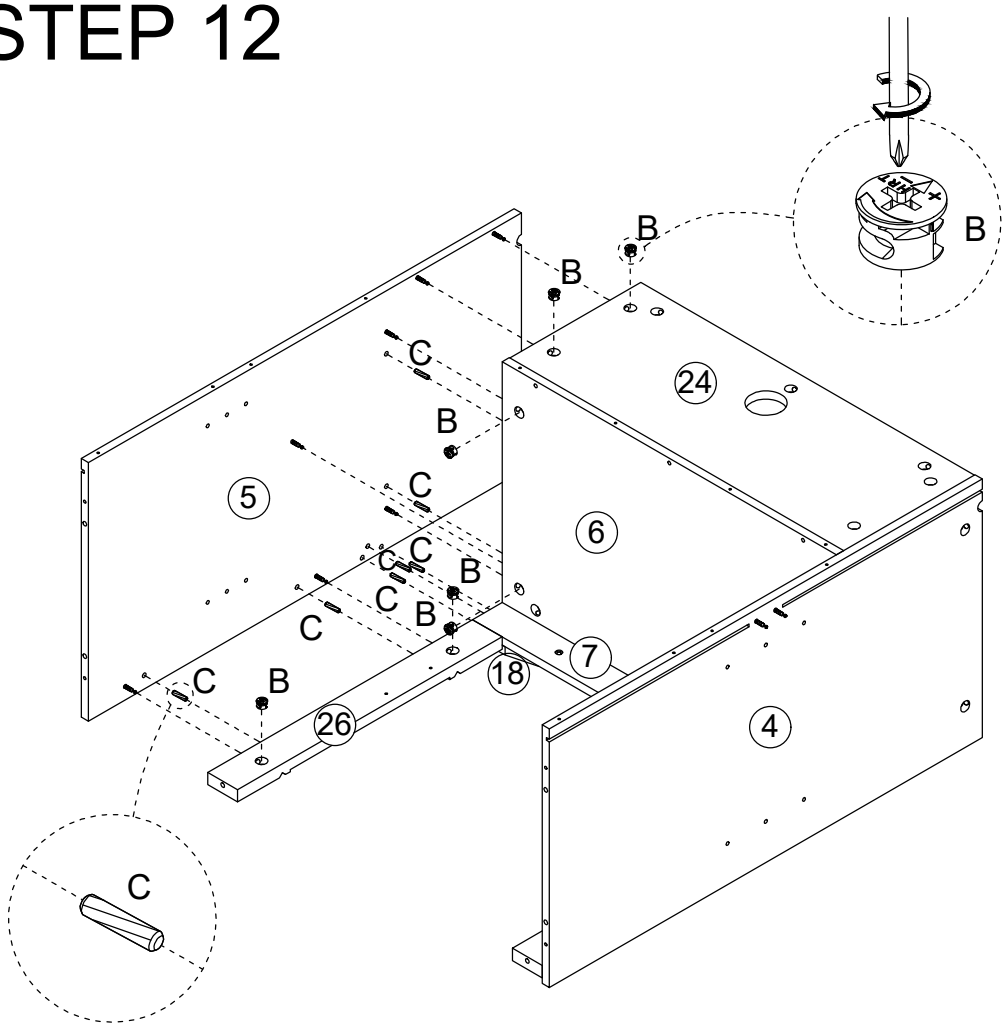


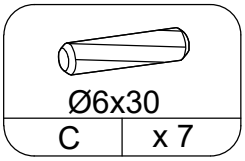


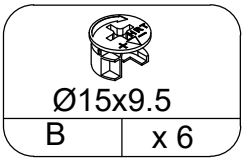


STEP 13


PF078

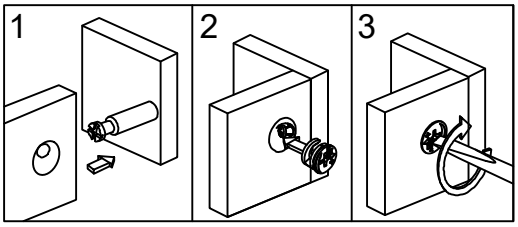


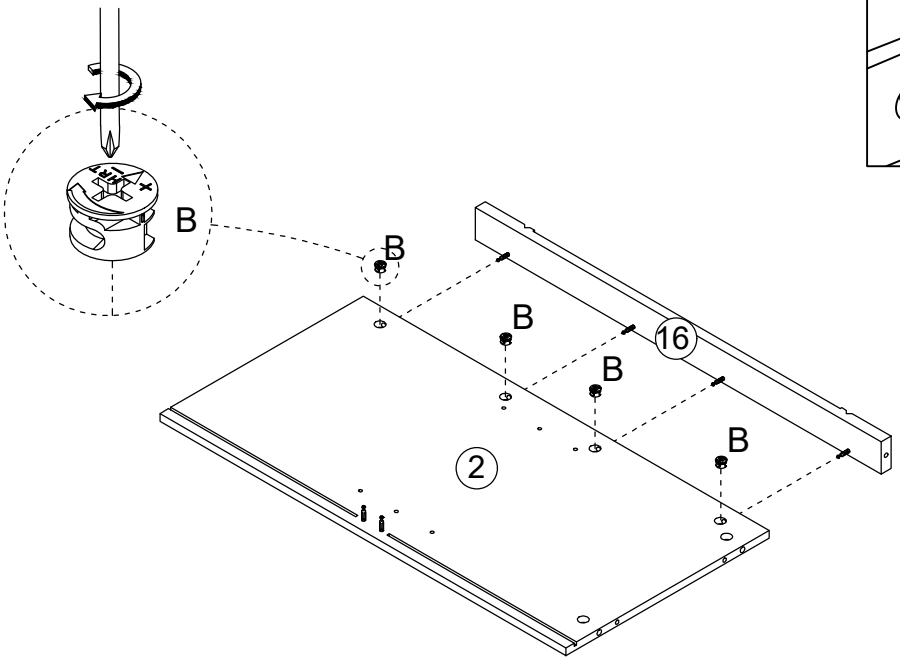


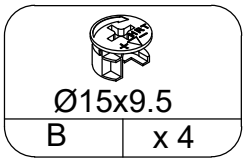

STEP 14

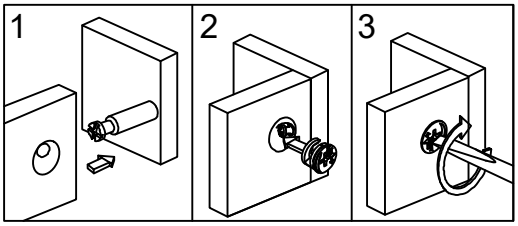


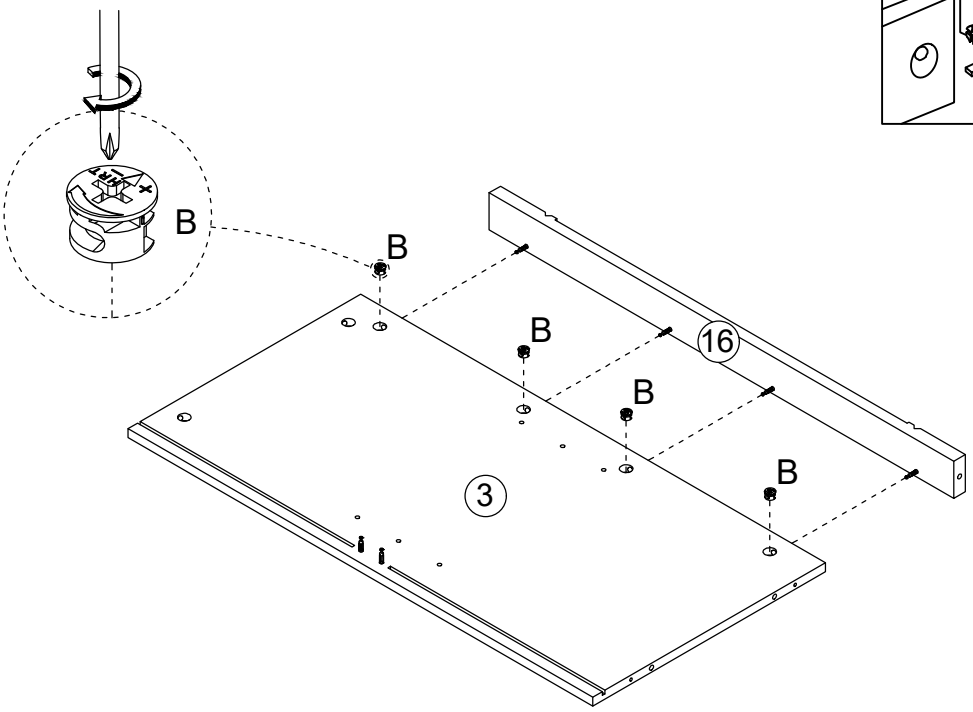


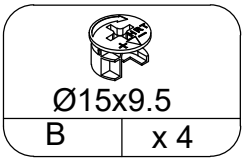


STEP 15


PF078

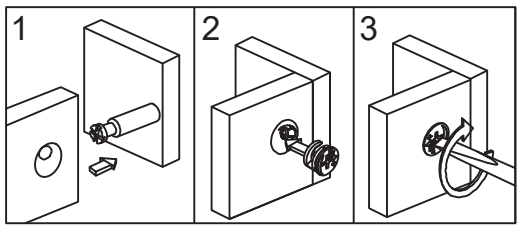


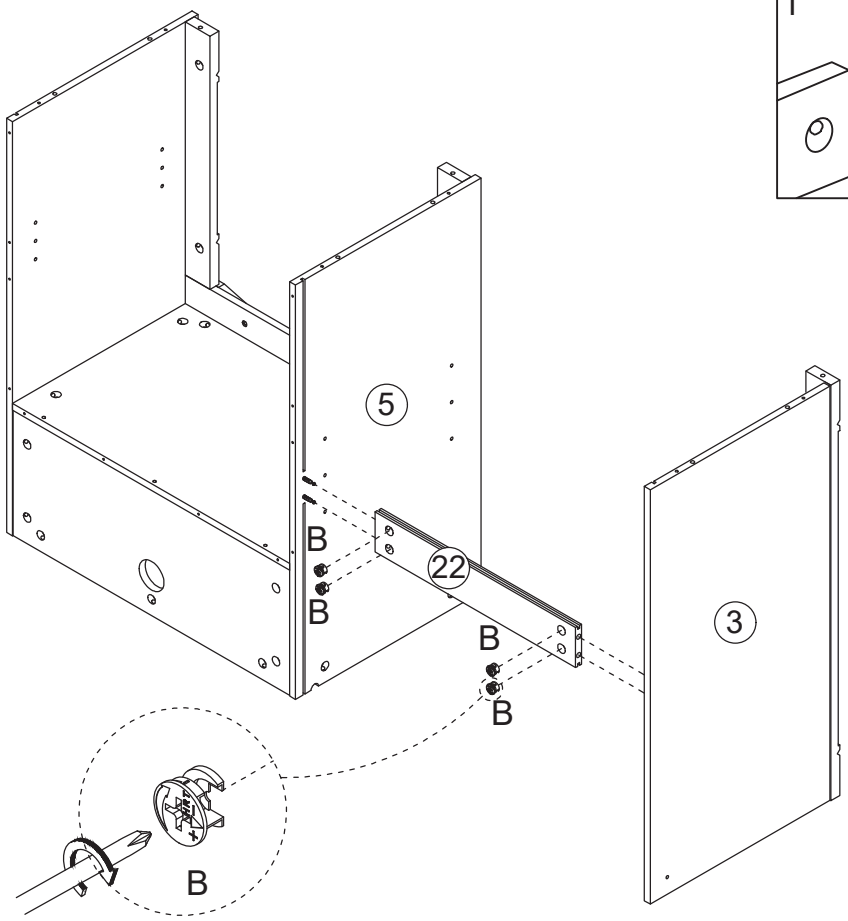


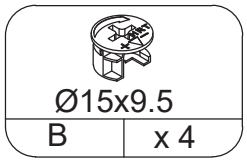


STEP 16

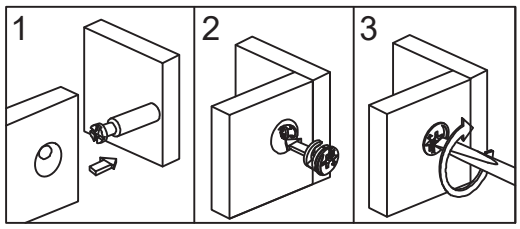

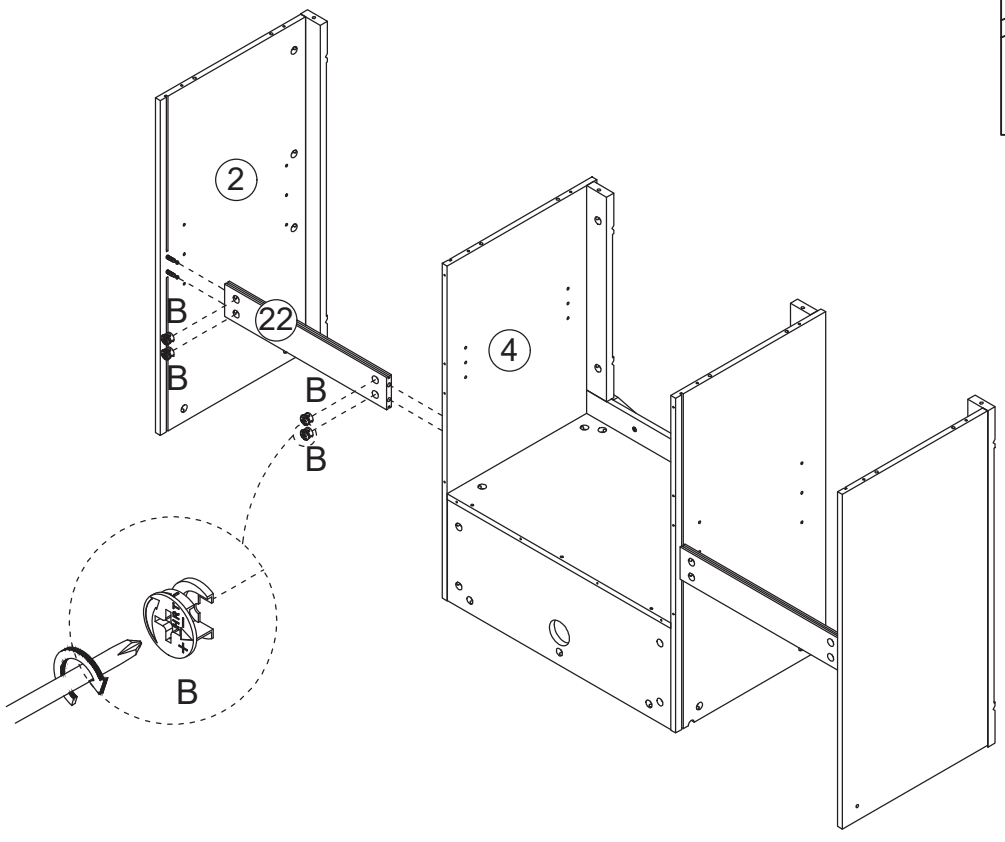


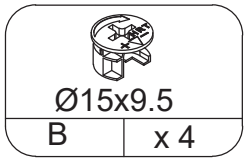


STEP 17

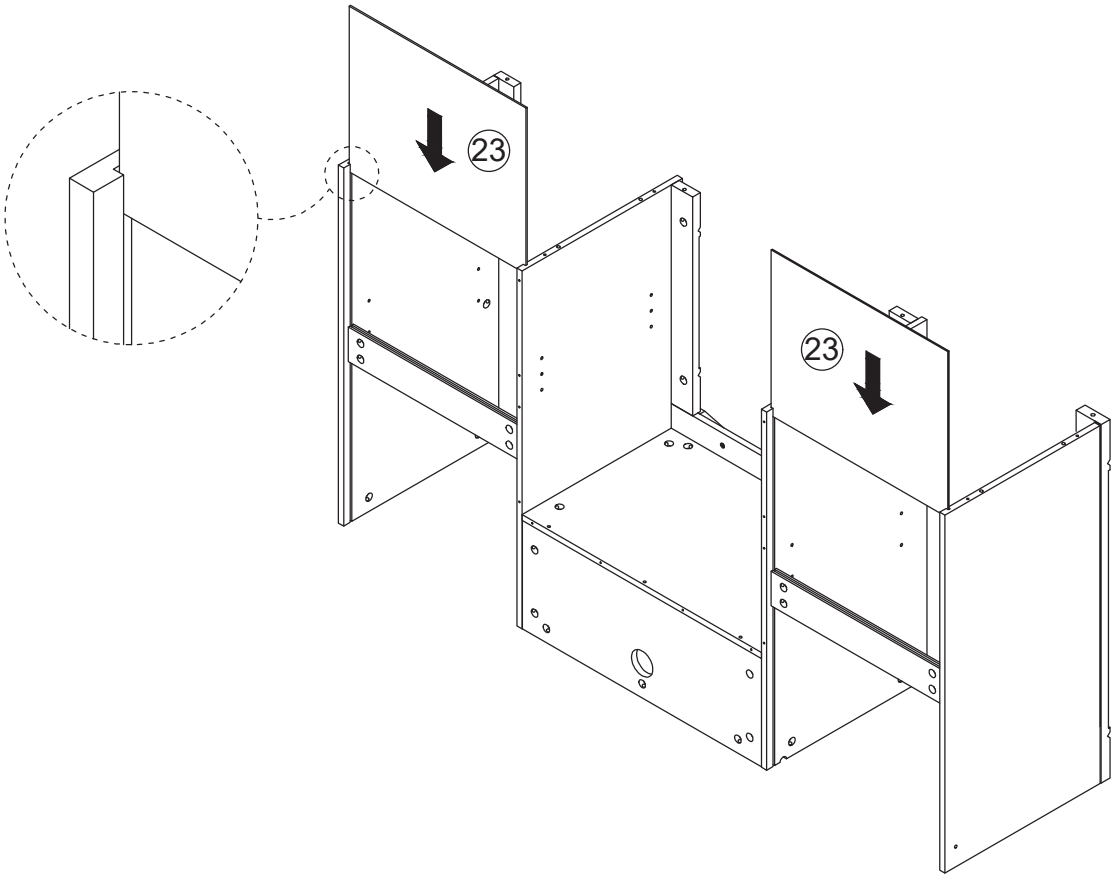


STEP 18

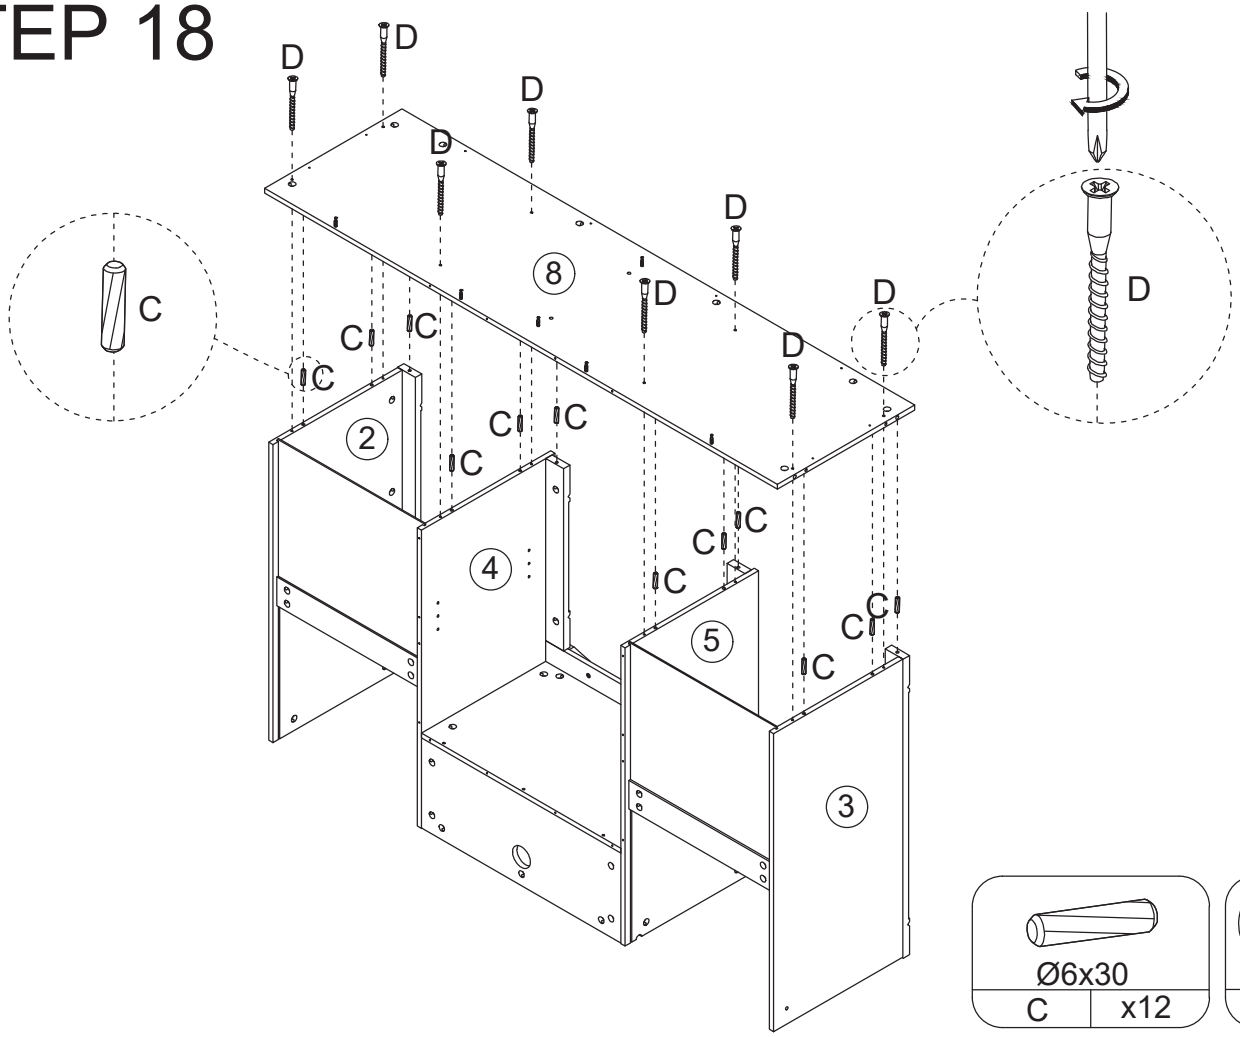


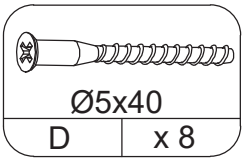


STEP 19


PF078

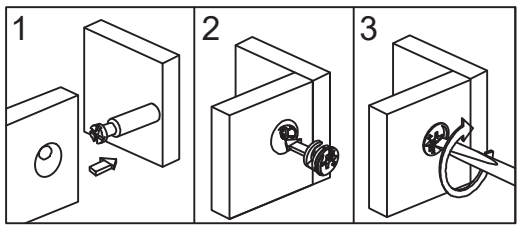


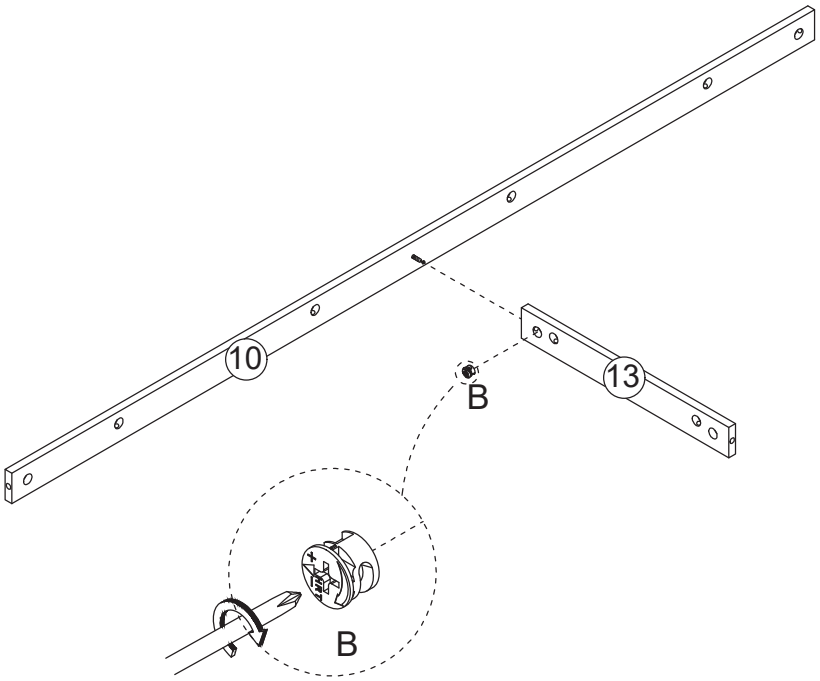


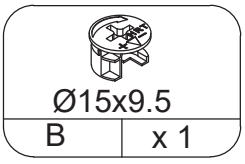


STEP 20

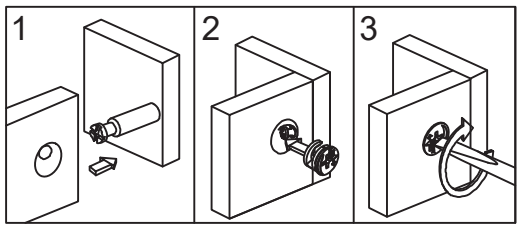

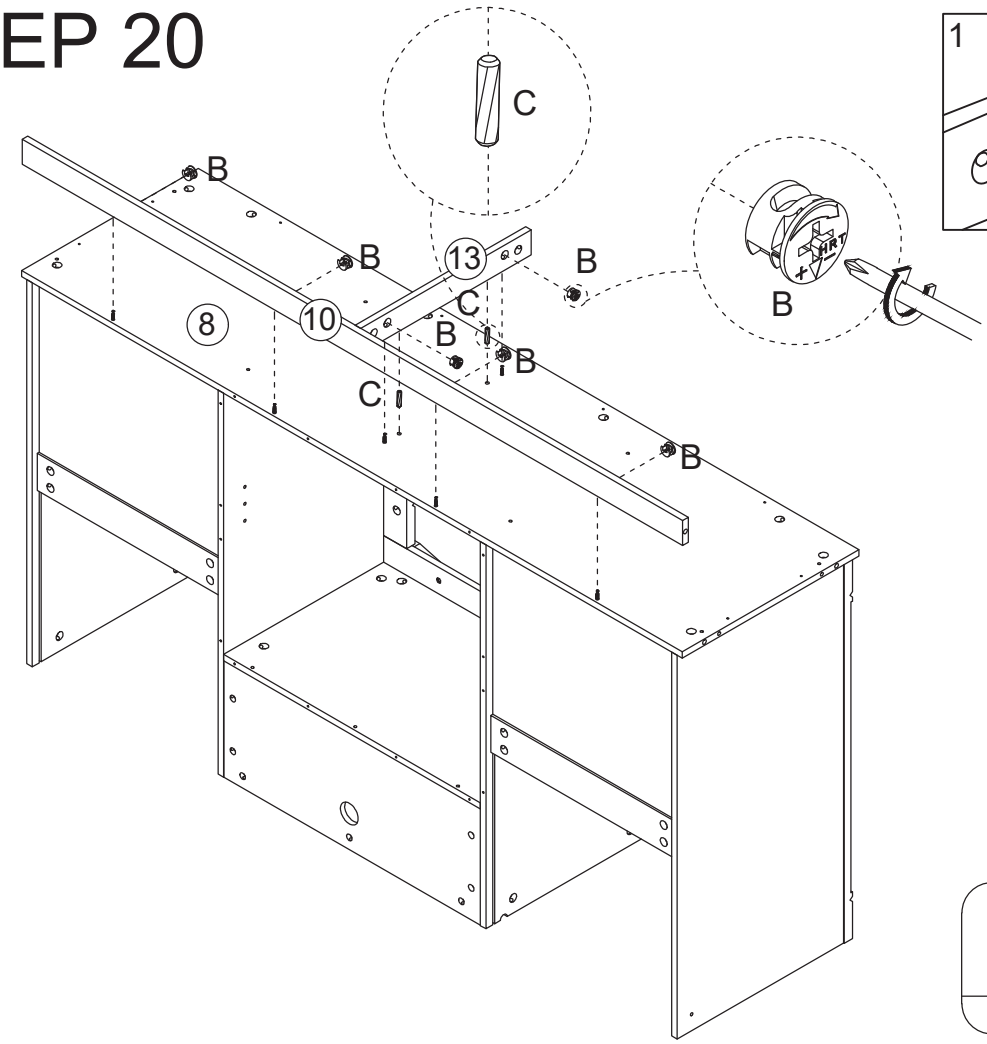


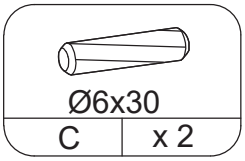


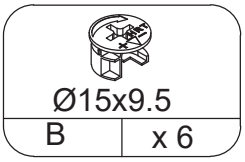


STEP 21


PF078

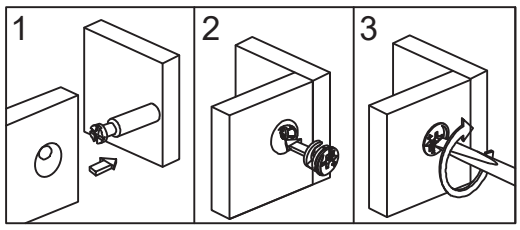



STEP 22

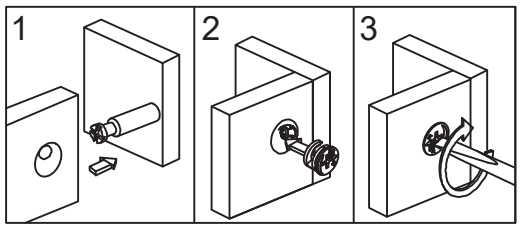


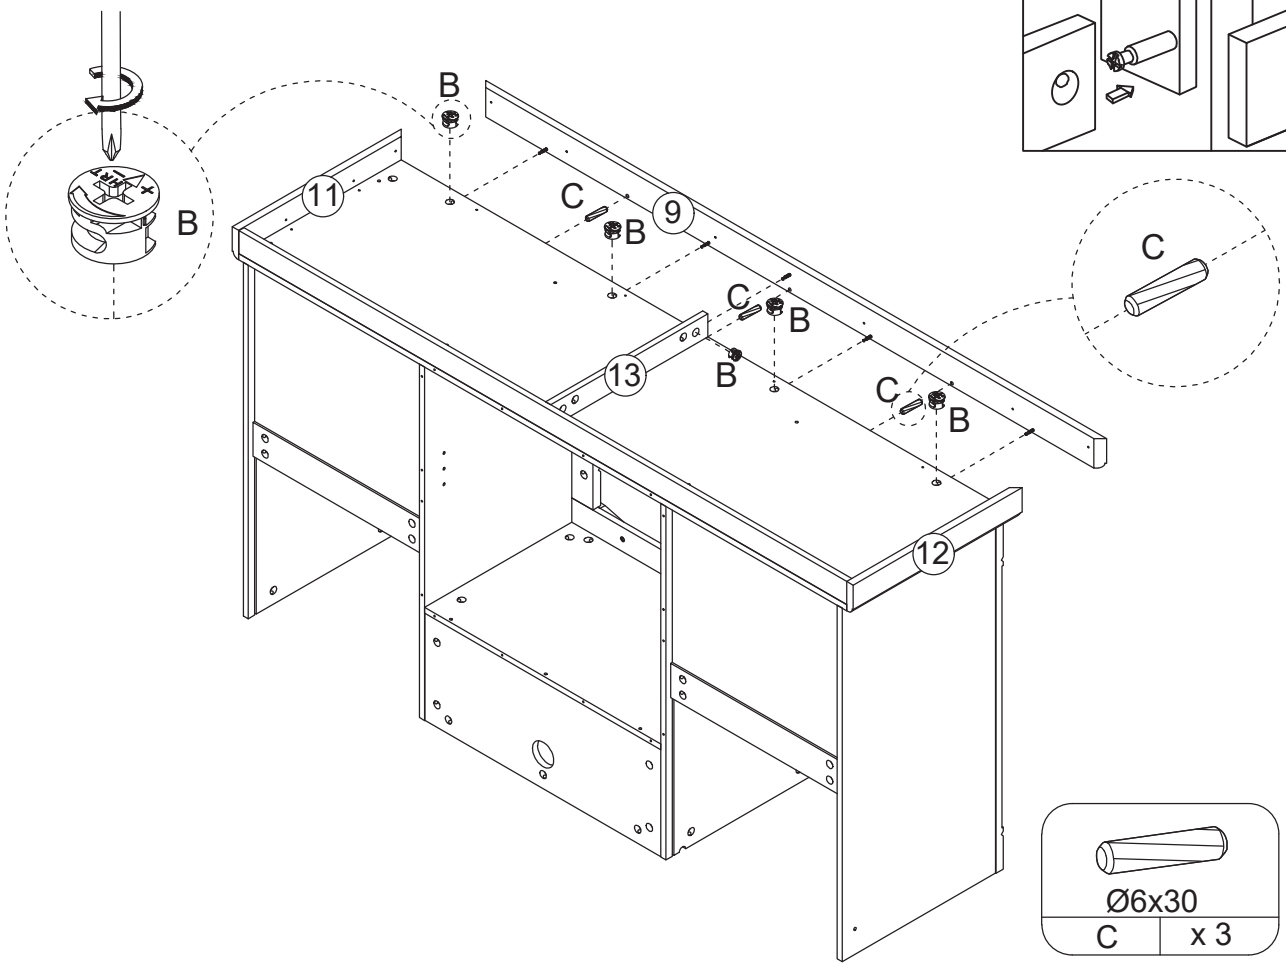





STEP 23


PF078

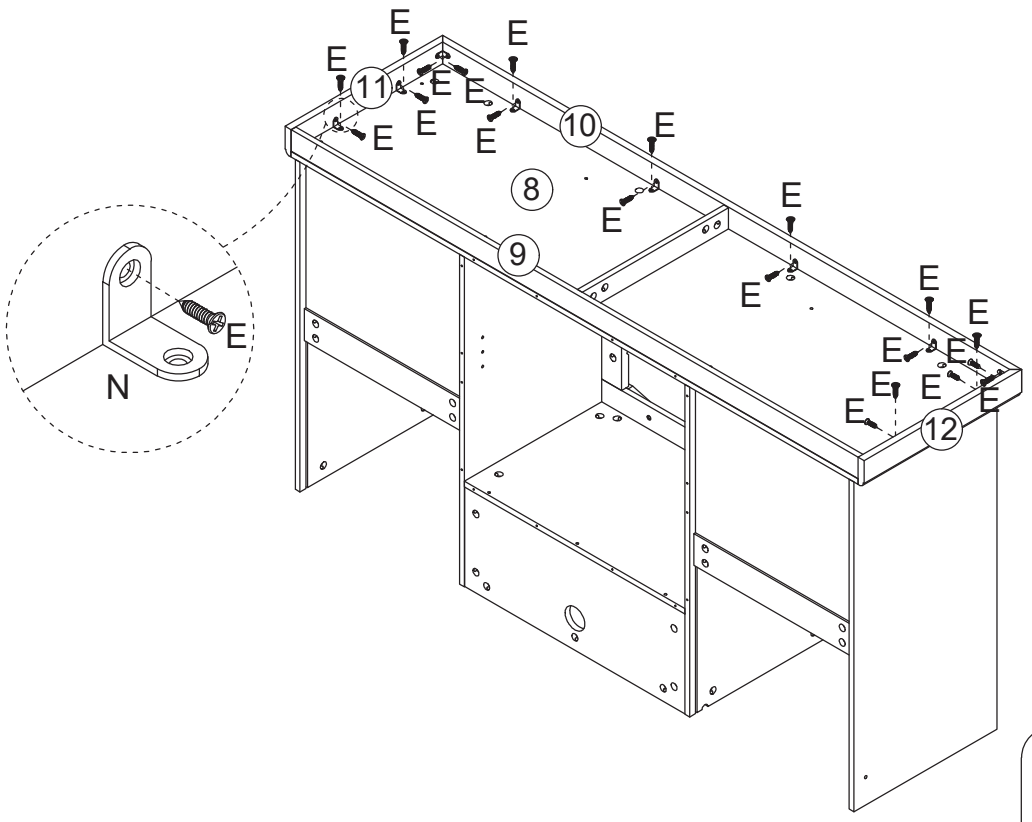

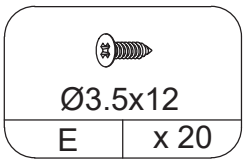


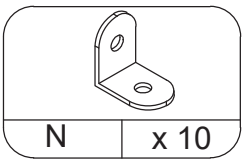

STEP 24

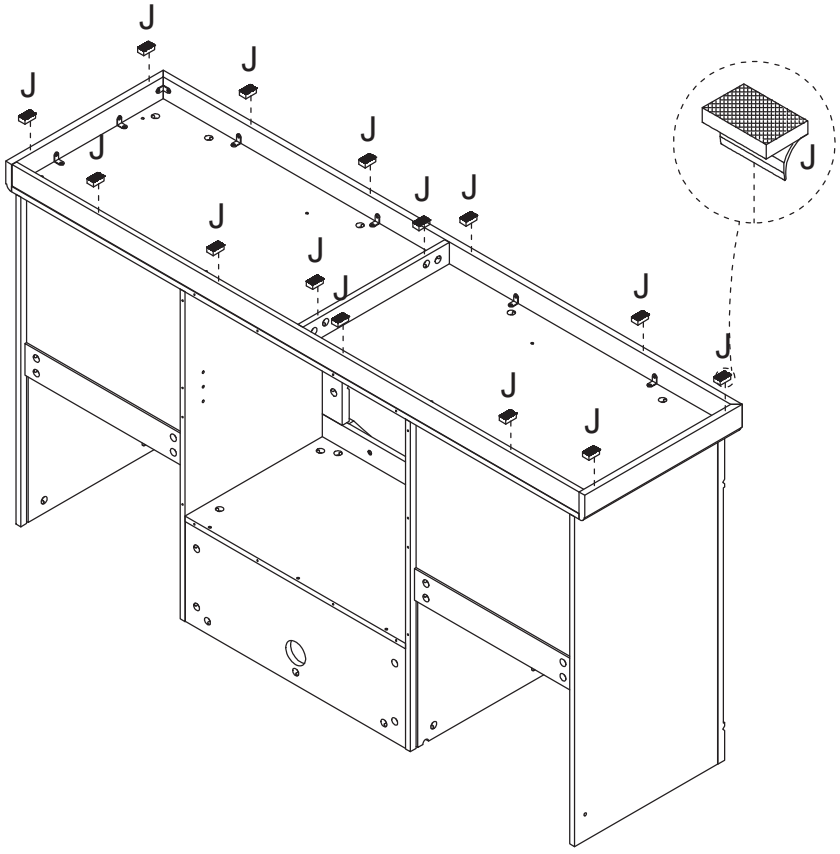




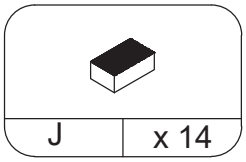


STEP 25

PF078

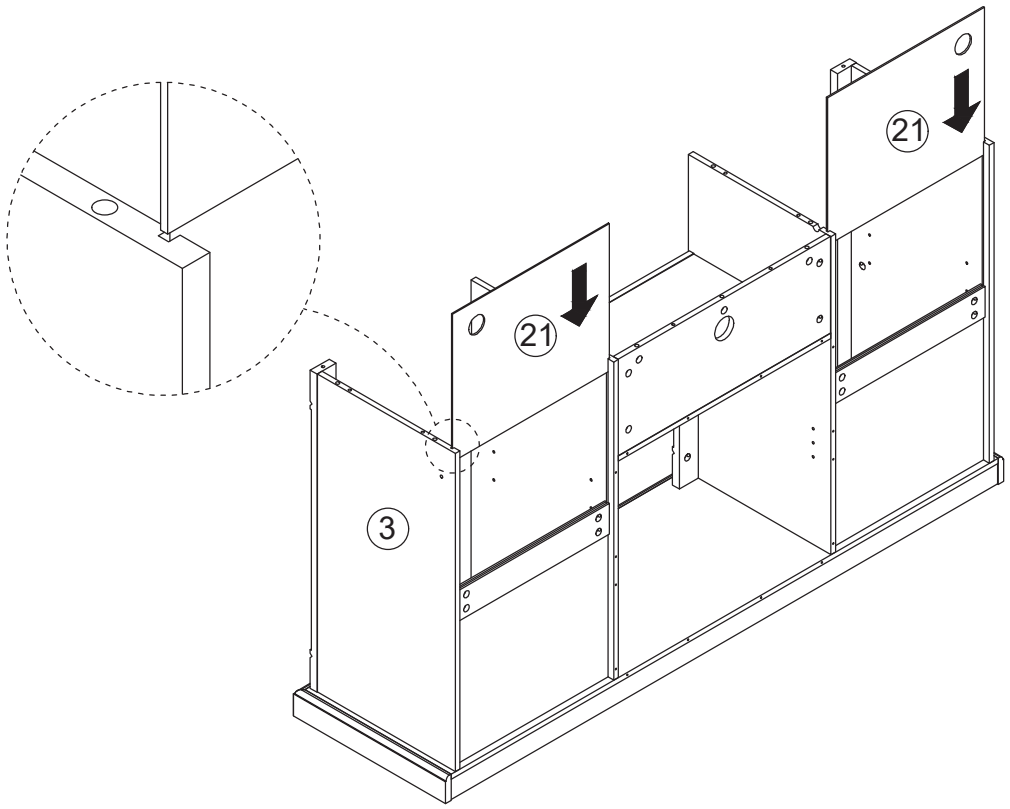

STEP 26

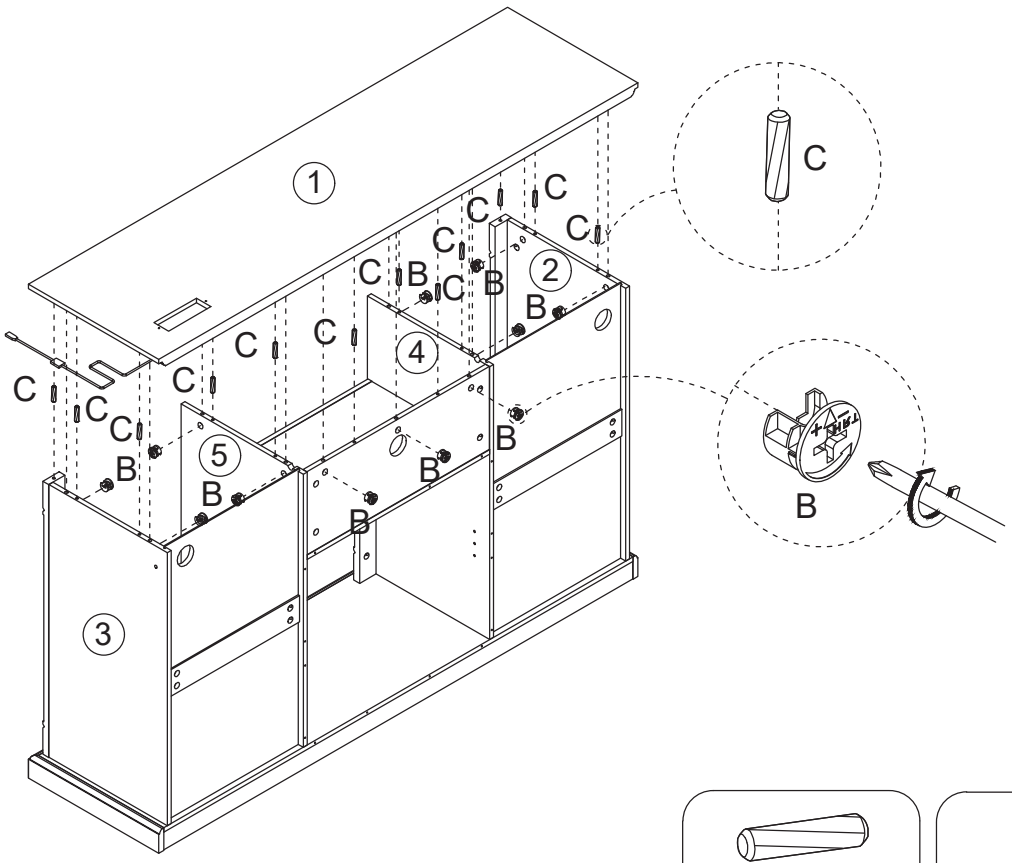



Ø6x30	
C	x 12

Ø15x9.5	
B	x 11


STEP 27


PF078

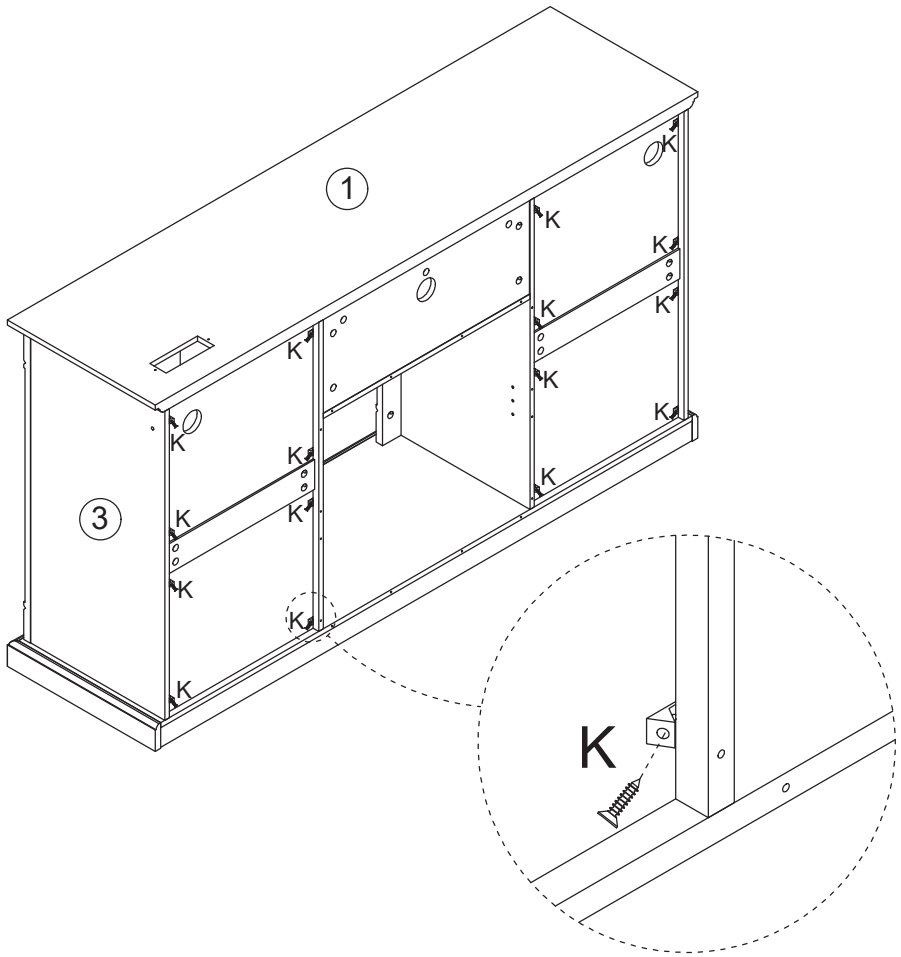

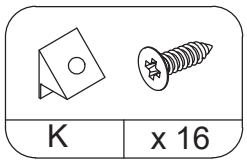



STEP 28

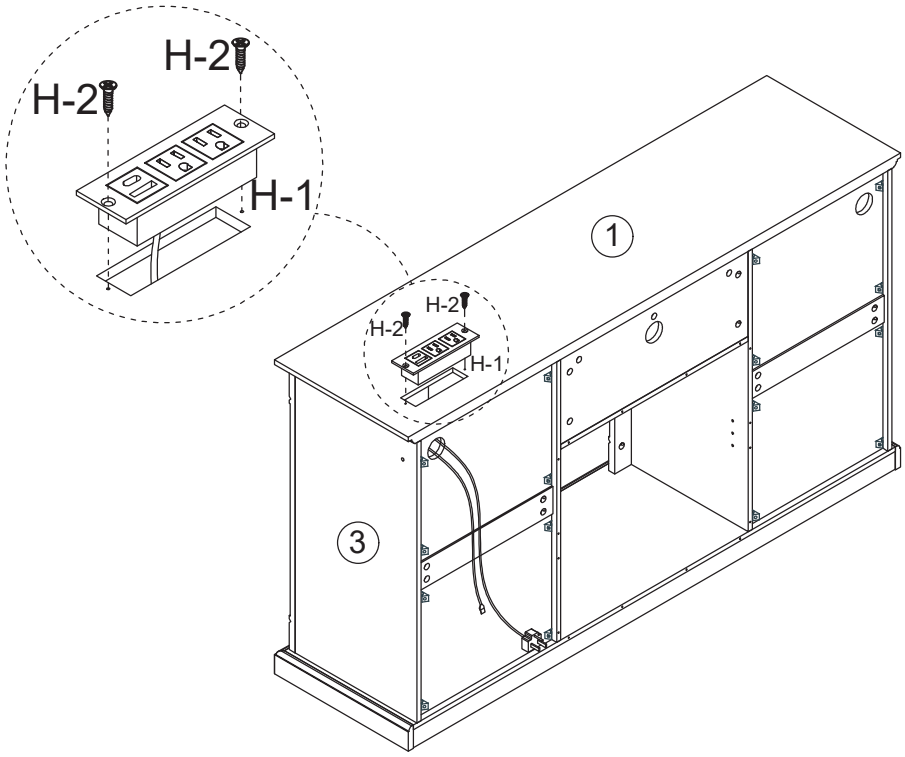

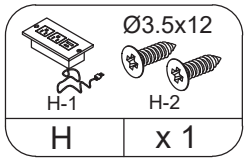


STEP 29

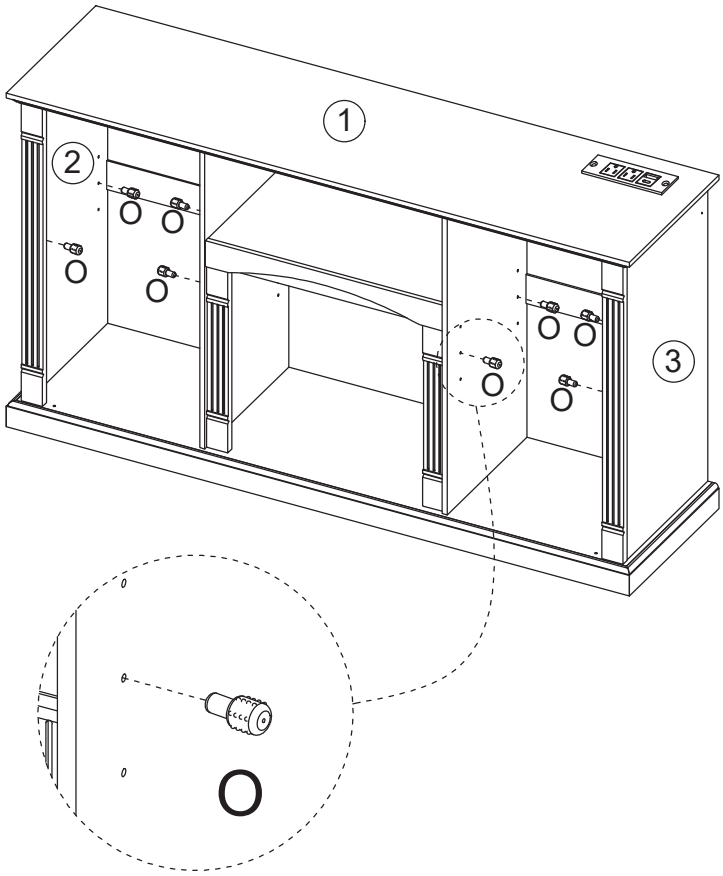

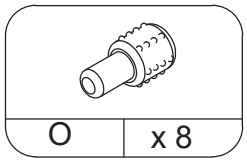


STEP 30

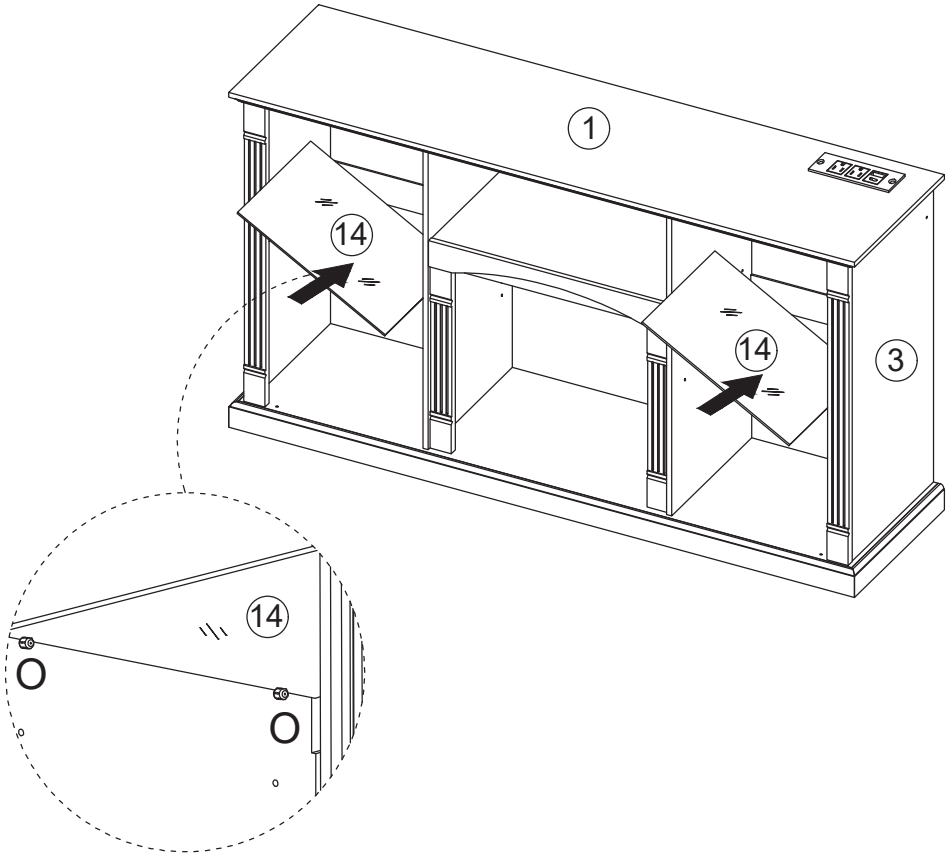


STEP 31

PF078


If you are assembling the “ELECTRIC FIREPLACE”, do not install this step.

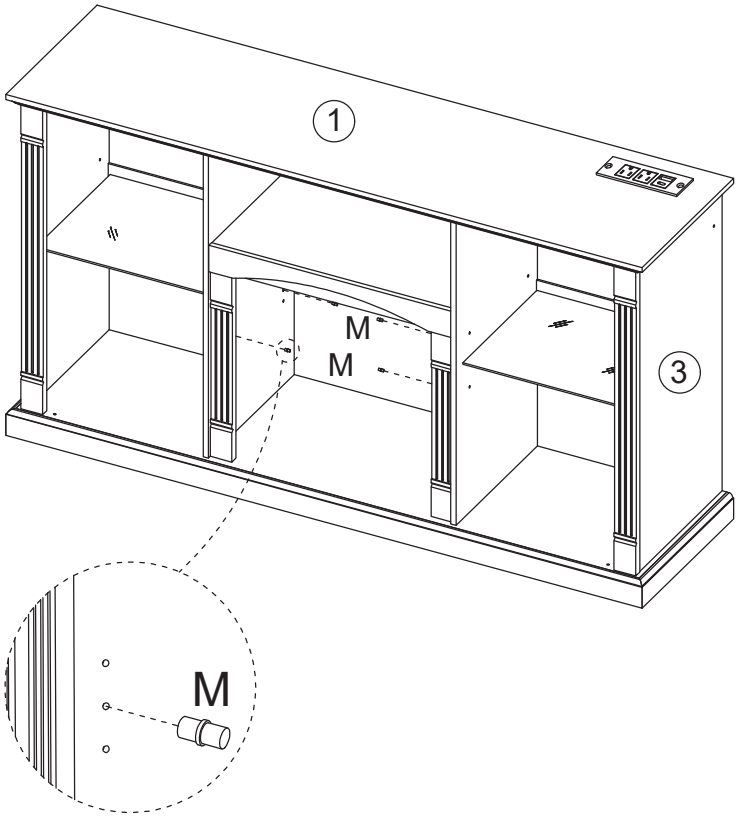

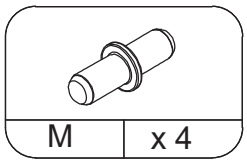

STEP 32


If you are assembling the “ELECTRIC FIREPLACE”, do not install this step.

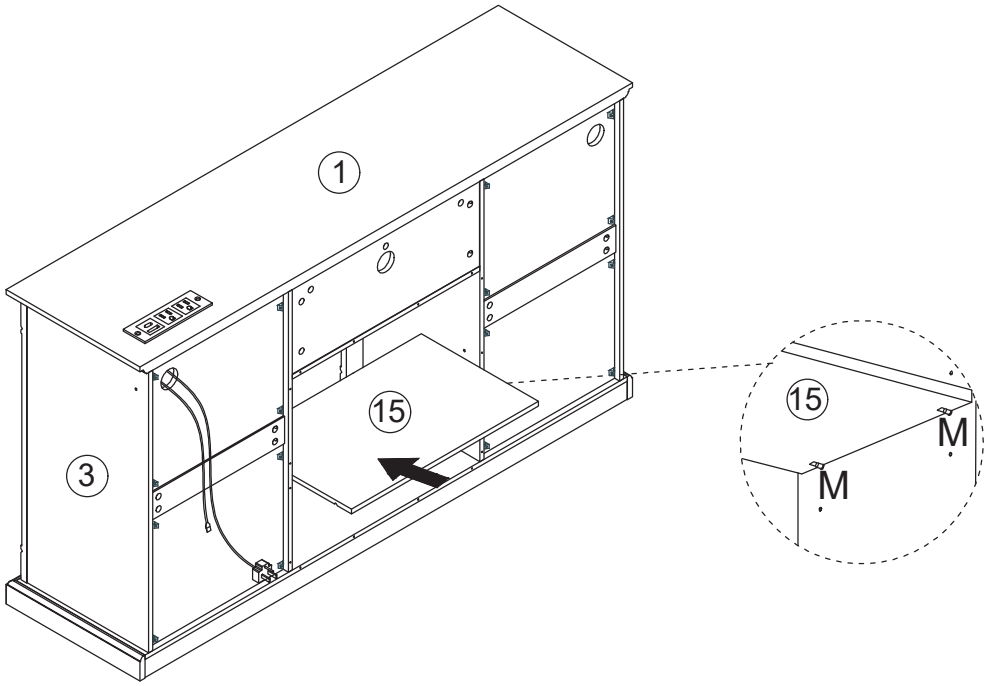


STEP 33


PF078


If you are assembling the “ELECTRIC FIREPLACE”, do not install this step.

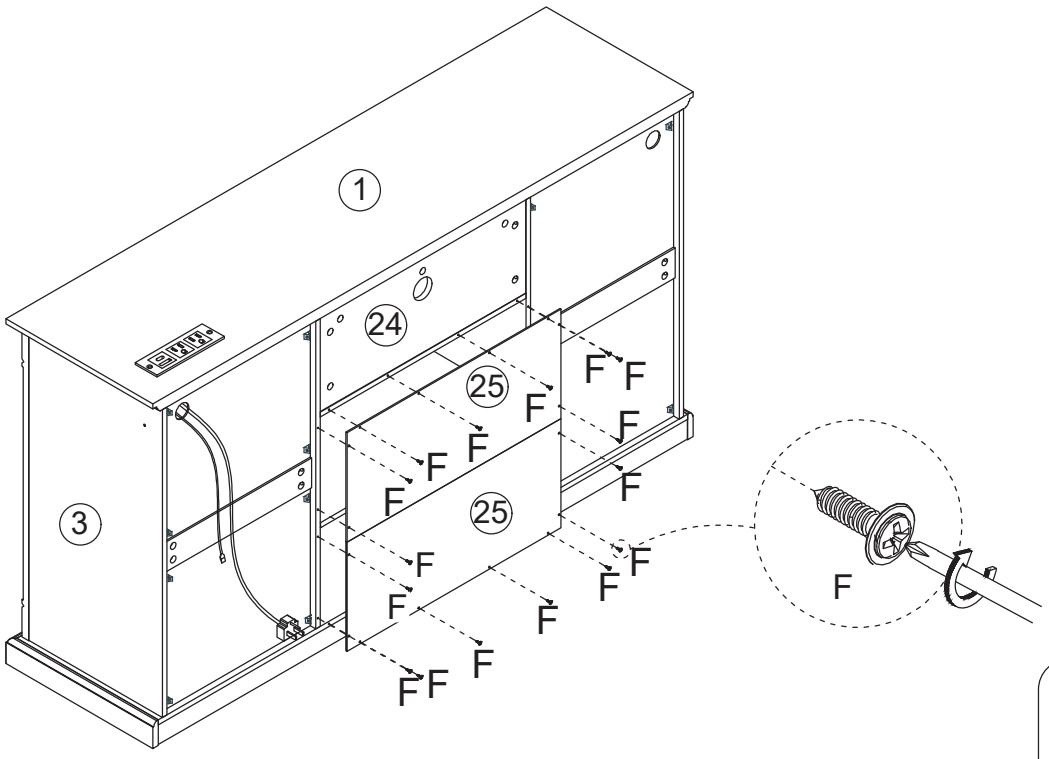


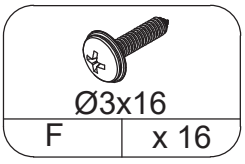

STEP 34

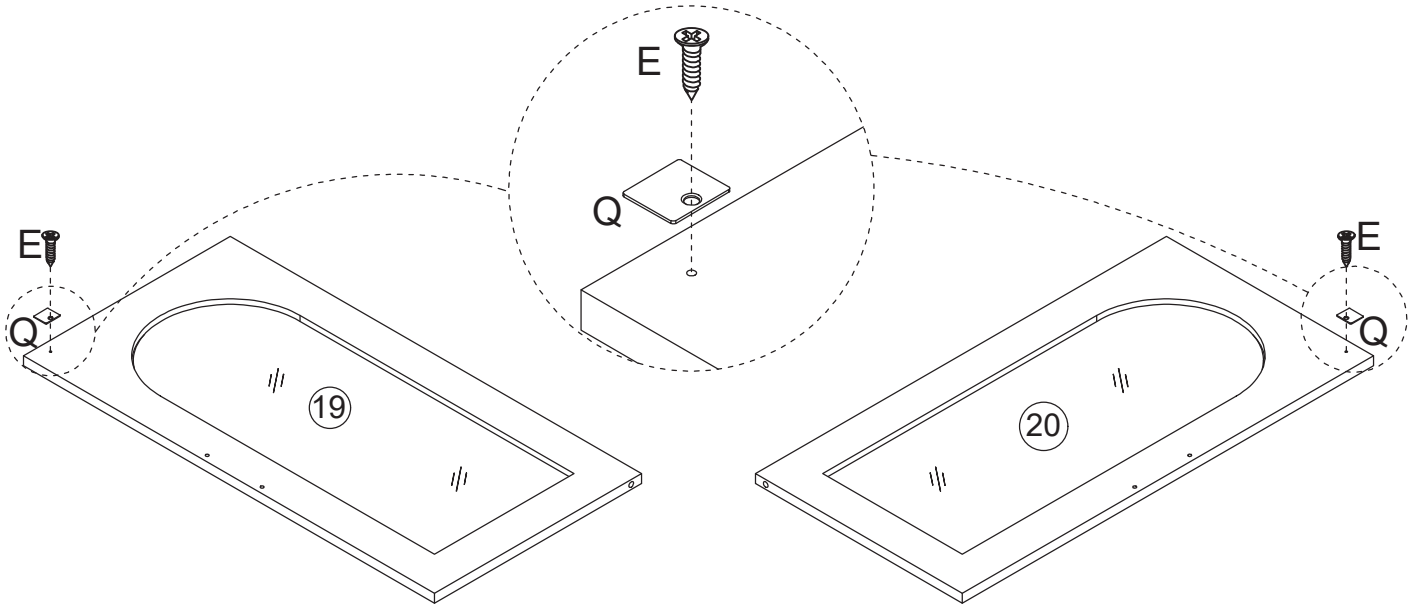


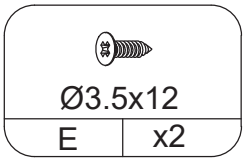

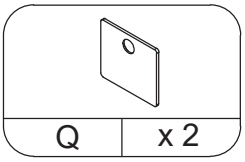



STEP 35

PF078

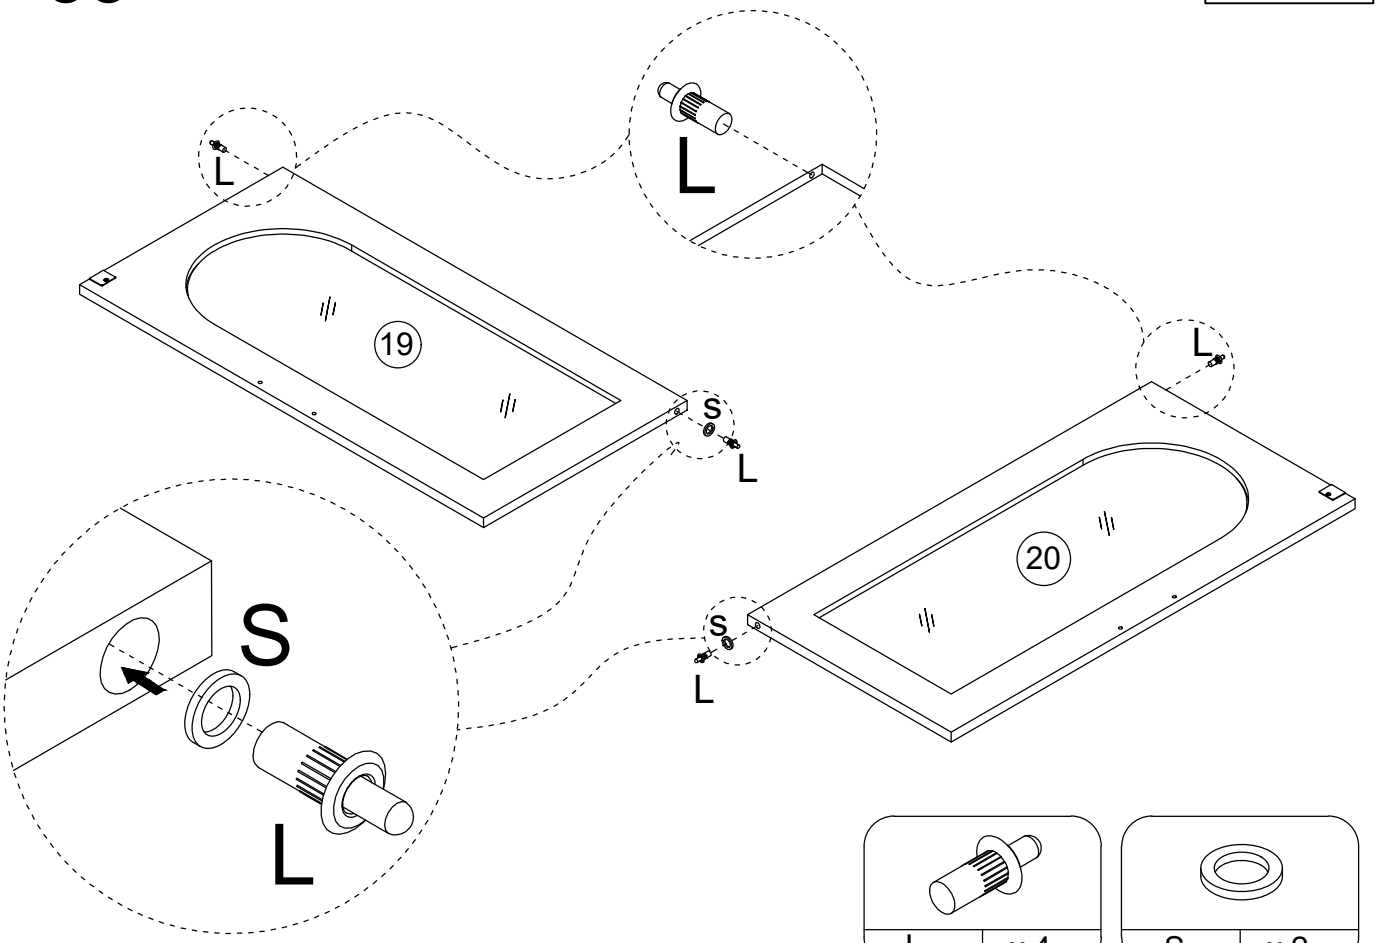


STEP 36

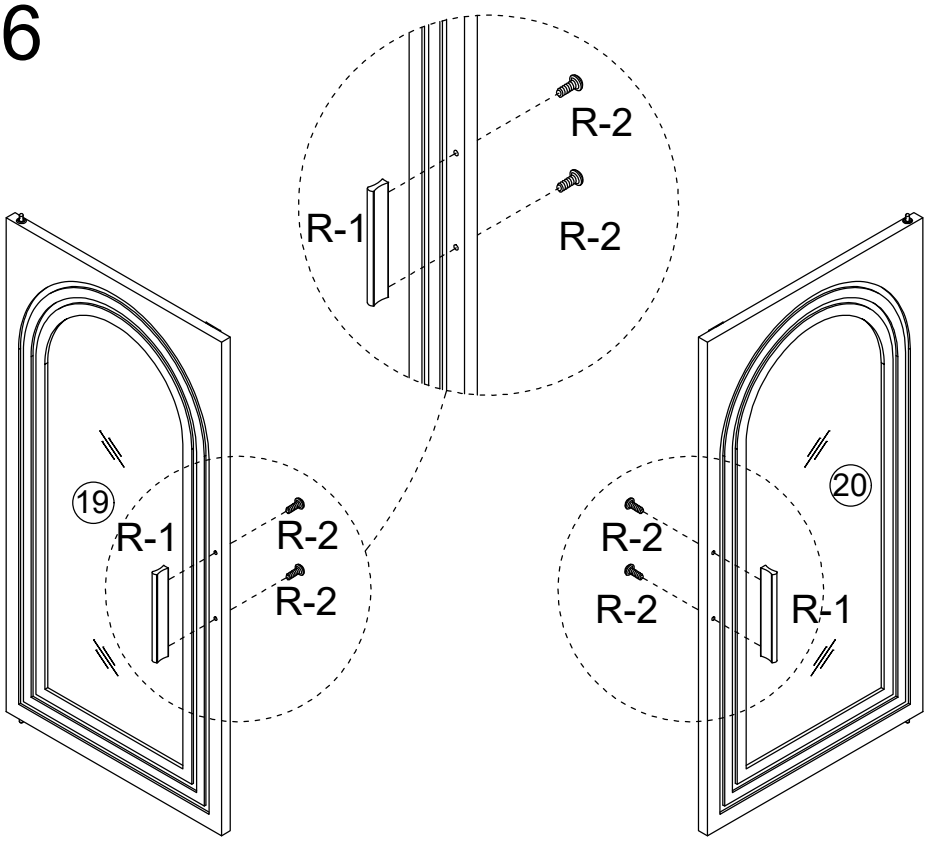


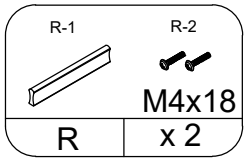


STEP 37

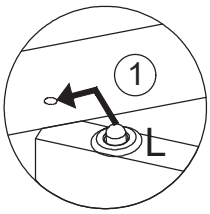


Step 3

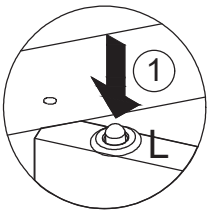


Step 2

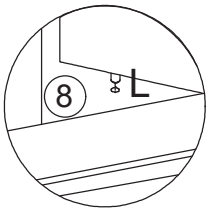



Step 1

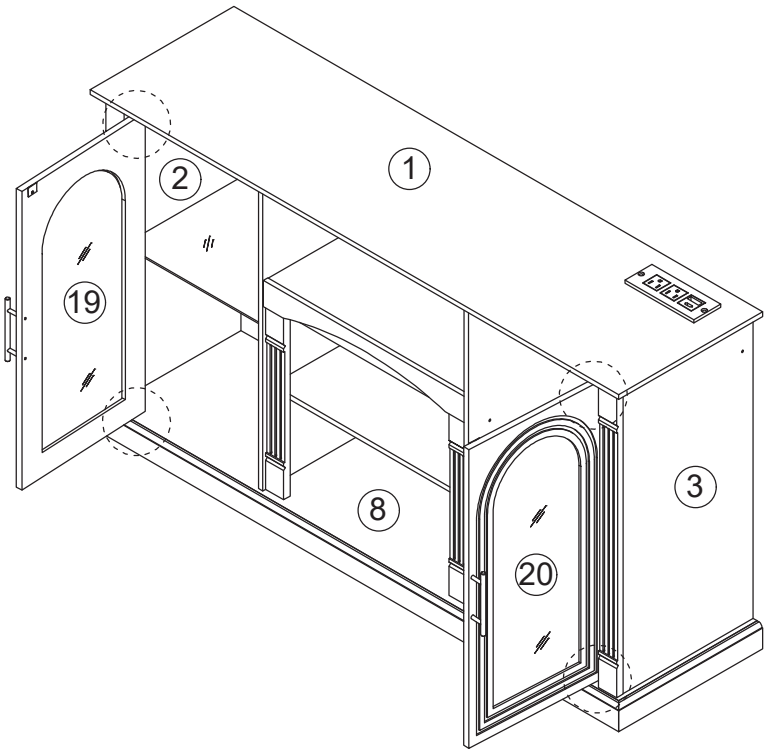


STEP 38

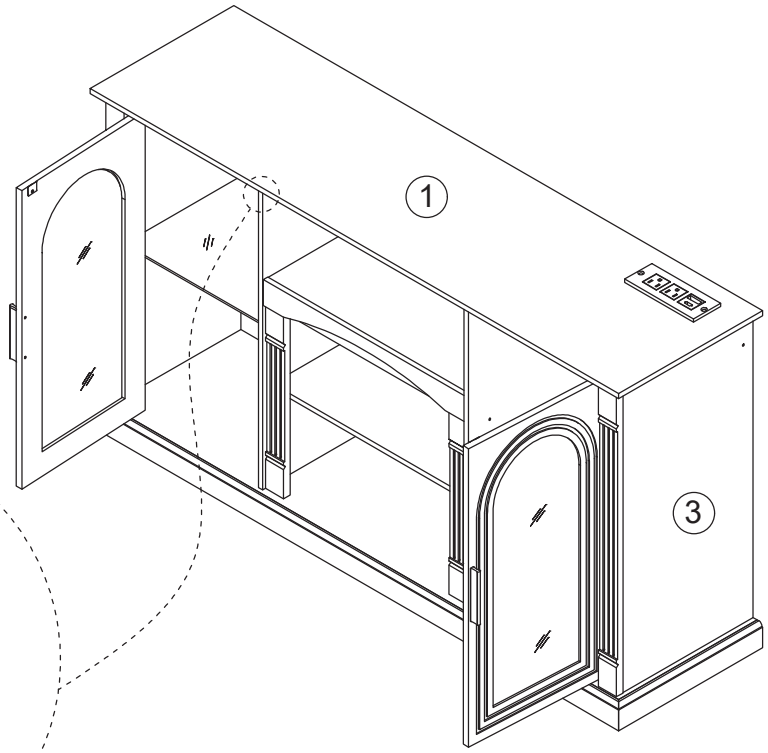


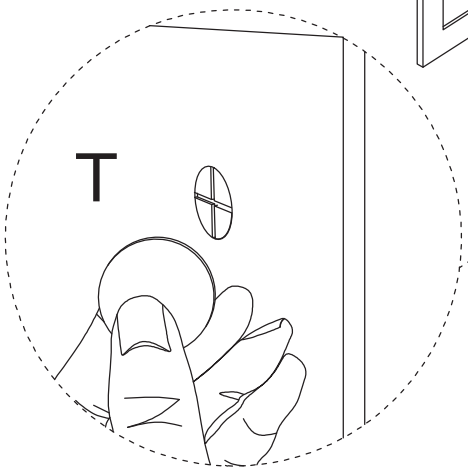

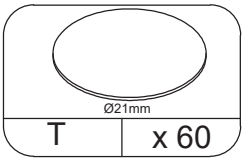



STEP 39

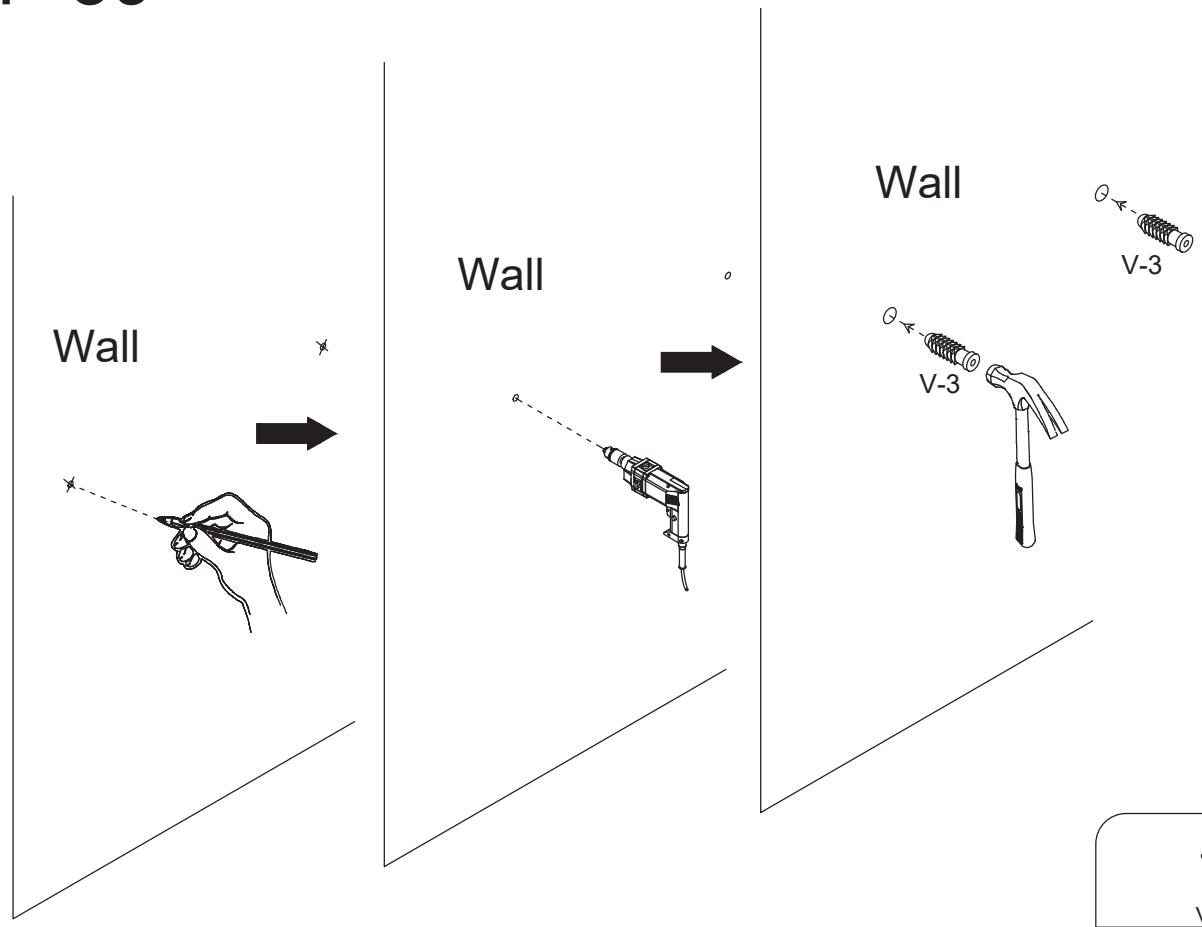

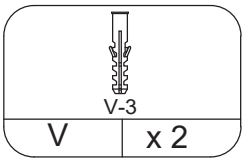

STEP 40

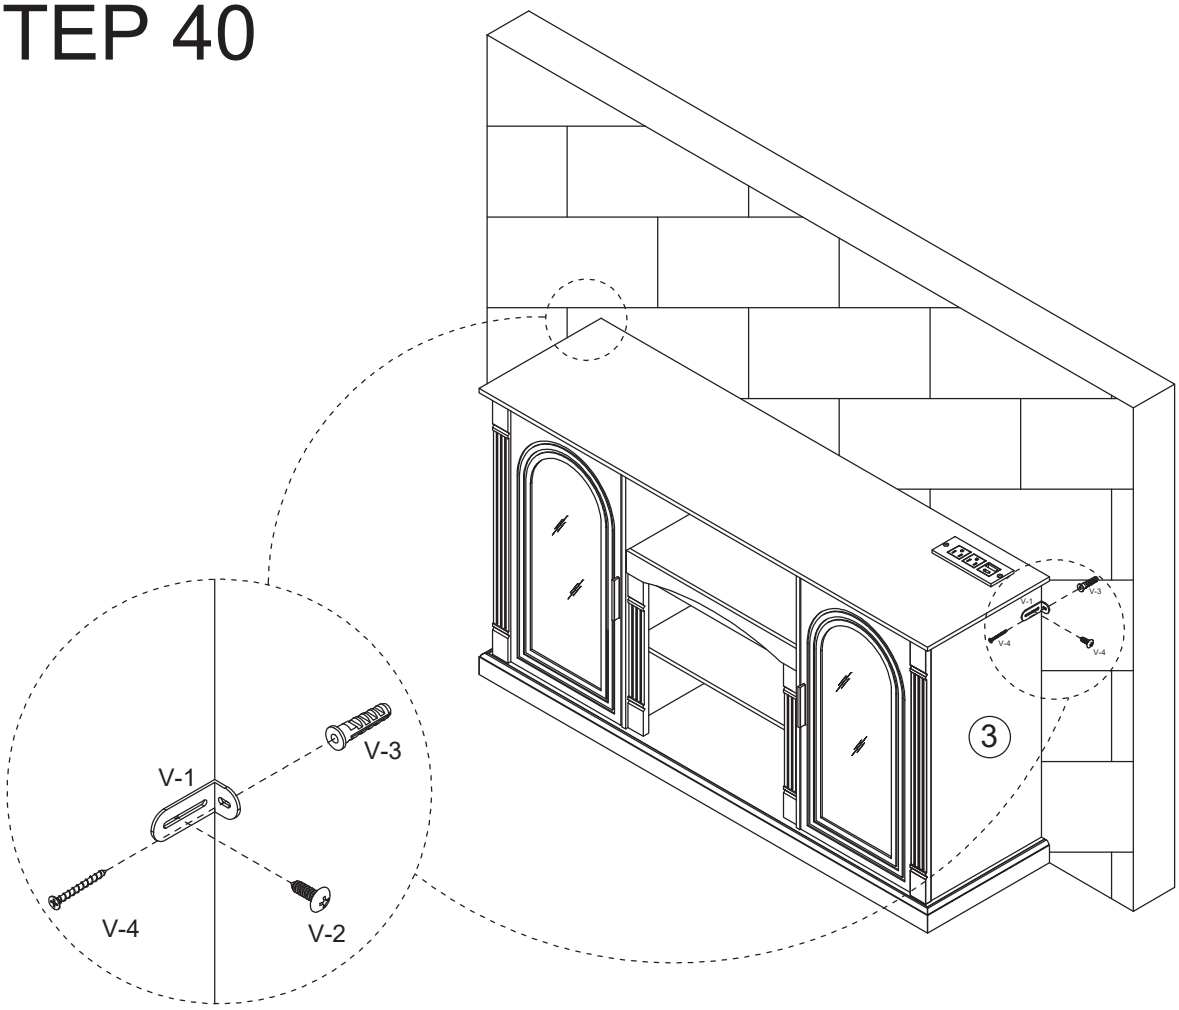


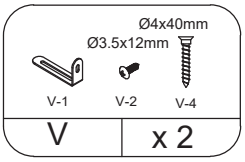


STEP 40

PF078

If you are assembling the "ELECTRIC FIREPLACE,"
do not assemble Step 31 to Step 33.

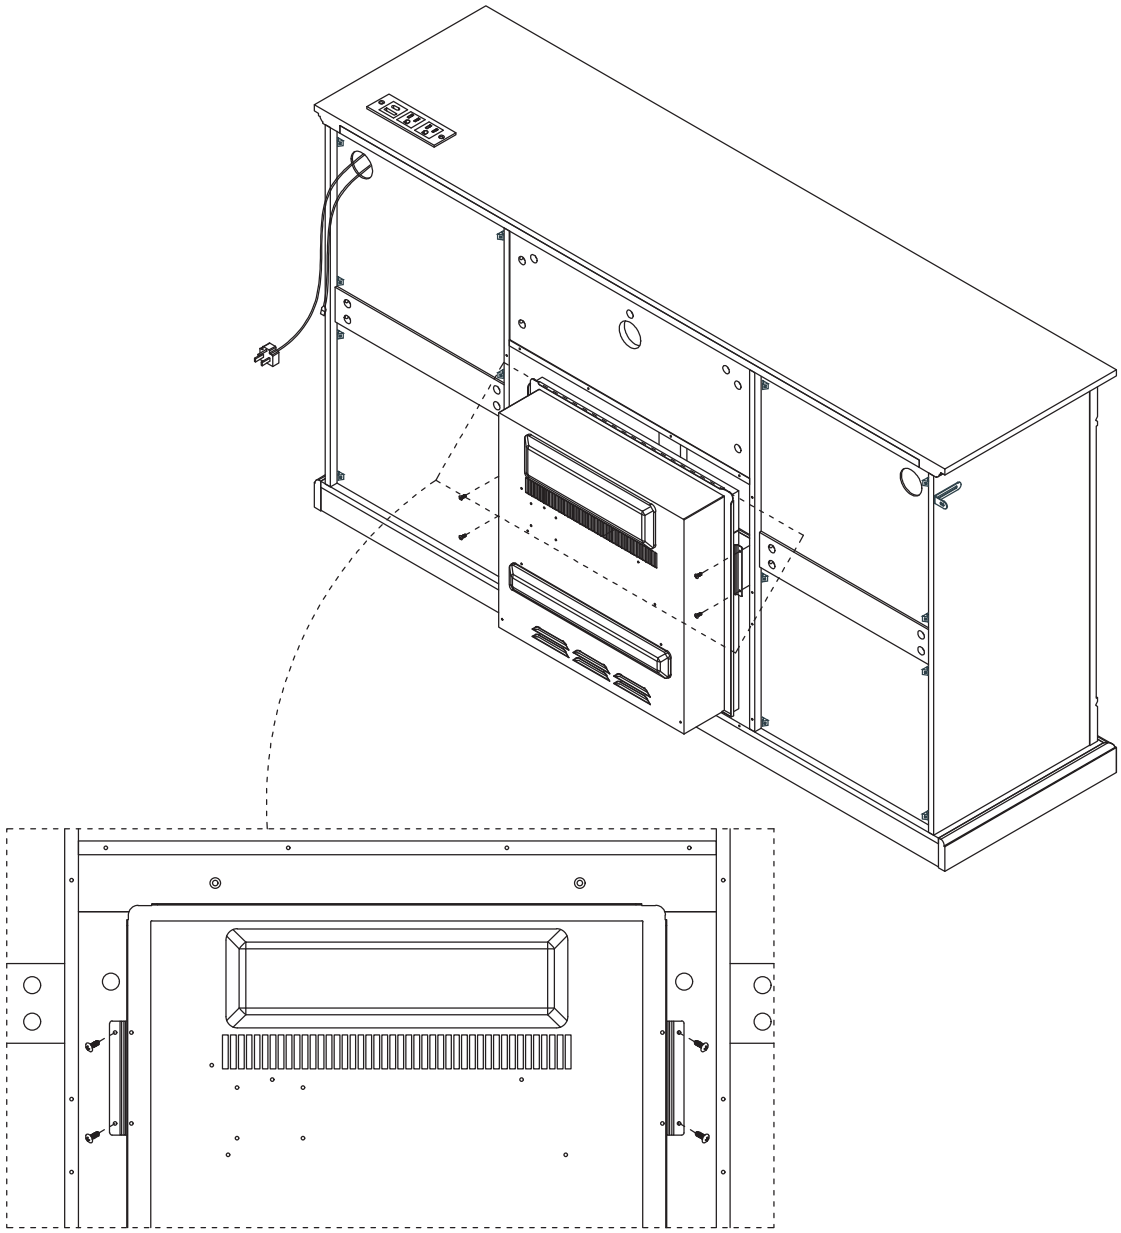

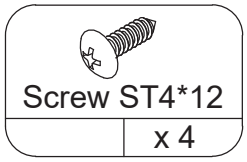

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning