


INSTALLATION INSTRUCTIONS

12x16 ft Storage Shed

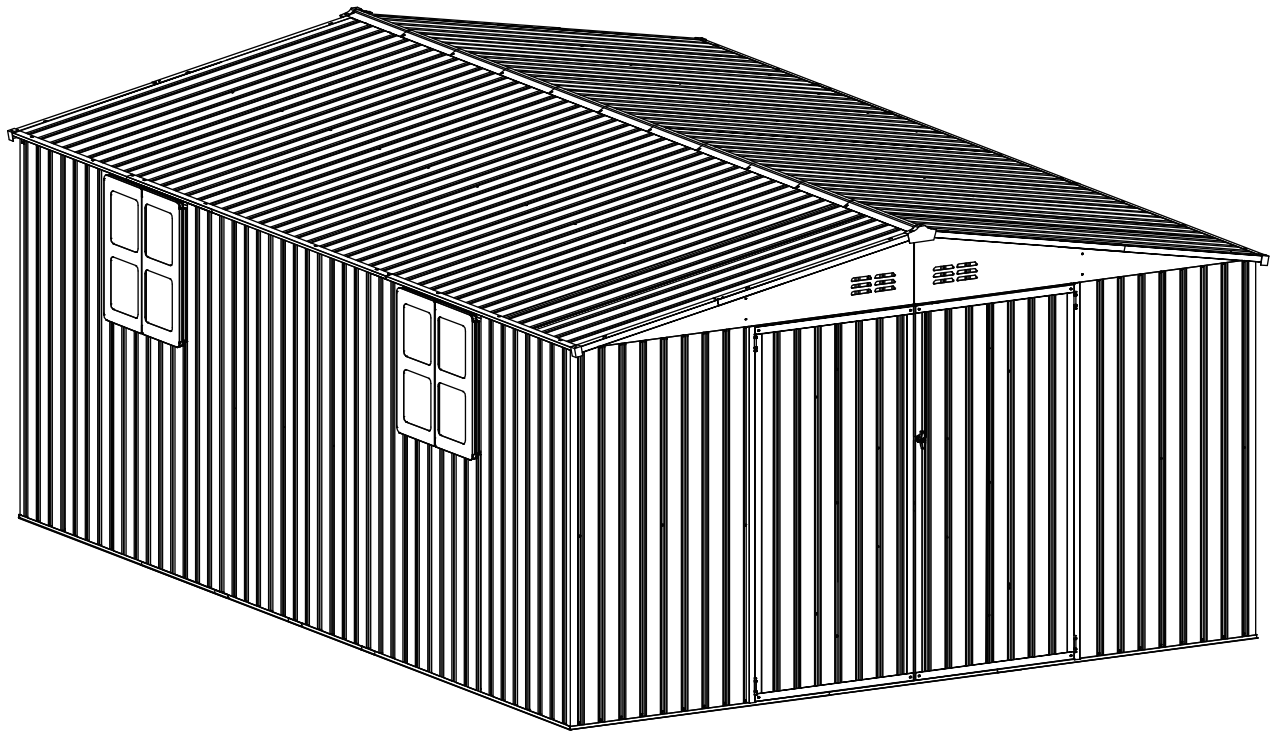


VIWATCustomerService@gmail.com

After opening the package, if you notice a slight deformation in the wall panels, there's no need for concern. Our material is flexible and can be manually bent back into place.

Recommended to wear gloves to avoid scratches.

Please read the instructions COMPLETELY before assembly.

REQUIRED TOOLS

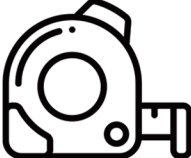Tools			
	Gloves	Table	Ladder
			
	Power drill	Screw drive	Tape Measure



ASSEMBLY TIPS

1. Clear a working area to allow access on all four sides. A raised work surface will make assembly easier. It is easier to install the wall panel on the table.
2. All parts are identified, so when working through the instructions page by page, the diagrams show where each part is positioned.
3. Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands.
4. Please keep children away from your construction site.
5. Most assembly can be completed by one person, but assistance may be needed when you reach the erection stage.
6. Please note: Some local government authorities have rules & regulations on shed installation, and you may need approval to erect this shed.


ASSEMBLY STEPS

1. Unpack all components from the carton and lay them out beside your work area. Check parts against the parts list.
2. Work through the assembly instructions page by page.
3. Once assembly is completed, place the shed in position and fix the anchor to the ground.
4. Clean up all metal pieces and screws.



parts list(A)







PART	NO.	QTY.
	W5-D	24
	W5-CD	4
	W3-D	2
	TCH	4

parts list(B)


PART	NO.	QTY.
	F1218-7L	2
	F1218-7M	18
	F1218-7R	2
	Y1223-7MM	2
	W5-G	2
	W3-G	2
	W5-KDA	2
	W4-HL	1
	W4-HR	1
	W5-D	3





parts list(c)



PART	NO.	QTY.
	F1218-1L	2
	K1012-1M	2
	F1218-1R	2
	K1014-2L	2
	F1217-2M	2
	K1014-2R	2
	F1218-3L	3
	F1218-3M	3
	F1218-3R	3
	K1014-4L	2
	F1217-4M	2
	K1014-4R	2
	F1218-5L	2
	F1218-5R	2

PART	NO.	QTY.
	F1612-16	2
	F1612-17	4
	F1612-18	8
	F1612-19	4
	UAJ	2
	DAK	2
	DLAK	1
	DRAK	1
	DDAK	4
	DXF8	4
	DXF9	2
	C3	4
	K1012-11	4
	TCH3	2


parts list(c)

	K1014-6L	4
	K1014-6R	4
	F1612-6M	8
	F1612-6MM	4
	K1218-11L	2
	F1612-11M	2
	K1218-11R	2
	F1218-12L	1
	F1218-12R	1
	K1012-8	8
	F1217-9L	2
	F1217-9M	2
	F1217-9R	2
	F1612-10L	1
	F1612-10M	9
	F1612-10R	1
	F1612-14	4
	F1612-15	4


	TCH5	2
	TCH6	2
	TCH7	2
	GC	4
	GE	2
	T-F	4
	DC	2
	C2	8
	DJ	4
	F1	982
	F2	108
	F4	4
	V2	266
	GL	1
	SL	140
	M20	1
	ST	2

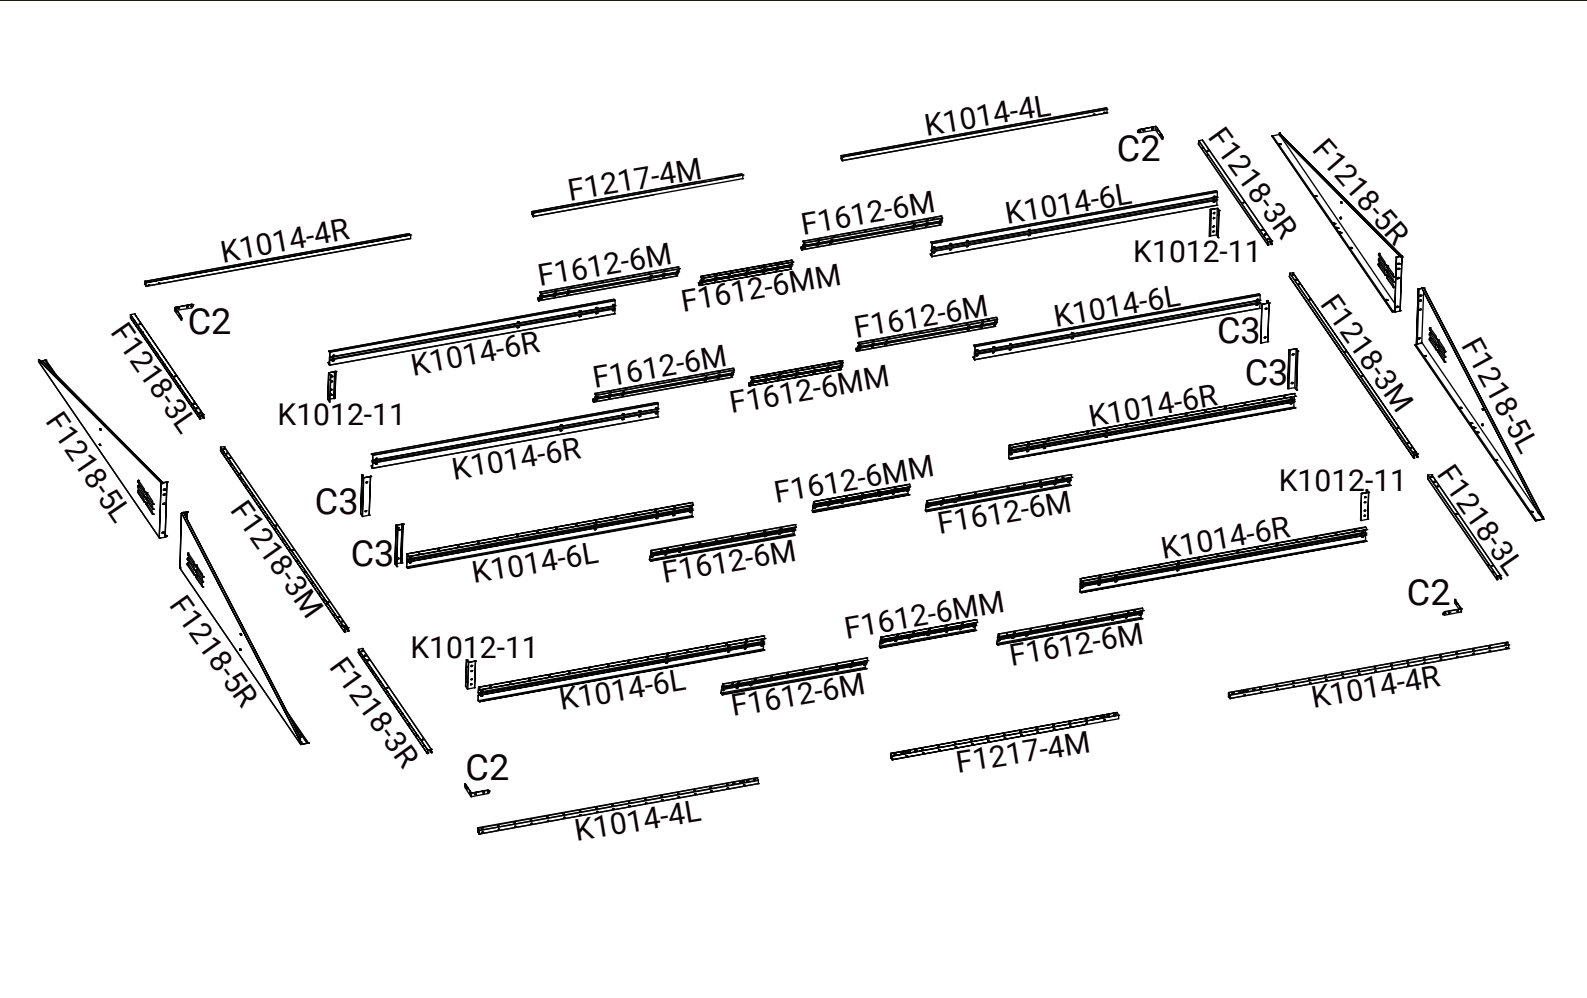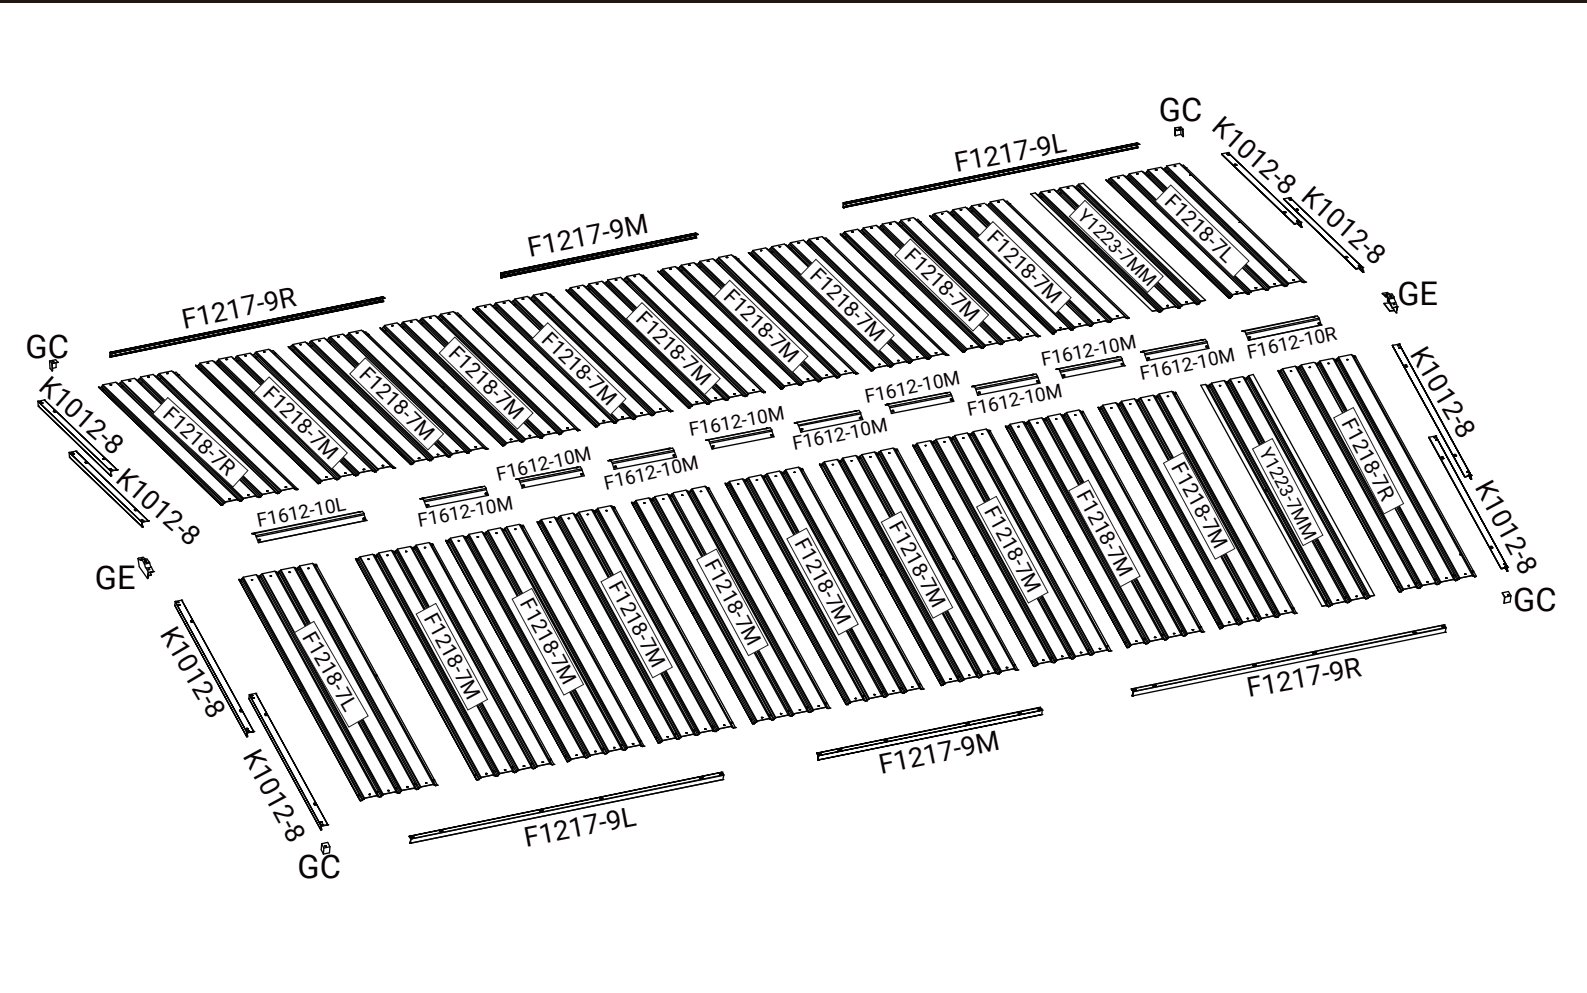



Door and Shed base

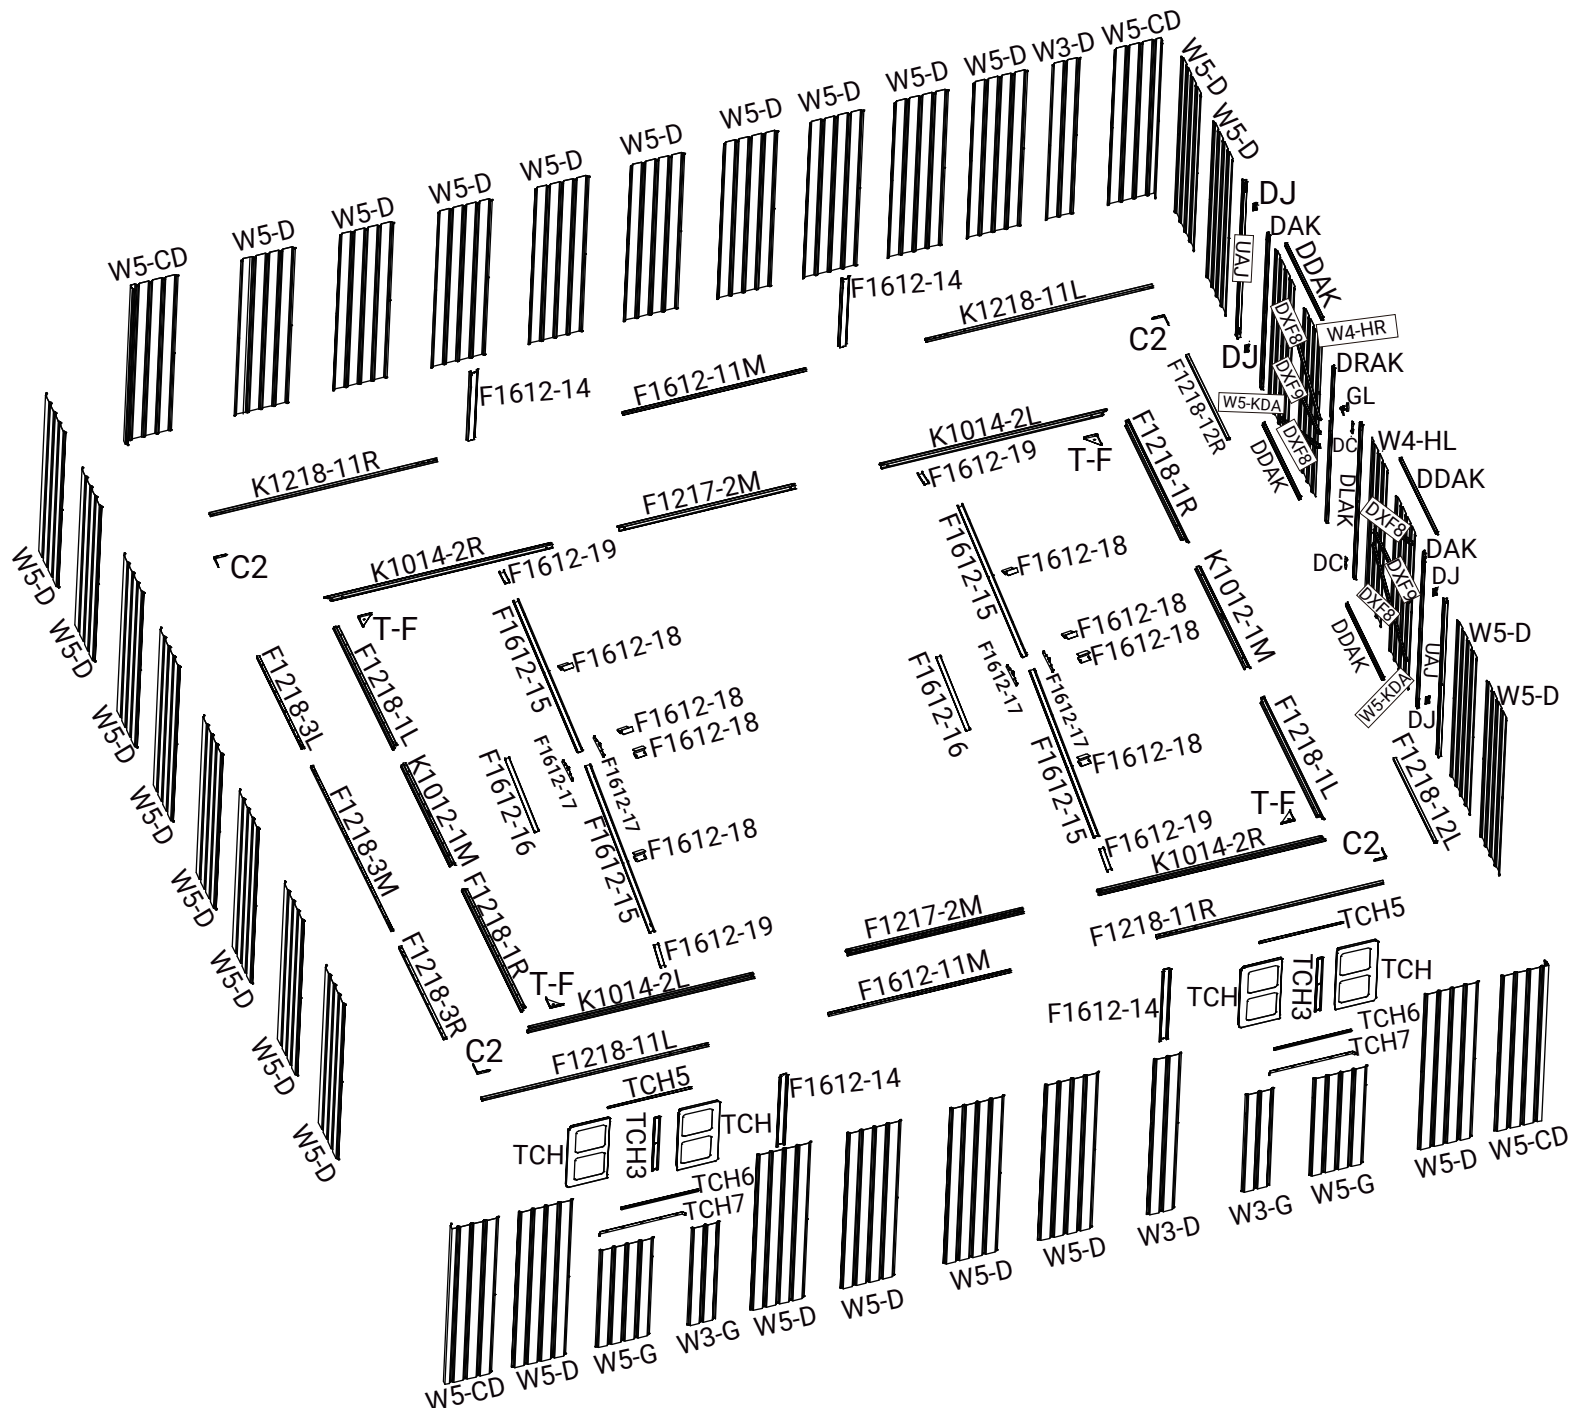

Sort By Splicing

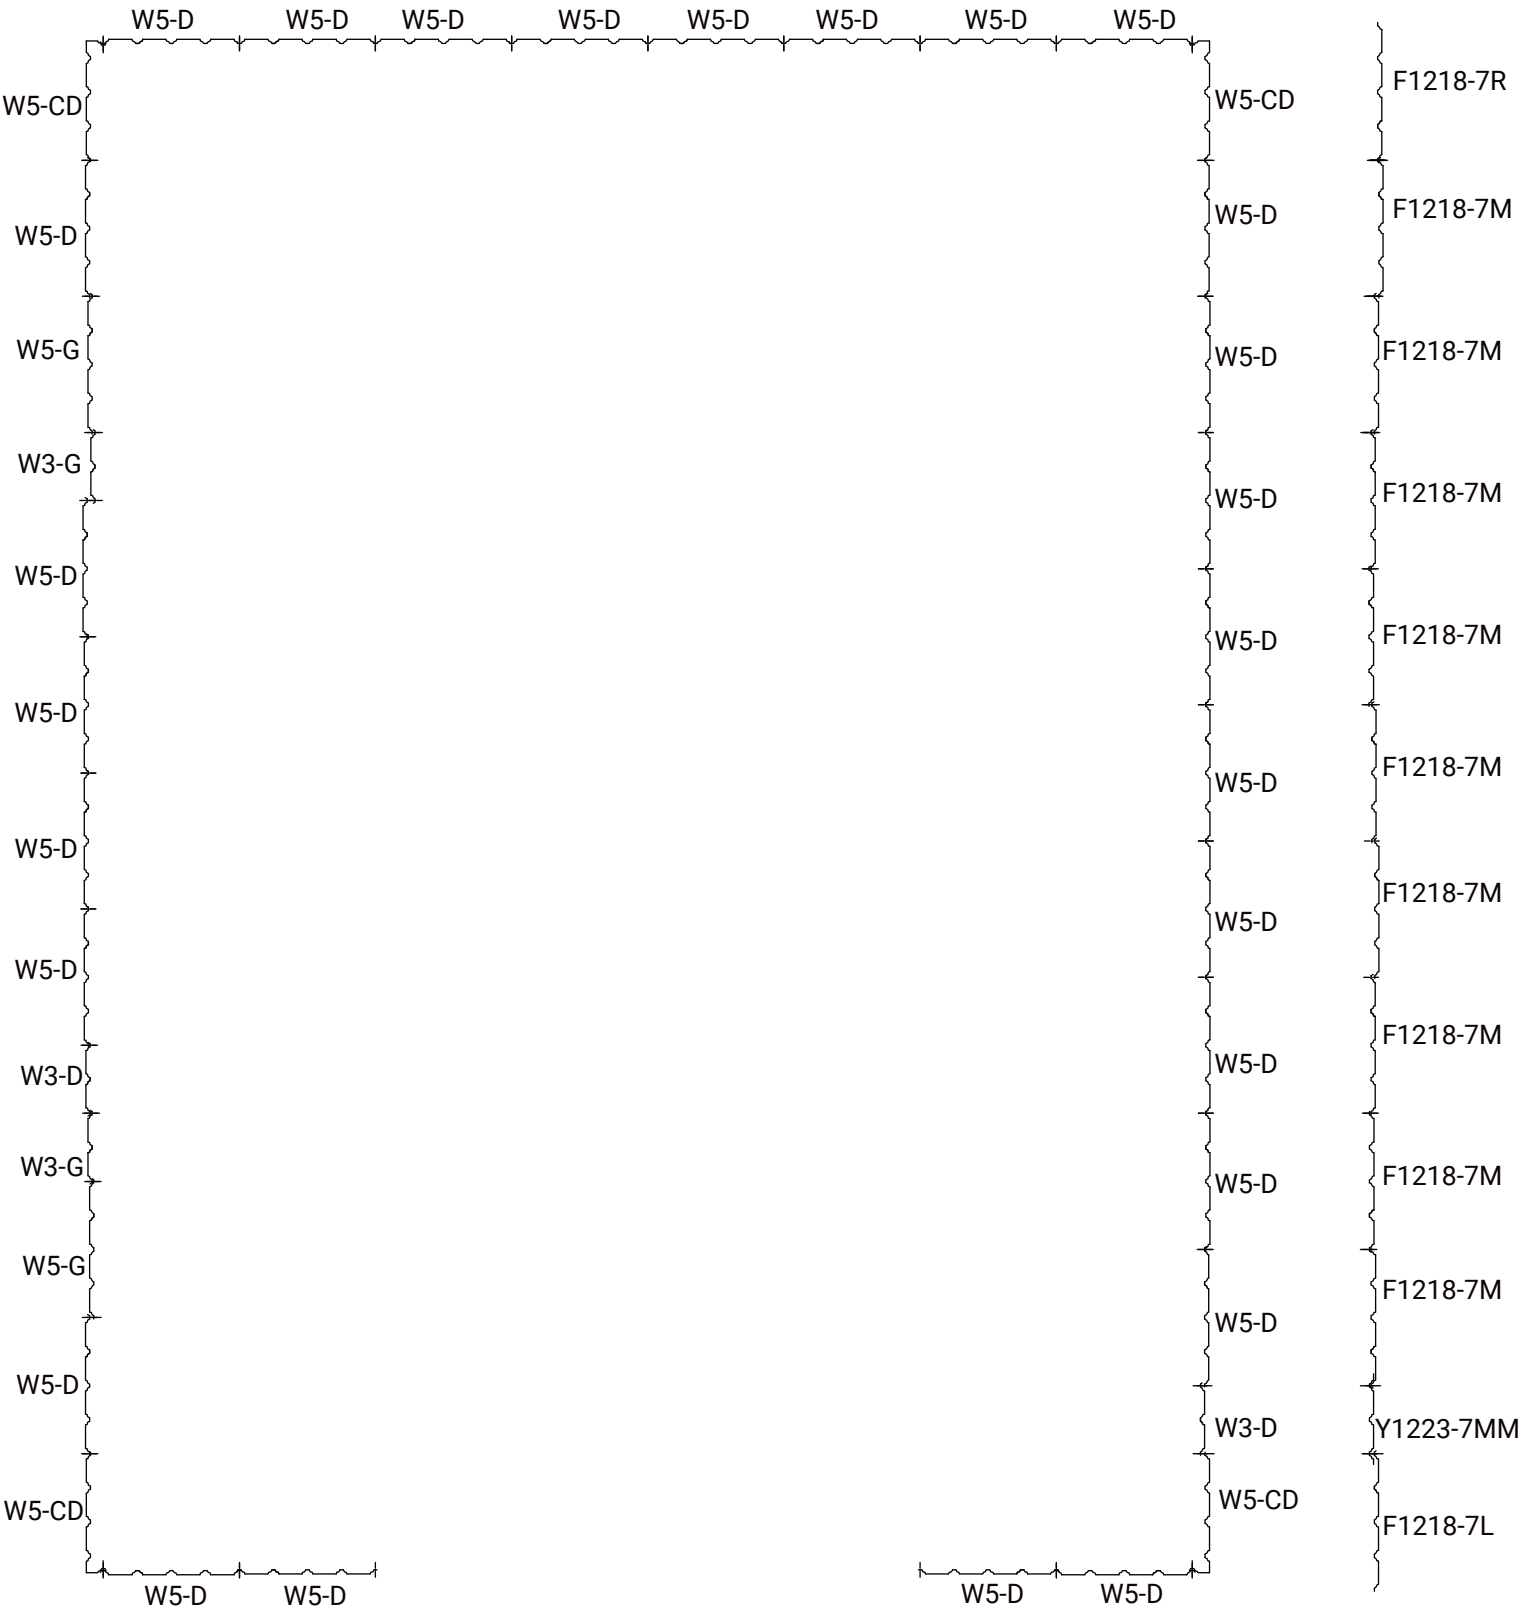


STEP 1

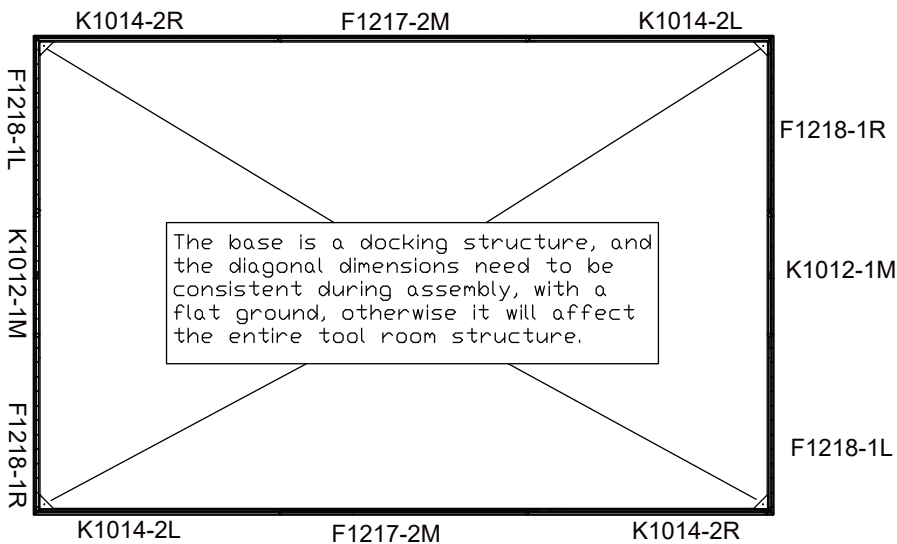
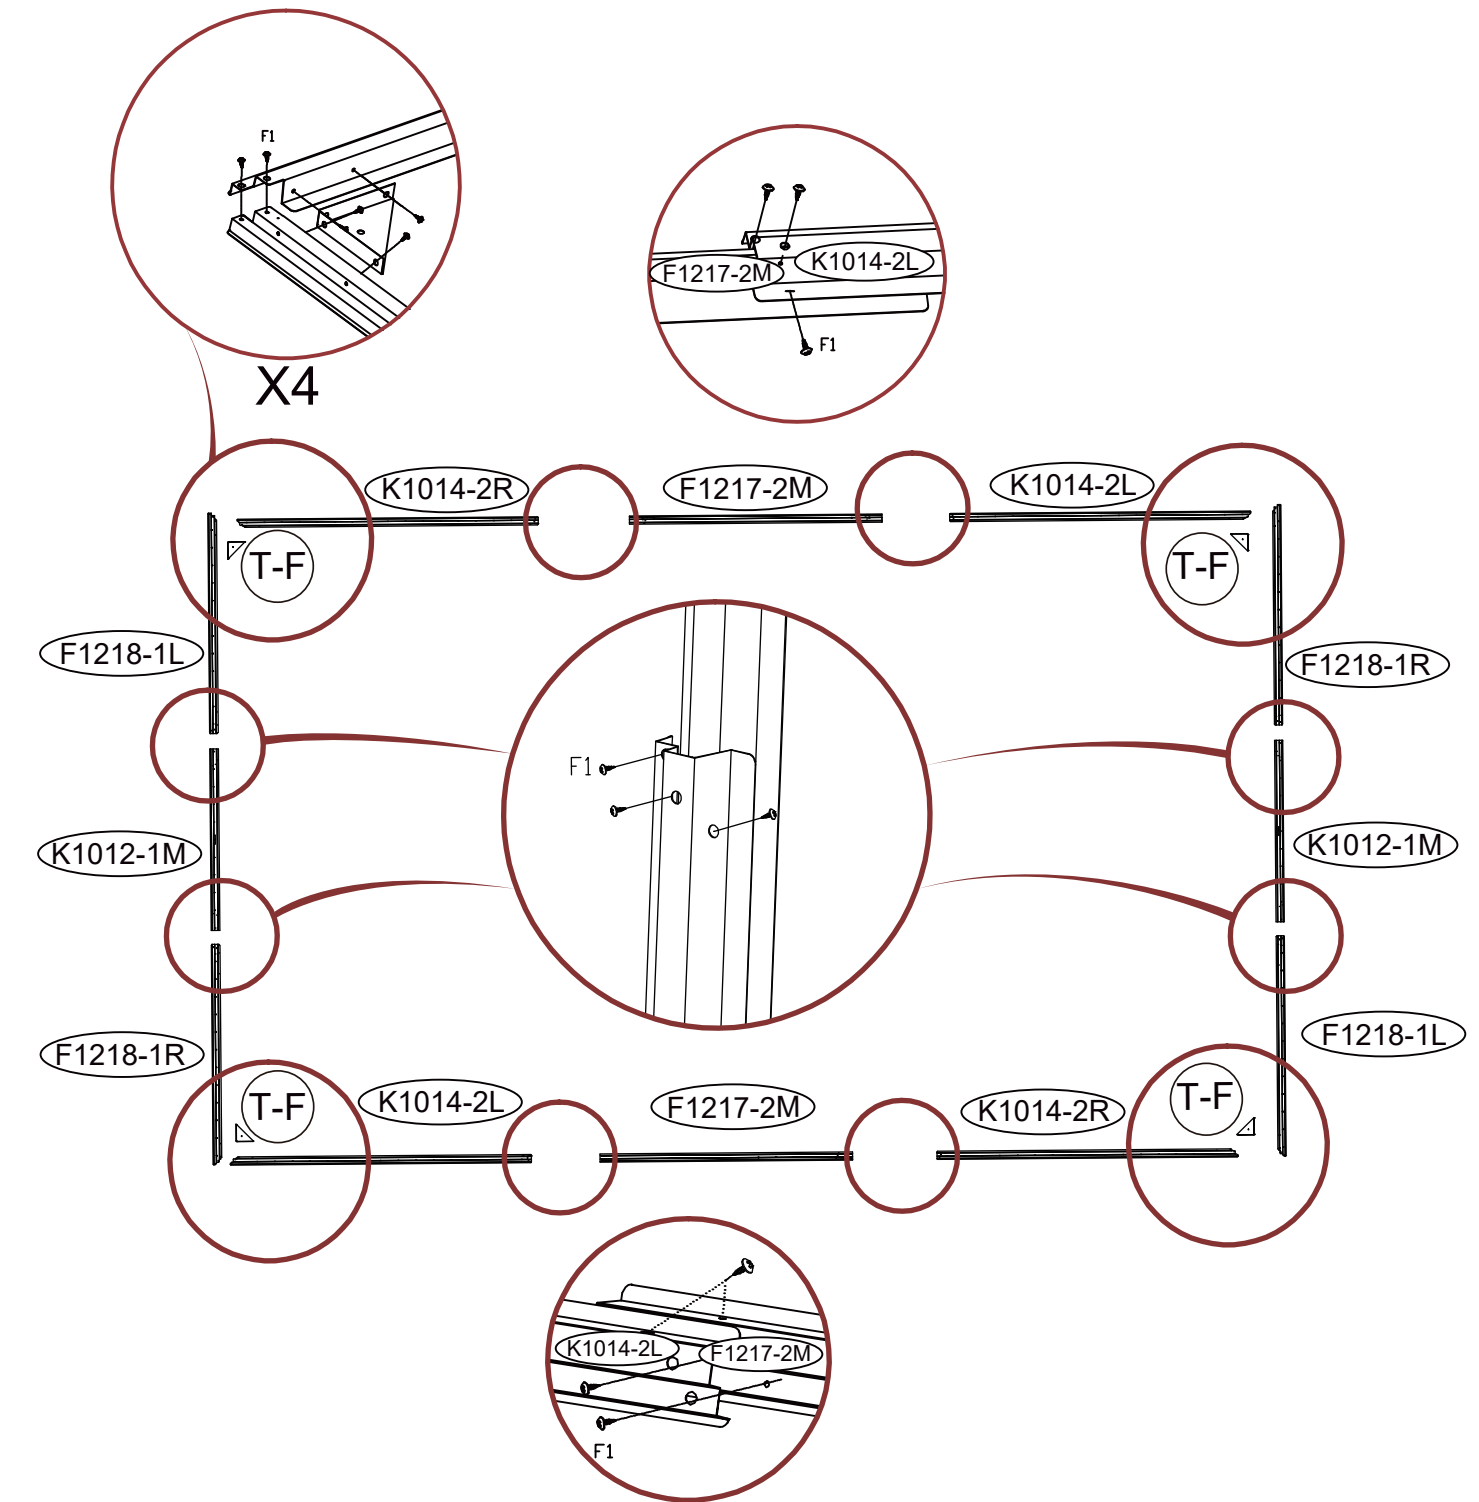


	F1	48
---	----	----

STEP 2


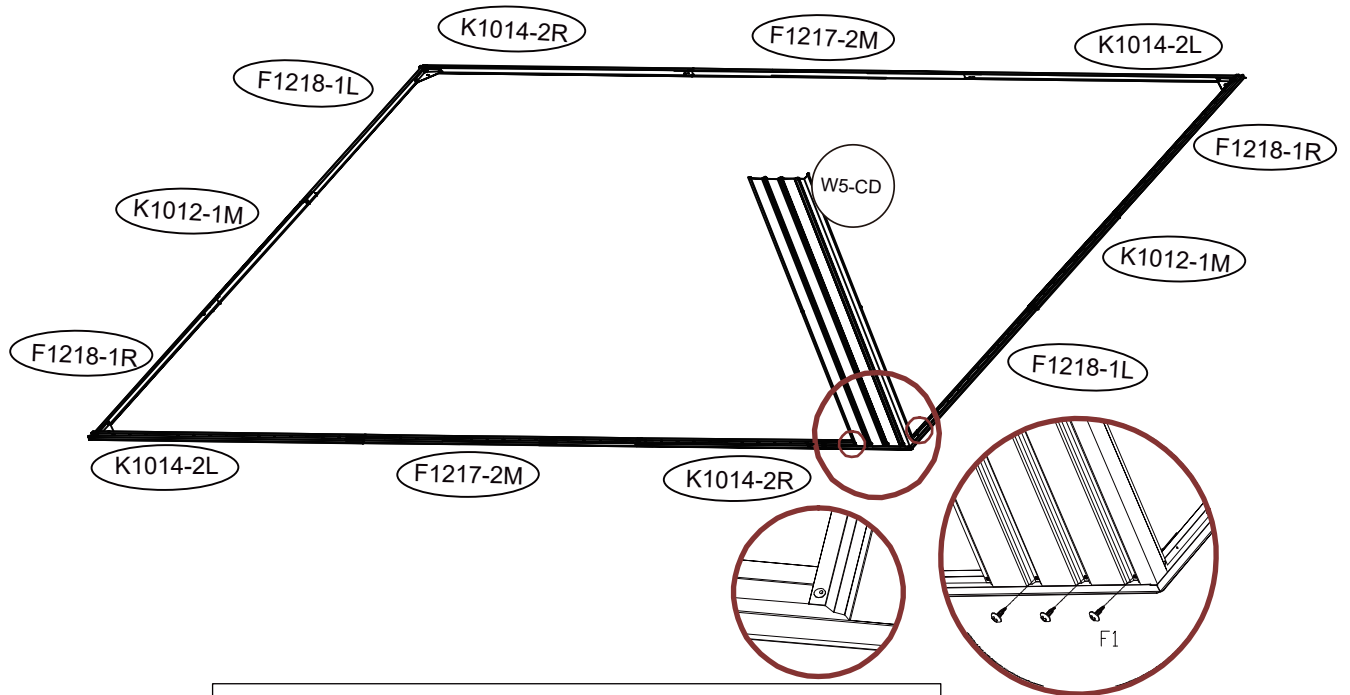




Do not add screws that indicated with an X in diagram These need to be left undone.

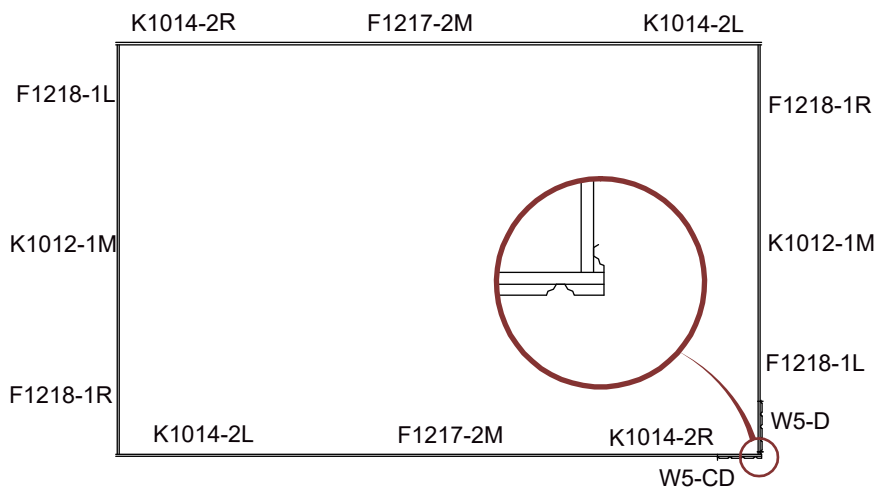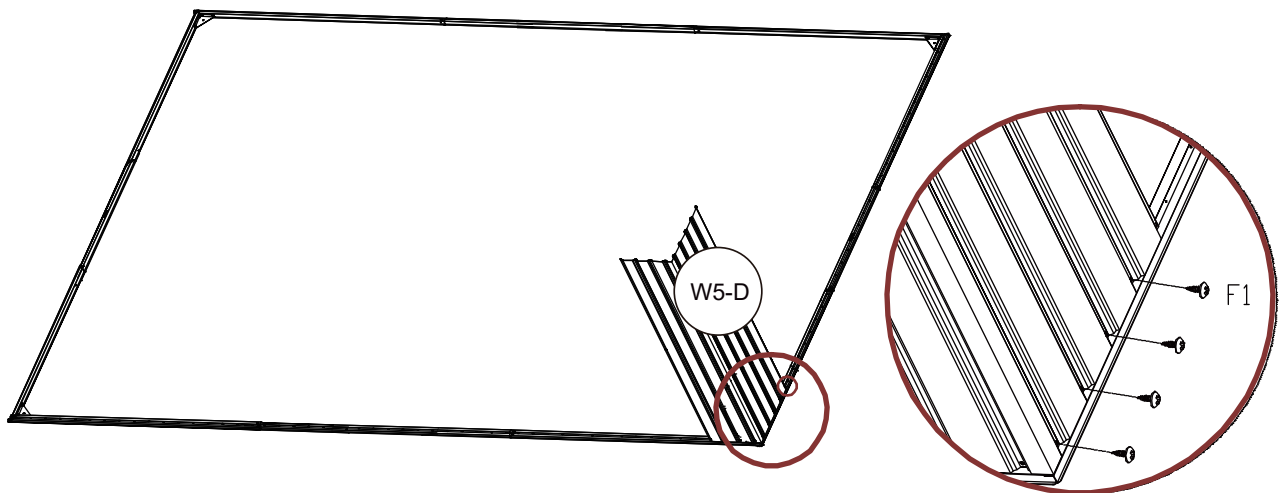

	F1	7
---	----	---


STEP 3



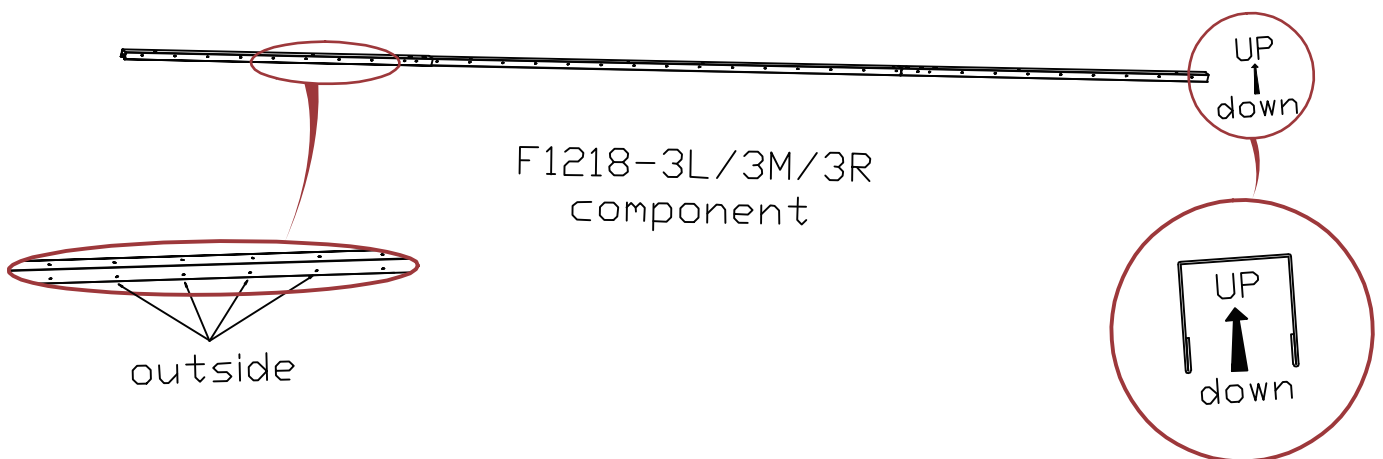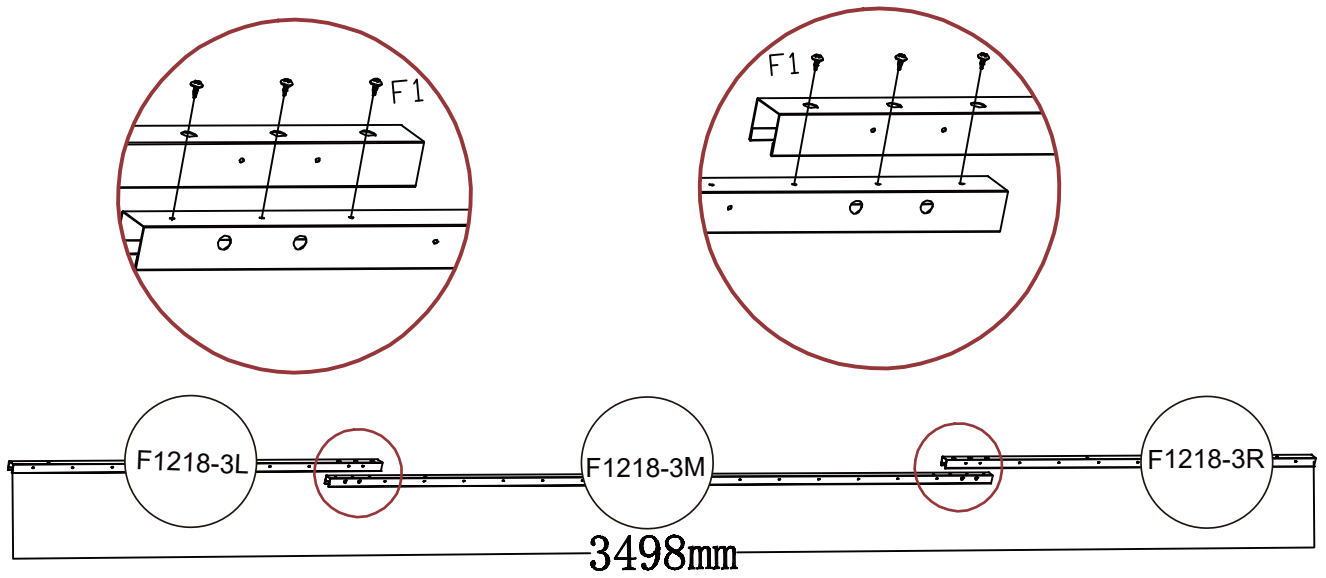


	F1	18
---	----	----

STEP 5

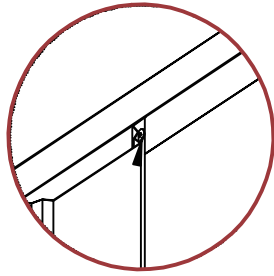




Do not add screws that are indicated with an X in diagram. These need to be left undone.

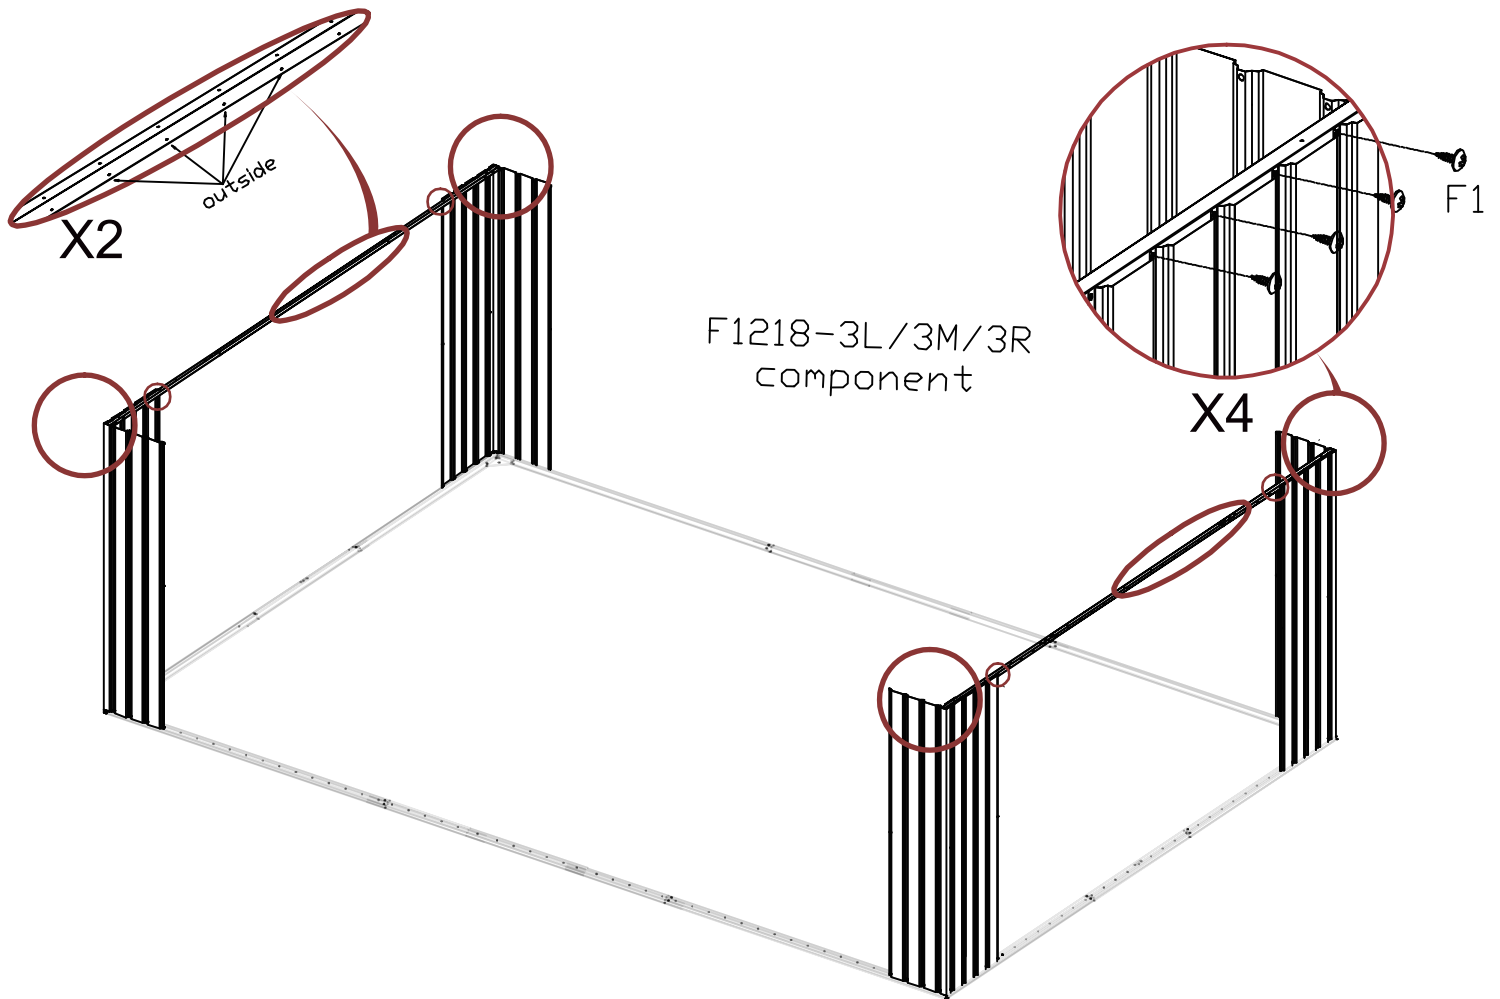


	F1	16
---	----	----

STEP 6

X2

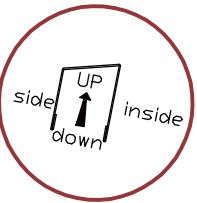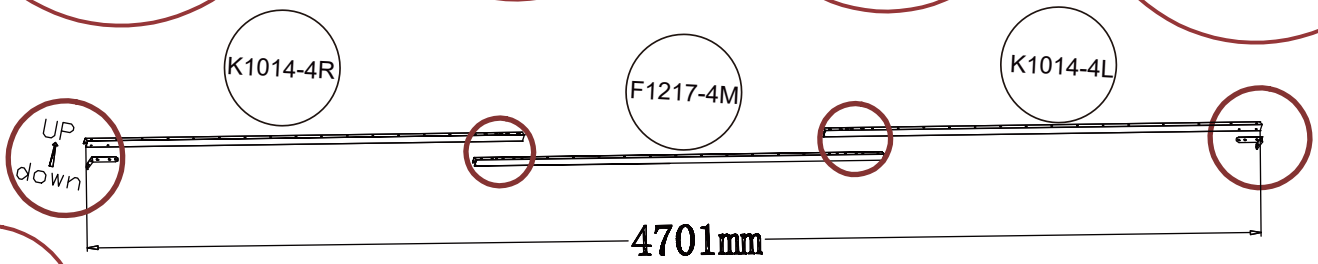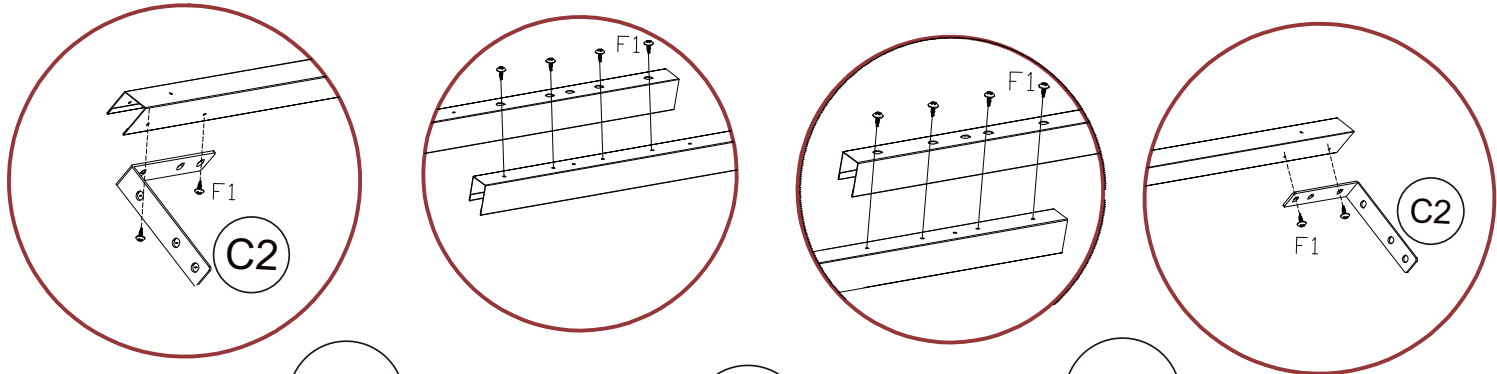


K1014-4L/F1217-4M/K1014-4R
component

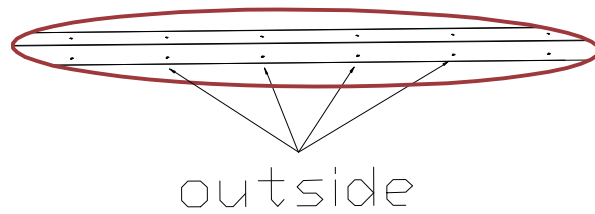


	F1	24
---	----	----

STEP 7


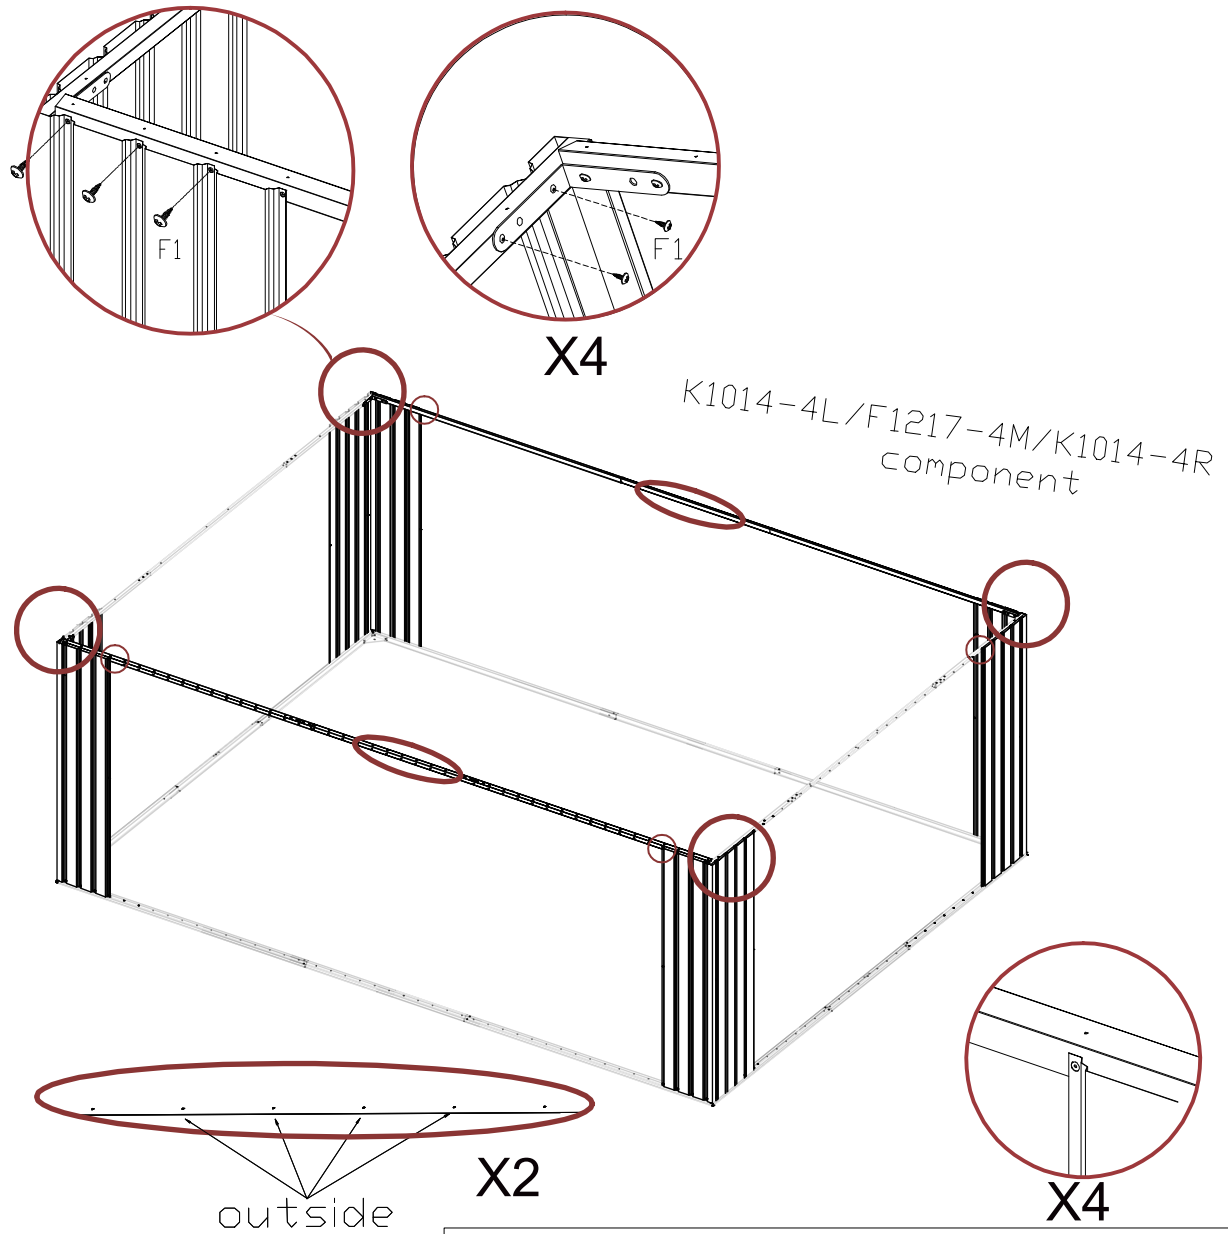


Do not add screws that indicated with an X in diagram These need to be left undone.

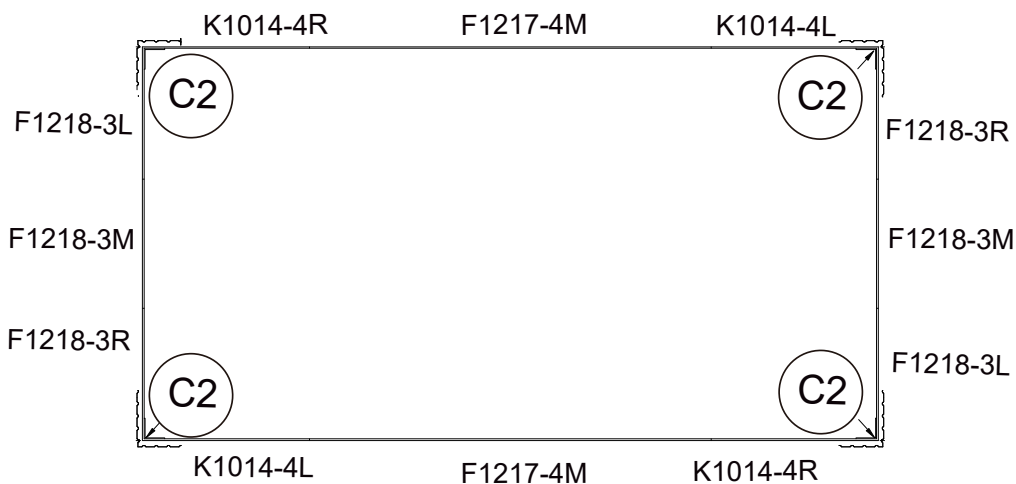

	F1	20
--	----	----






STEP 8

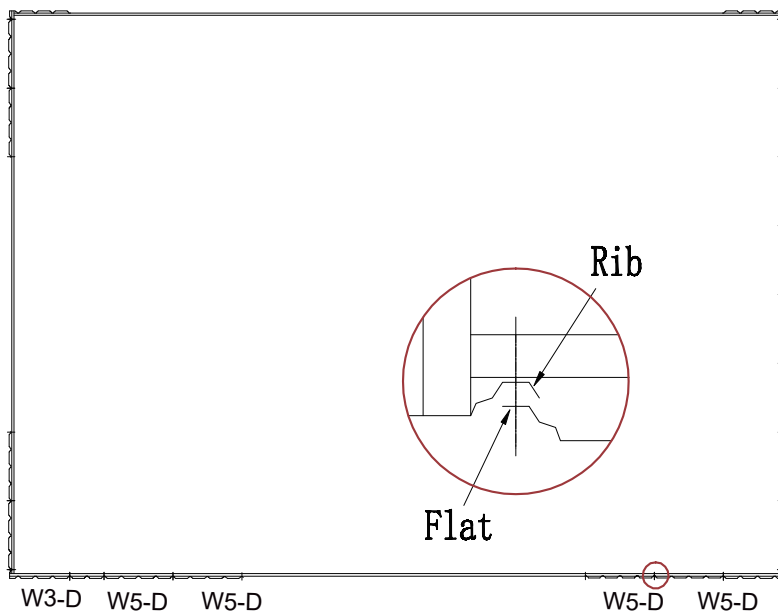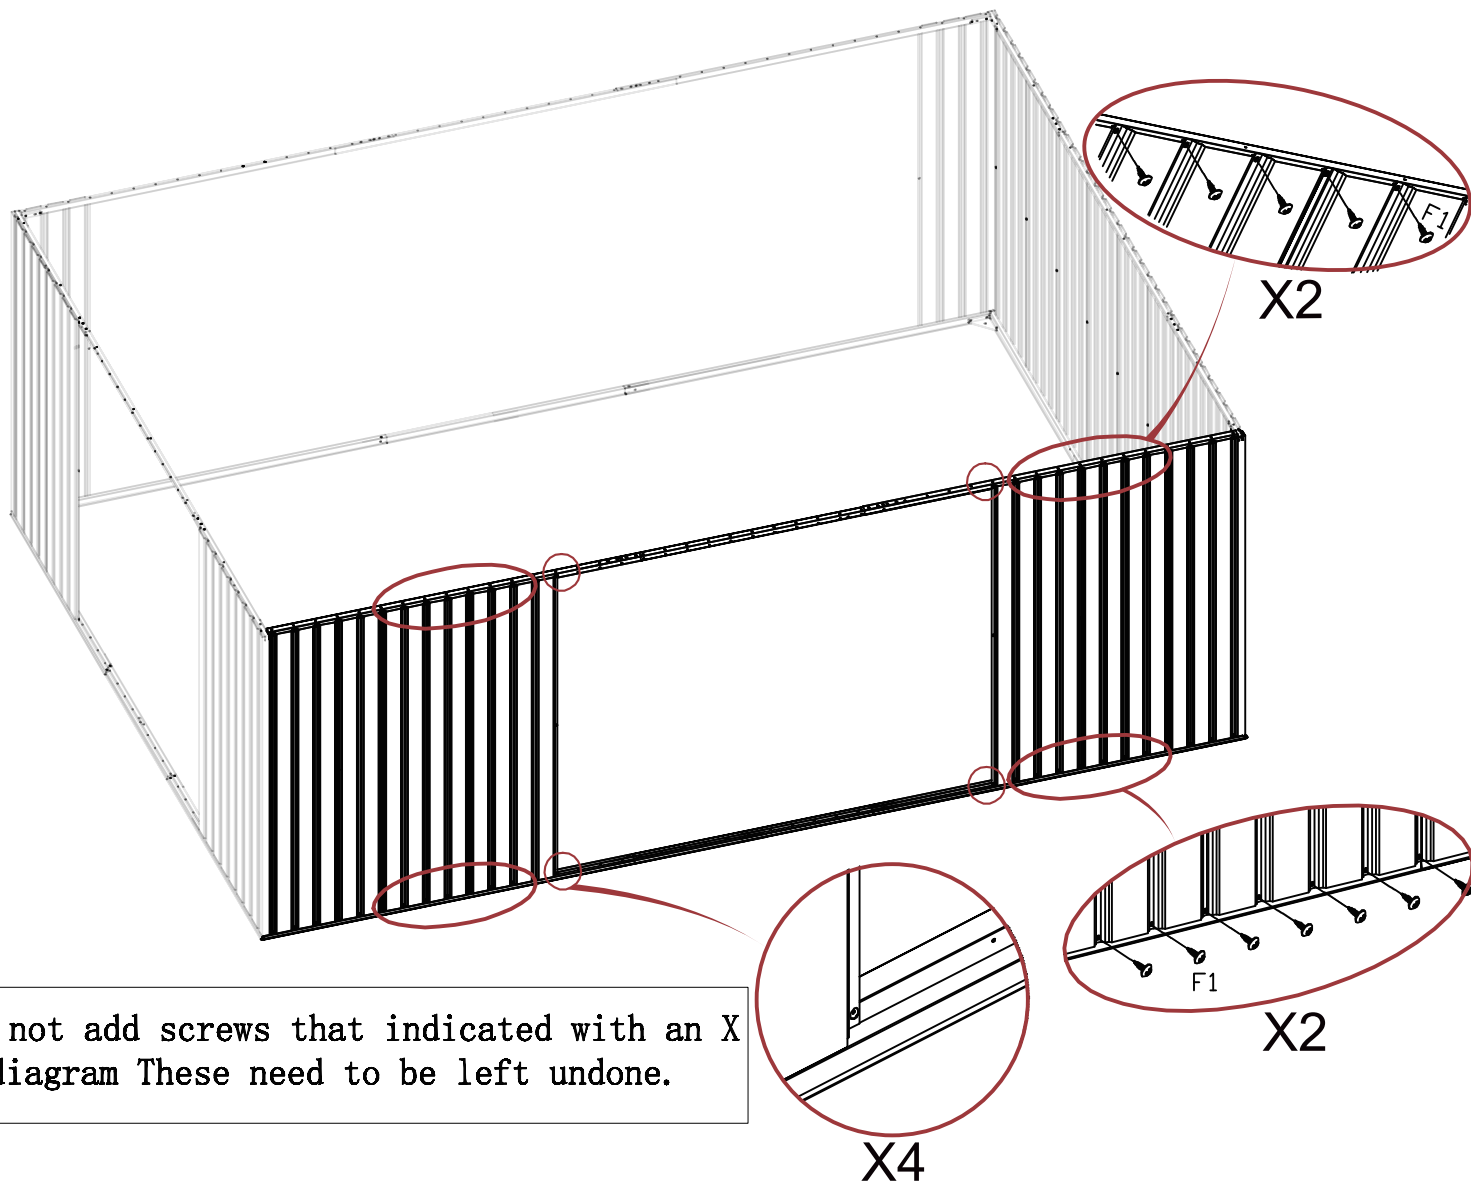

	F1	36
---	----	----



STEP 9

Note: The side with holes should be on top.

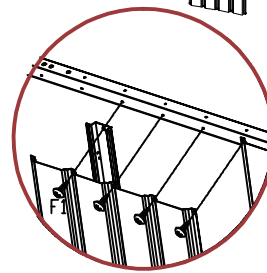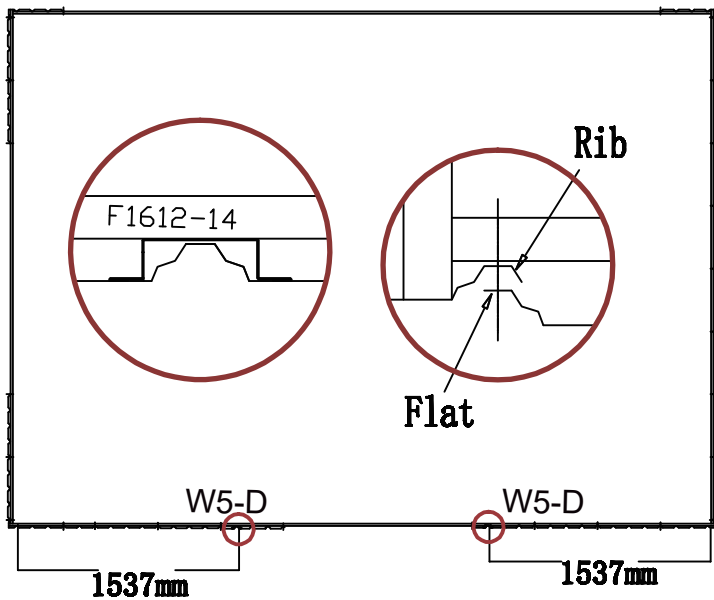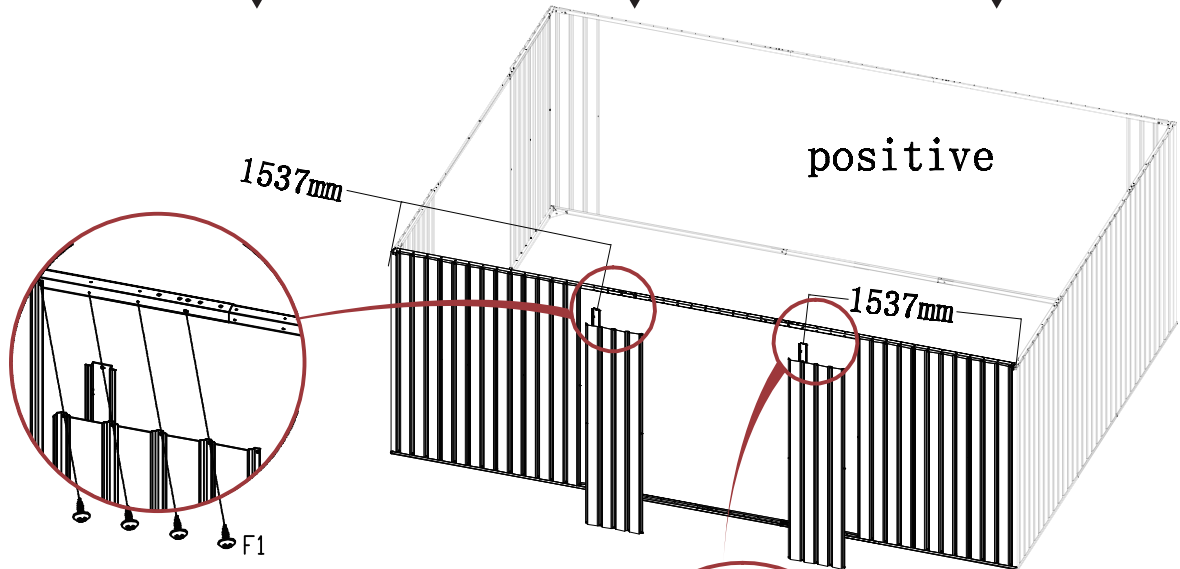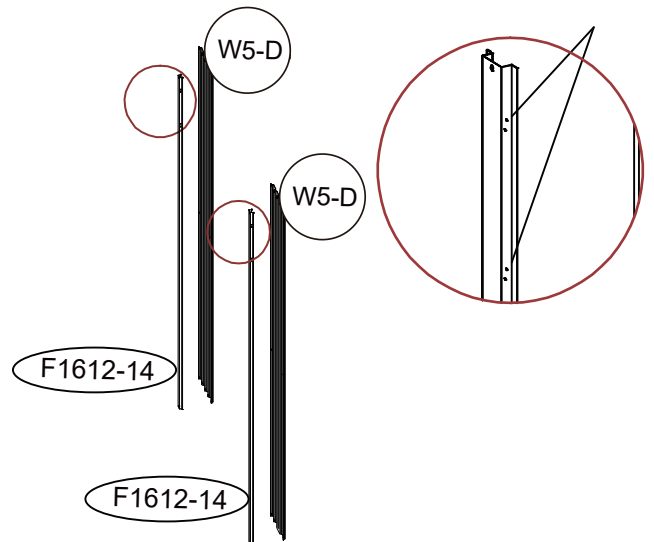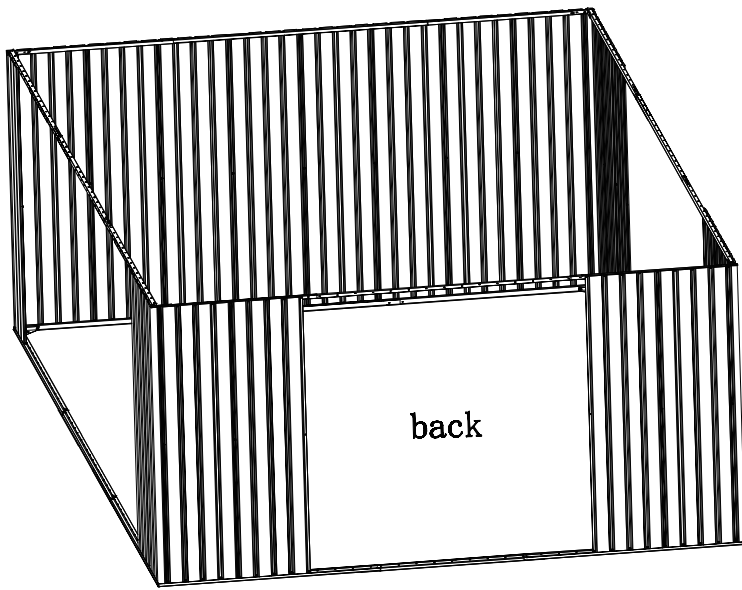


	F1	8
---	----	---

STEP 10

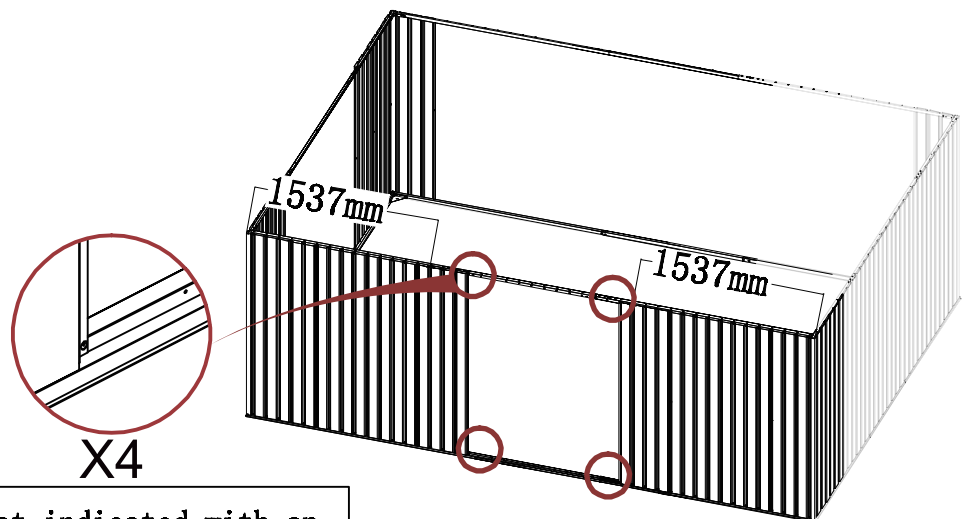
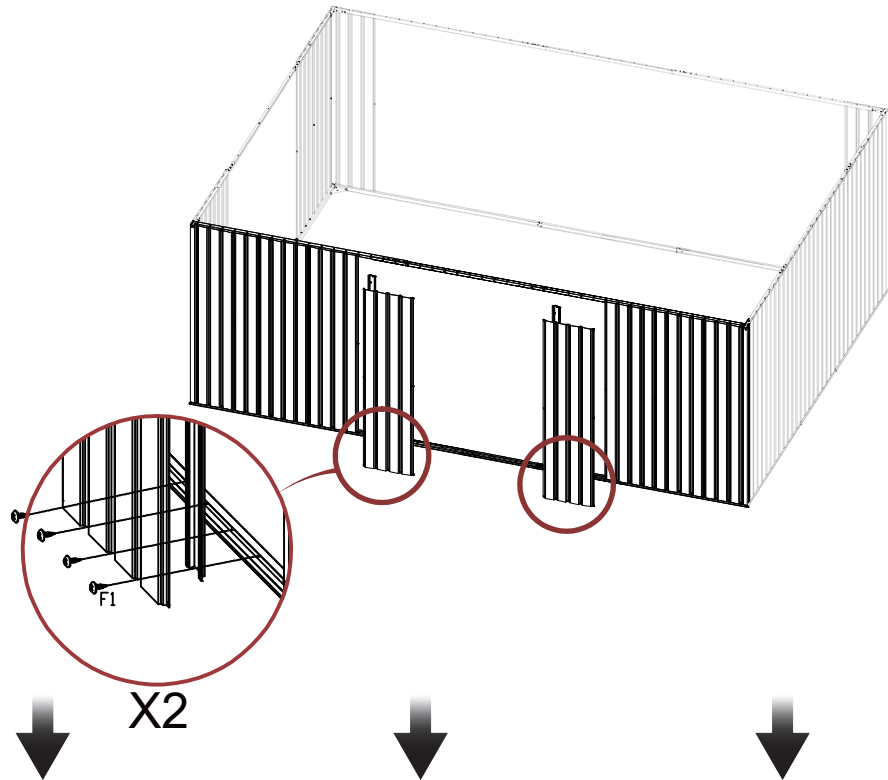


Do not add screws that indicated with an X in diagram. These need to be left undone.

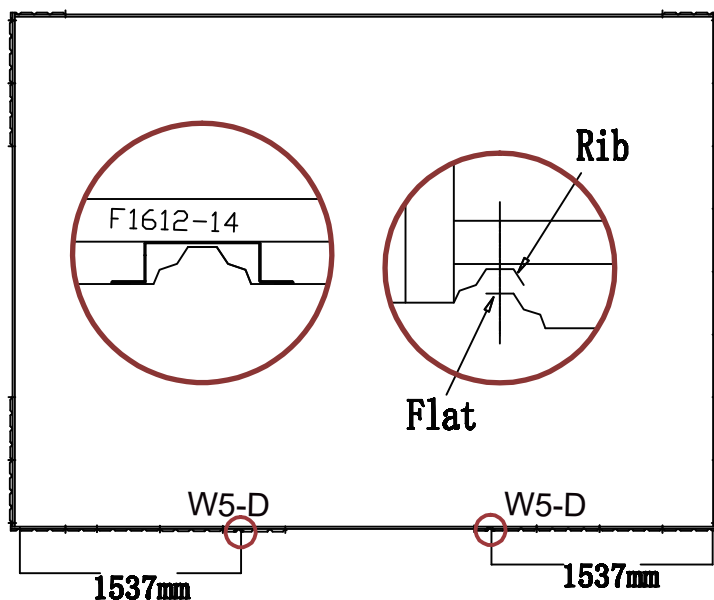



	F1	8
---	----	---

STEP 11

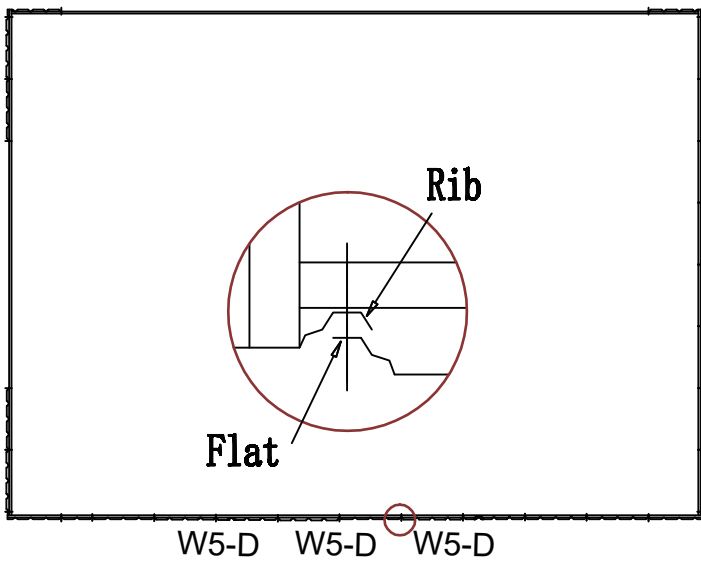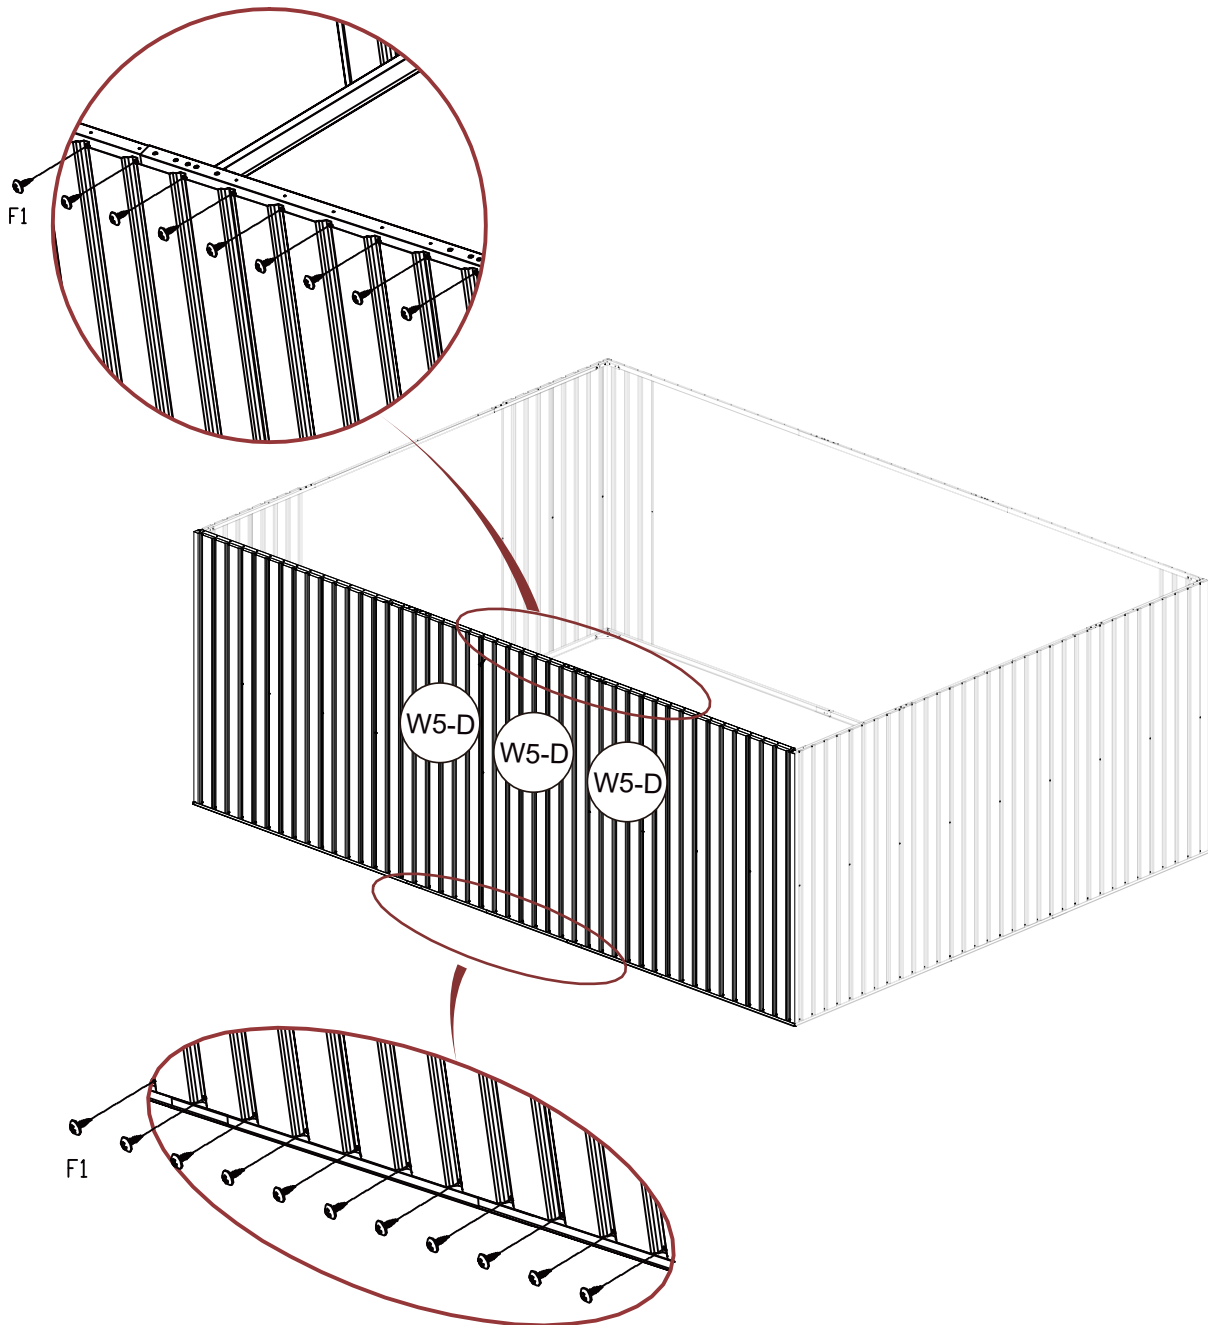


	F1	26
---	----	----

STEP 12

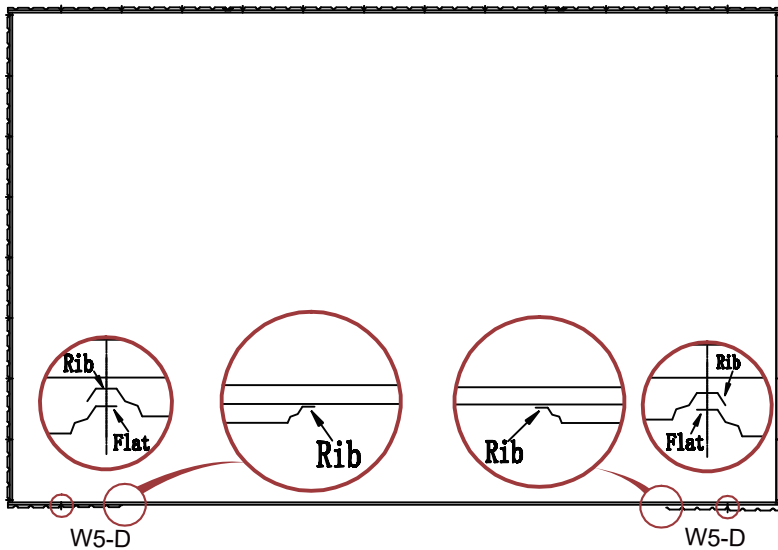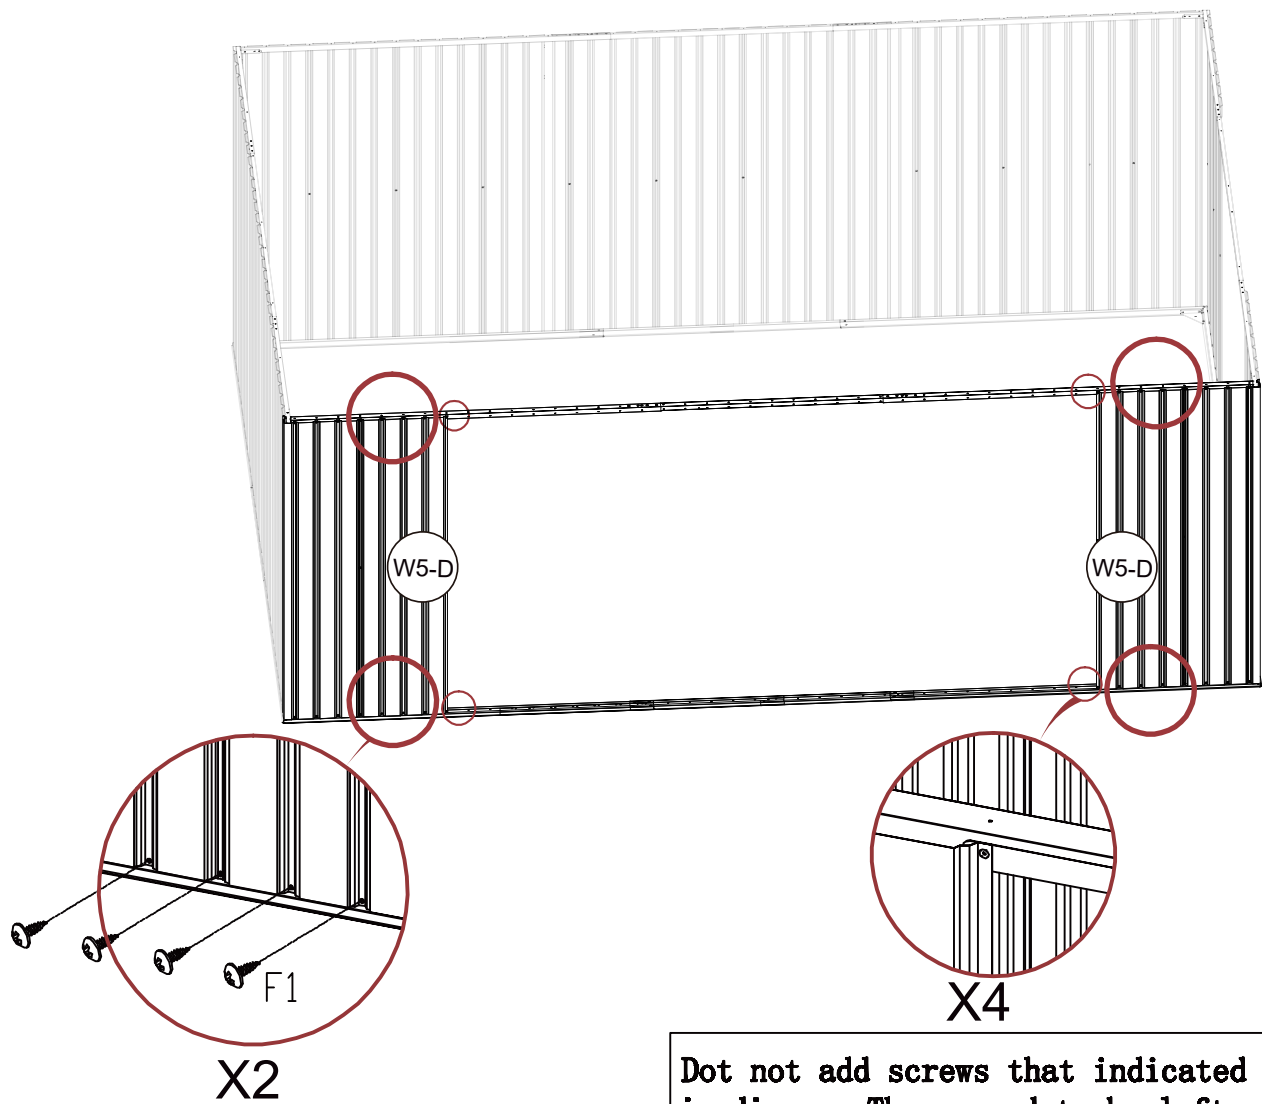


	F1	16
---	----	----

STEP 13

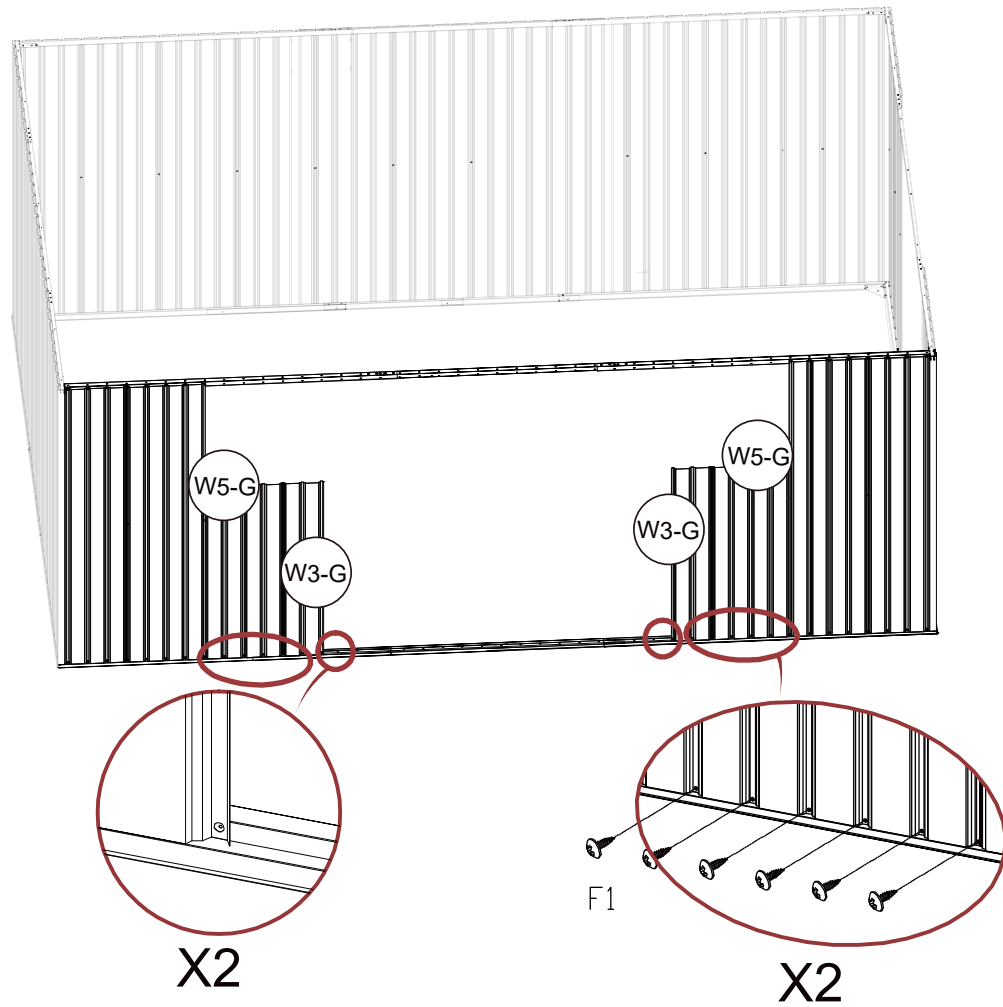




Do not add screws that indicated with an X in diagram. These need to be left undone.

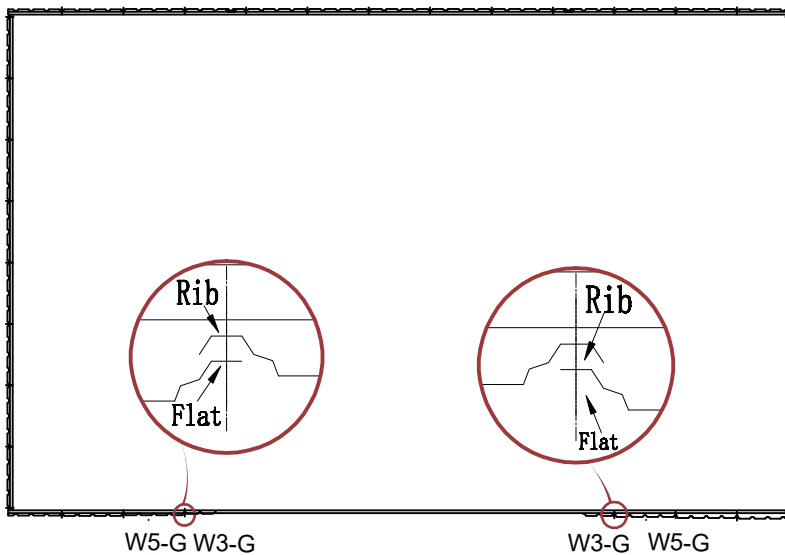

	F1	12
---	----	----



STEP 14

Note: The side with holes should be on top.

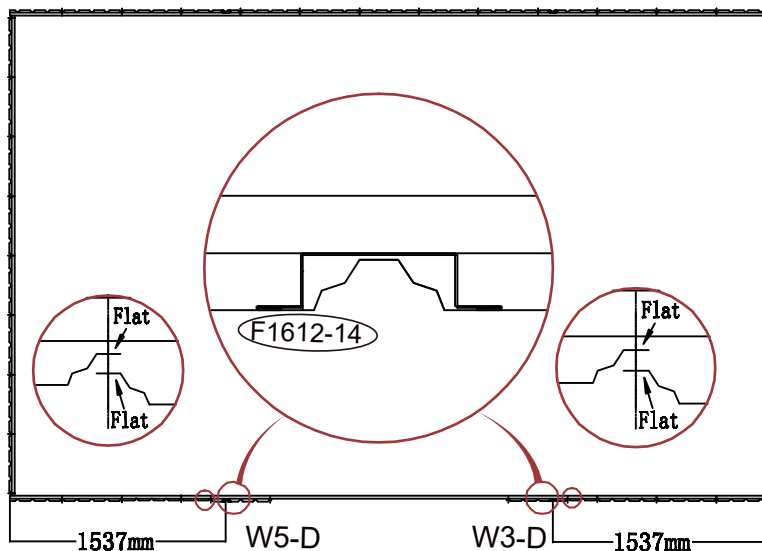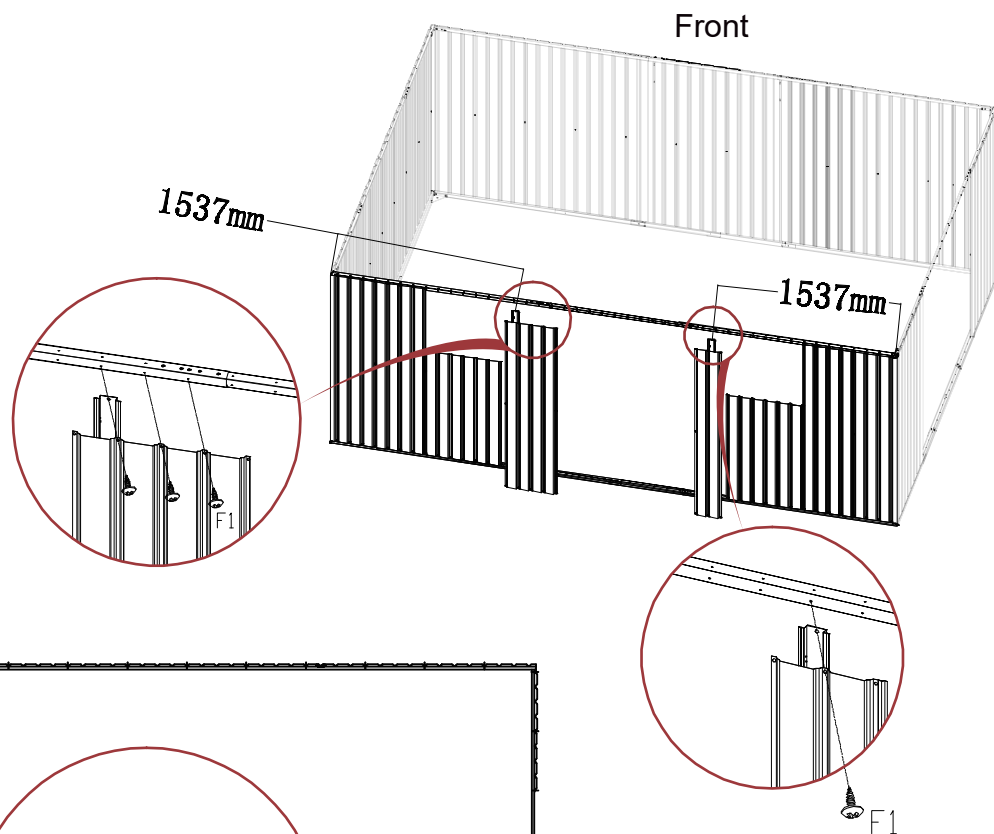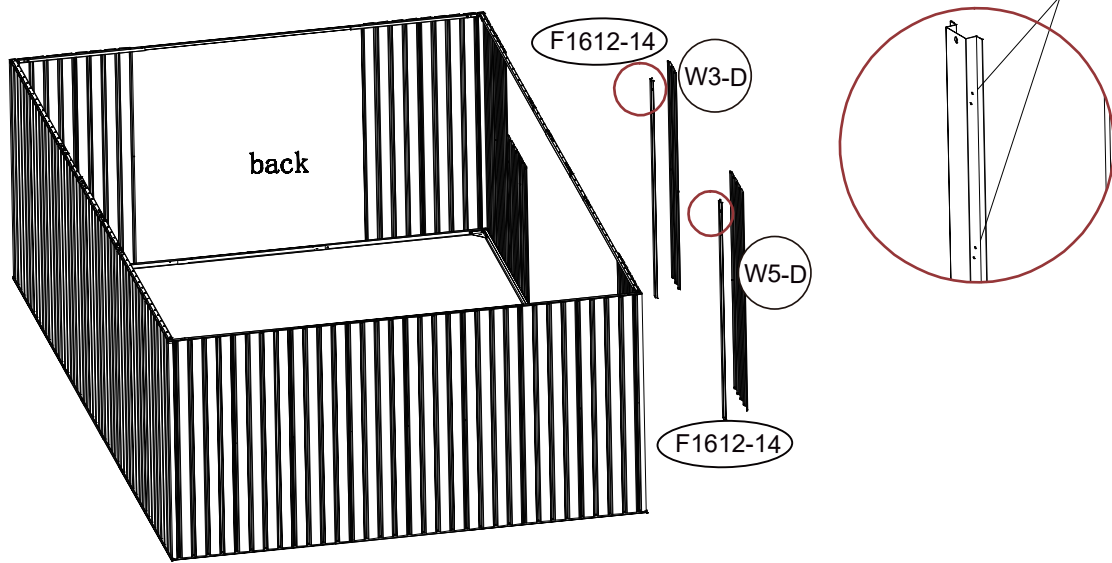


	F1	4
---	----	---

STEP 15

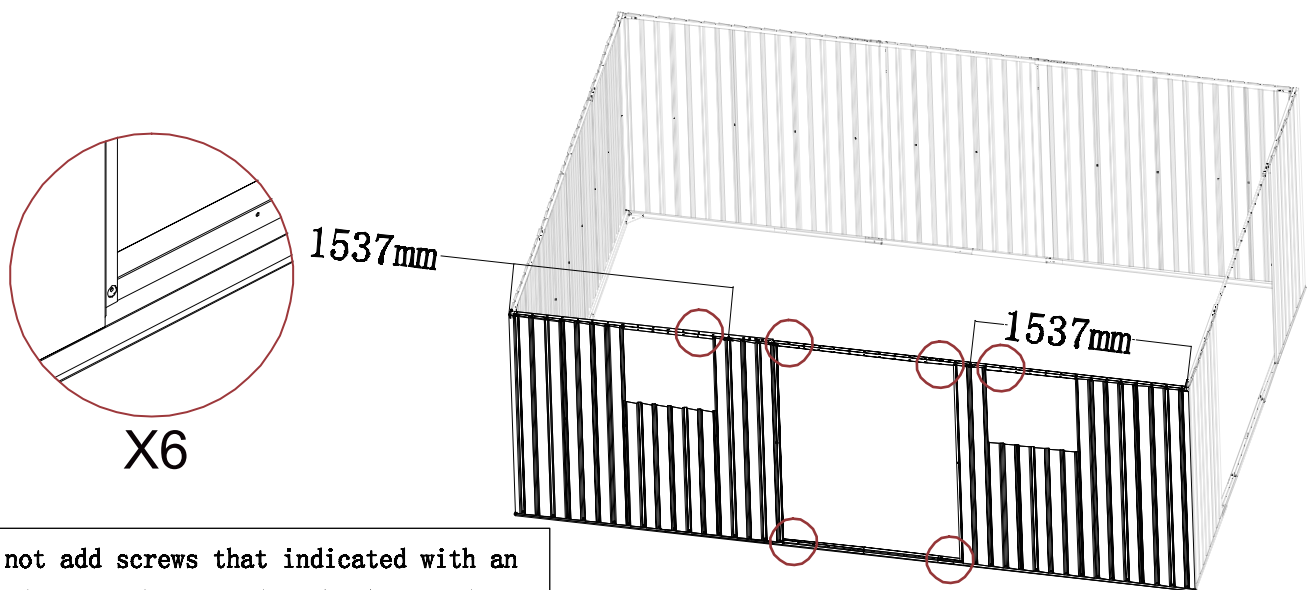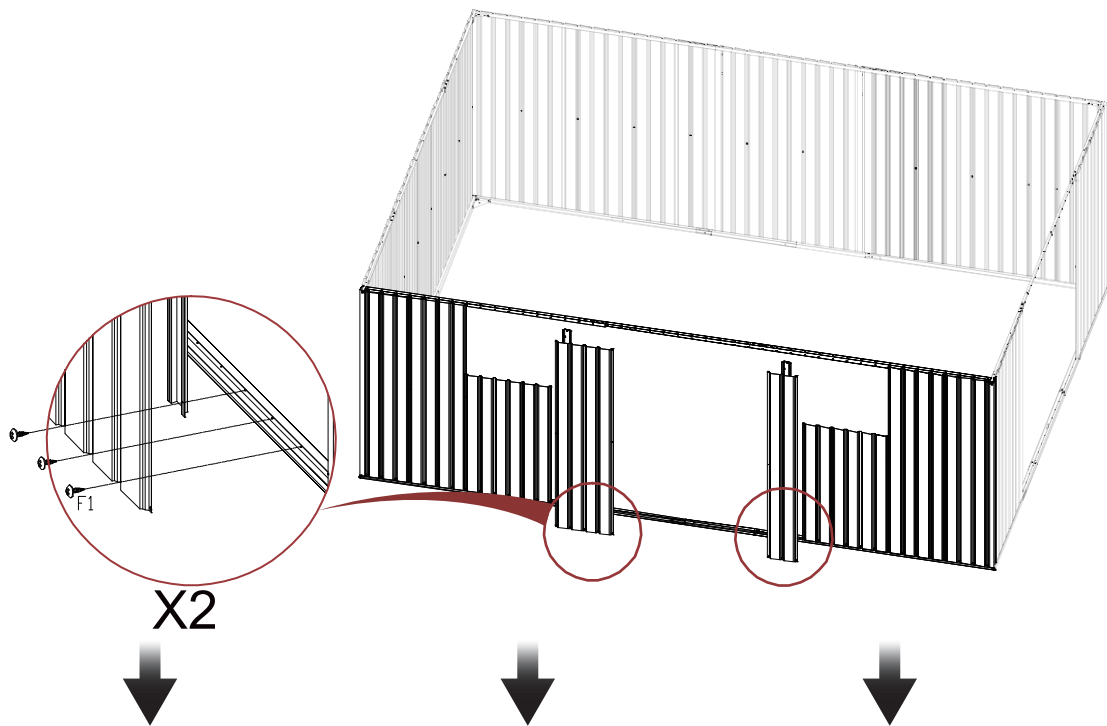


Do not add screws that indicated with an X in diagram. These need to be left undone.

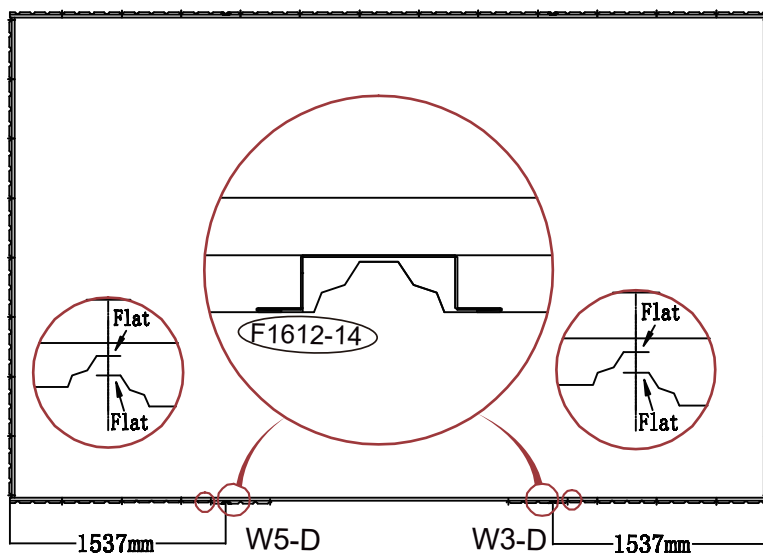


	F1	6
---	----	---

STEP 16

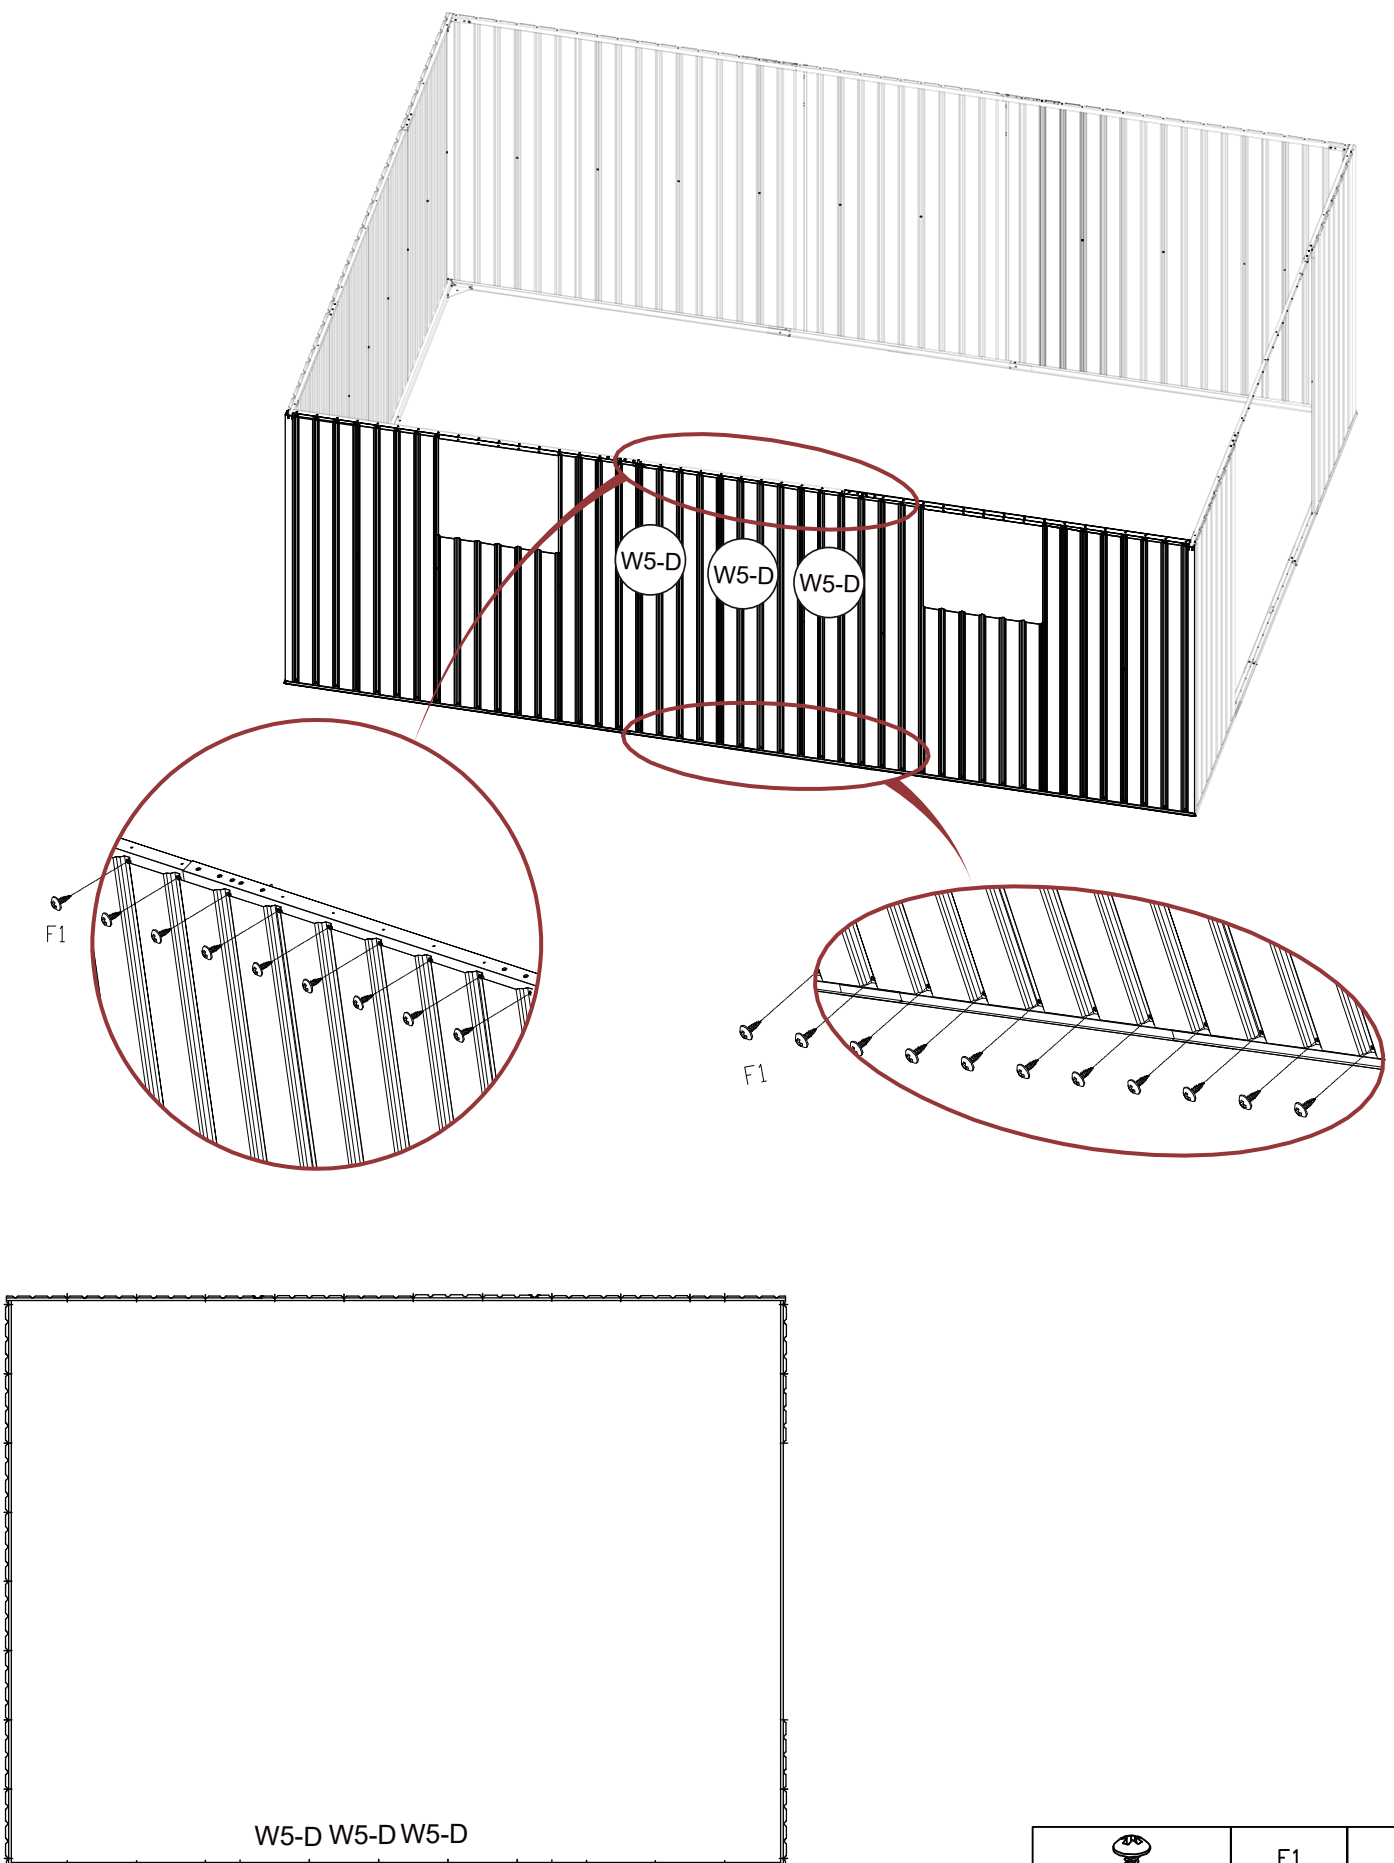


	F1	26
---	----	----

STEP 17

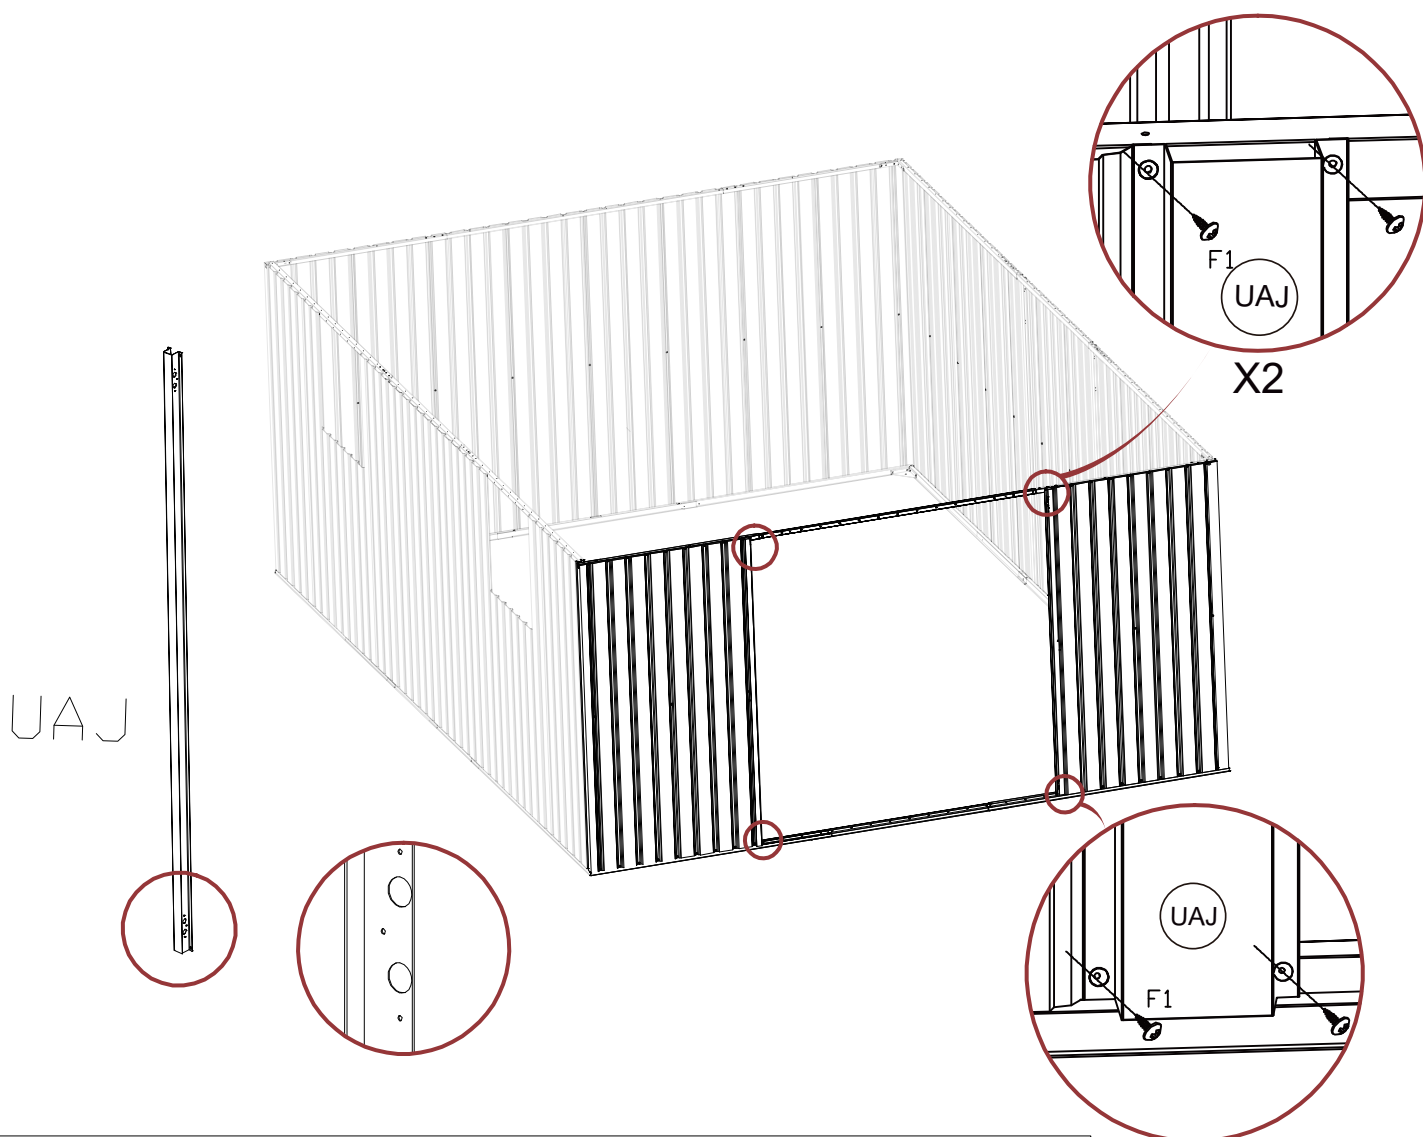


The inner side is a hinge installation hole.

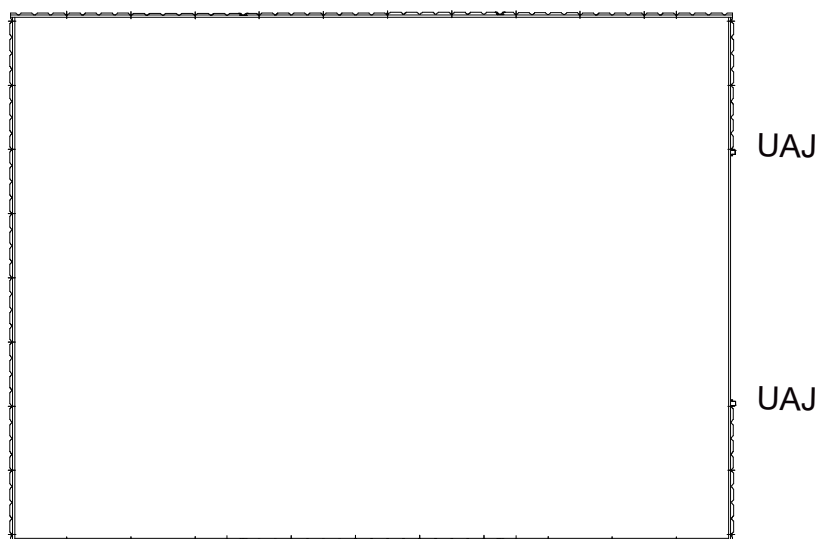

	F1	8
---	----	---

STEP 18

X2

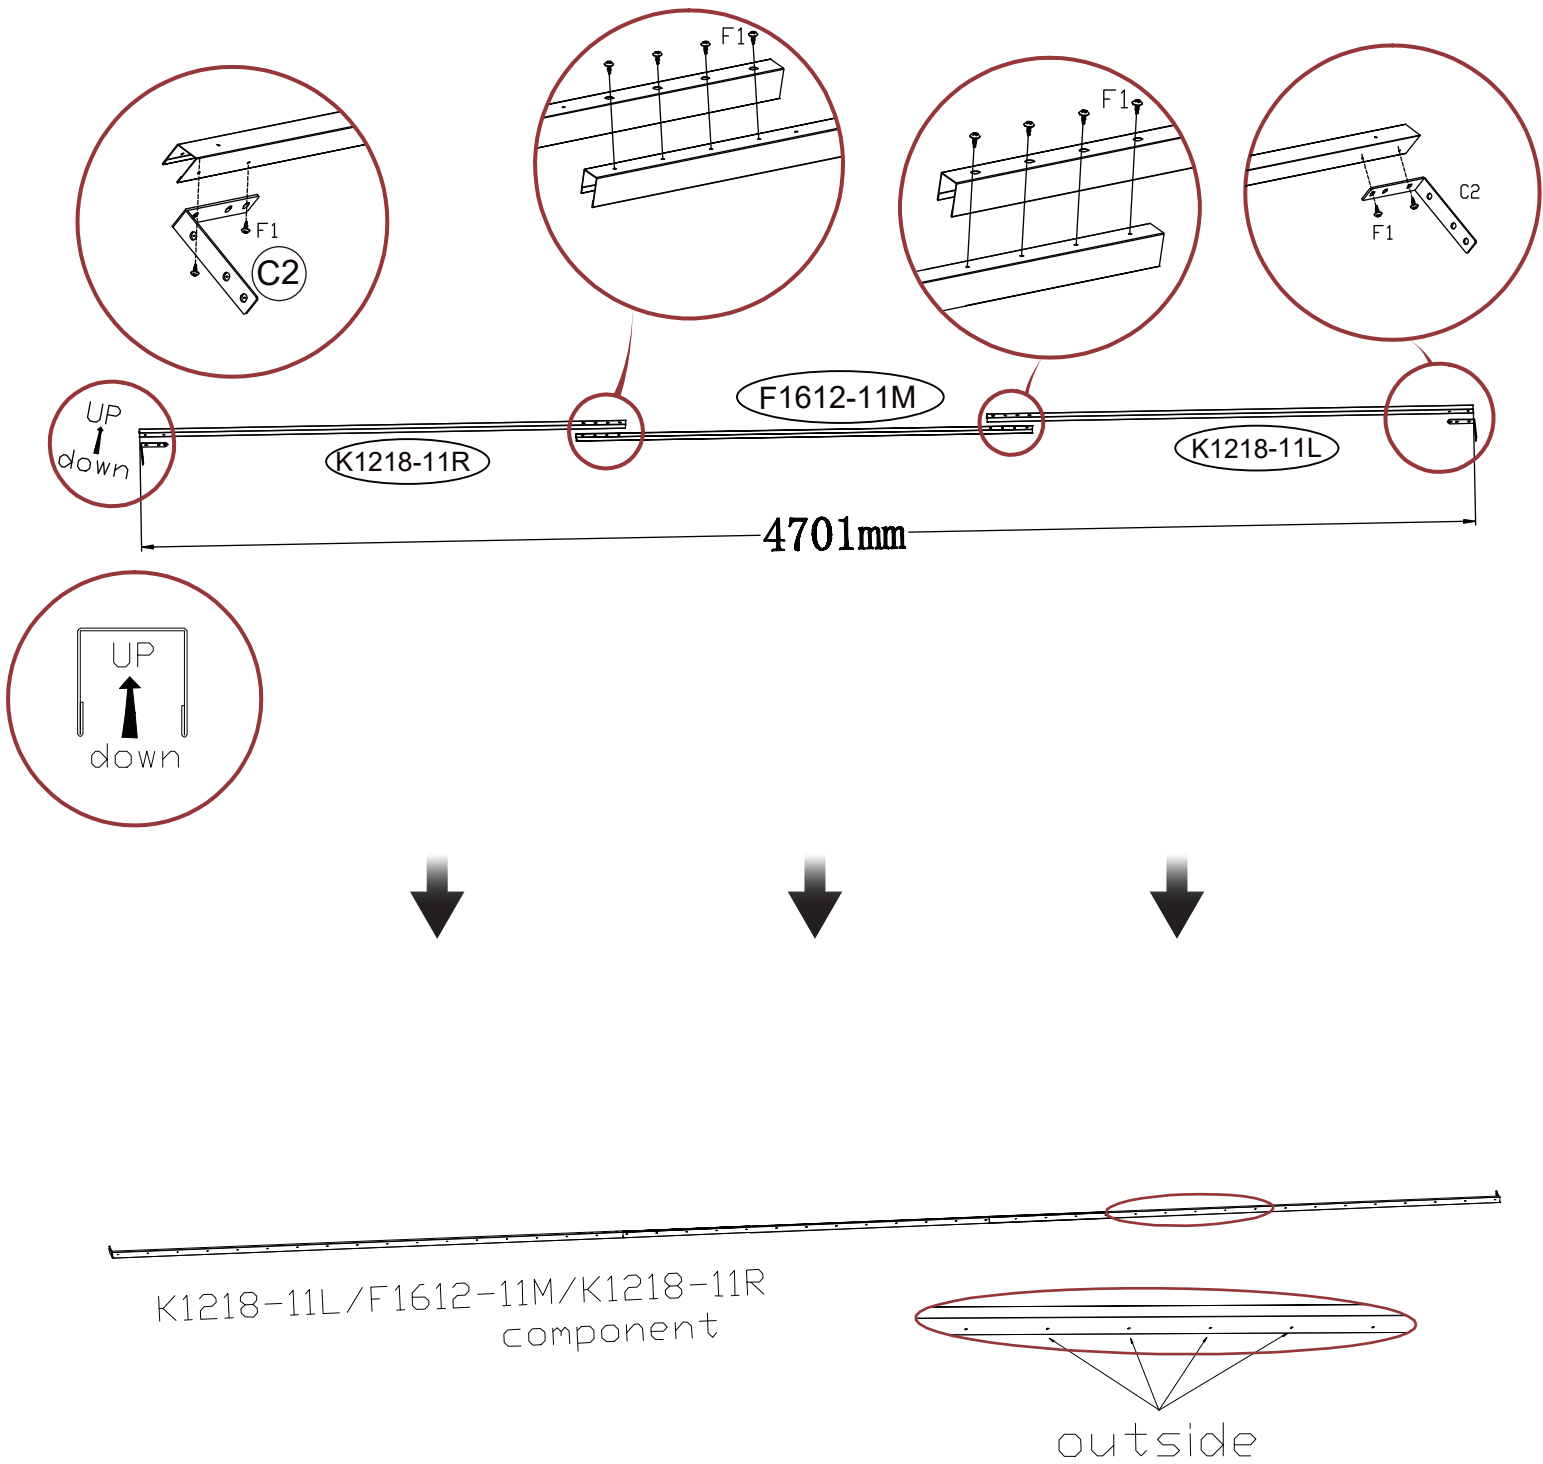


	F1	24
---	----	----

STEP 19



K1218-11L/F1612-11M/K1218-11R
component



back

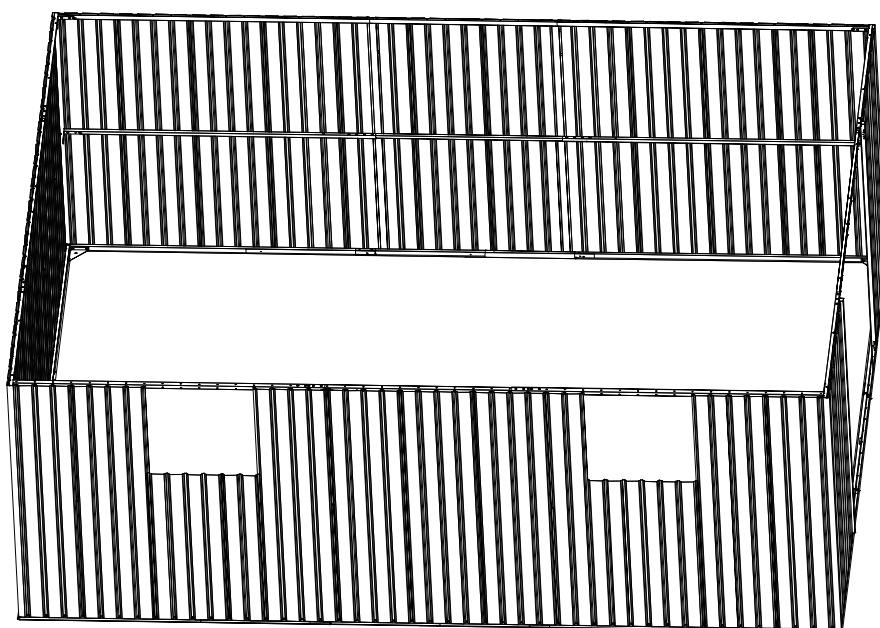

Front

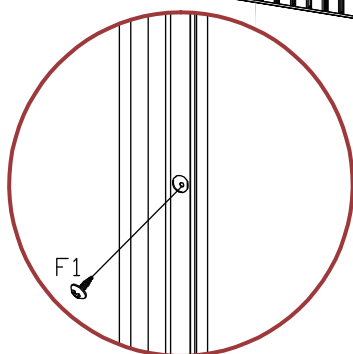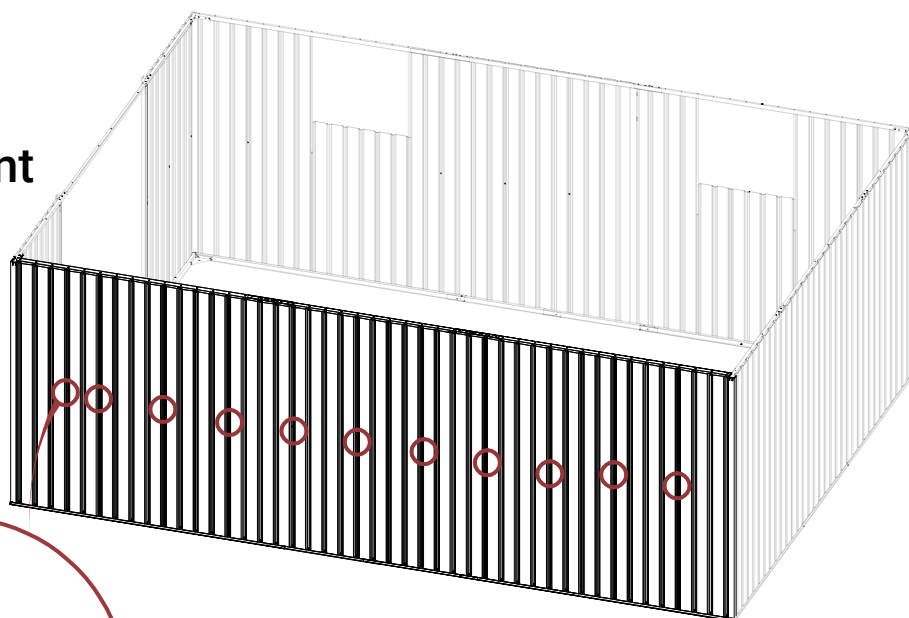

X11


	F1	11
---	----	----

STEP 20



K1218-11L/F1612-11M/K1218-11R
component



back

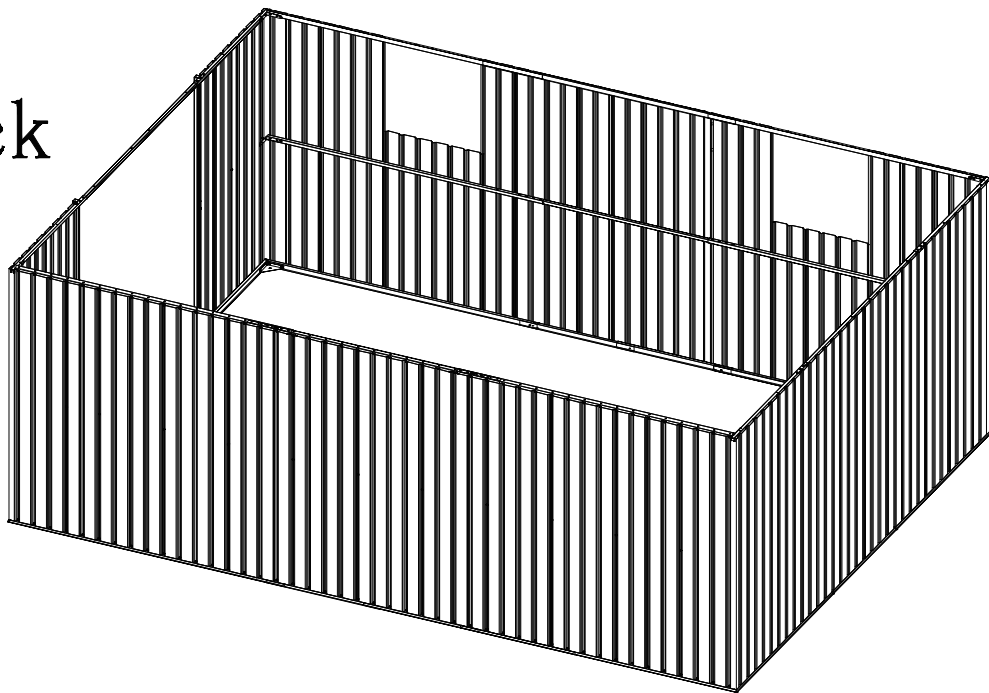

Front

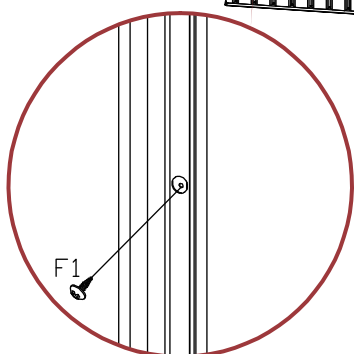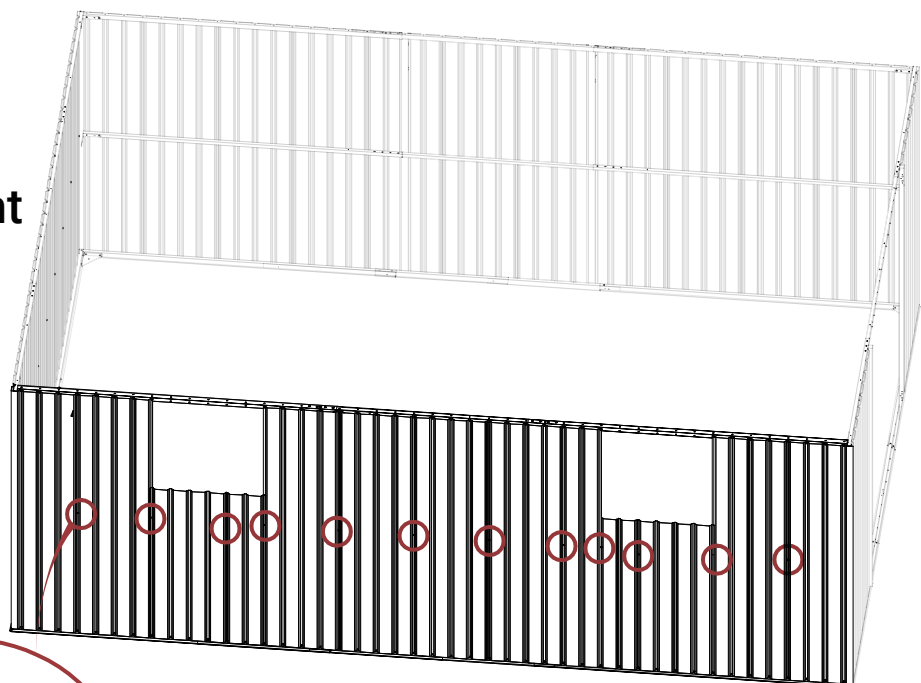

X12

28



	F1	12
---	----	----

STEP 21



F1218-3L/3M/3R
component



back

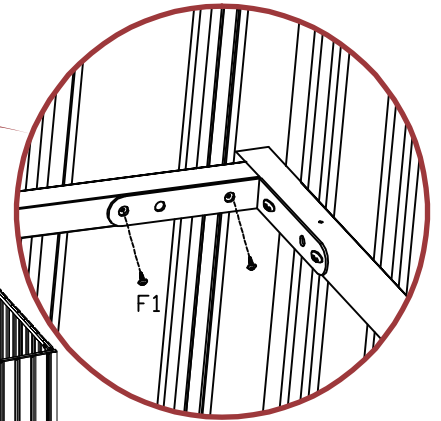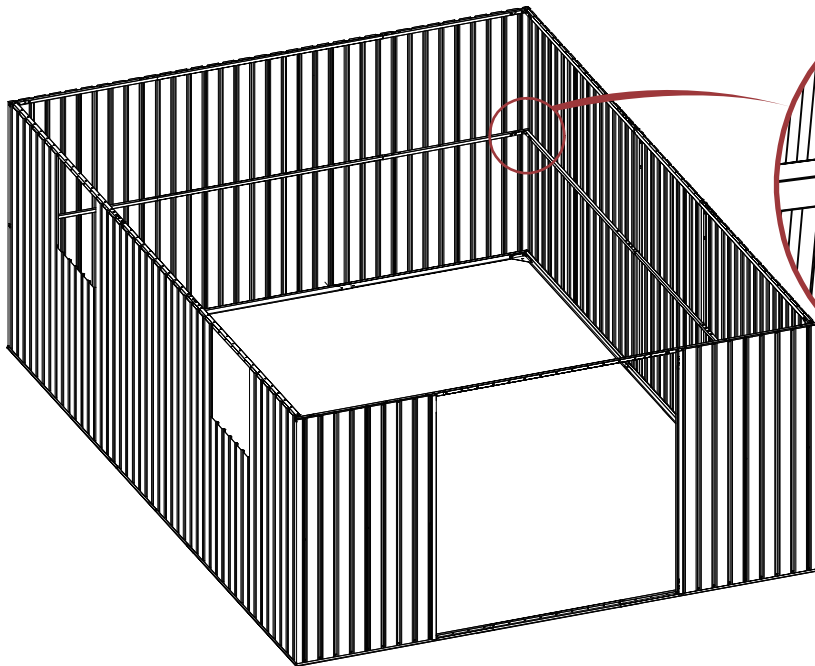







Front

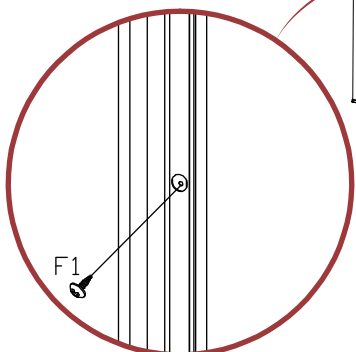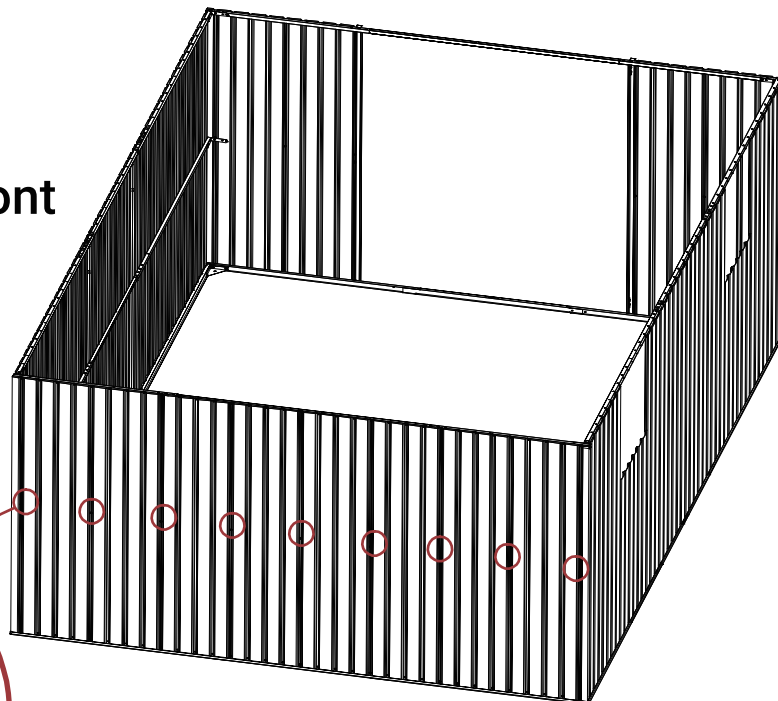

X9

	F1	13
---	----	----



STEP 22

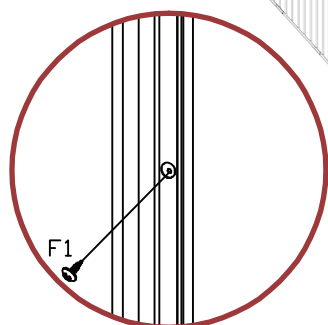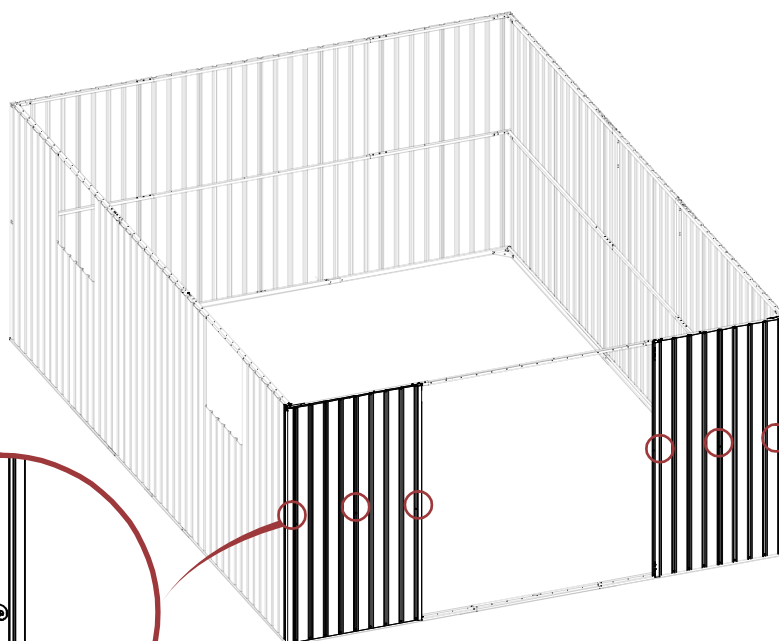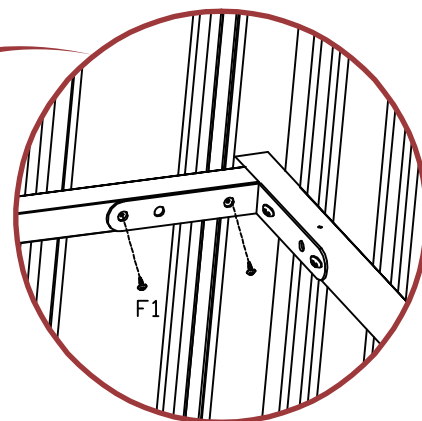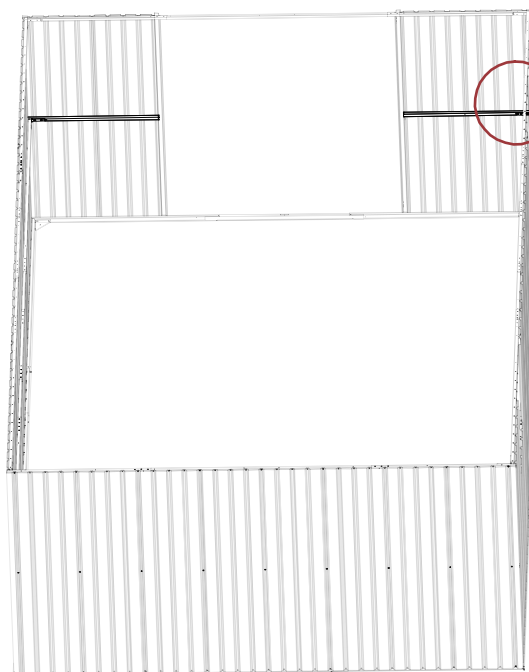


X6

	F1	10
---	----	----

STEP 23

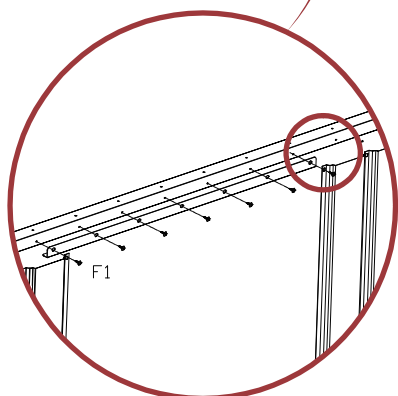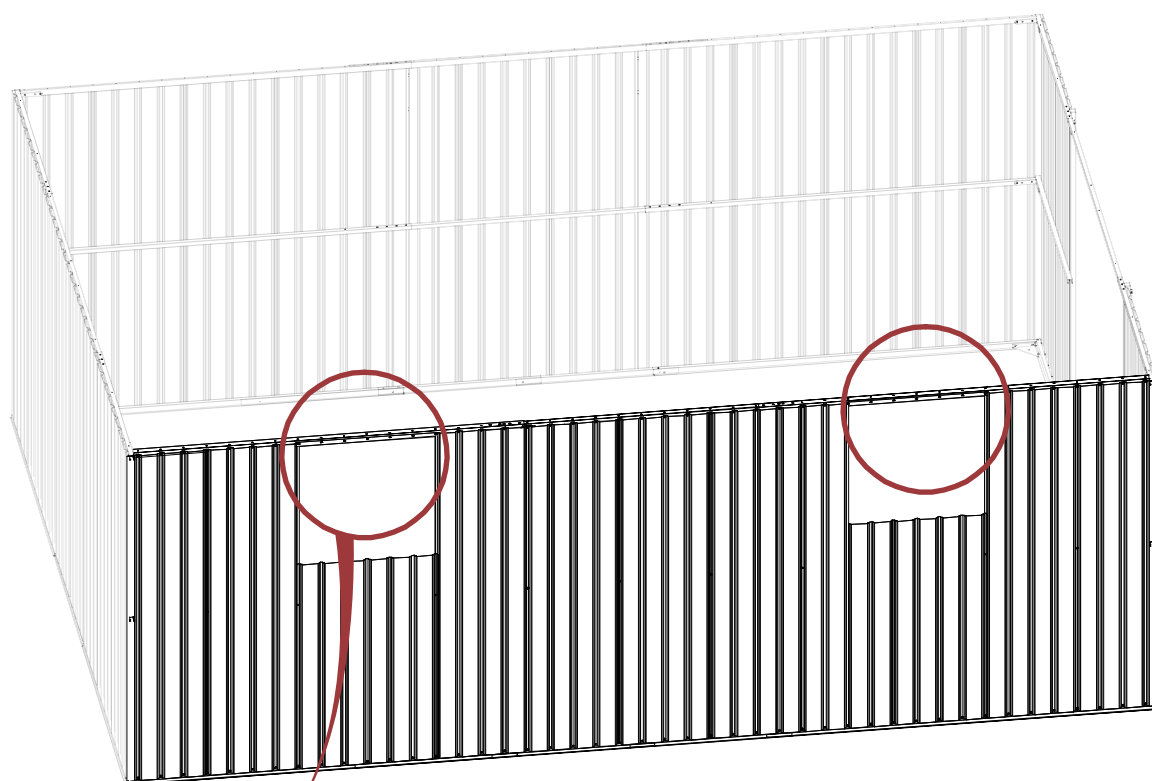




X2

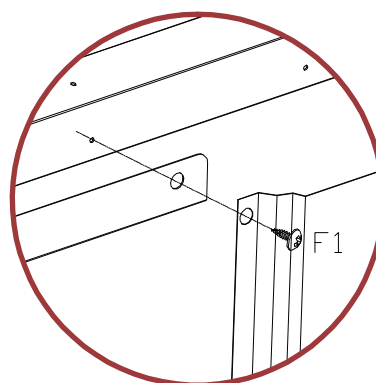

X2



	F1	14
---	----	----

STEP 24

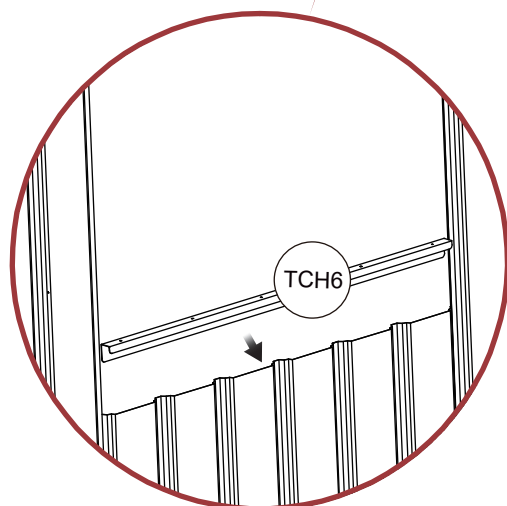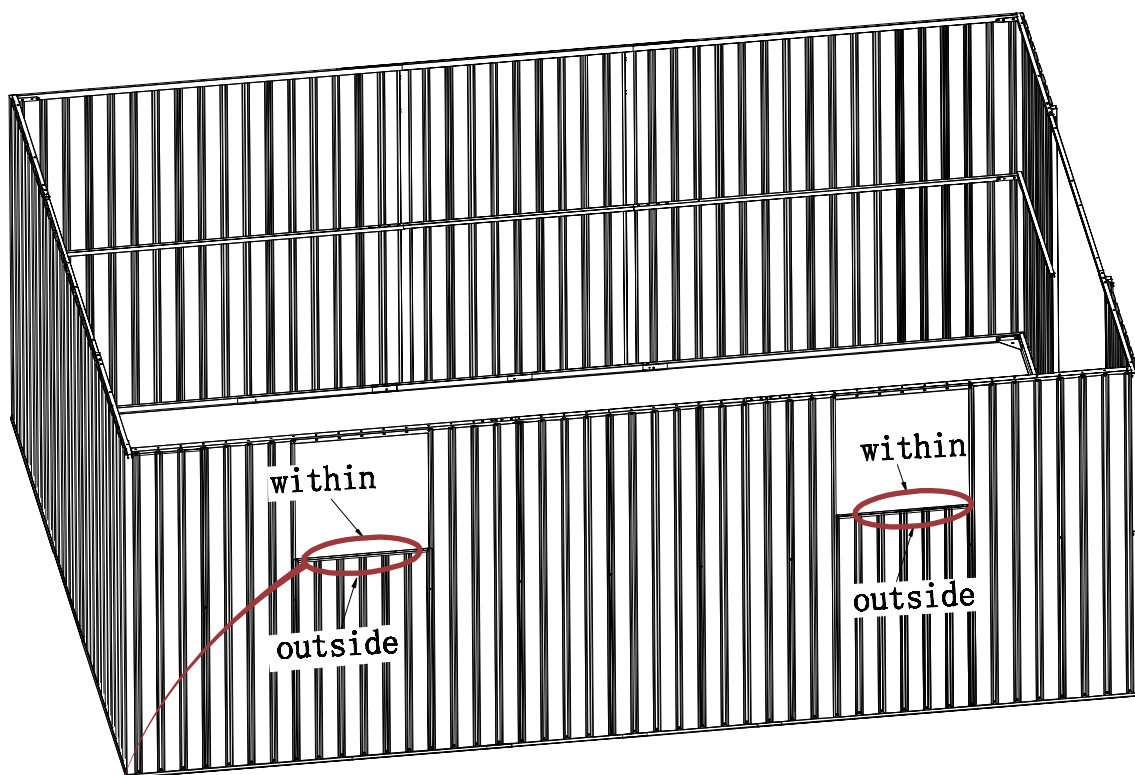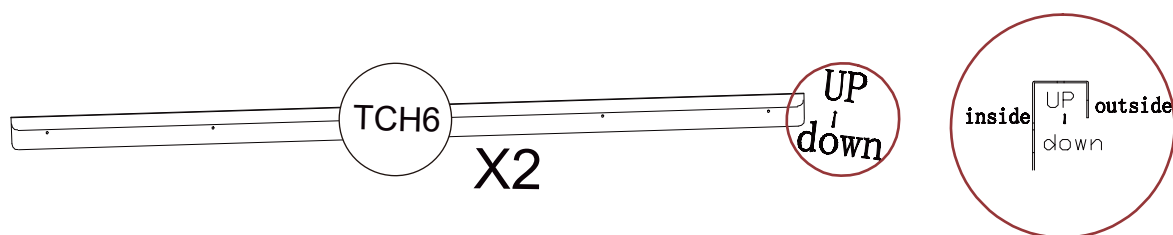


X2

Installation method: Clip the TCH6 slot onto W5-G and W3-G, with the long side facing inward, without the need for screws to secure.

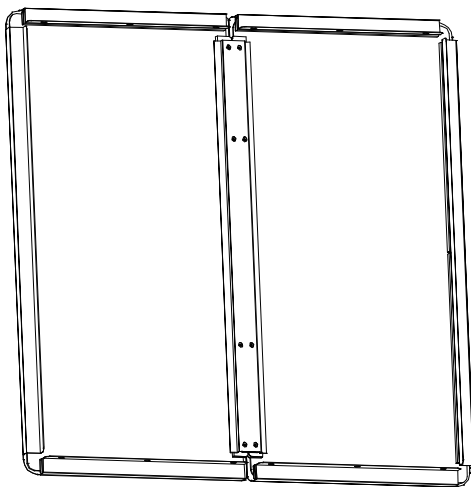
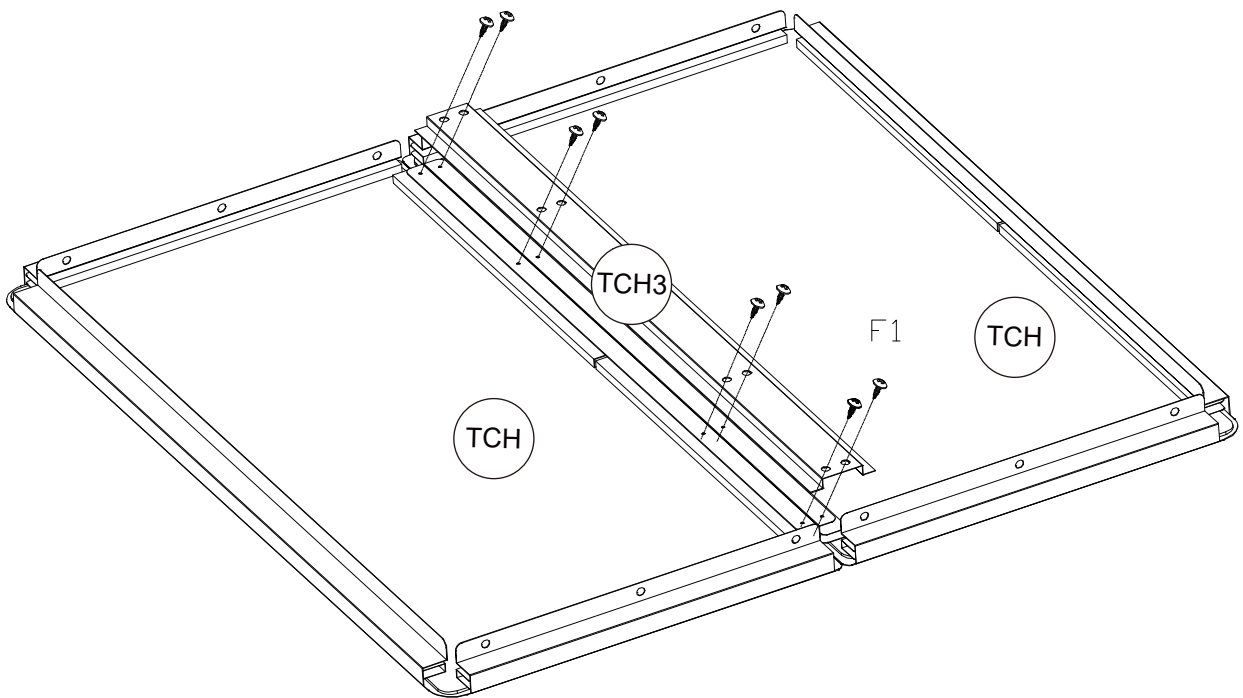


back

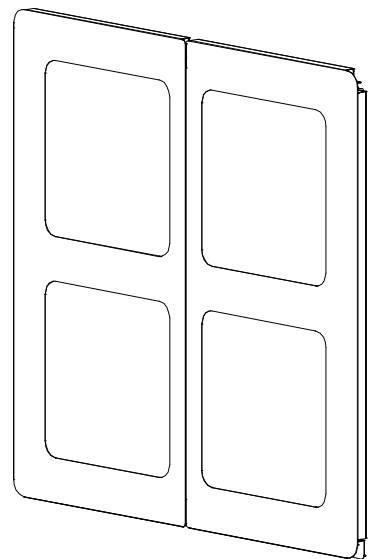



Front

STEP 26

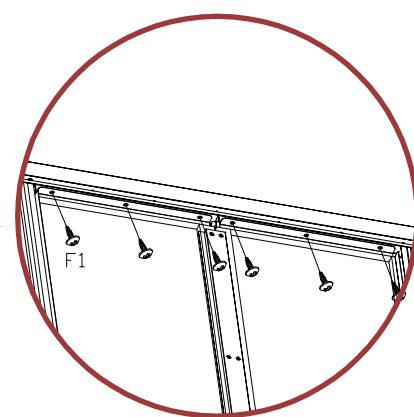
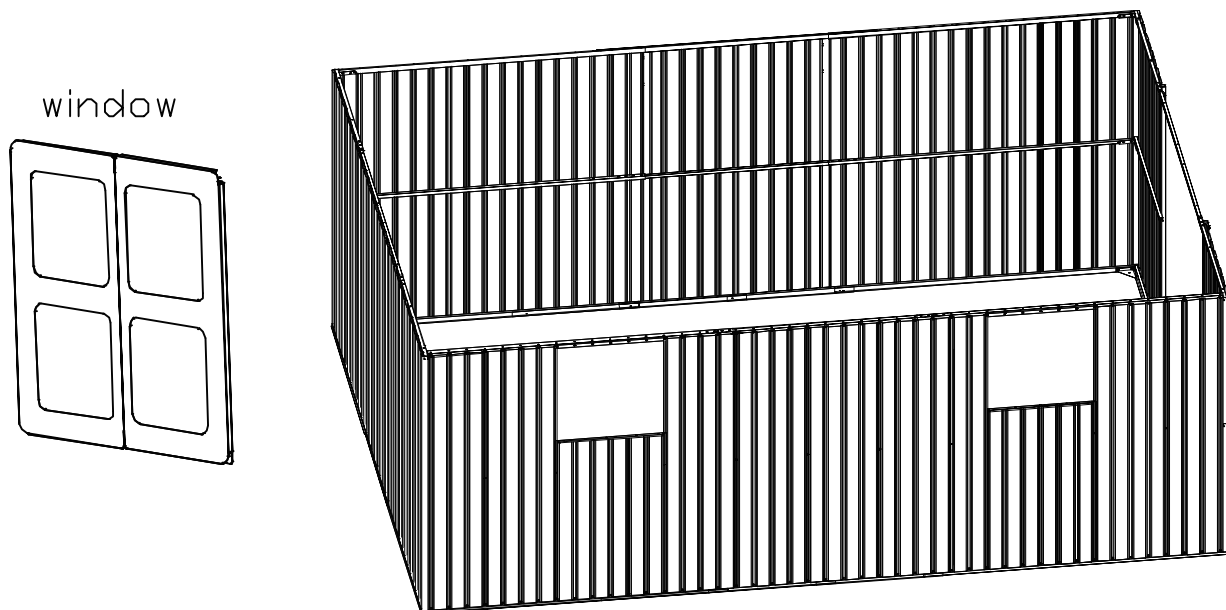


	F1	6
---	----	---


STEP 27

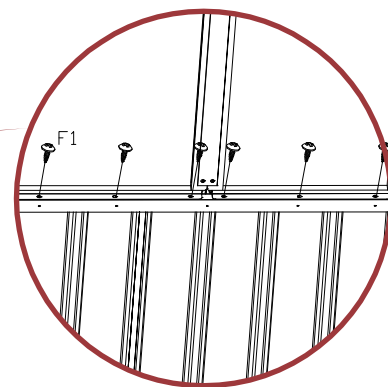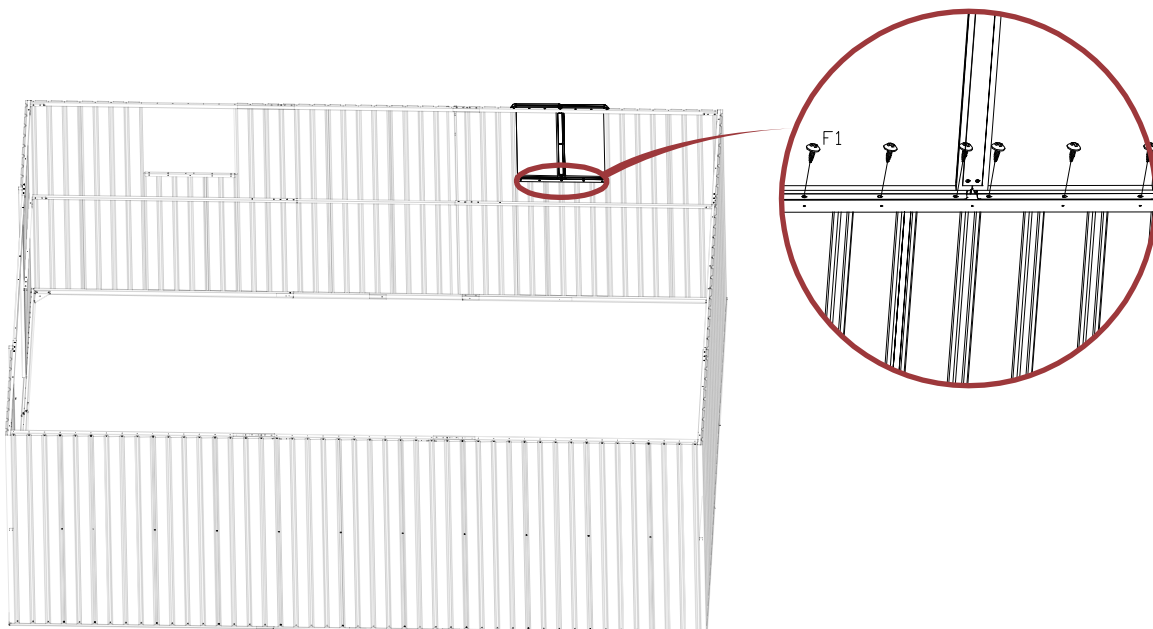

back

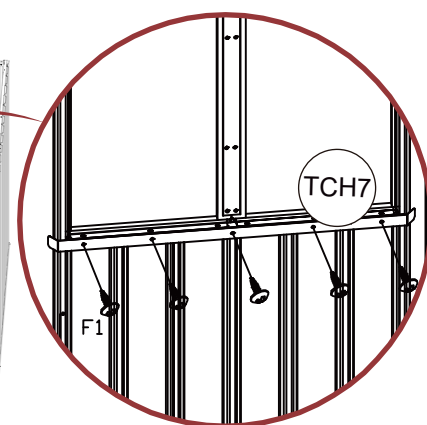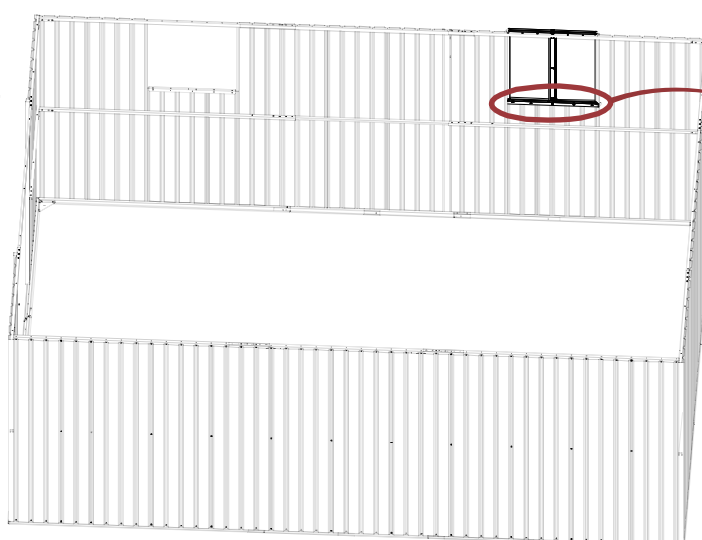


Front



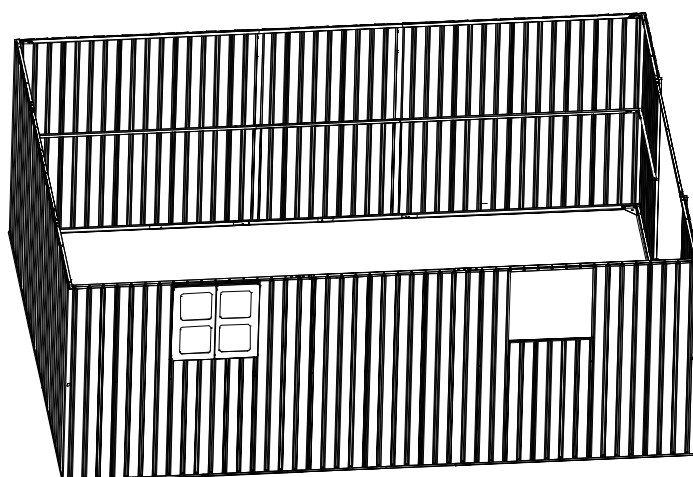


	F1	11
---	----	----

STEP 28

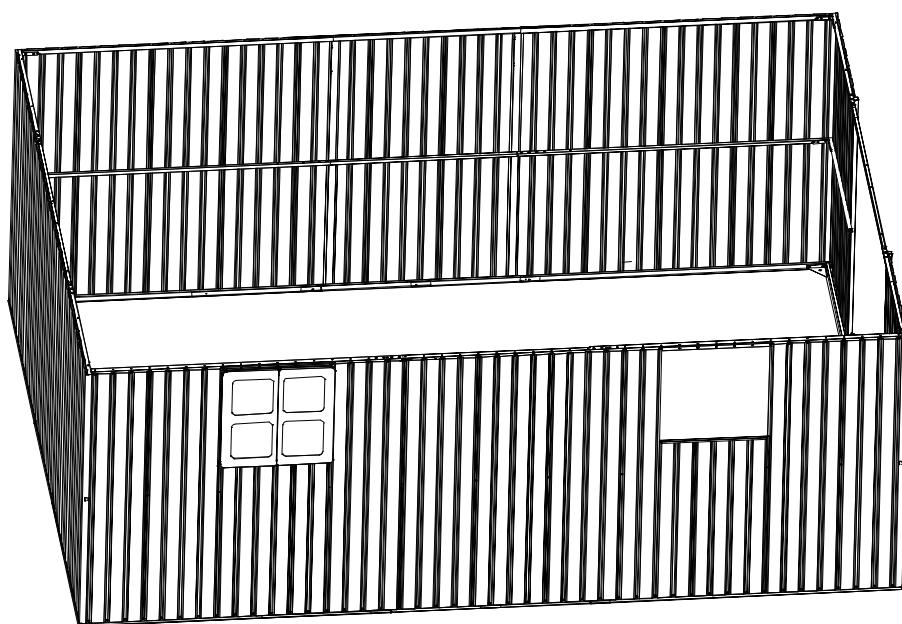


window

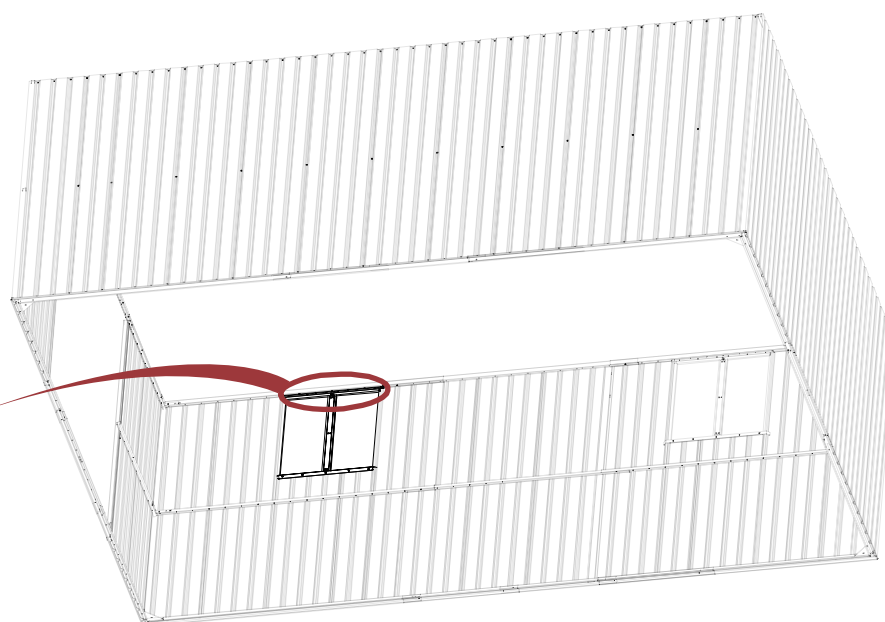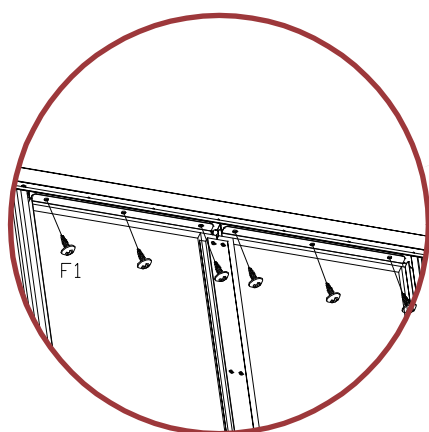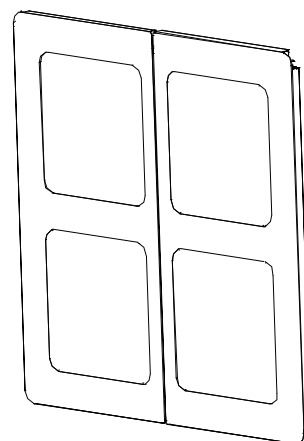

	F1	6
---	----	---


STEP 29

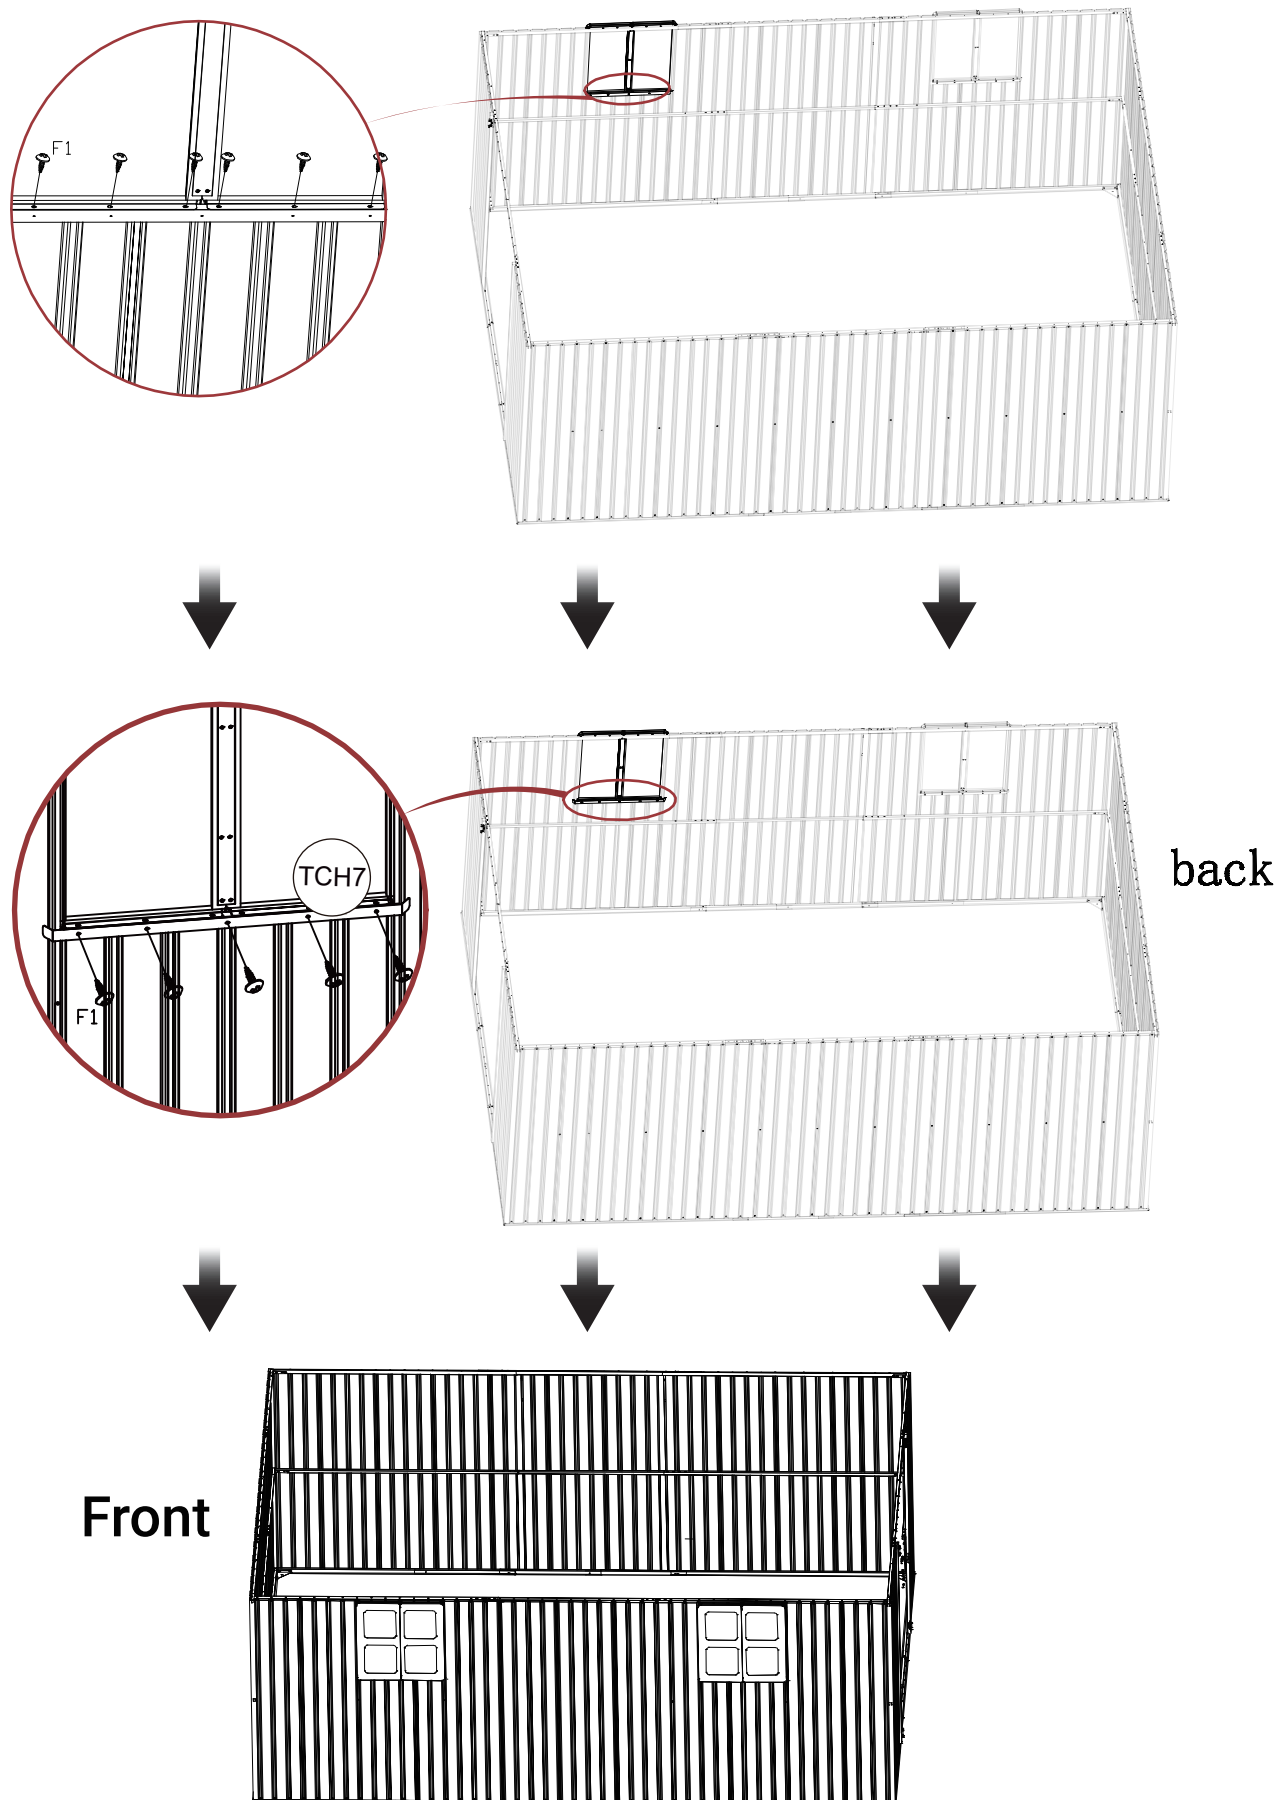


	F1	11
---	----	----

STEP 30

Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.

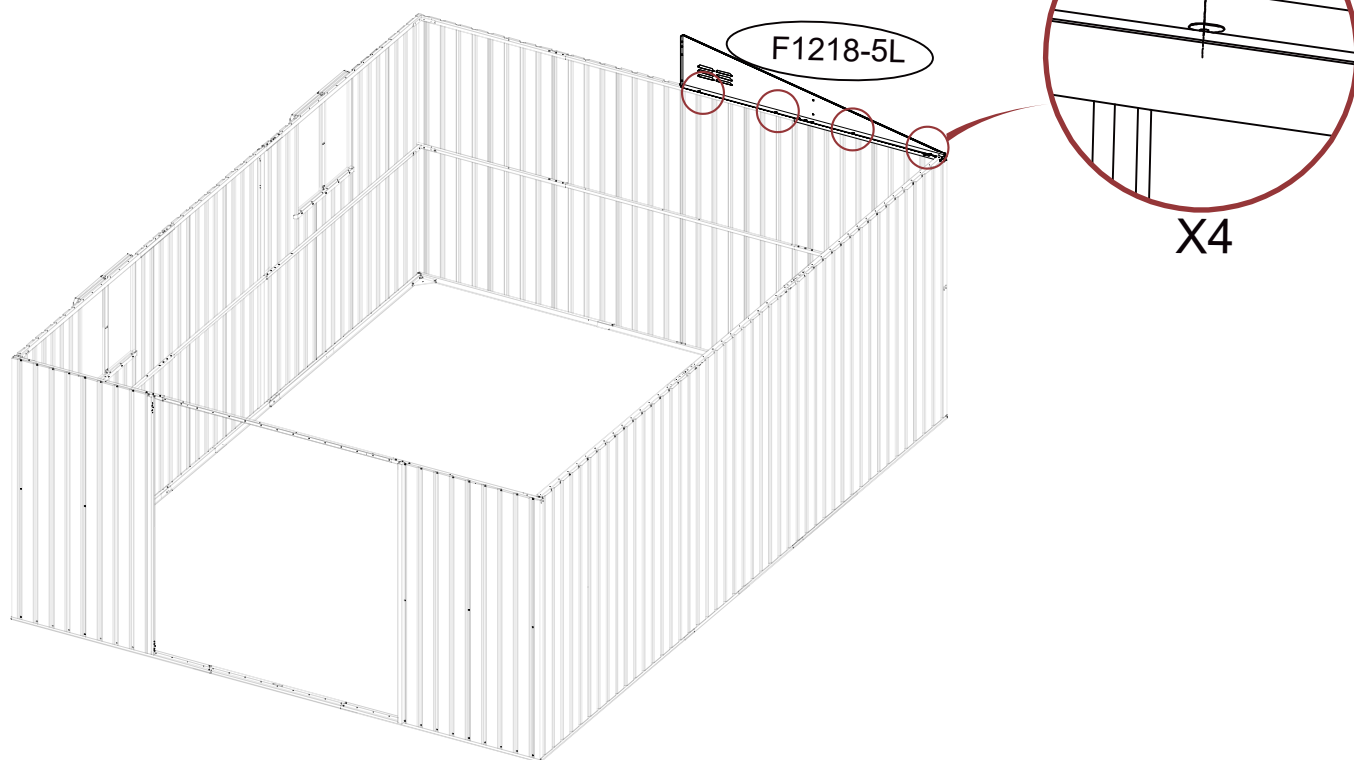


Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.

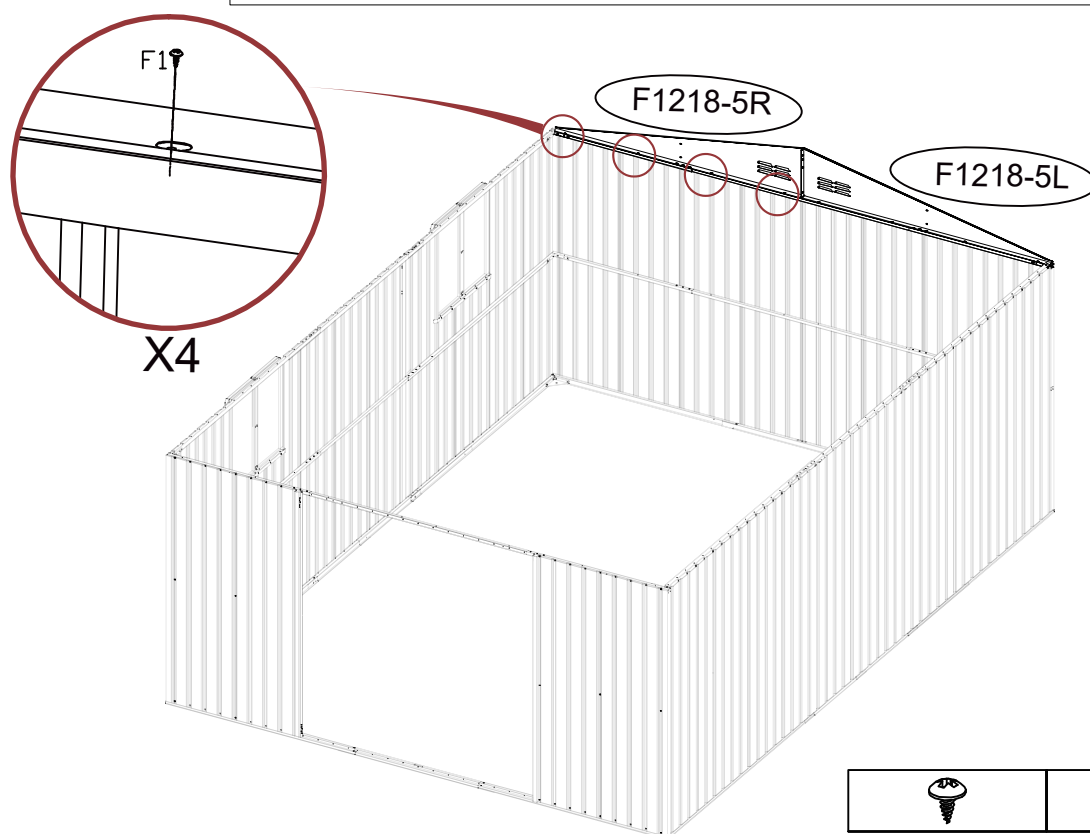

	F1	8
---	----	---

STEP 31

Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.

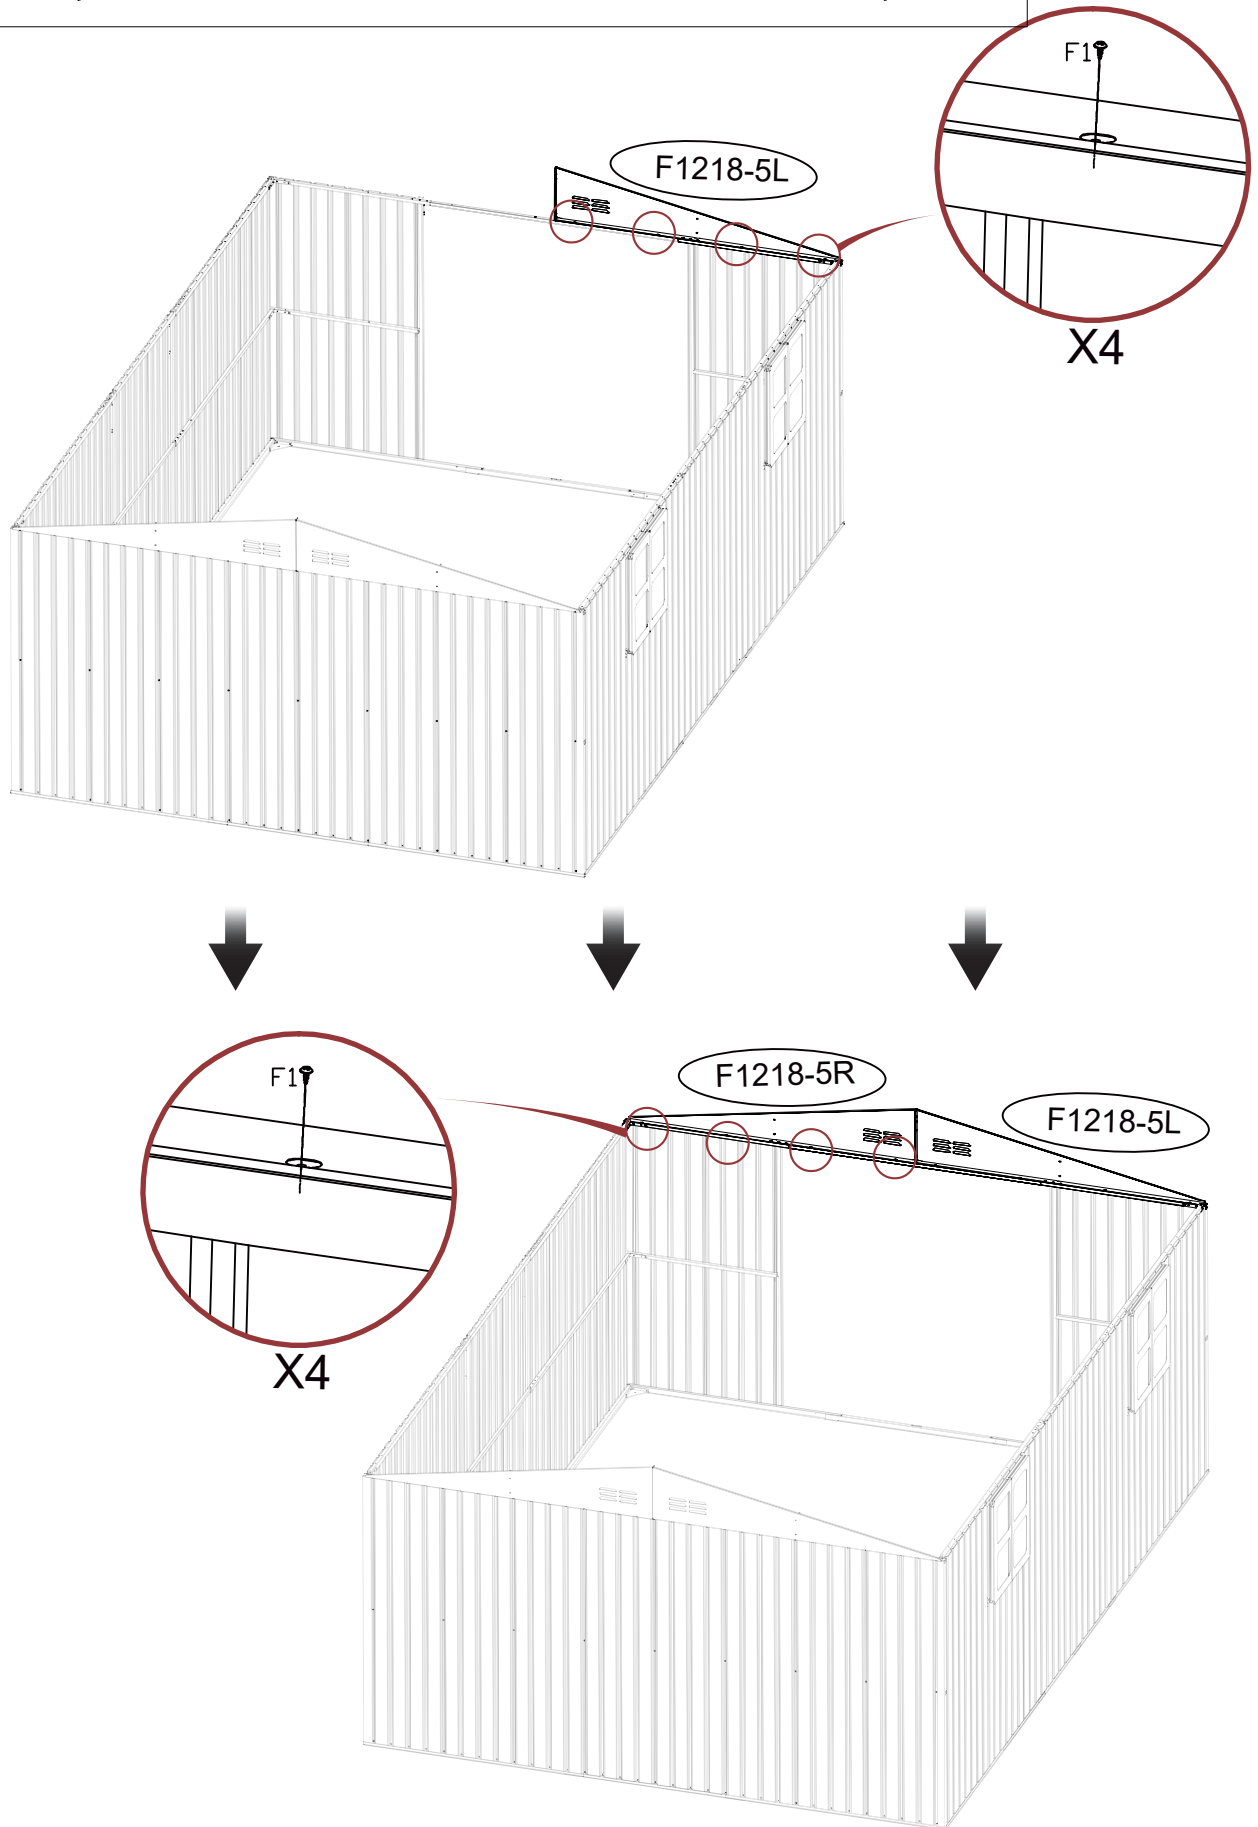

	F1	8
---	----	---