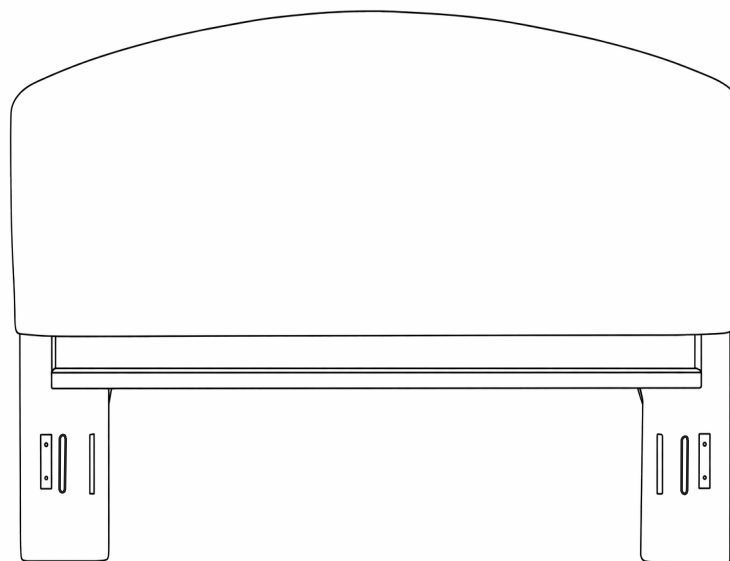


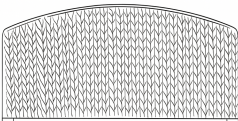

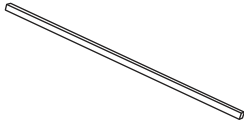
CROSLEY

FURNITURE



Queen / King Headboard
CF92010-501 / 601



PART LIST

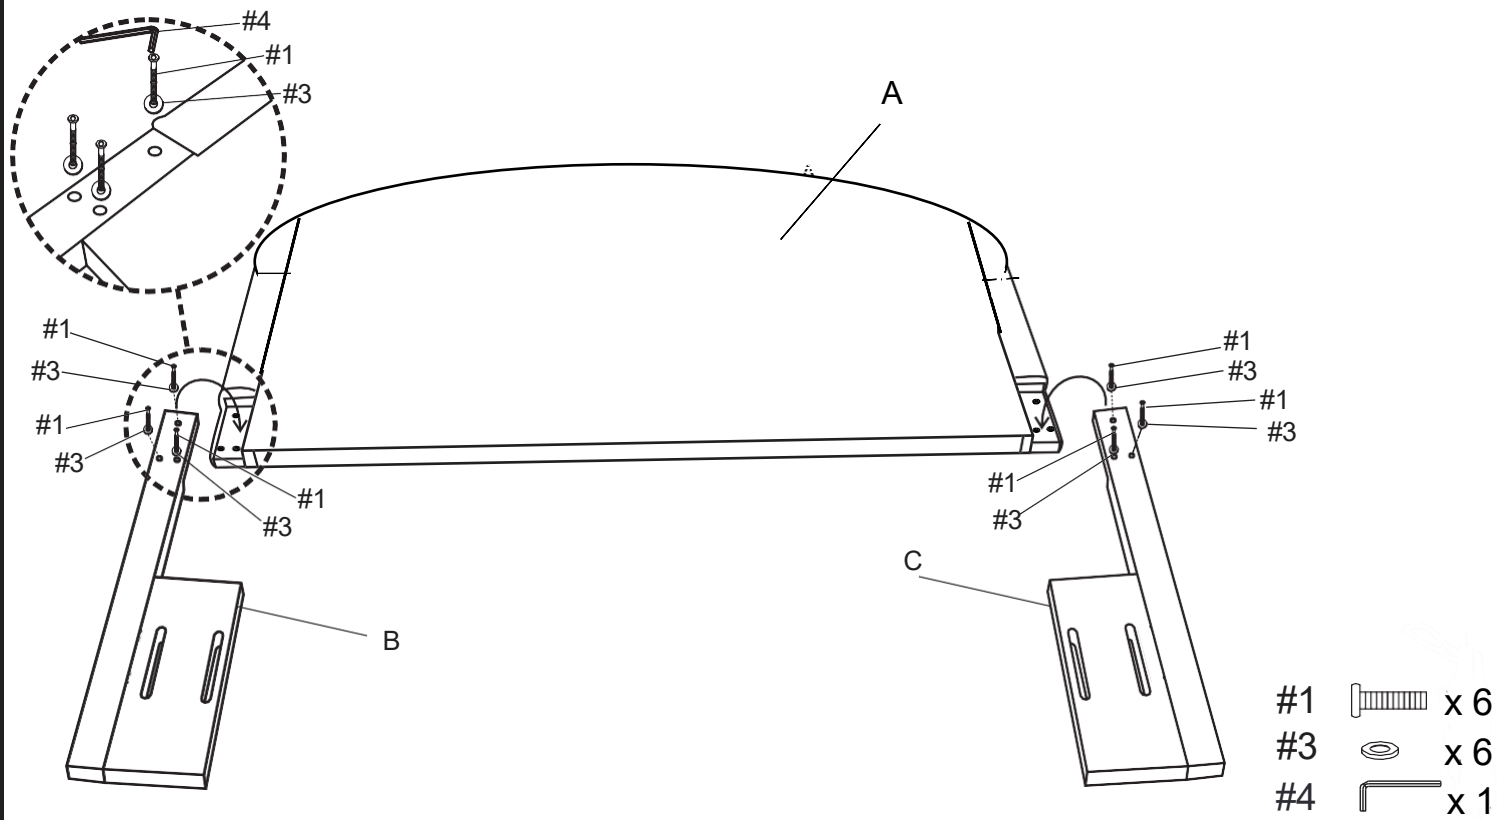
#A 	#B 	#C 	#D 
Headboard 1 PC	Right Post 1 PC	Left Post 1 PC	Crossbar 1 PC

HARDWARE LIST

#1 	#2 	#3 	#4 
$\frac{1}{4}$ " x 1.½" L Short Bolt 6 PCS (Extra 1)	$\frac{1}{4}$ " x 2" L Bolt 2 PCS (Extra 1)	Small Flat Washer 8 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Lay headboard (part A) down on a soft surface, such as carpet. Attach posts (parts B & C) to headboard (part A) using short bolts (part #1), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 2. Attach crossbar (part D) to posts (parts B & C) using bolts (part #2), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

