

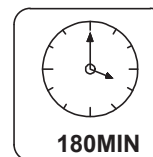
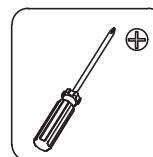
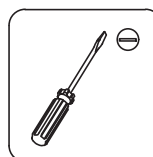



Installation & Assembly

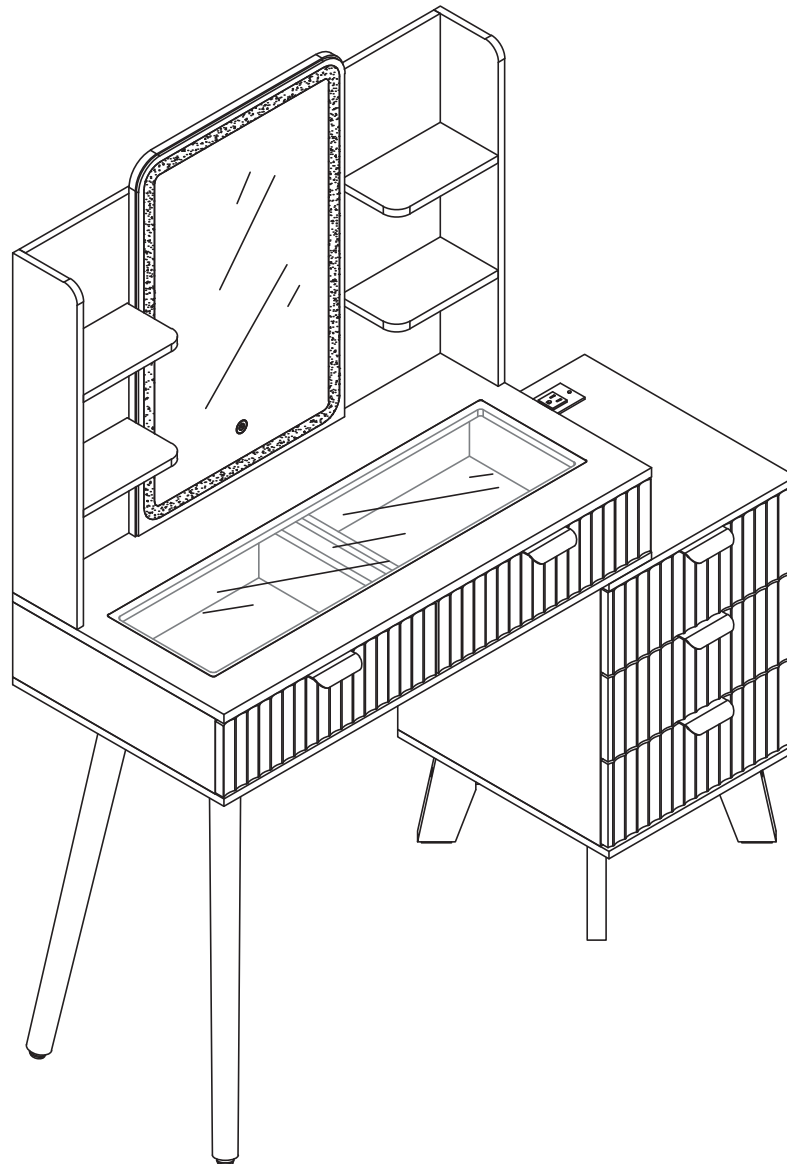


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

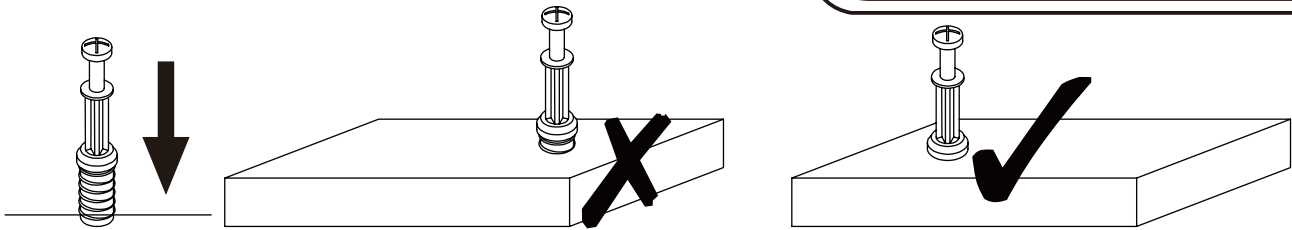


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

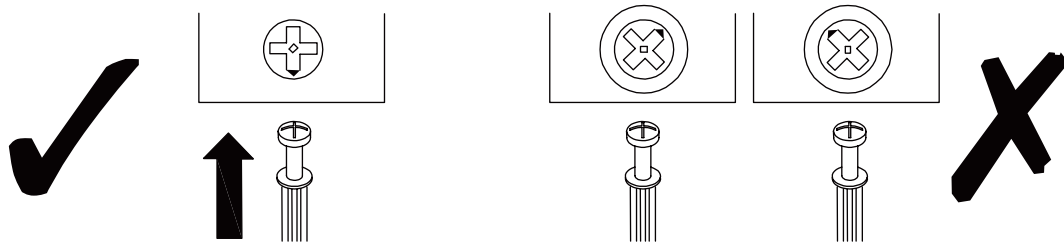











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










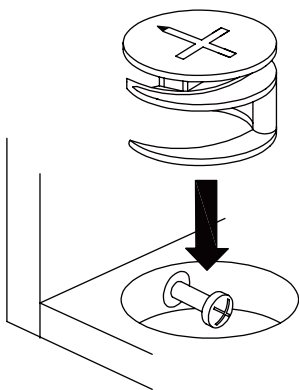






EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.
















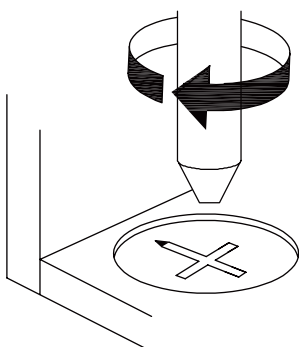




EN_Turn cam lock clockwise to tighten.

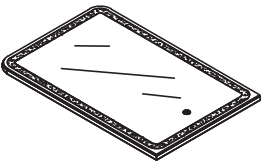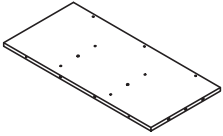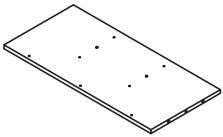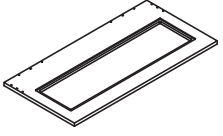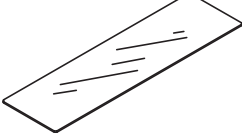

NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x4	
7		x1	
8		x1	
9		x1	
10		x1	

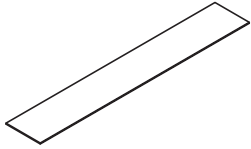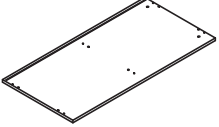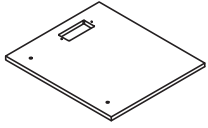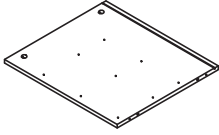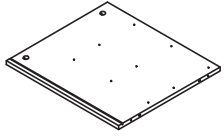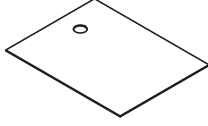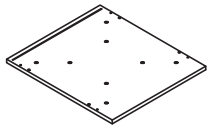NO.	PARTS	QTY	SPARE
11		x1	
12		x1	
13		x1	
14		x2	
15		x1	
16		x1	
17		x1	
18		x1	
19		x1	
20		x1	

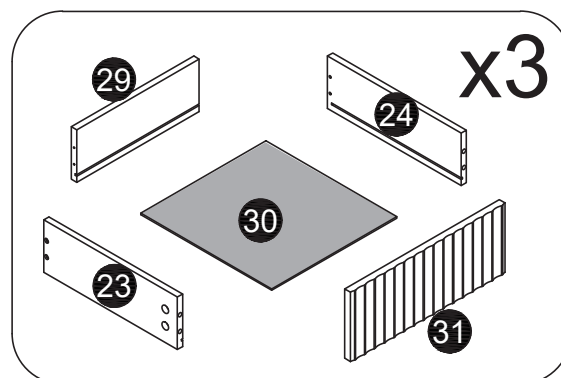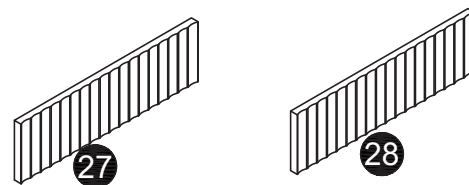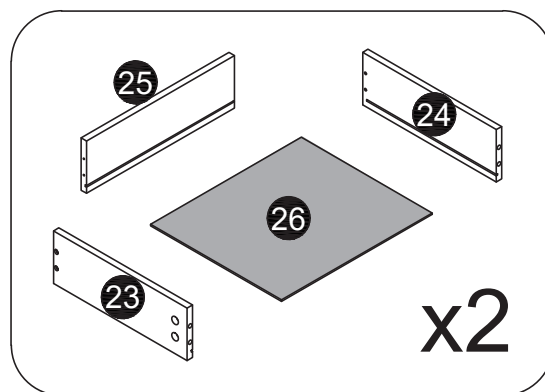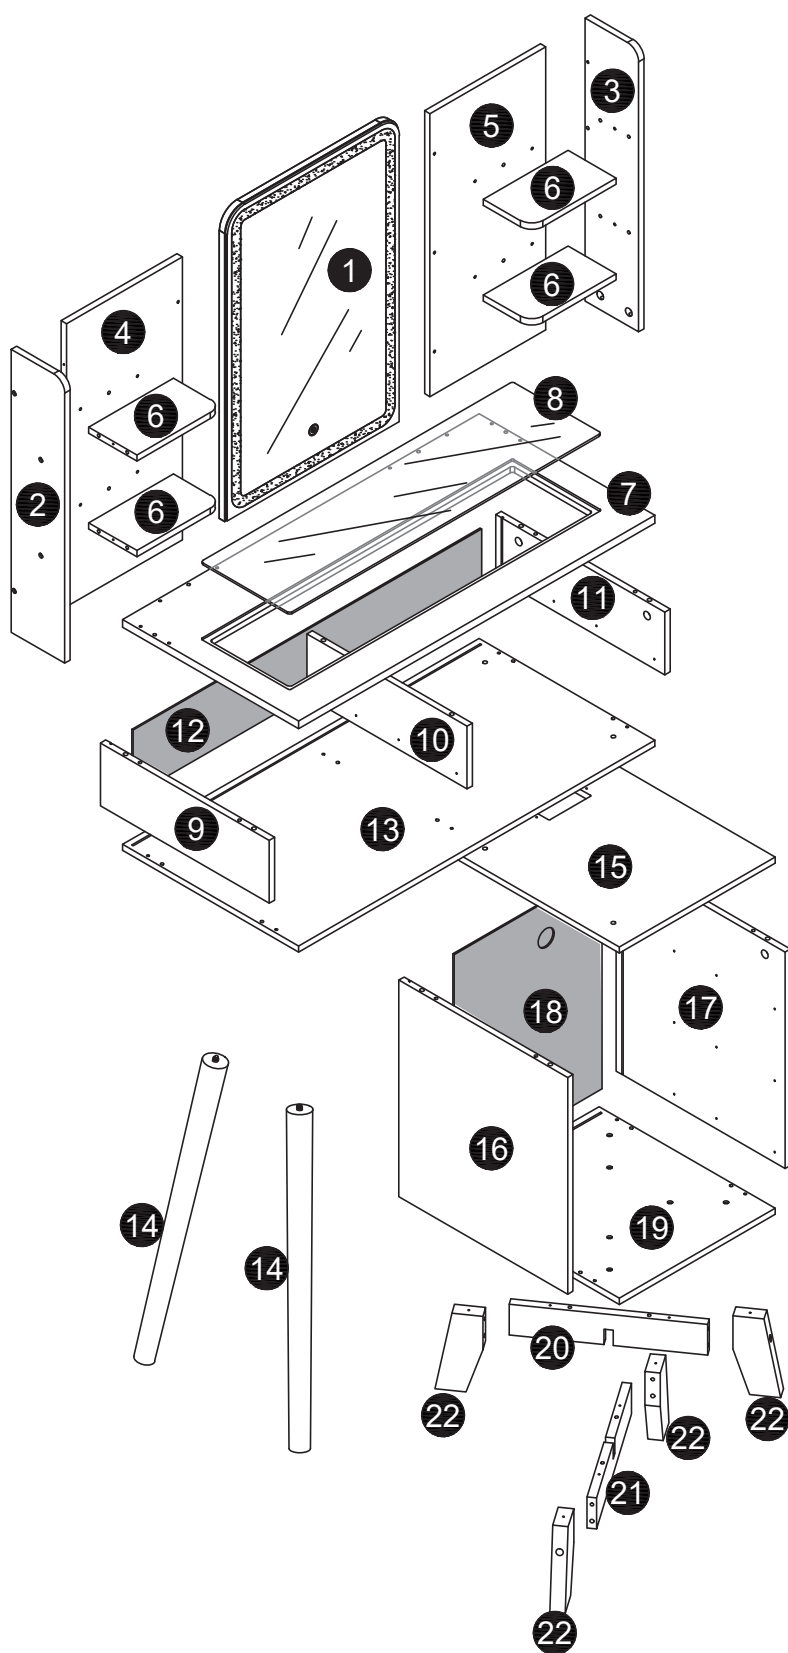


 A x38 Ø6x35mm +3(spare)	 B x38 Ø15x10mm +3(spare)	 C x46 Ø6x30mm +4(spare)	 D x48 Ø4x35mm +4(spare)	 E x60 Ø3.5x12mm +6(spare)	 F x5 F-1 F-2
 G x4	 H x4 Ø6x70mm	 I x8 Ø4x35mm	 J x6 Ø4x20mm	 K x2	 L x10 Ø4x12mm
 M x2 M-1 M-2	 N x1	 O x2 Ø3.5x12mm	 P x1	 Q x10 Ø3x16mm +1(spare) Q-1 Q-2	 R x2
 S x2 Ø4x14mm S-1 S-2	 T x2 Ø6x30mm	 U x16 +4(spare)	 V x4		
 CL x5 L300mm	 CR x5 L300mm	 DL x5 L300mm	 DR x5 L300mm		

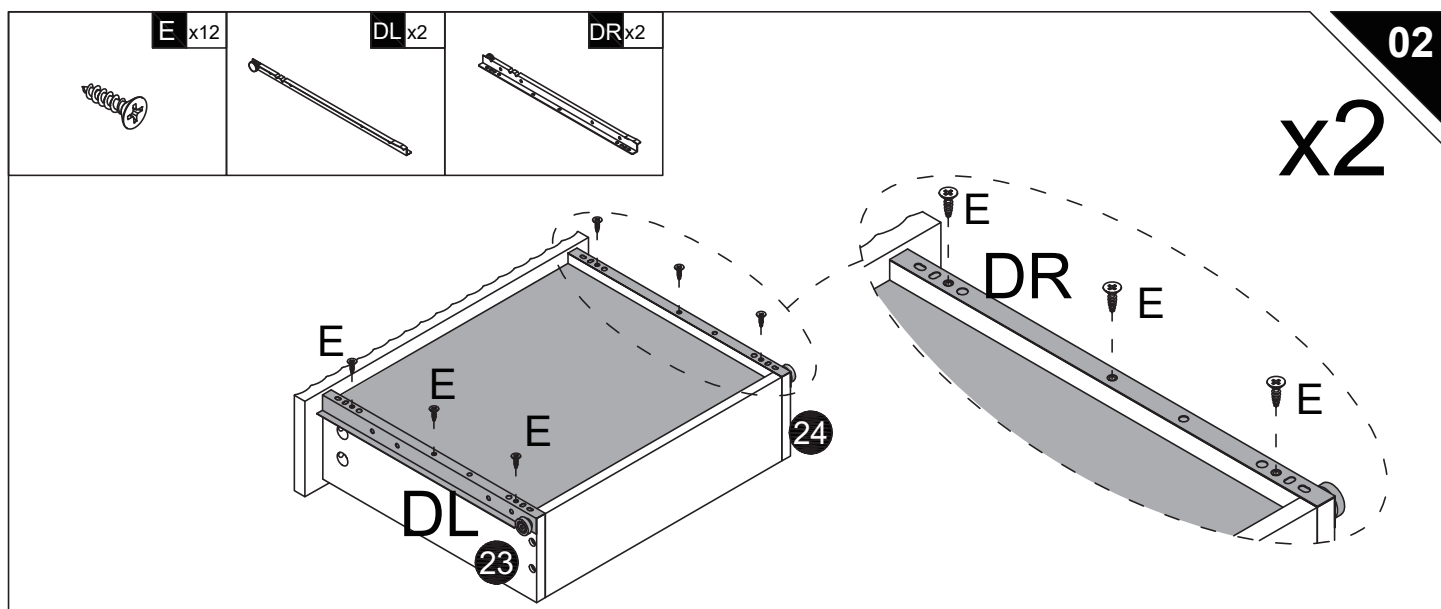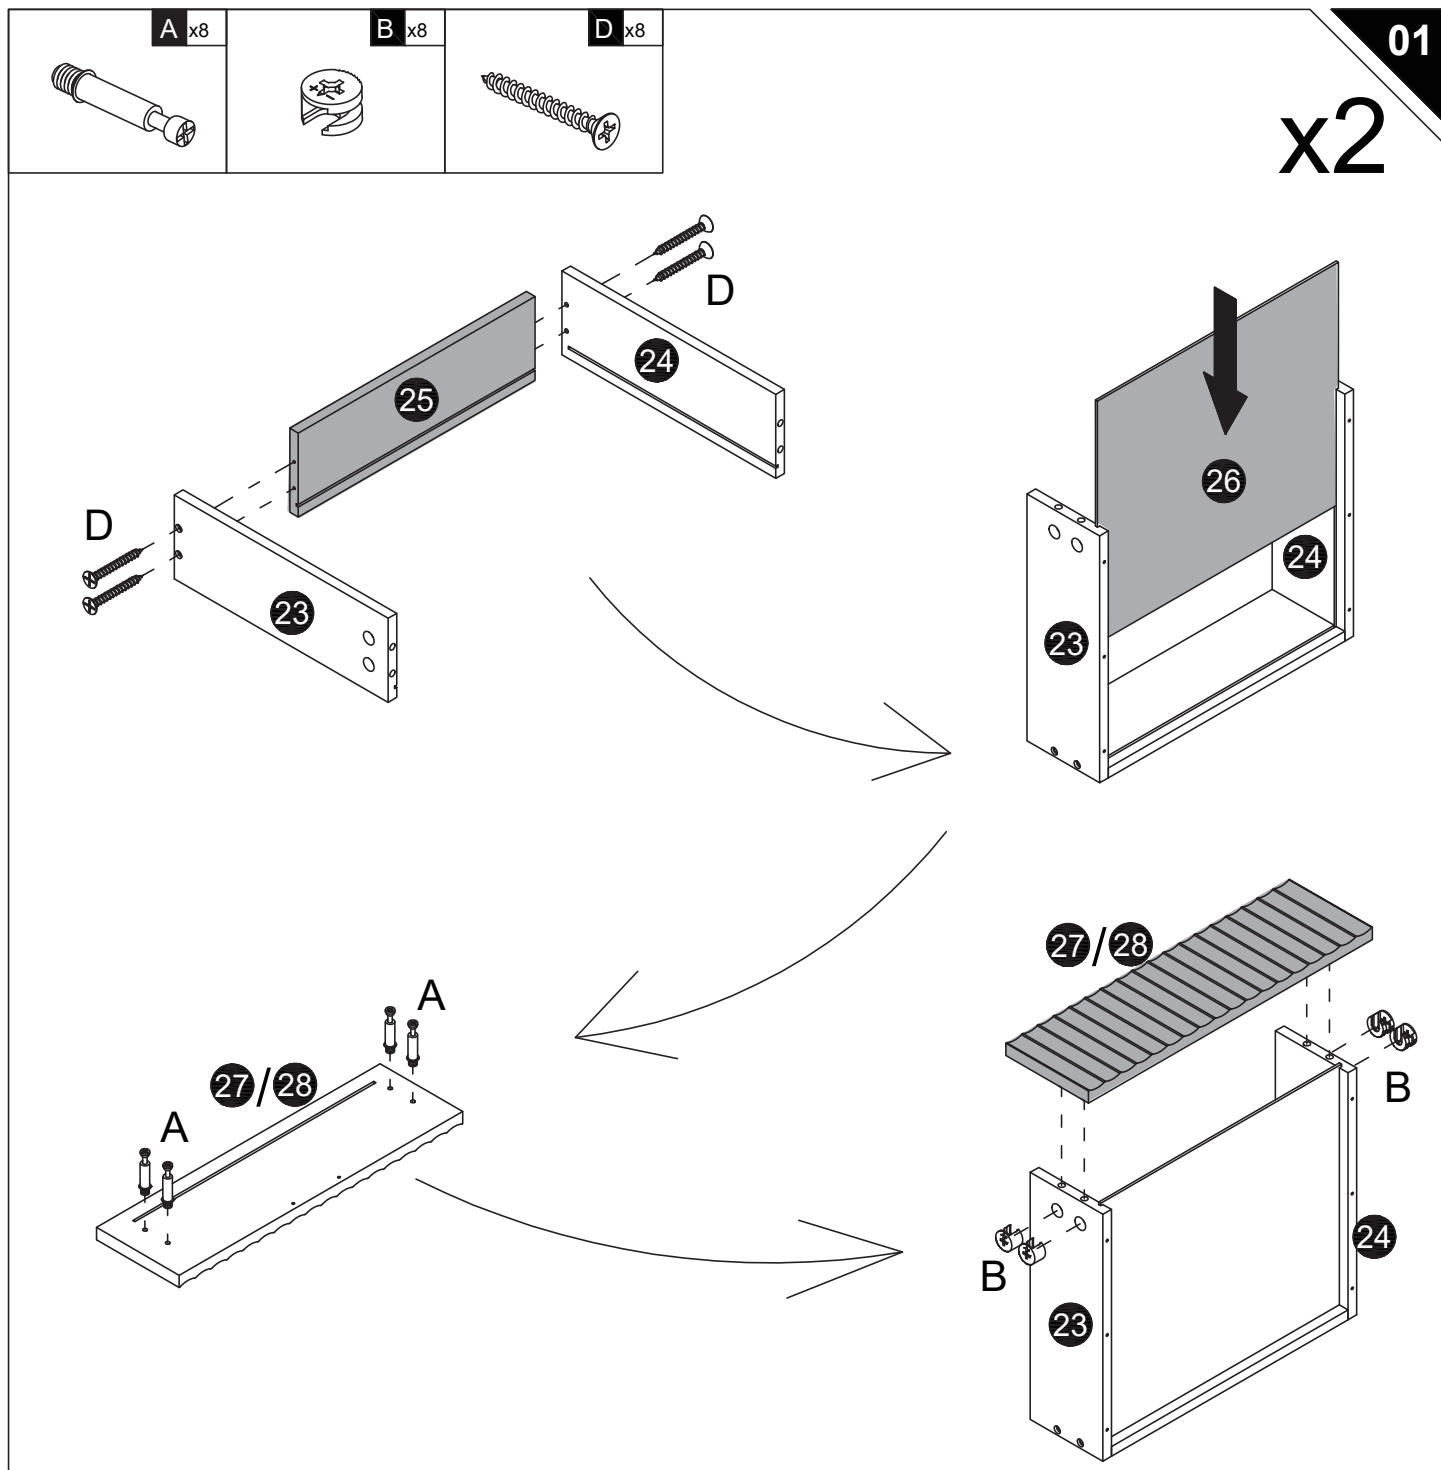

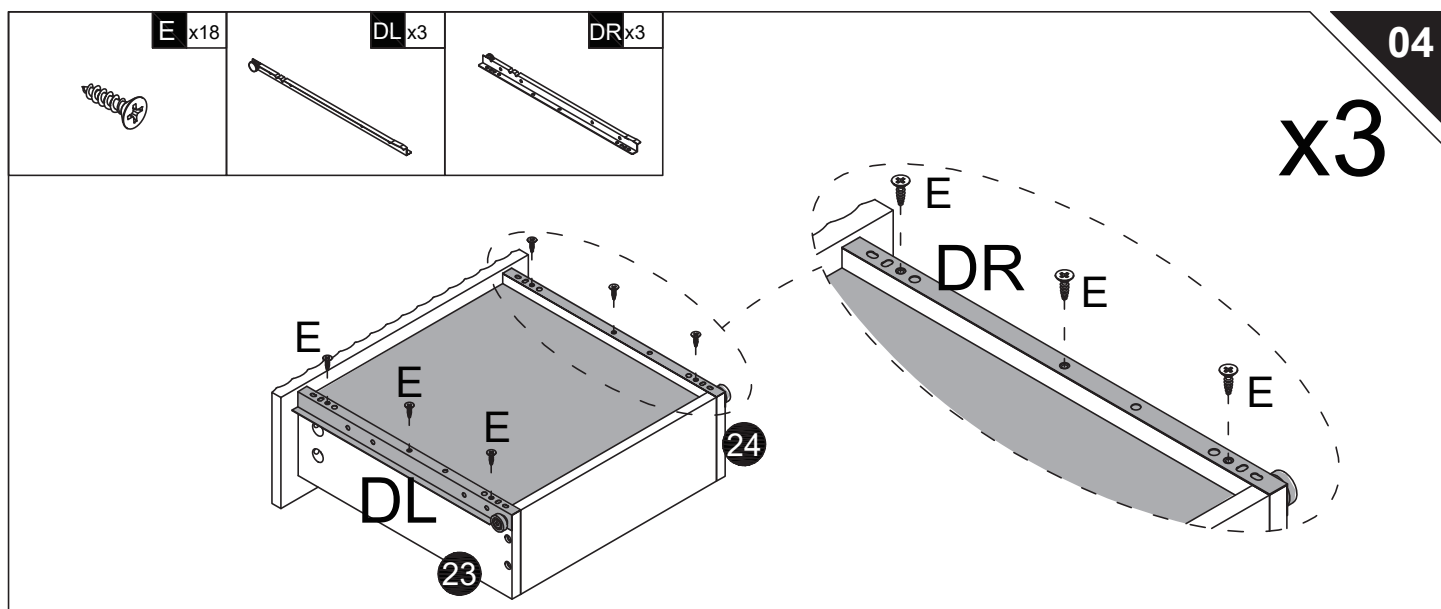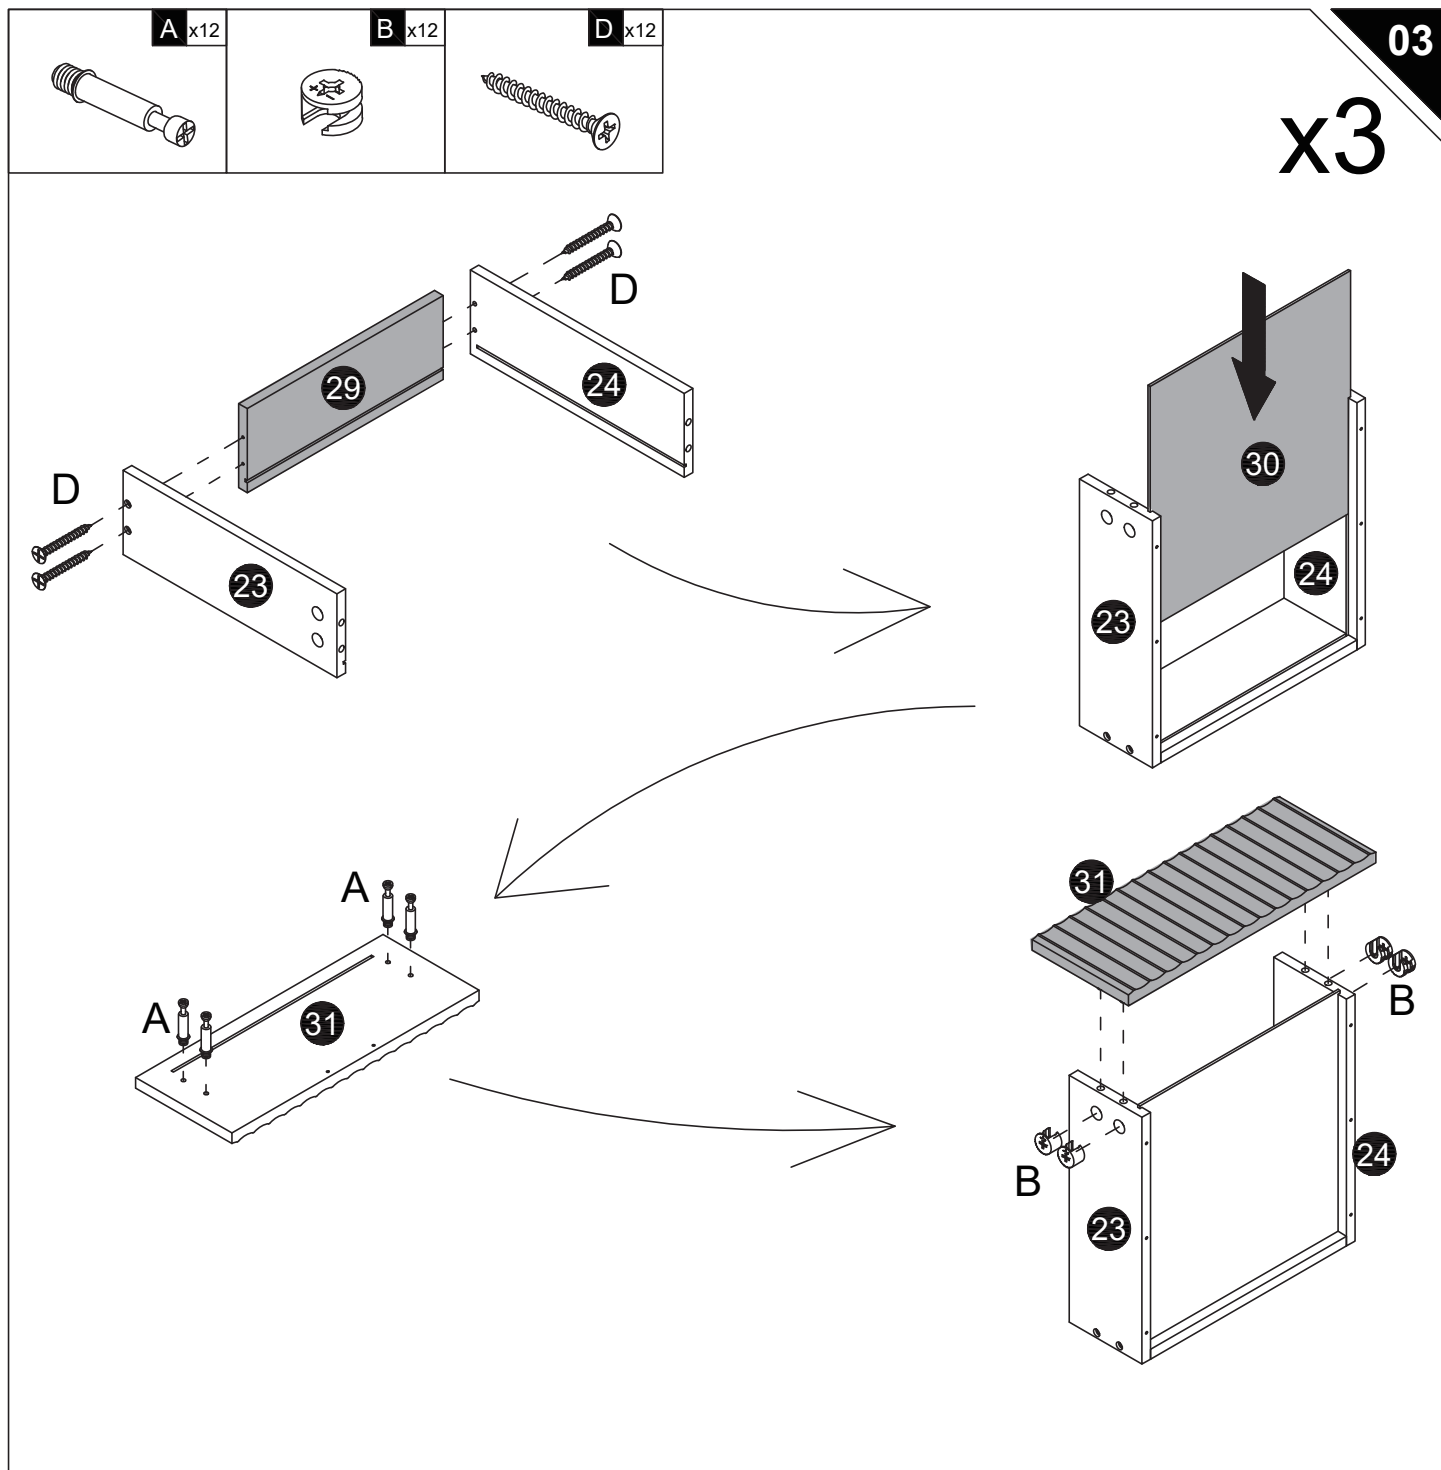



F x5



F-1




F-2

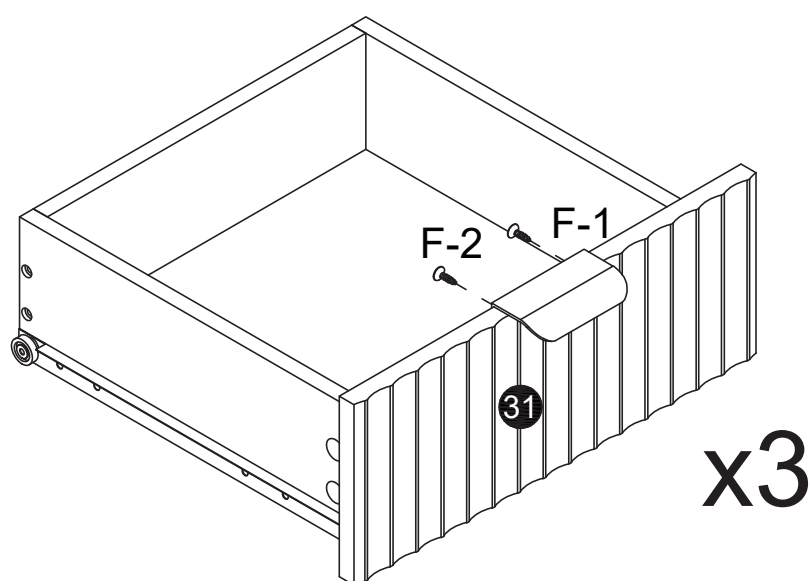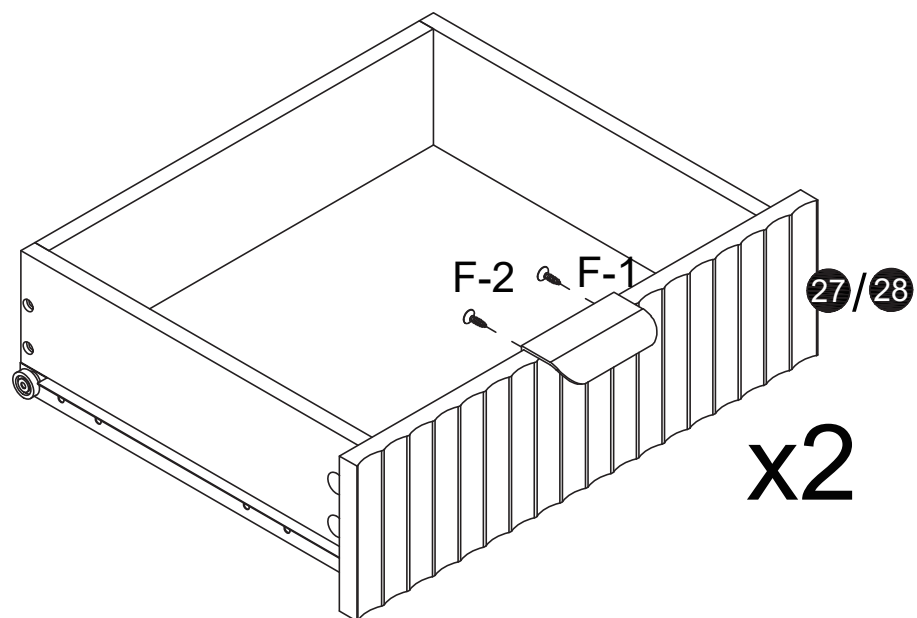

E x9

CL x3


06

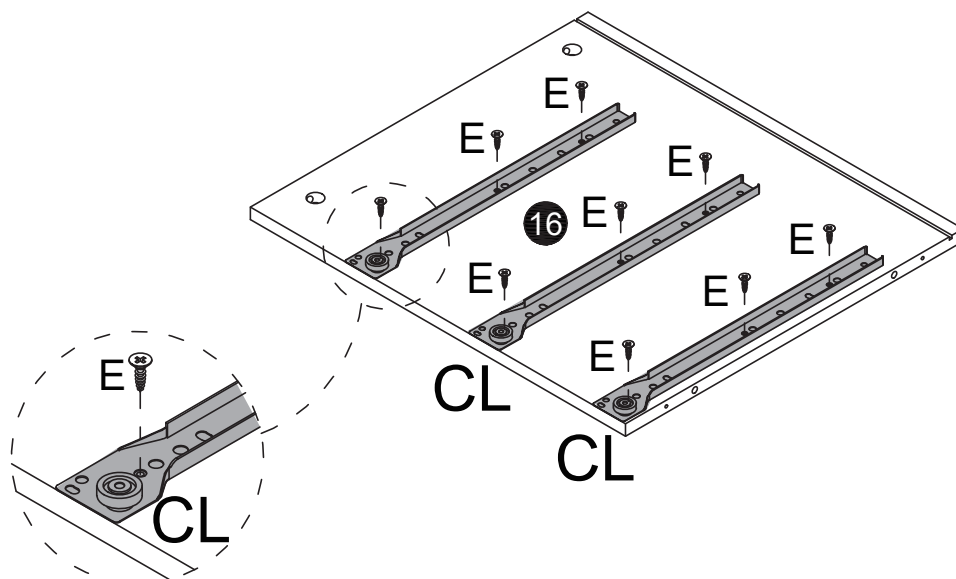

E x9

CR x3


07

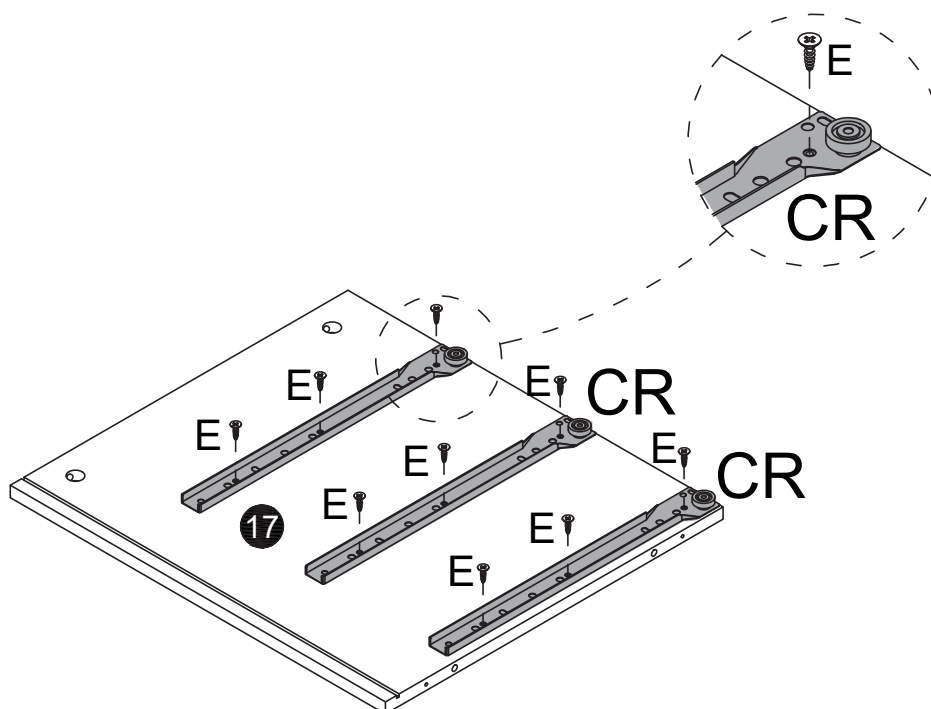

C x4

G x4

H x4

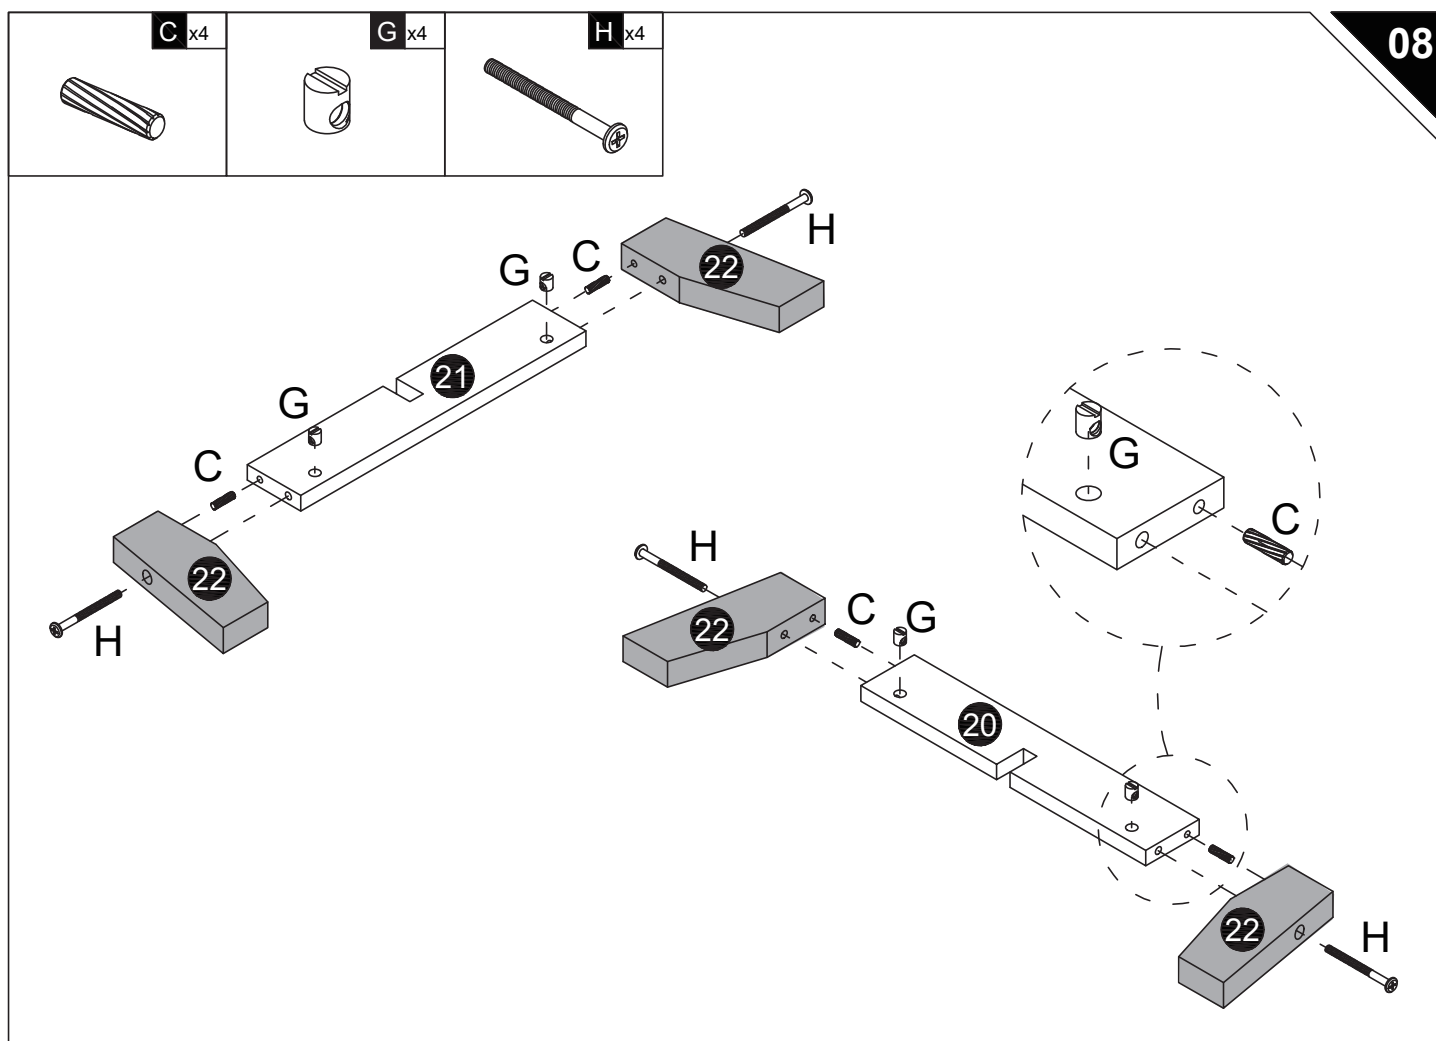


C x4

I x8



V x4

First install component 20,
then install component 21.

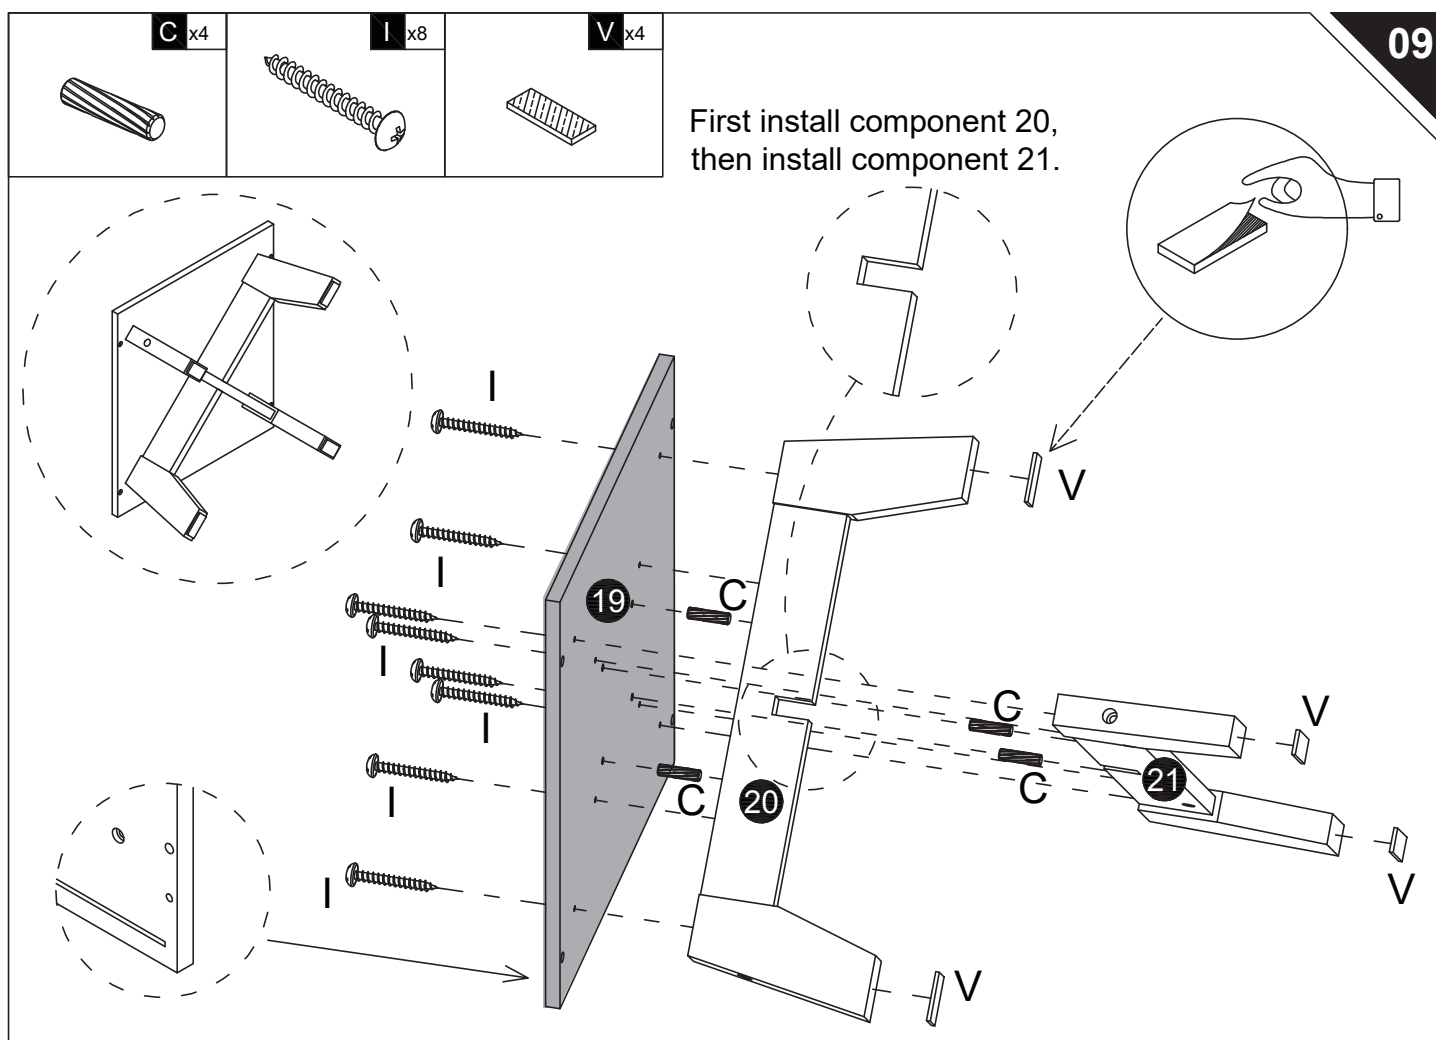


C x4


D x4

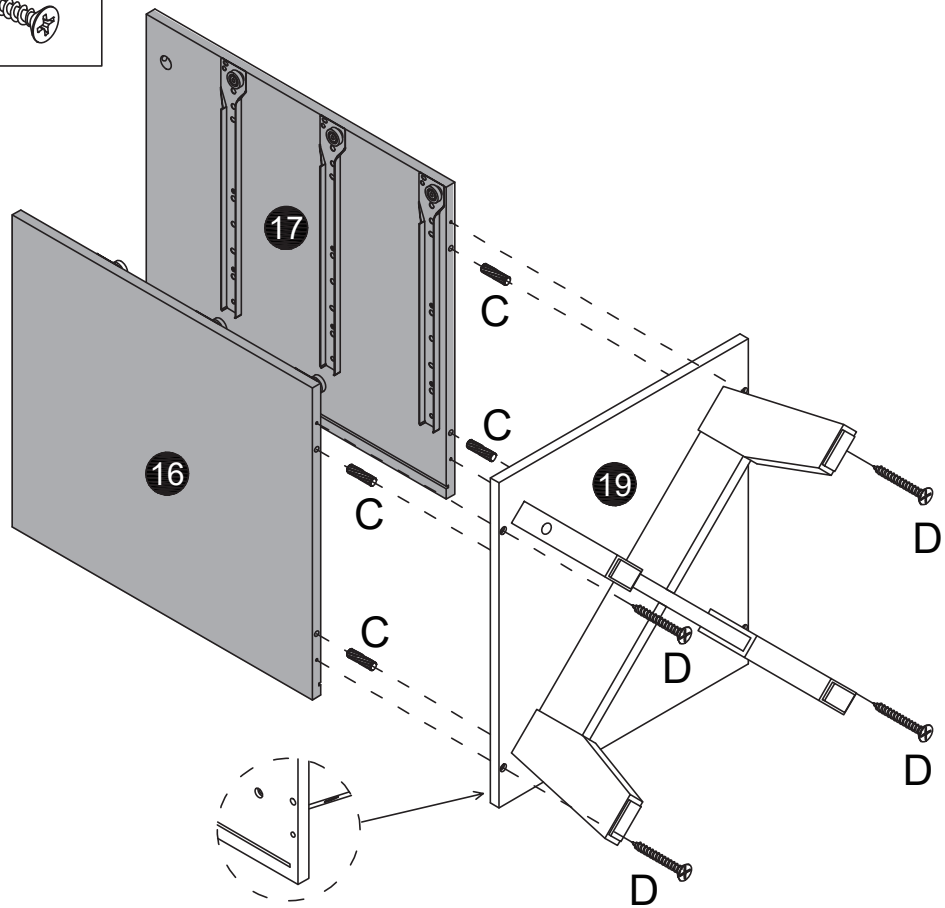


C x4

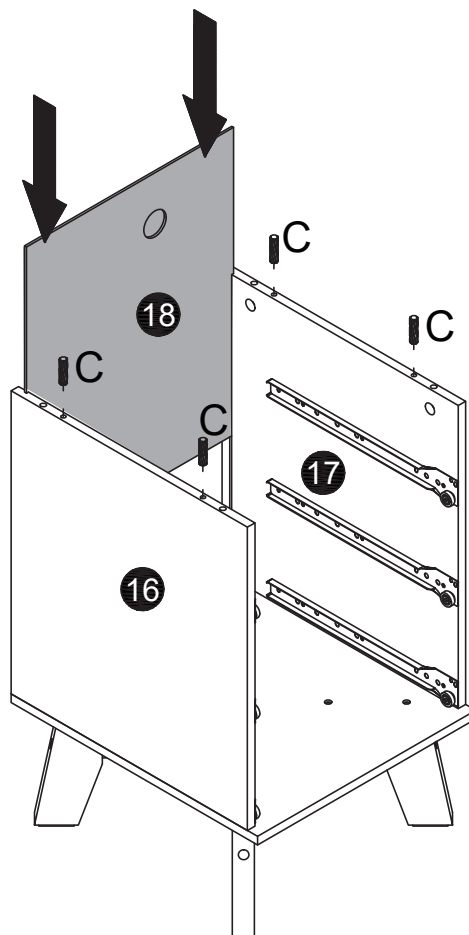

A x4




12



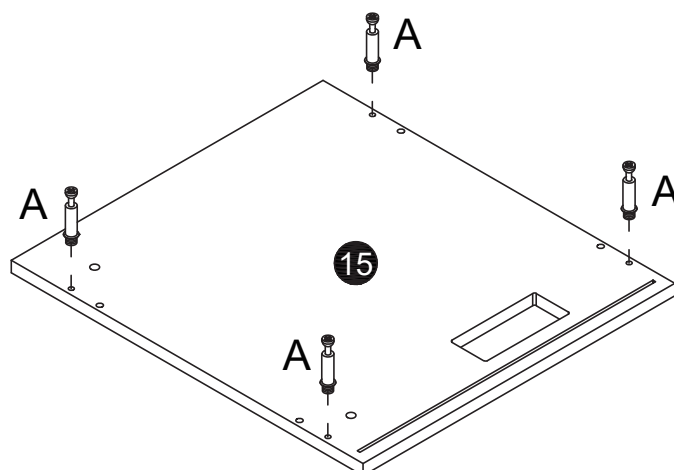


B x4





13

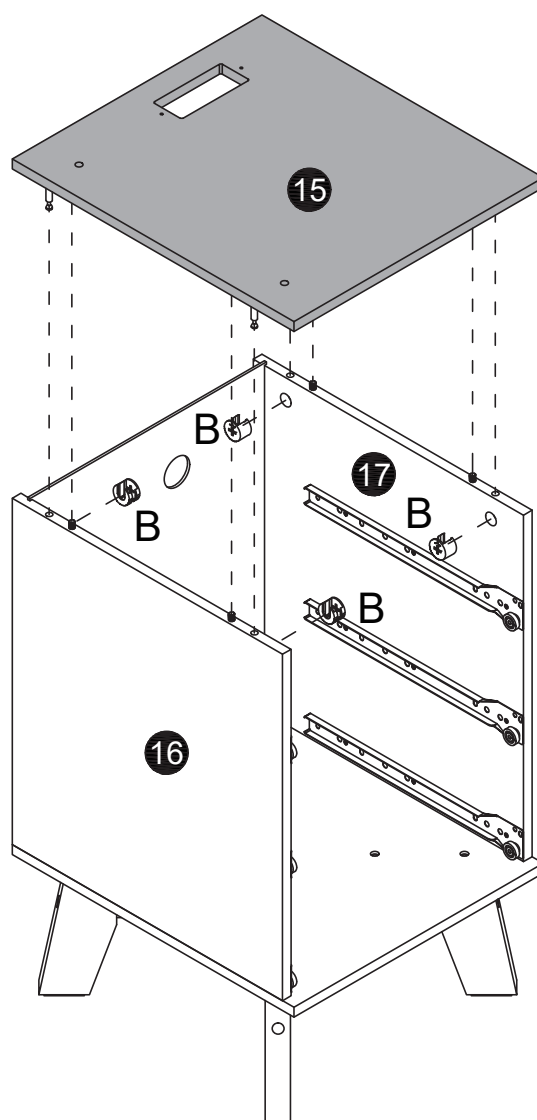

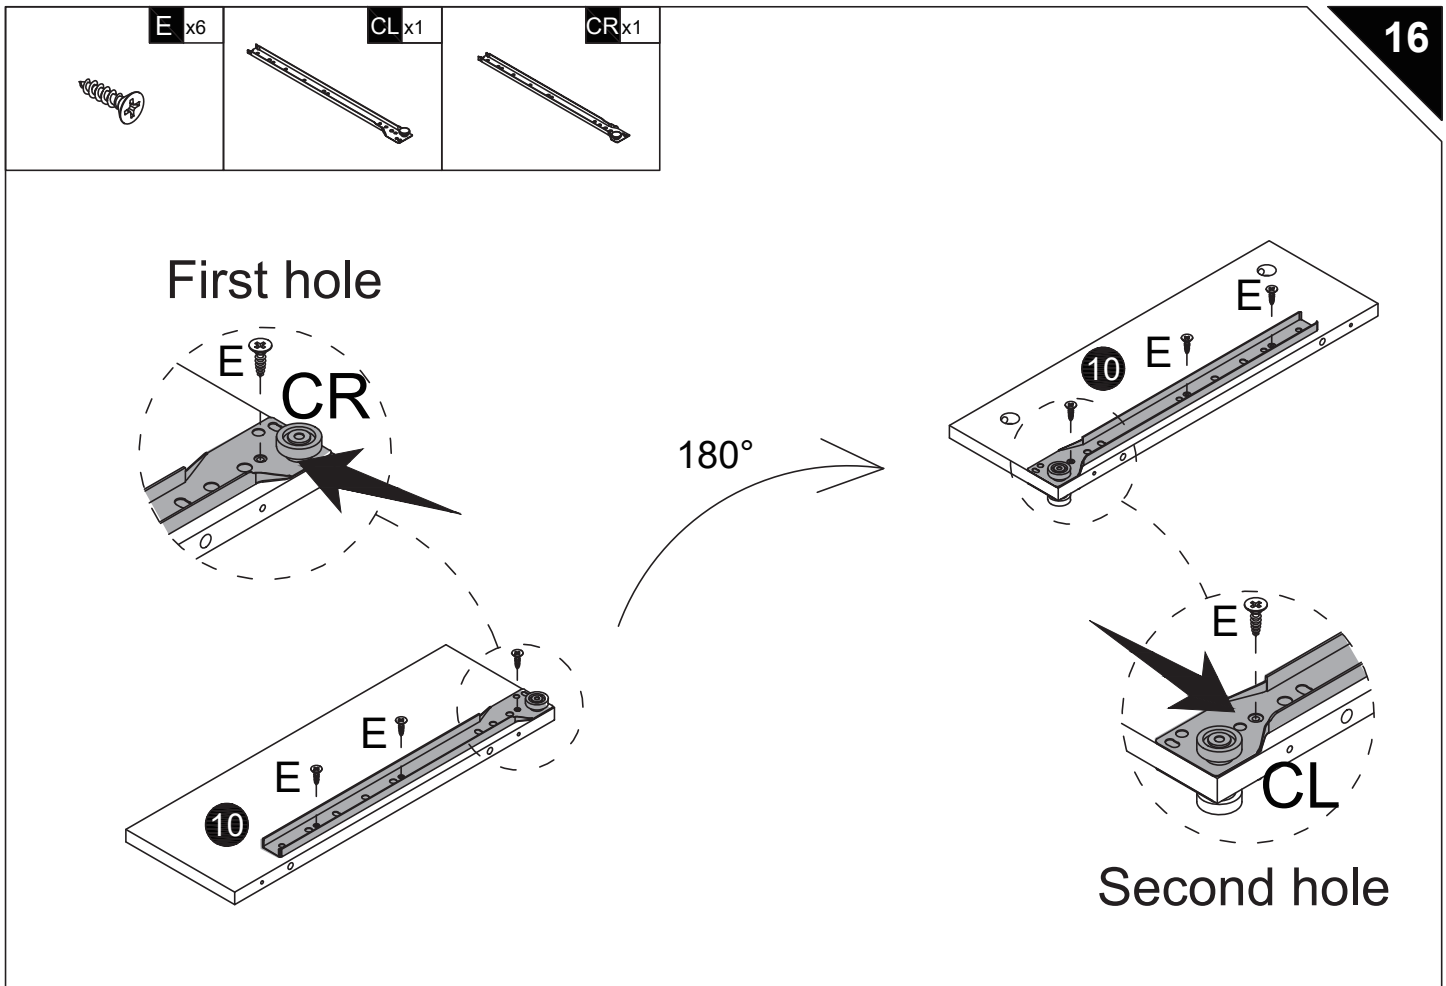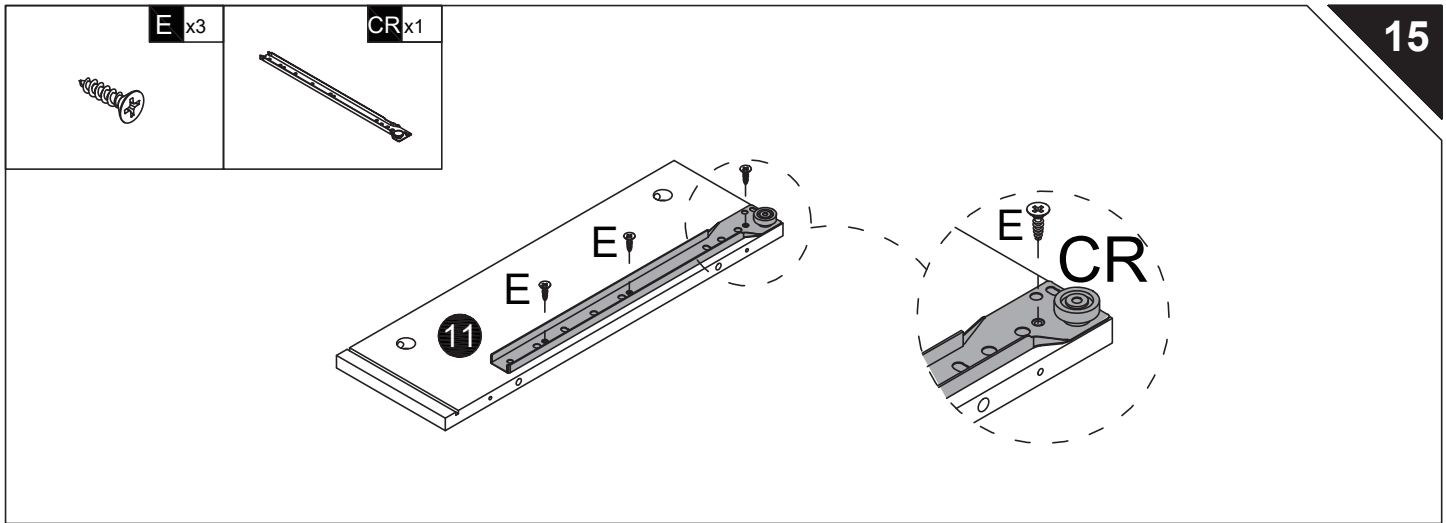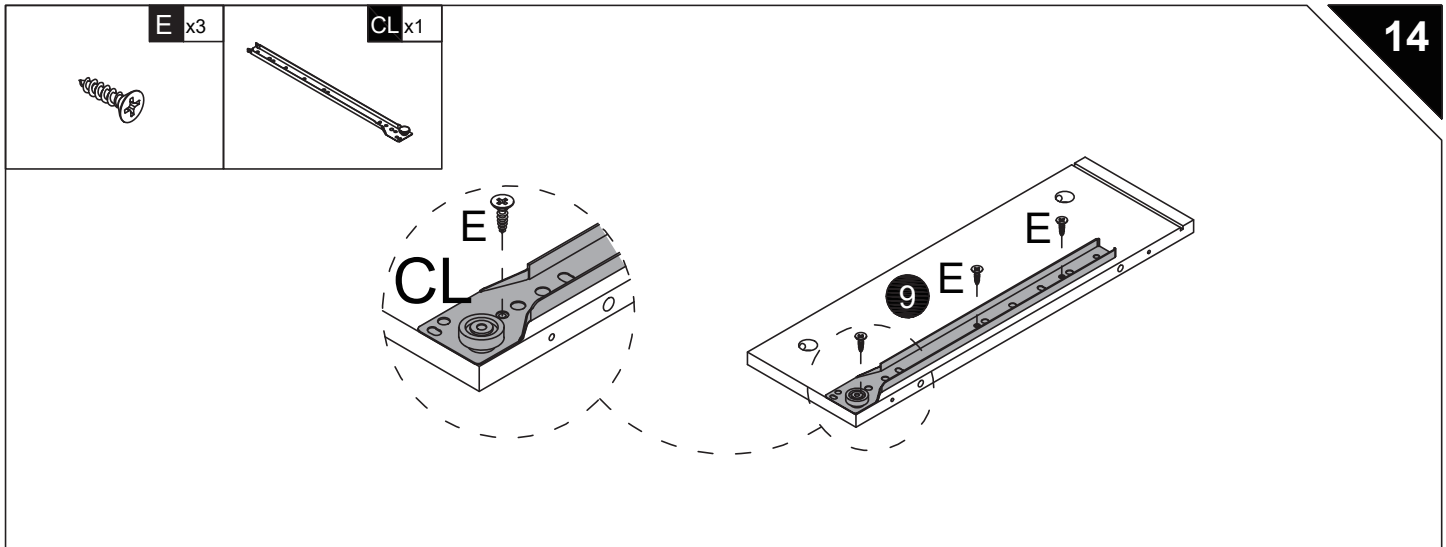


C x6

D x6

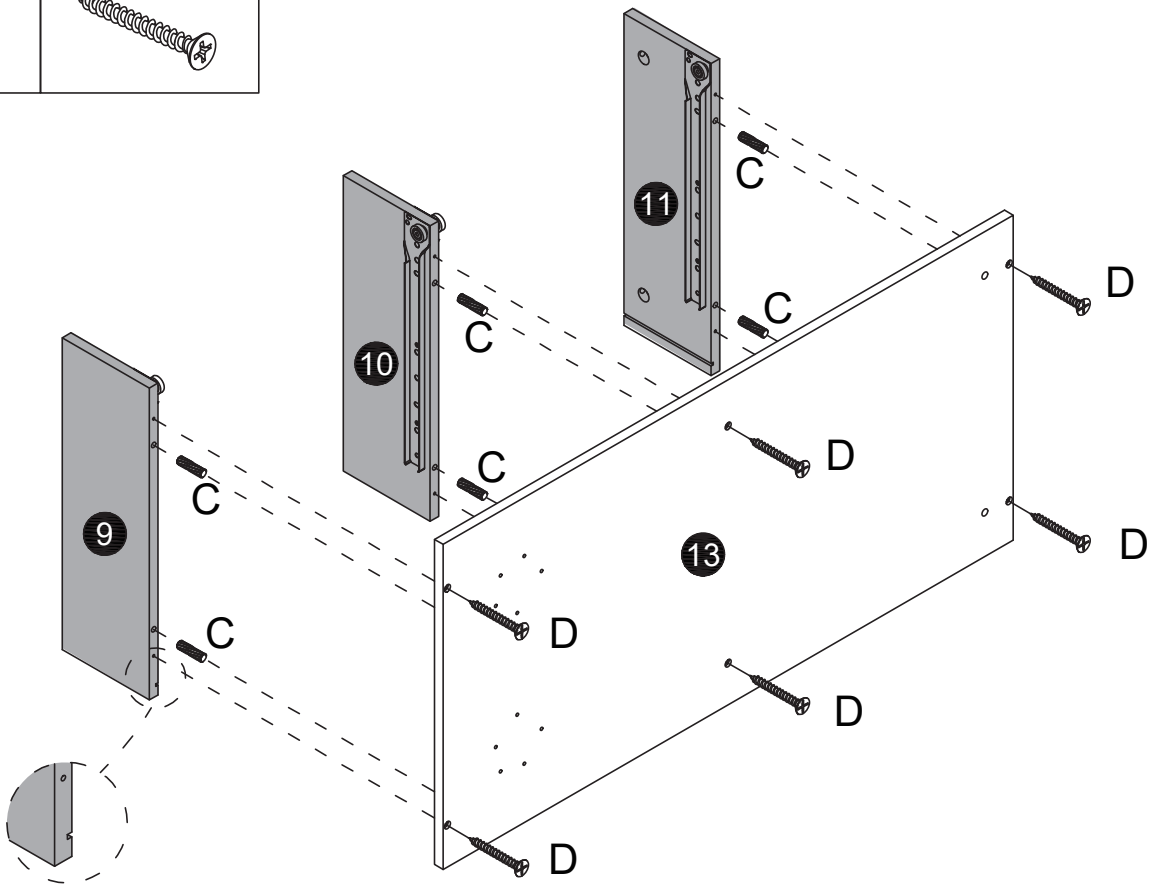

K x2


L x10

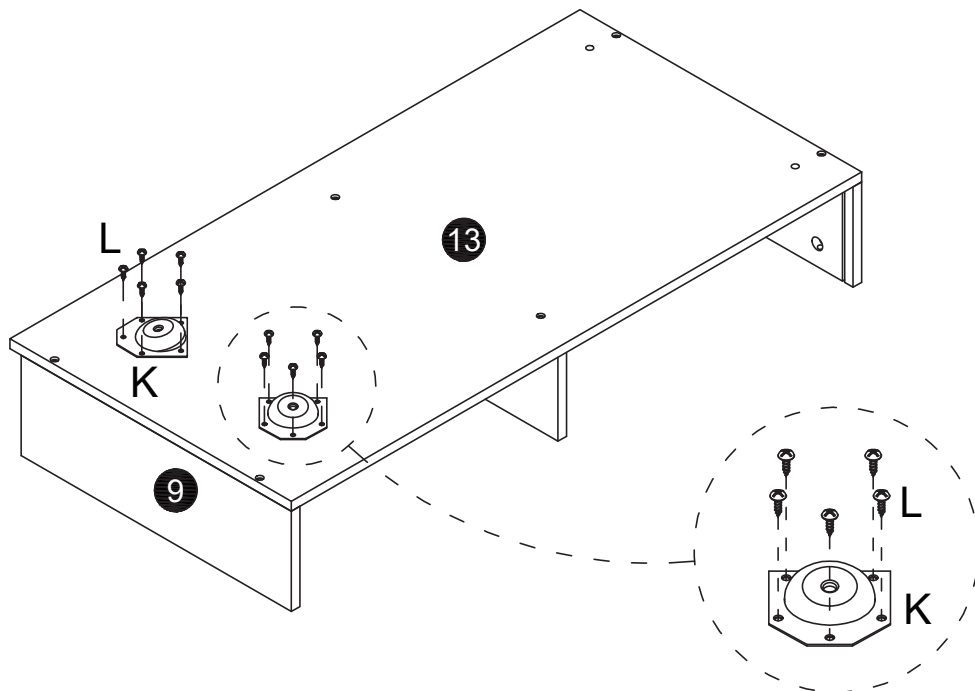

R x2



19

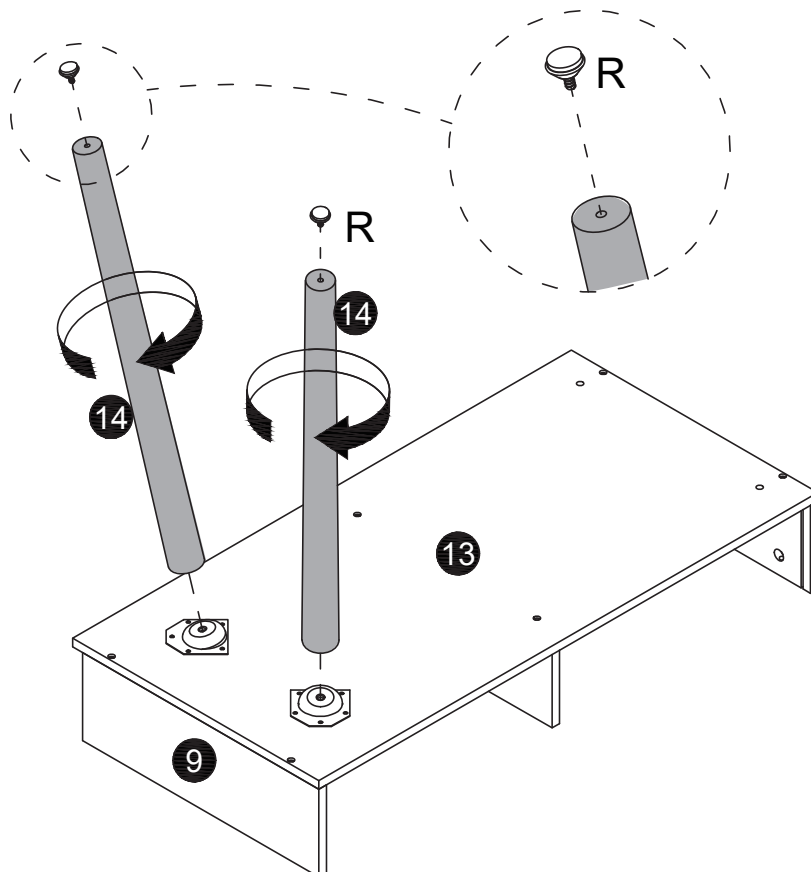

M x2





M-1





M-2


20

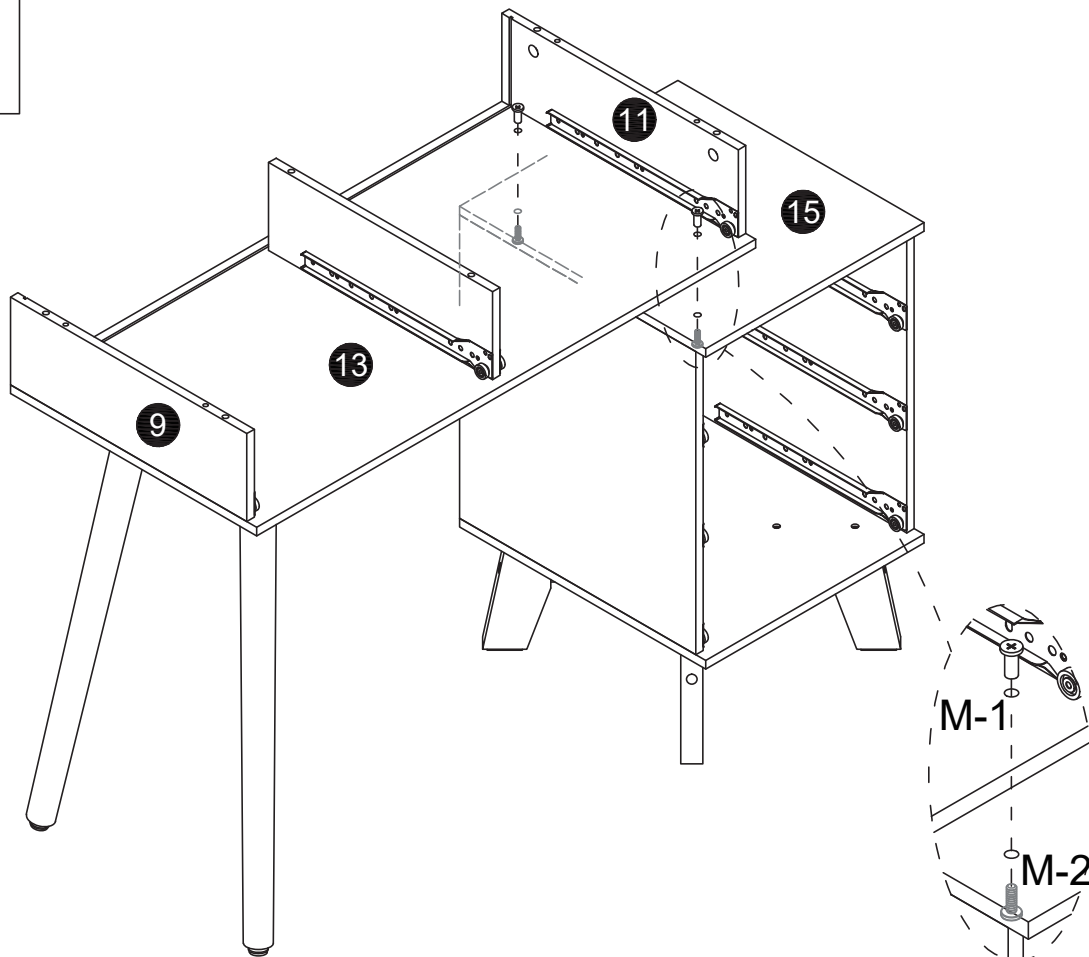

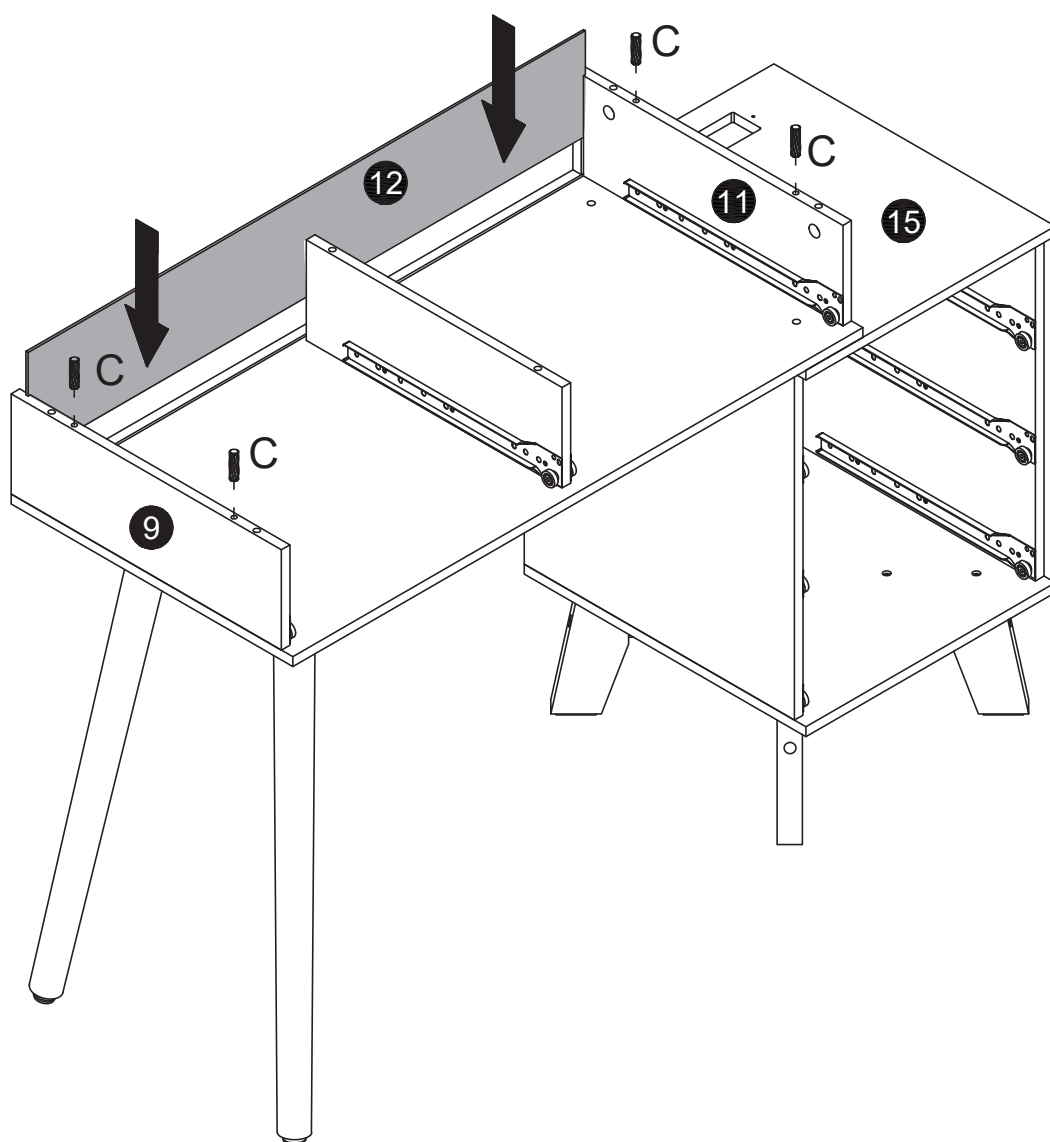


A x6

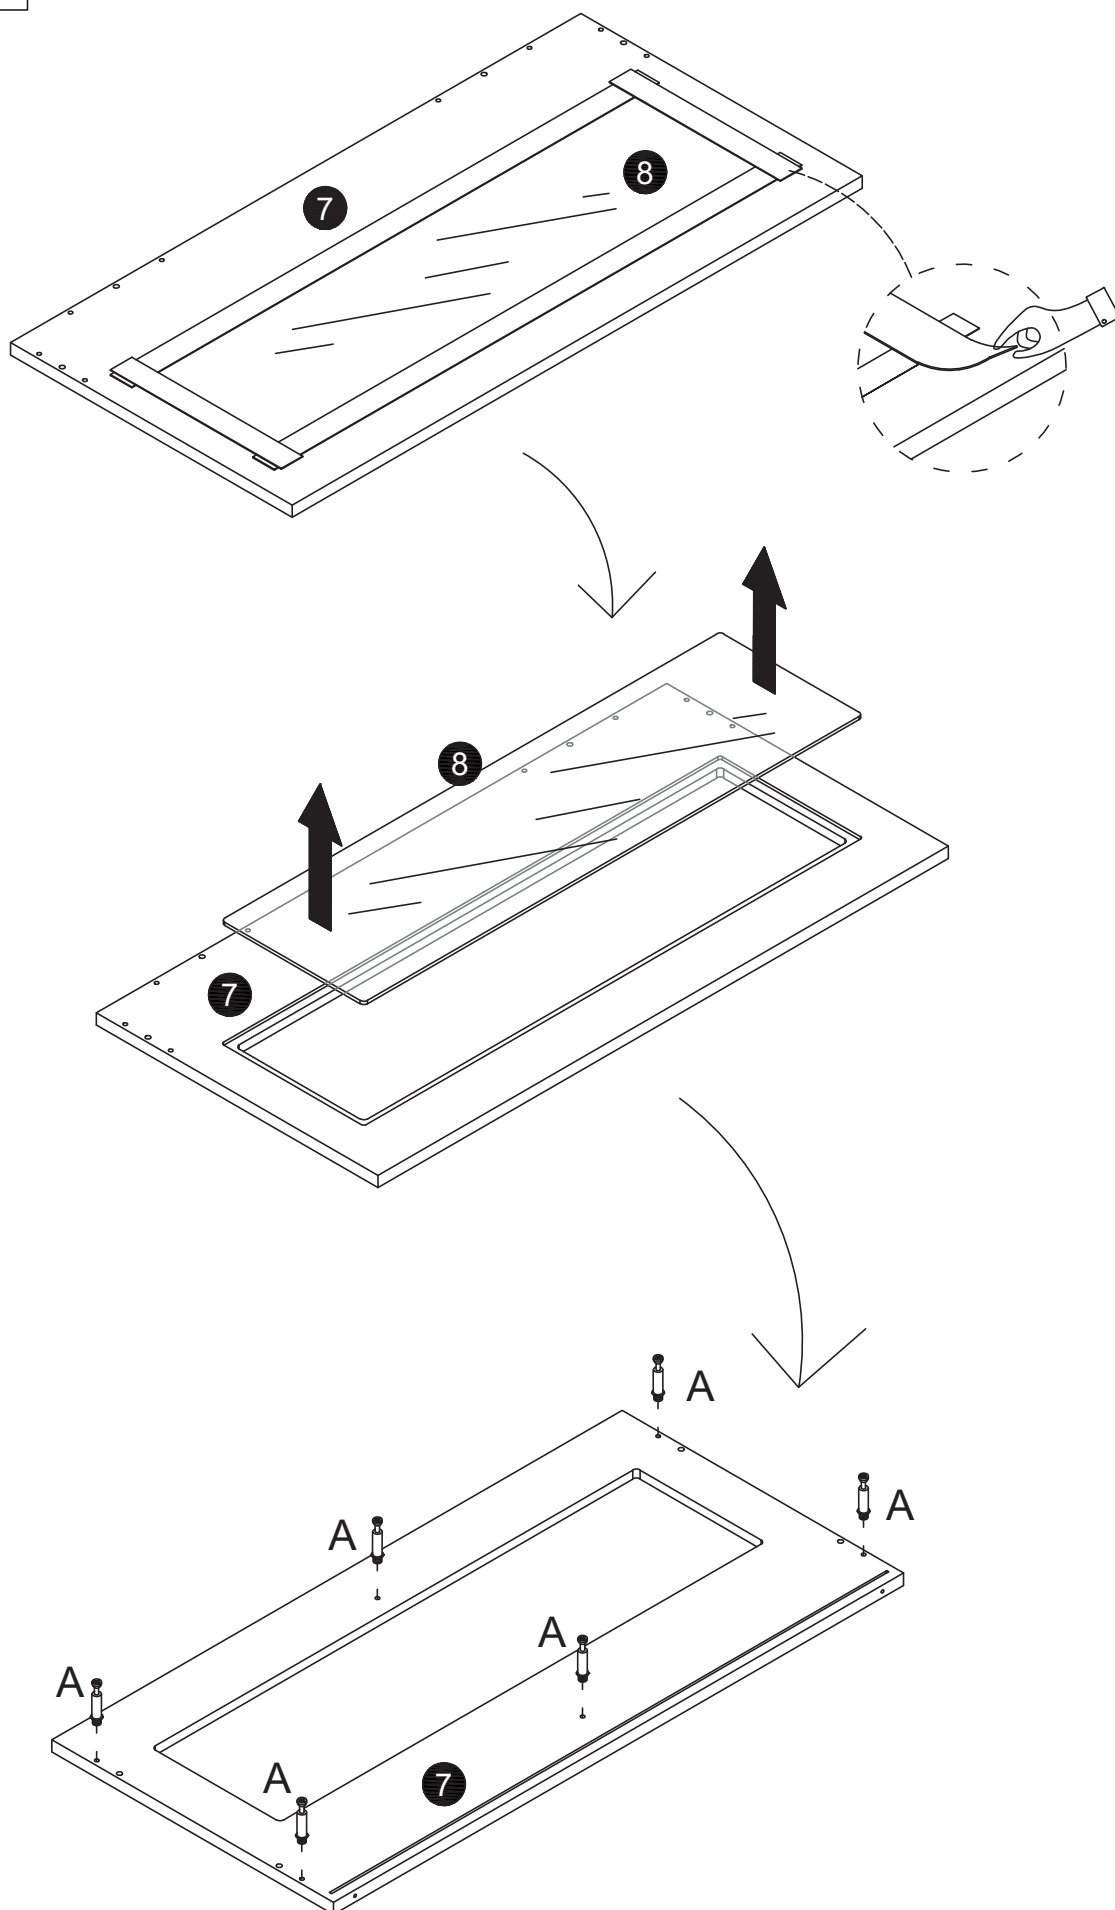

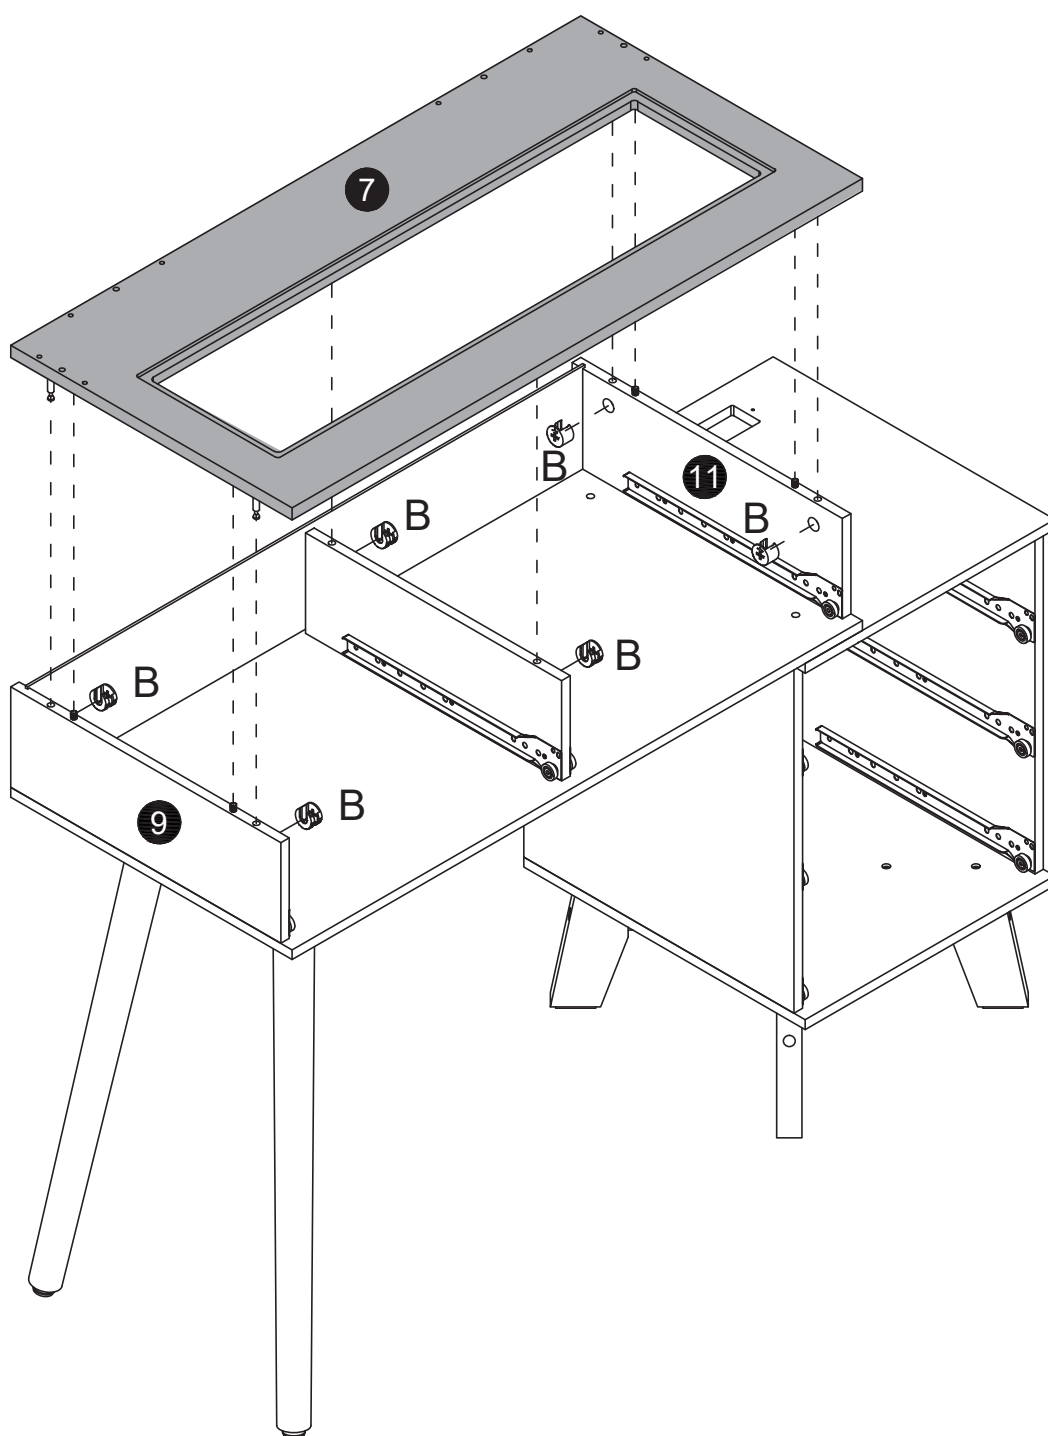


A x8



N x1






O x2

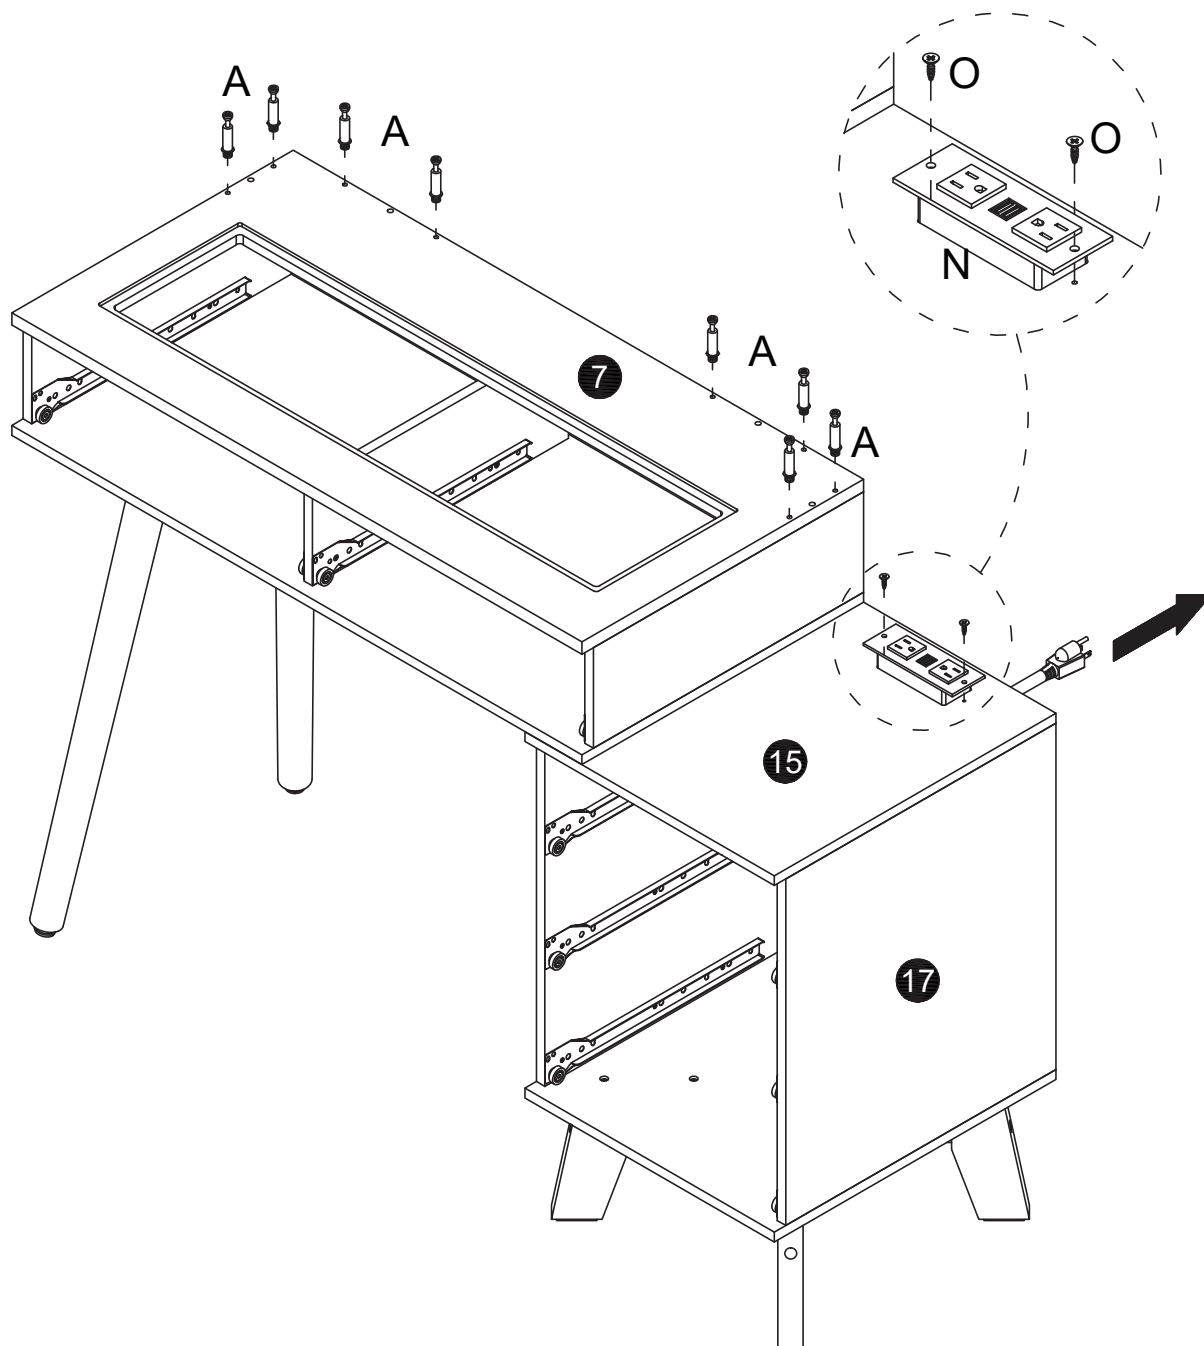




C x8

D x8

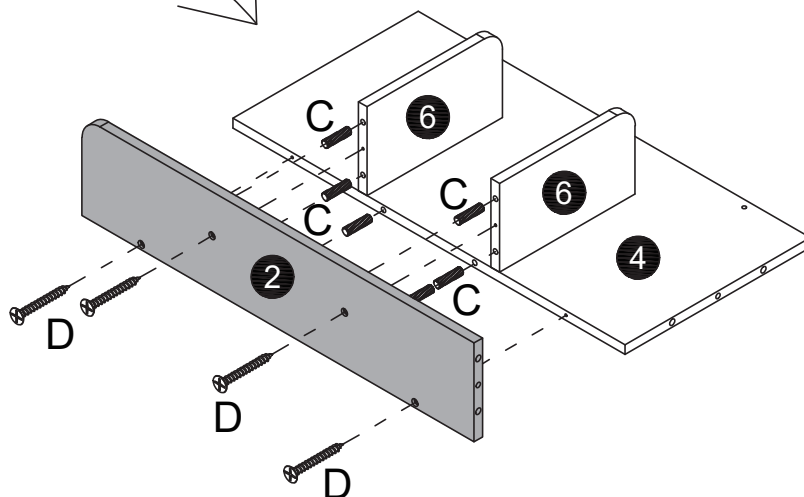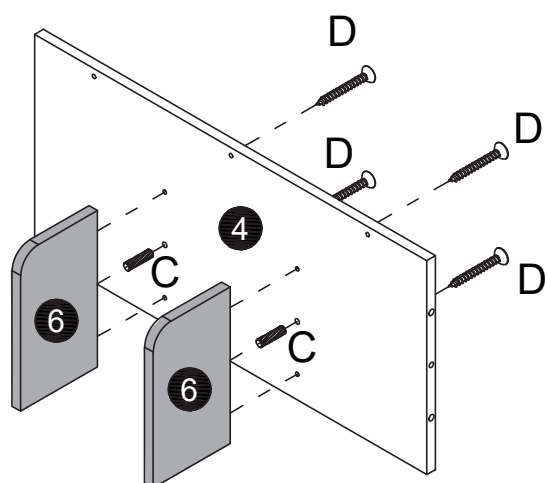

C x8


D x8

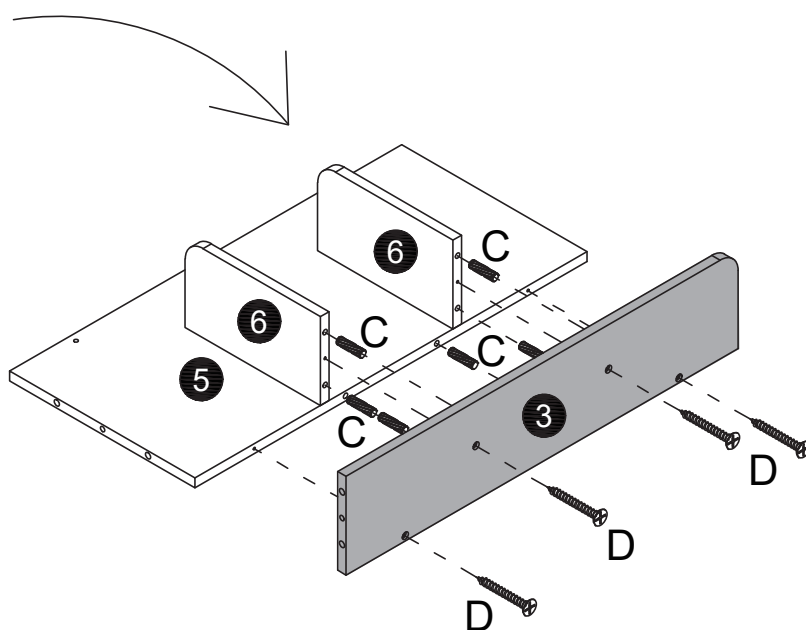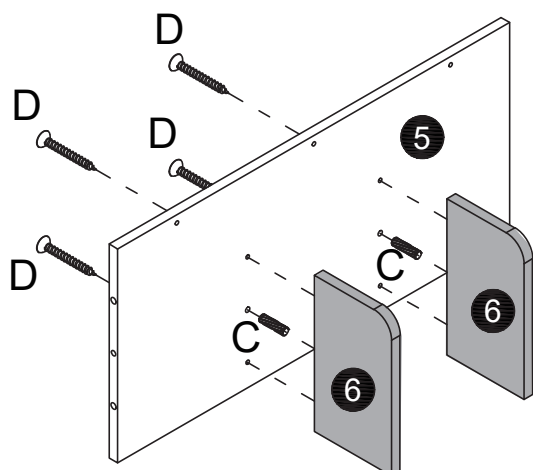



B x8




C x4

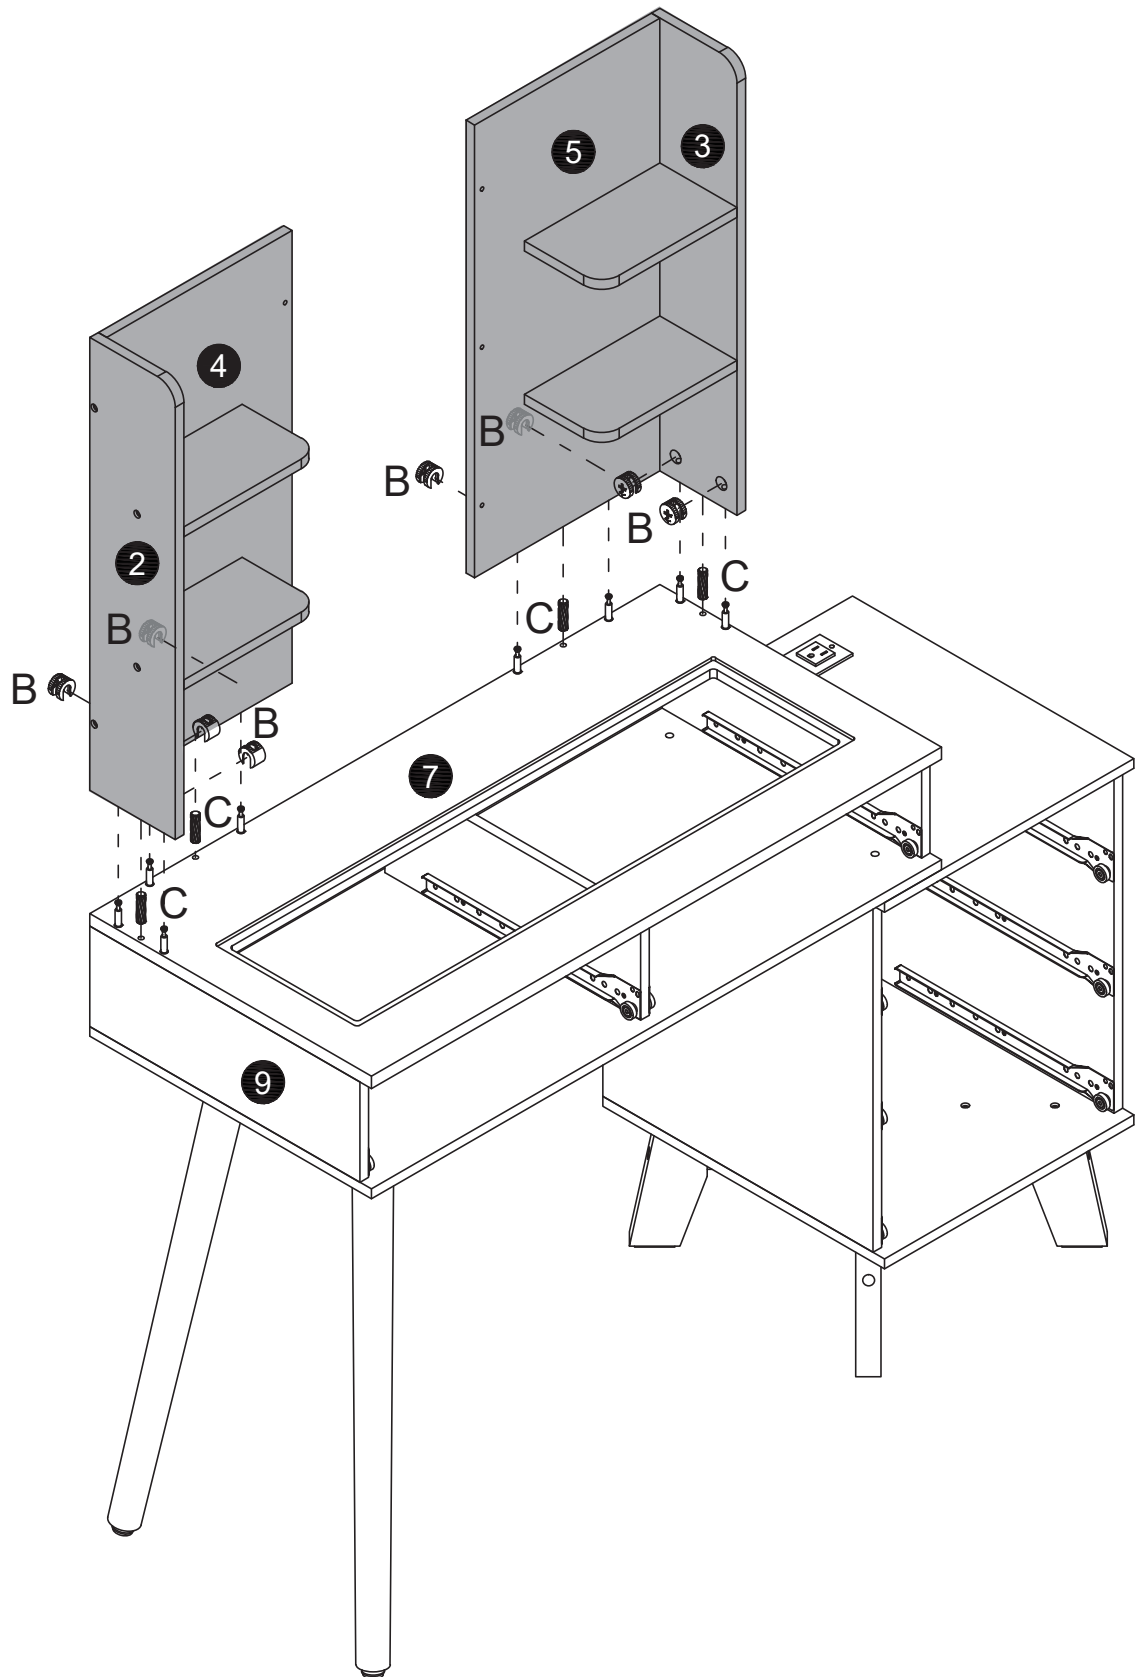

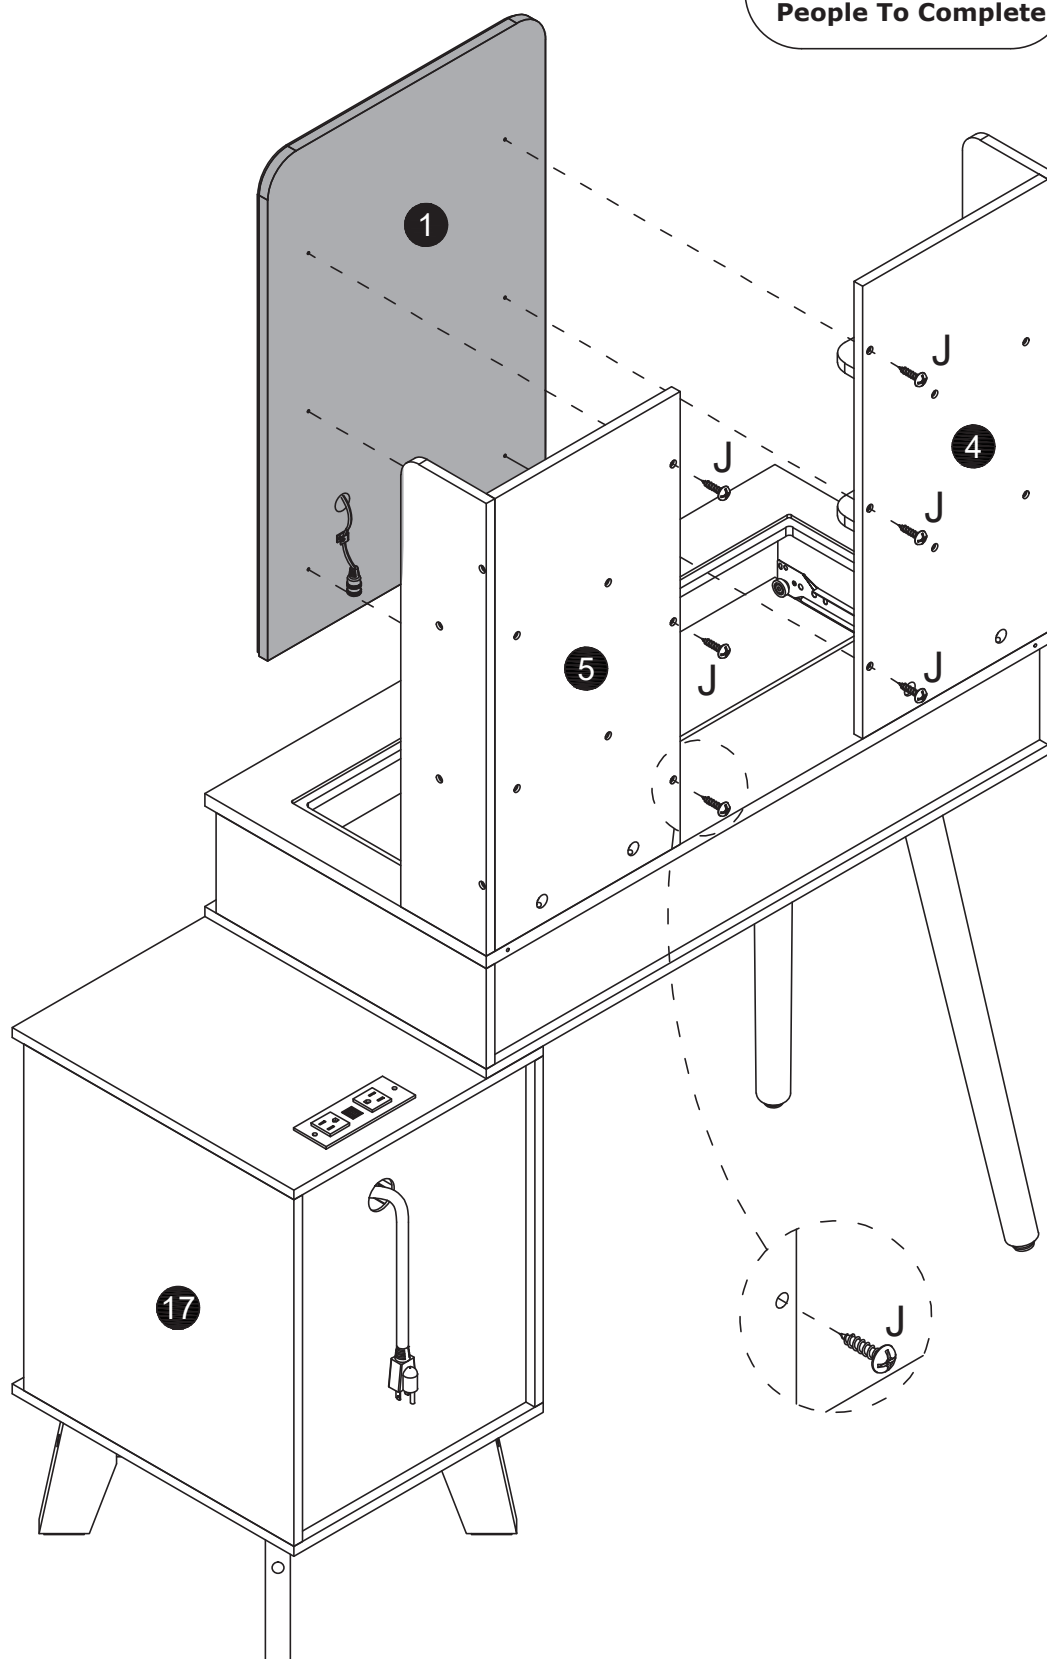

P x1


Q x10






Q-1




Q-2

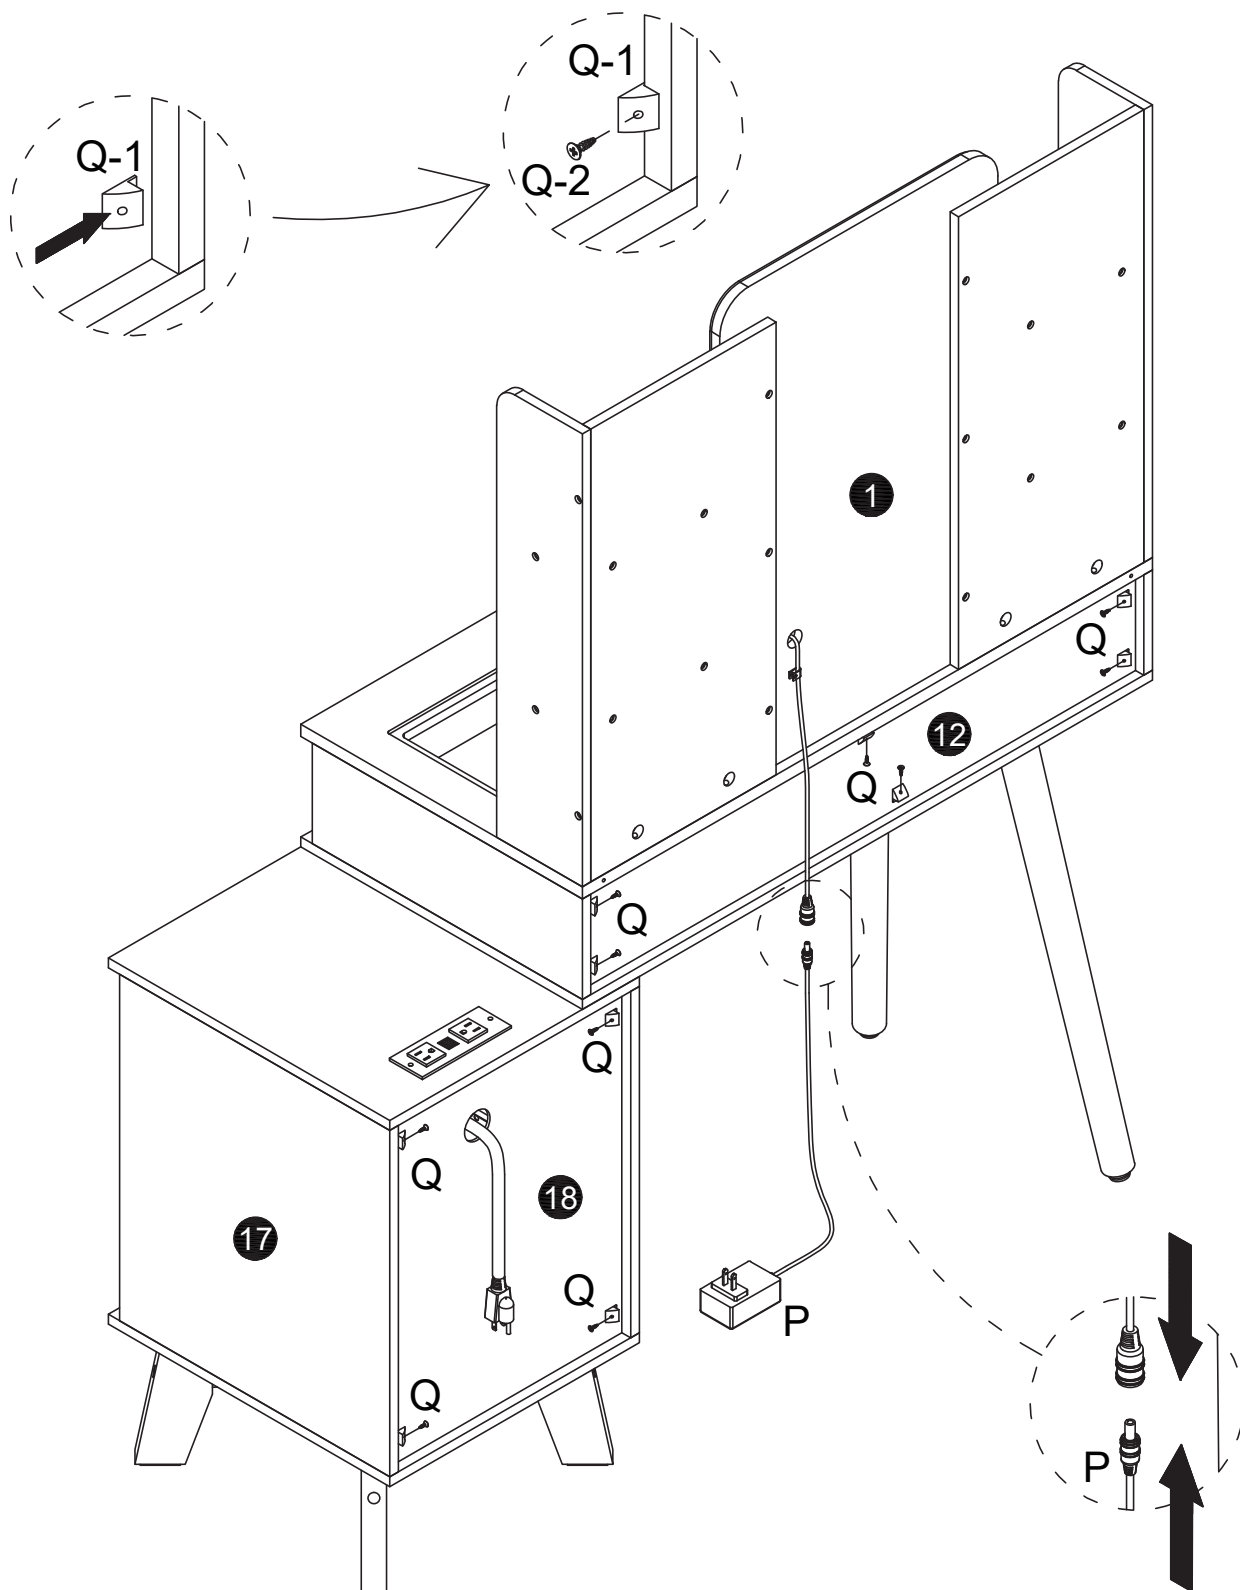

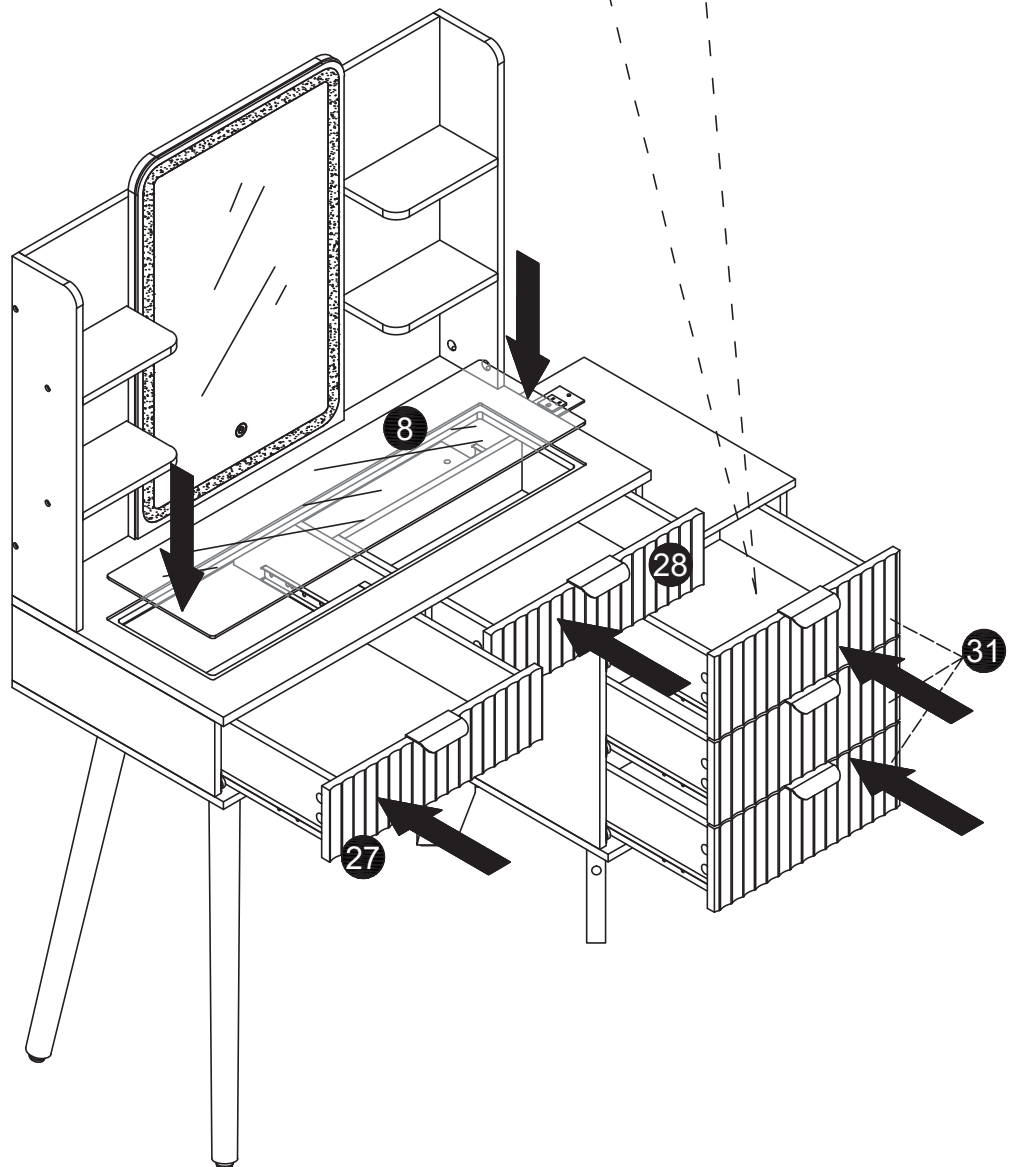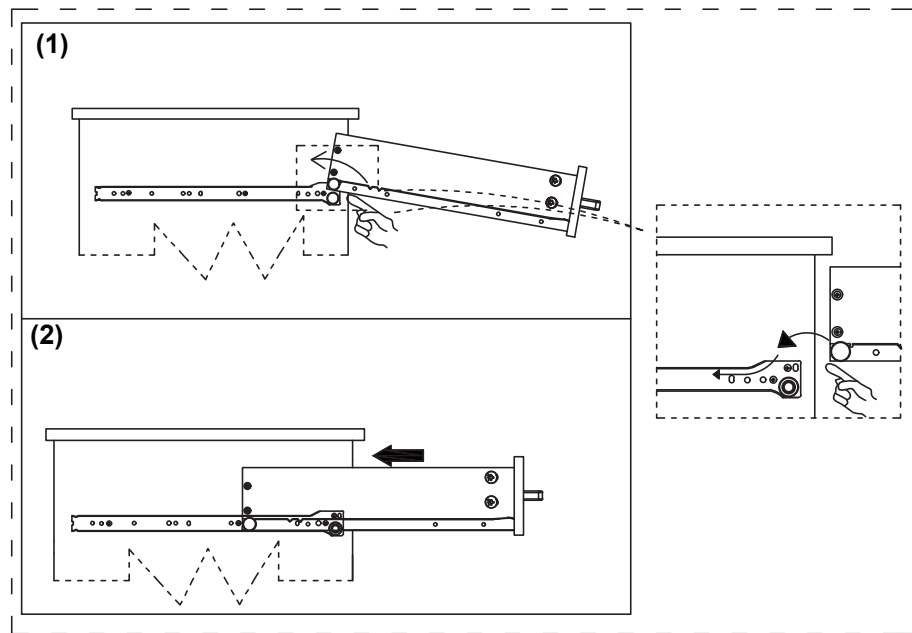


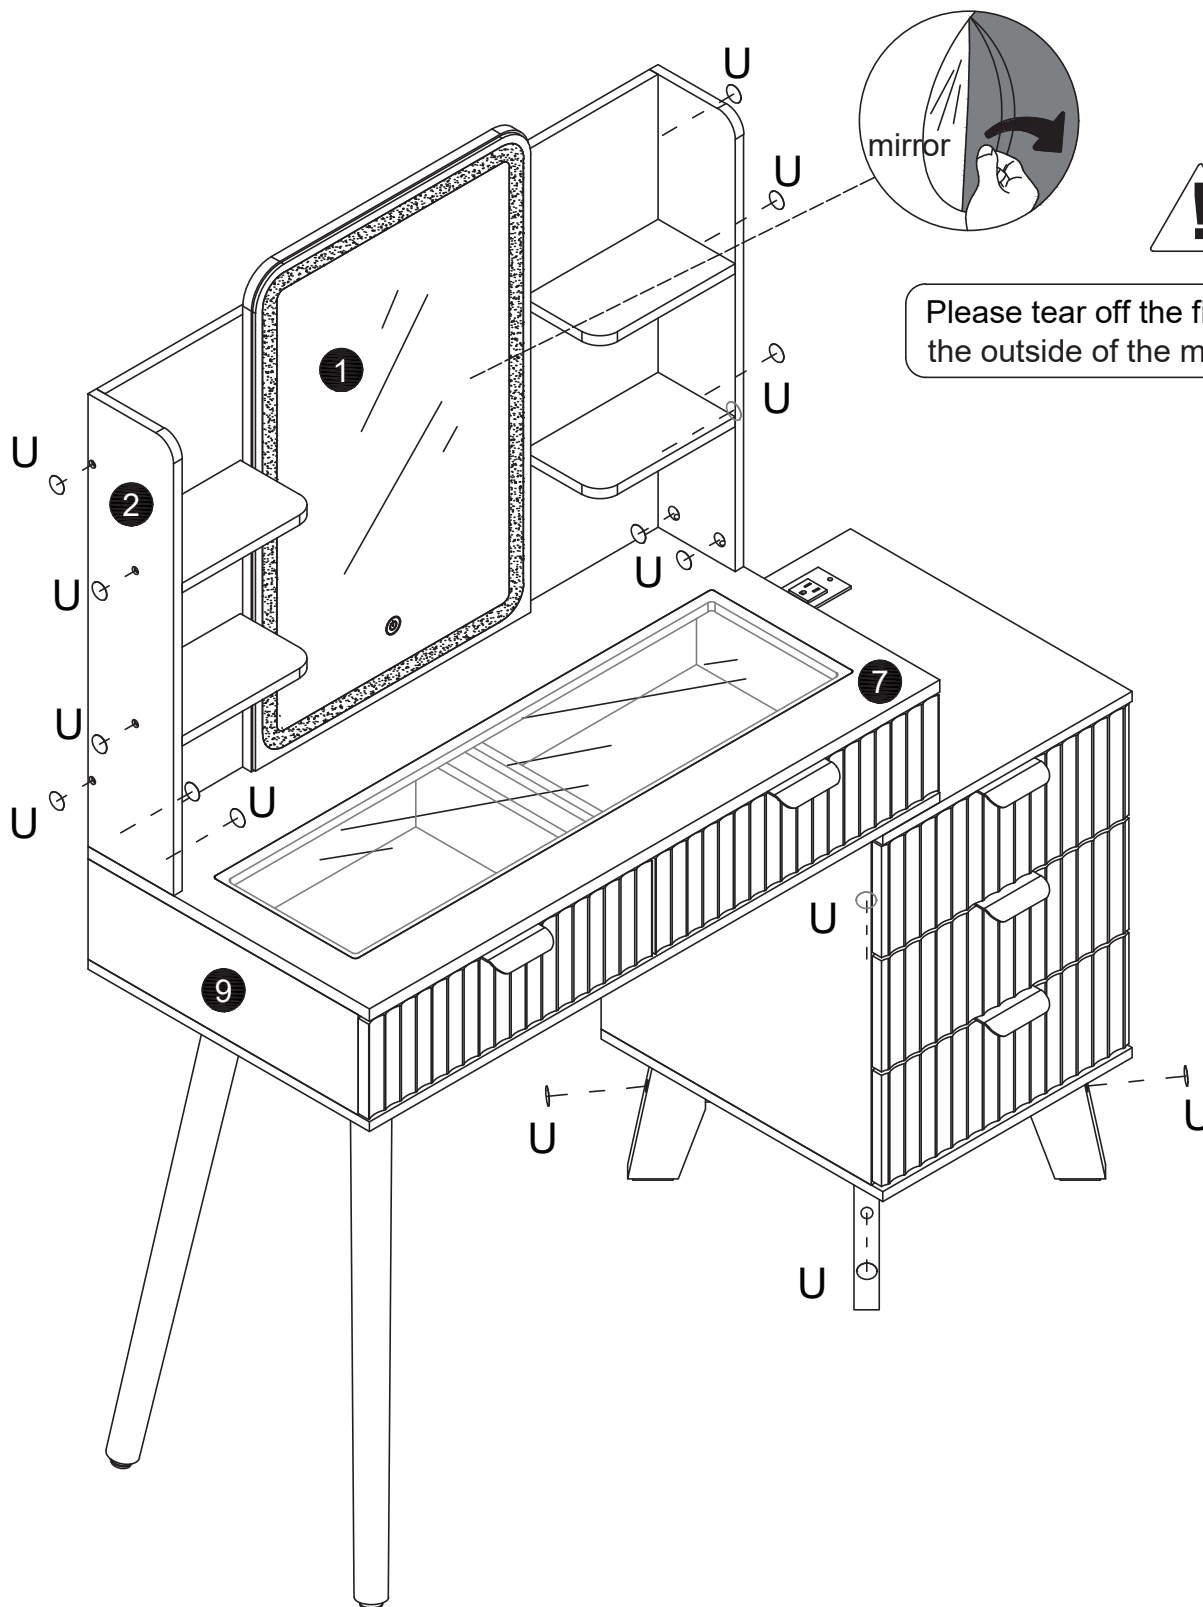



D x2




S x2




T x2

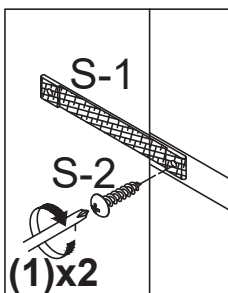


First fix the anti-rewind screw in the reserved hole of the product.

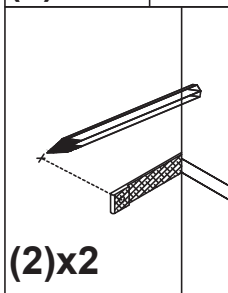


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

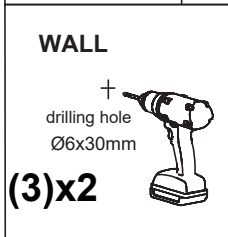

Then use a tape drill to make holes in the wall that are suitable for the product screws.

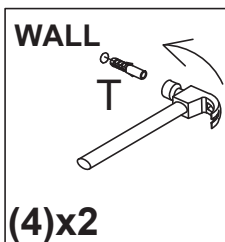

Then, put the expansion bolt into the hole

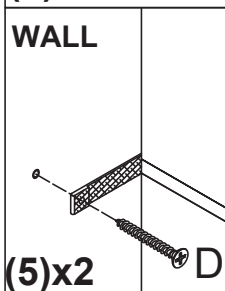

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

