
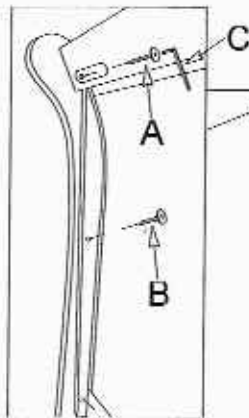


**ASSEMBLY INSTRUCTION
QUEEN BED**


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

ASSEMBLY TIPS:

Remove hardware from box and sort by size.

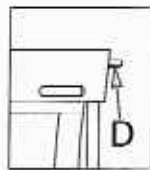

HEADBOARD

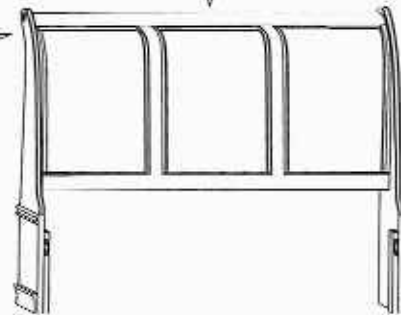

TIPS:

Attach & tighten the Headboard Leg (R&L) to the Headboard. Use Dowel M10 x 40mm, JCBC Bolt M6 x 40 and Allen Key to fix.

NO	HARDWARE DESCRIPTION	QTY
A.	JCBC Bolt M6 x 50mm	2PCS
B.	JCBC Bolt M6 x 40mm	4PCS
C.	Allen Key	1PC
D.	Wood Dowel M10 x 40mm	2PCS

Screw Driver Not Provide !!!


ASSEMBLY INSTRUCTION

QUEEN BED


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

Attach the Side Rail to the Headboard & Footboard. Use Screw M8 & Screw Driver to fix.

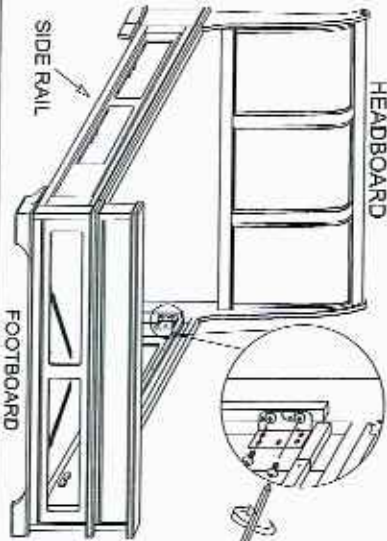

STEP 2.

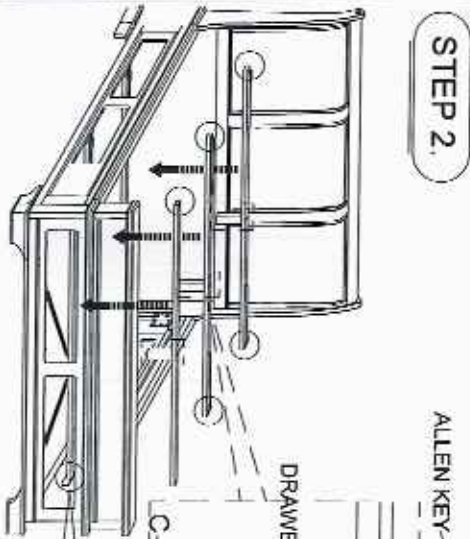

ASSEMBLY TIPS:
Remove hardware from box and sort by size.
Please check to see that all hardware and part are present prior start of assembly.


TIPS : Attach the drawer support and Slat Support to Footboard. Use JCBC Bolt M6 X 35mm & Allen Key to fix.

NO	HARDWARE DESCRIPTION	QTY
A.	Screw M4 x 32mm	30PCS
B.	Bolt M6 x 35mm	16PCS
C.	Adjuster Screw M6 x 24mm	3PCS
D.	Screw M4 x 16mm	2PCS

Screw Driver Not Provide !!!


STEP 3.

TIPS : Attach the drawer support and slat support to side rail and fasten with Bolt.

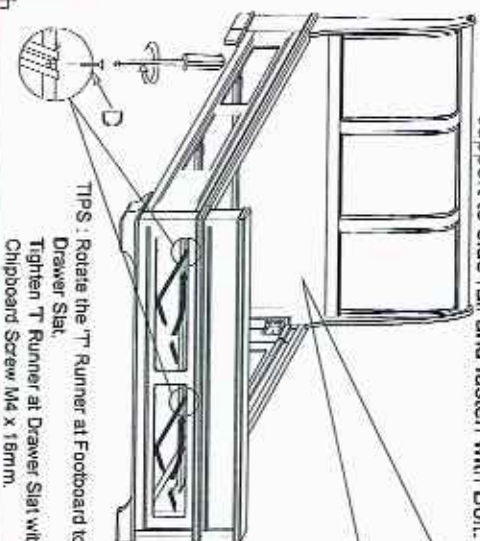


TIPS : Rotate the "T" Runner at Footboard to Drawer Slat.
Tighten "T" Runner at Drawer Slat with Chipboard Screw M4 x 16mm.

a.) TIPS : Rotate the slat support and tighten using with Allen Key.

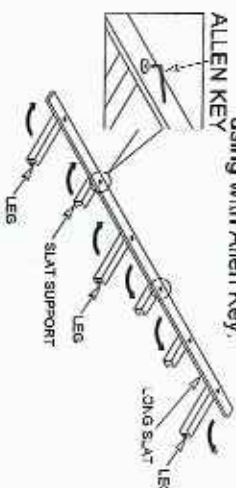

b.

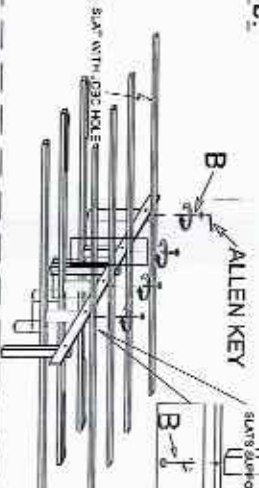

STEP 4.

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

