









ASSEMBLY INSTRUCTION

If you have any questions about the product,
please don't hesitate to contact us.

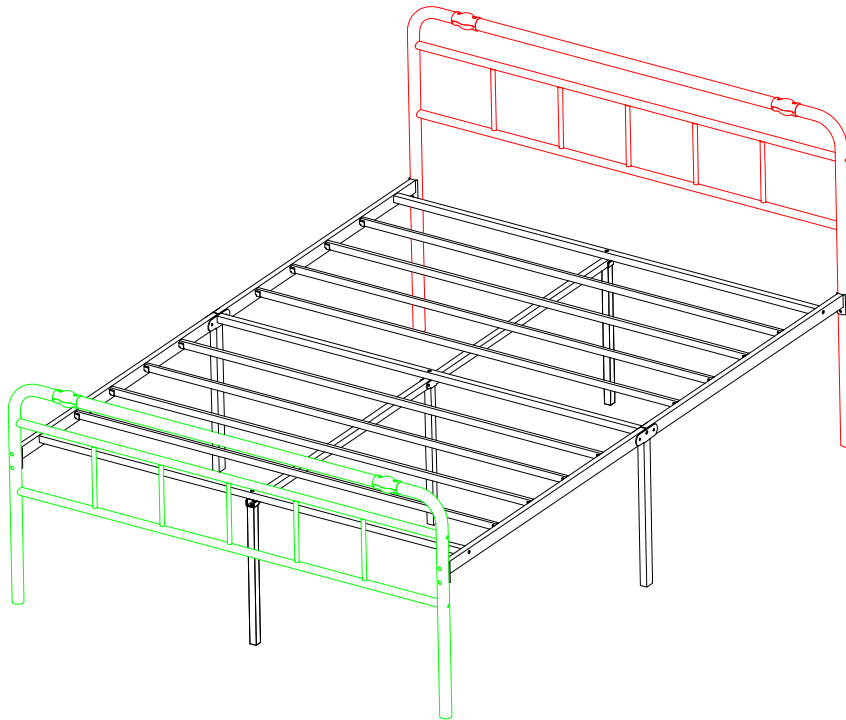


Size: Full

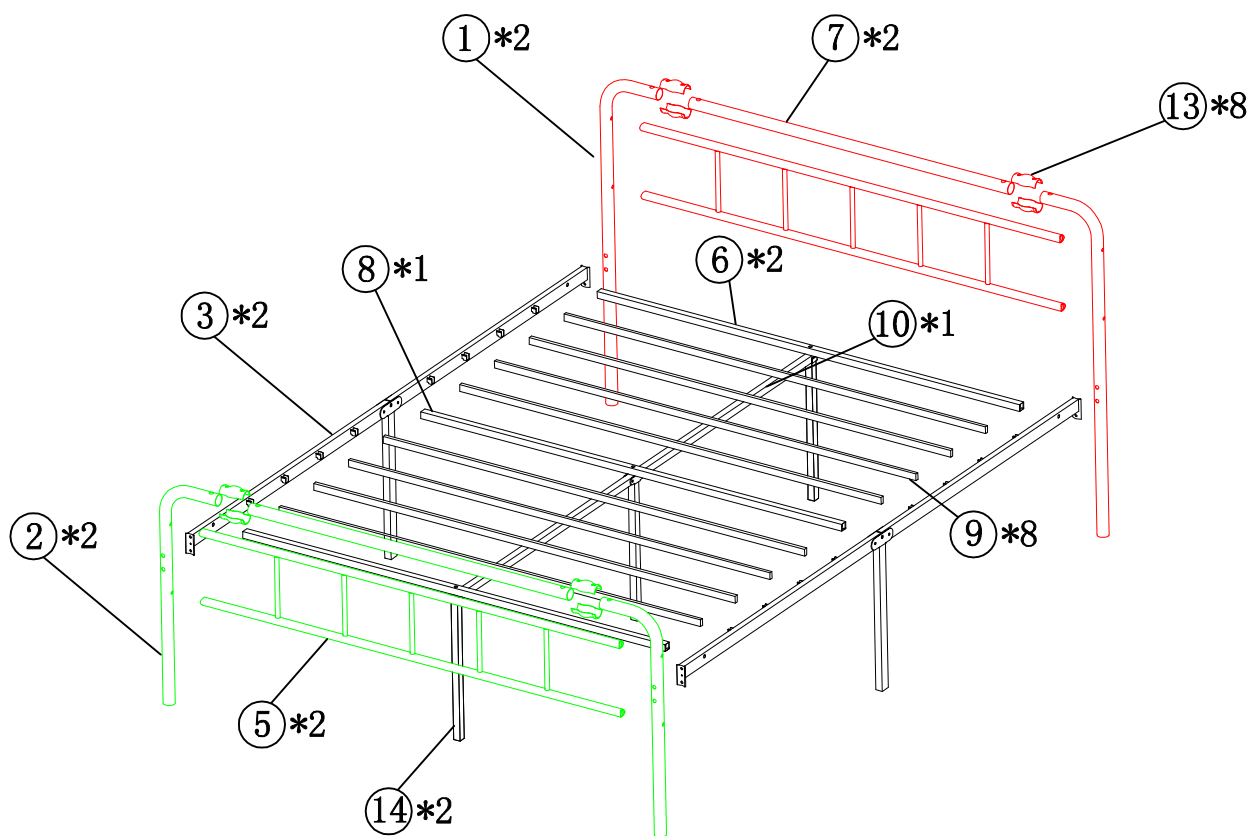

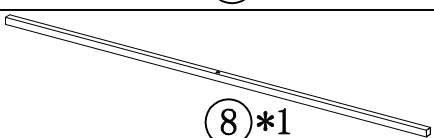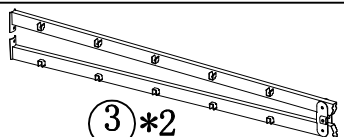 ①*2	 ⑦*2	 ⑭*2	 F*6 (M8*35)
 ②*2	 ⑧*1	 B*8 (M8*50)	 H*3 (M8*55)
 ③*2	 ⑨*8	 C*8 (M6*28)	 K*1
 ⑤*2	 ⑩*1	 D*8 (M6)	
 ⑥*2	 ⑬*8	 E*8 (M8*40)	


Step1

		
B*4 (M8*50)	C*4 (M6*28)	D*4 (M6)


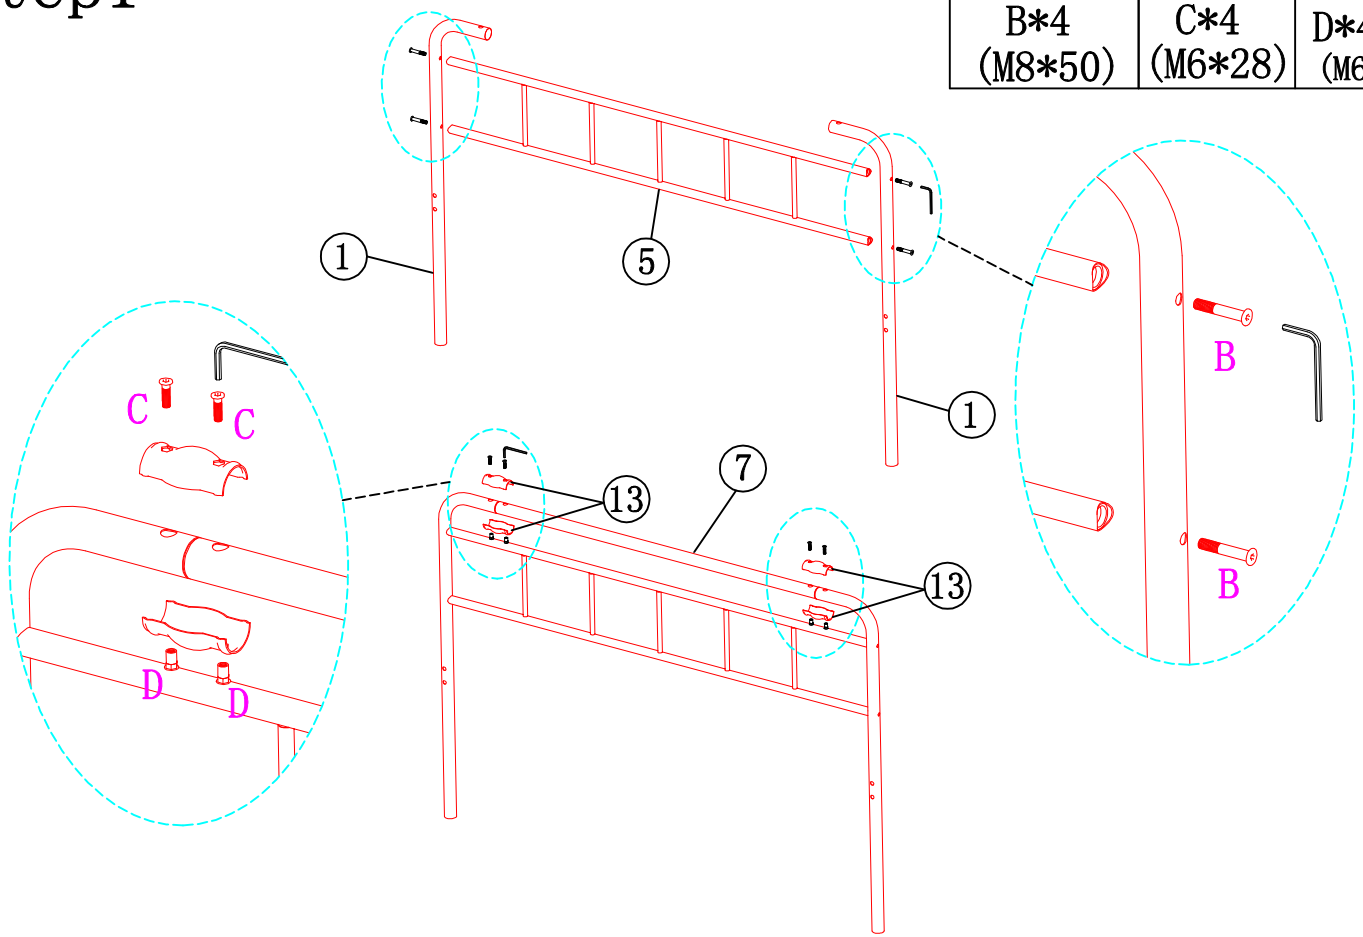


Step2



		
B*4 (M8*50)	C*4 (M6*28)	D*4 (M6)

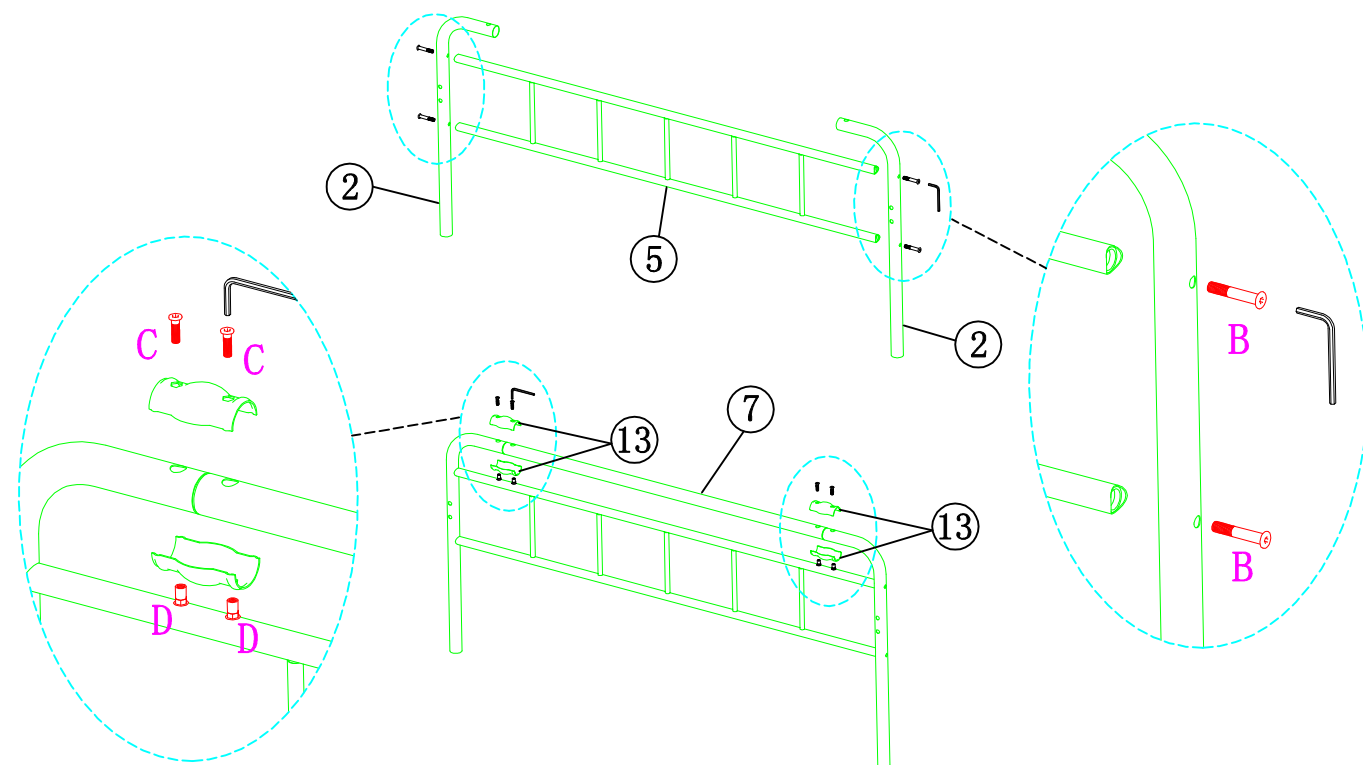

Step3

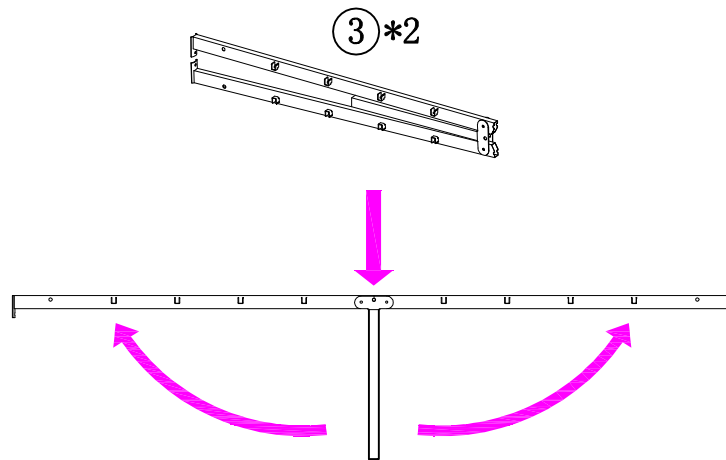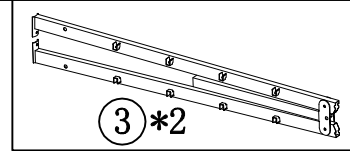




Step4

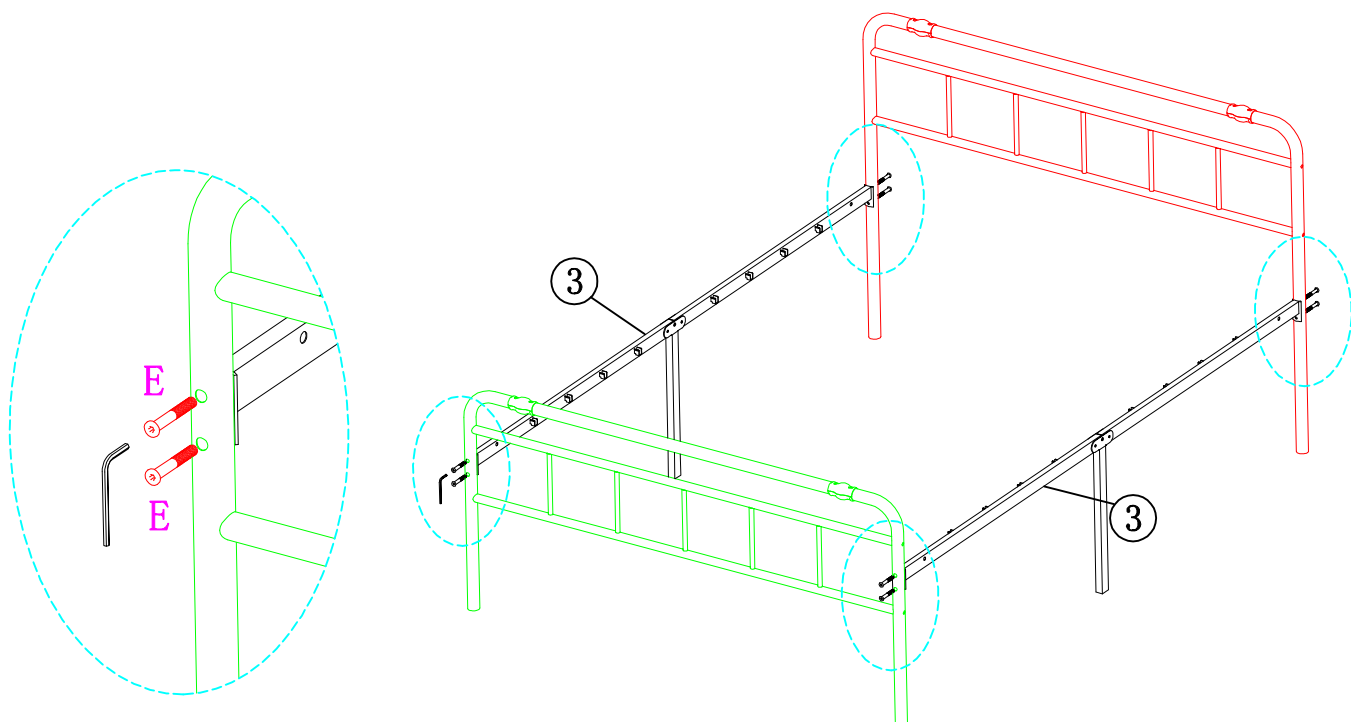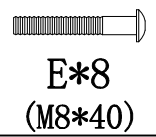

Step5





F*4
(M8*35)

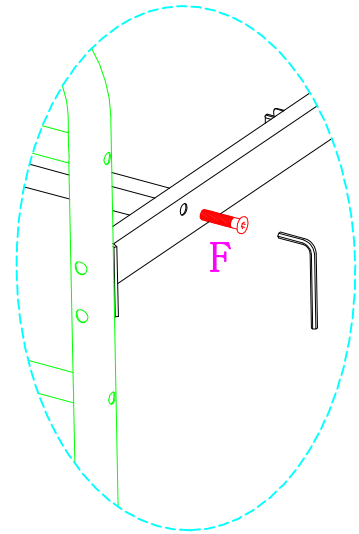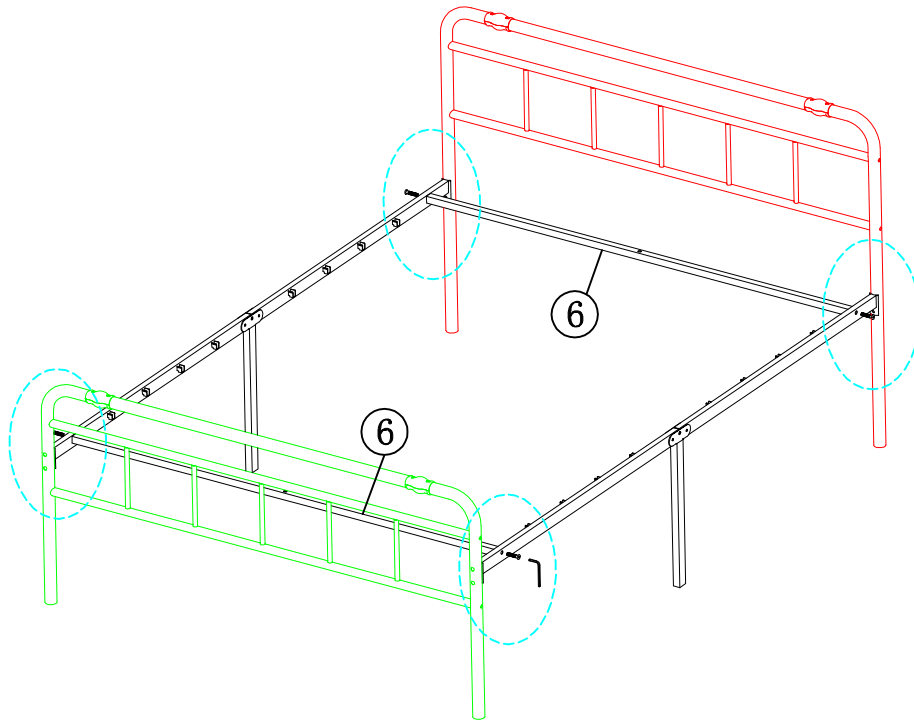




Do not fully
tighten the screws yet.

Step6

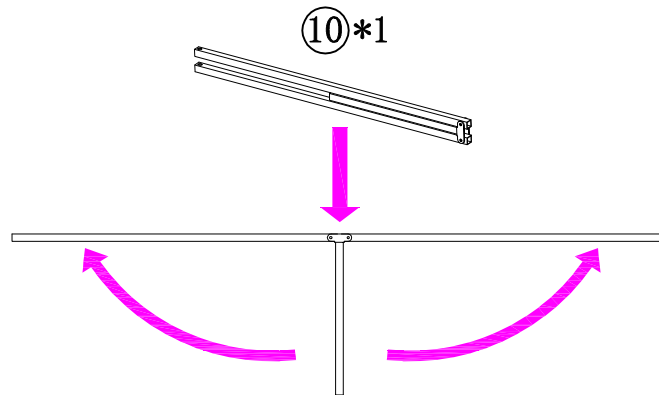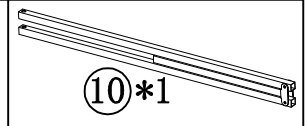

Step7





	
⑭*2	H*2 (M8*55)

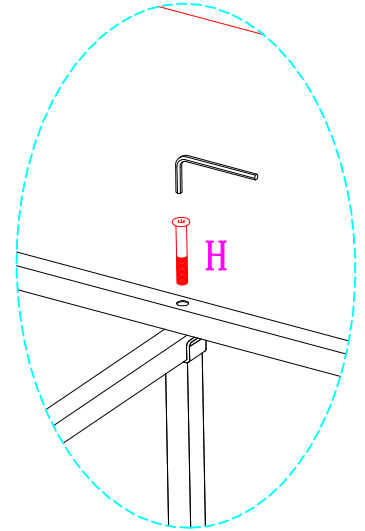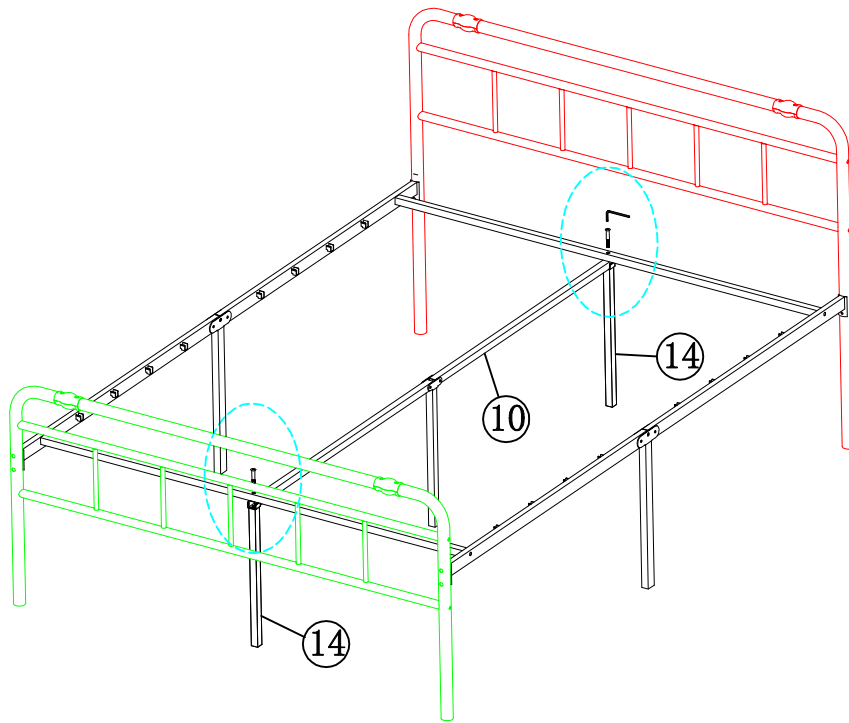

⚠ Do not fully tighten the screws yet.




Step8

	
H*1 (M8*55)	F*2 (M8*35)

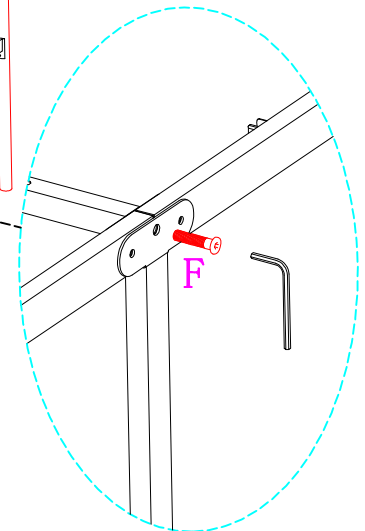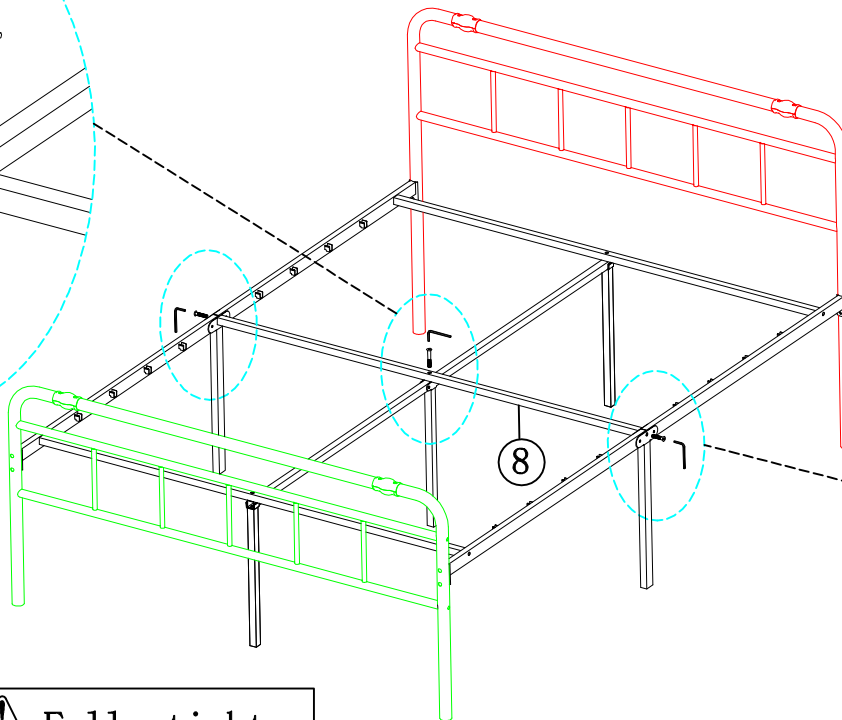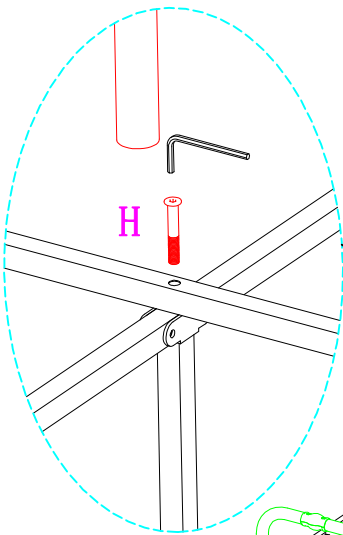

⚠ Fully tighten all the screws

Step9

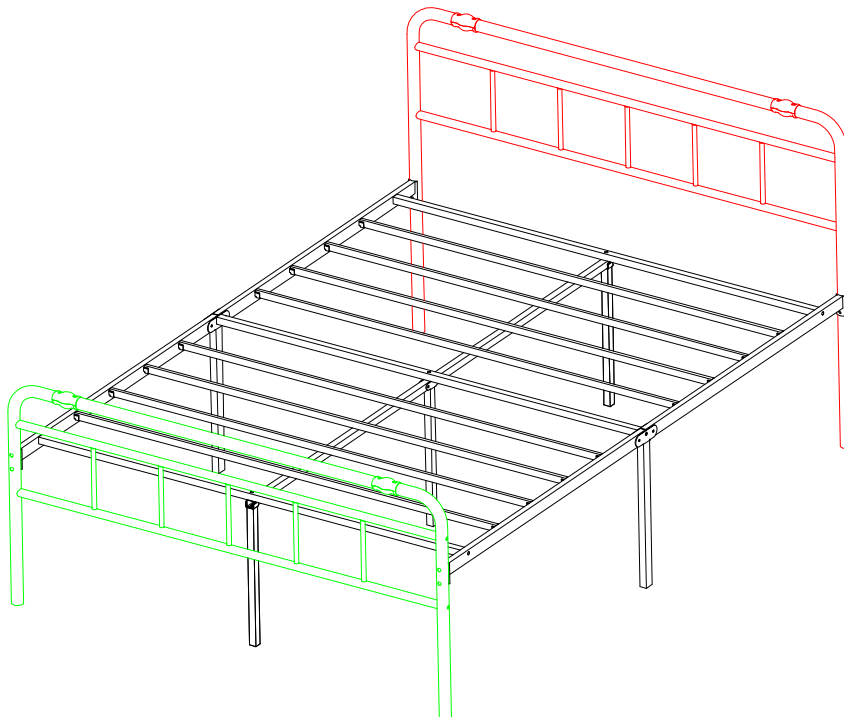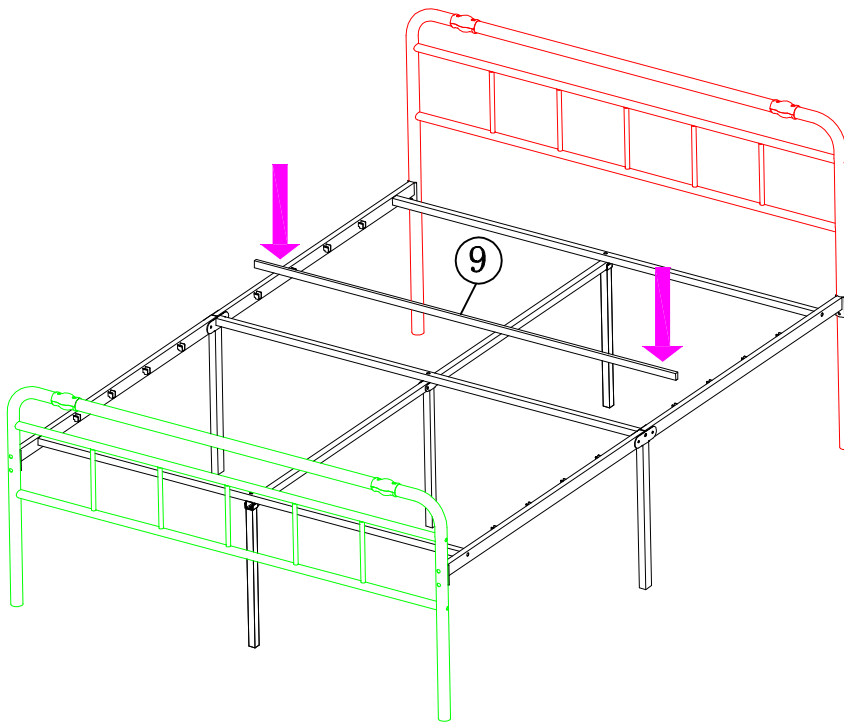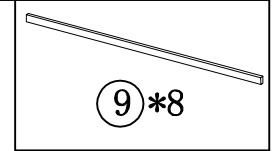

In the last step. please make sure all the screws are tightened.