



Installation Guide




Wipe down the wall with a towel to make sure it is clean and dry

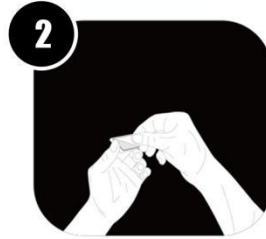

Gently peel off the adhesive protective film without touching the adhesive surface.

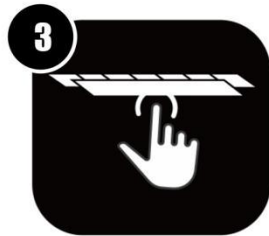

Perfectly adheres to the wall, press by hand for 20 seconds and leave for half an hour for best results

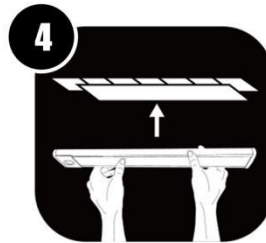

Aim the light at the iron piece and attach it