





Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


### Parts List

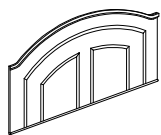


#1 x 1pc  
Headboard




#2 x 2pcs  
Headboard leg ( L-R )




#3 x 1pc  
Footboard



#4 x 2pcs  
Footboard leg ( L-R )



#5 x 2pcs  
Side Rail




#6 x 4pcs  
Slat



#7 x 4pcs  
Slat Support Leg



#J x 1pc  
Wrench



#K x 8pcs  
Screw

### Hardware List



#A x 12pcs  
Bolt 5/16" X 1-3/4"



#B x 12pcs  
Lock Washer



#C x 12pcs  
Flat Washer



#D x 1pc  
Allen Wrench



#E x 8pcs  
Thread Bolt



#F x 8pcs  
Nylon Washer



#G x 8pcs  
Flat Washer



#H x 8pcs  
Lock Washer




#I x 8pcs  
Hex Nut




#A X 6PCS  
#B X 6PCS  
#C X 6PCS

Note: Left and right is determined by facing the front of the headboard.

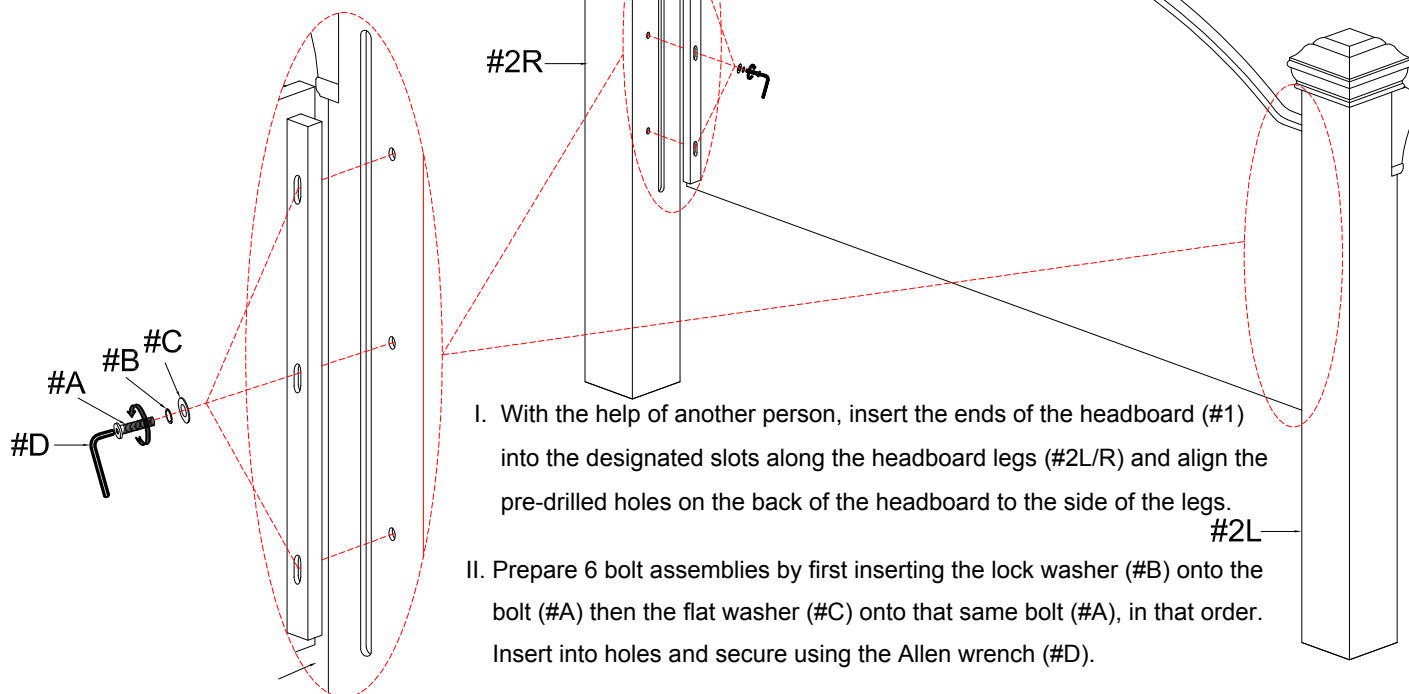

#A X 6PCS  
#B X 6PCS  
#C X 6PCS


Note: Left and right is determined by facing the front of the footboard.

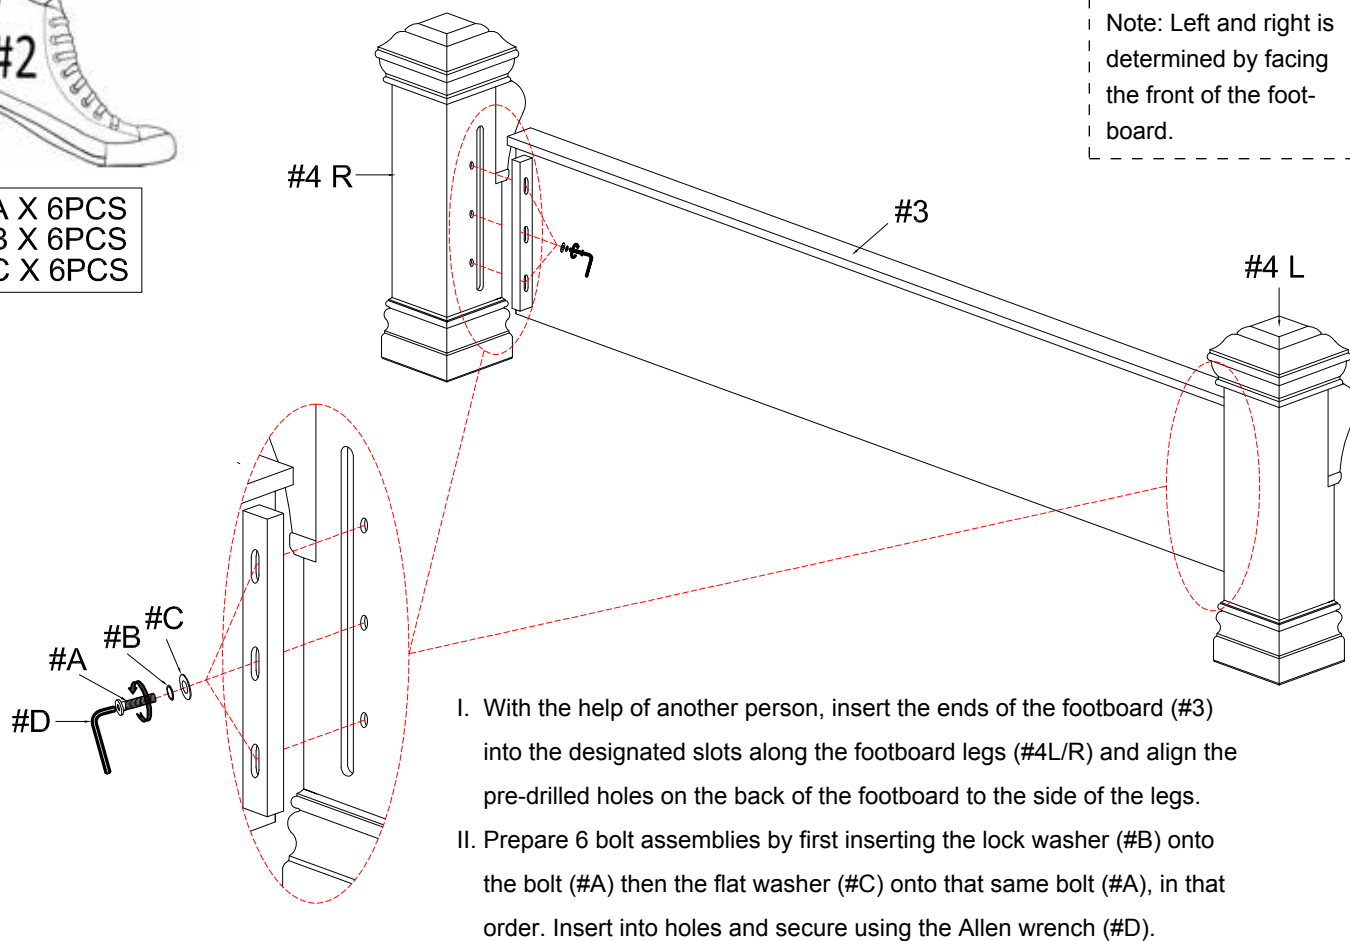




#E X 8PCS  
#F X 8PCS  
#G X 8PCS  
#H X 8PCS  
#I X 8PCS

1. Insert 2 bolts (#E) along each side of the headboard (#1) and footboard (#3), turn right to tighten. Then apply the side rails (#5) onto the other ends of those bolts (#E).
2. From within the large holes on the side rails (#5), insert a nylon washer (#F), a flat washer (#G), a lock washer (#H), and then a hex nut (#I), in that order. Look at the picture for reference. Secure using the wrench (#J).

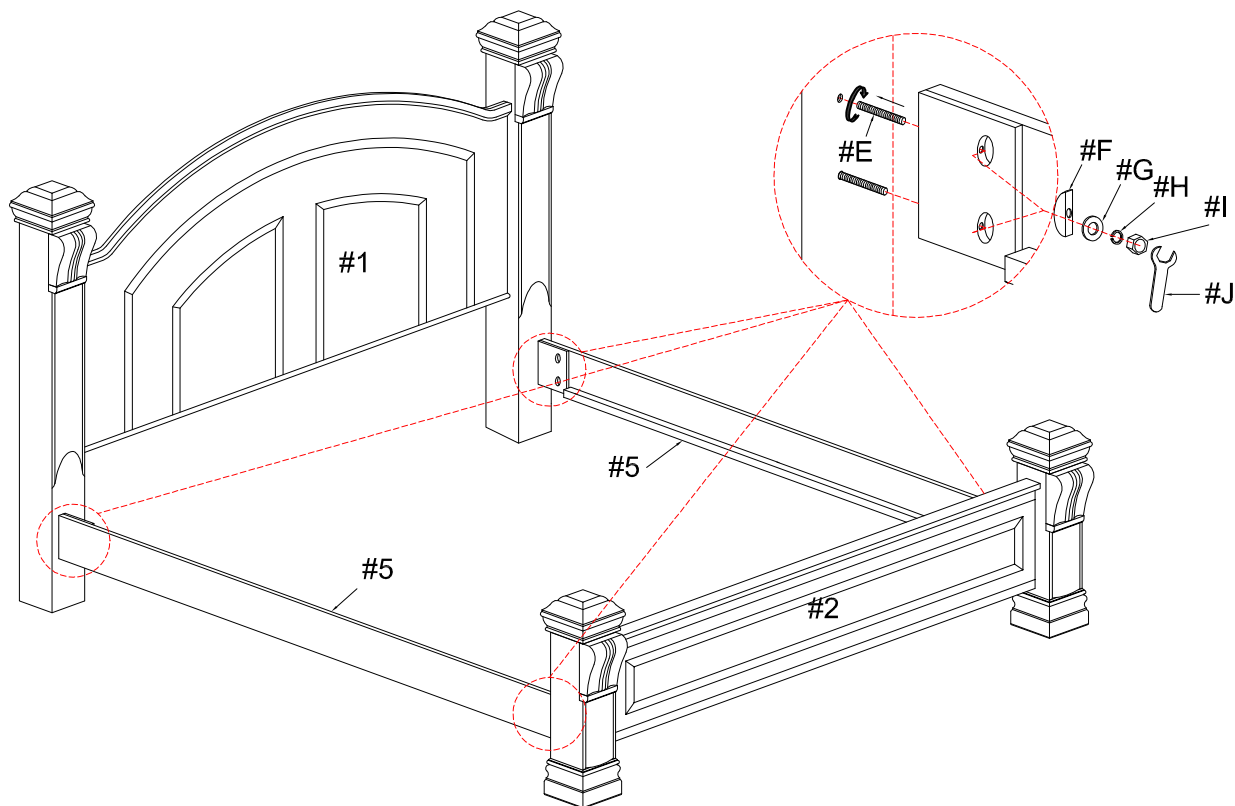


Insert the threaded ends of the support legs (#7) into the pre-drilled holes located on the bottom of the slats (#6). Turn right to tighten.

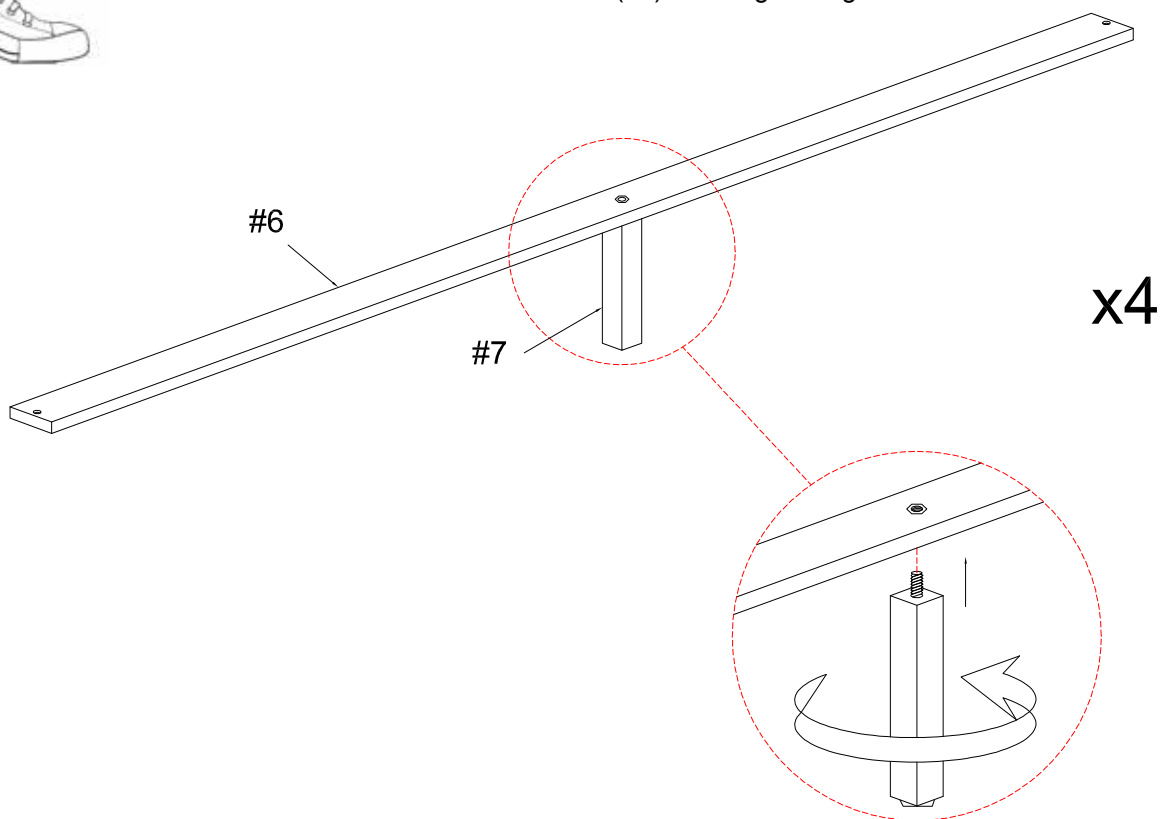




#E X 8PCS

Align the ends of the slats (#6) to the pre-drilled holes along the sides of the side rails (#5). Insert a screw (#K) into each end and secure using a Phillips screwdriver.

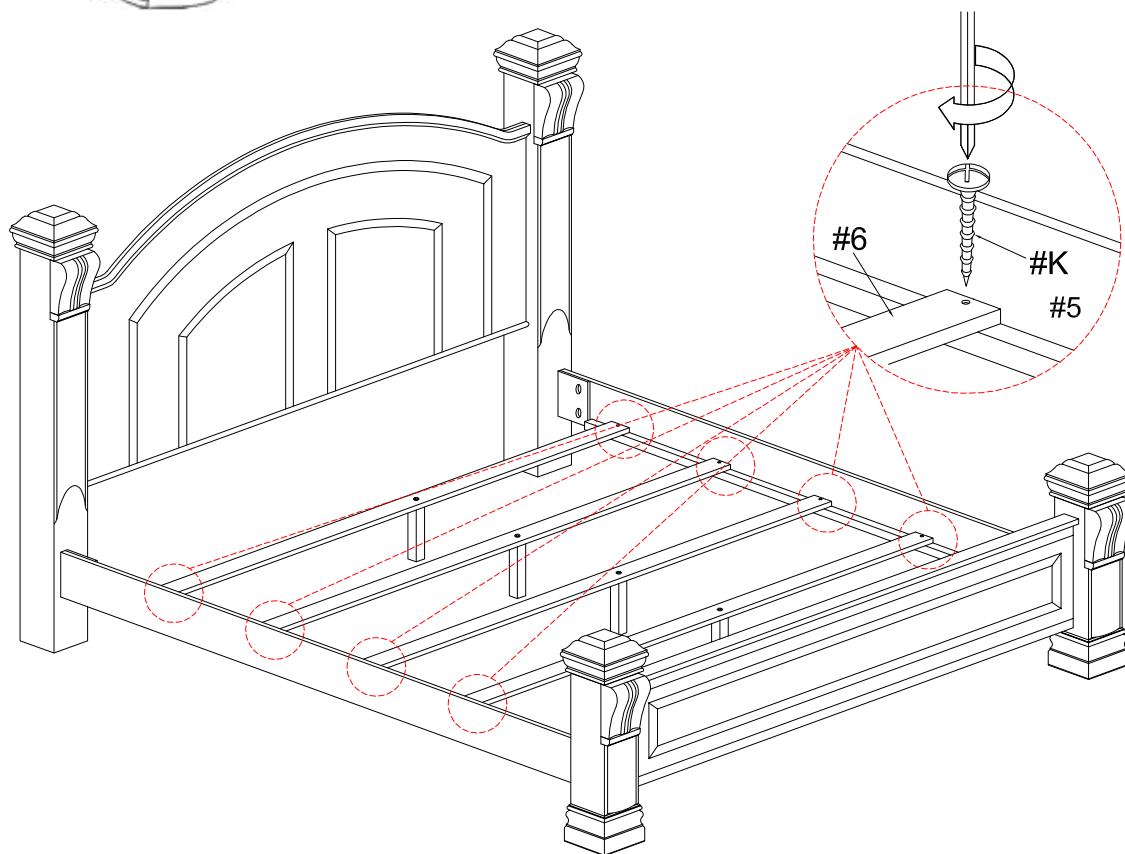

Make sure all parts are firmly secured.

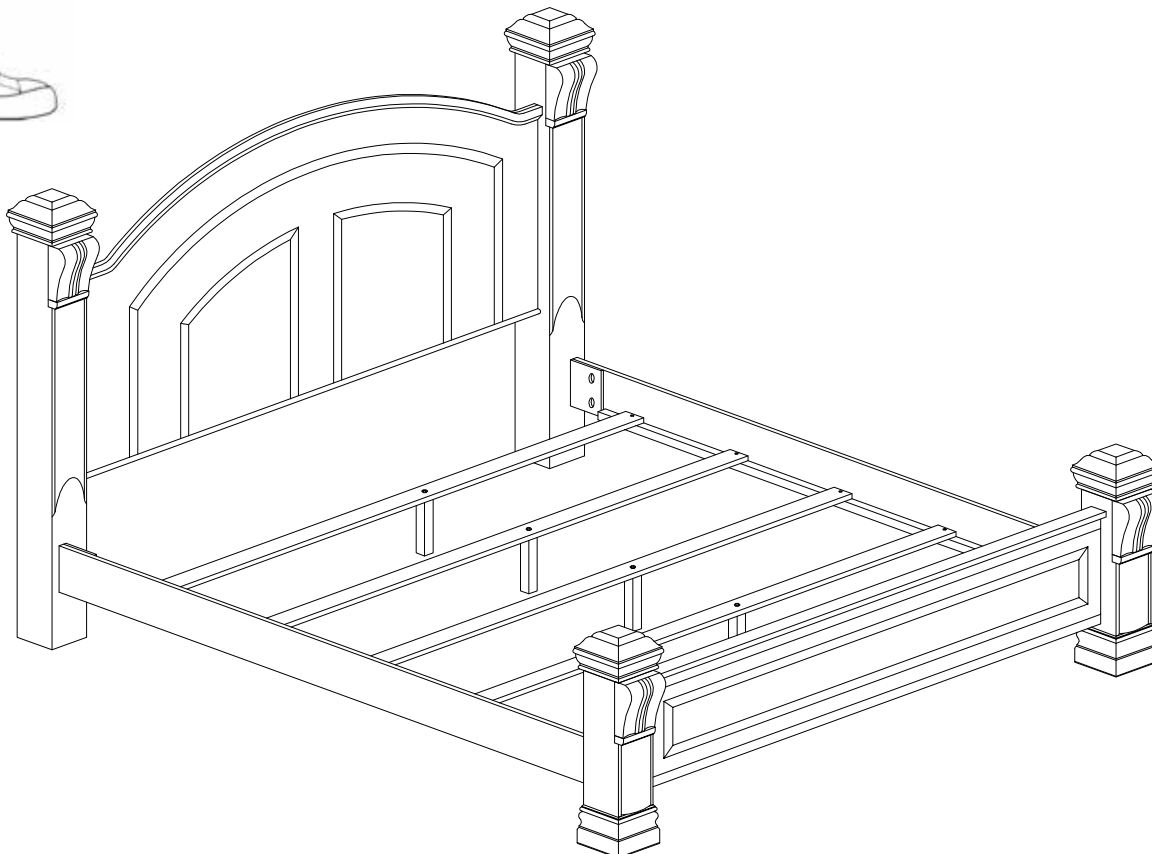

**ASSEMBLY IS COMPLETED**