


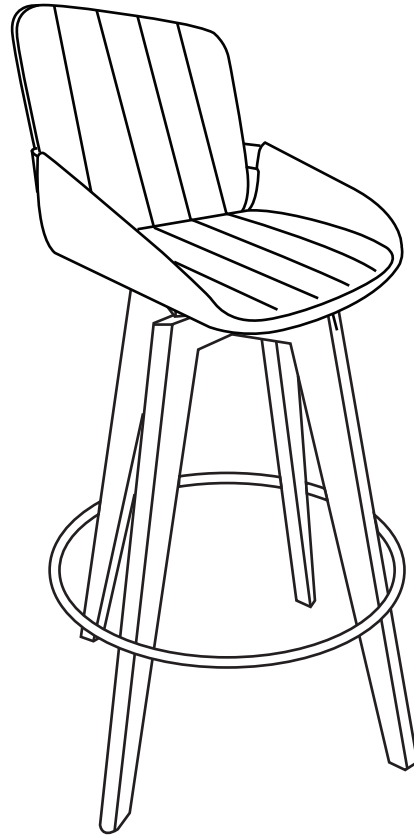
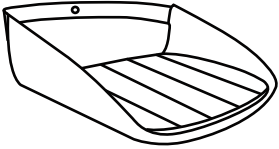
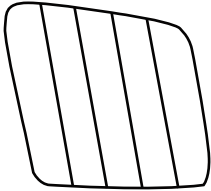
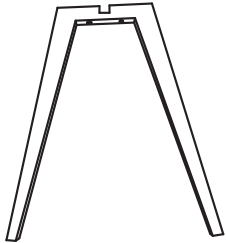



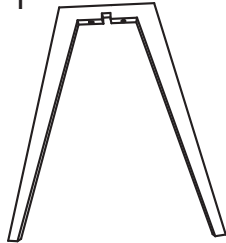



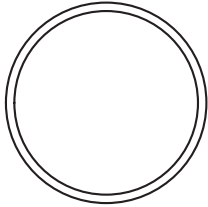


Installation & Assembly

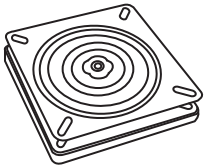


A*1 	B*1 	C*1 	D*1 	E*1 	F*1 	
G*1+1  M6X35mm	H*8+1  M6X45mm	I*2+1  M6X25mm	J*2+1  M6X20mm	K*2+1  Rubber Washer	L*1  M6	M*1  SPARE FOOT NAIL


1

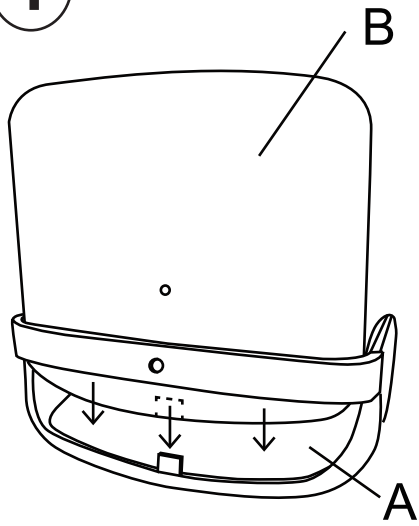


2

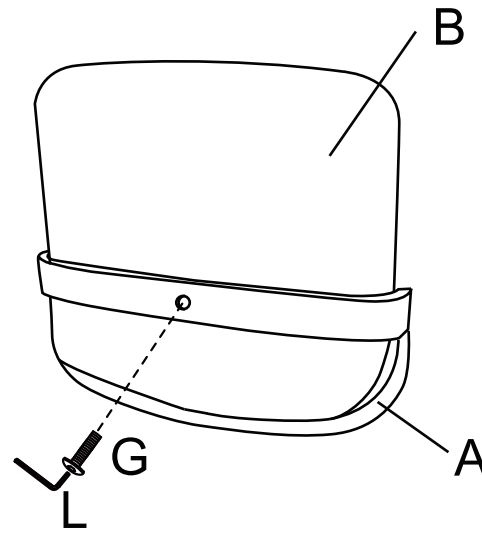


3

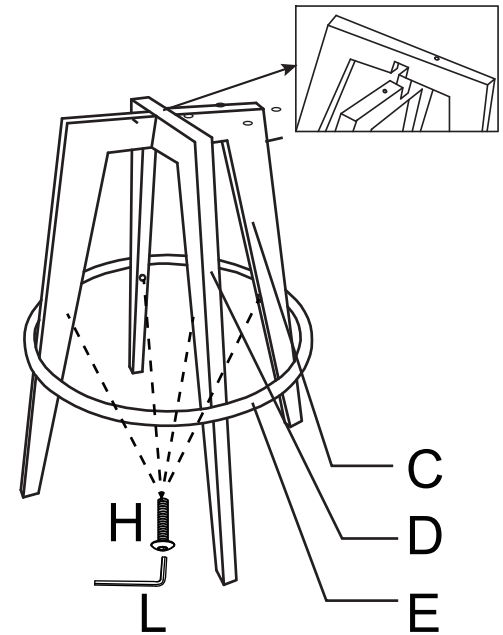


4

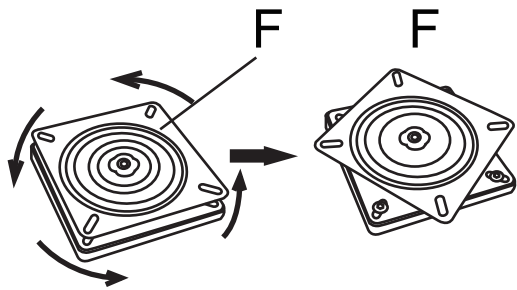


5

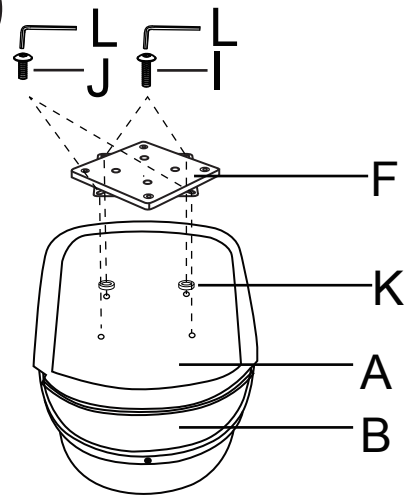

6

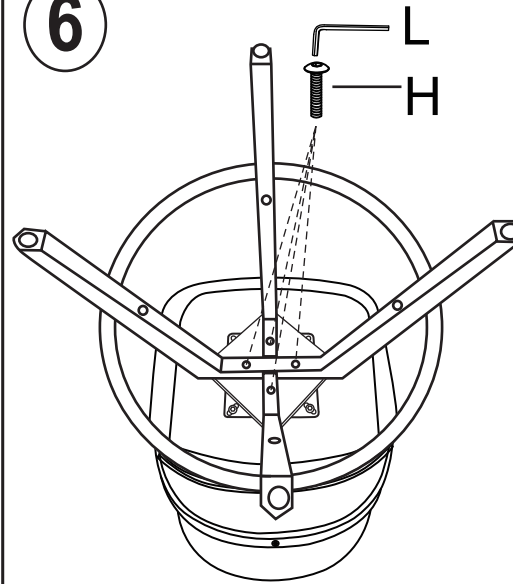

7

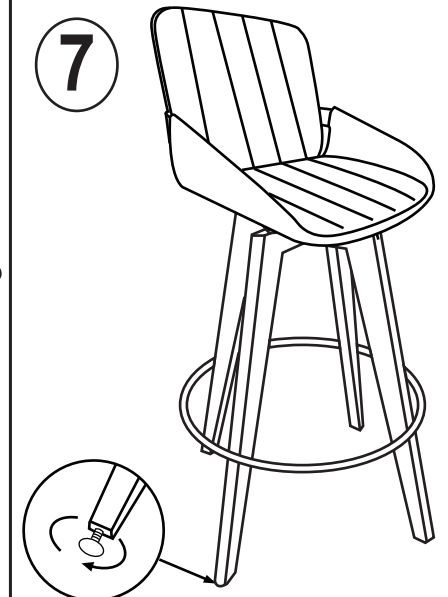

Note: adjust the foot nails to make the chair balance.