

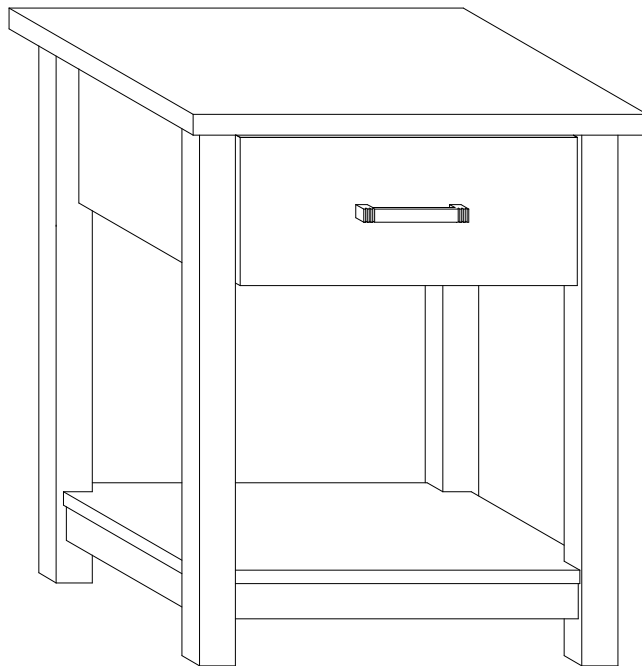
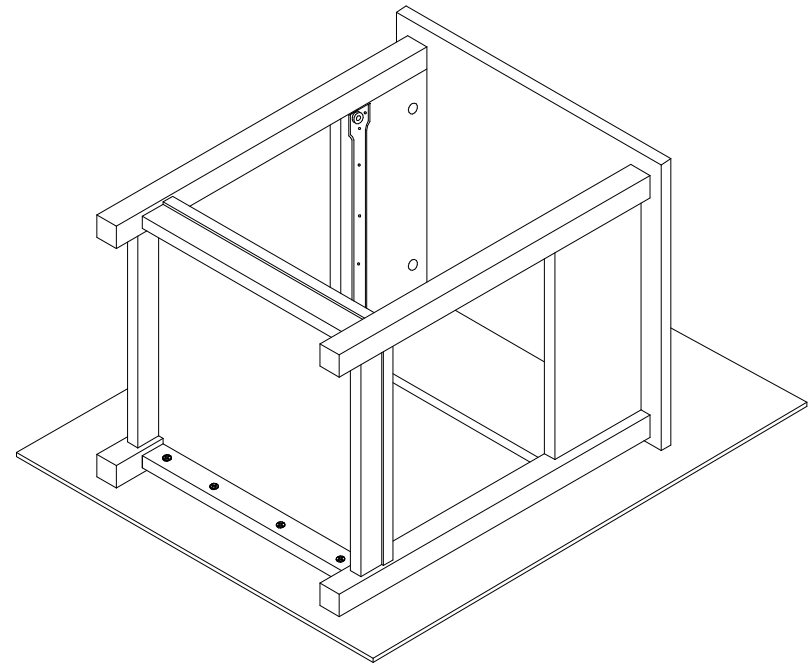



NIGHT STAND

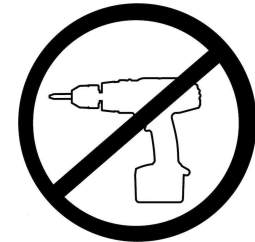

Required Tools : Screwdriver & Hammer

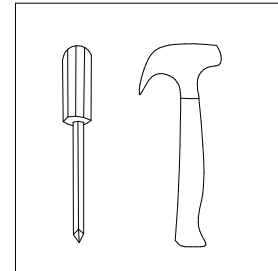


Please place on the carton while installing to prevent damage or scratches.

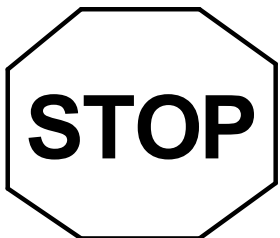


ASSEMBLY INSTRUCTION (PART & HARDWARE LIST)

NIGHT STAND

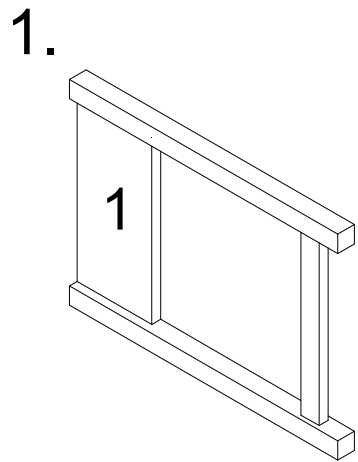

SIDE PANEL (R)

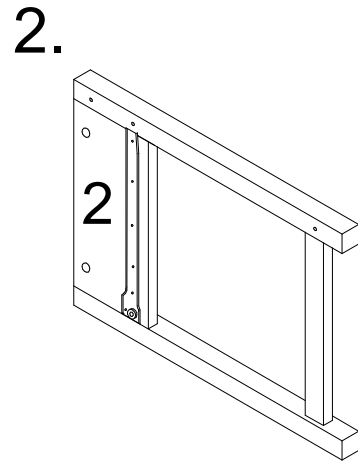

SIDE PANEL (L)



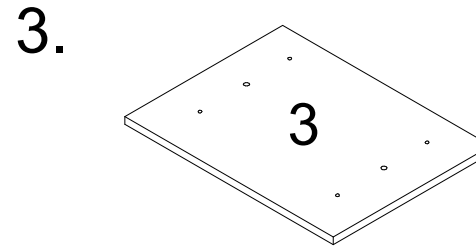



TABLE TOP

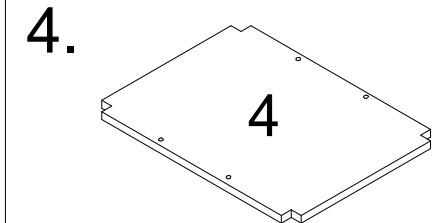


BOTTOM

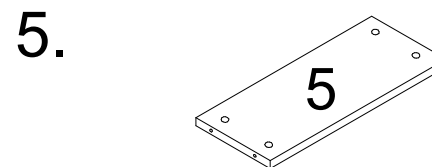


BACK PANEL

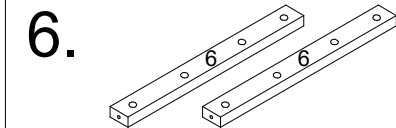


FRONT & BACK PANEL
(2PCS)

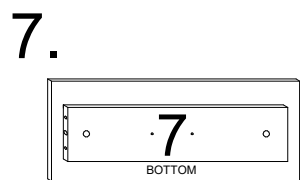


DRAWER TOP

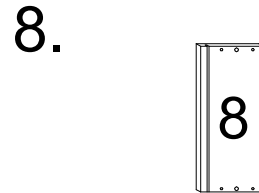


DRAWER SIDE PANEL
R

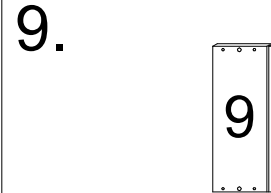

DRAWER SIDE PANEL
L



DRAWER BACK PANEL


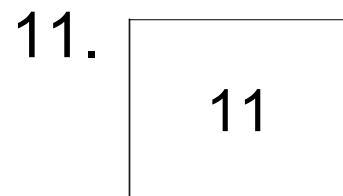


DRAWER PANEL

NO	HARDWARE DESCRIPTION	QTY
A.	Handle 	1
B.	Handle Screw M4 X 40mm 	2
C.	Wood Dowel M6 X 30mm 	6
D.	JCBC Bolt M6 X 50mm 	2
E.	Wood Dowel M8 X 30mm 	2
F.	Allen Key 	1
G.	Cam Screw 	20
H.	Cam Lock 	20
I.	Barrel Nut M6 X 13mm 	2

*Screw Driver and Hammer Not Provided


NIGHT STAND

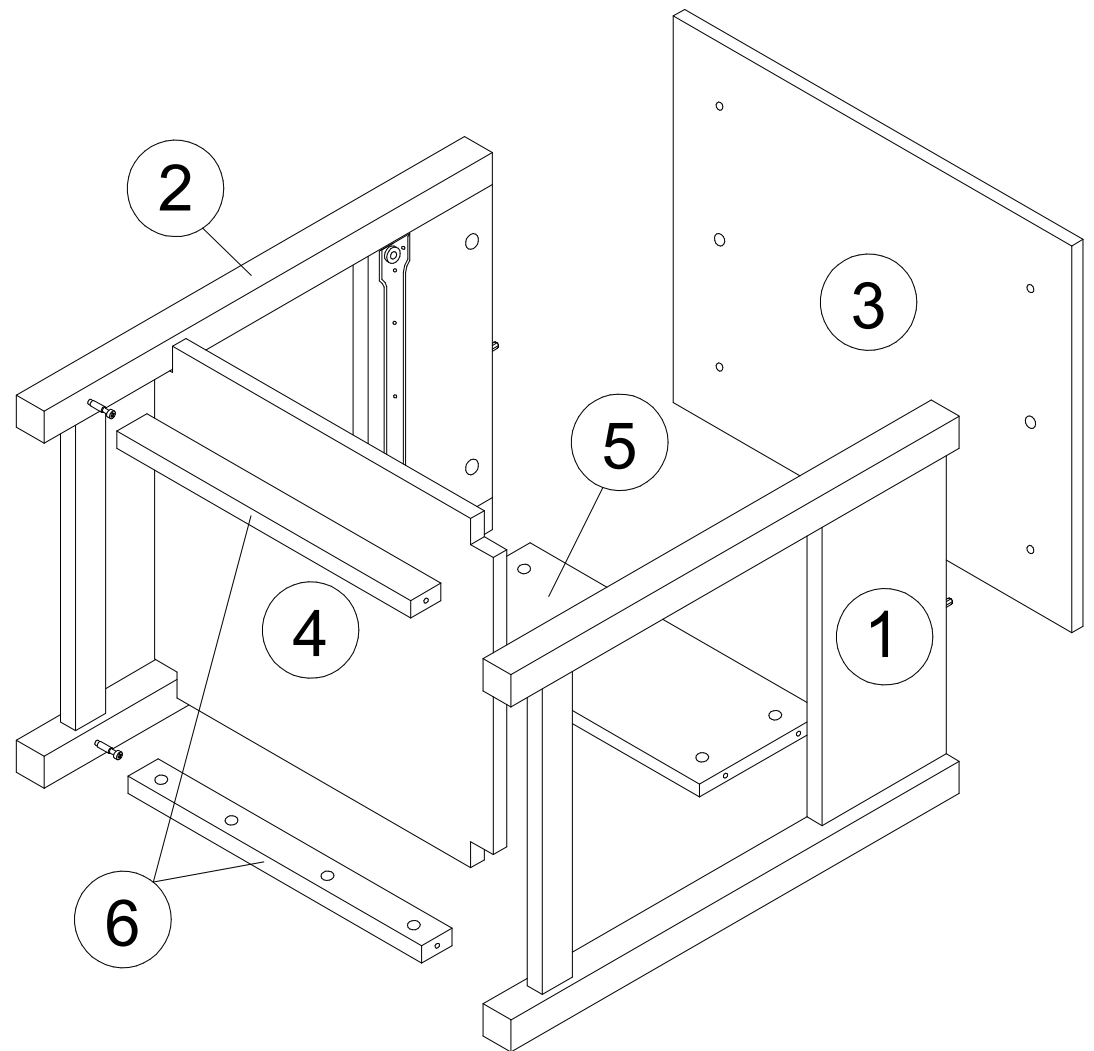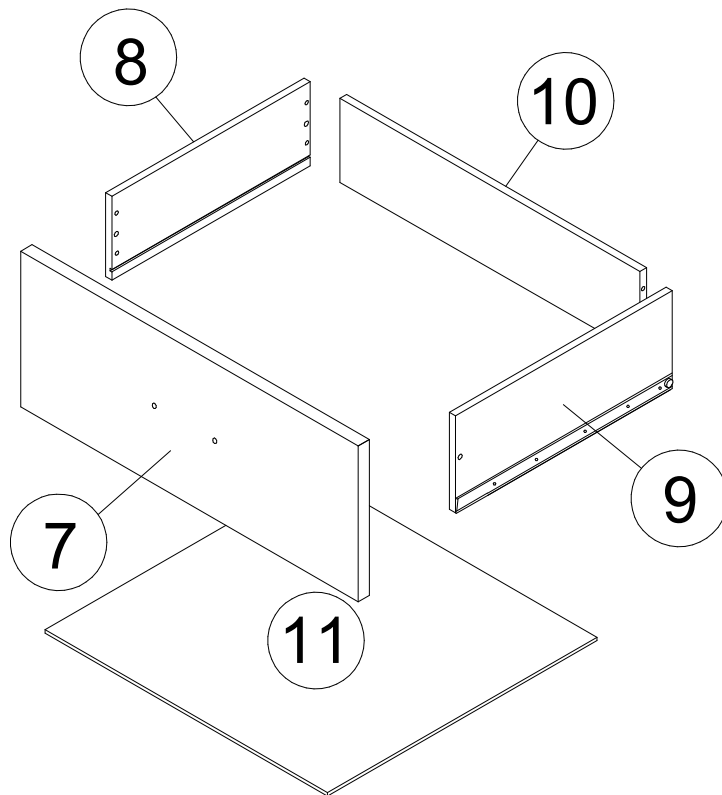

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 1.

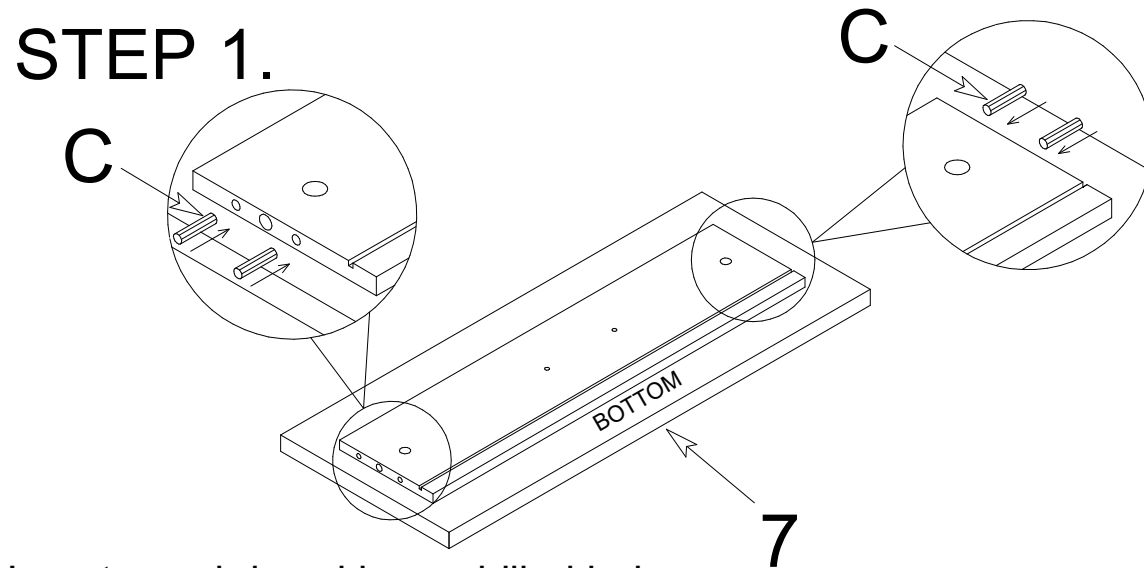


Insert wood dowel in predrilled hole.

STEP 2.

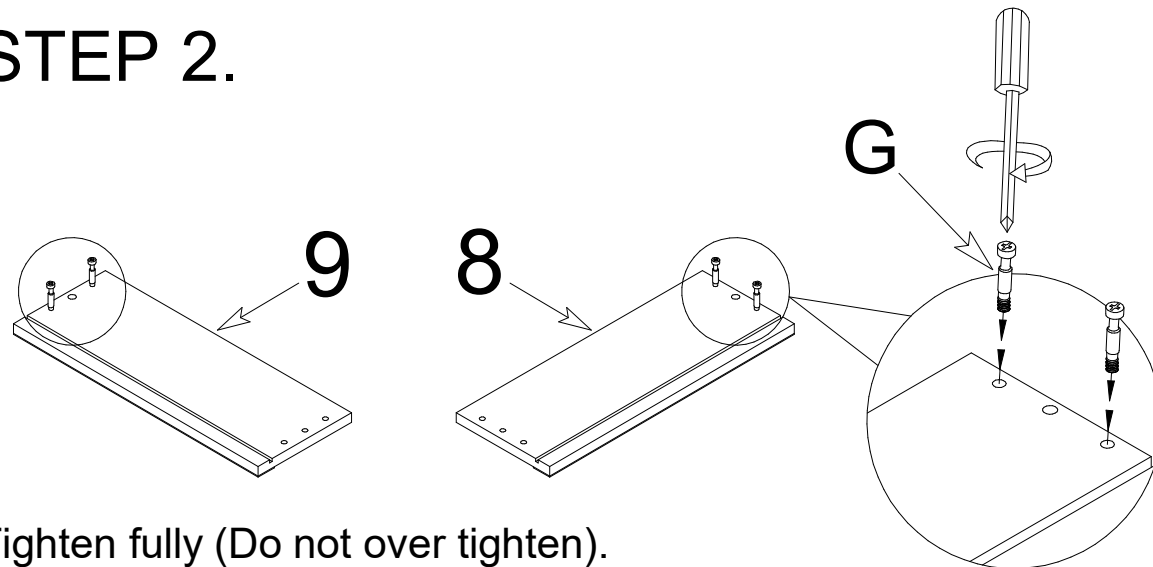

Tighten fully (Do not over tighten).

STEP 3.

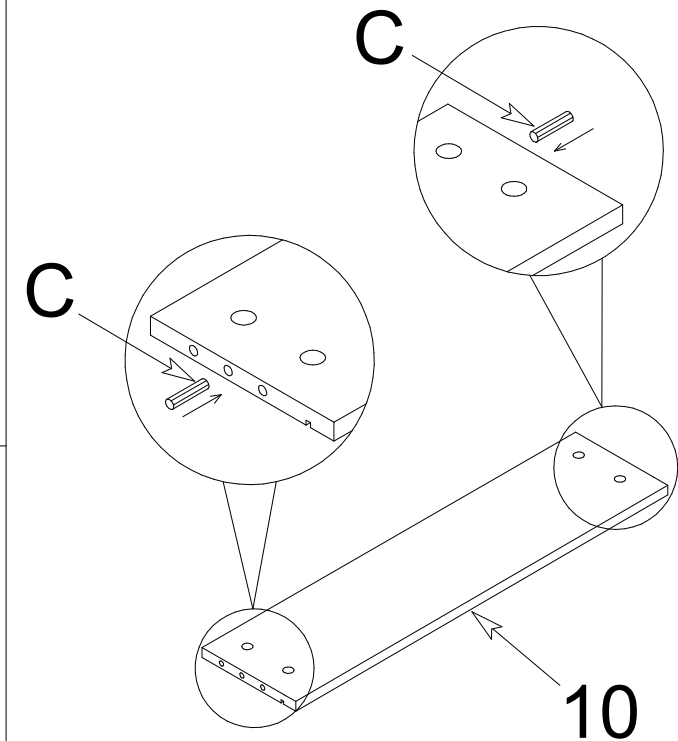


Insert wood dowel in predrilled hole.


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 4.

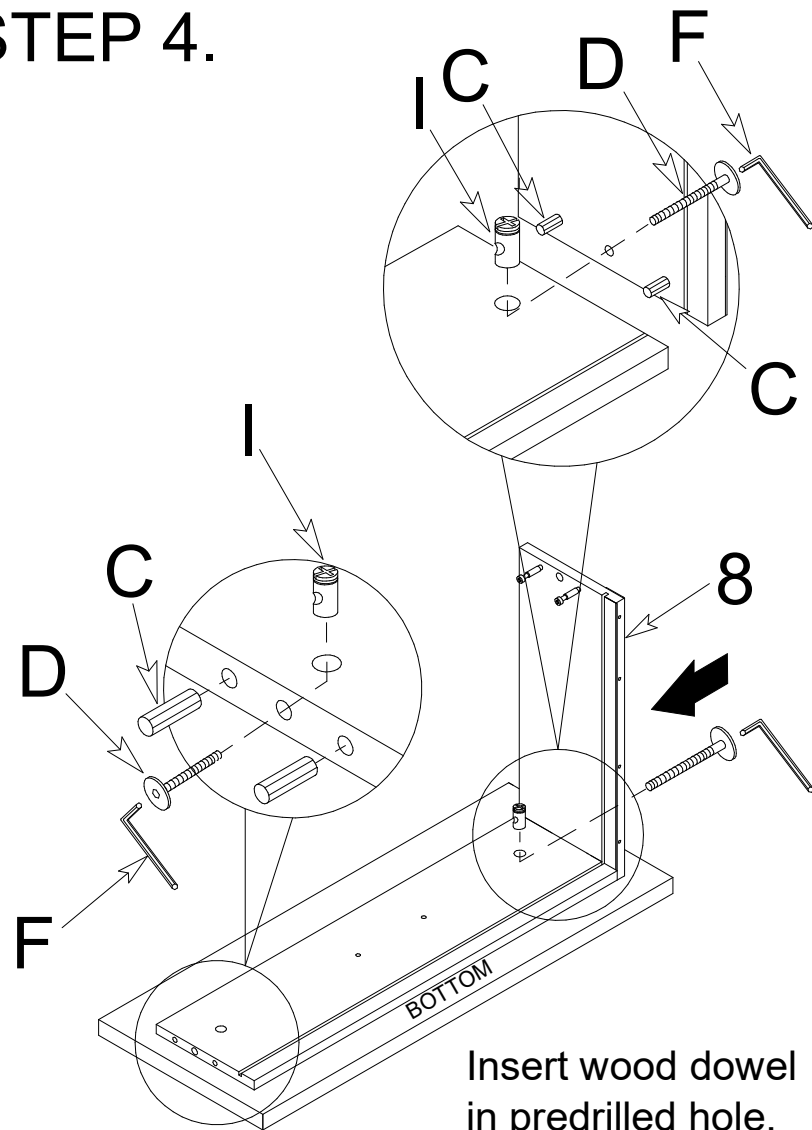


STEP 5.

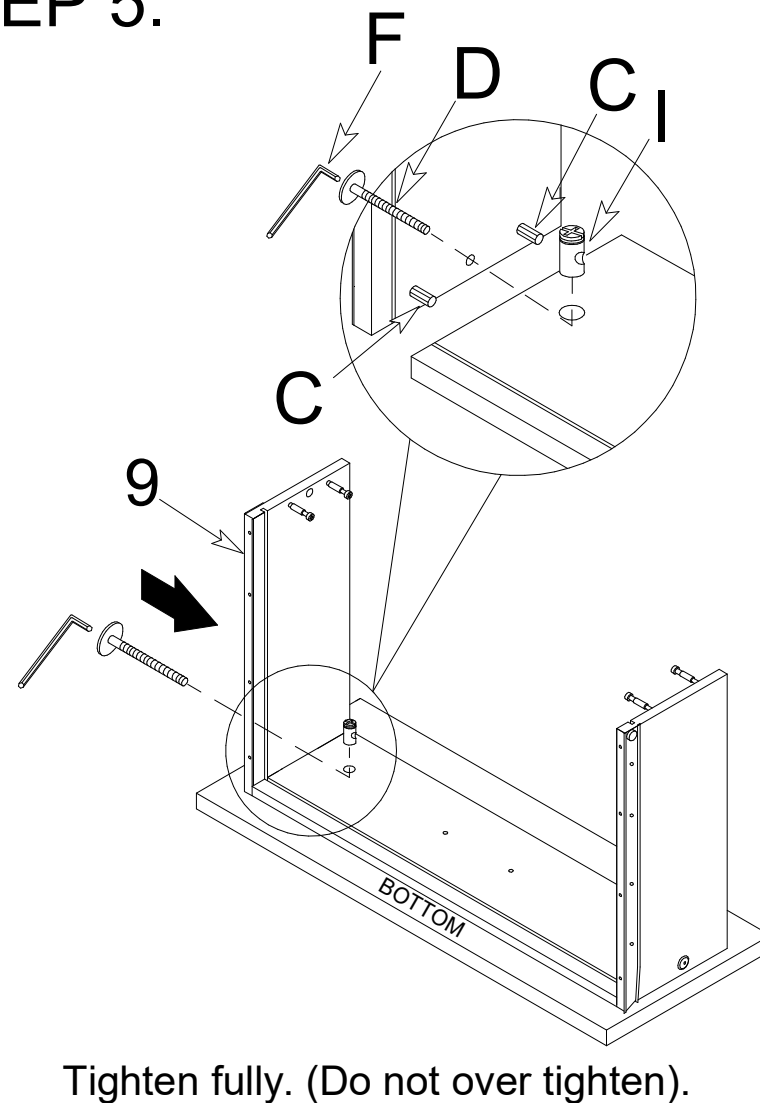


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 6.

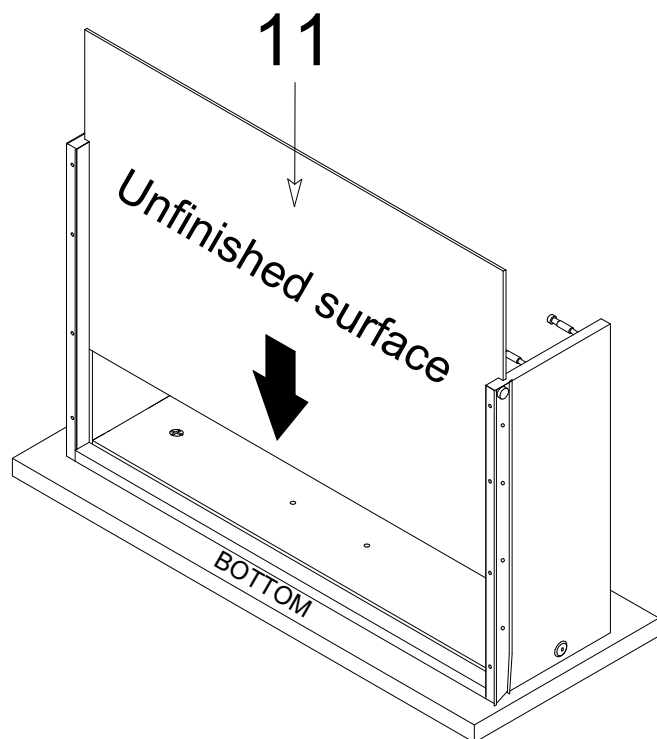


STEP 7.

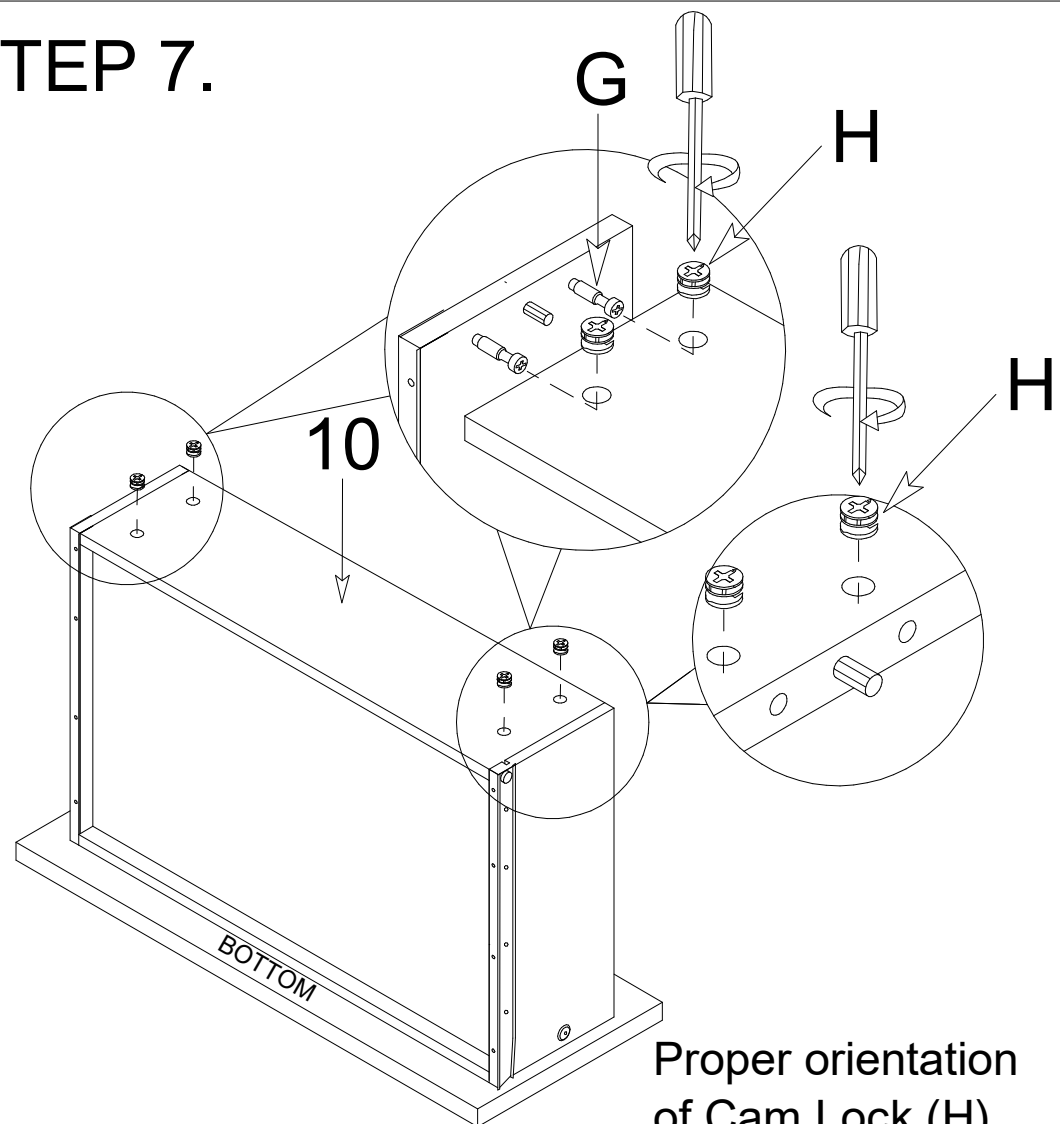


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 8.

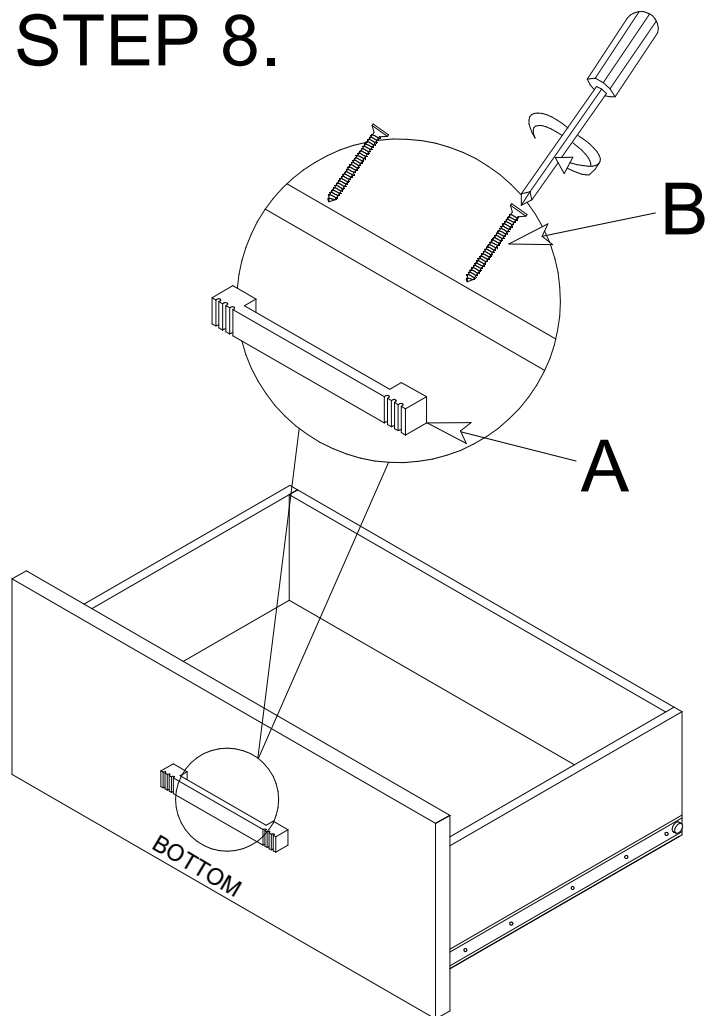


Attach handle using handle screw (B).

STEP 9.

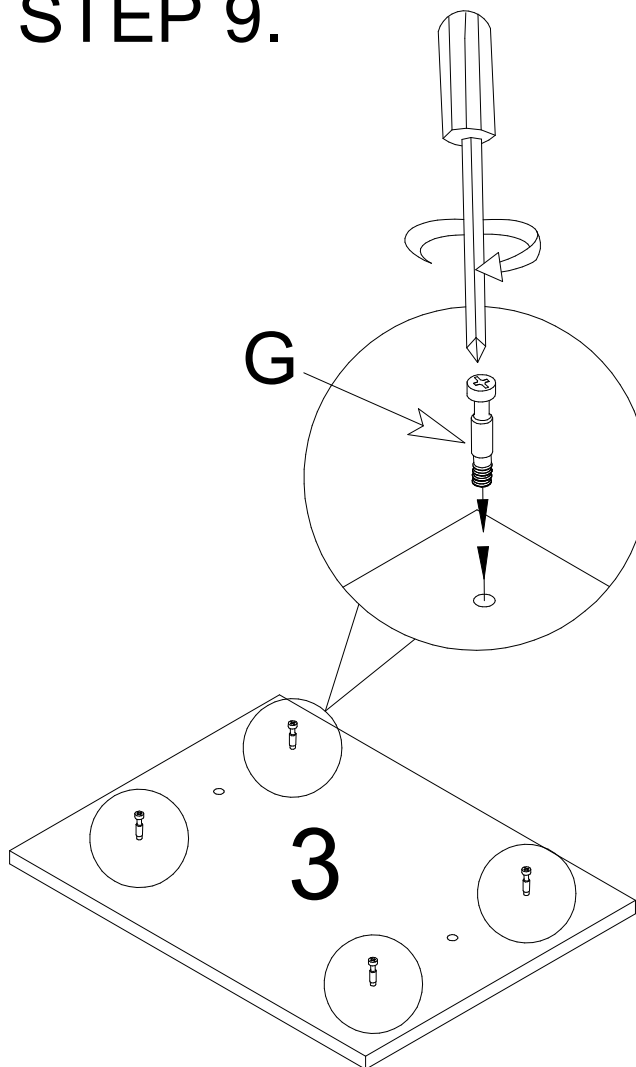

Tighten fully. (Do not over tighten).

STEP 10.

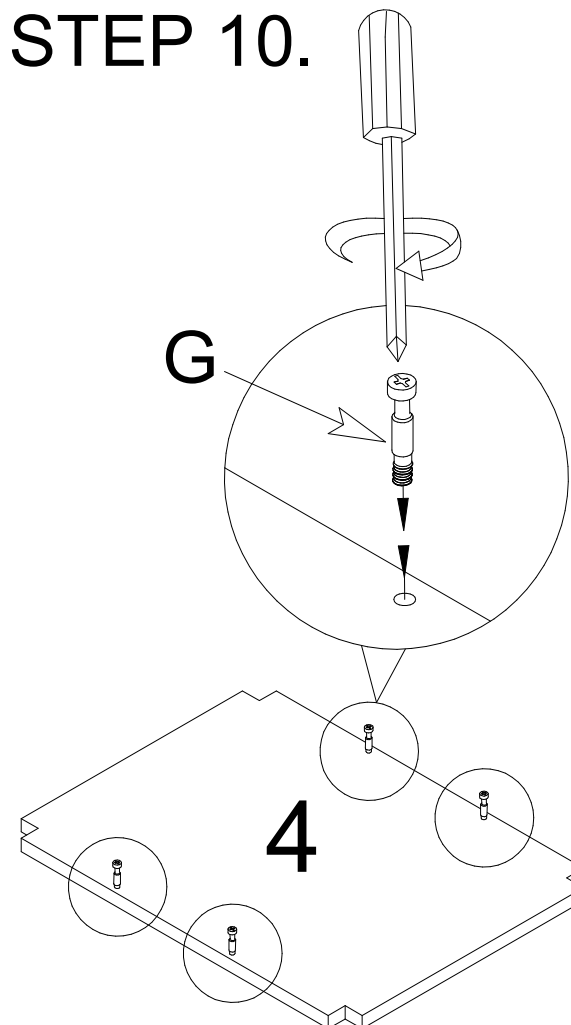


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 11. Tighten fully. (Do not over tighten).


Insert wood dowel
in predrilled hole.

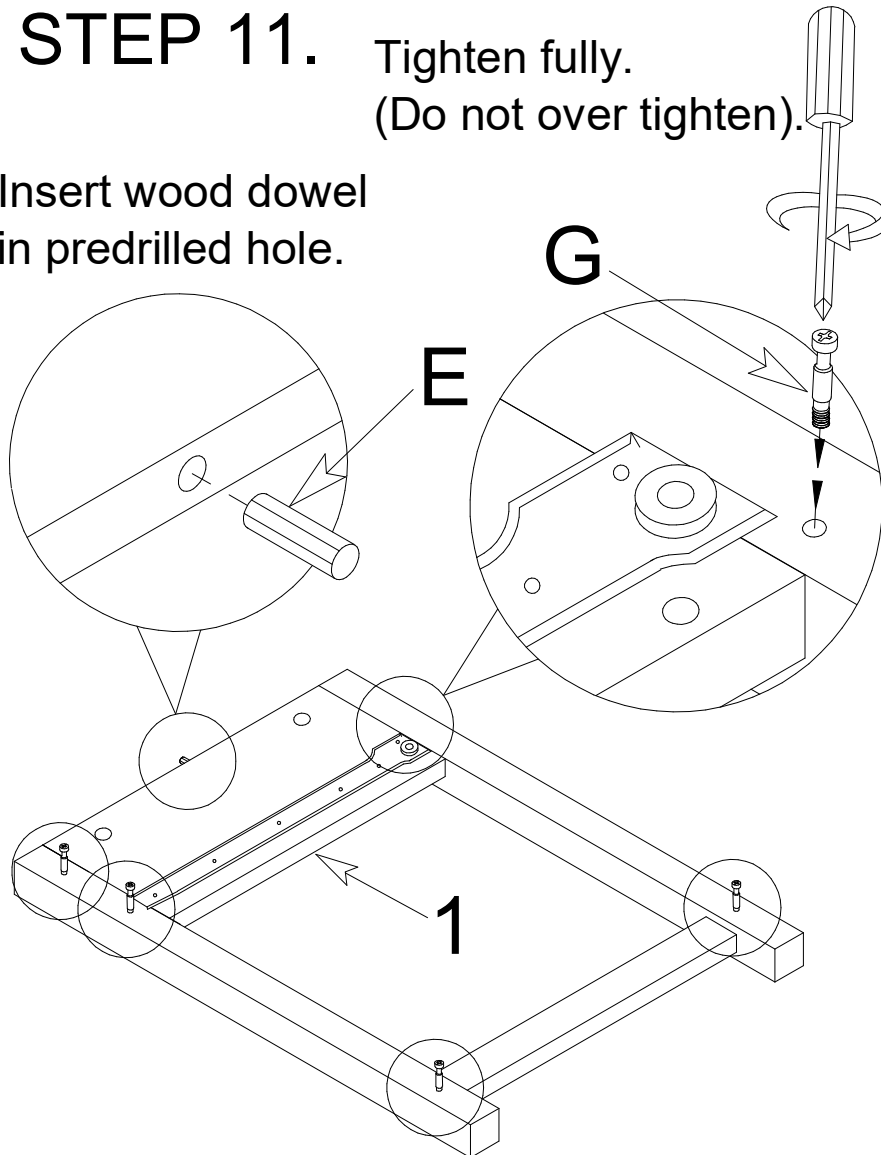

STEP 12.


Tighten fully.
(Do not over tighten).

Insert wood dowel
in predrilled hole.

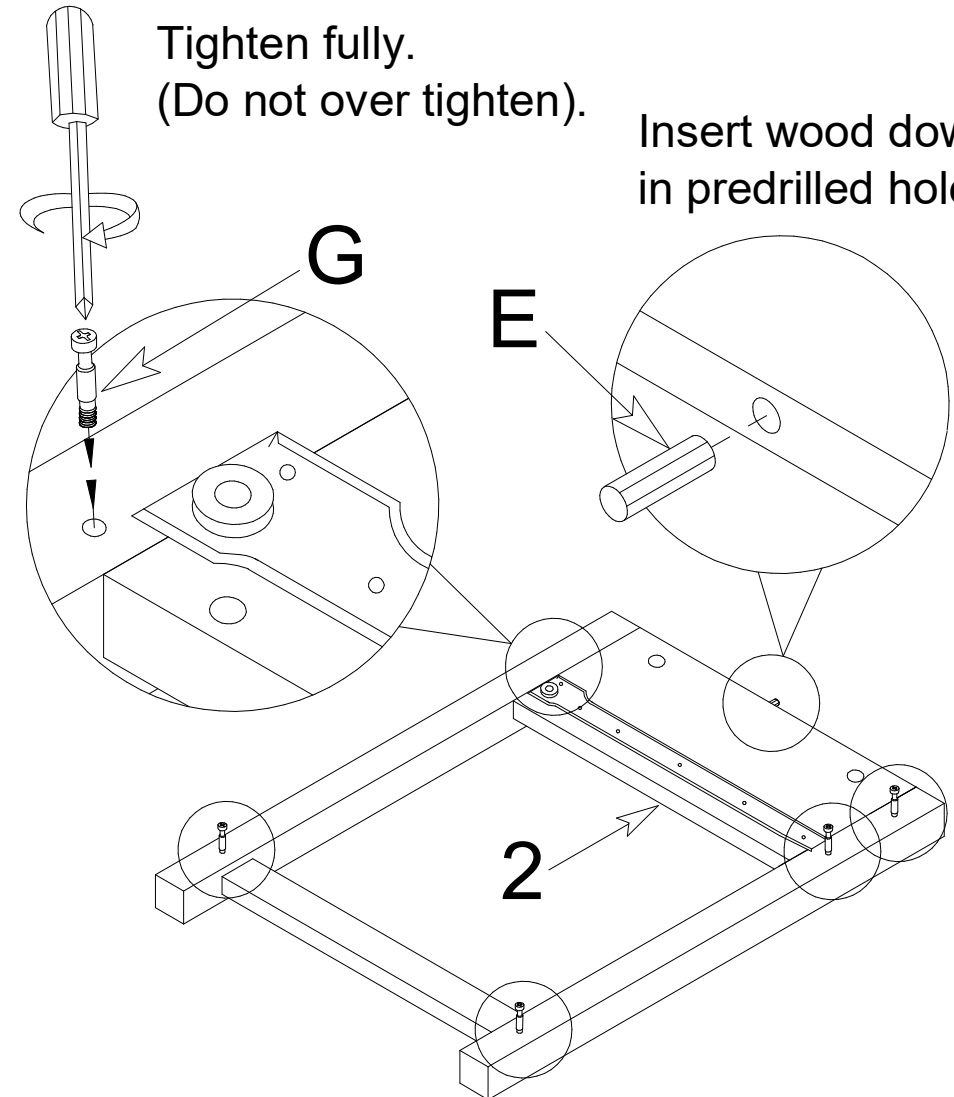


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 13.

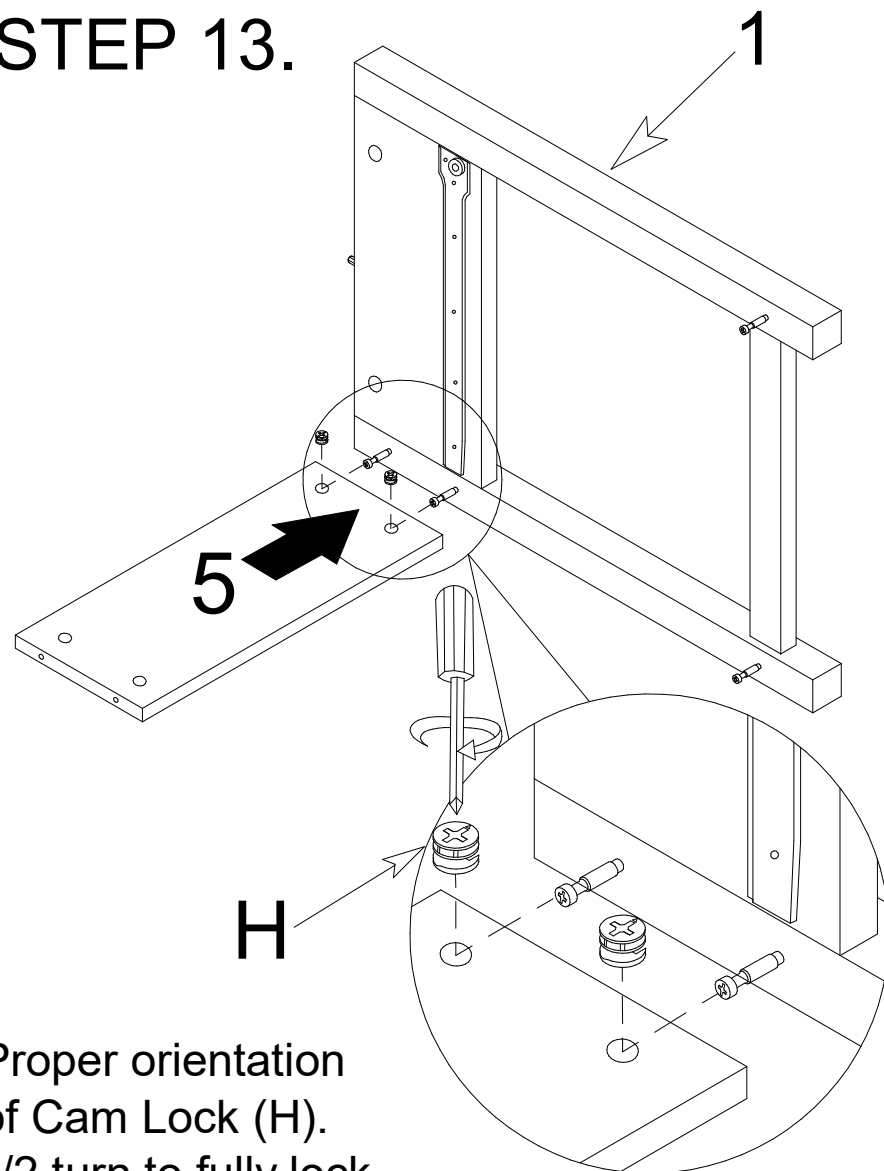

Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

STEP 14.

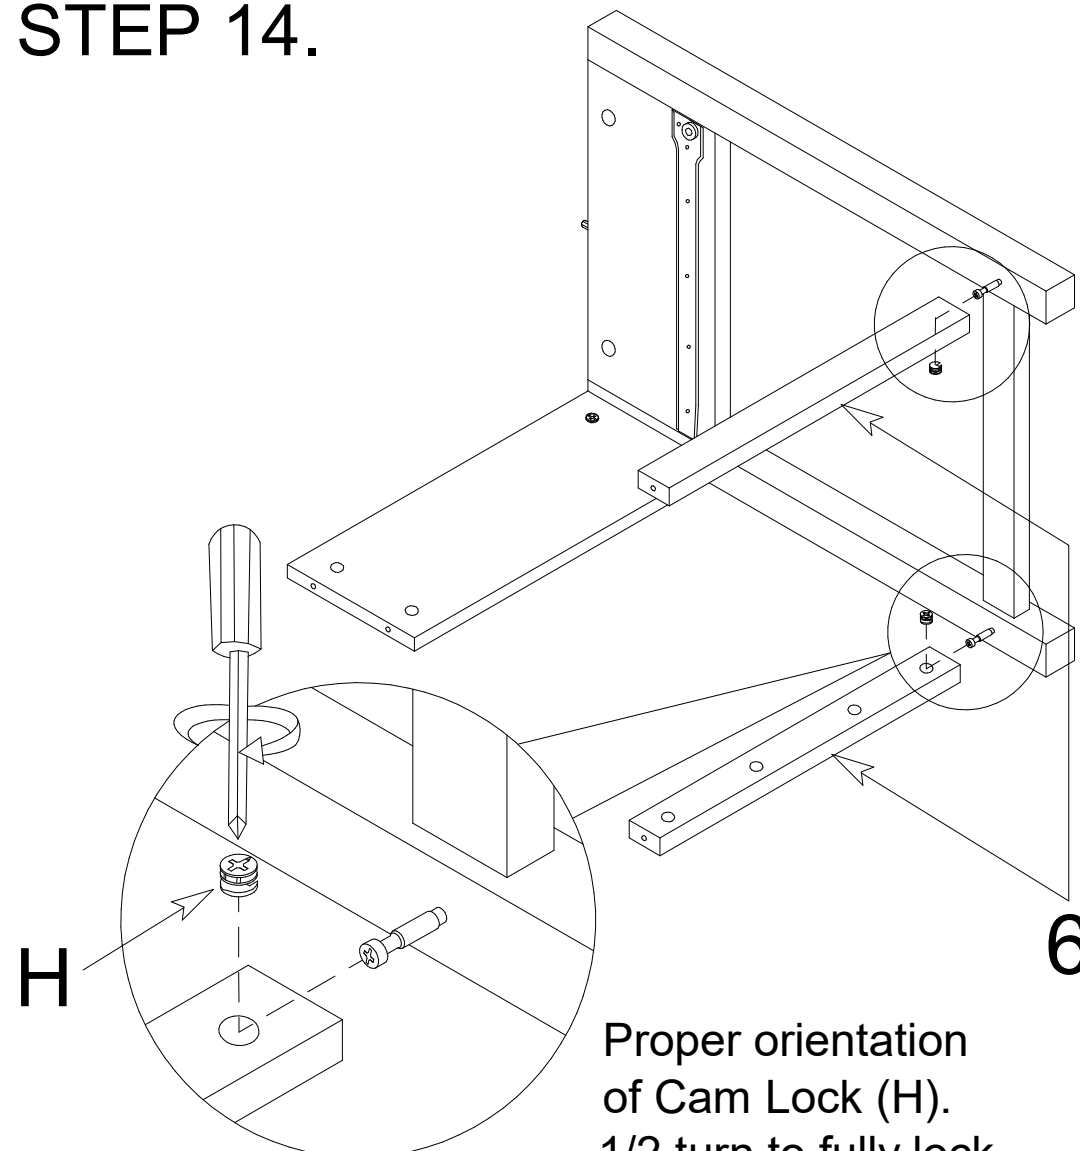


Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

ASSEMBLY INSTRUCTION NIGHT STAND


STEP 15.

Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

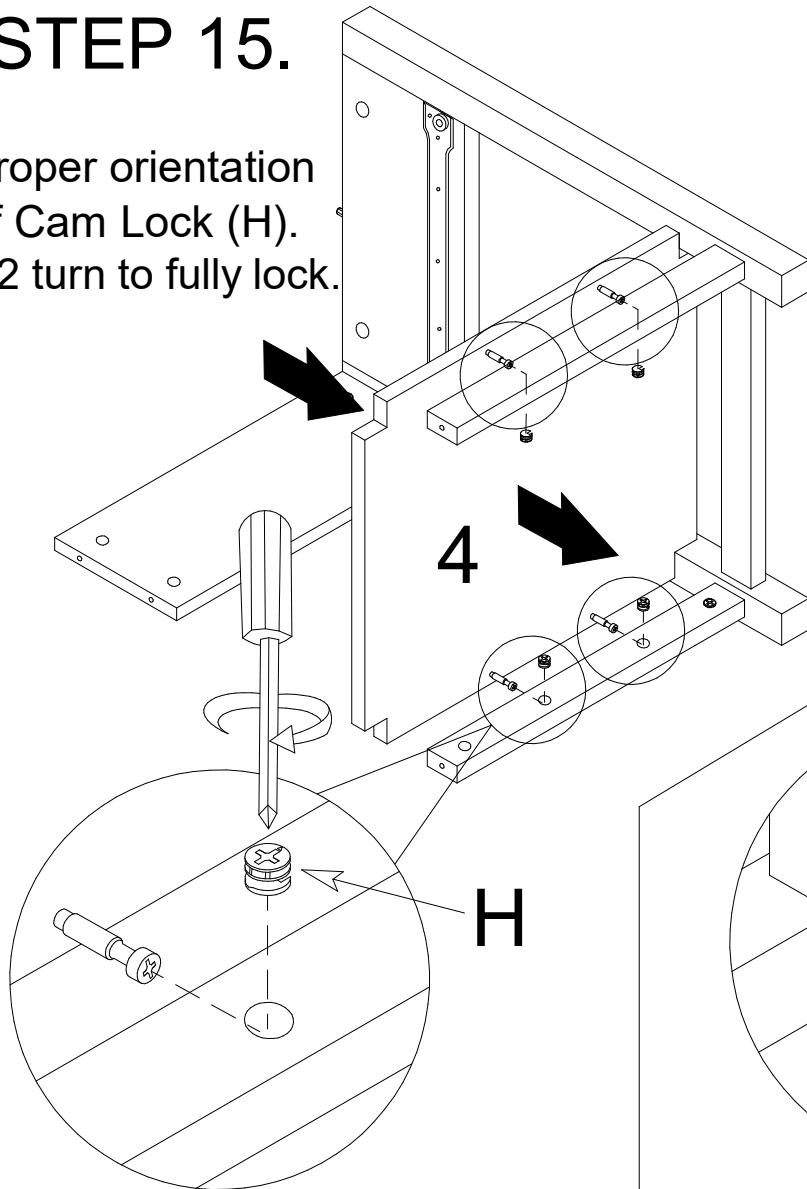

STEP 16.



Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

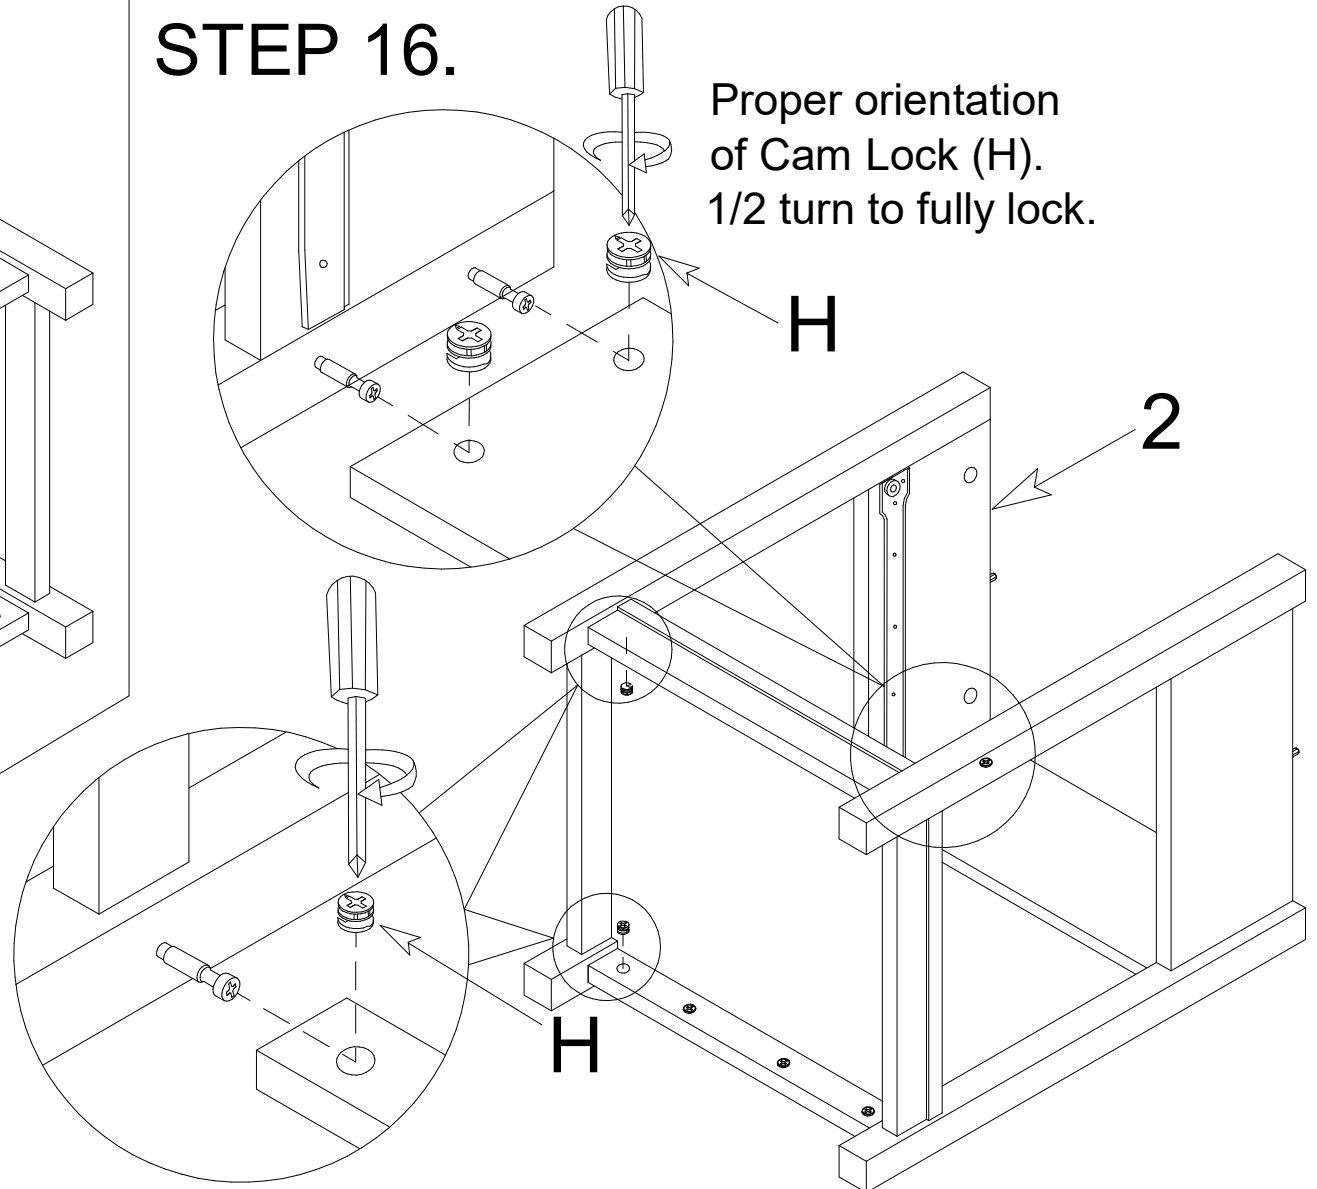

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 17.

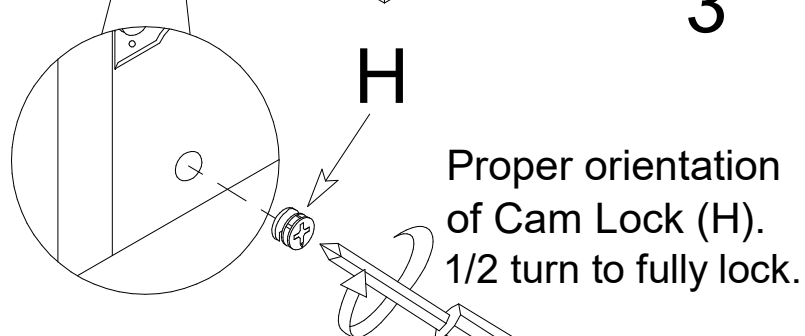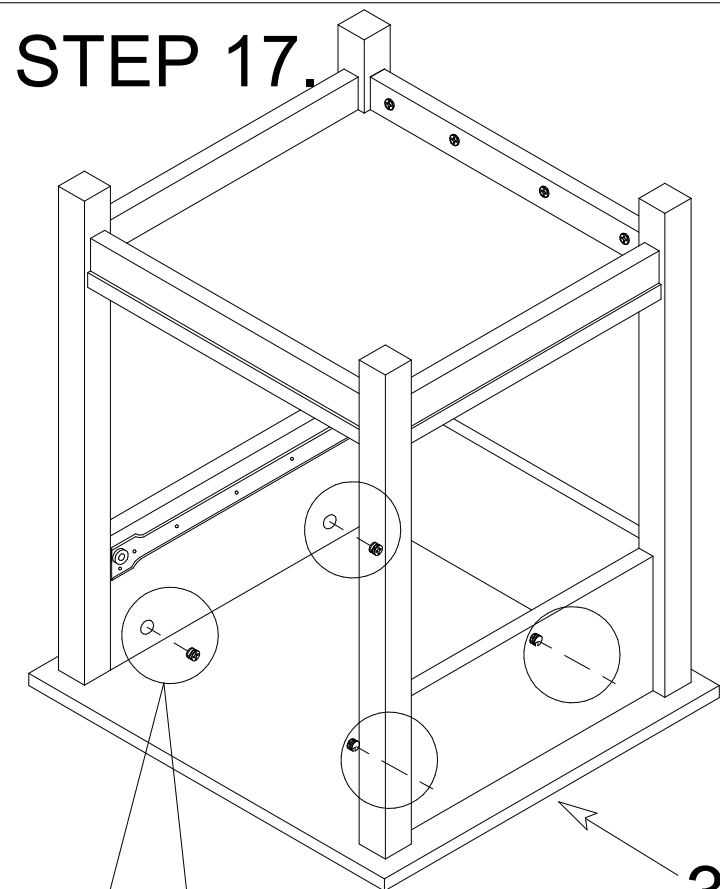

Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

STEP 18.

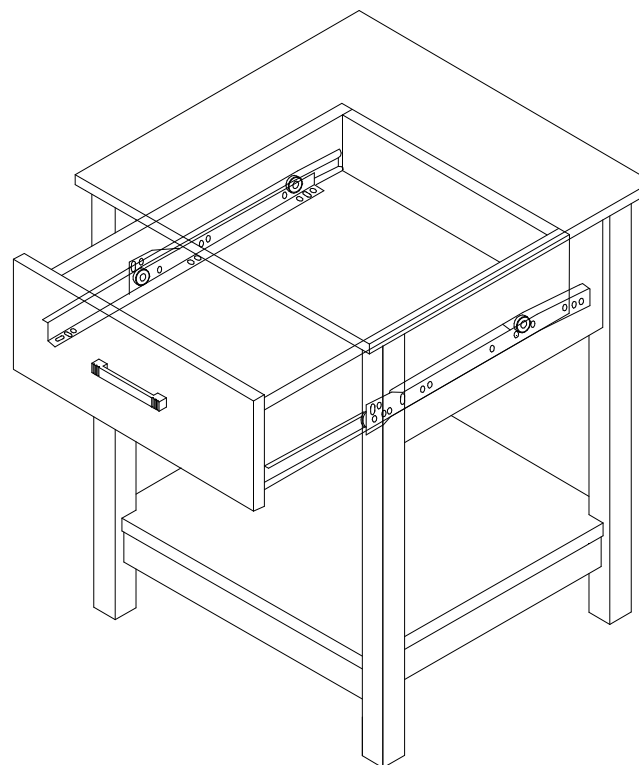

Put in drawer on the track.

