

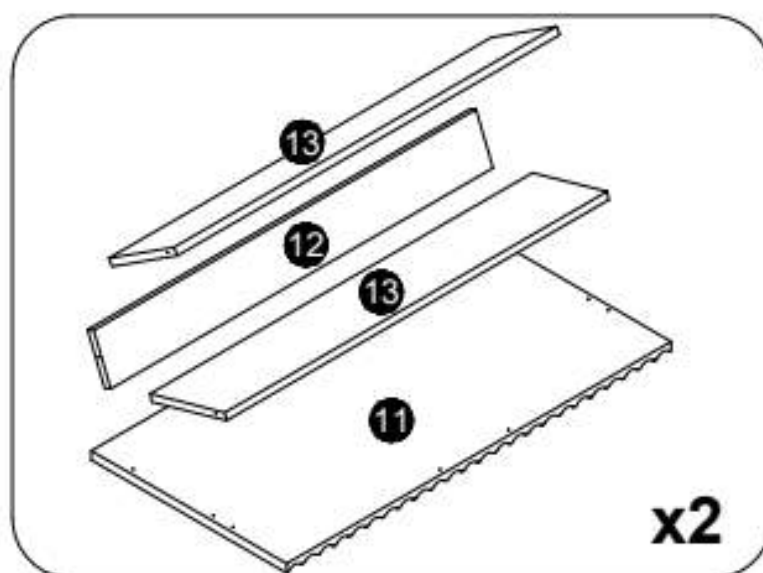


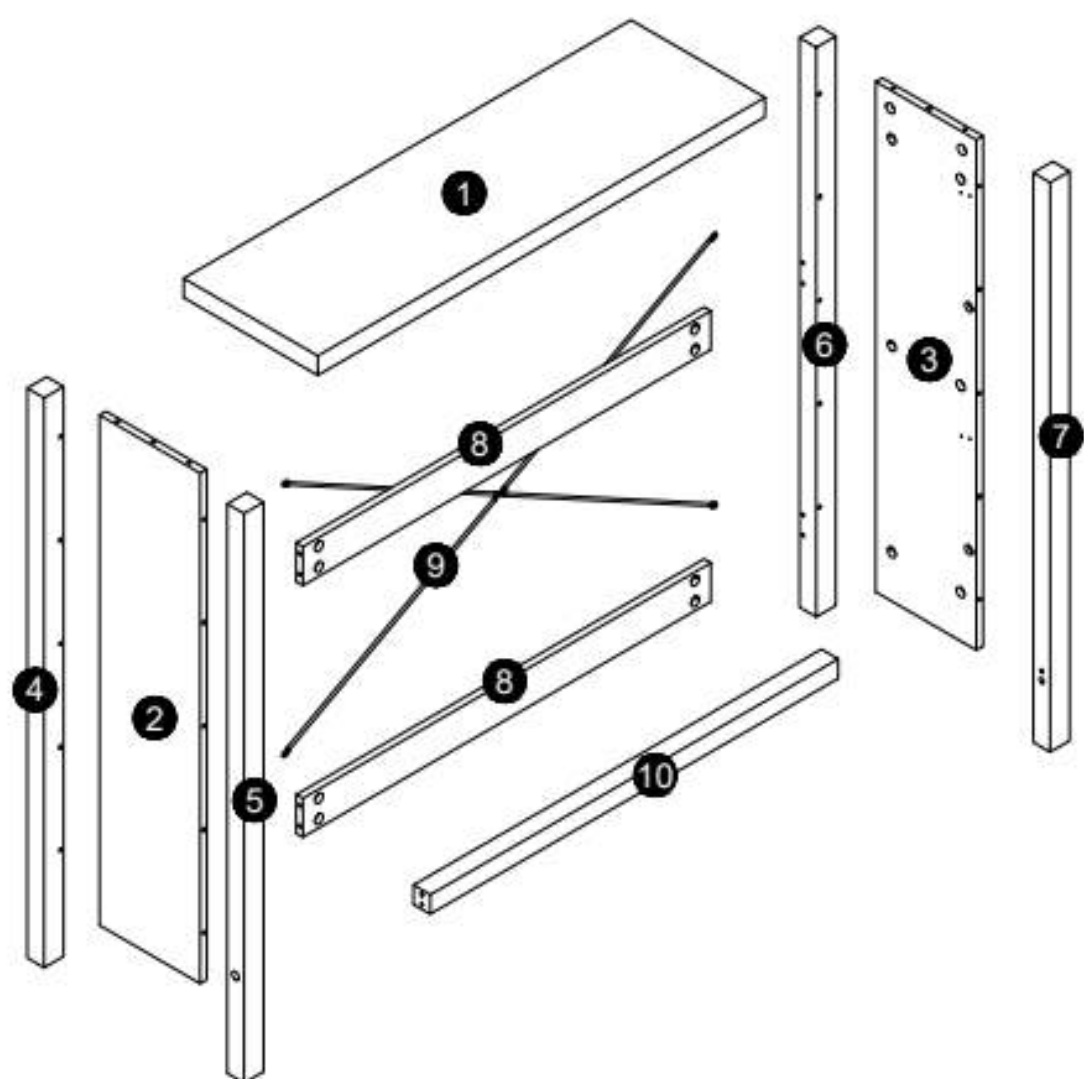

Step 1

WARNING

Caution: Be careful to place it on a flat surface and use a hammer to knock in G.

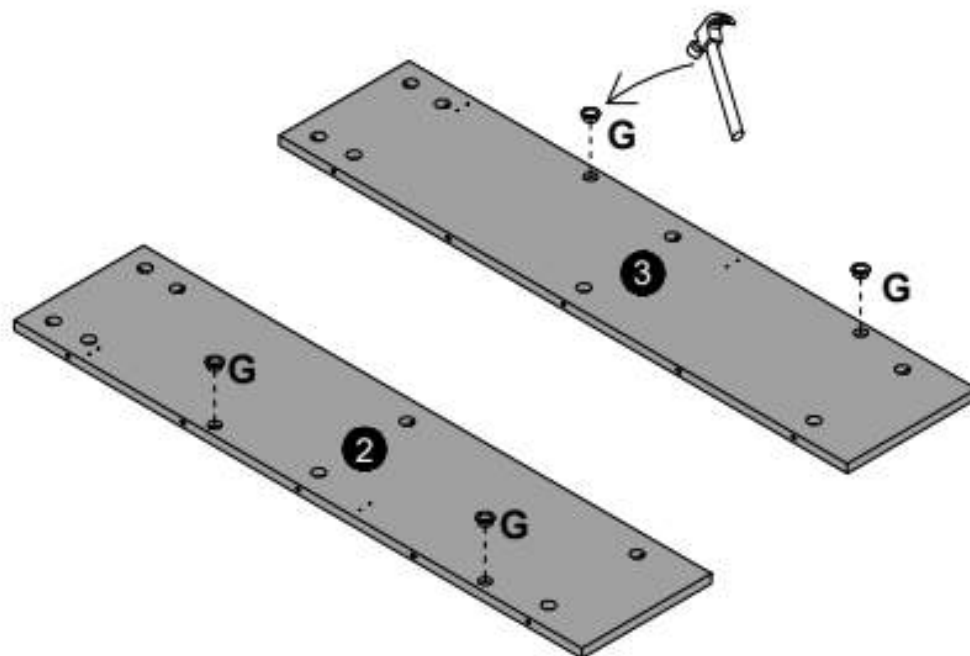

G




x4

Step 2

WARNING

Caution: Pay attention to the directions of 4、5、6、7!

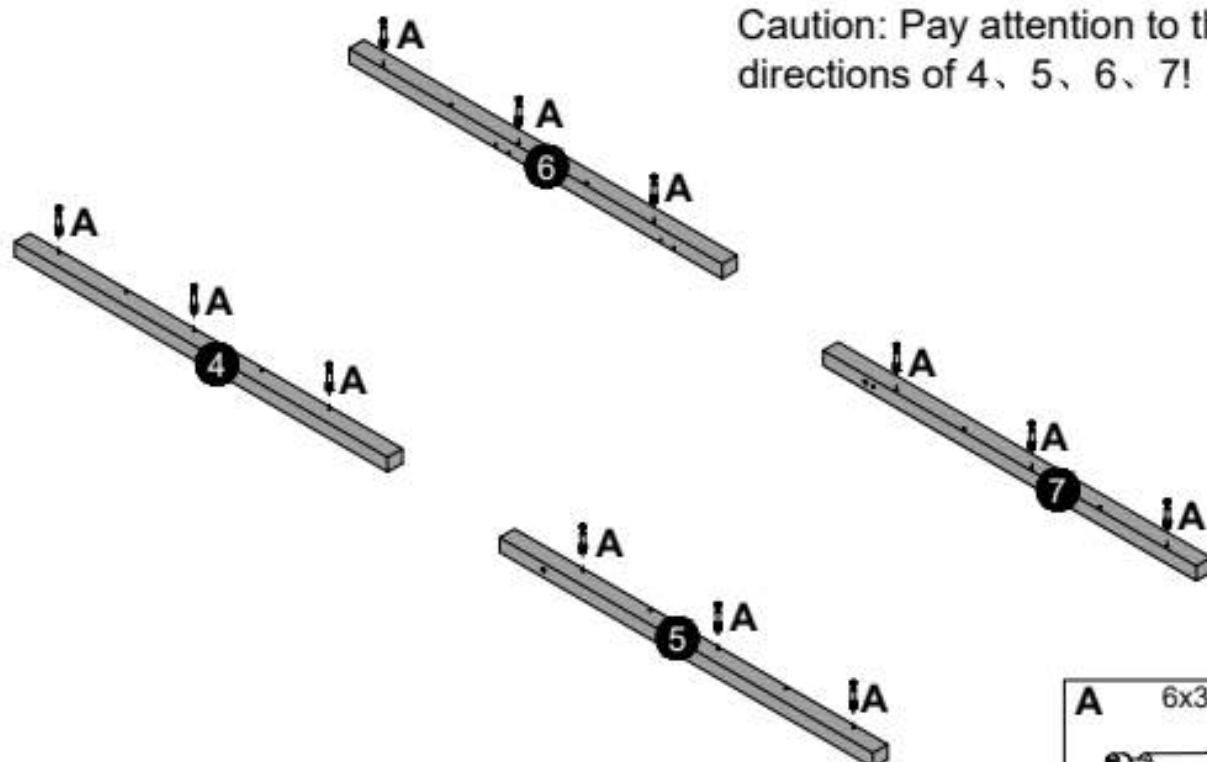


A

6x35mm




x12

Step 3

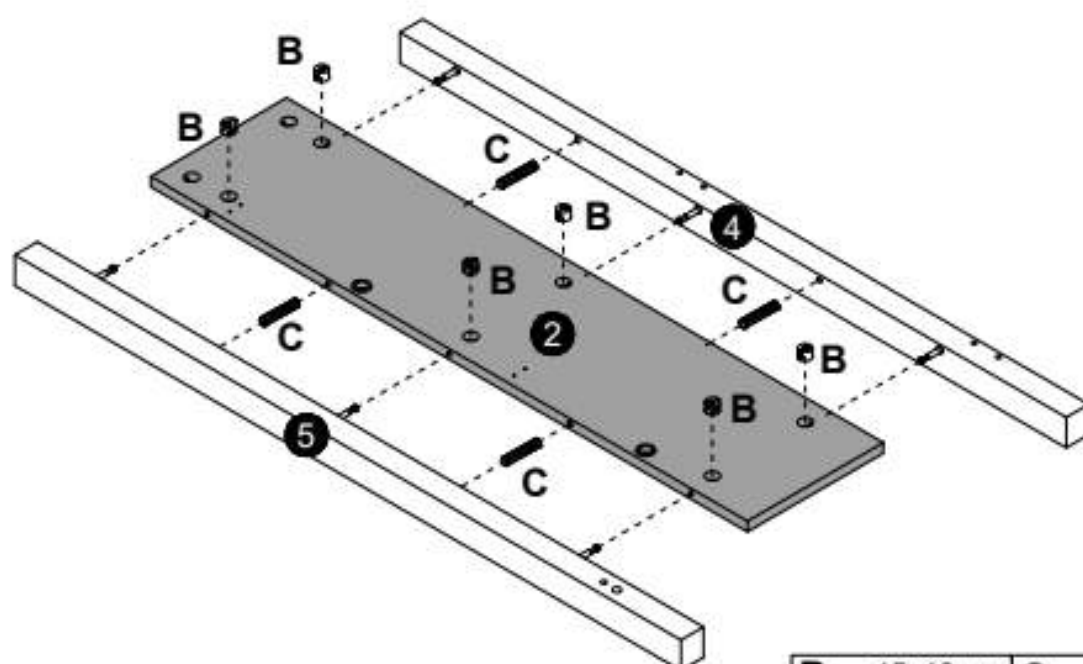


B	15x10mm	C	6x30mm
			
	x6		x4


Step 4

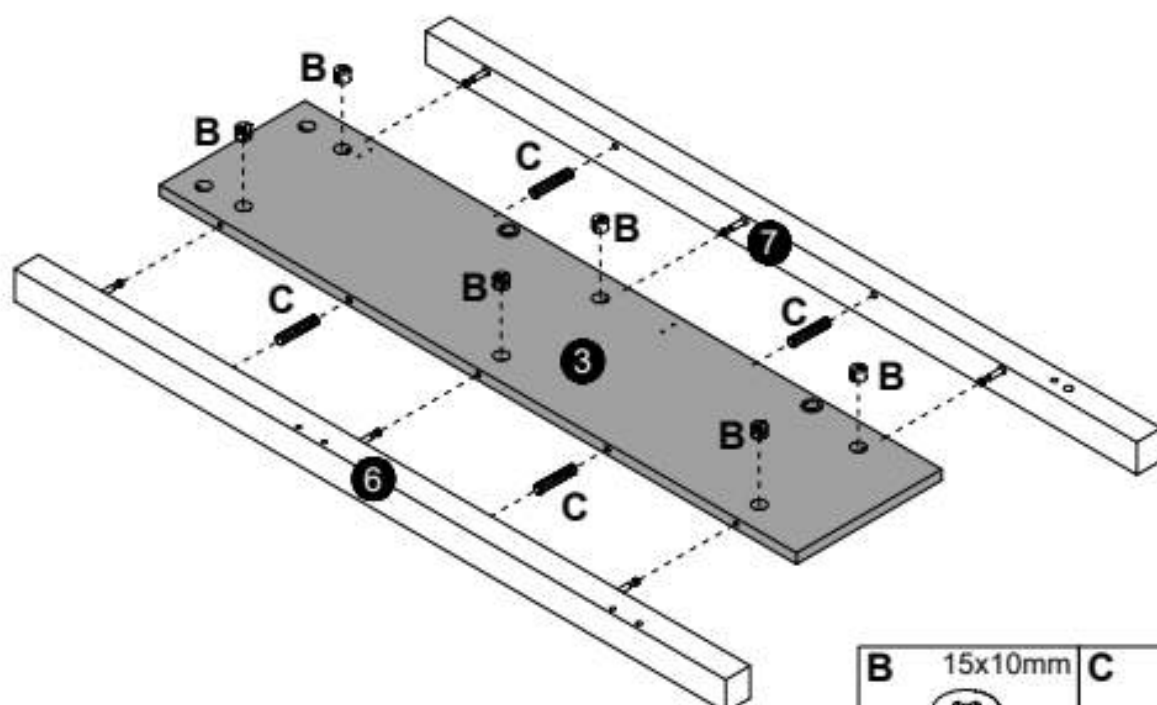


B	15x10mm	C	6x30mm
			
	x6		x4


Step 5

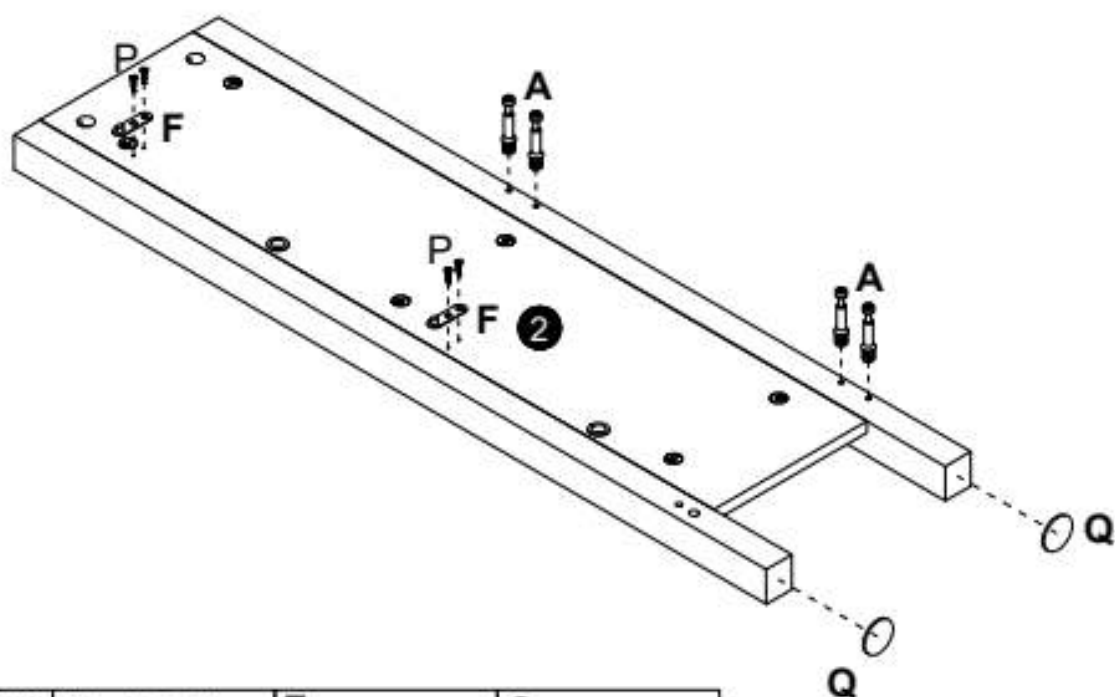


A 6x35mm  x4	P 3.5x10mm  x4	F  x2	Q  x2
--	--	---	---

Step 6


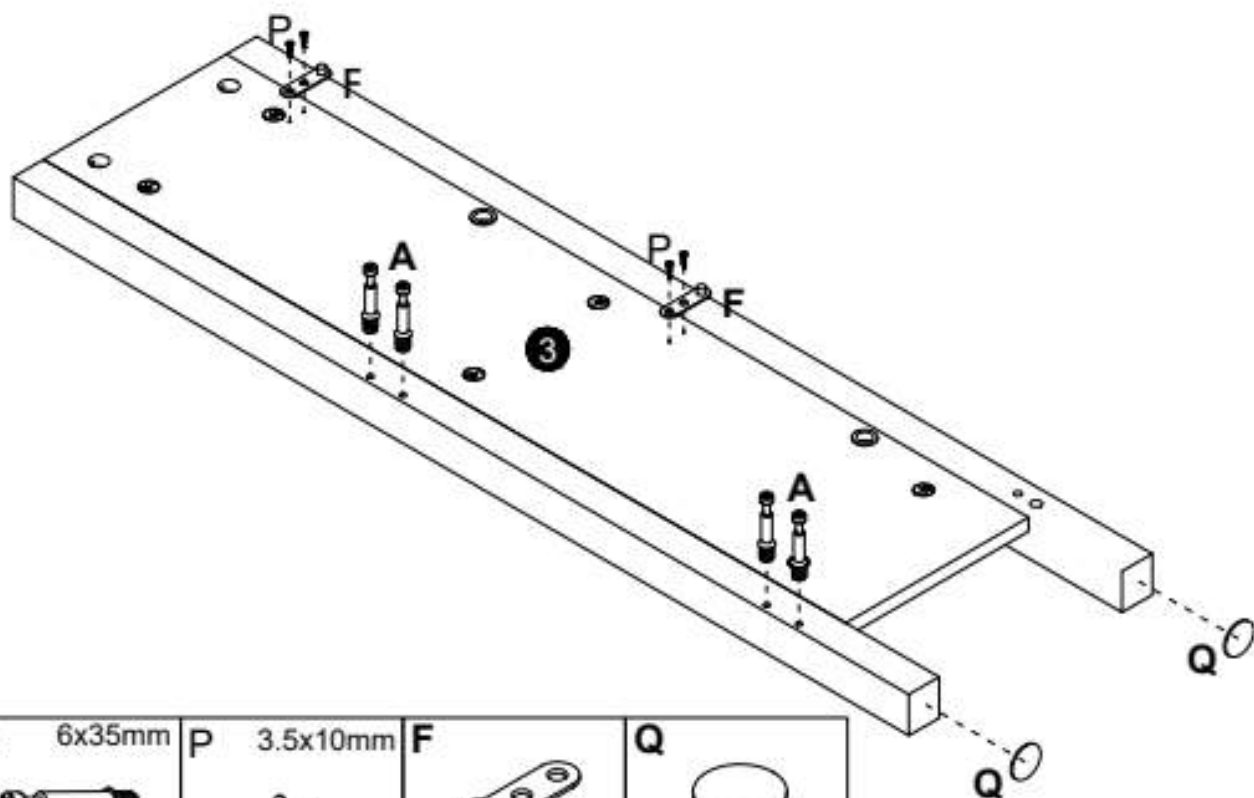


A 6x35mm  x4	P 3.5x10mm  x4	F  x2	Q  x2
--	--	---	---


Step 7

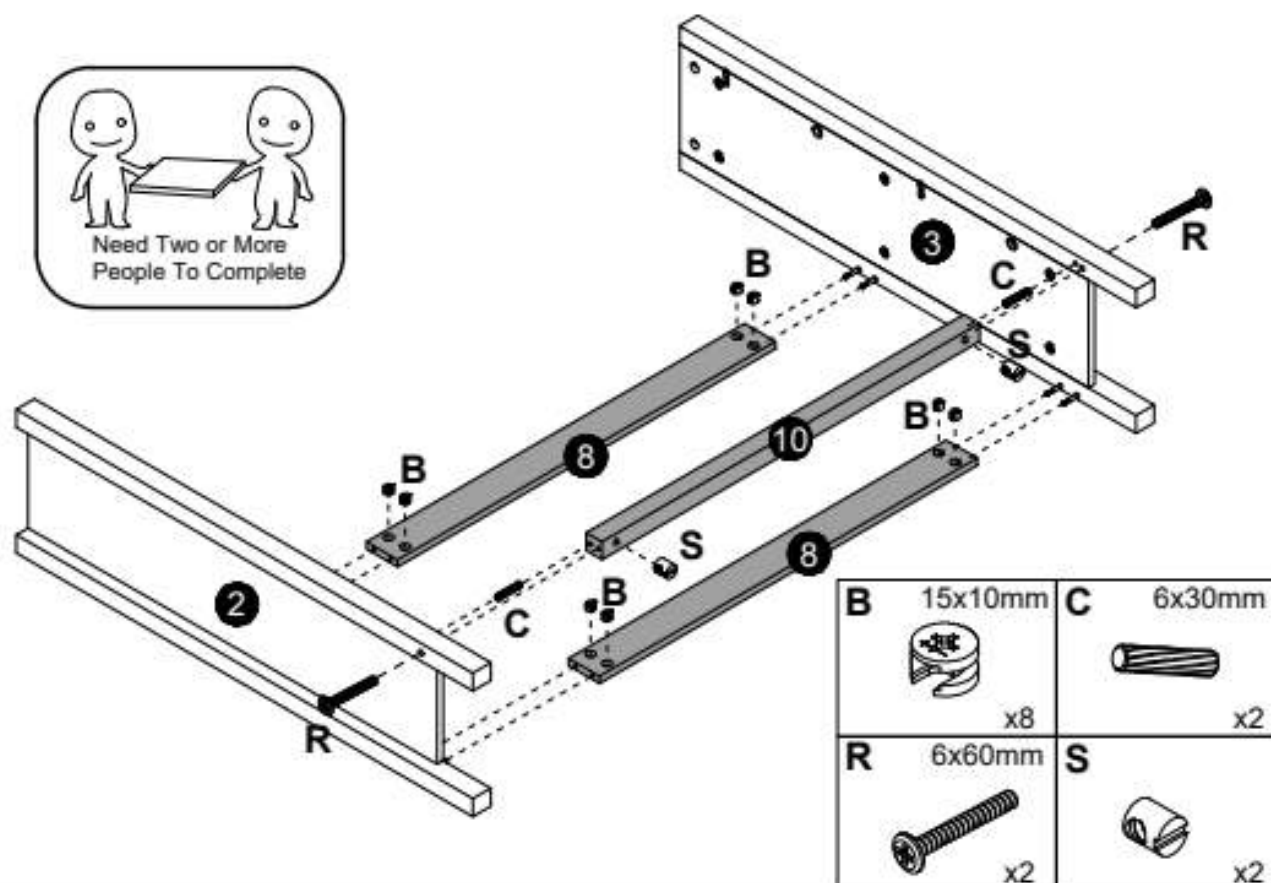

Step 8

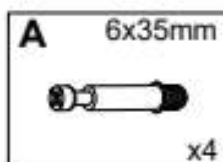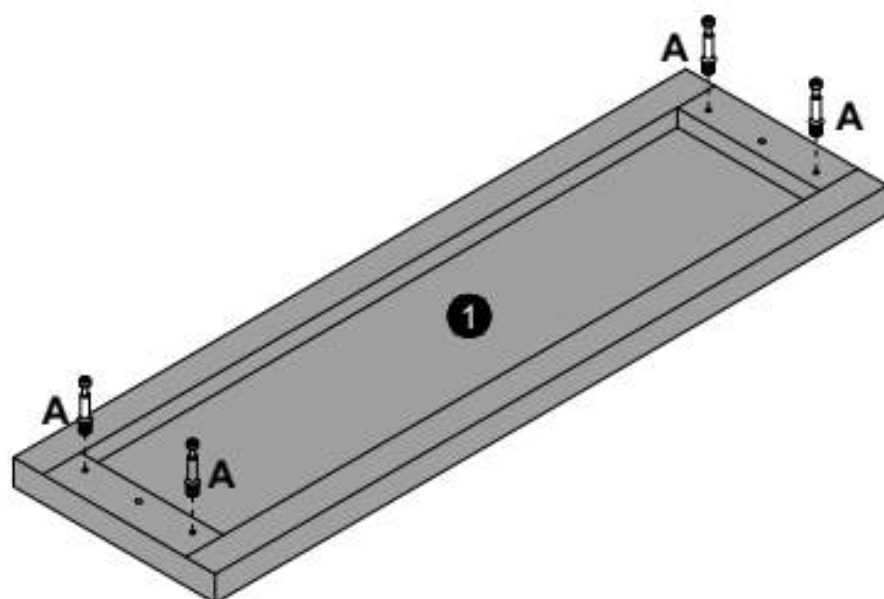


Step 9

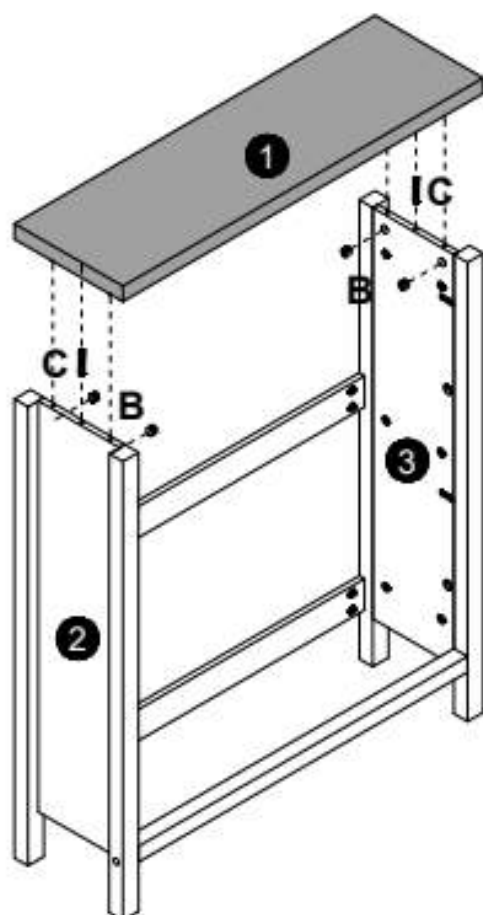

B	15x10mm
	x4
C	6x30mm
	x2

Step 10

x2

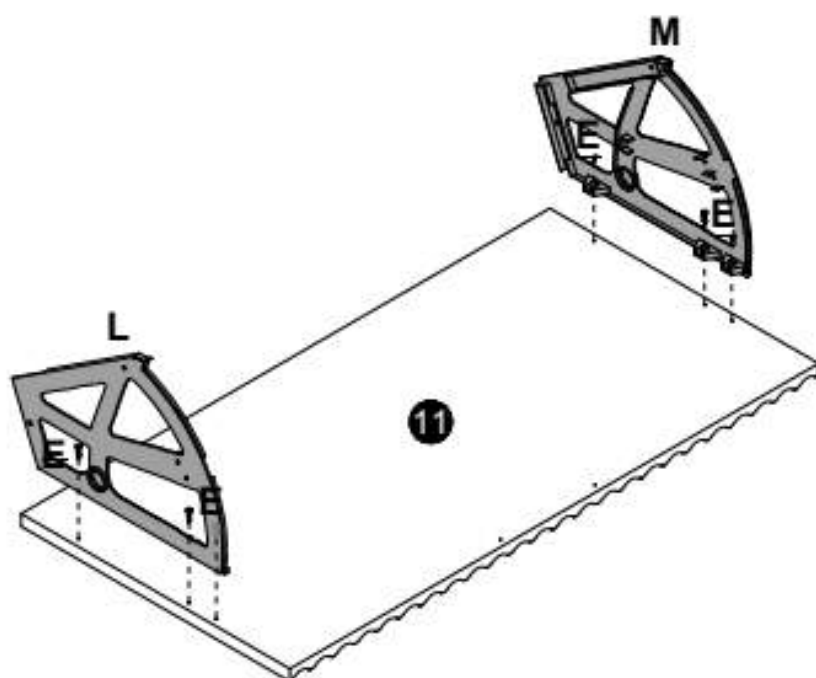


E	3.5x12mm
	x12



Step 11

x2

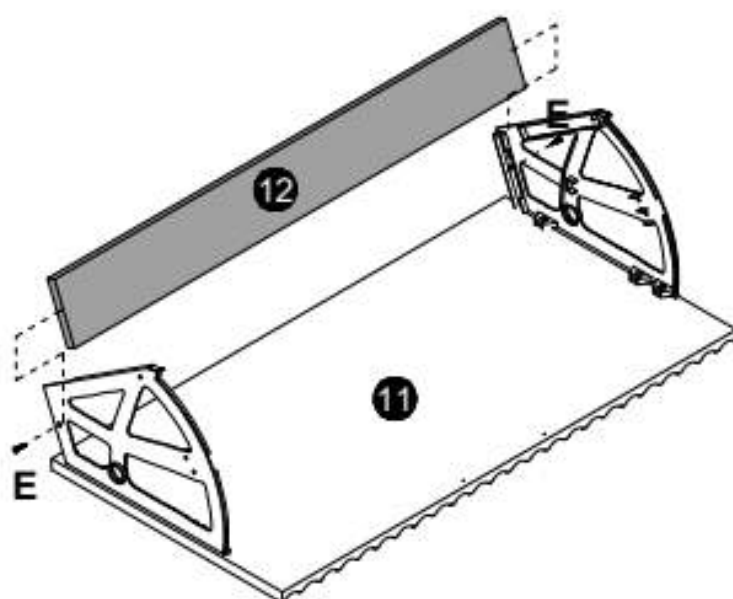


E 3.5x12mm



x4

Step 12

x2

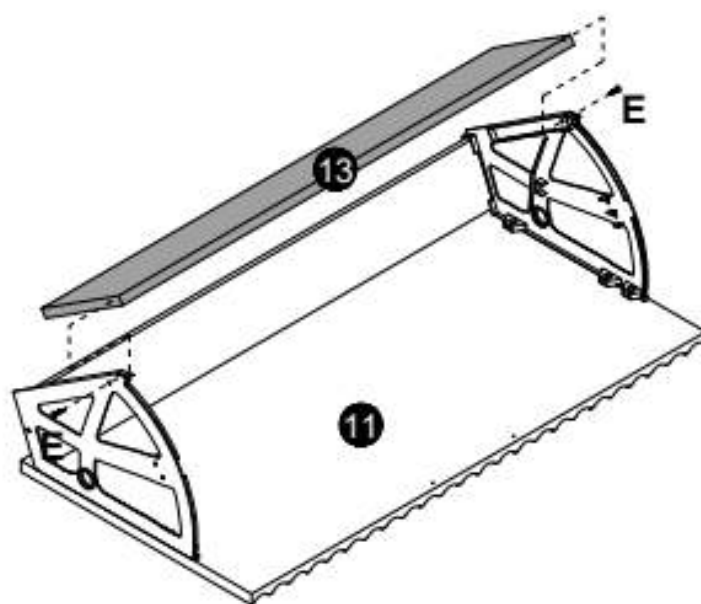



E 3.5x12mm






x4

Step 13

x2

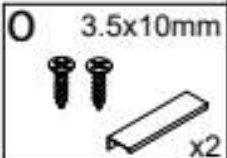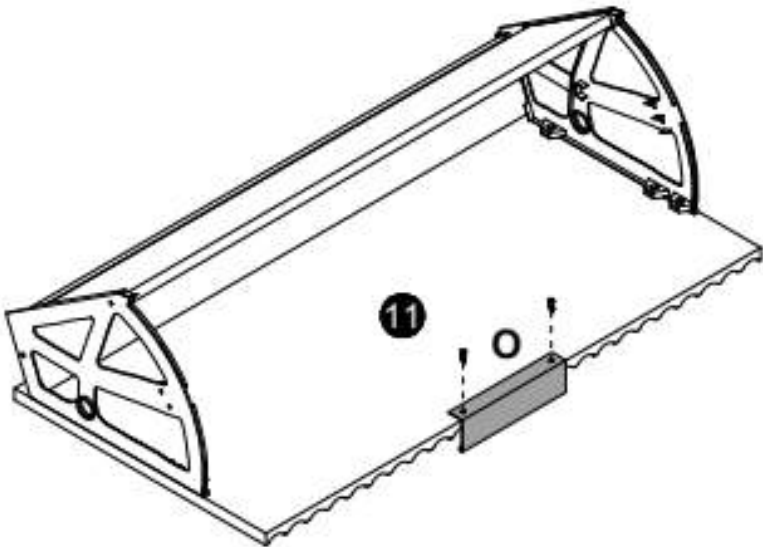

Step 14

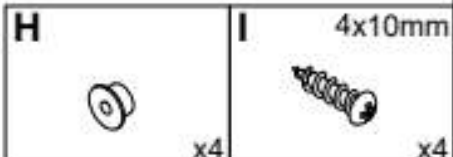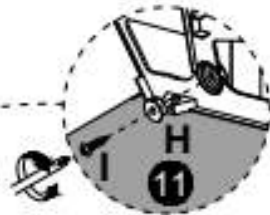
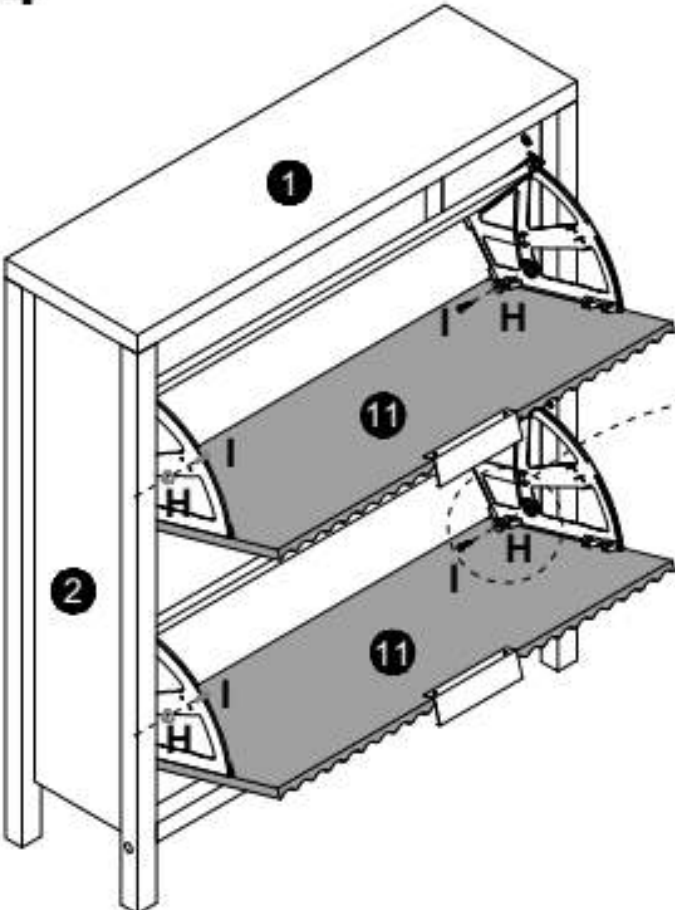


Step 15




WARNING

Caution: There are 2 installation positions to choose from on the 13.

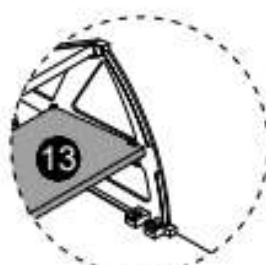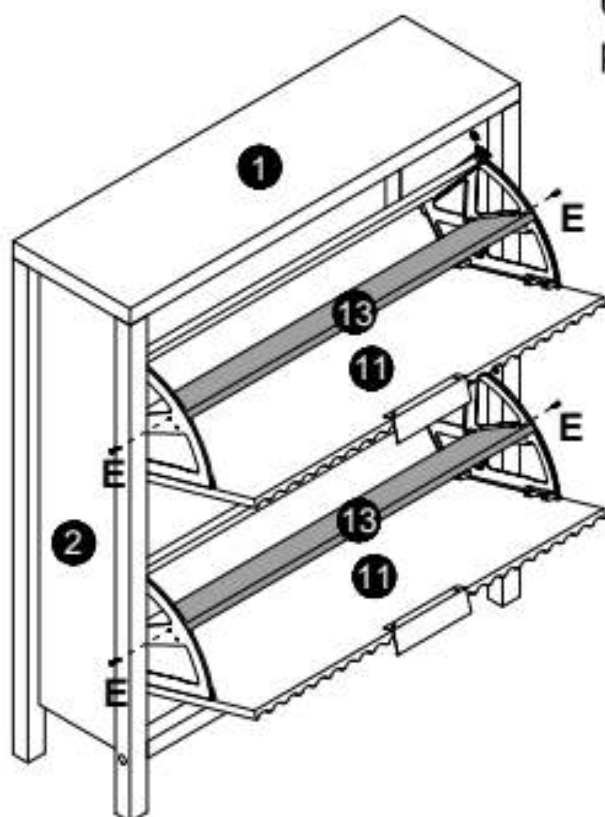

OR

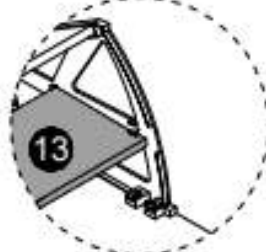


E 3.5x12mm






x4

Step 16

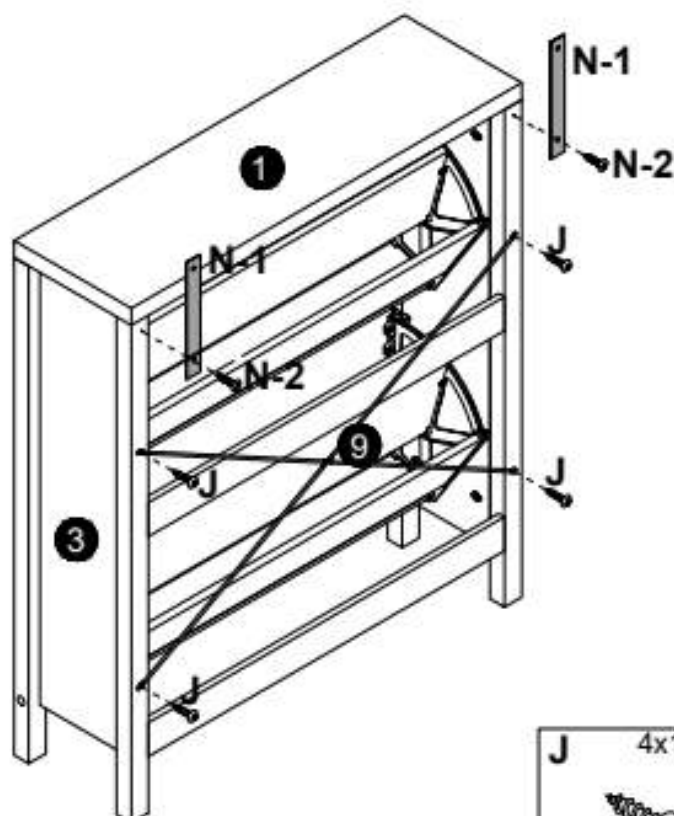

J 4x16mm	N 4x16mm
x4	
	x2

Step 17

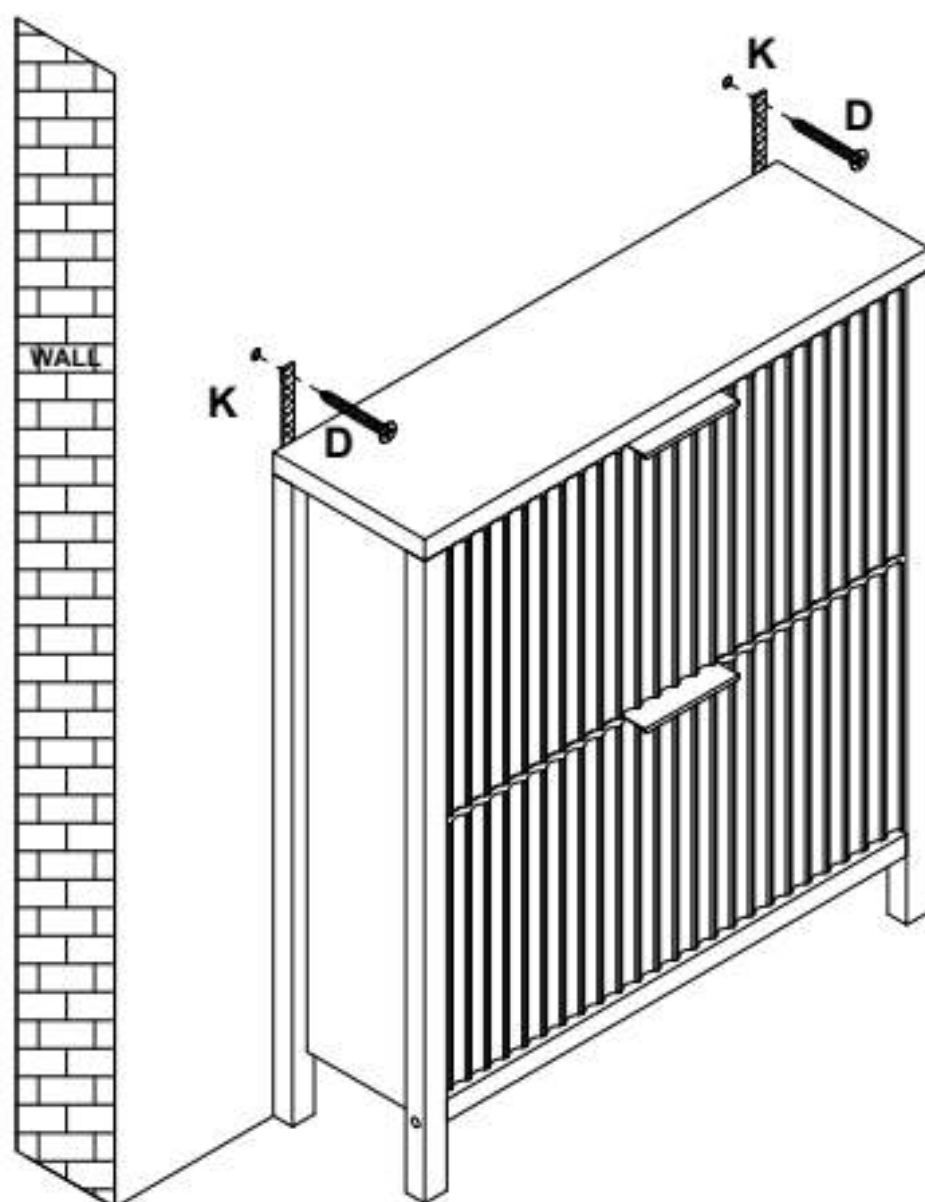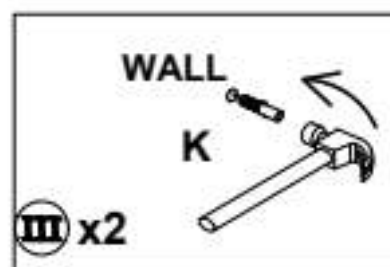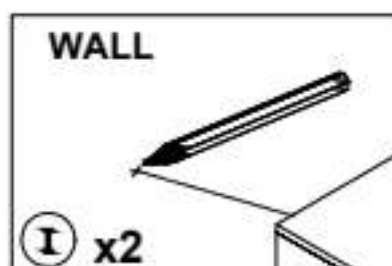

D	4x35mm	K	6x30mm
			
	x2		x2