


Product Installation Instructions

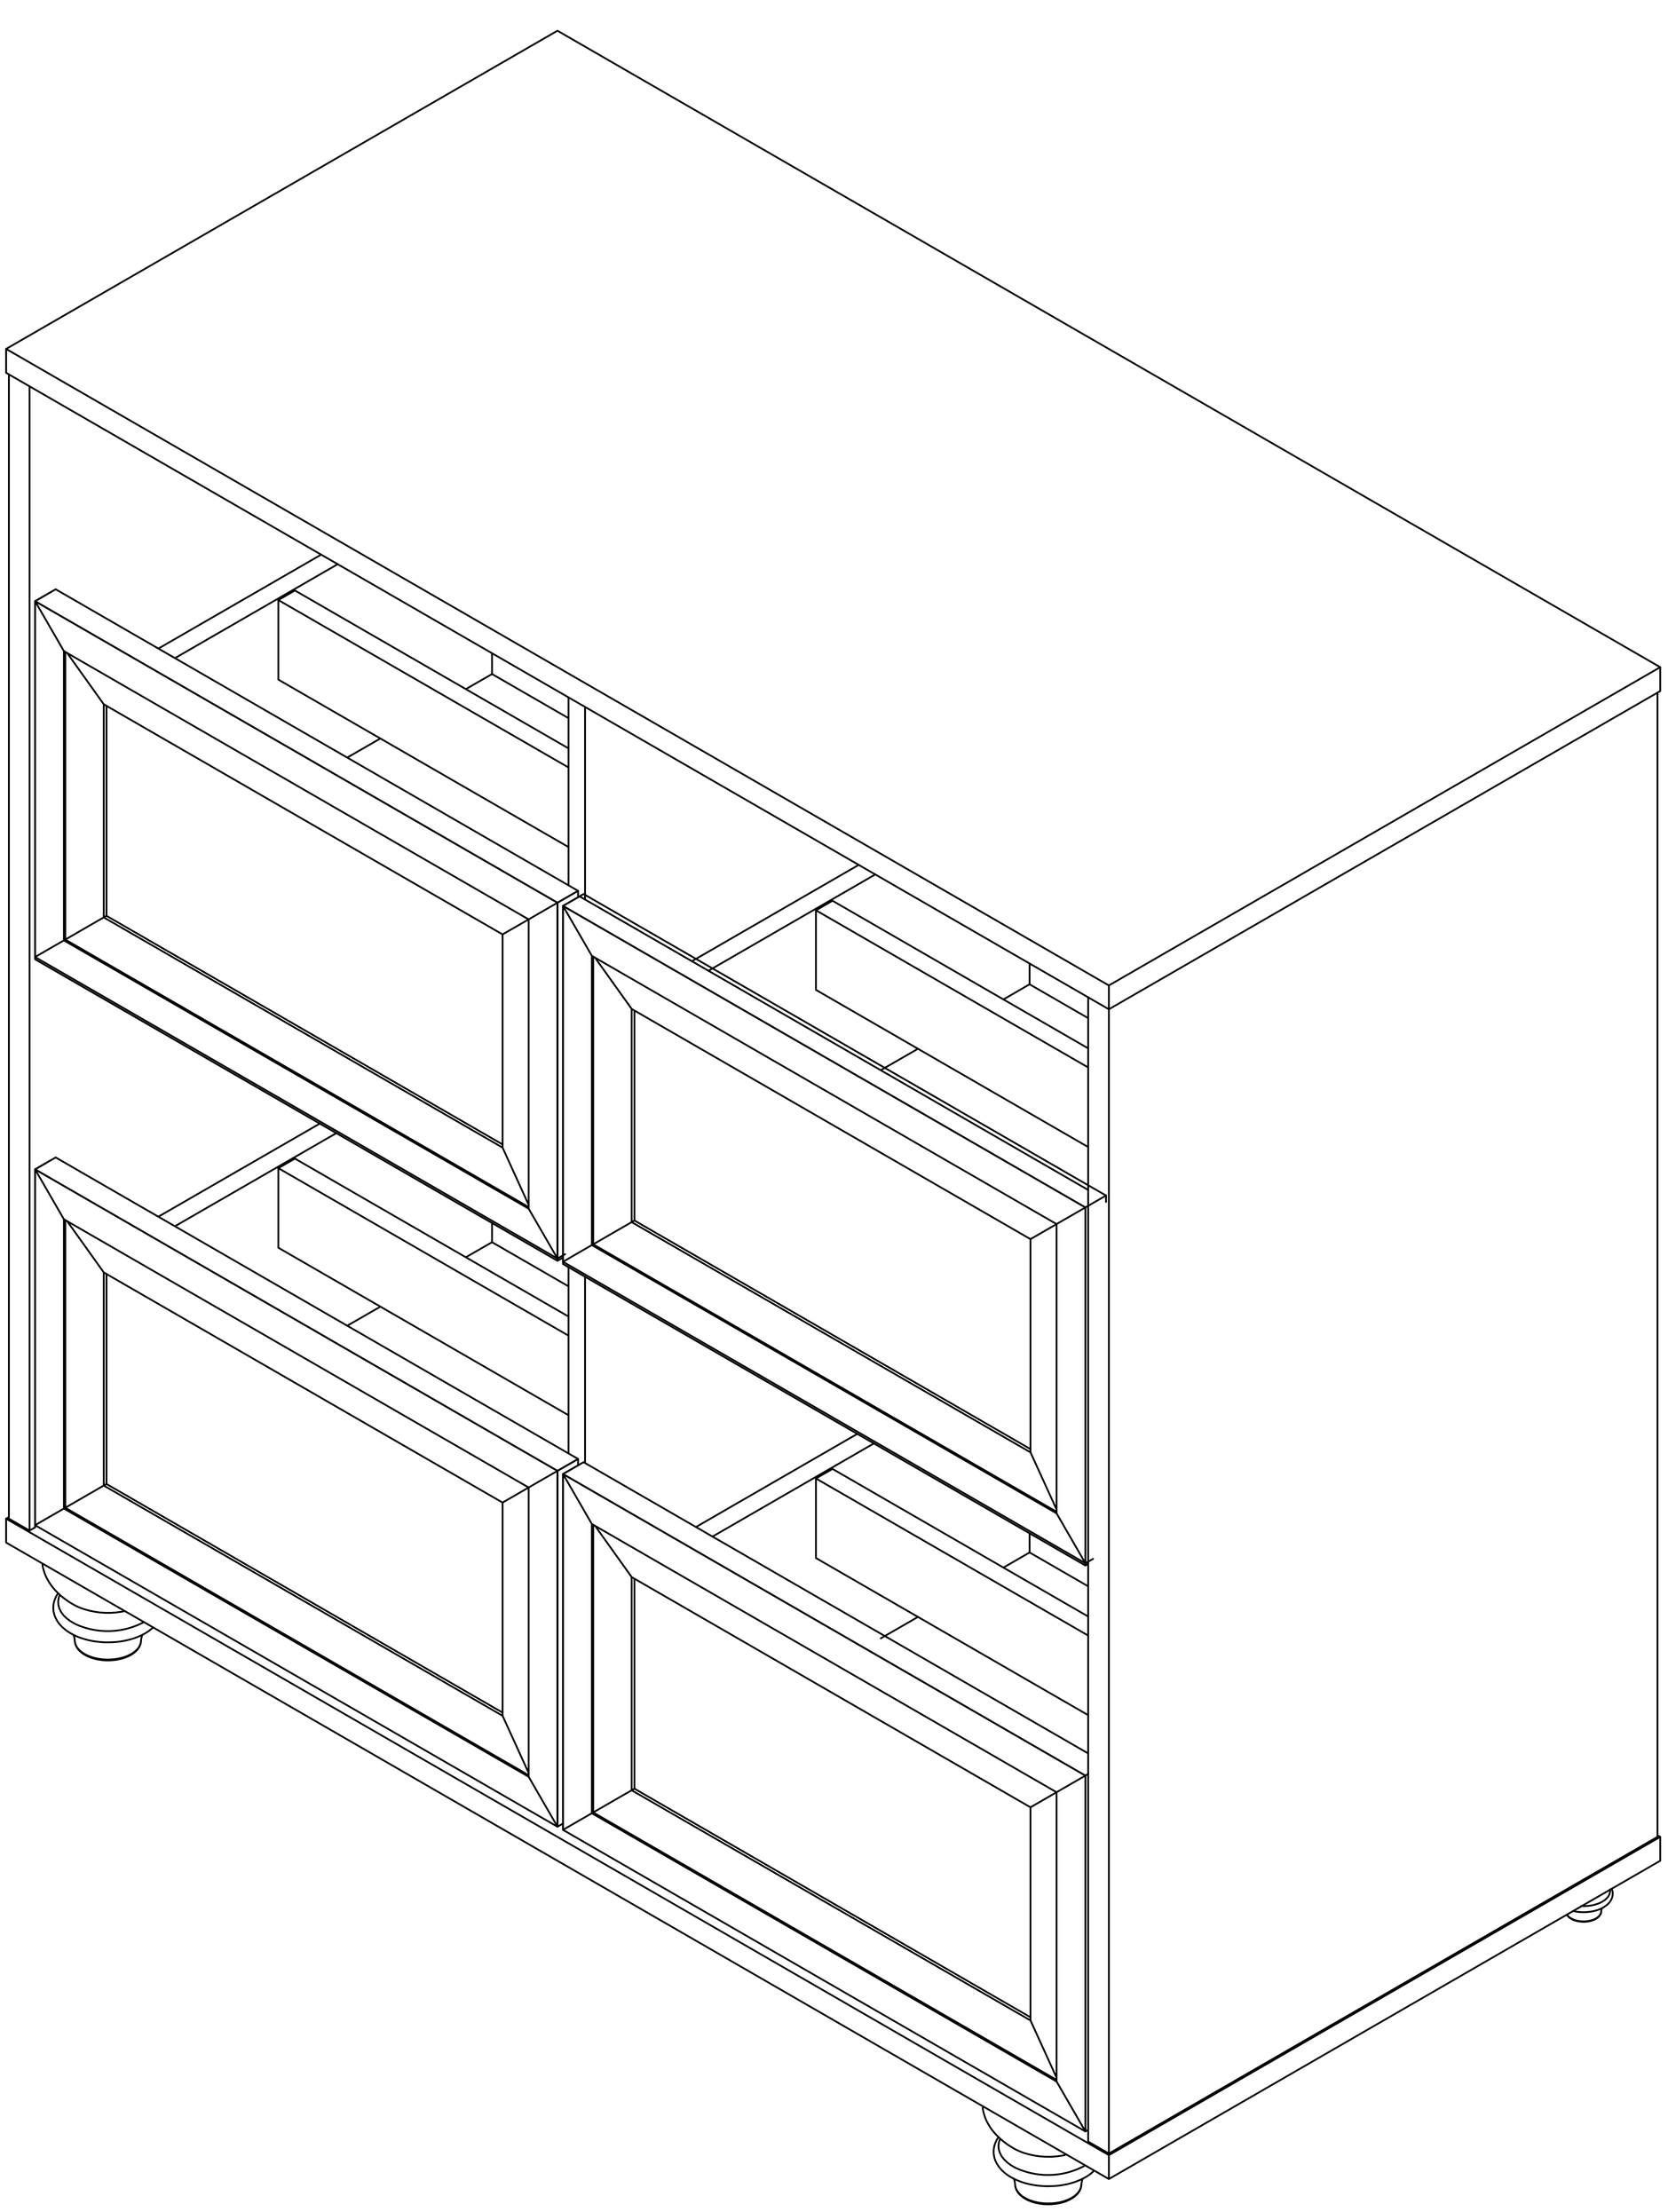


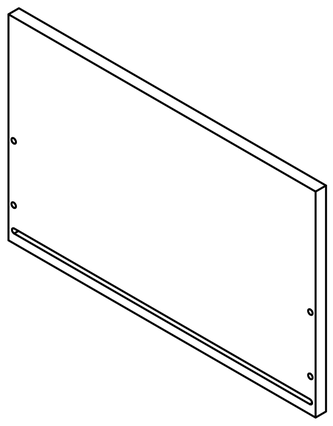


Ax4

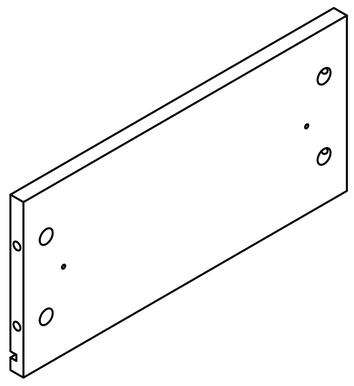


Bx8

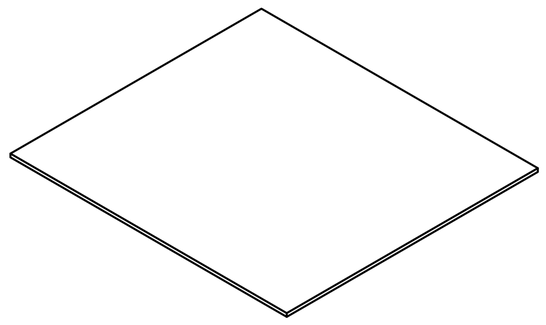


Cx4

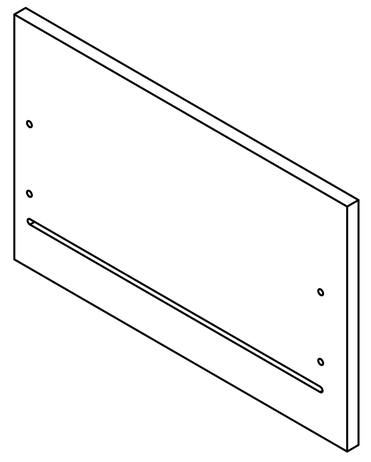


Dx2

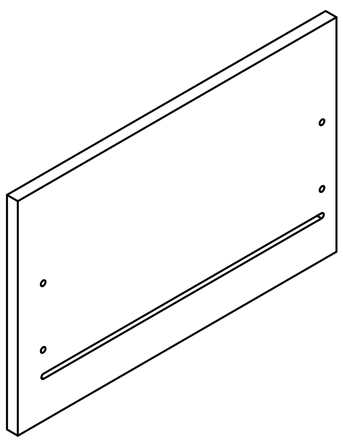


Ex2

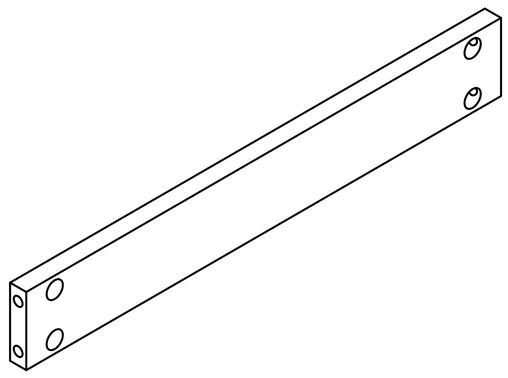


Fx4

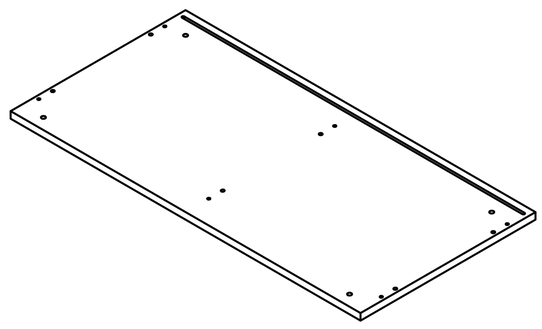


Gx1

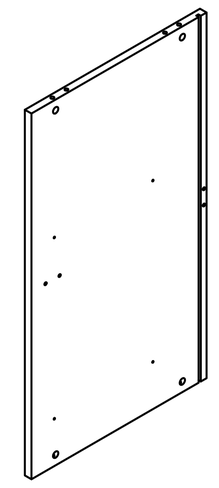


Hx1

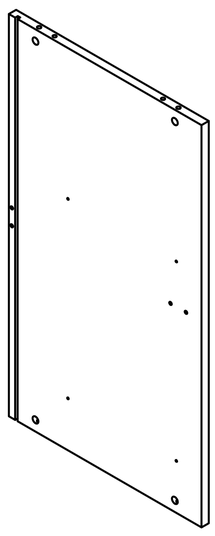


Ix1

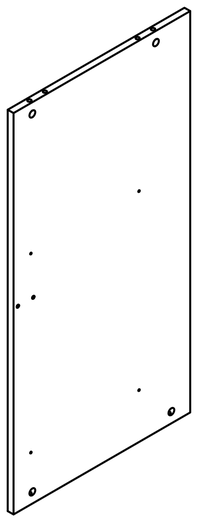


Jx1

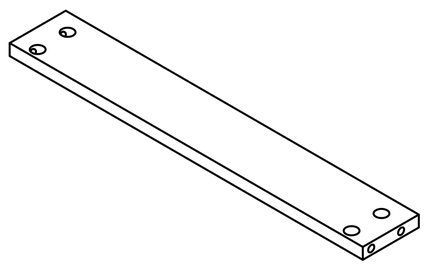


Kx1

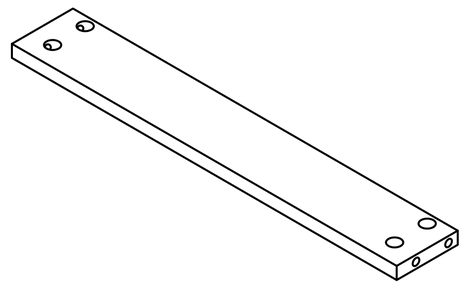


Lx1

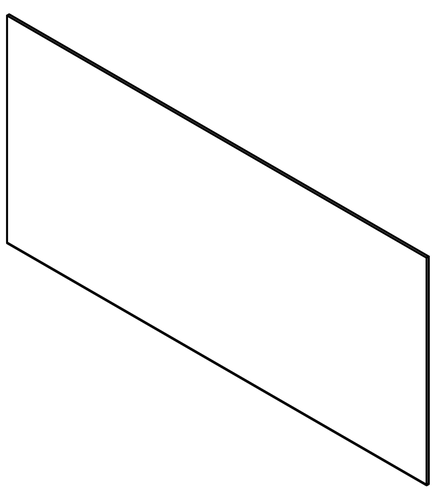

Mx2

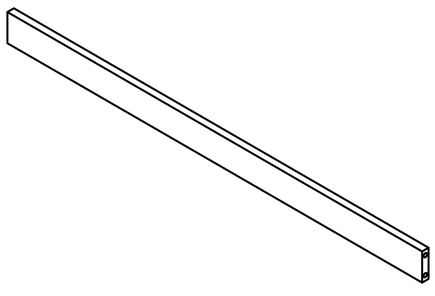








Nx1

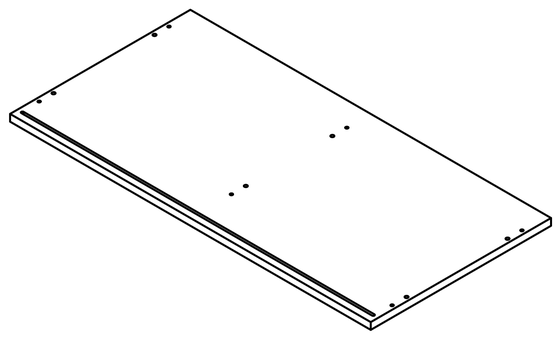


Ox1

1

Accessories list

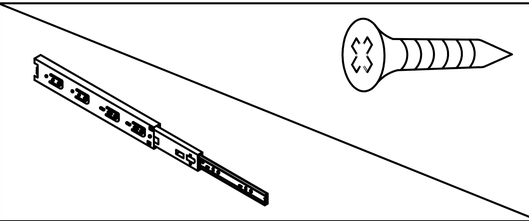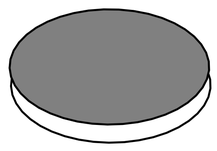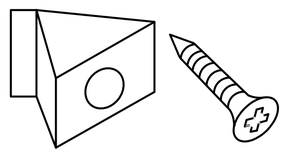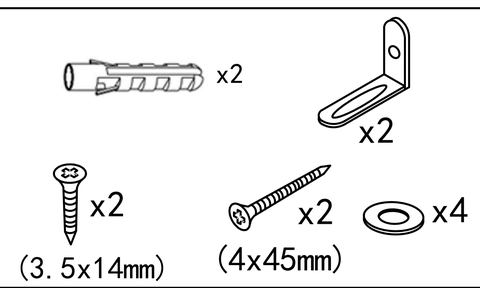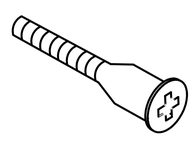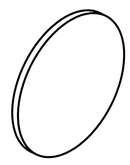
1		Two in one screw (6x28mm)	68pcs +5pcs
2		Two in one nut (10x12mm)	68pcs +5pcs
3		Wood chipping (6x30mm)	12pcs +4pcs
4		Guide & Screw(29cm) (3x12mm)	40pcs +8pcs 8pcs
5		Non-slip pads (φ20x2mm)	4pcs +1pcs
6		Fixing clip & screw (3x16mm)	8pcs +1pcs
7		Anti Fall Hardware	1pcs
8		Screw (5x40mm)	4pcs +1pcs
9		round decorative stickers	4pcs +2pcs
P		wooden foot	4pcs




Double-head screwdriver, use as required

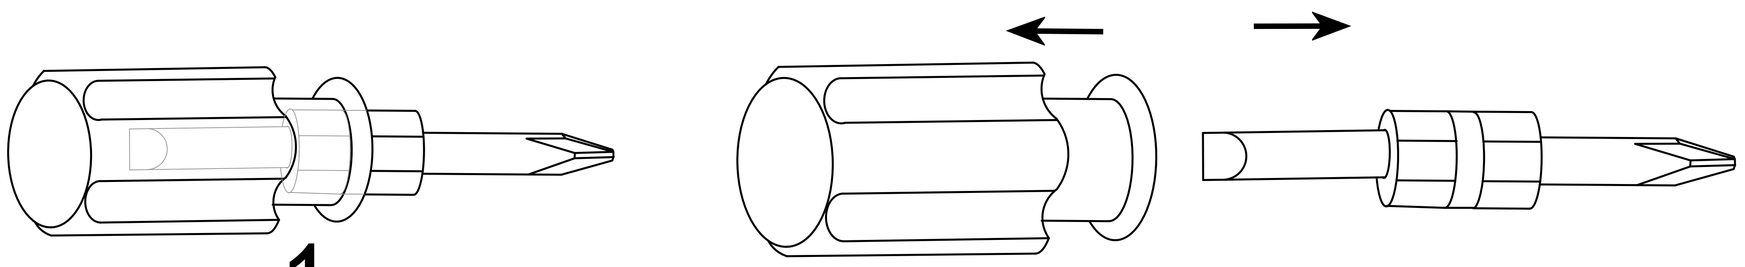



1pcs

Product structure decomposition

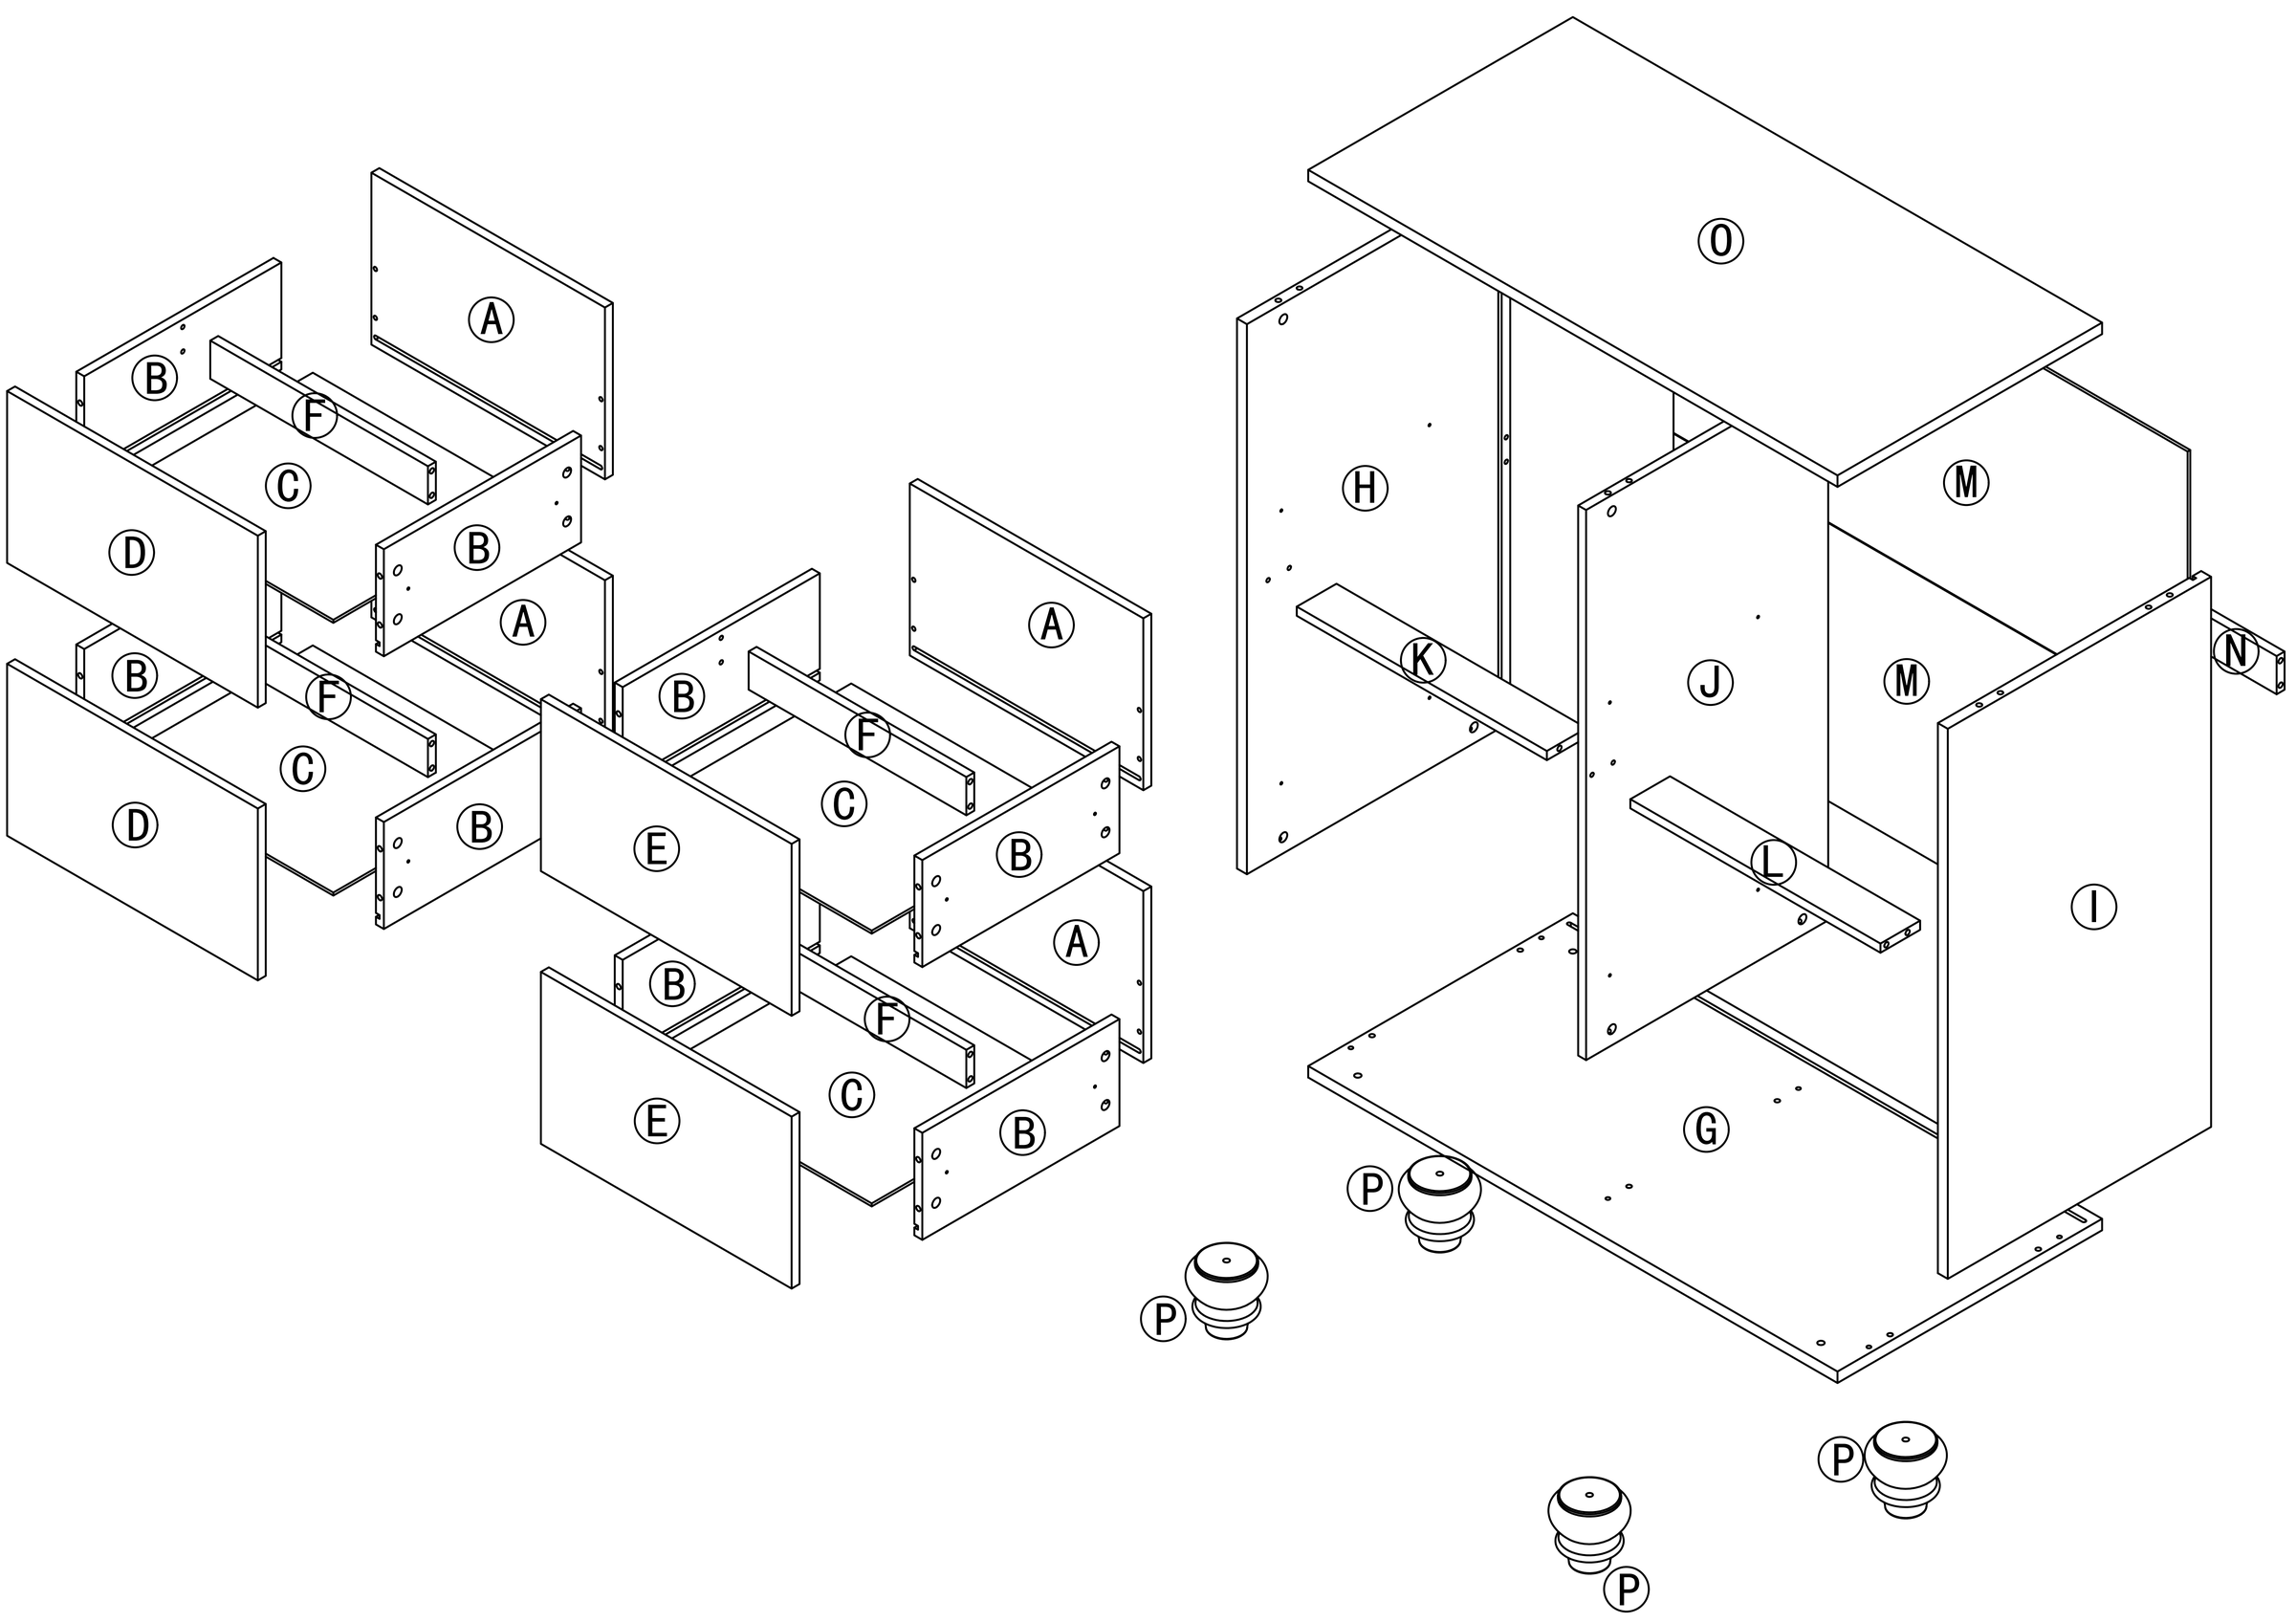

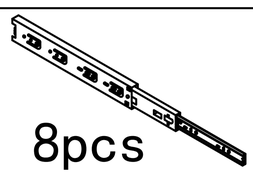
1		48pcs	2		48pcs	4	 8pcs	 16pcs

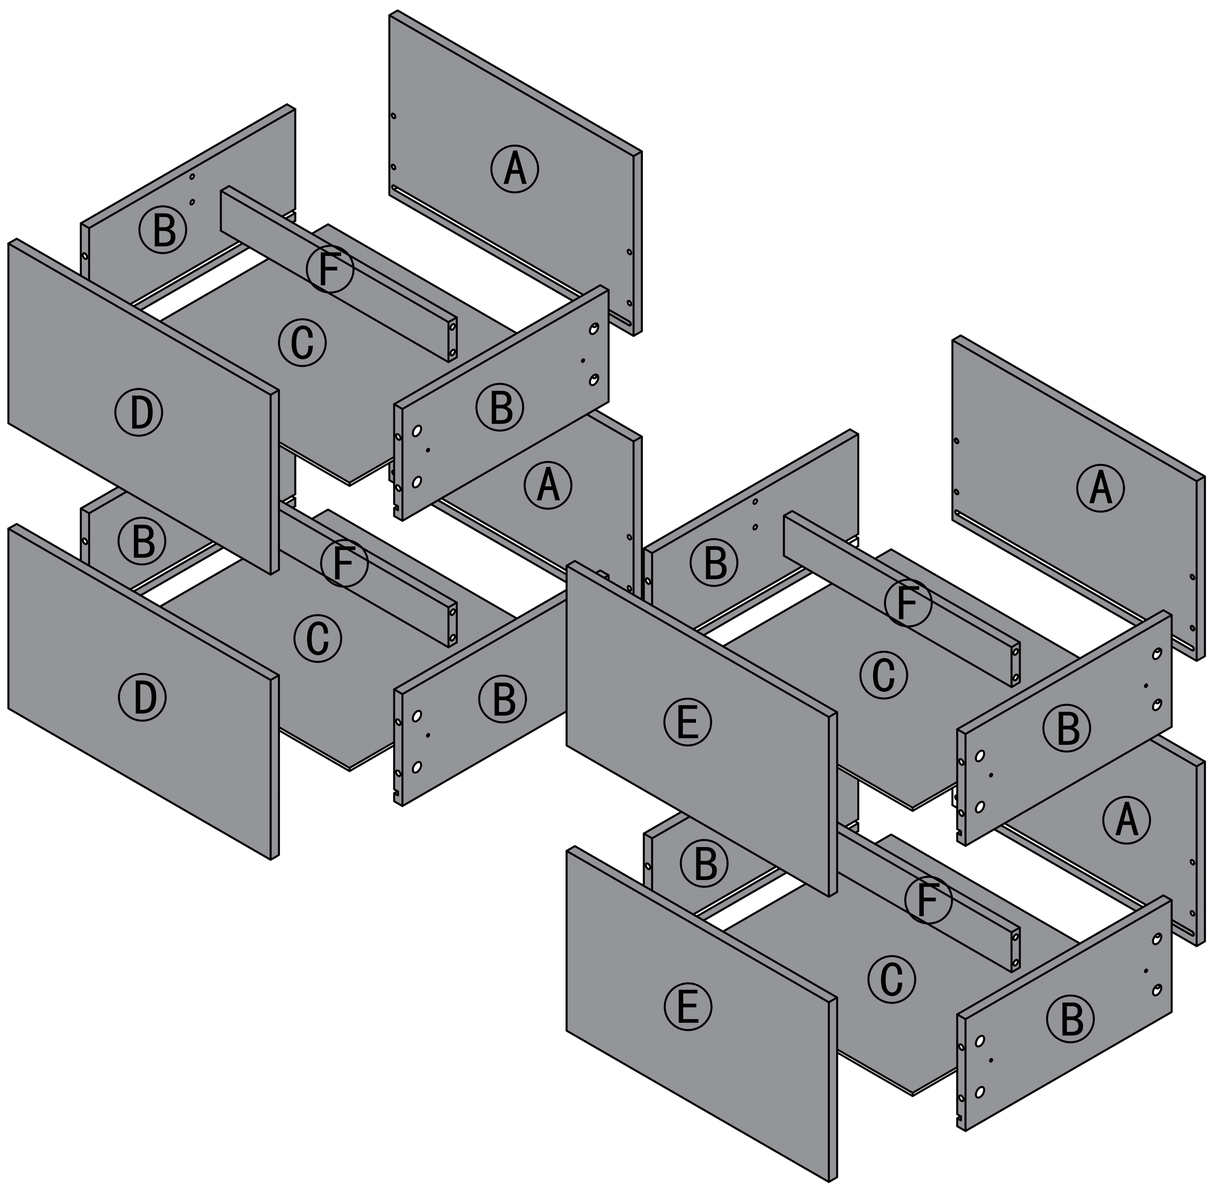

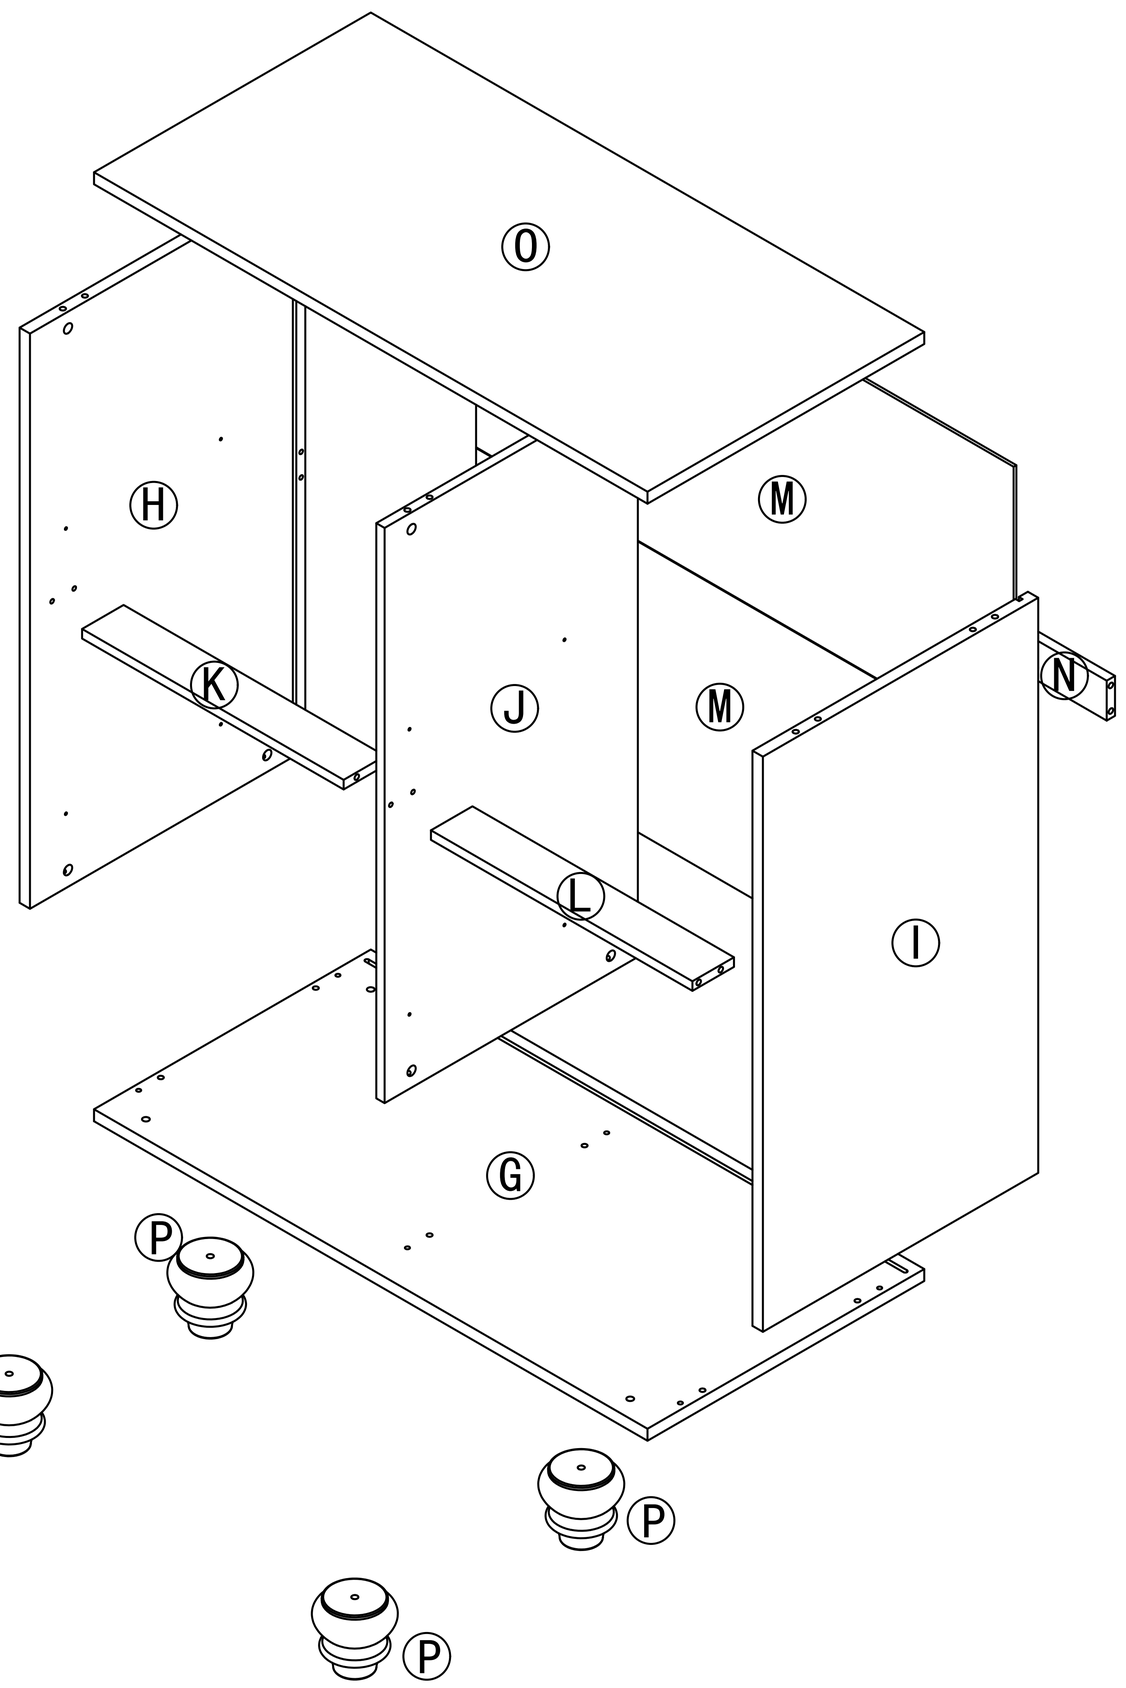


Use parts ① and ②


Step1

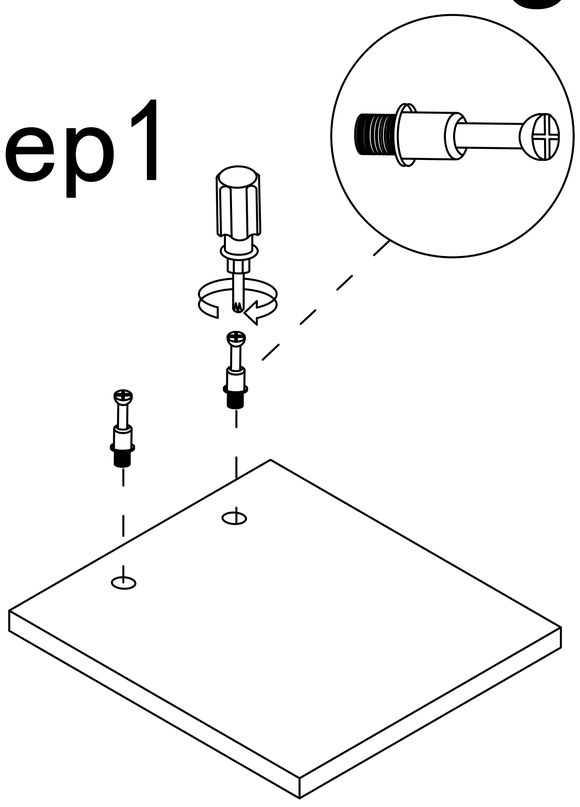


Step2

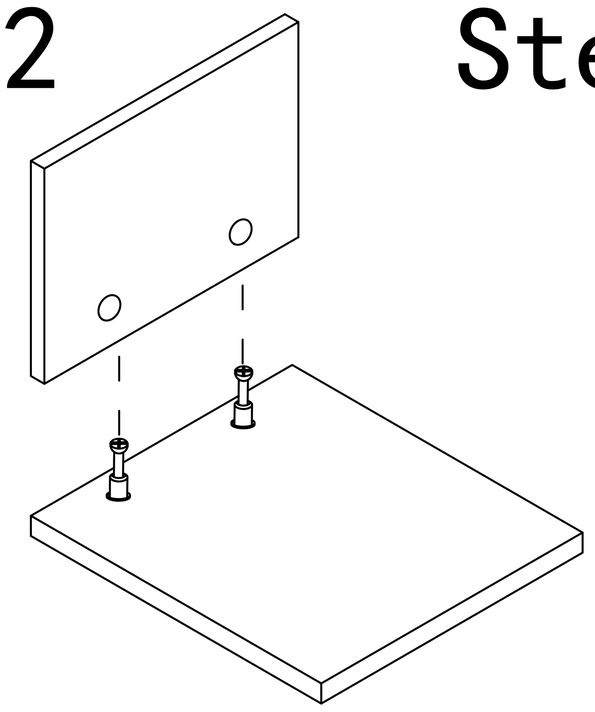


Step3

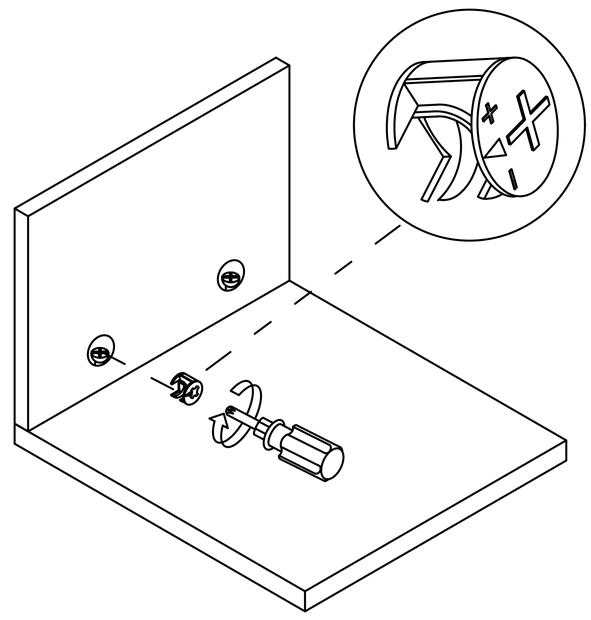

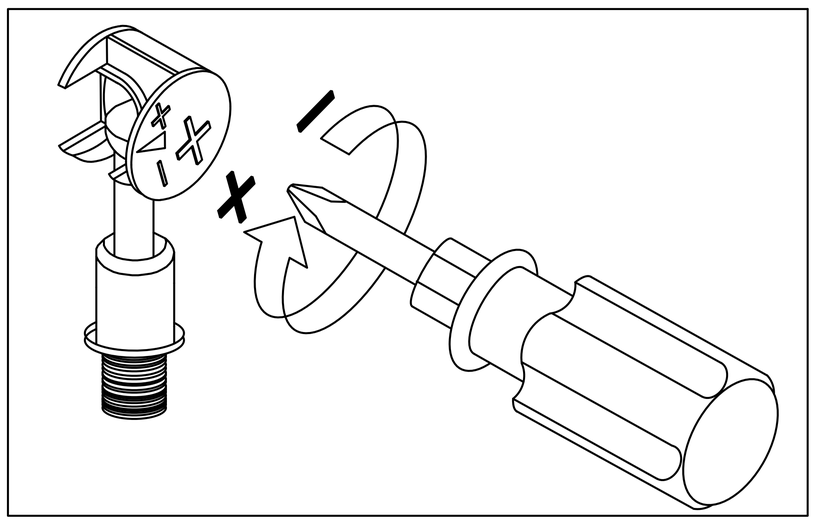



Use a screwdriver to lock in the direction of the "+" sign

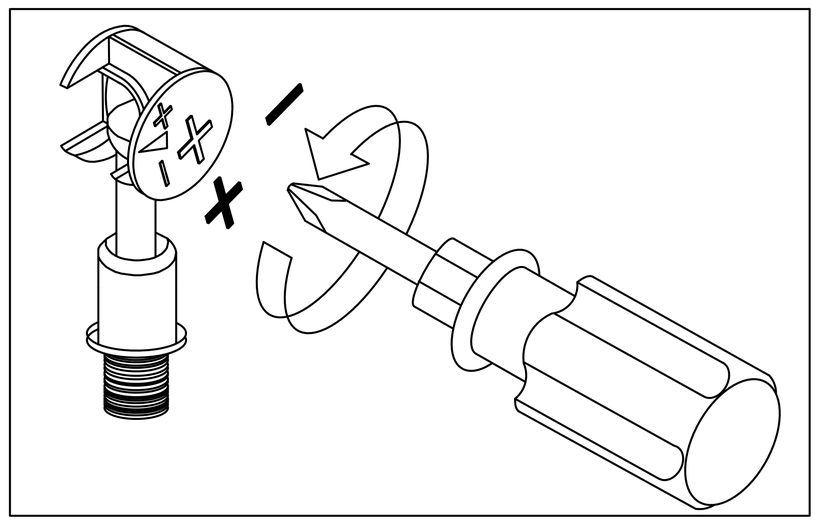

Disassemble along the direction of "-" sign


Step 1

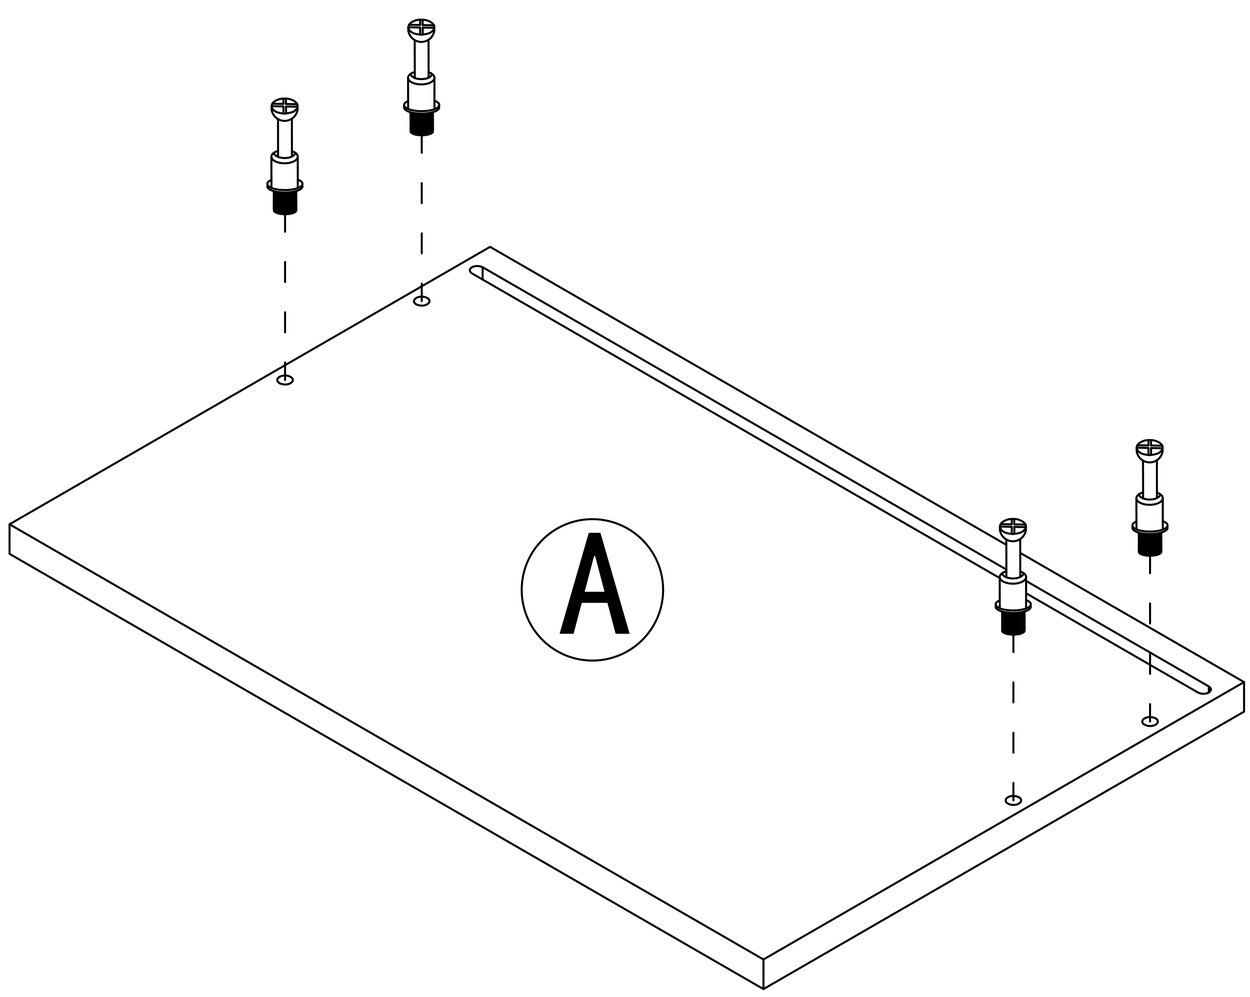

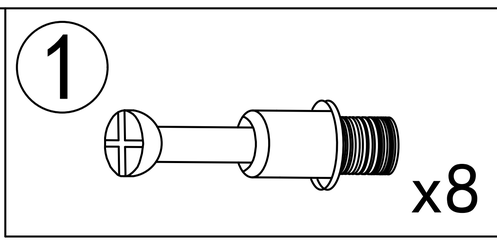

x2

Step 2

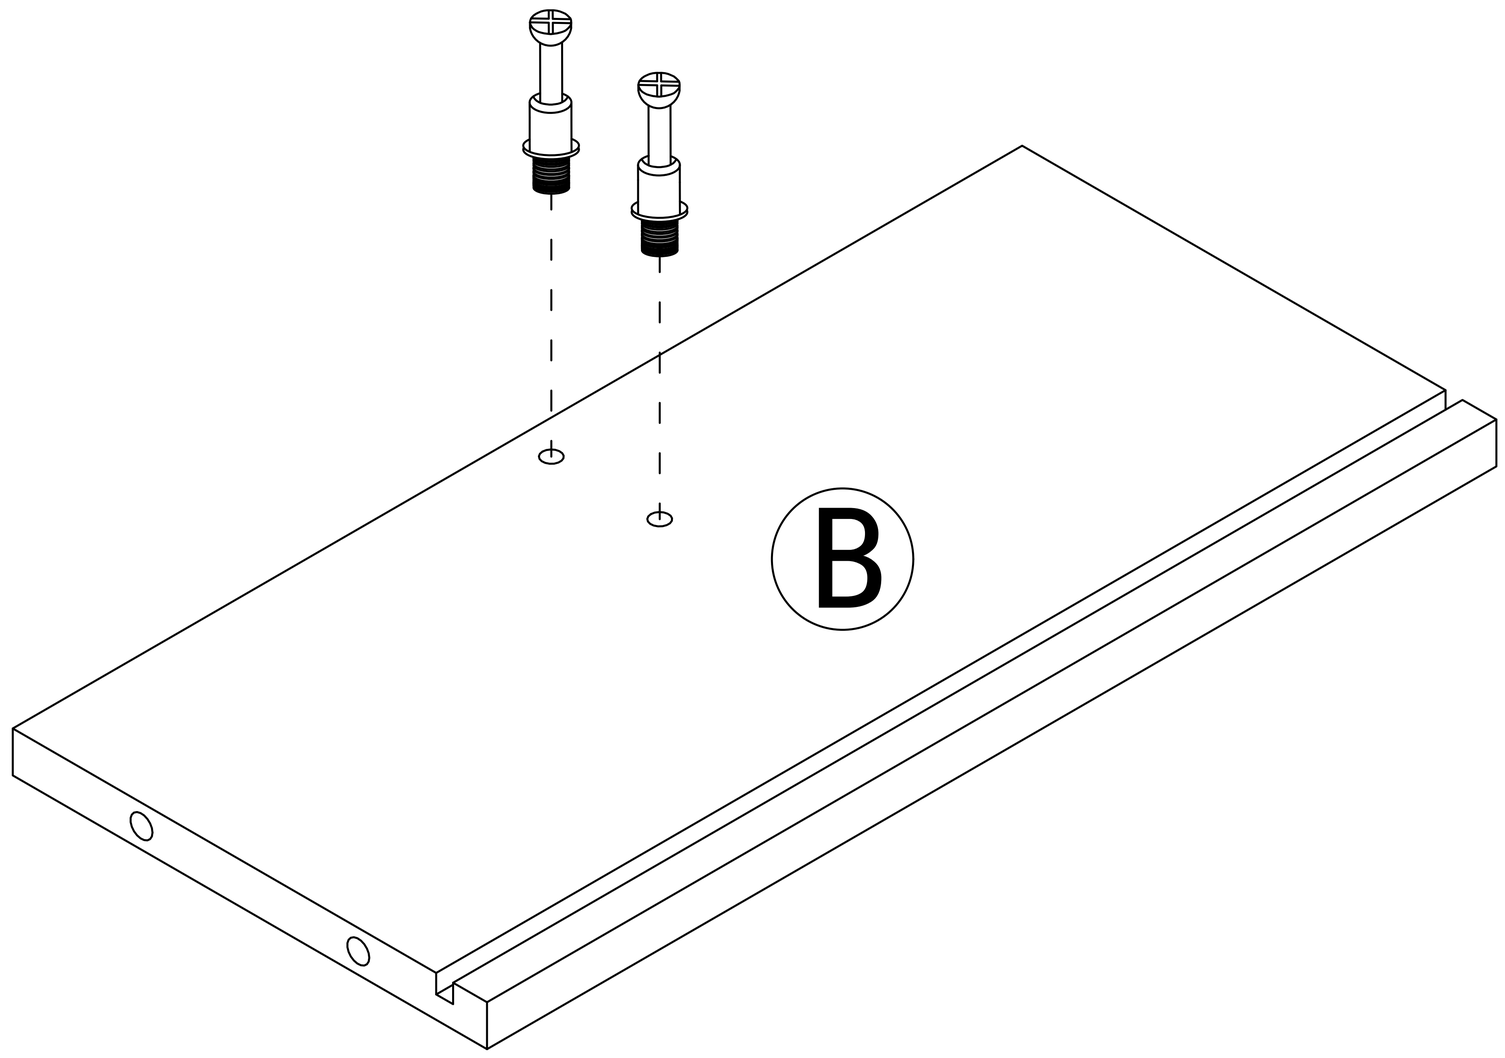

1 x8

x4


Step 3

2 x8

x2


6

Step 4

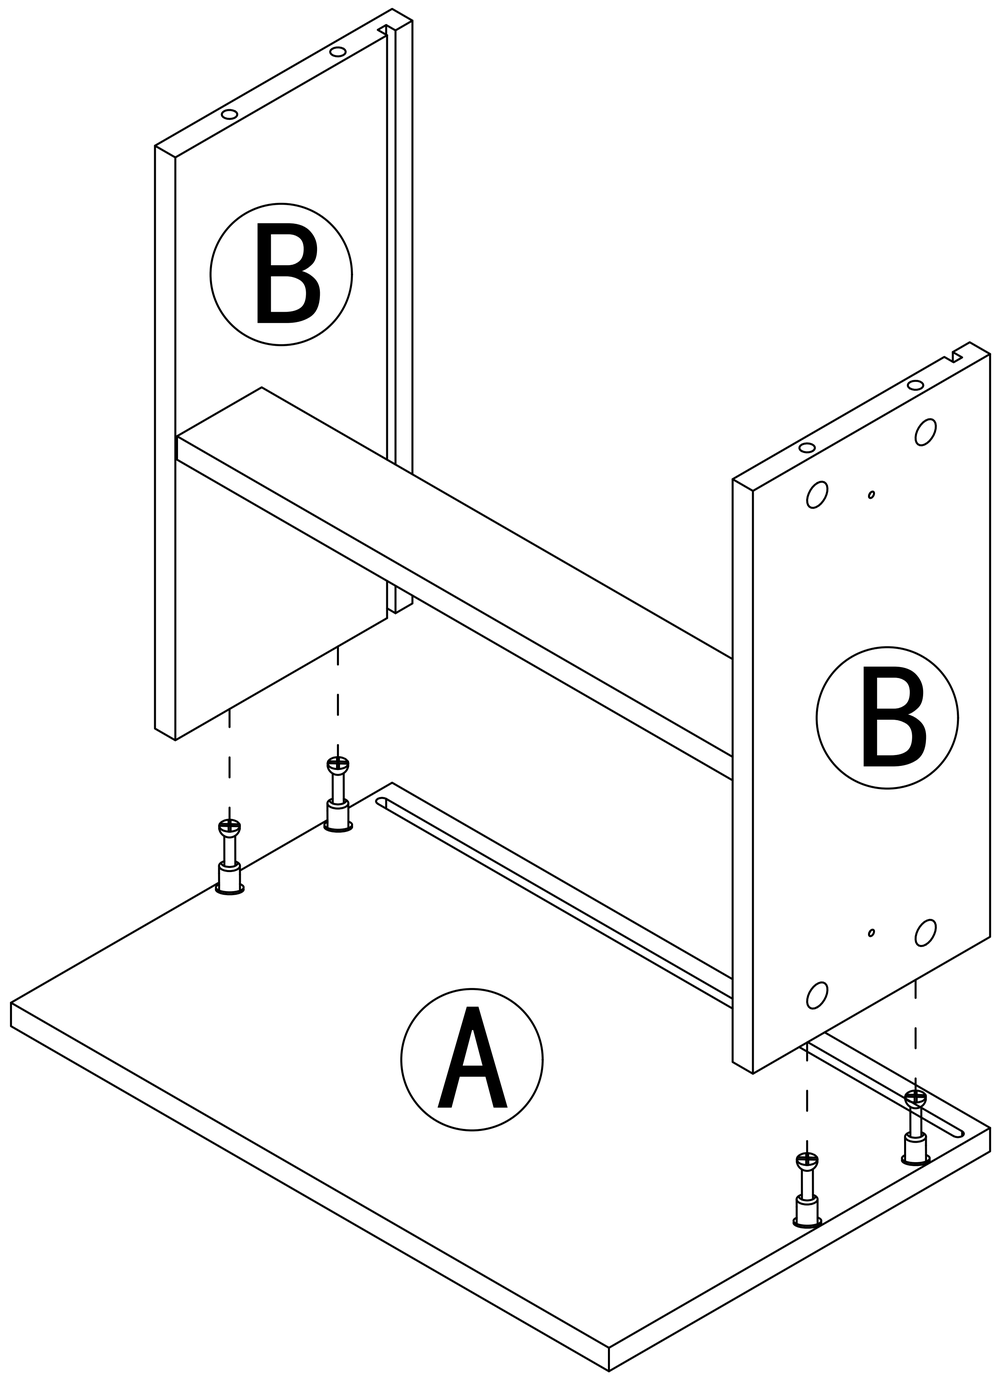


x2


Step 5

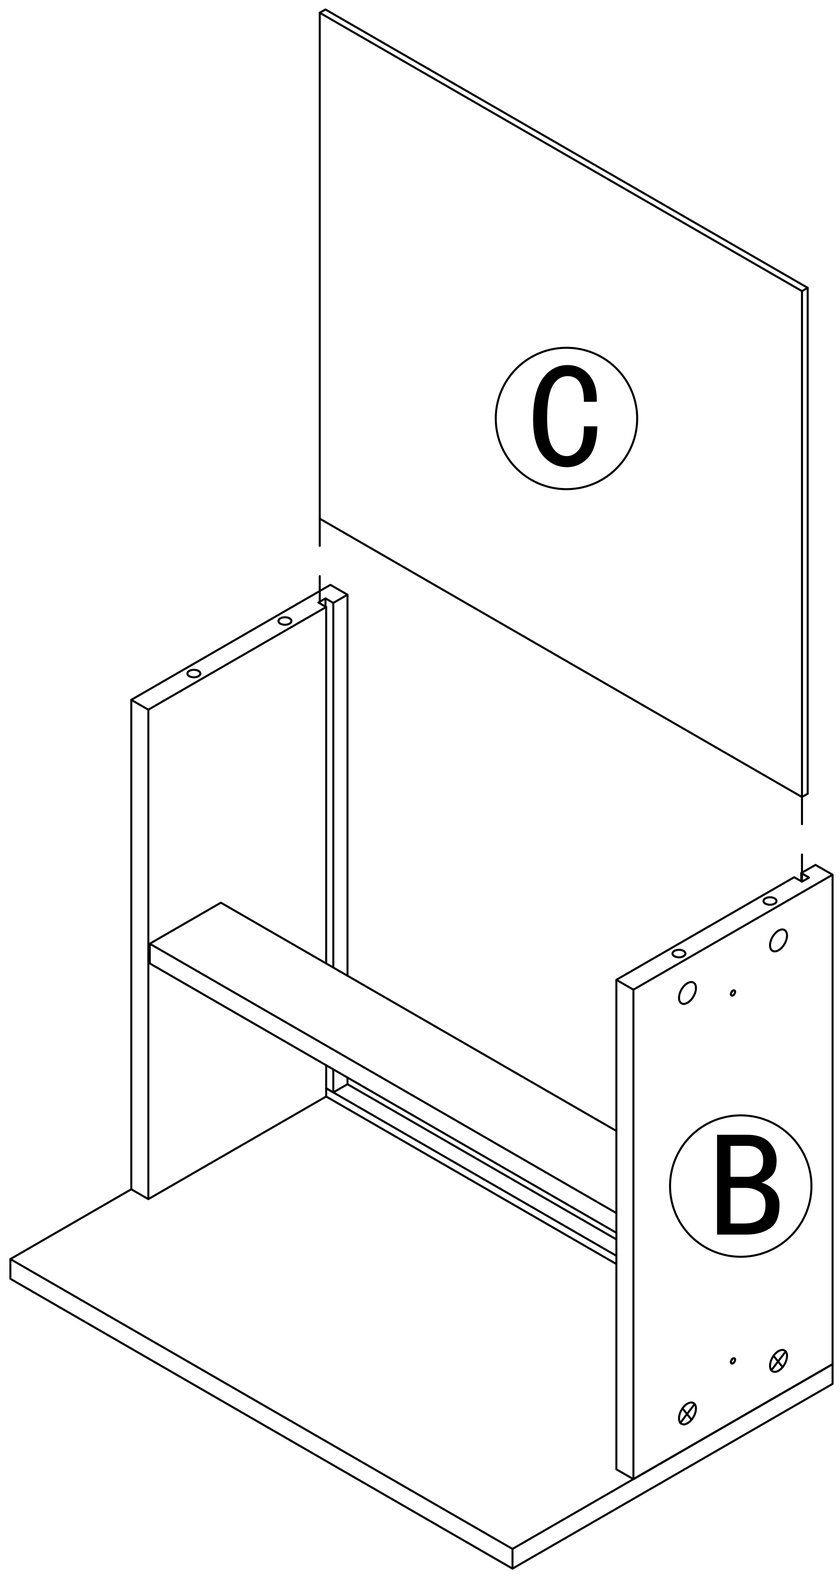


x2


Step 6

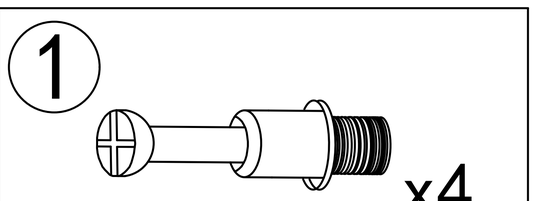

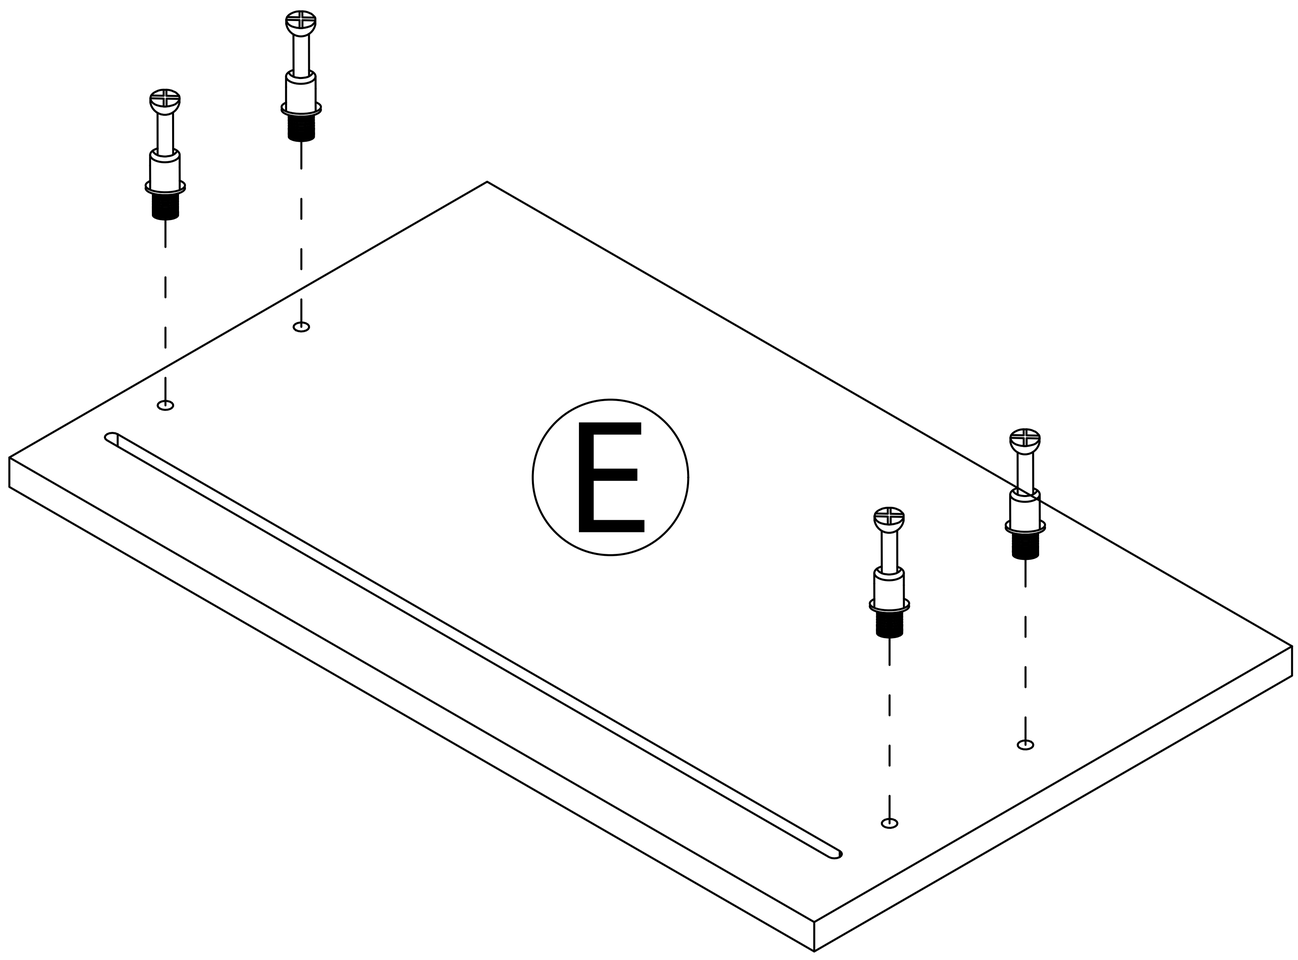


Step 7

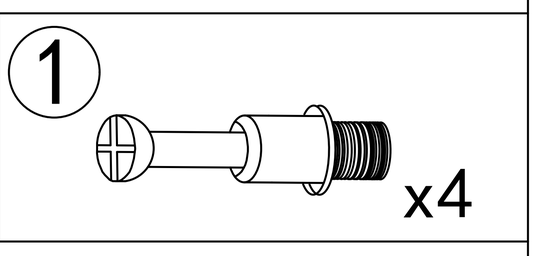

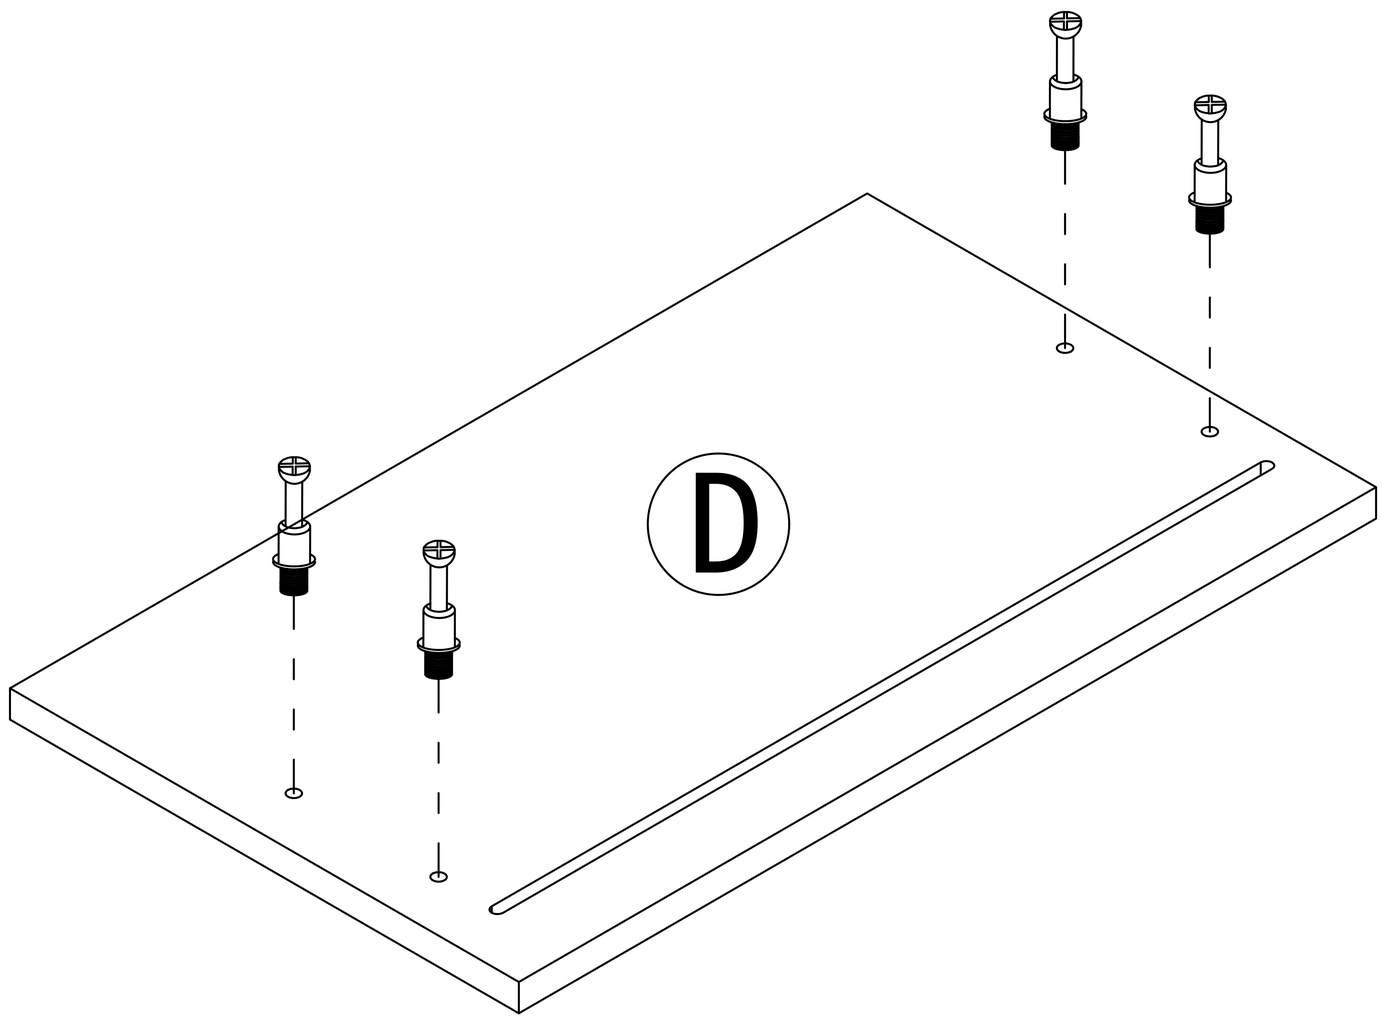

Step 8

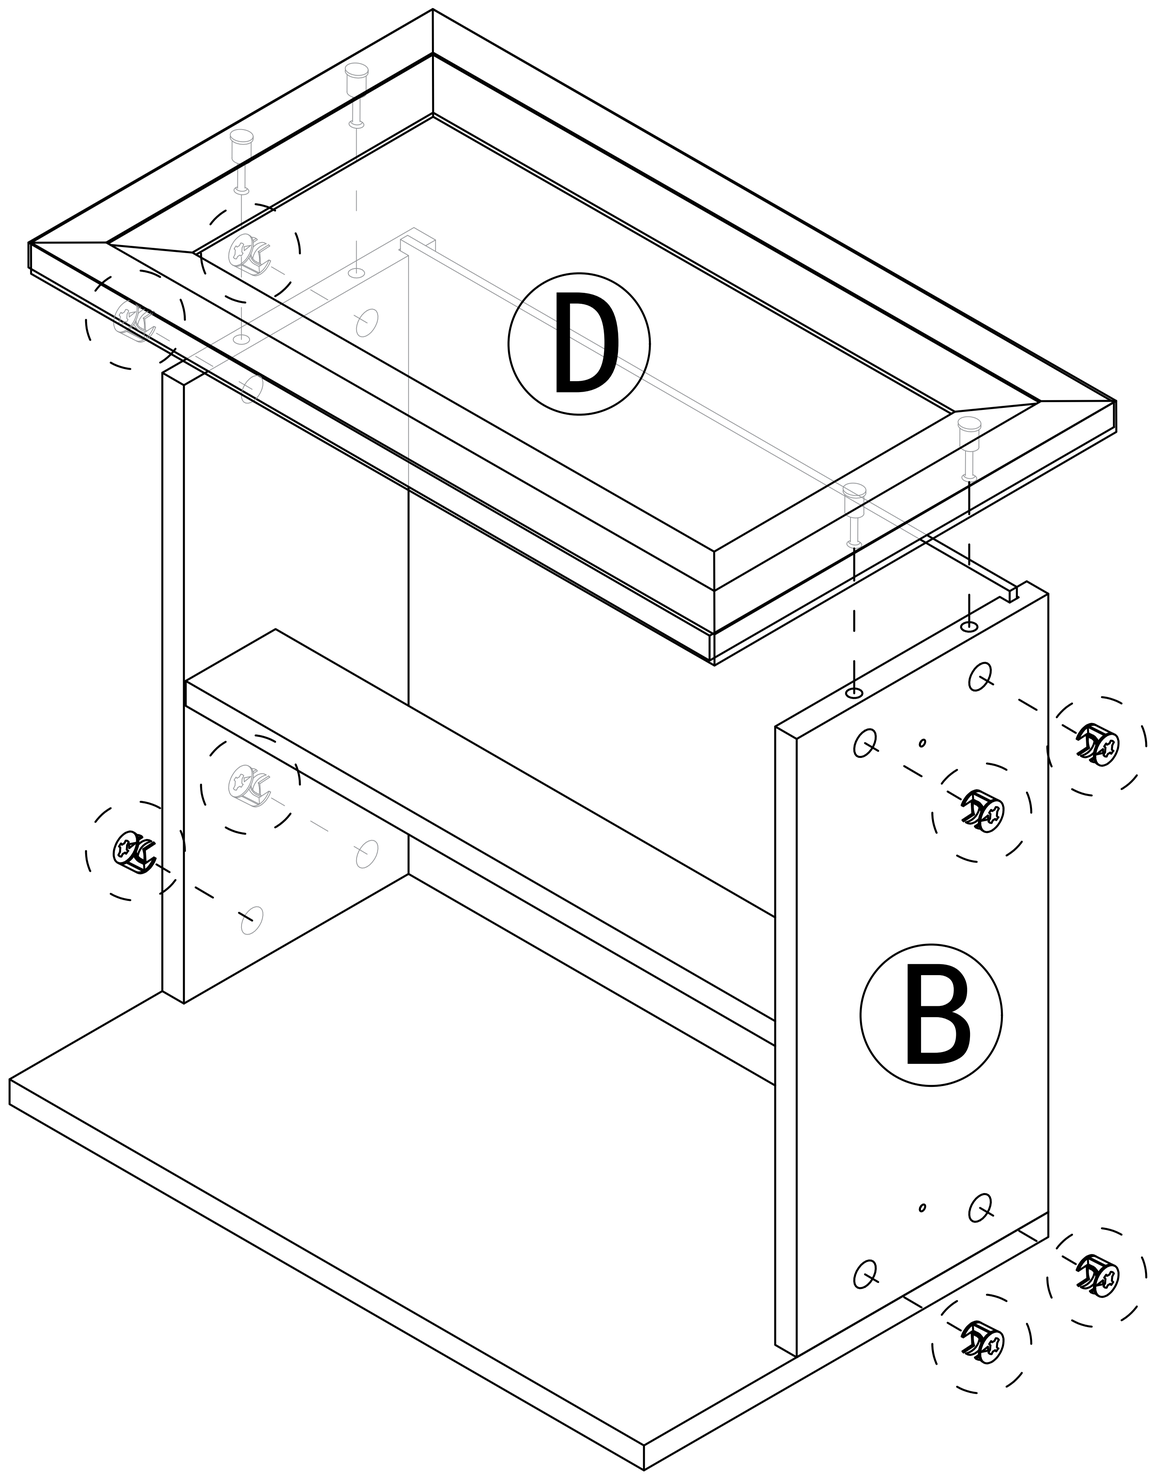


2



x8

Step 9

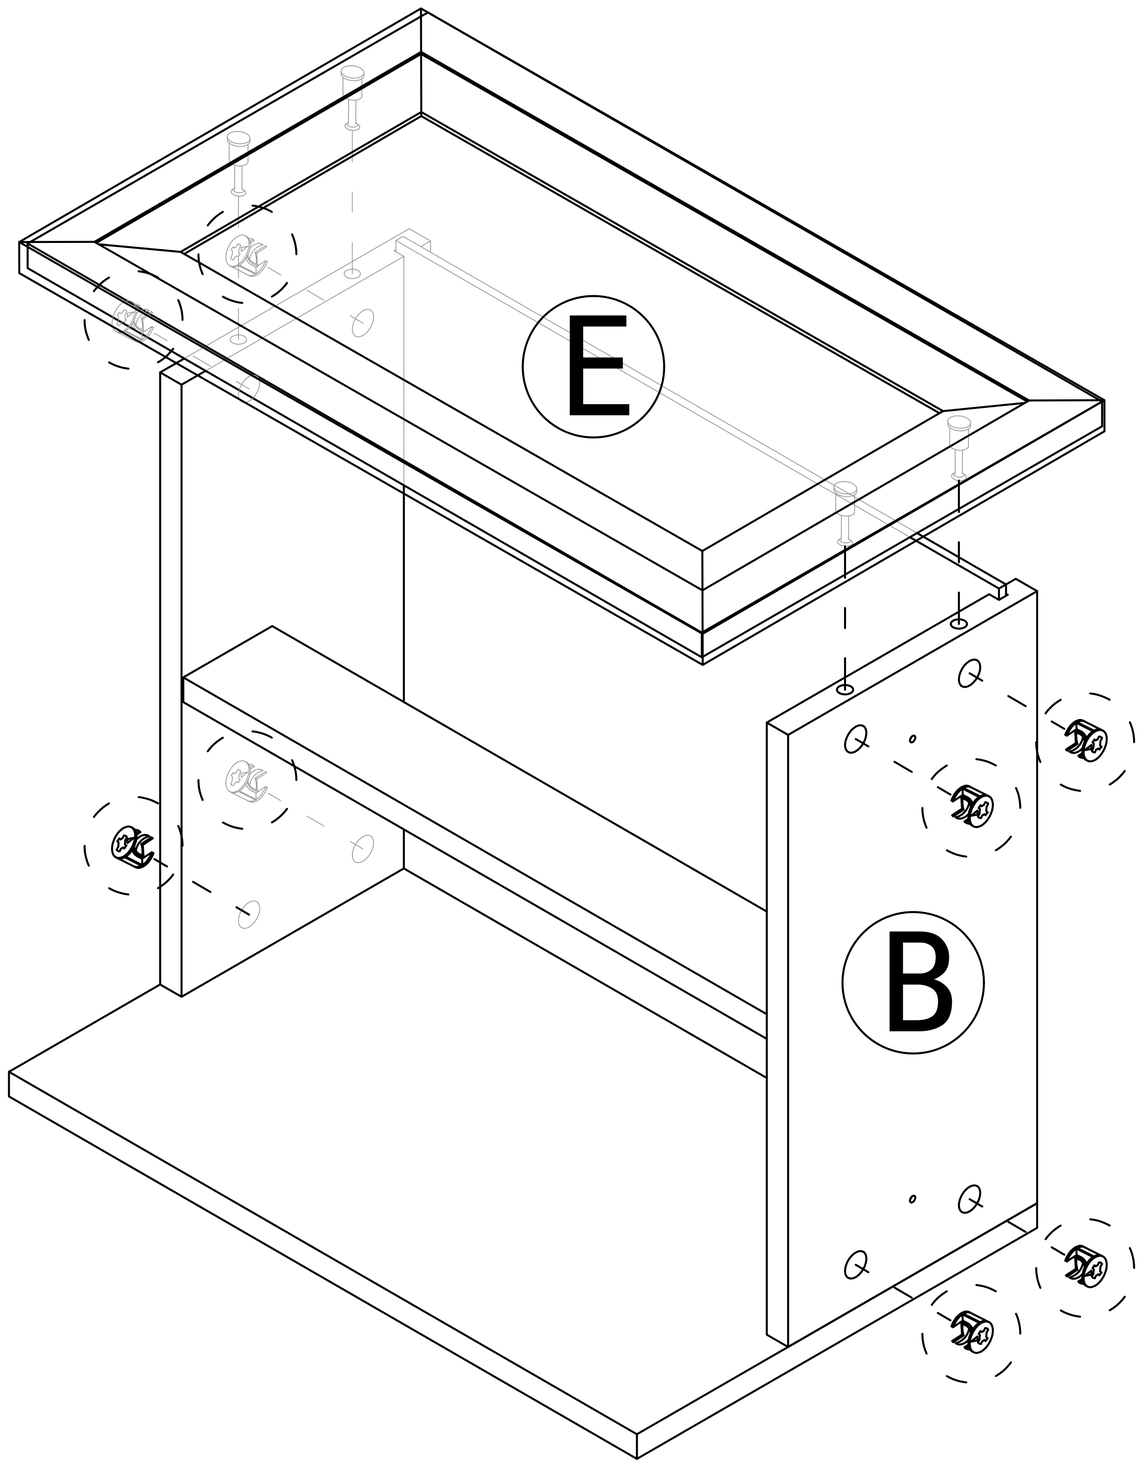


2




x8

Step 10

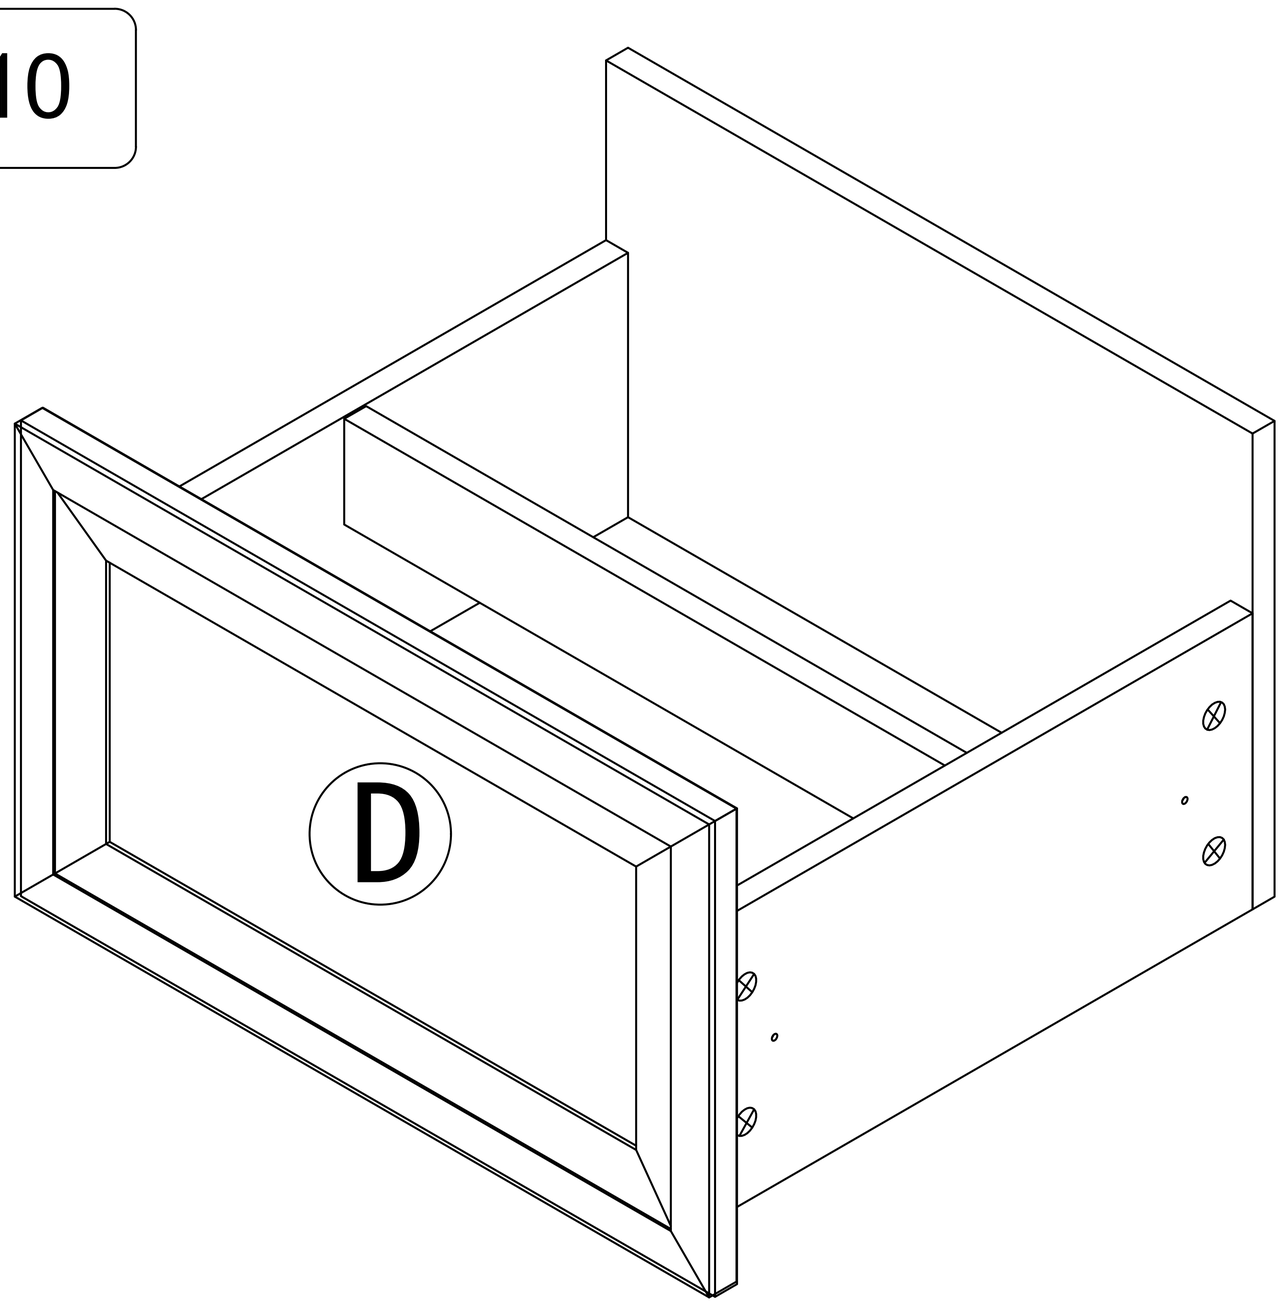


x2

Repeat the above installation steps.

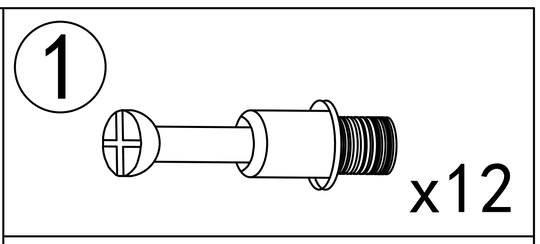


Step 11

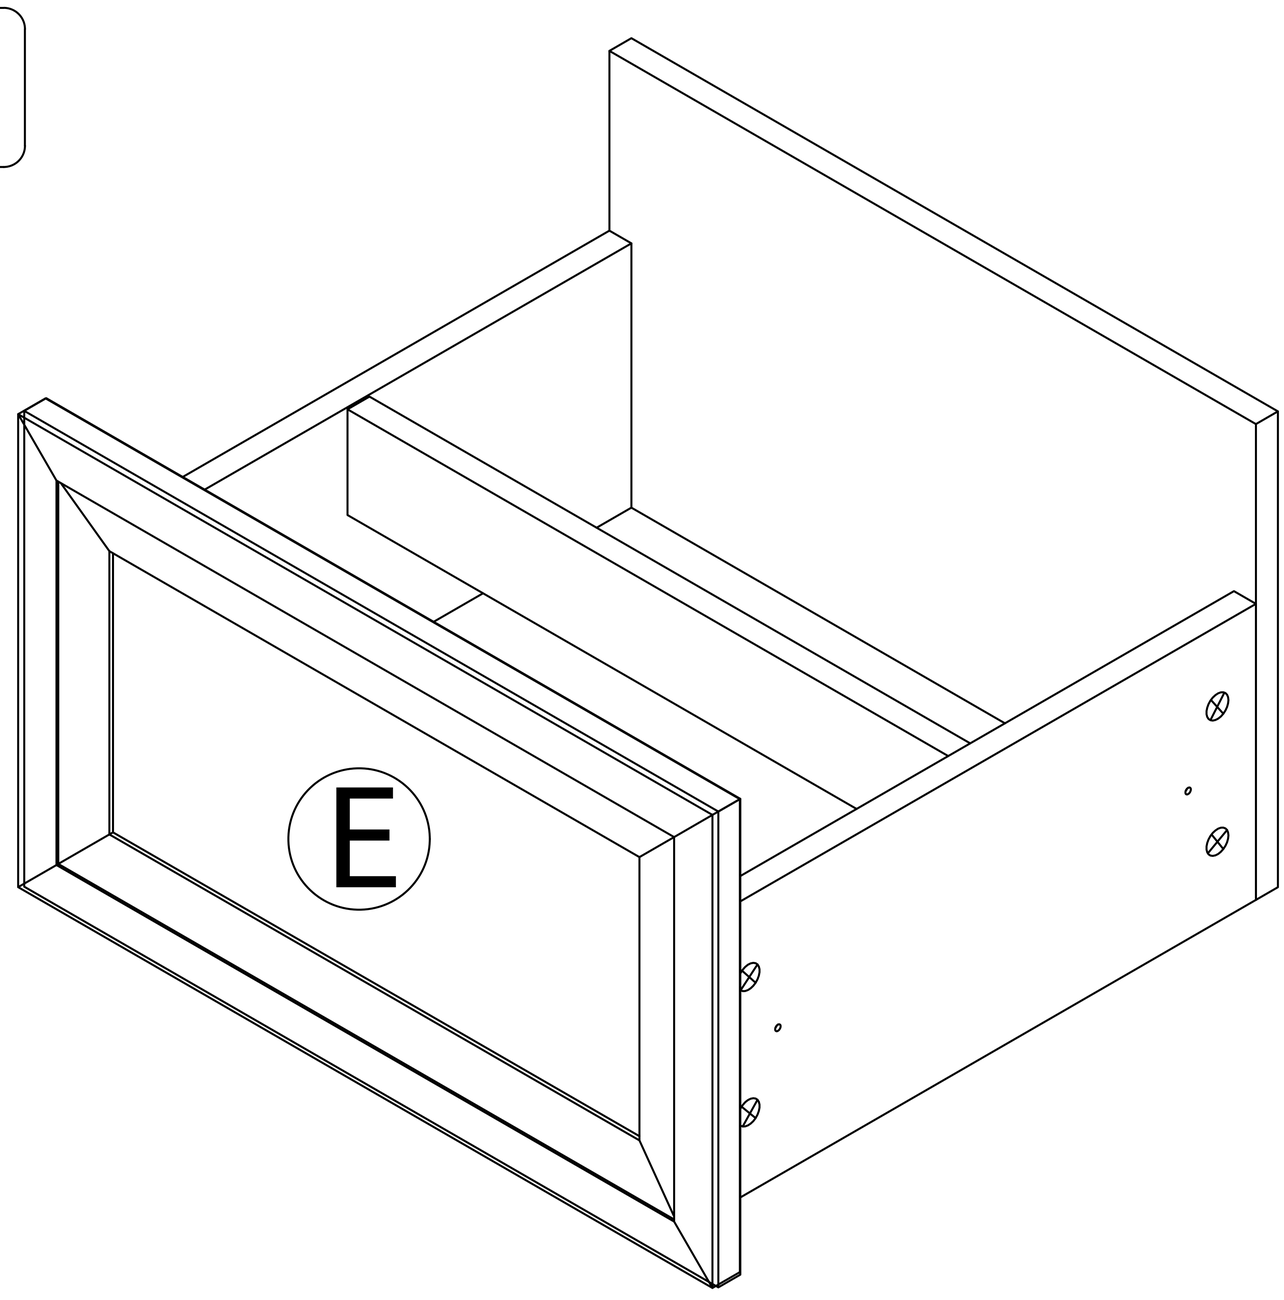


x2

Repeat the above installation steps.

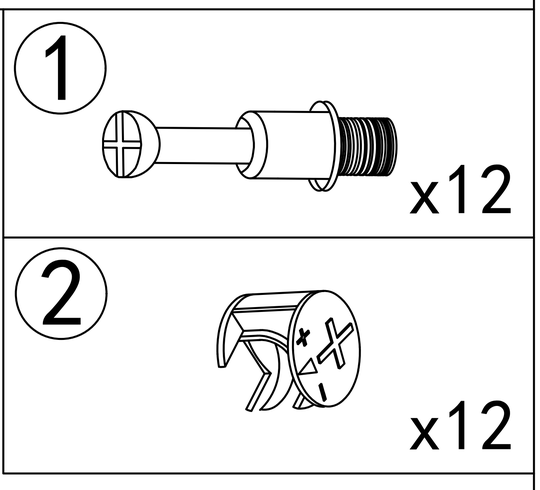


Drawer rail breakdown diagram

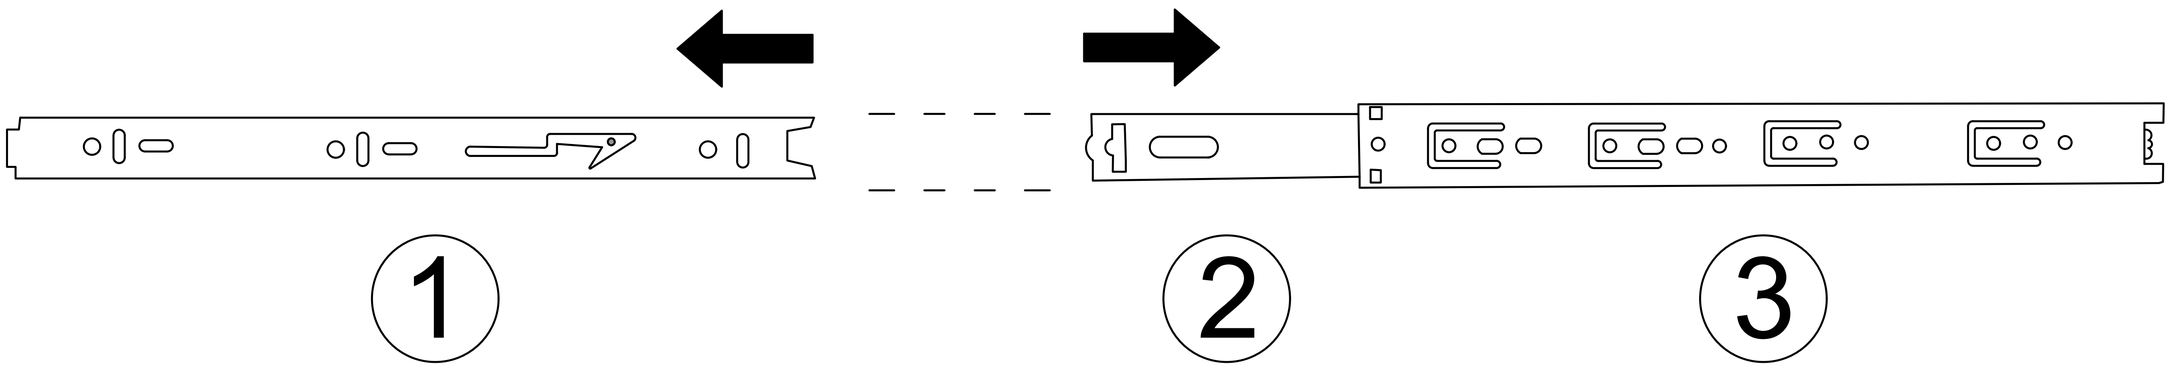


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

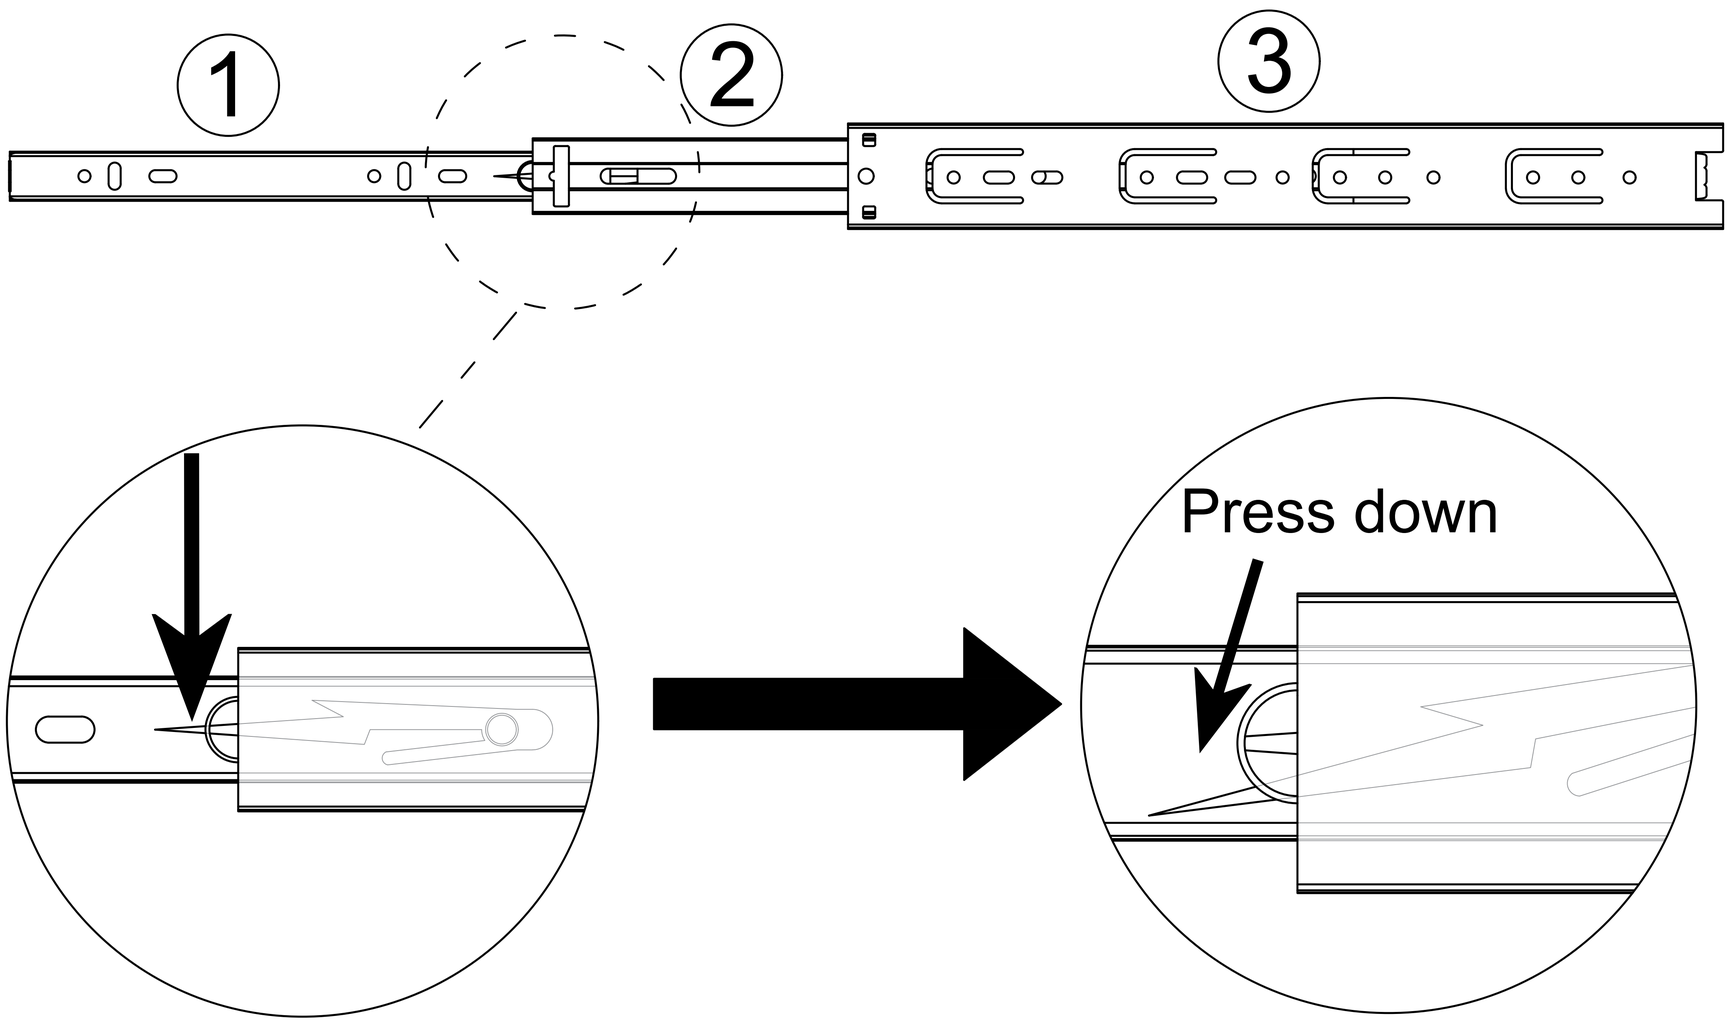



Step 2 : Press the nylon button and pull out ①.

Drawer rail decomposition completed schematic diagram

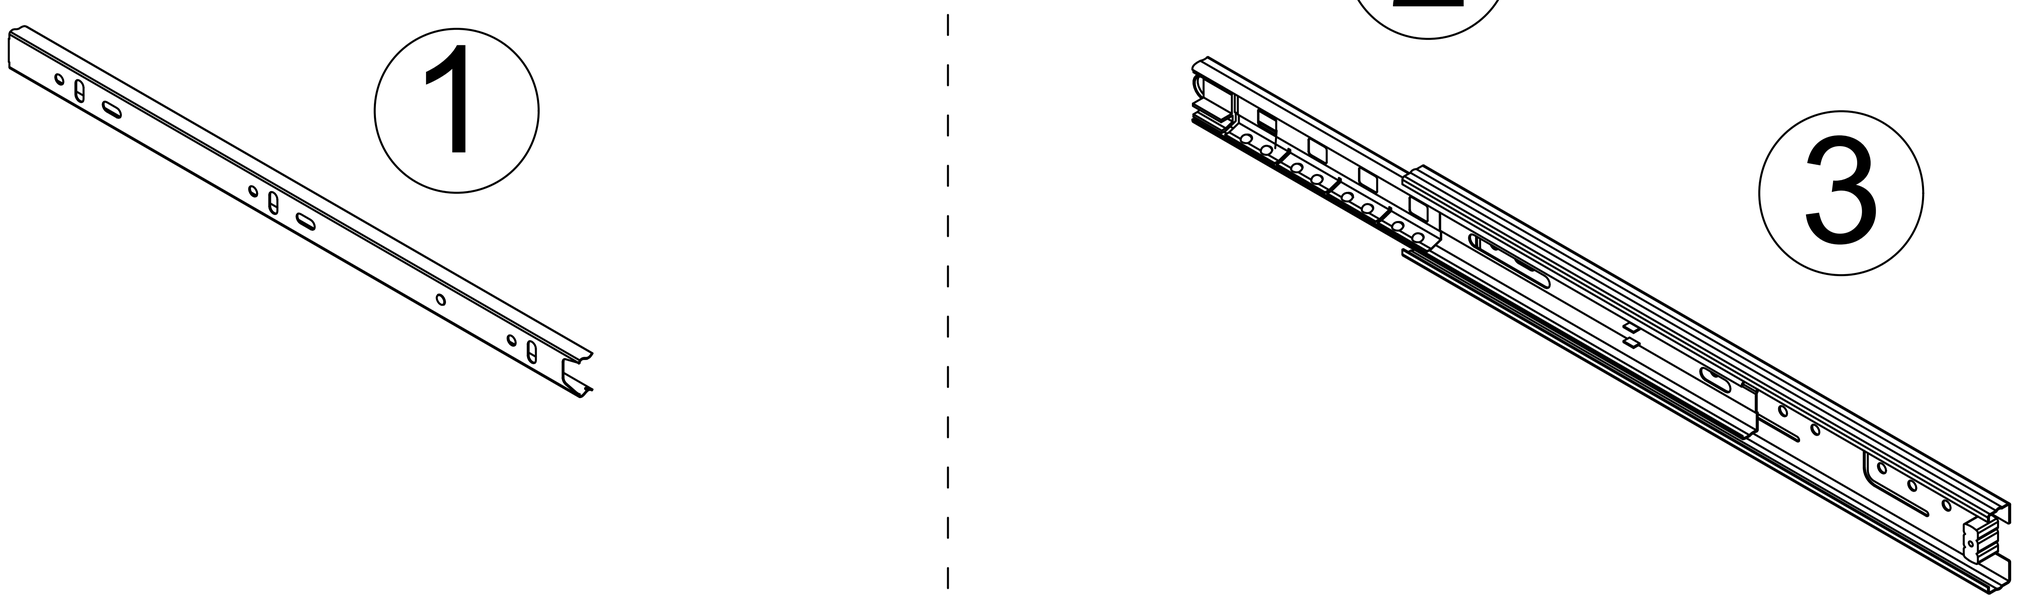



Step 12









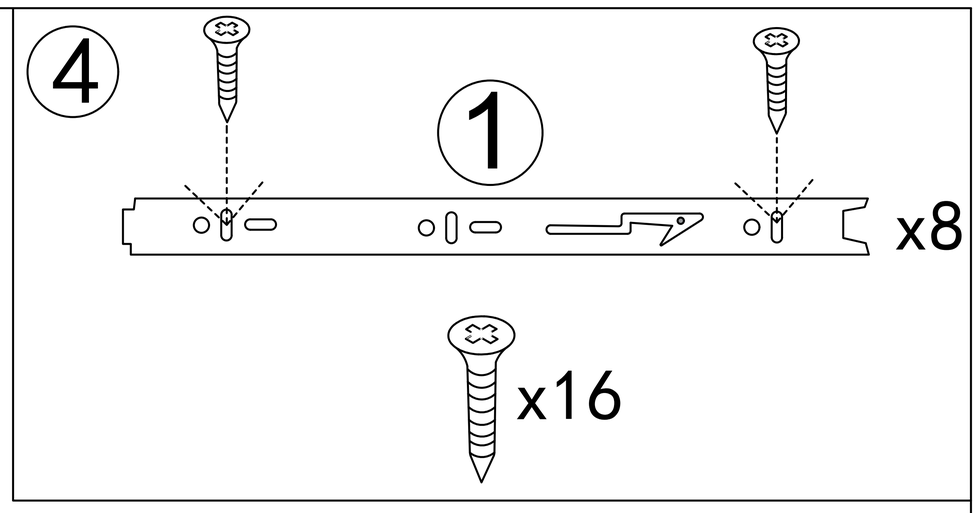


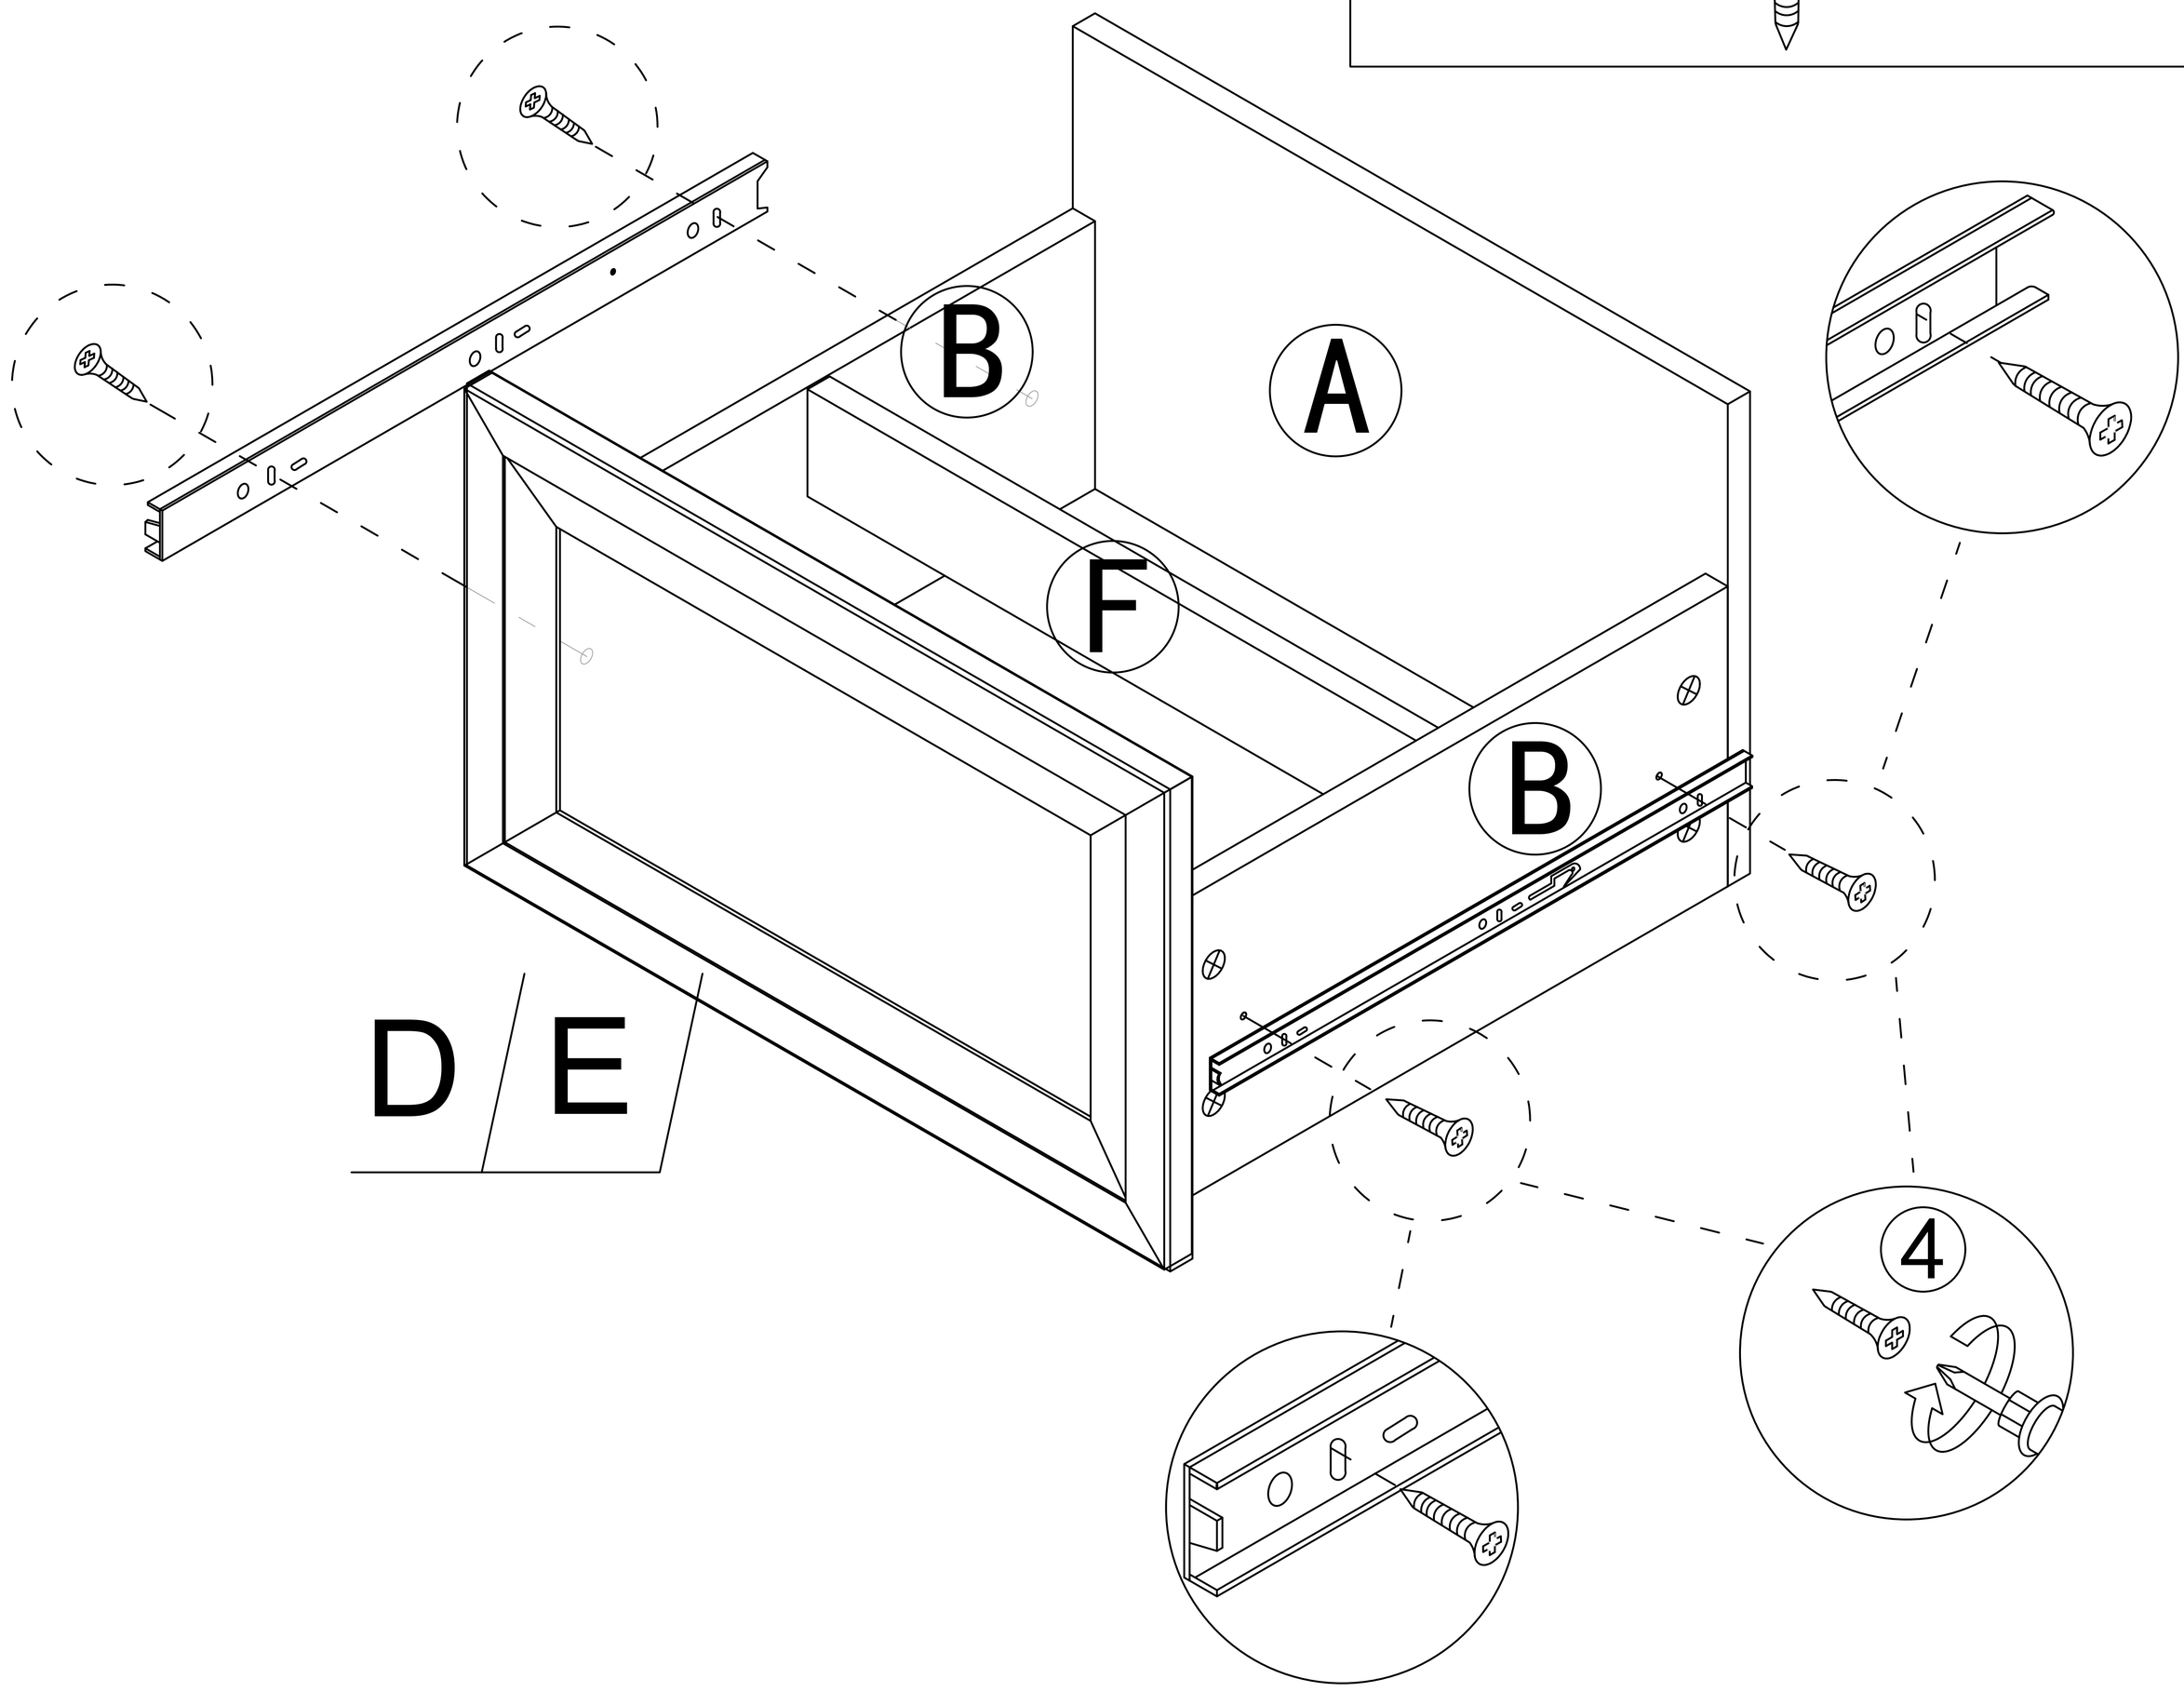



Install the guide rail according to the above steps.

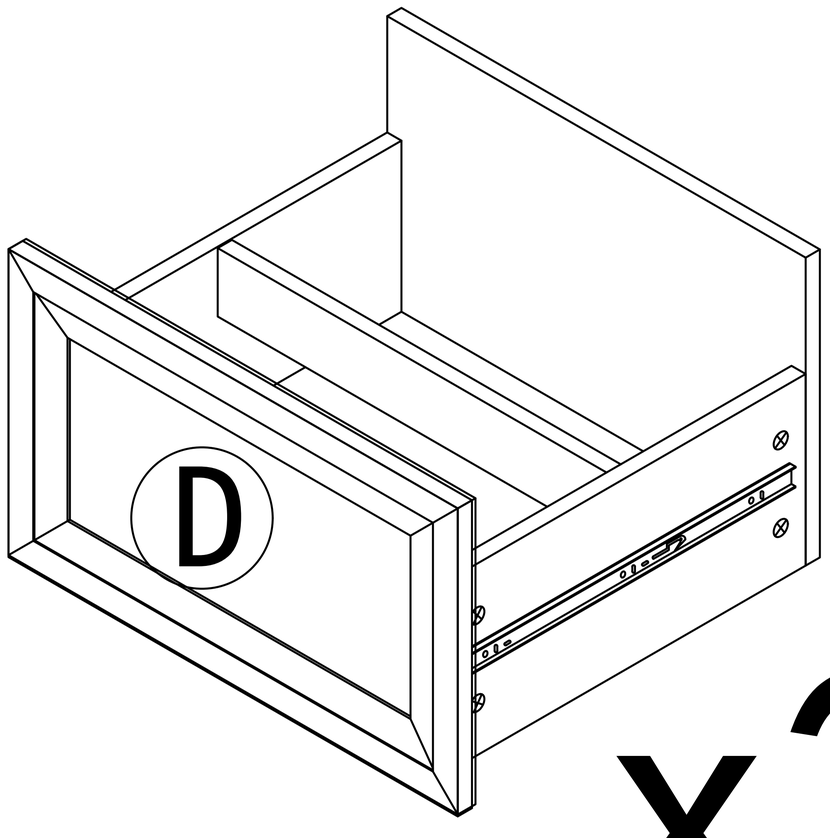

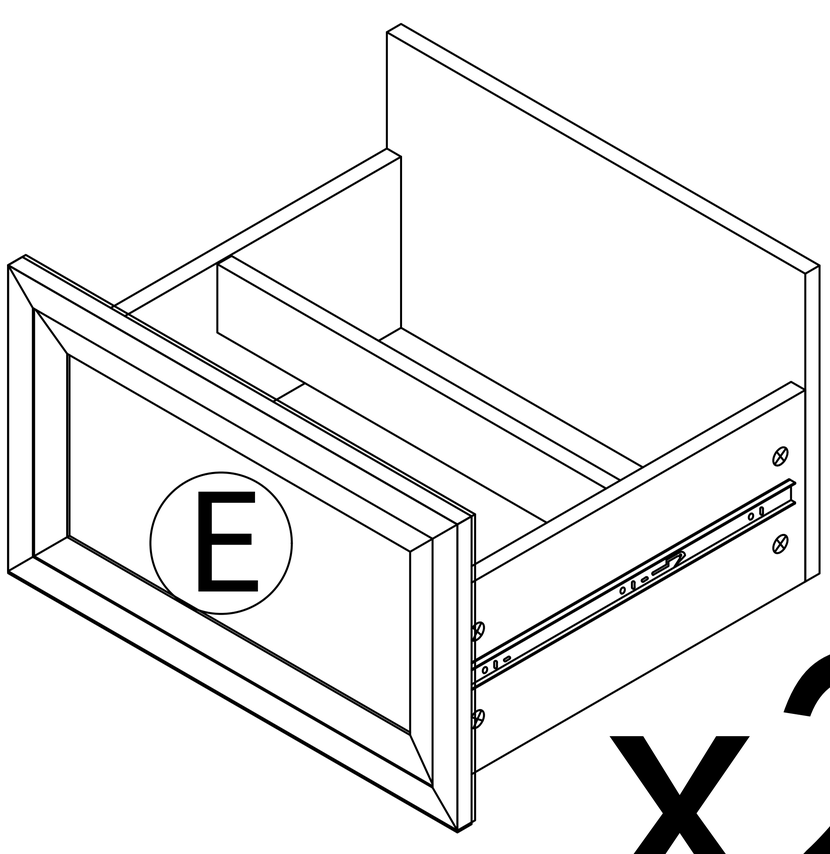


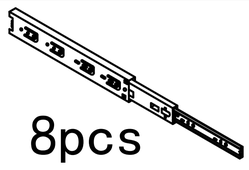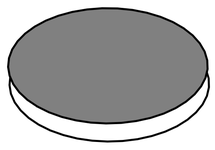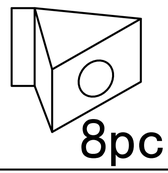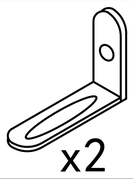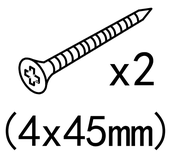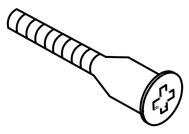1		20pcs	2		24pcs	3		12pcs
4	 8pcs  24pcs		5		5pcs	6	 8pcs  8pcs	
7	 x2  x2 (3.5x14mm)  x2  x2 (4x45mm)  x4					8	 4pcs	

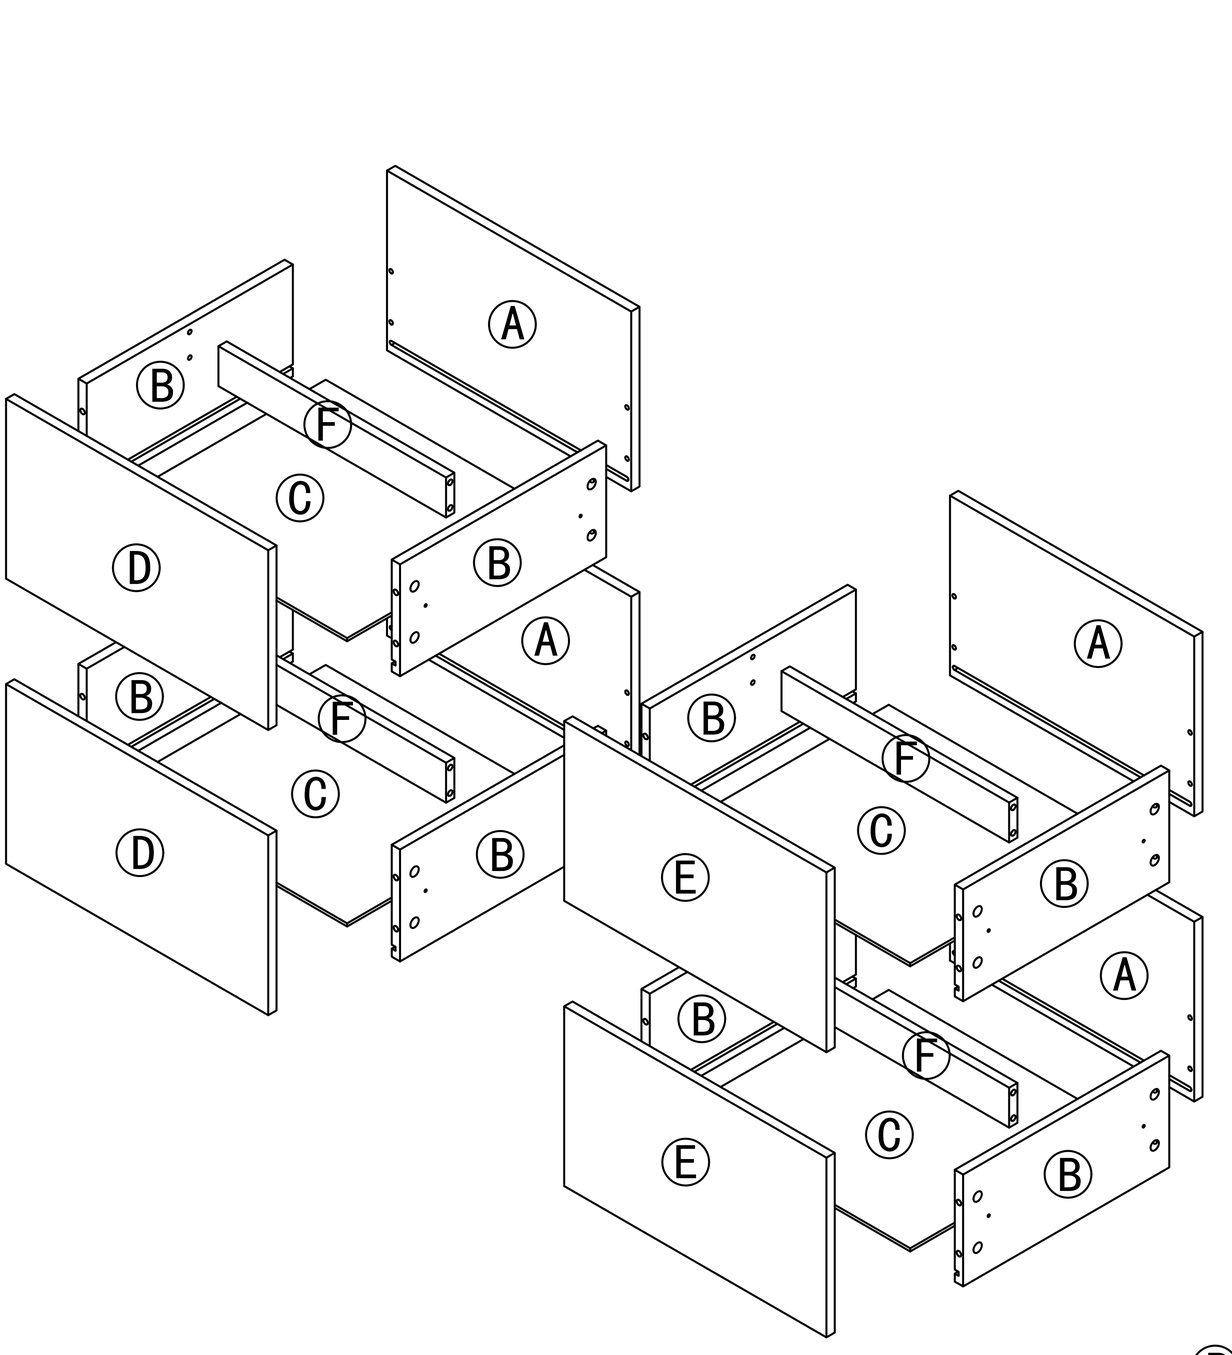


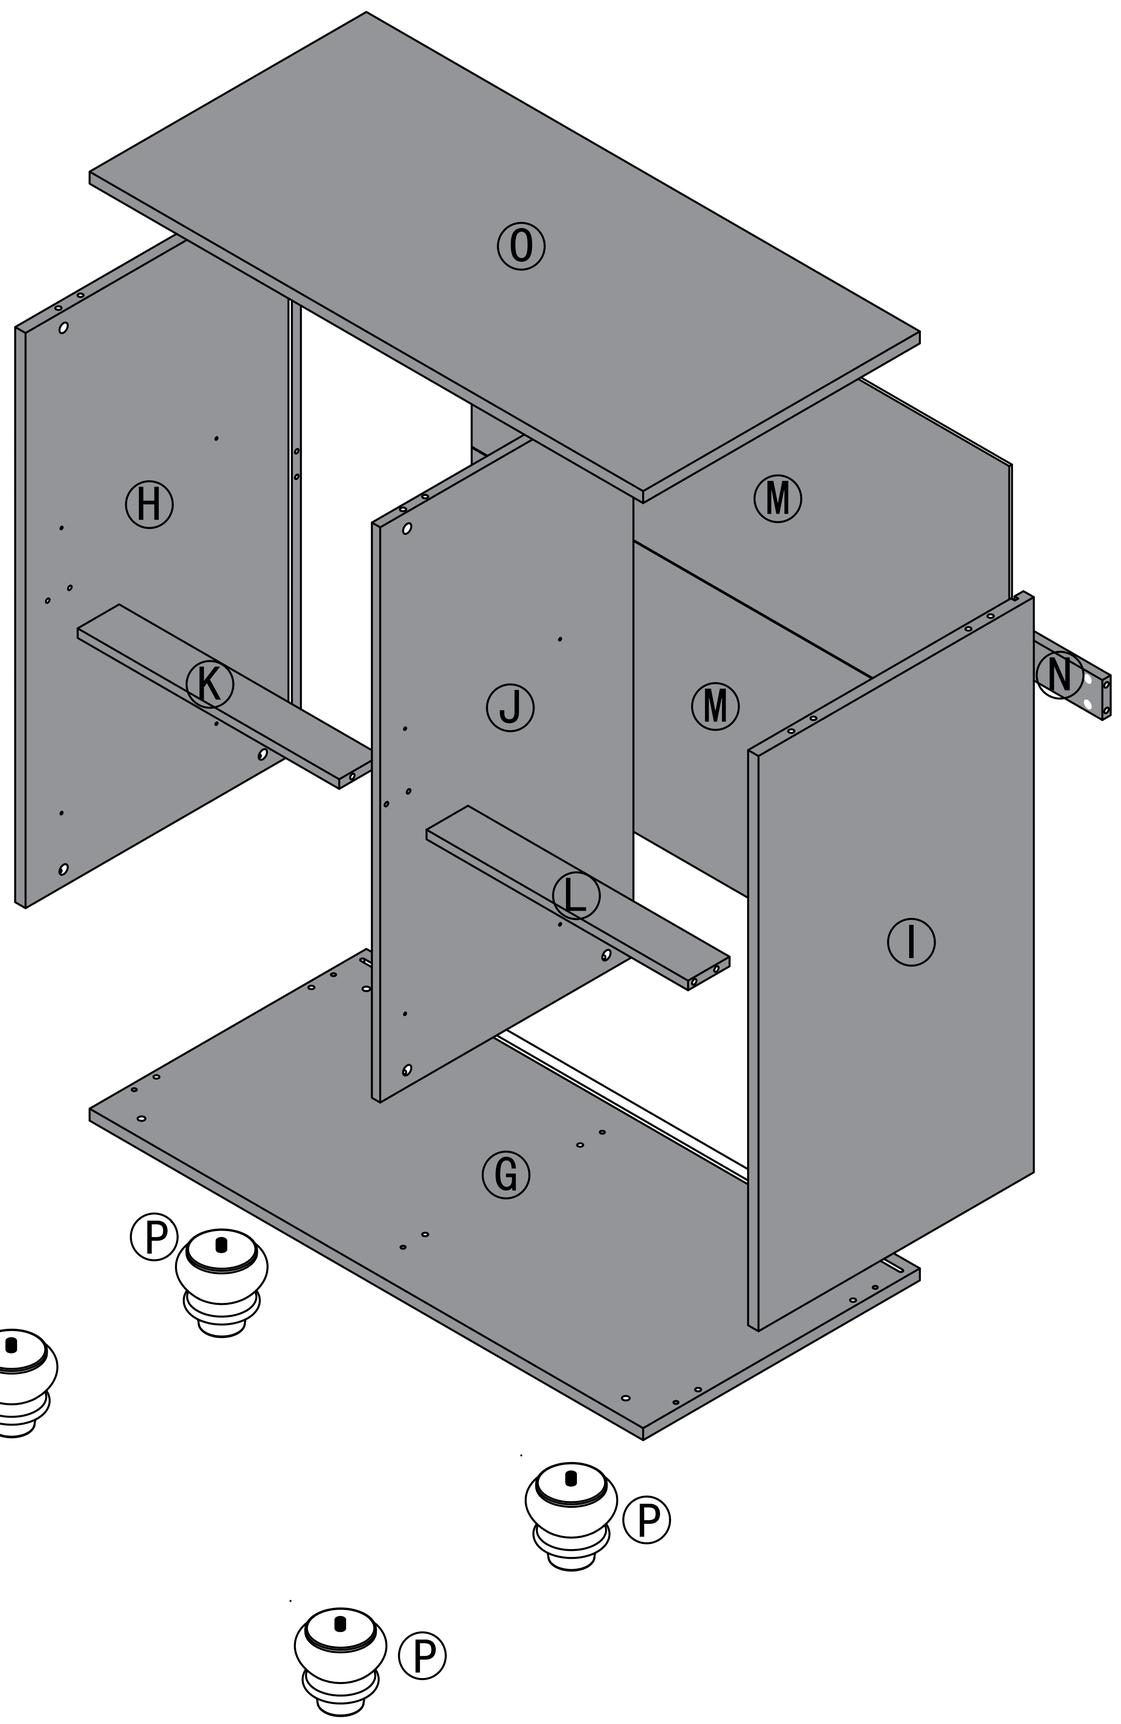

Step 13

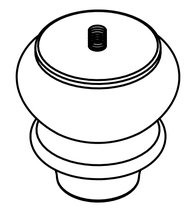


Px4

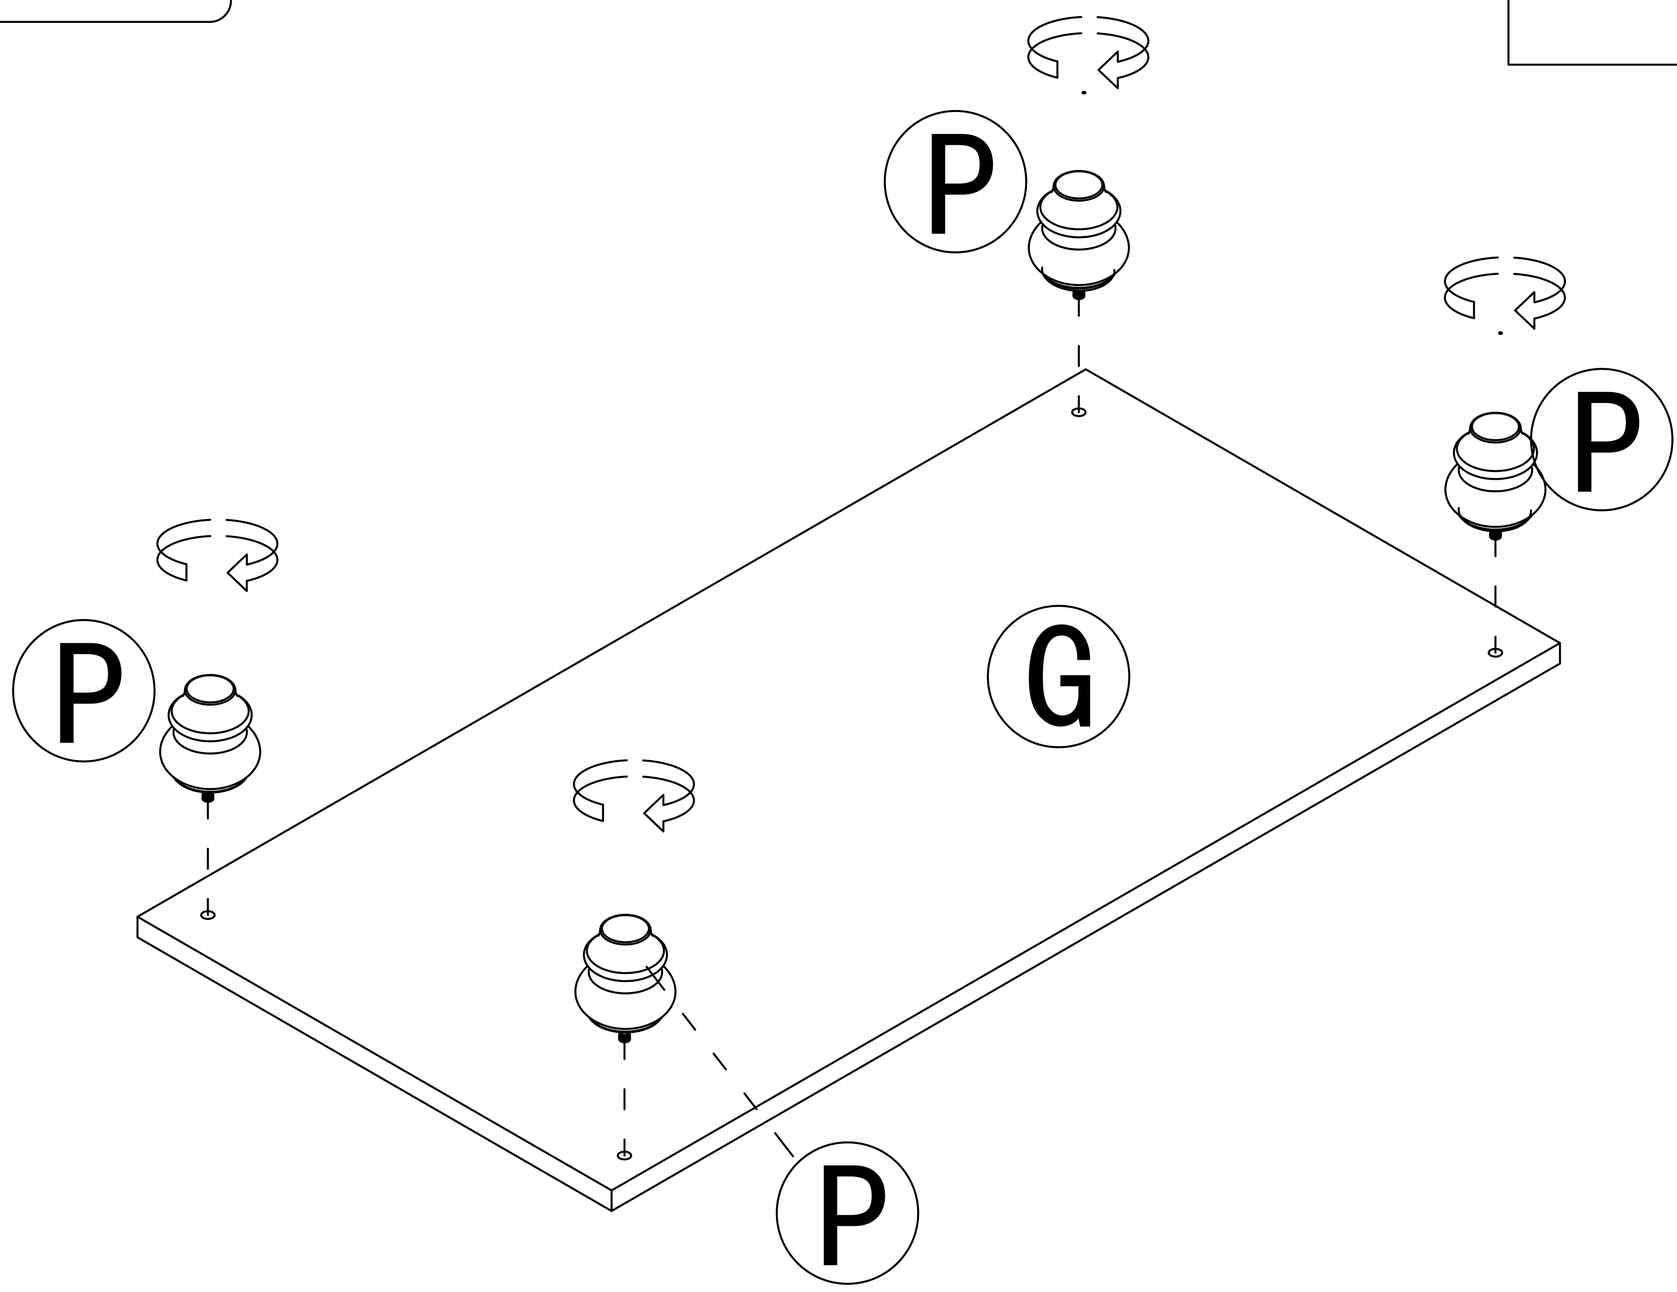


Step 14

Tear off release paper and stick the black foot pad on the board

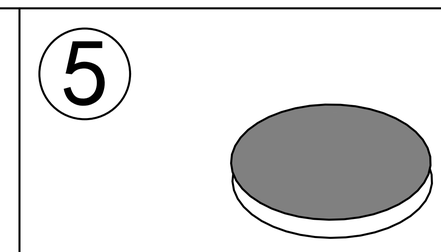



5

x4

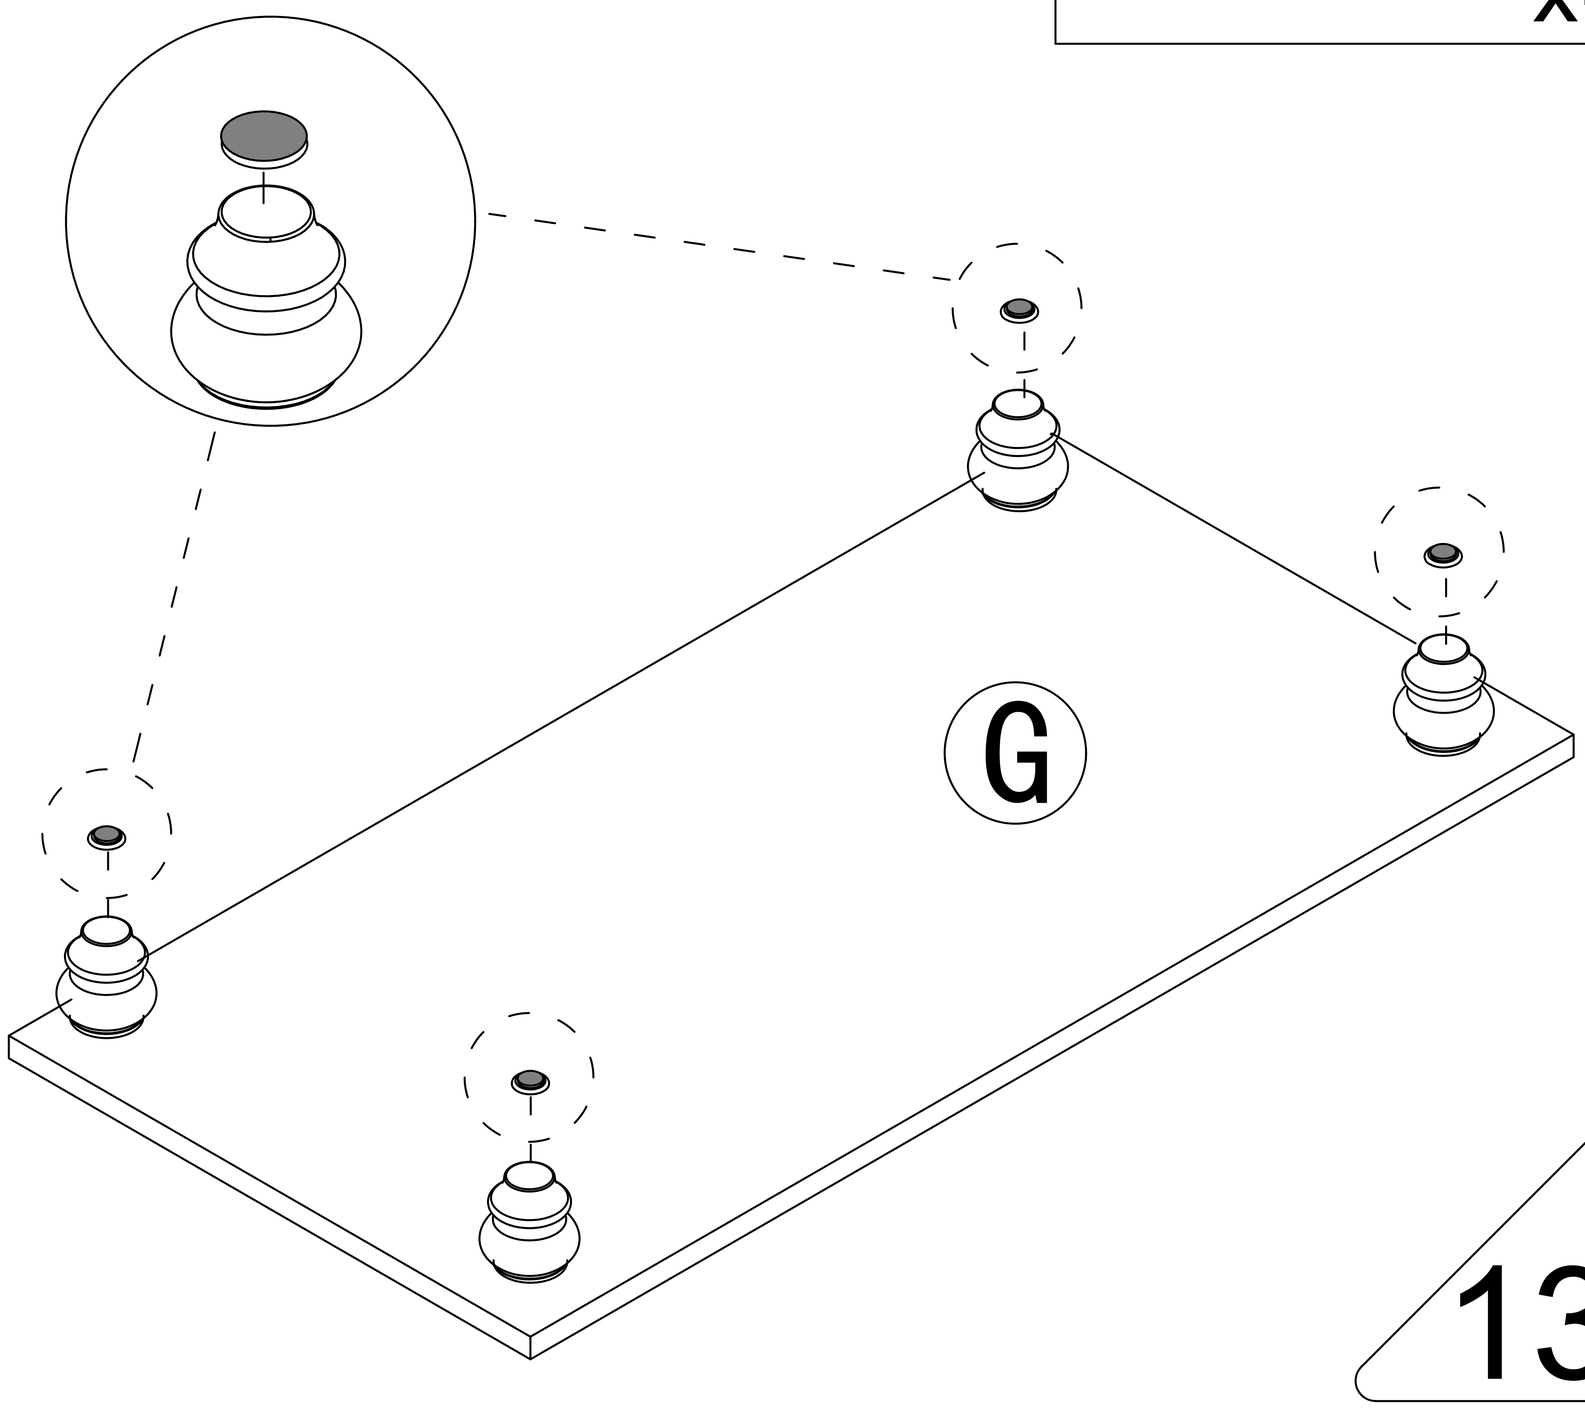


Step 15

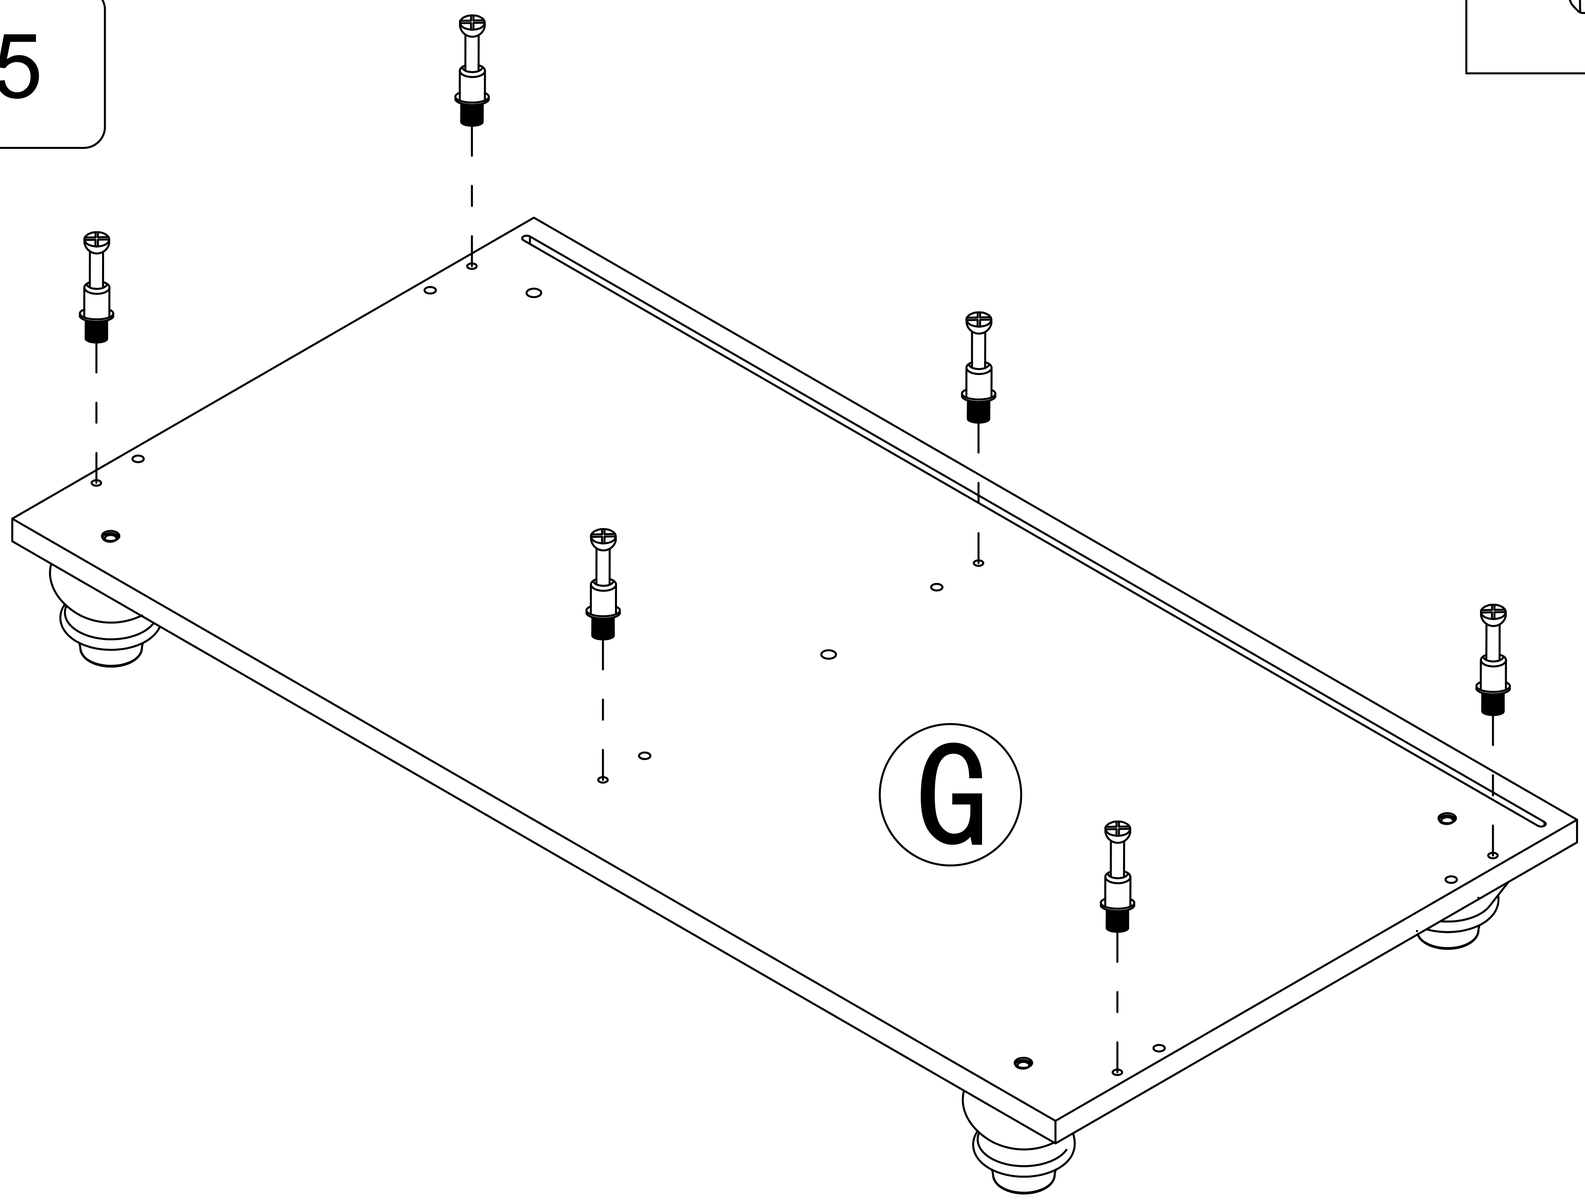

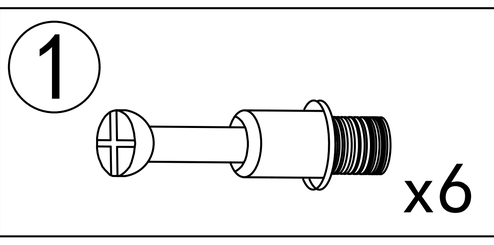



Step 16

This hole is for strengthening fixed hole customers can choose to install according to their needs.

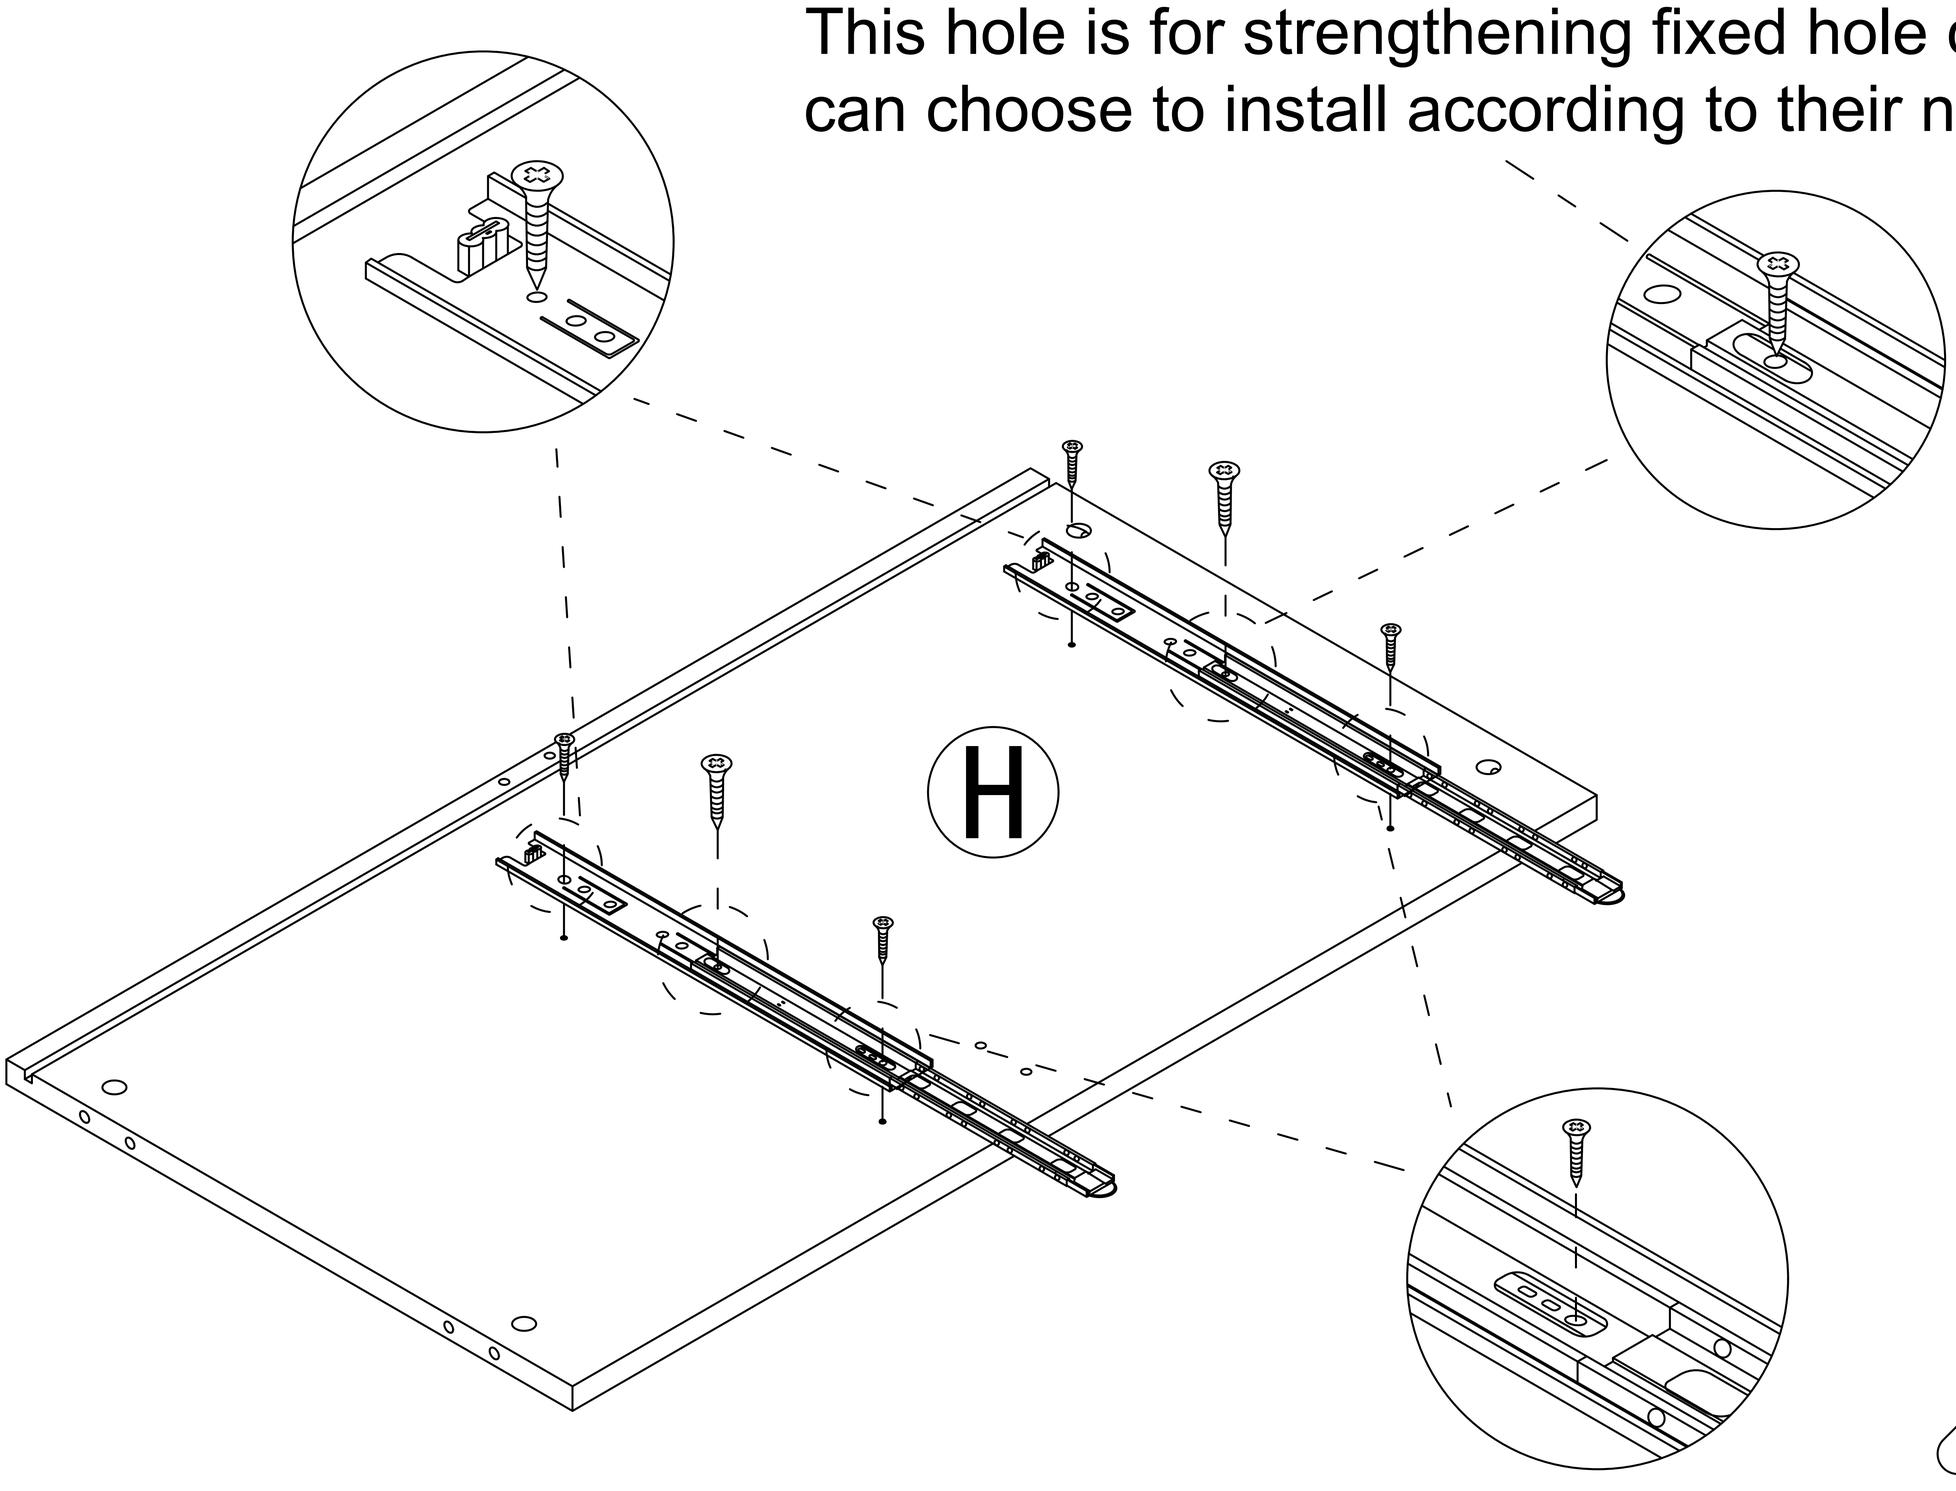


Step 17

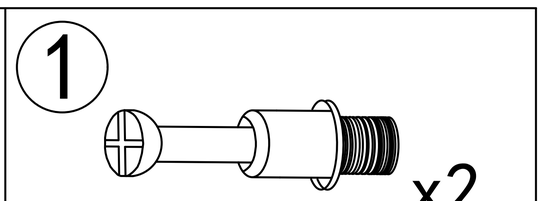


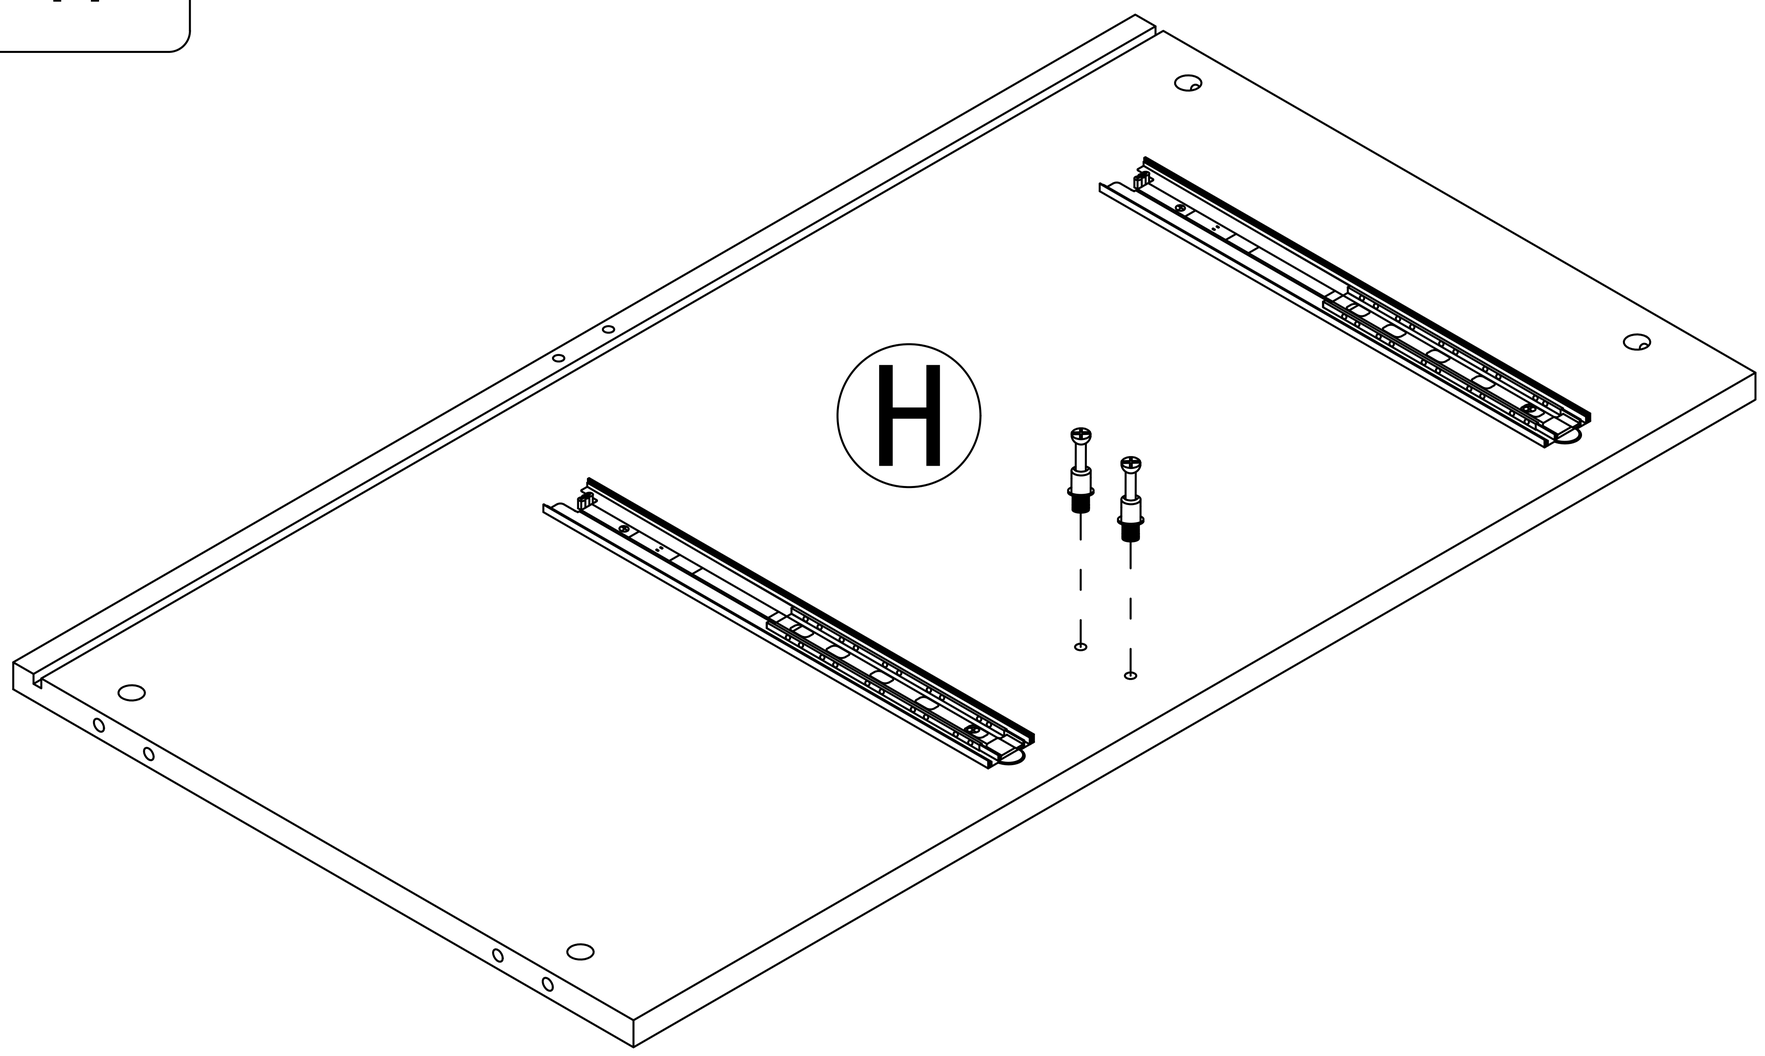

Step 18

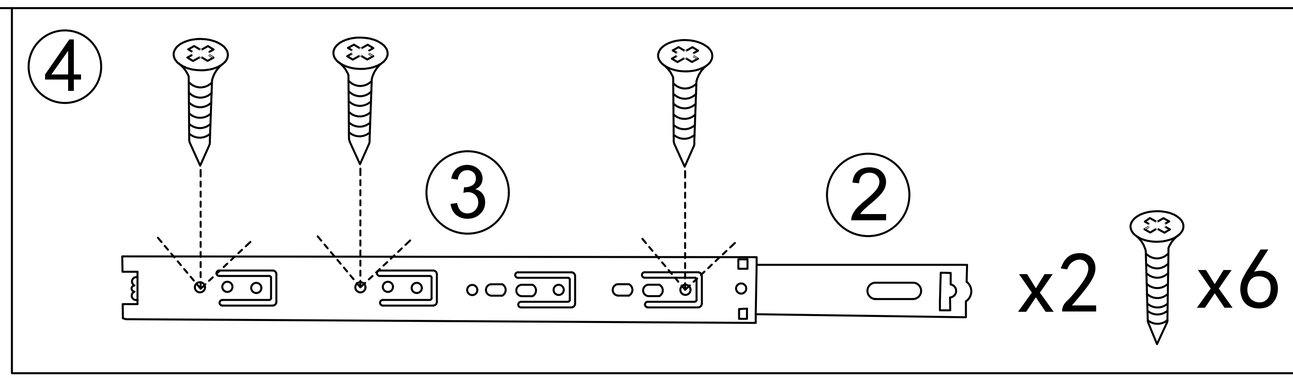


This hole is for strengthening fixed hole customers can choose to install according to their needs.

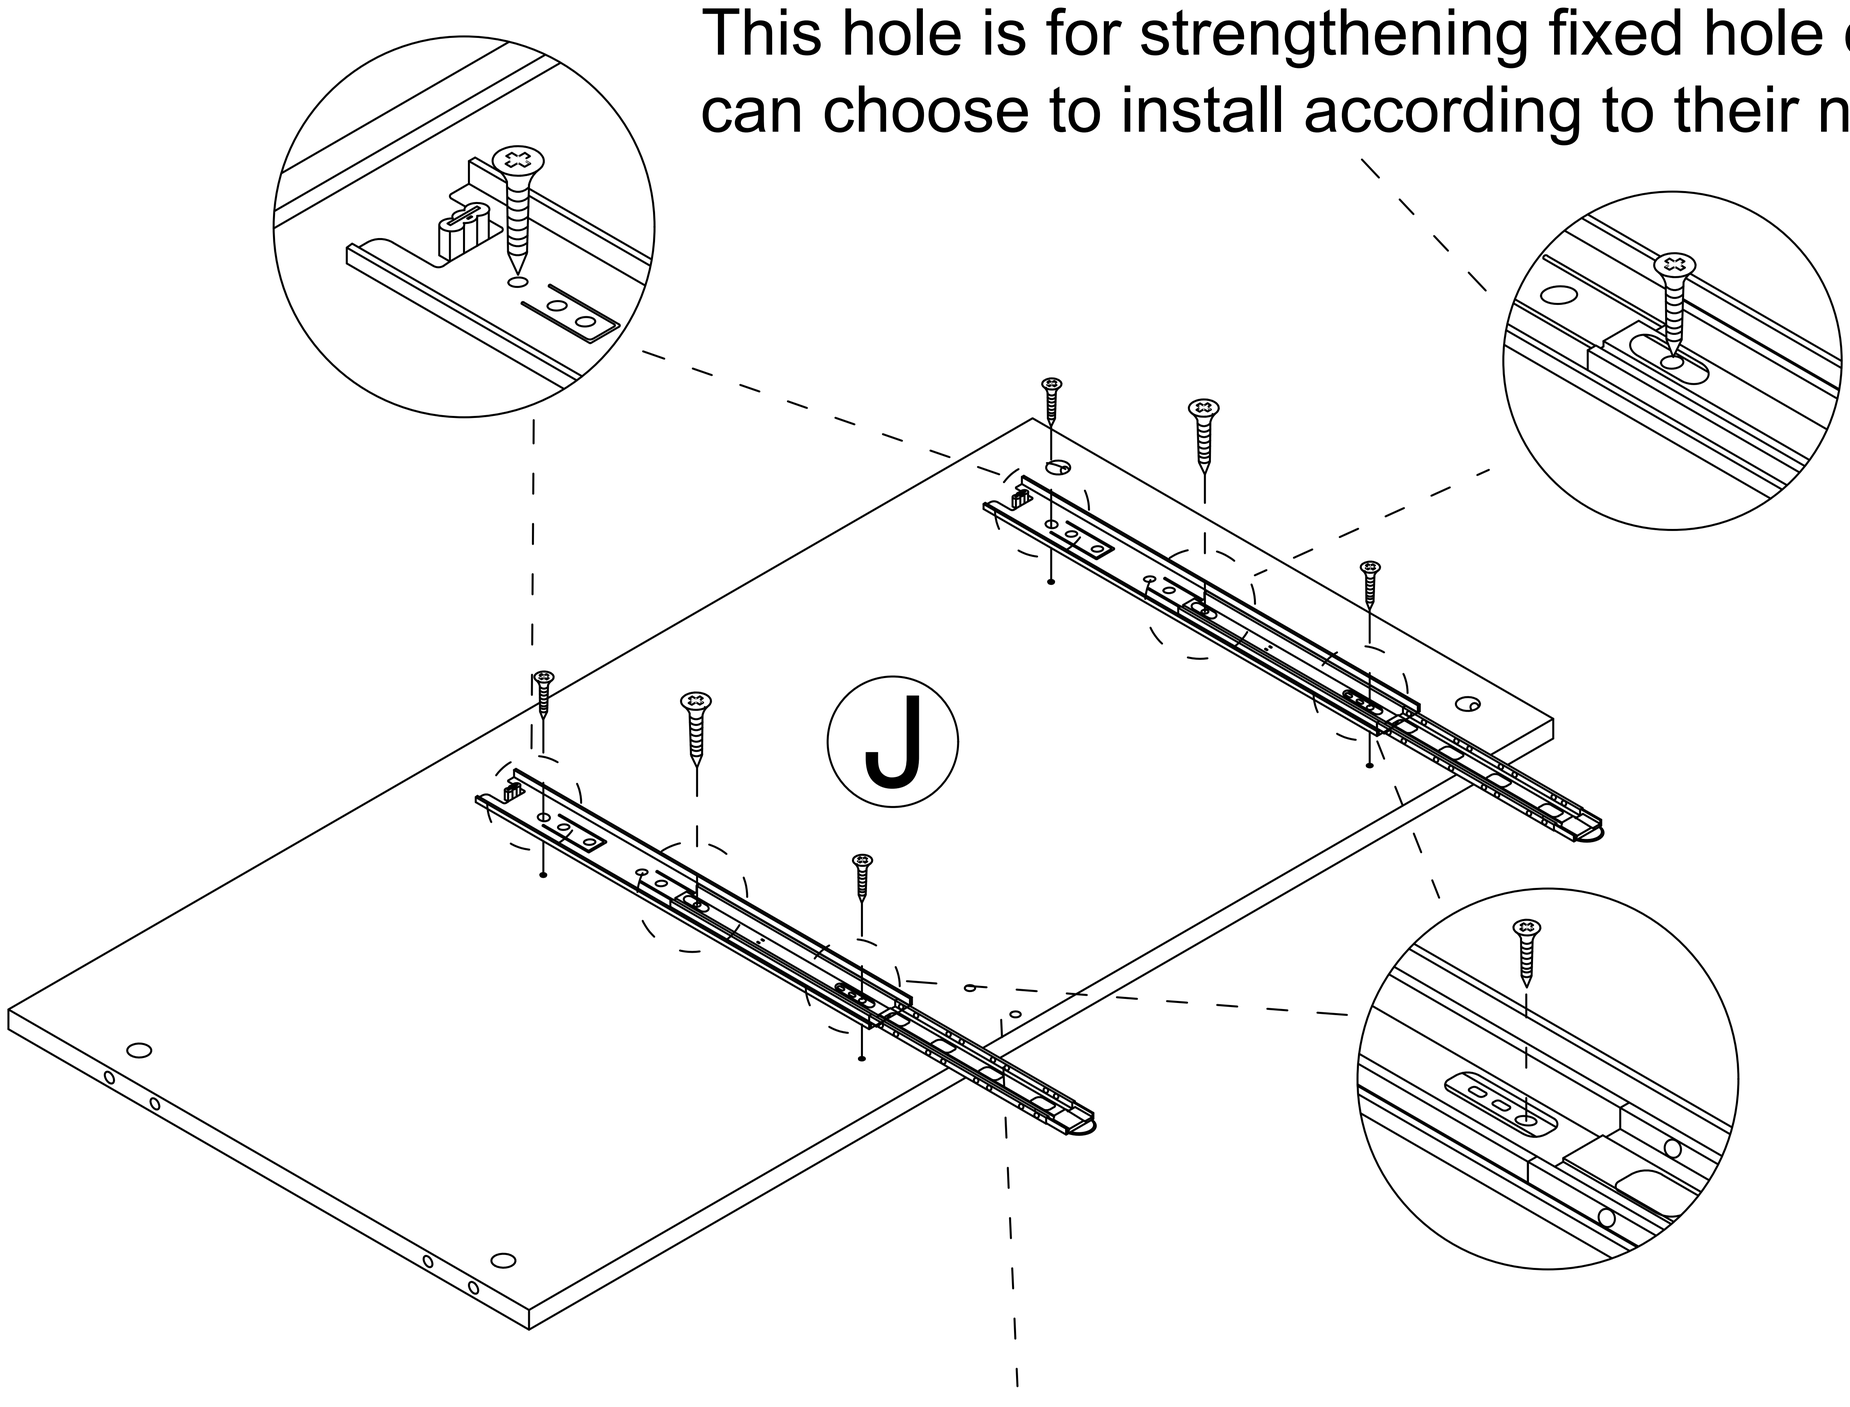


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 19

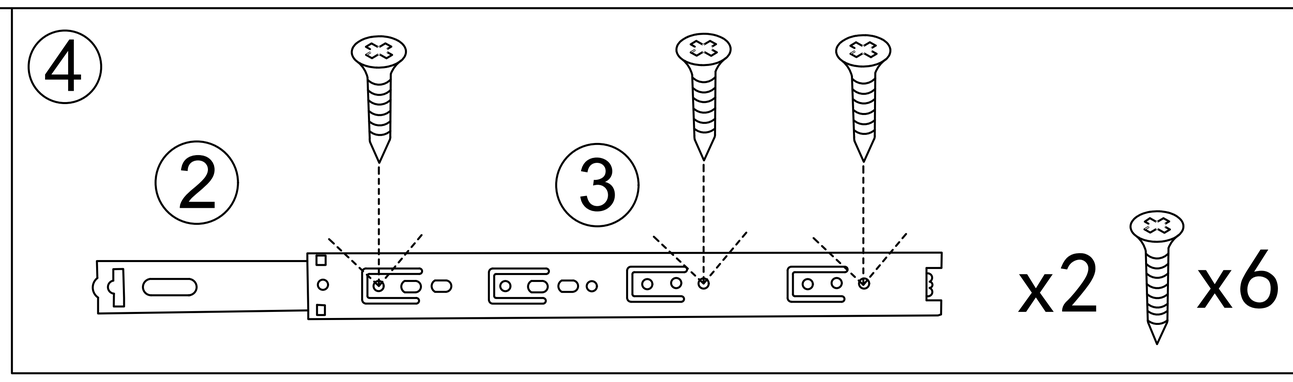


Install by flipping to the back side

This hole is for strengthening fixed hole customers can choose to install according to their needs.

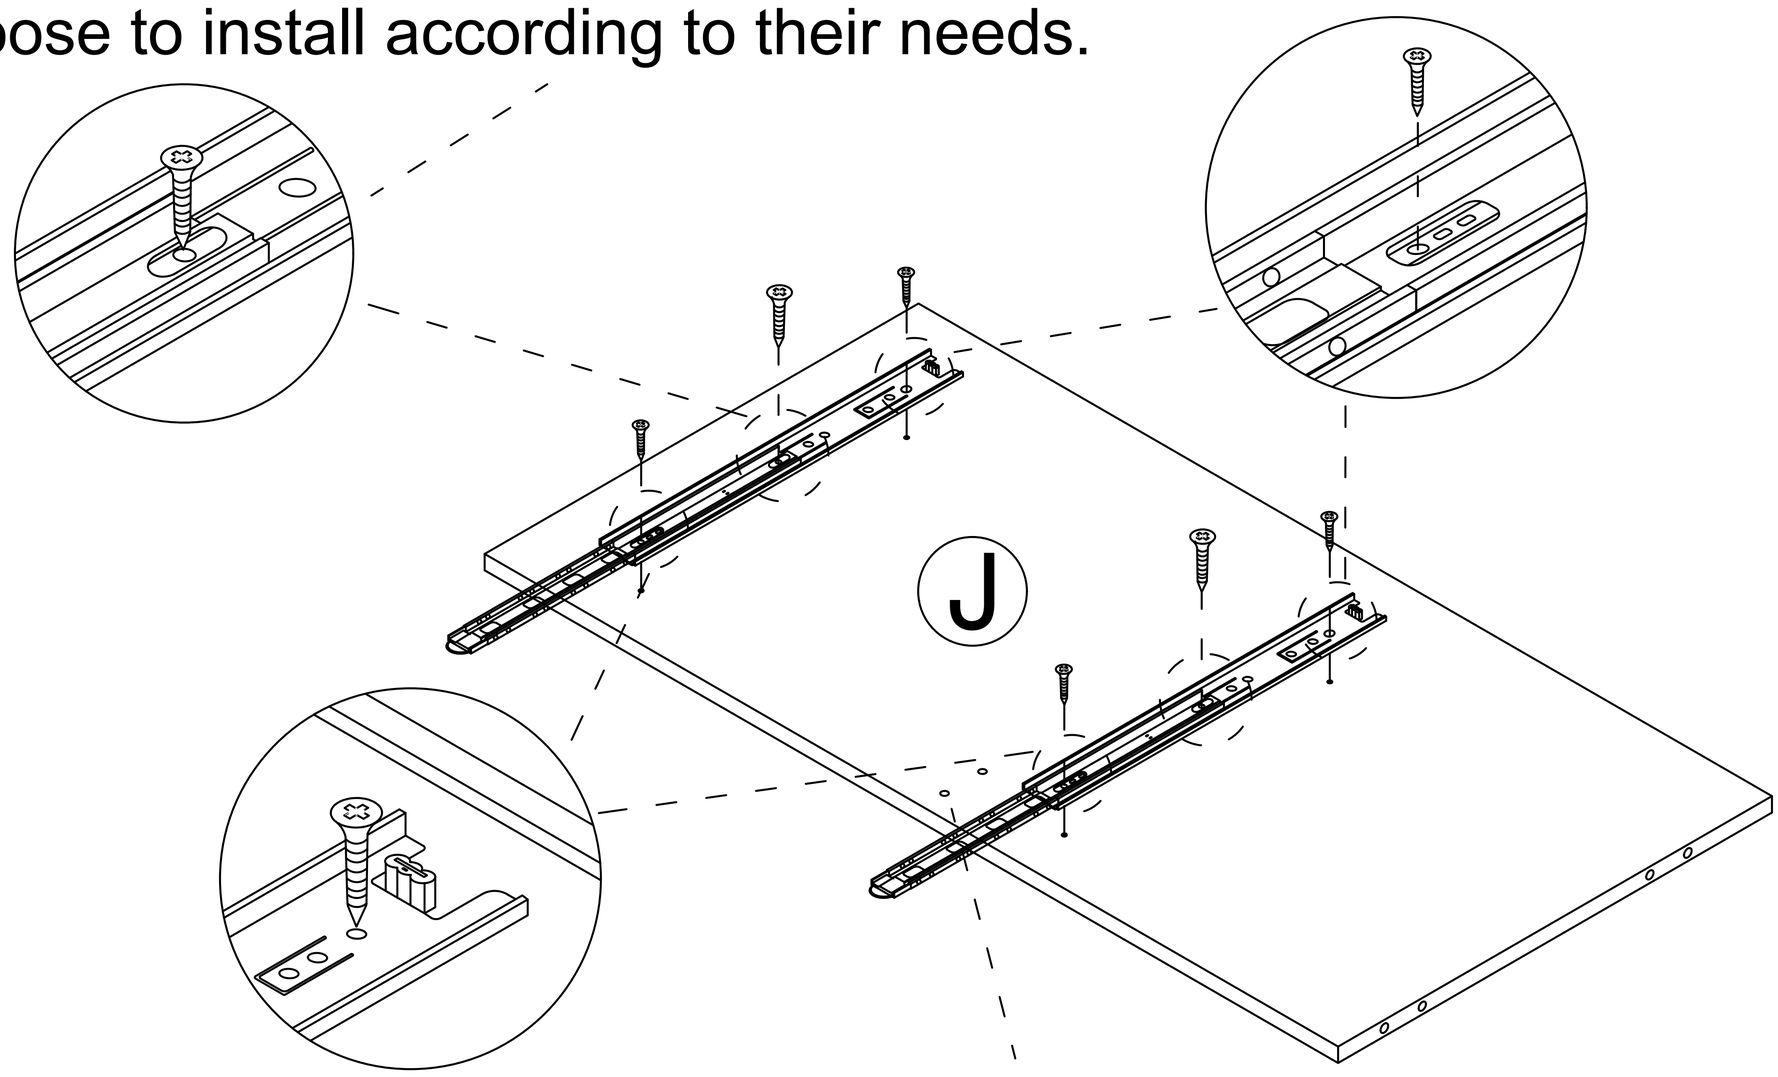



Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 20

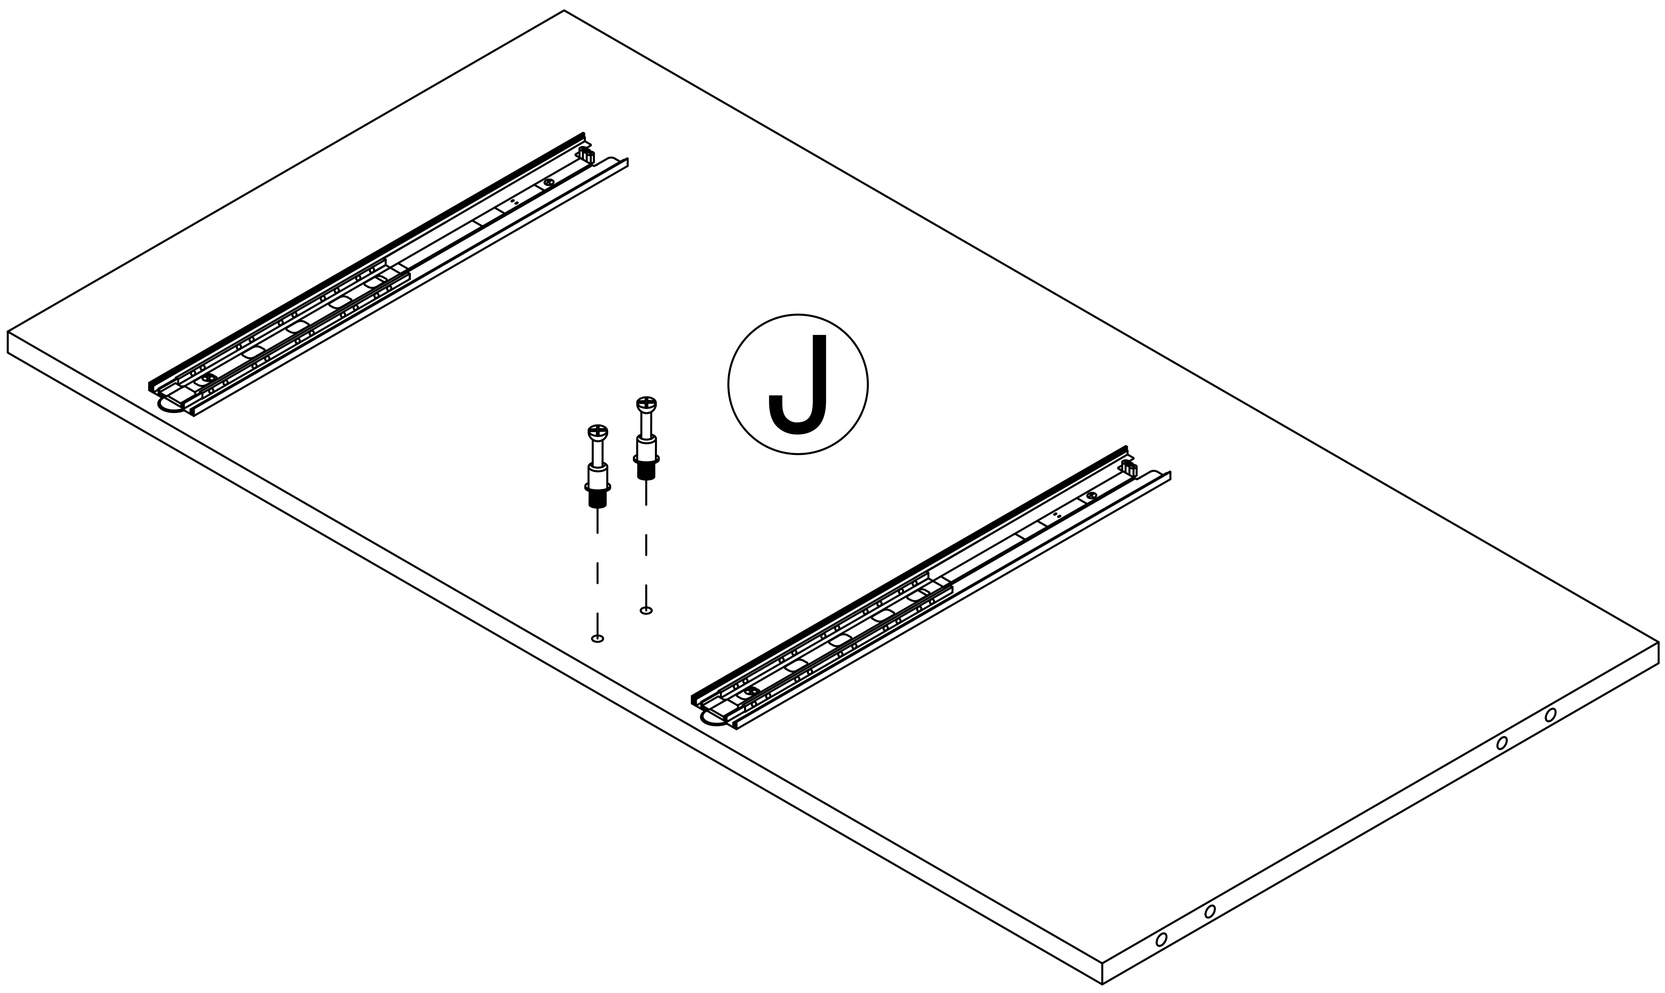


Step 21

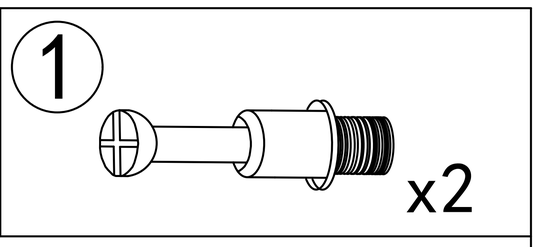


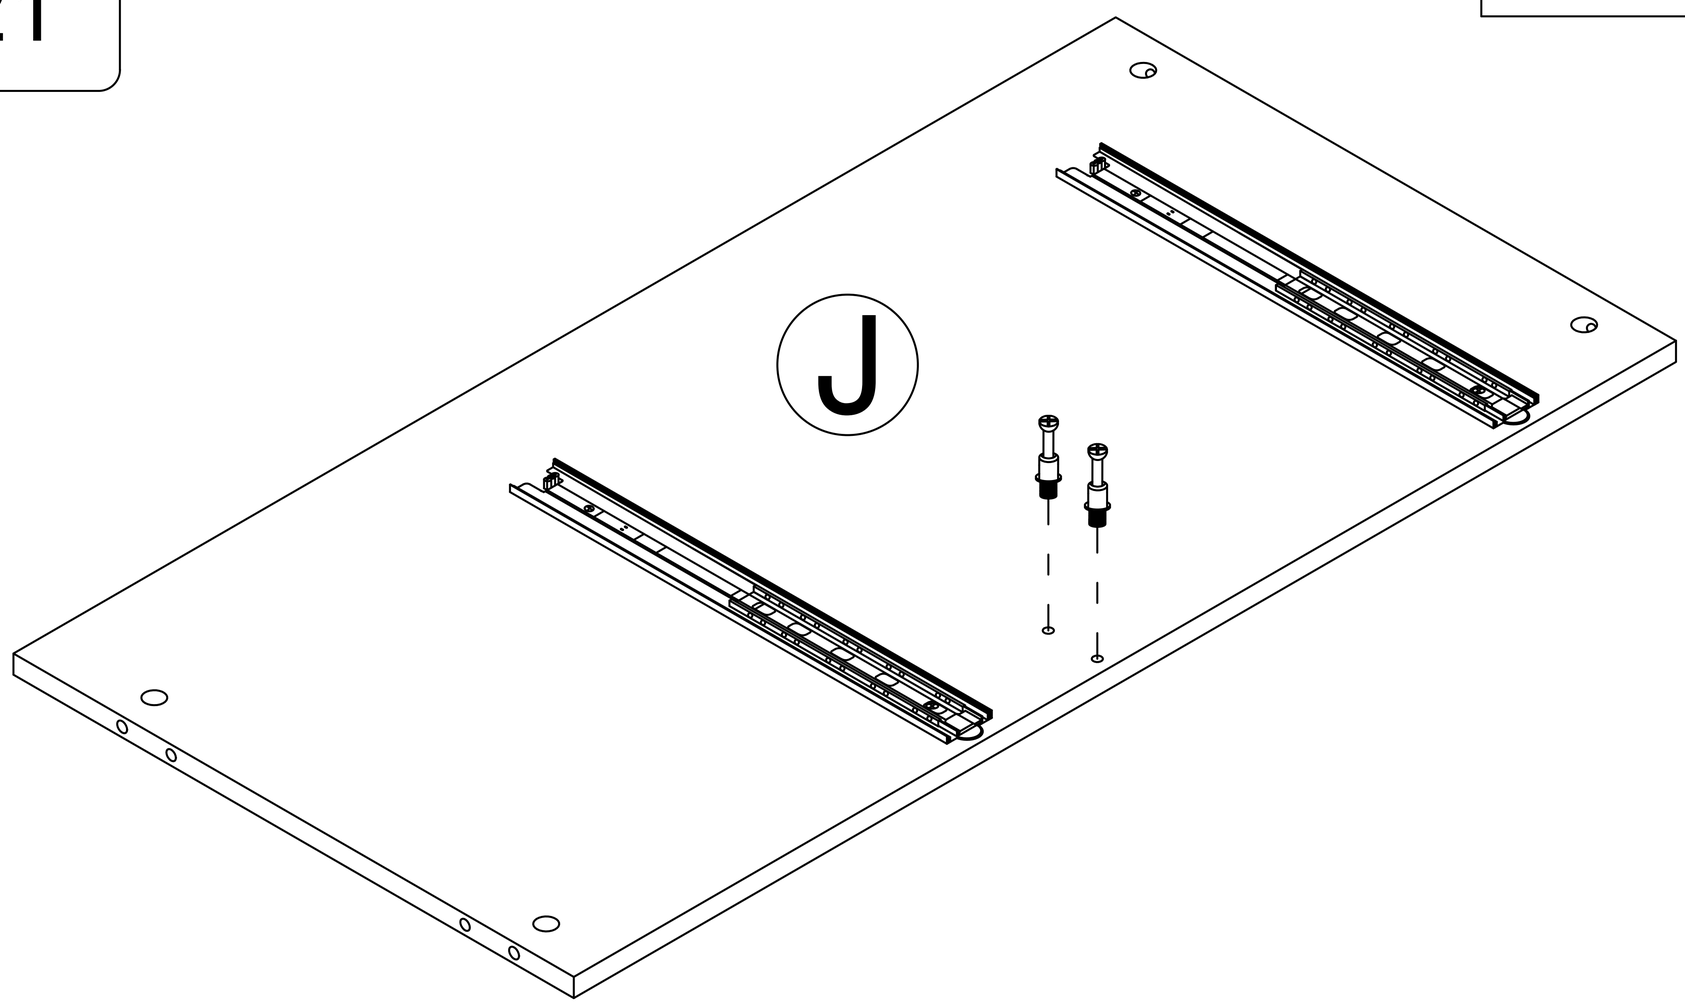


Step 22

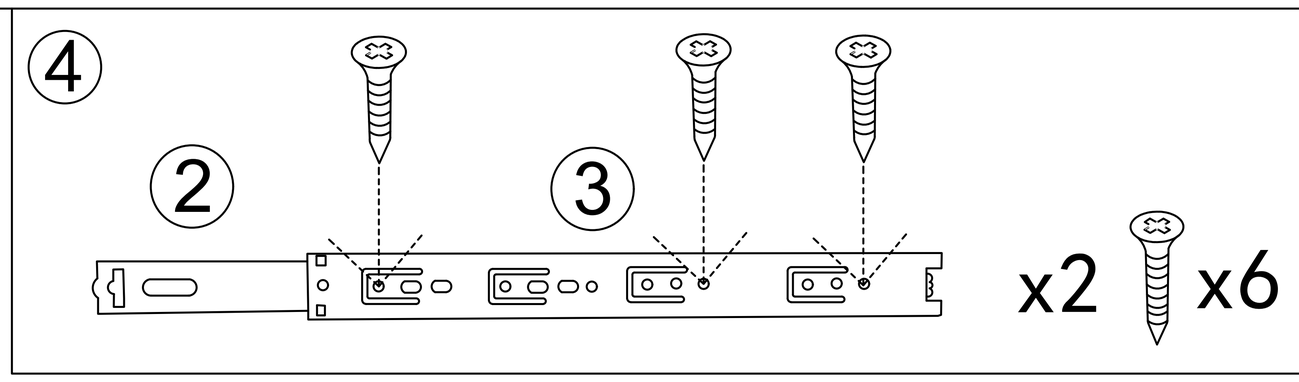


This hole is for strengthening fixed hole customers
can choose to install according to their needs.

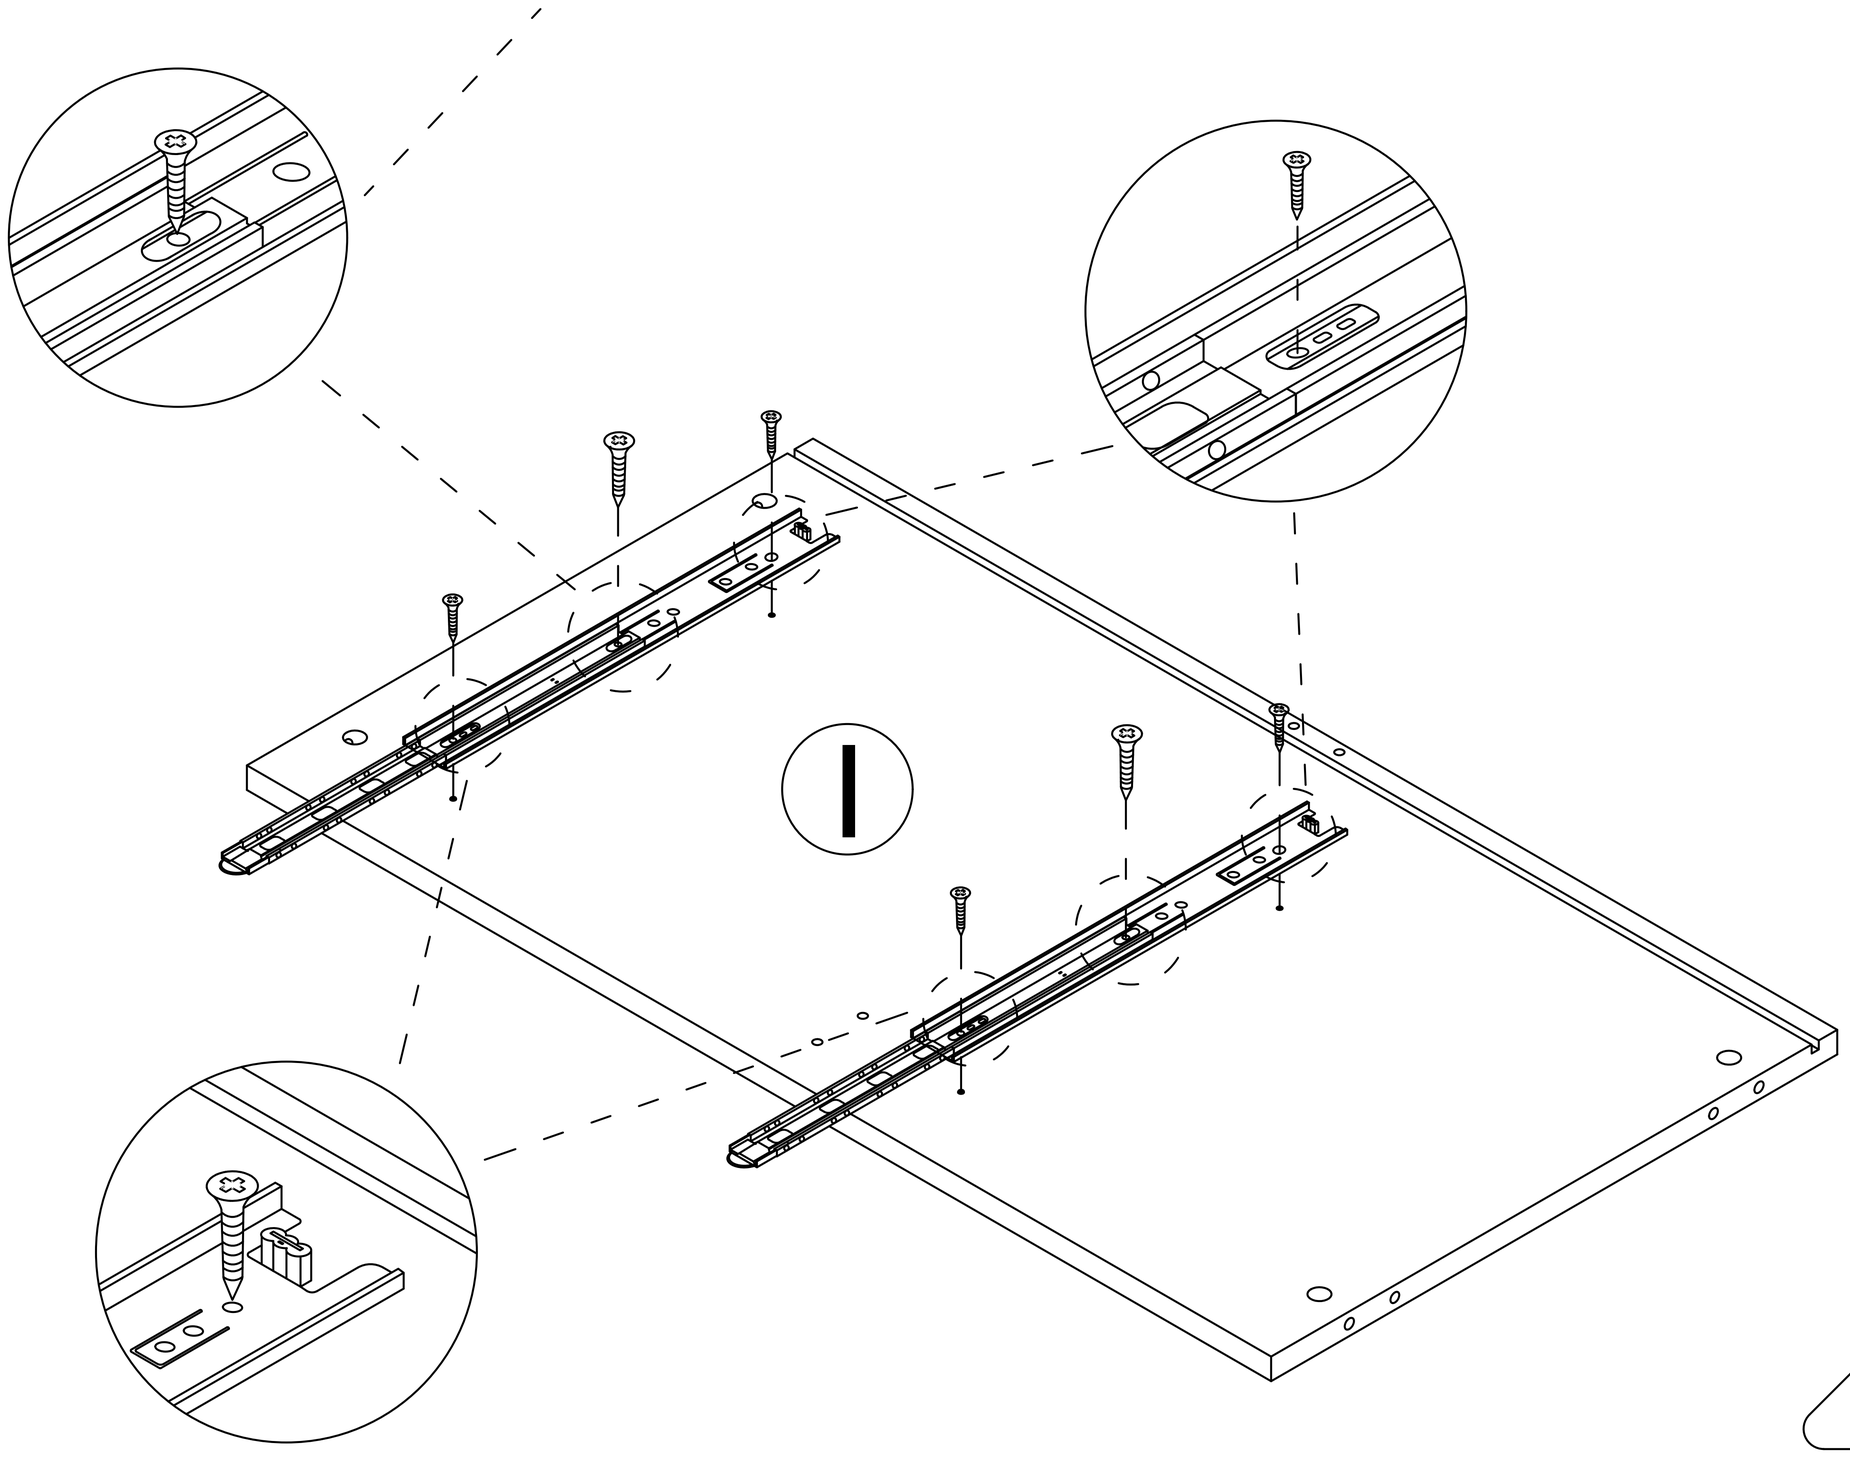

Step 23

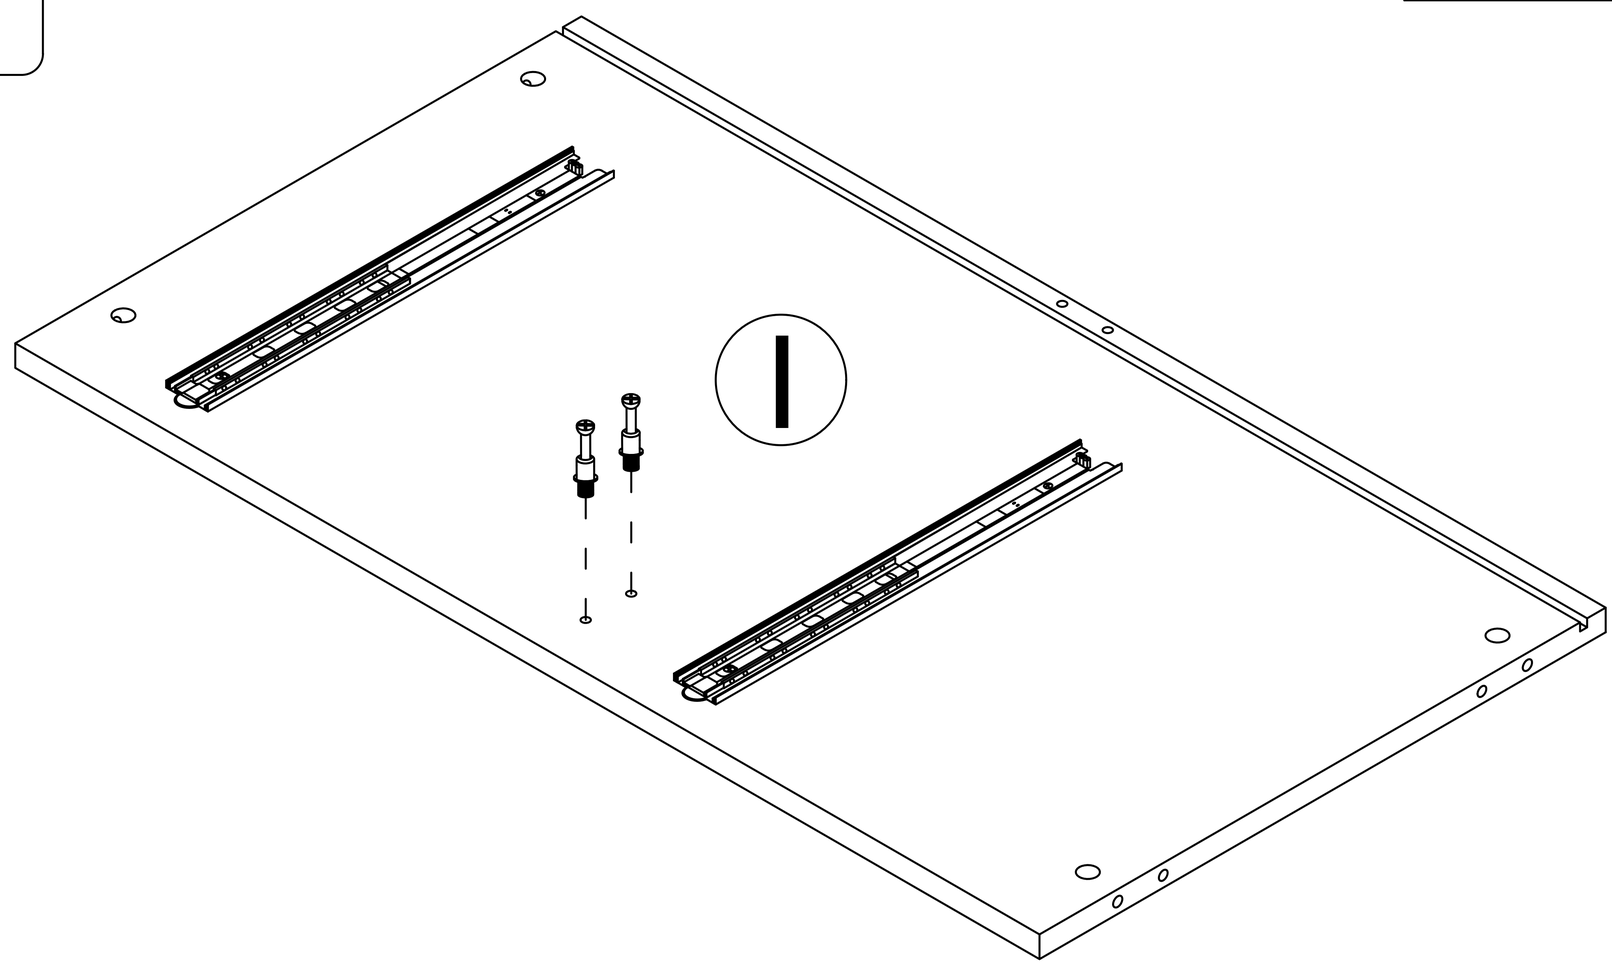



1




x2

Step 24

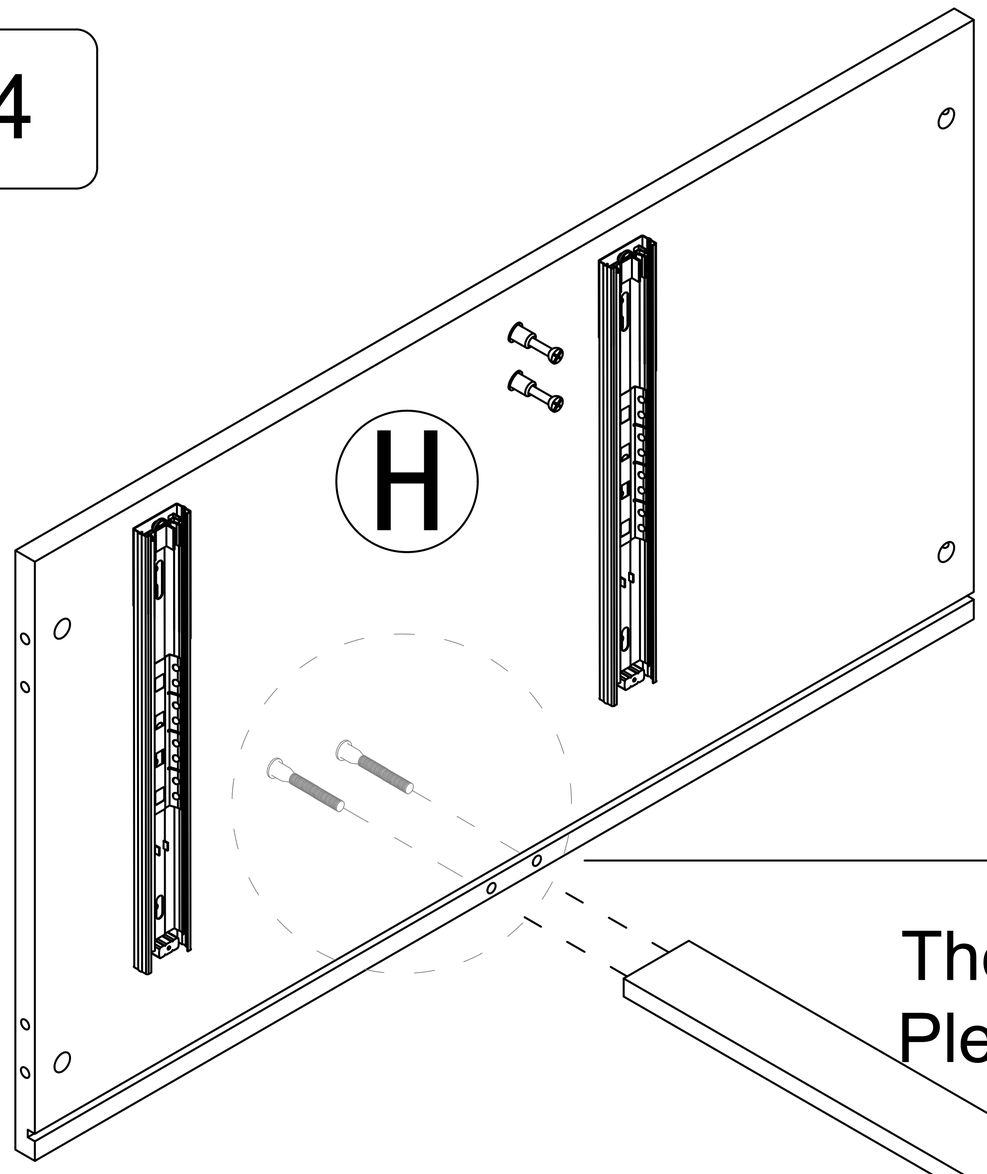


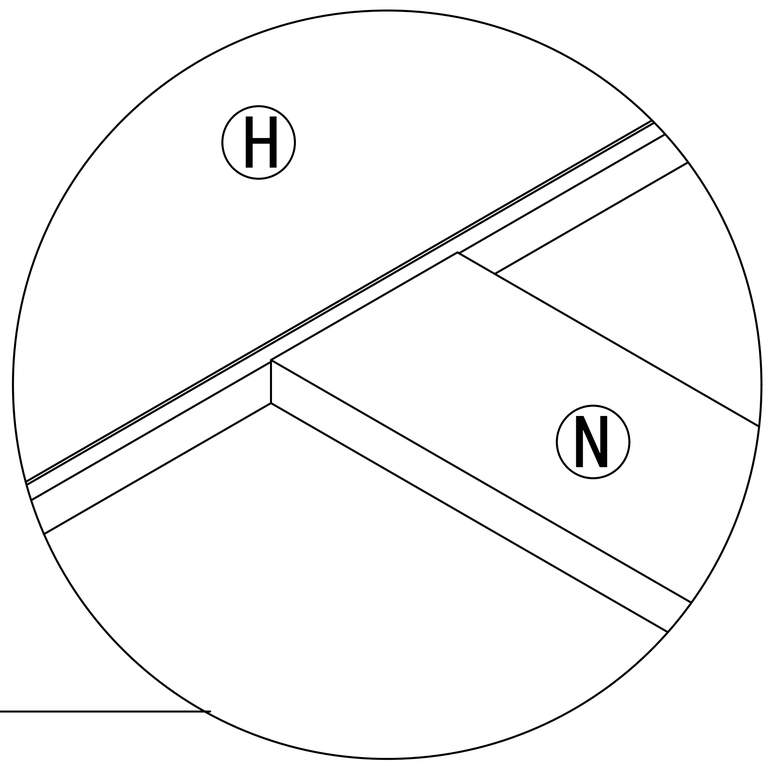

The structure is fragile.
Please install with extreme care.

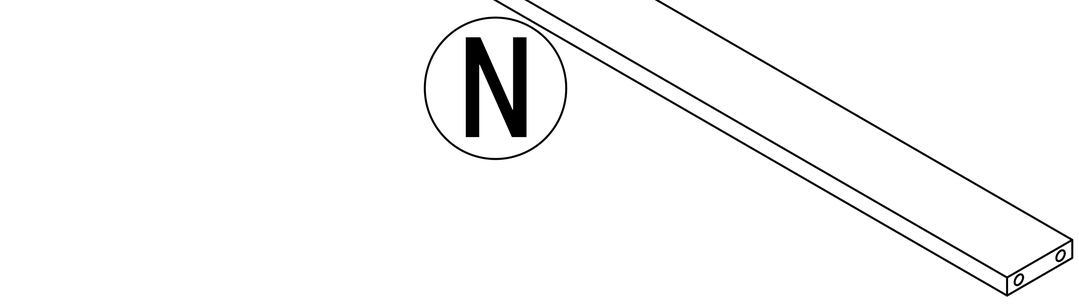

8

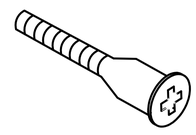


x2

Step 25

2



x2

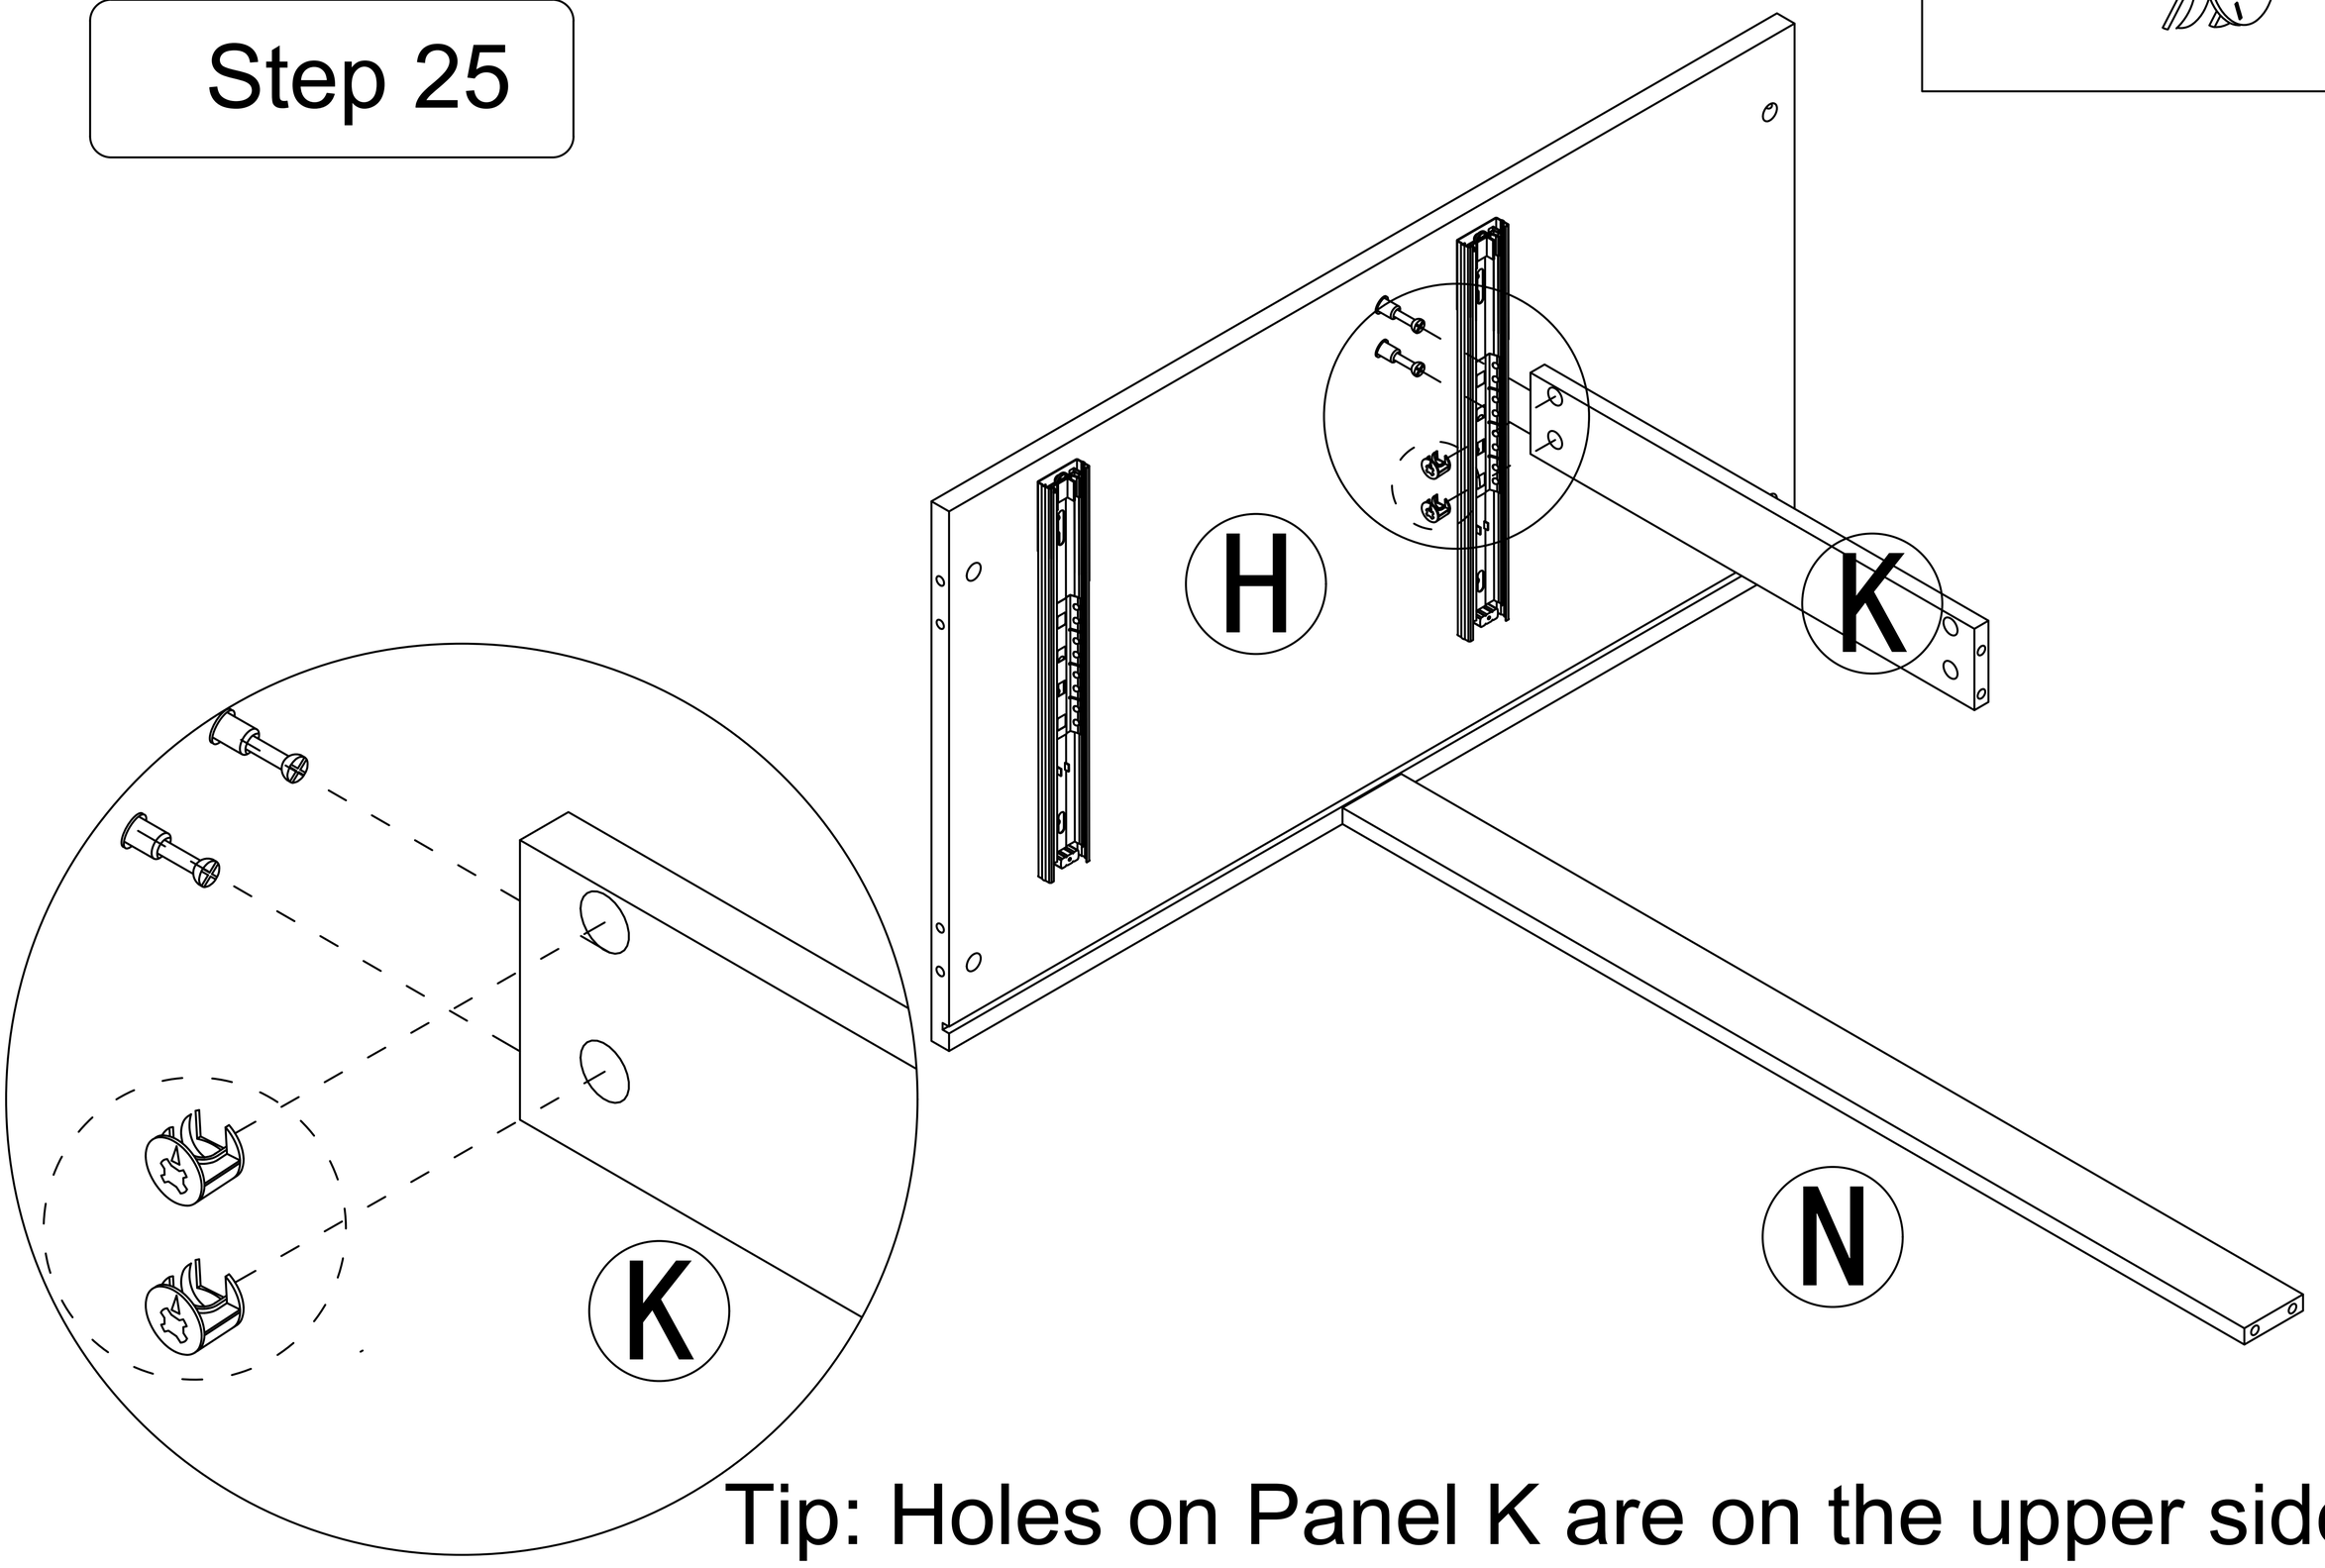


Tip: Holes on Panel K are on the upper side

Step 26

2




x2

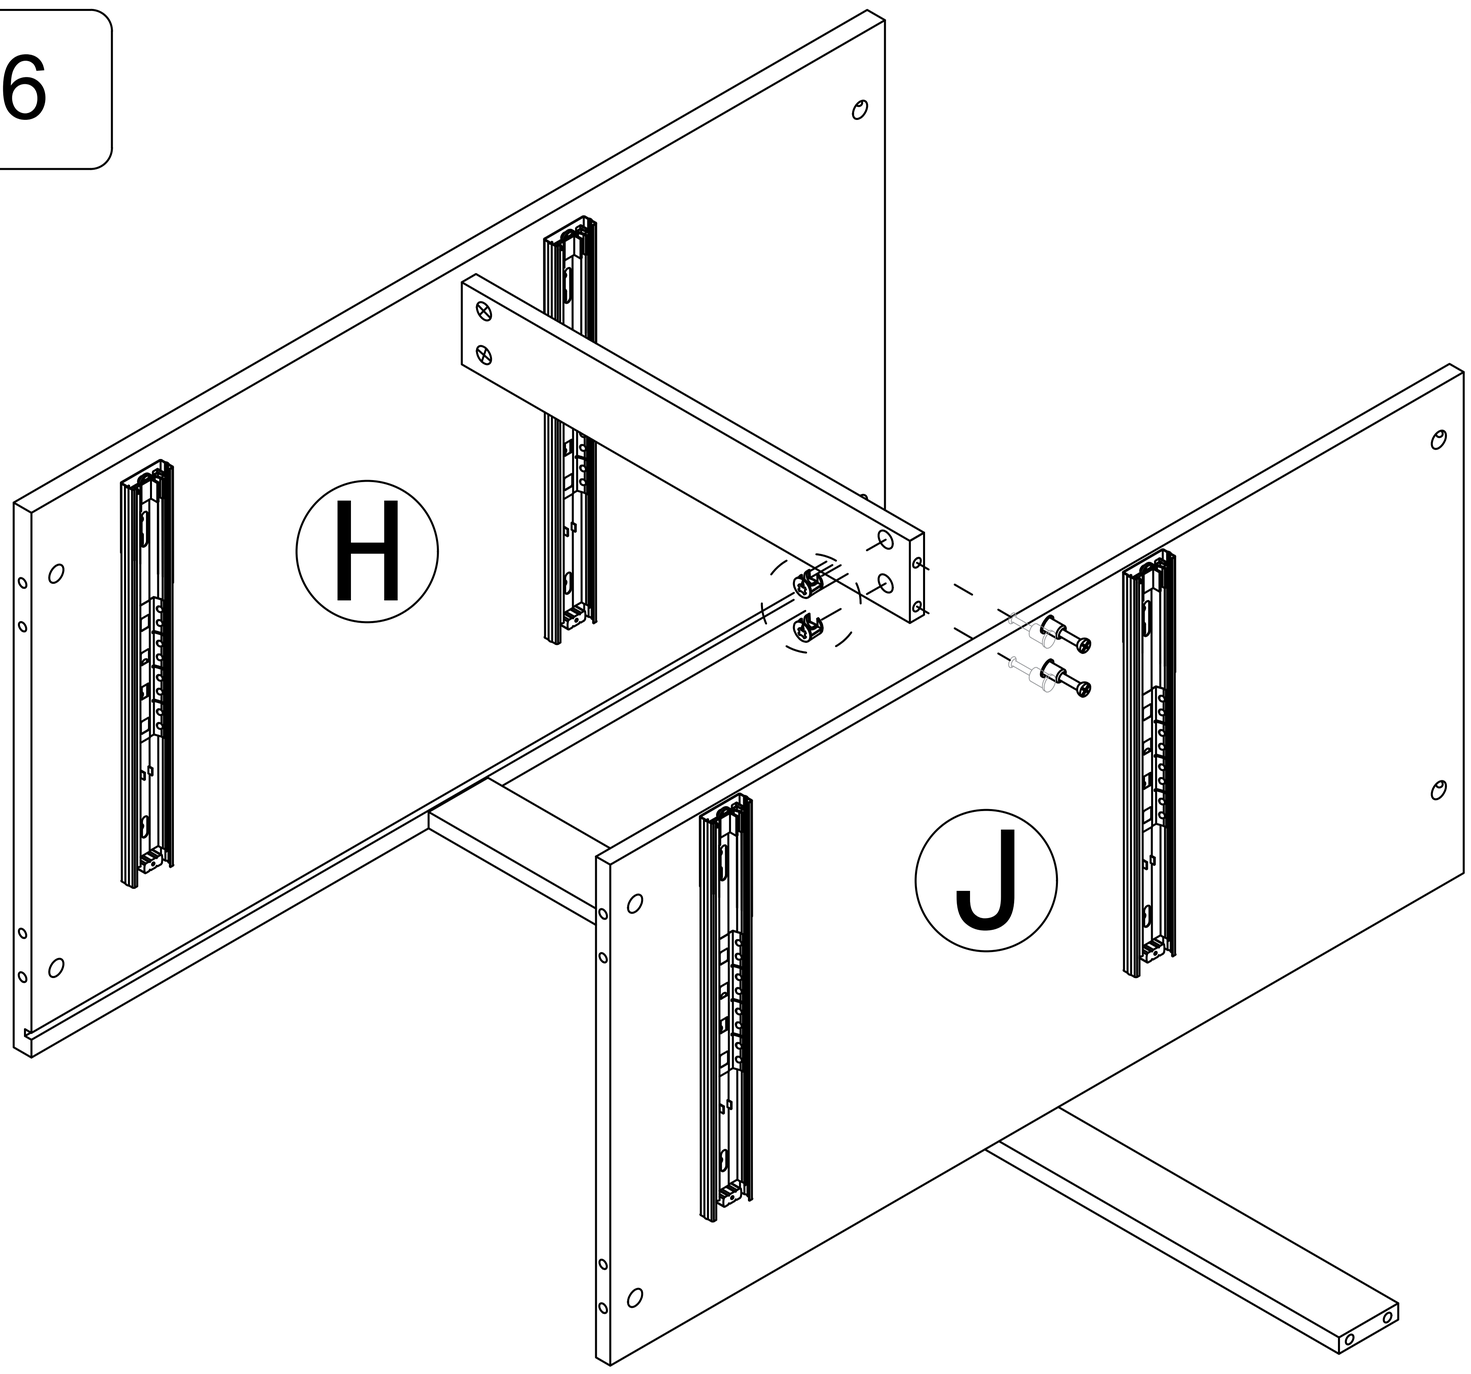

Step 27

2 x2

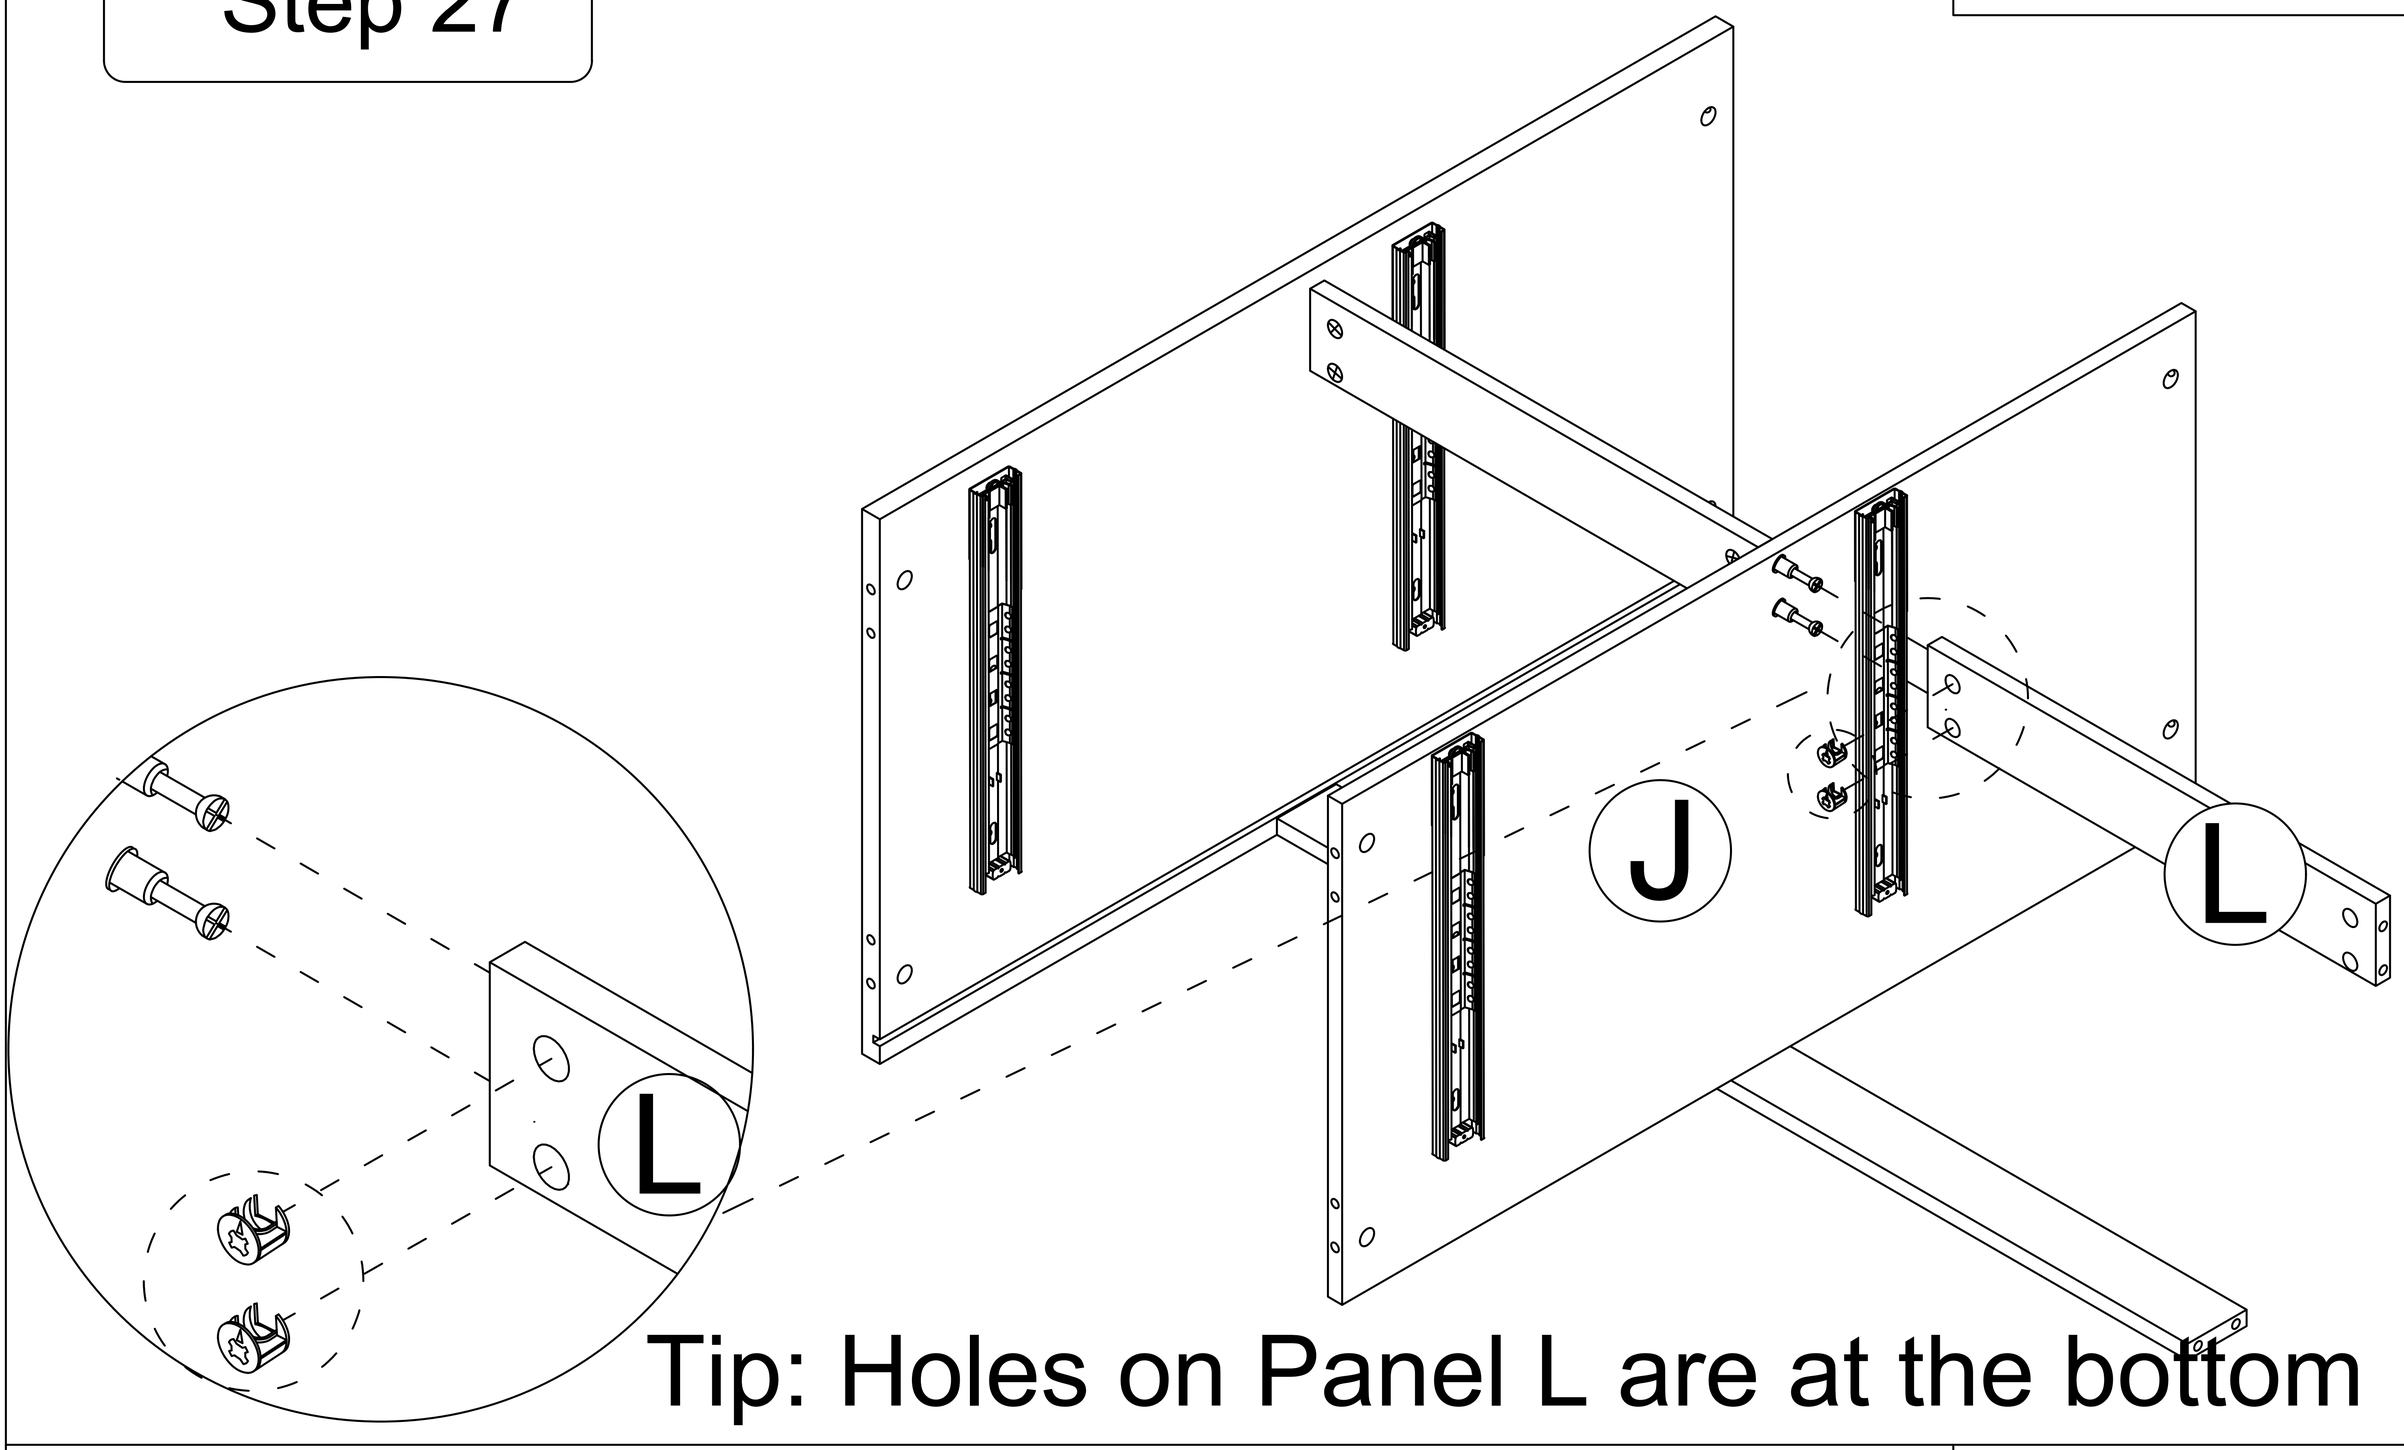


Tip: Holes on Panel L are at the bottom

Step 28


2 x4

8 x2

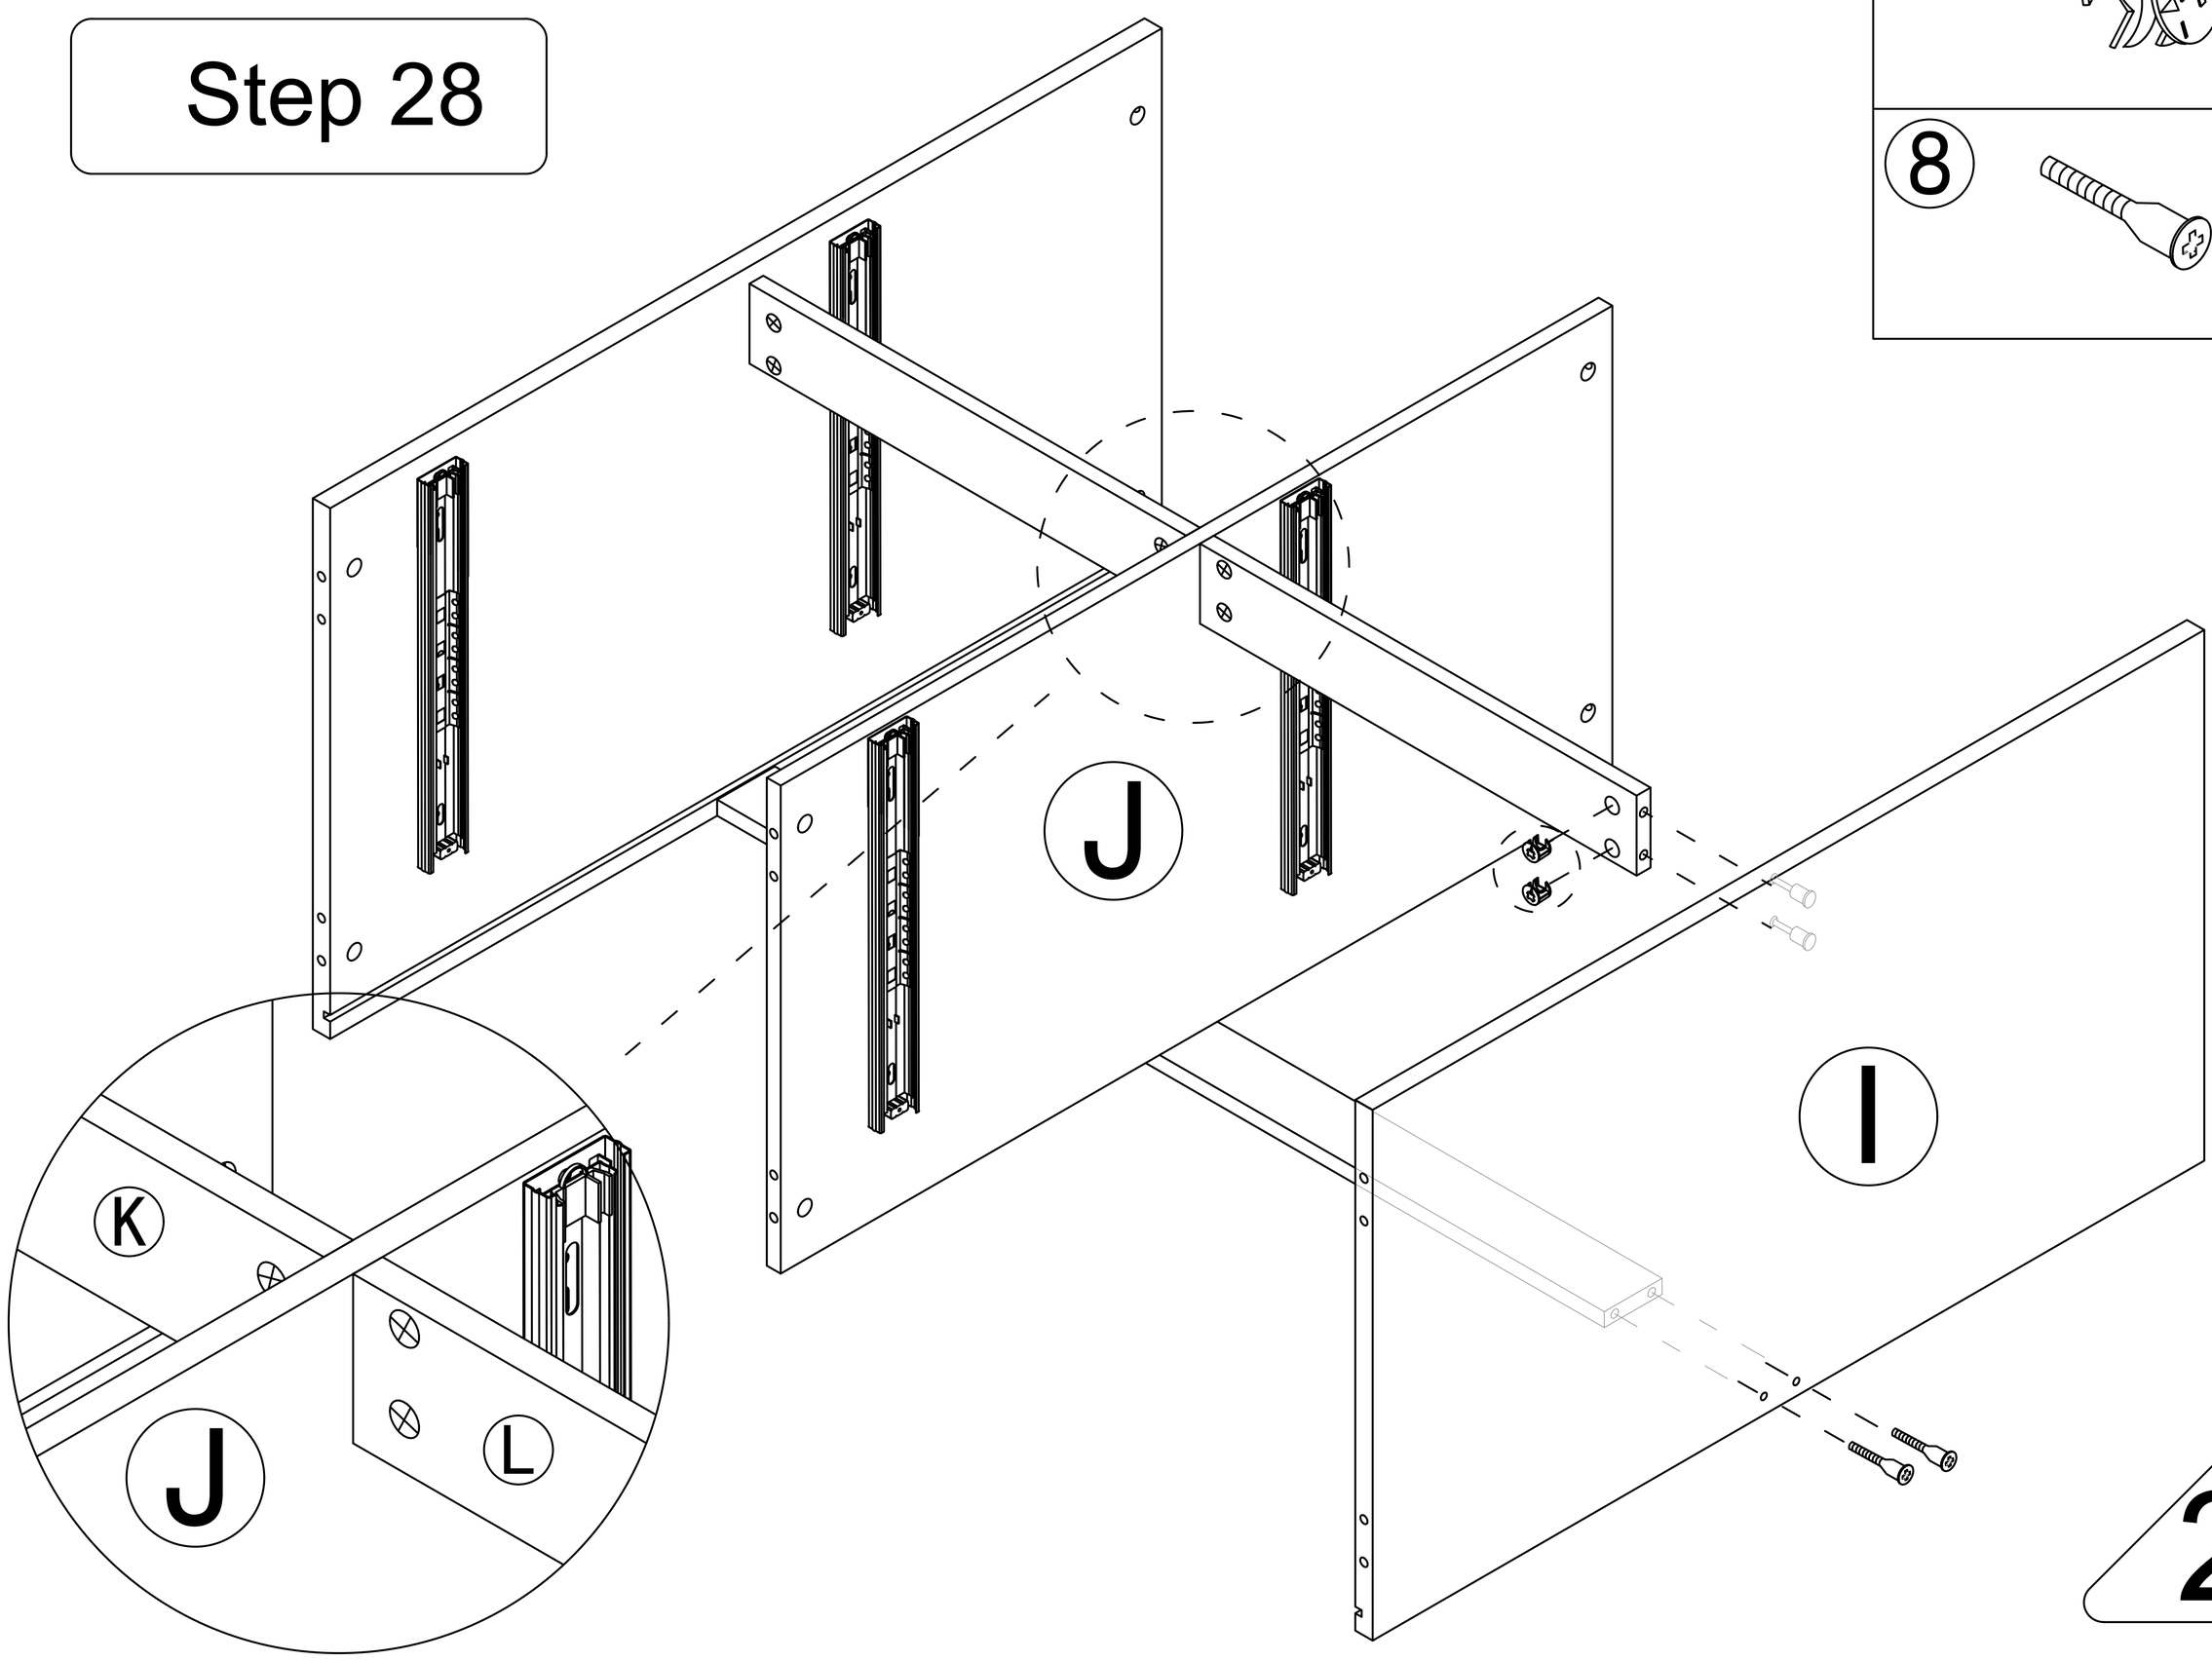

Step 29




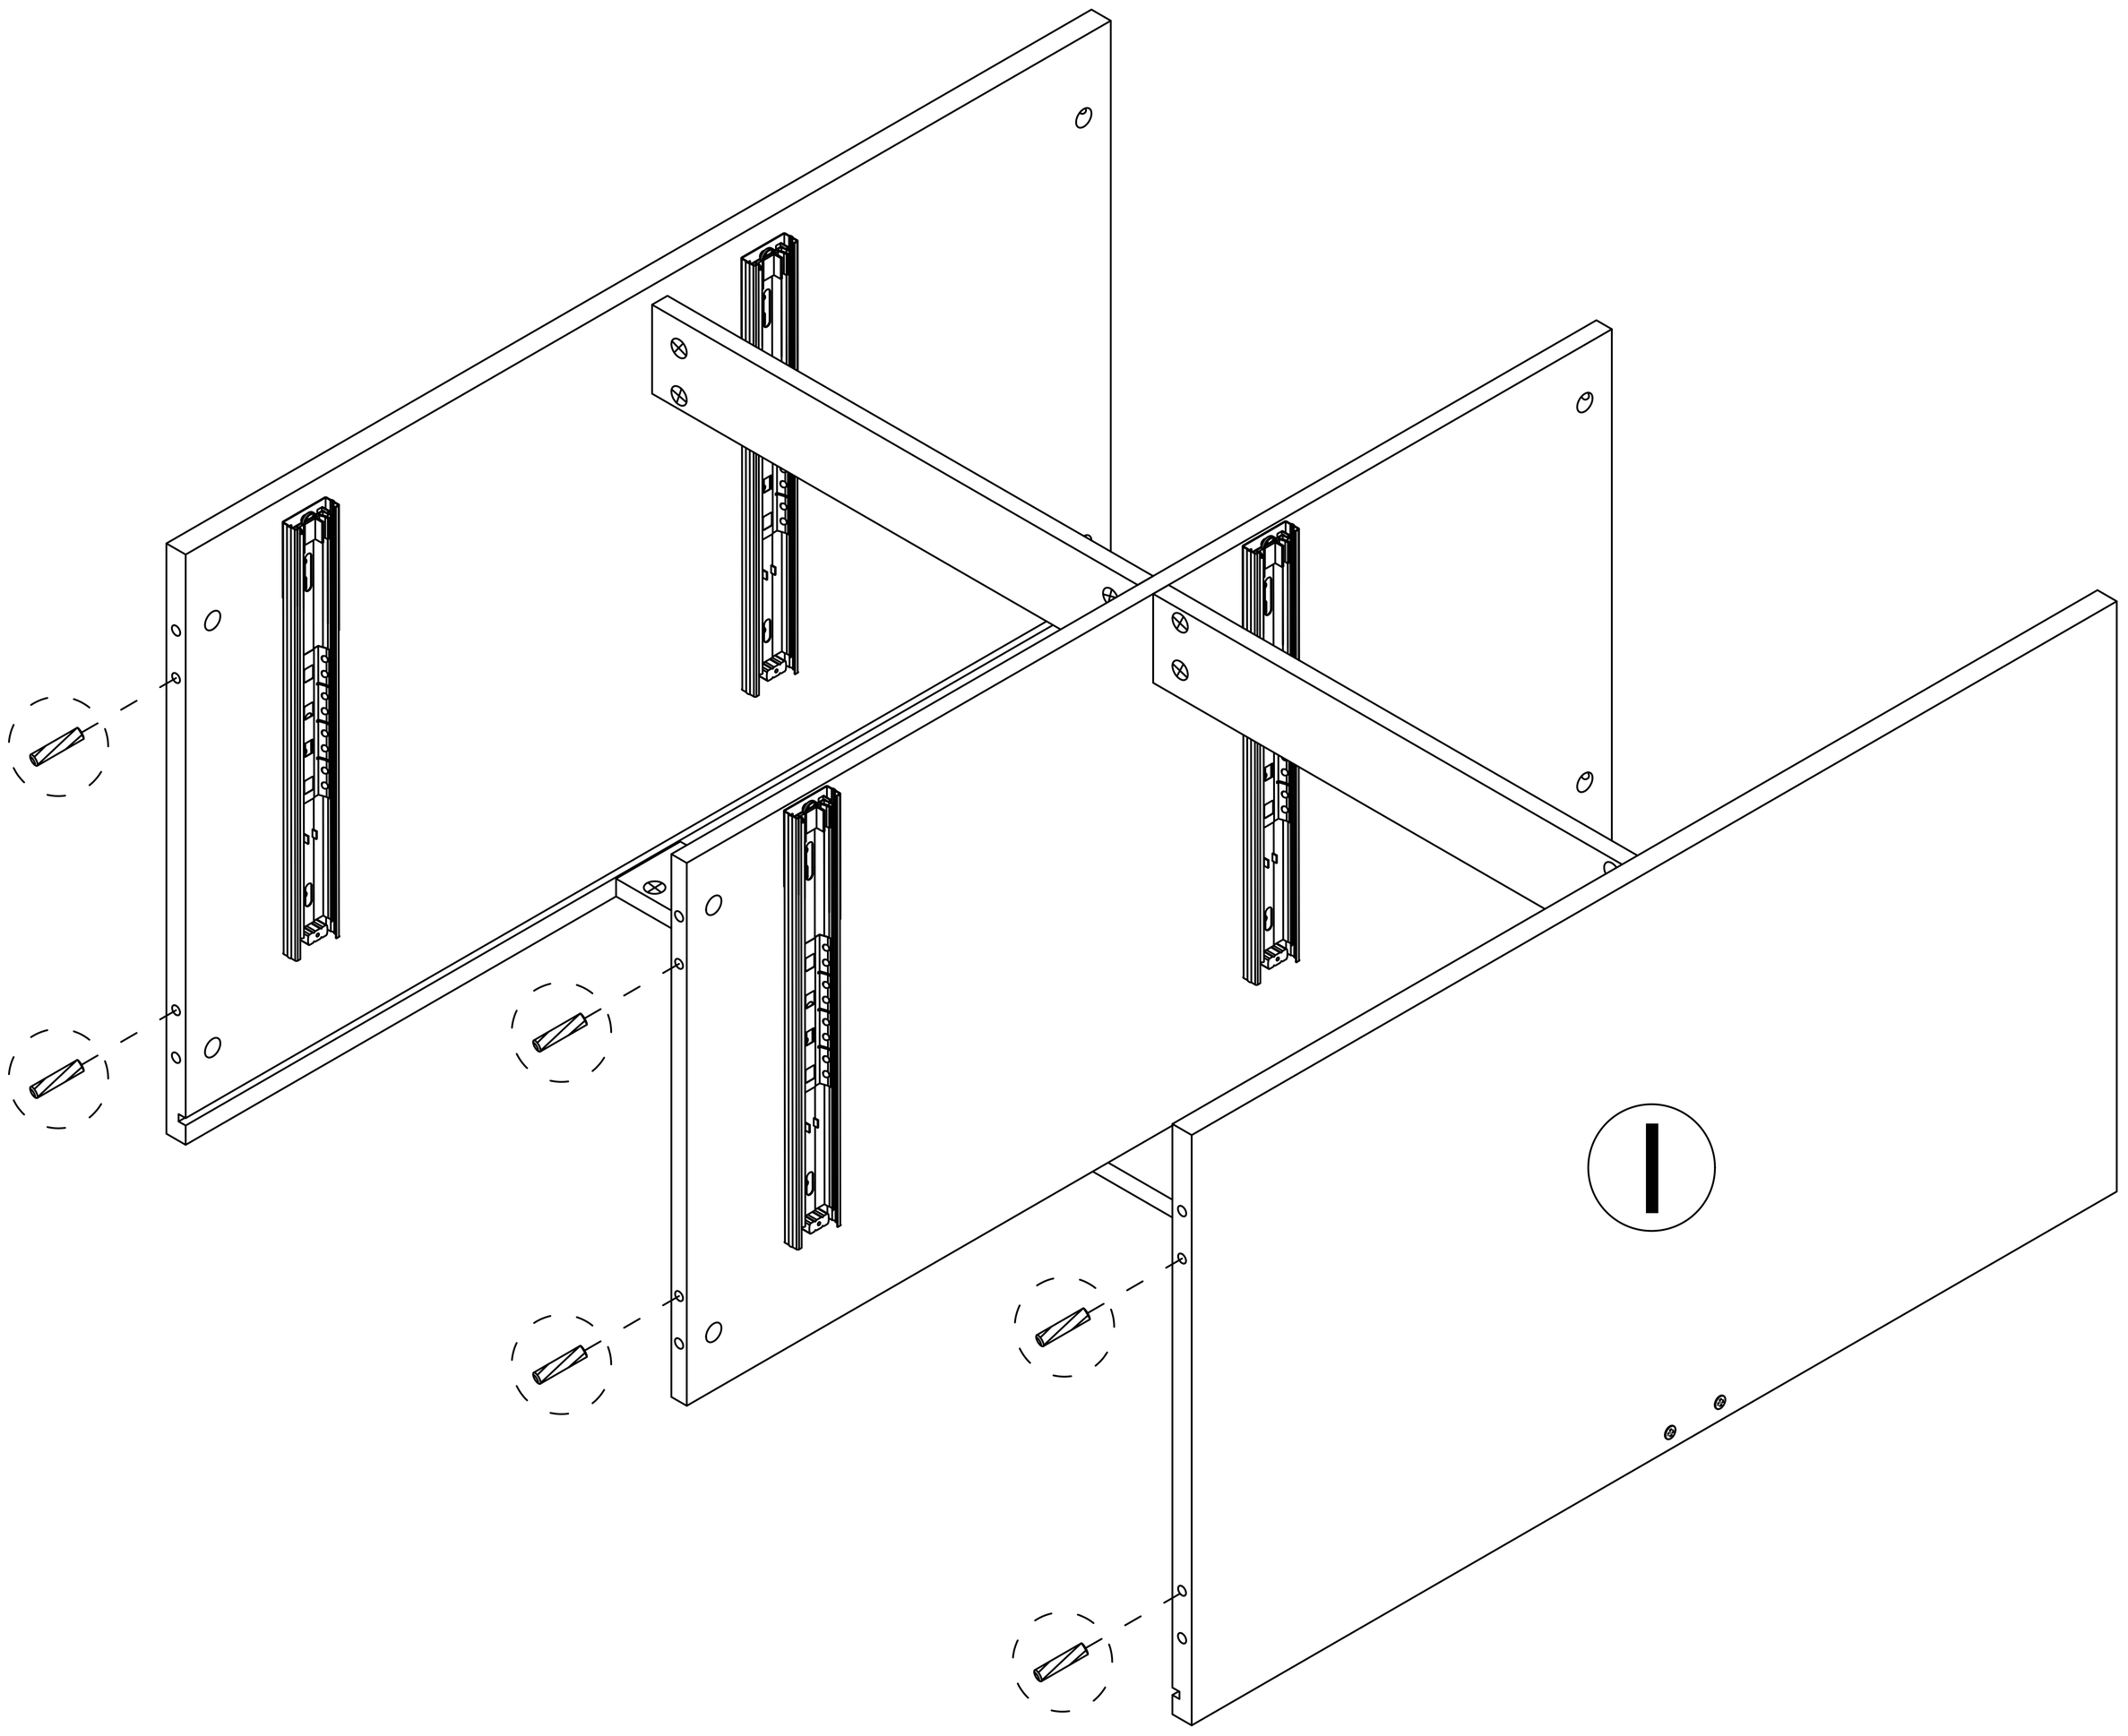

Step 30





x6

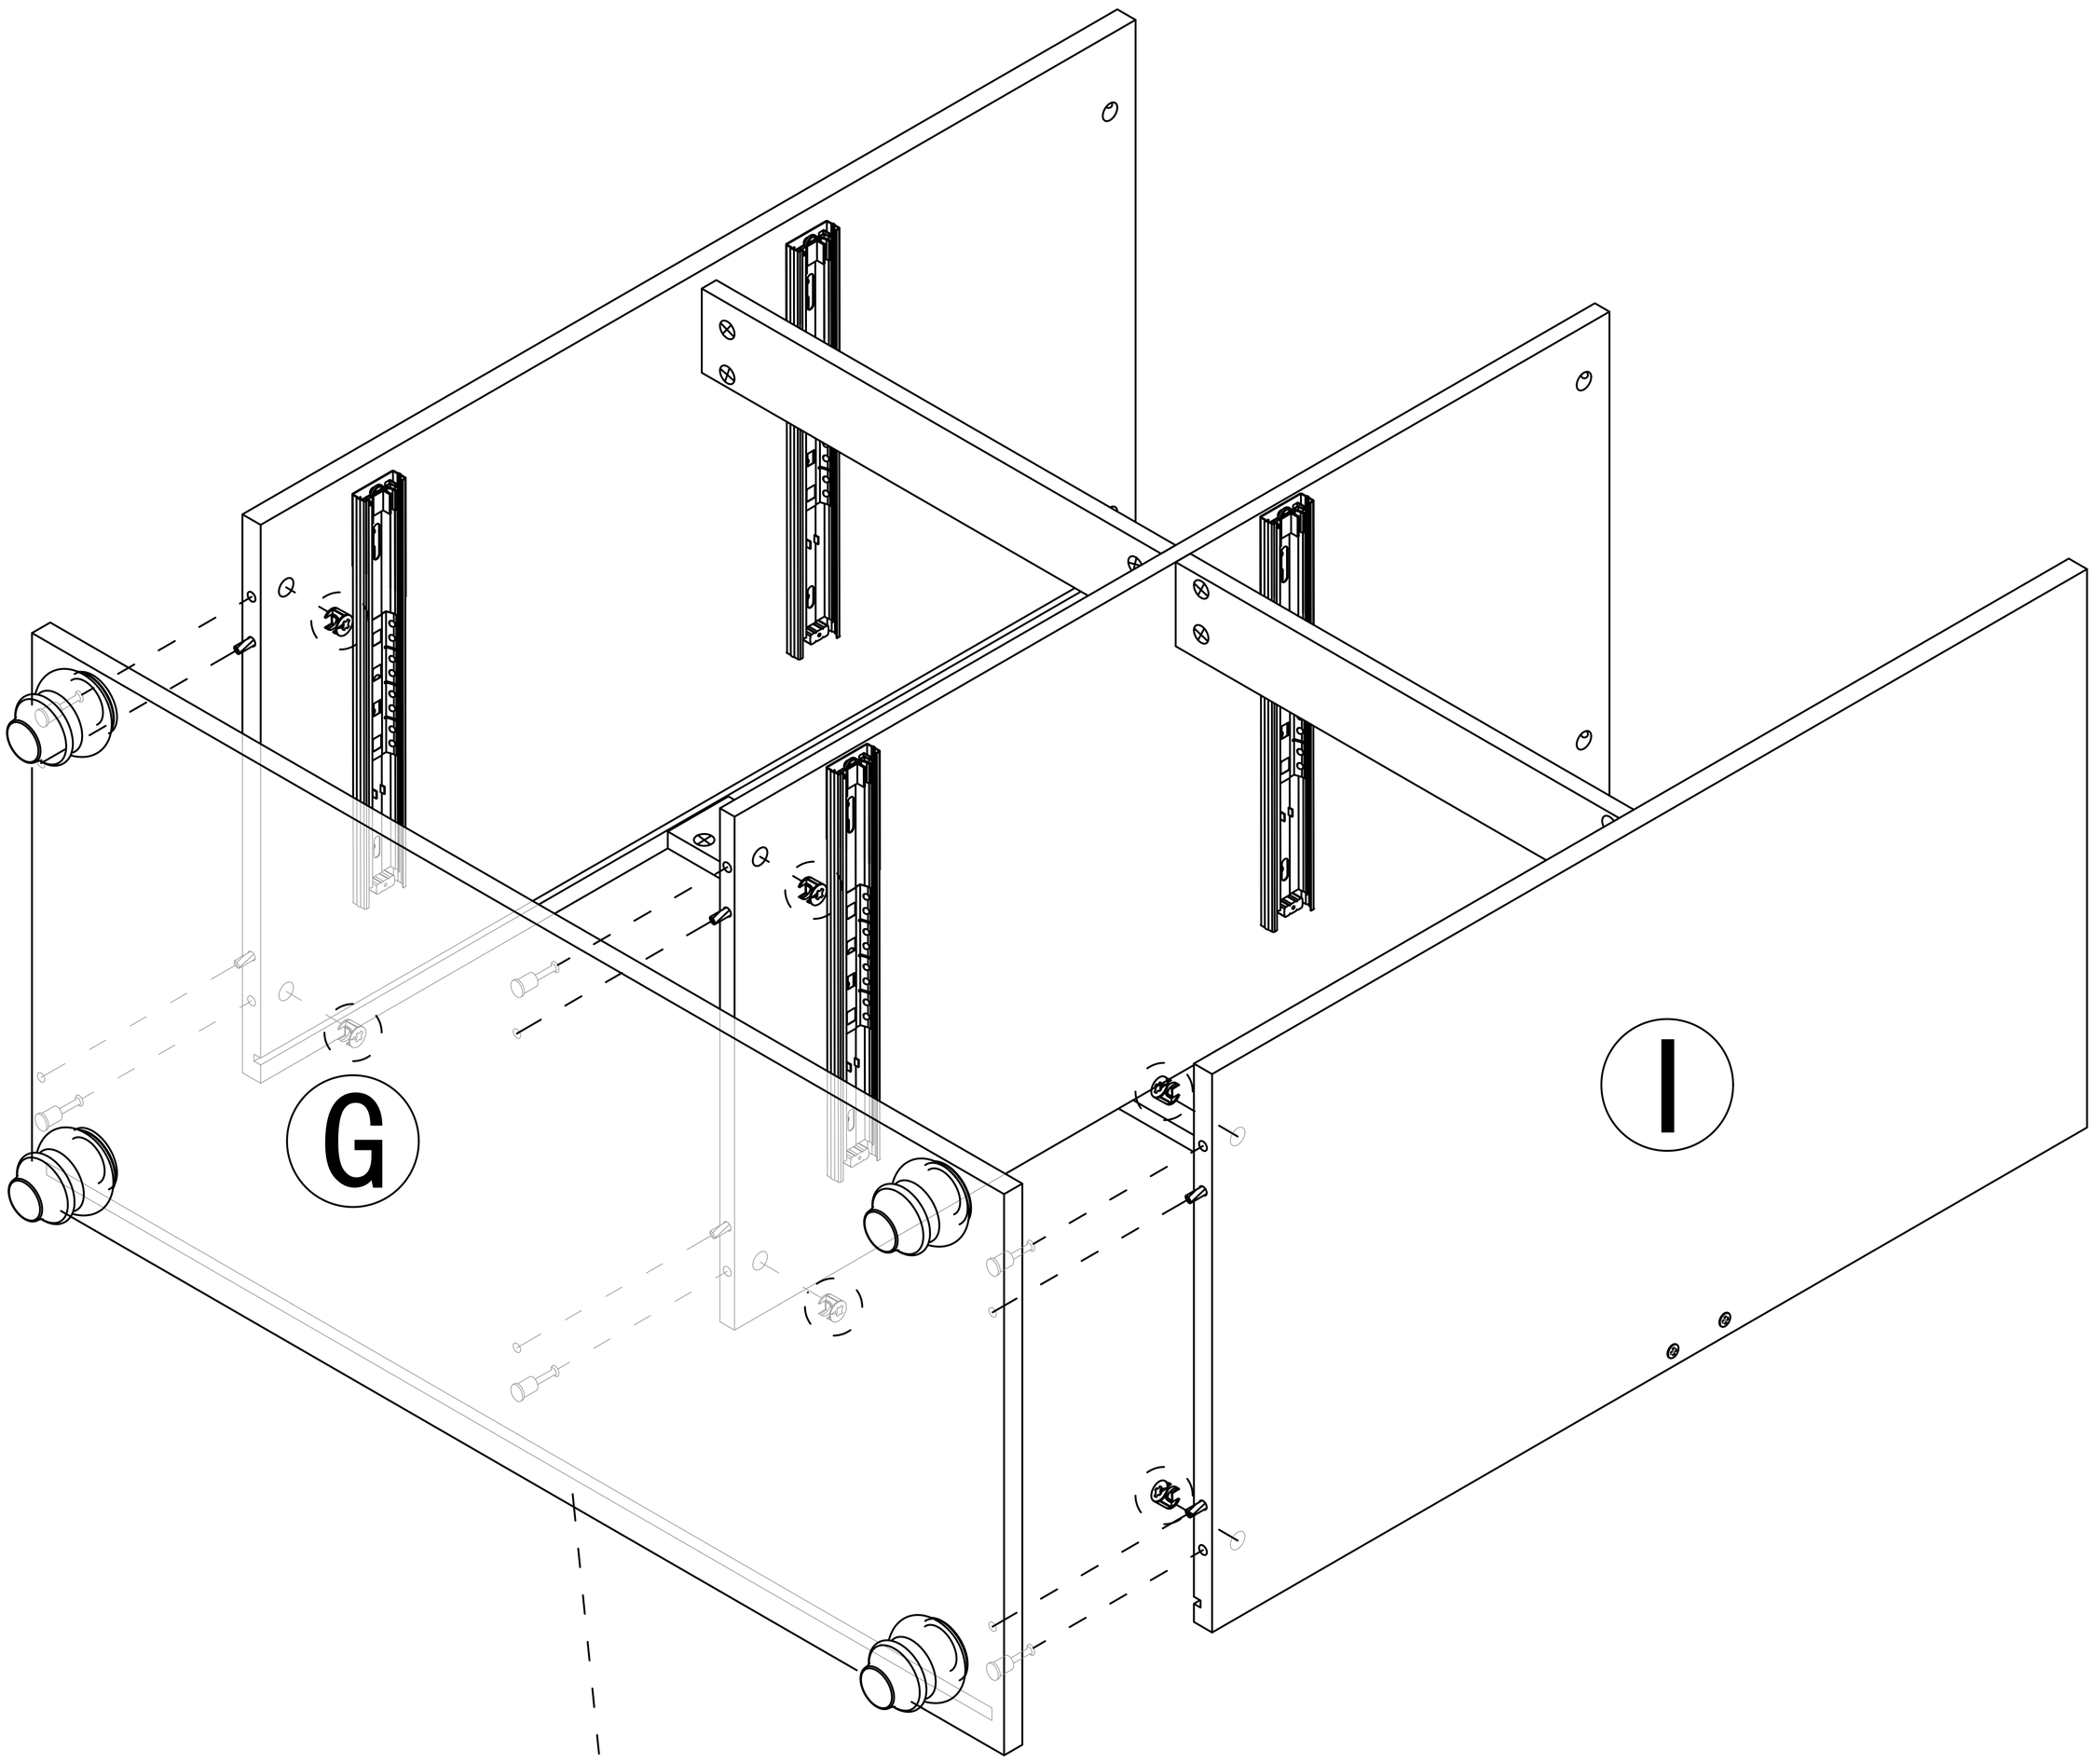


When installing the G board, pay attention to align the slot.


Step 31

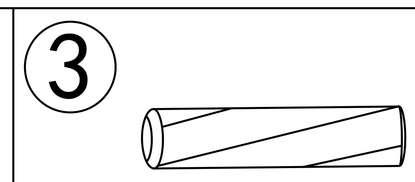

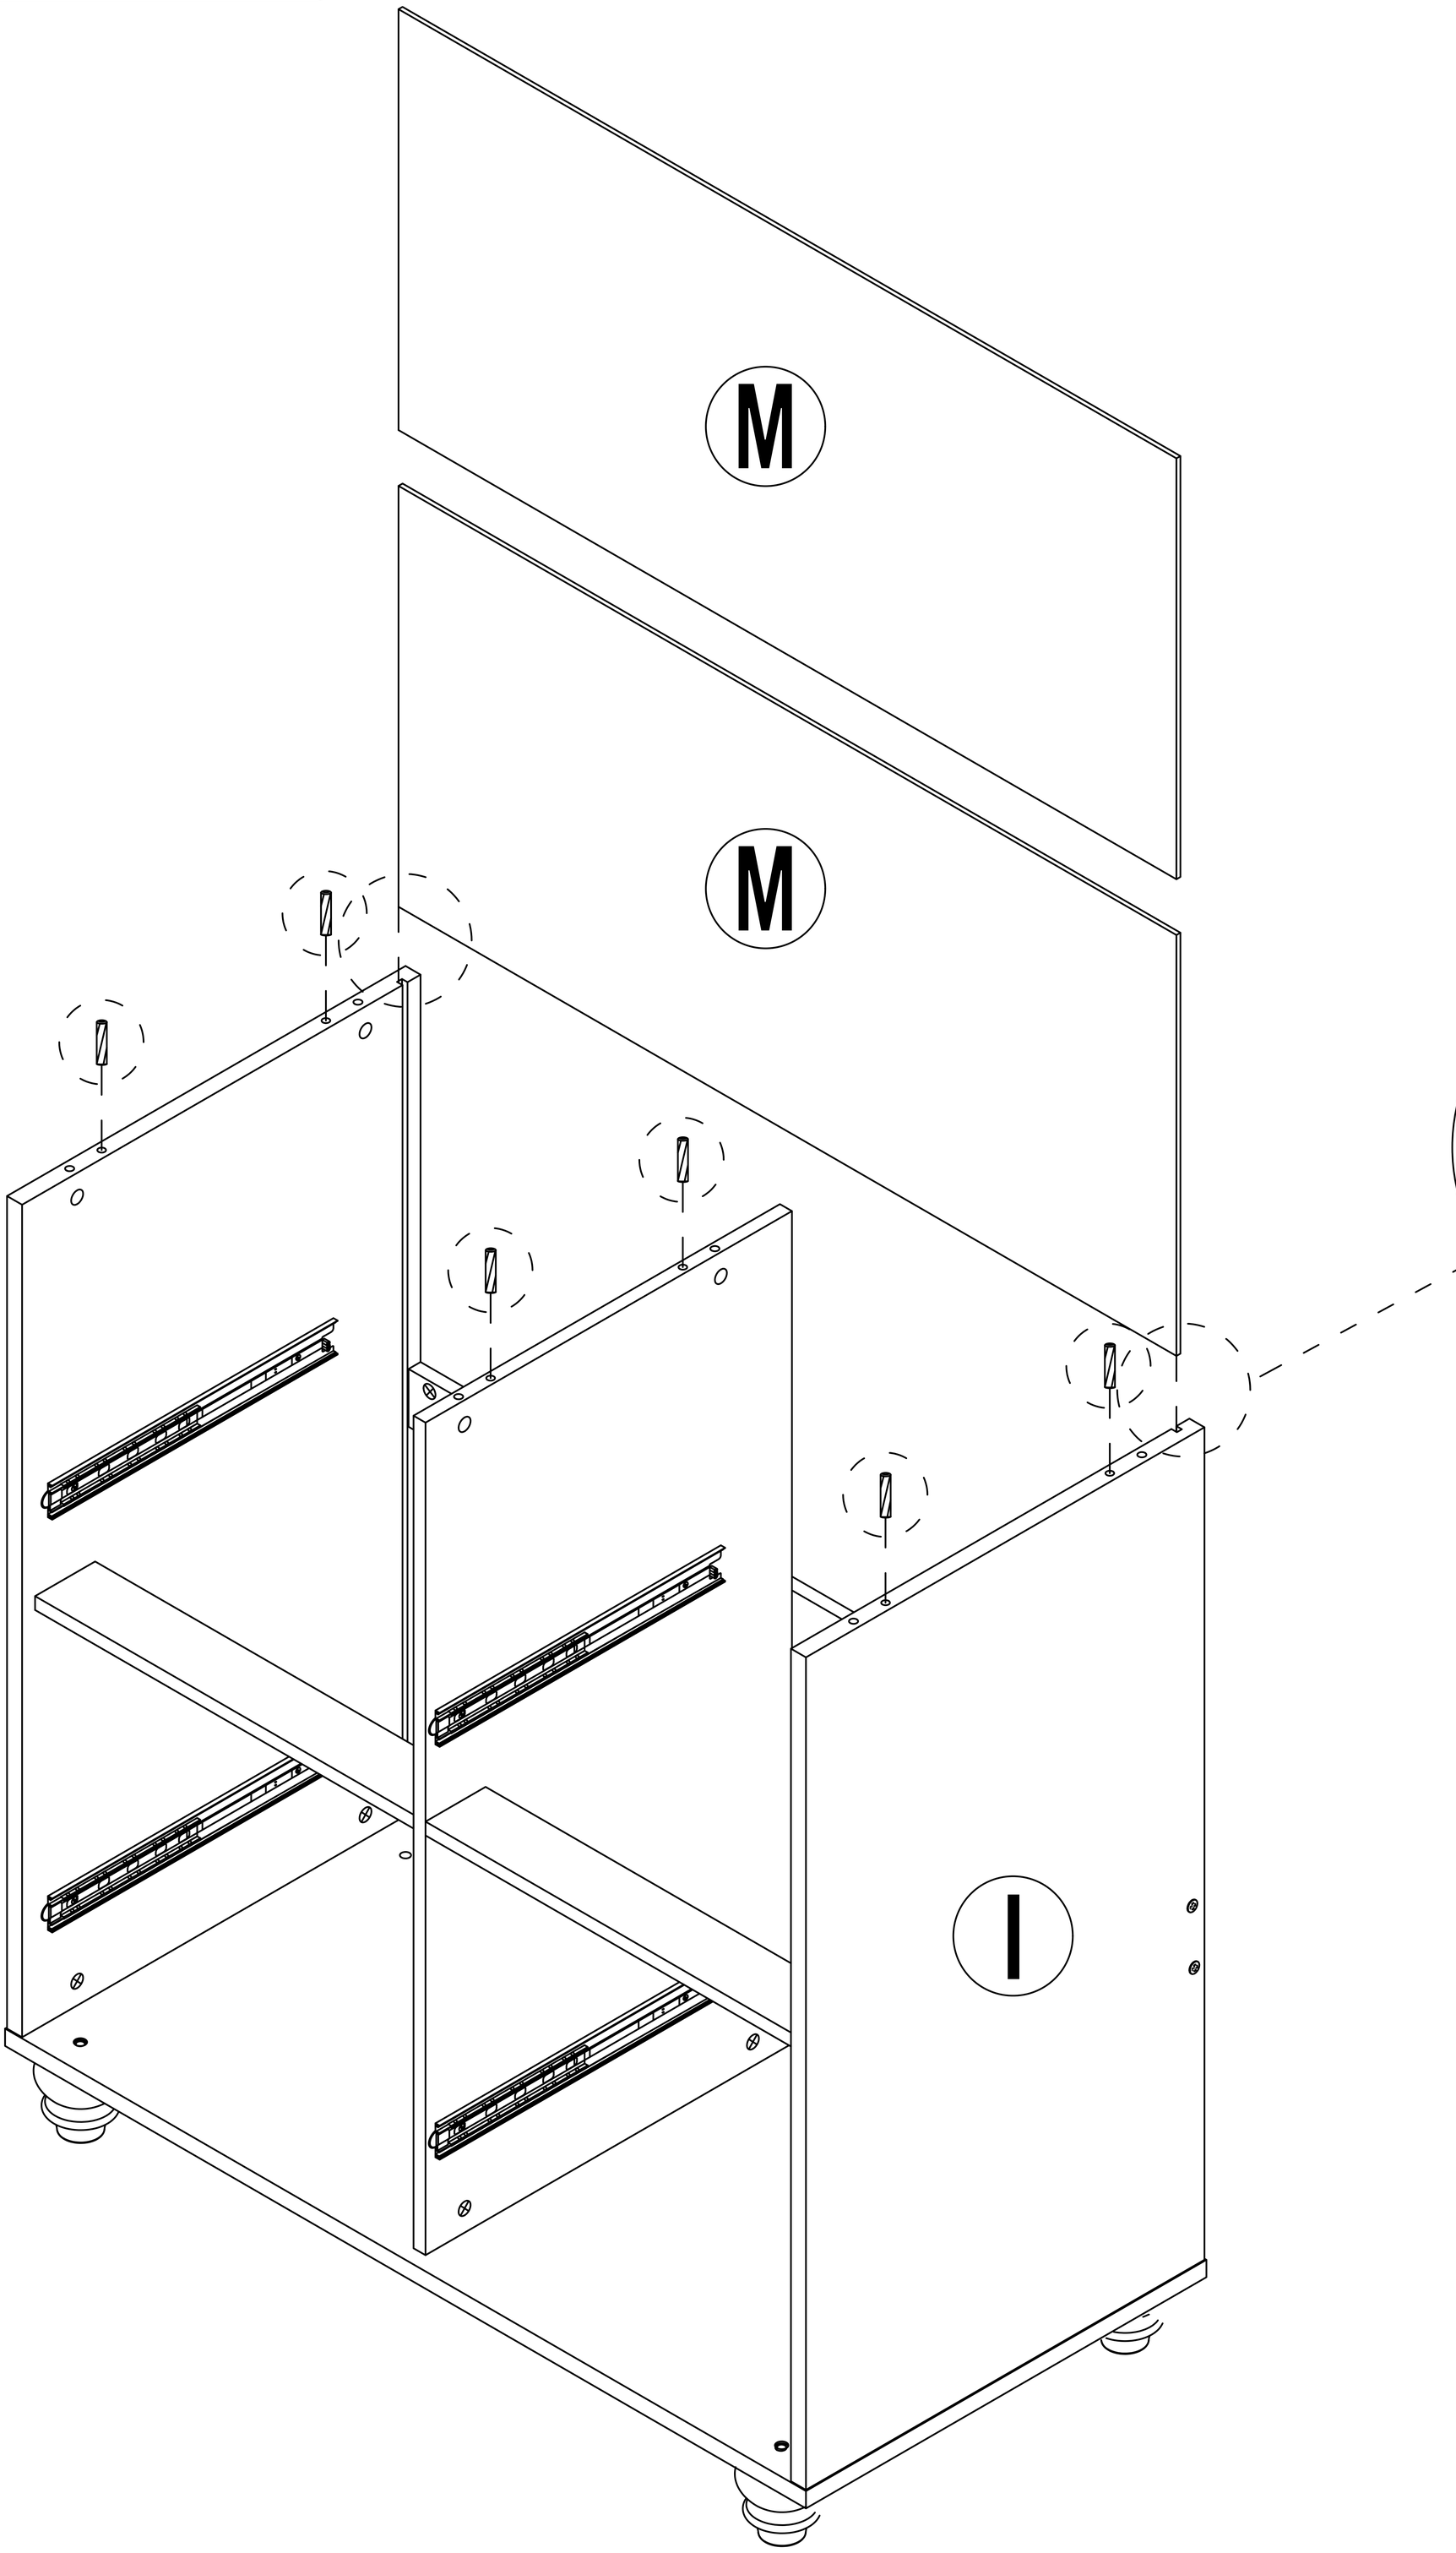


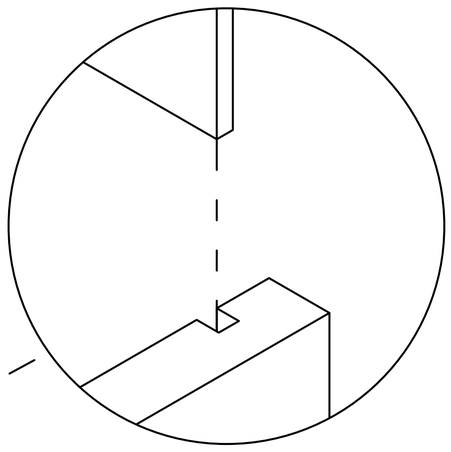

Step 32

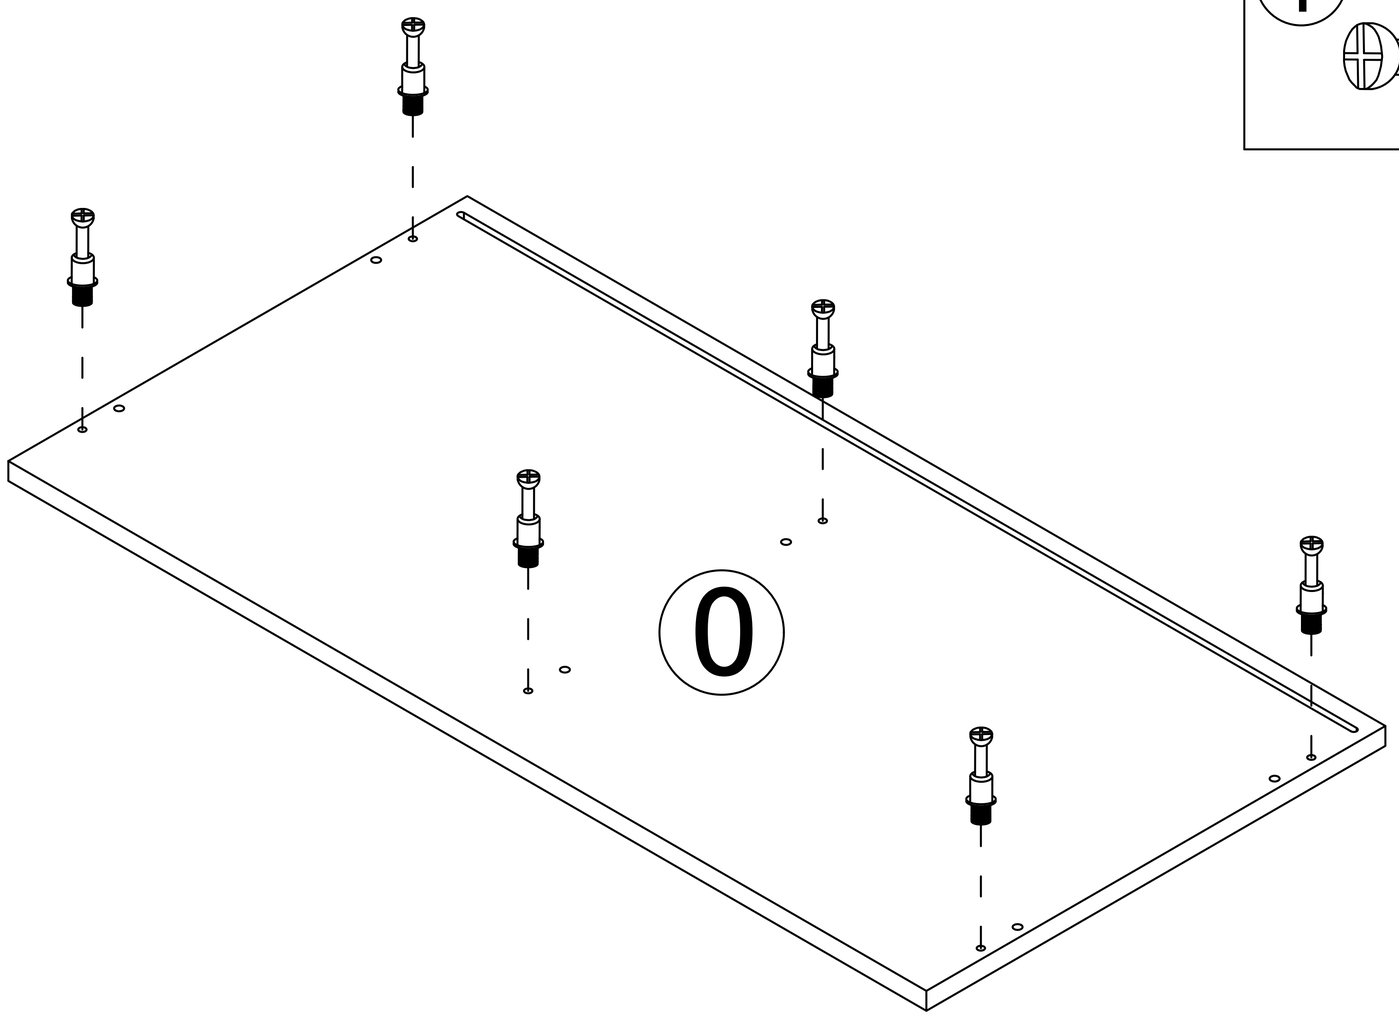


1

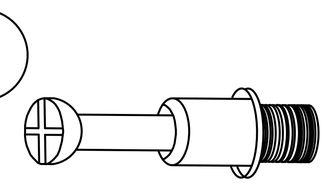

x6

Step 33

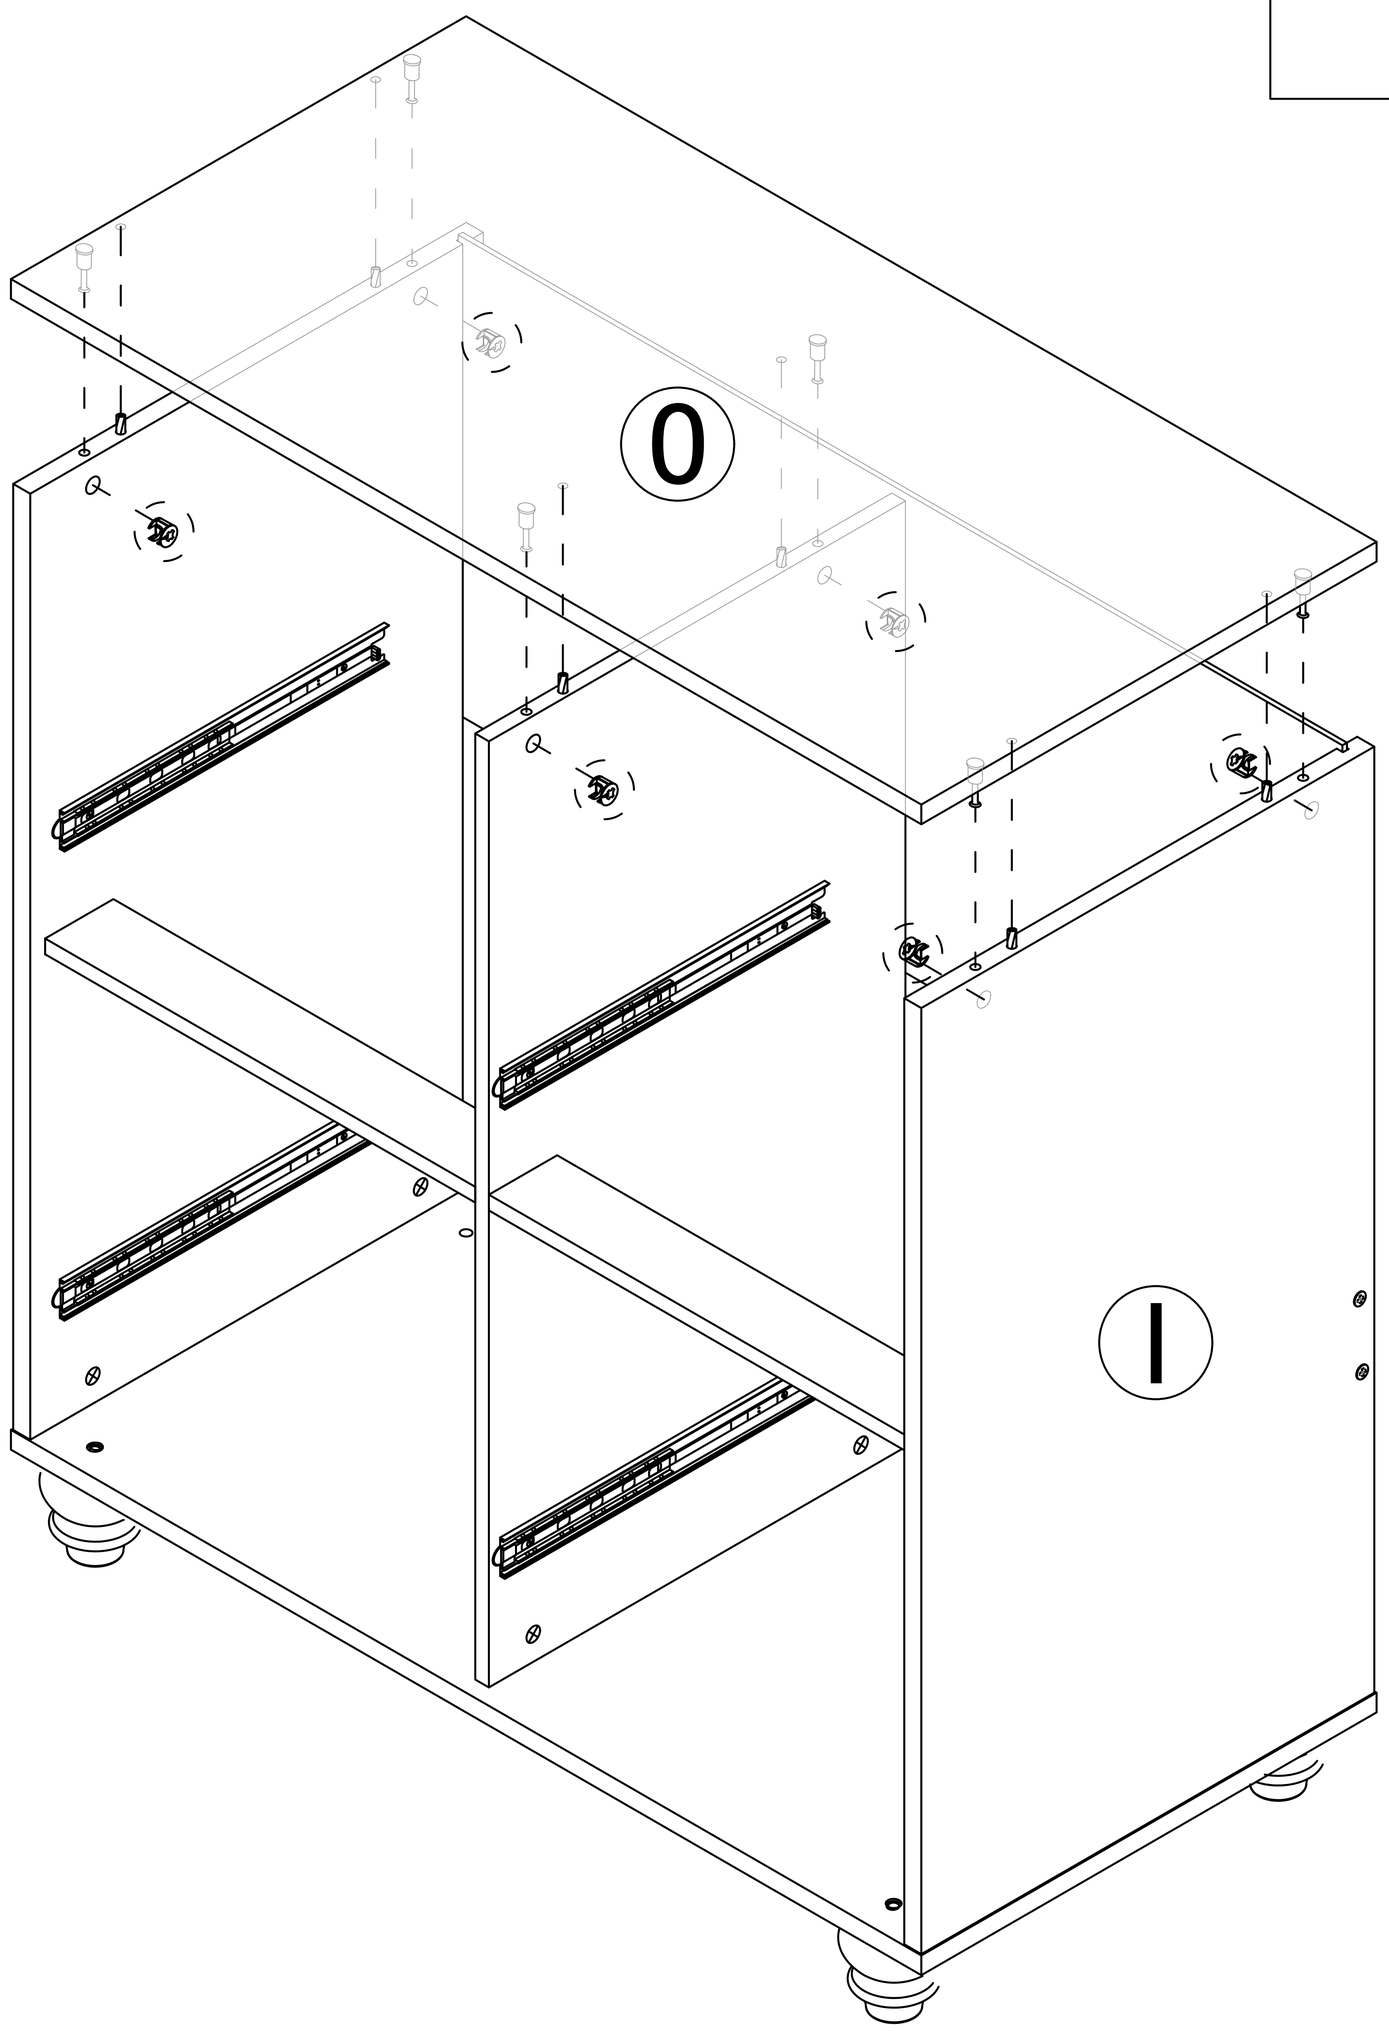


2




x6

Step 34

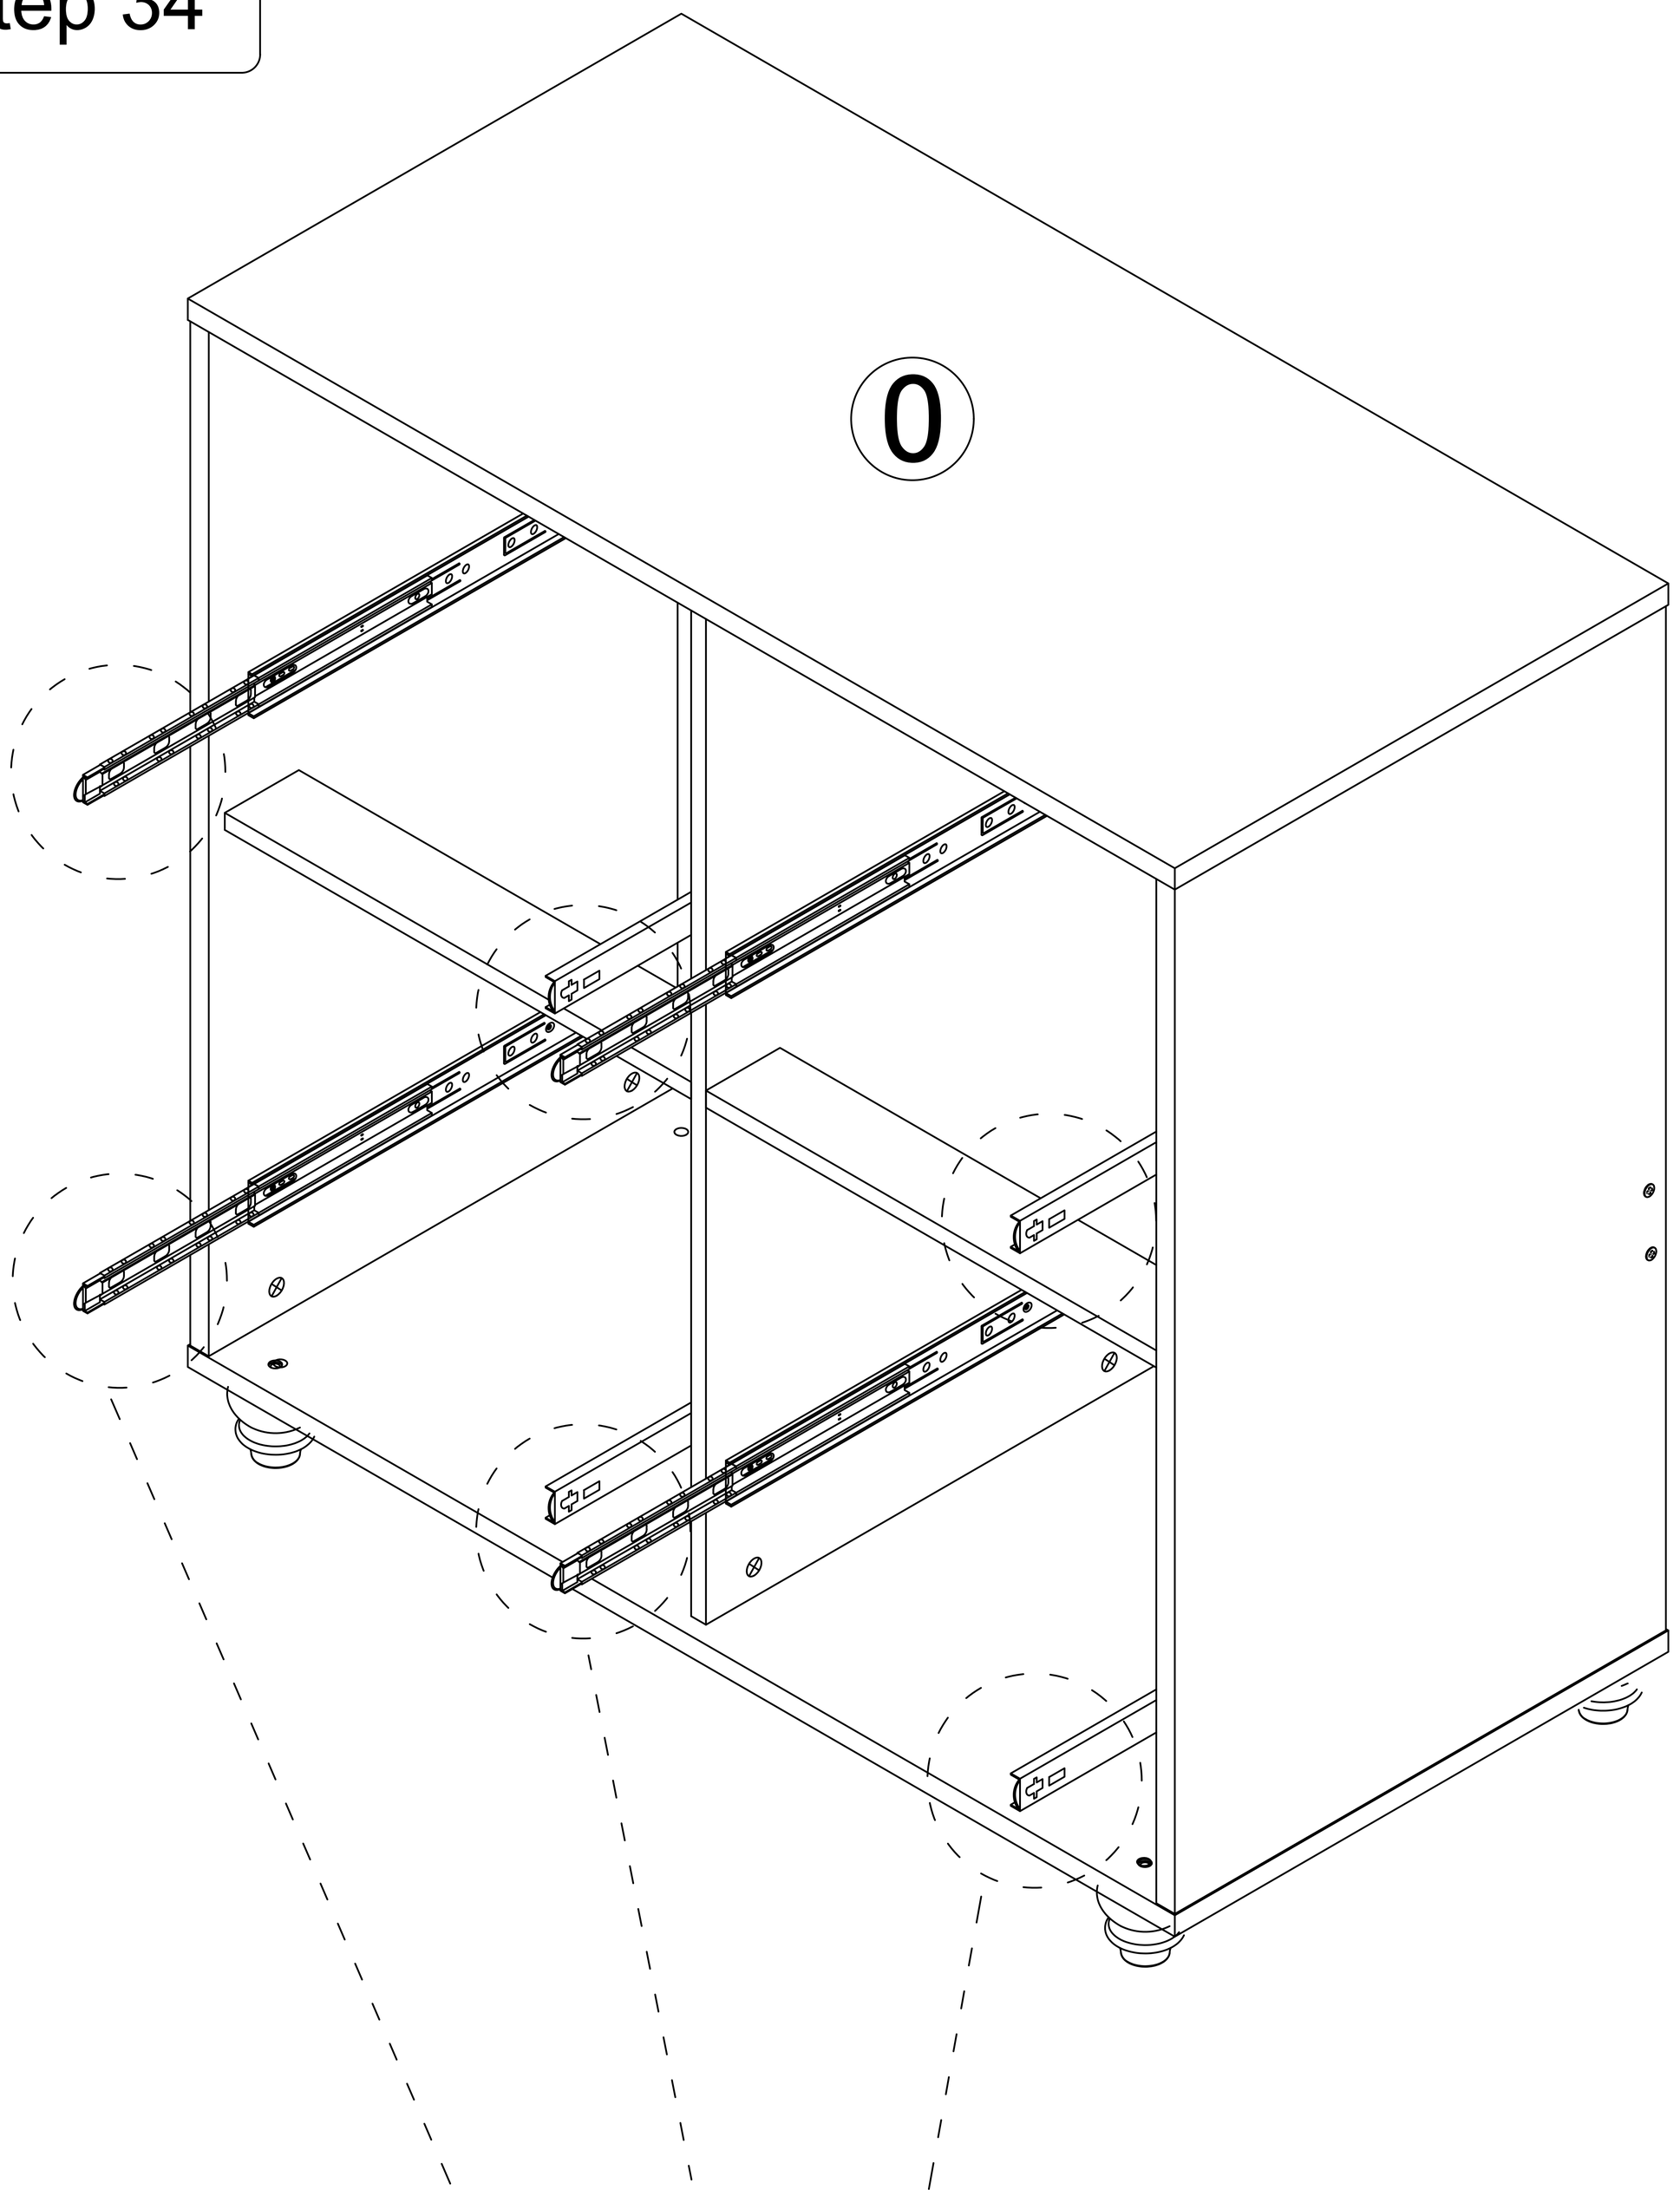


As shown，When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 35

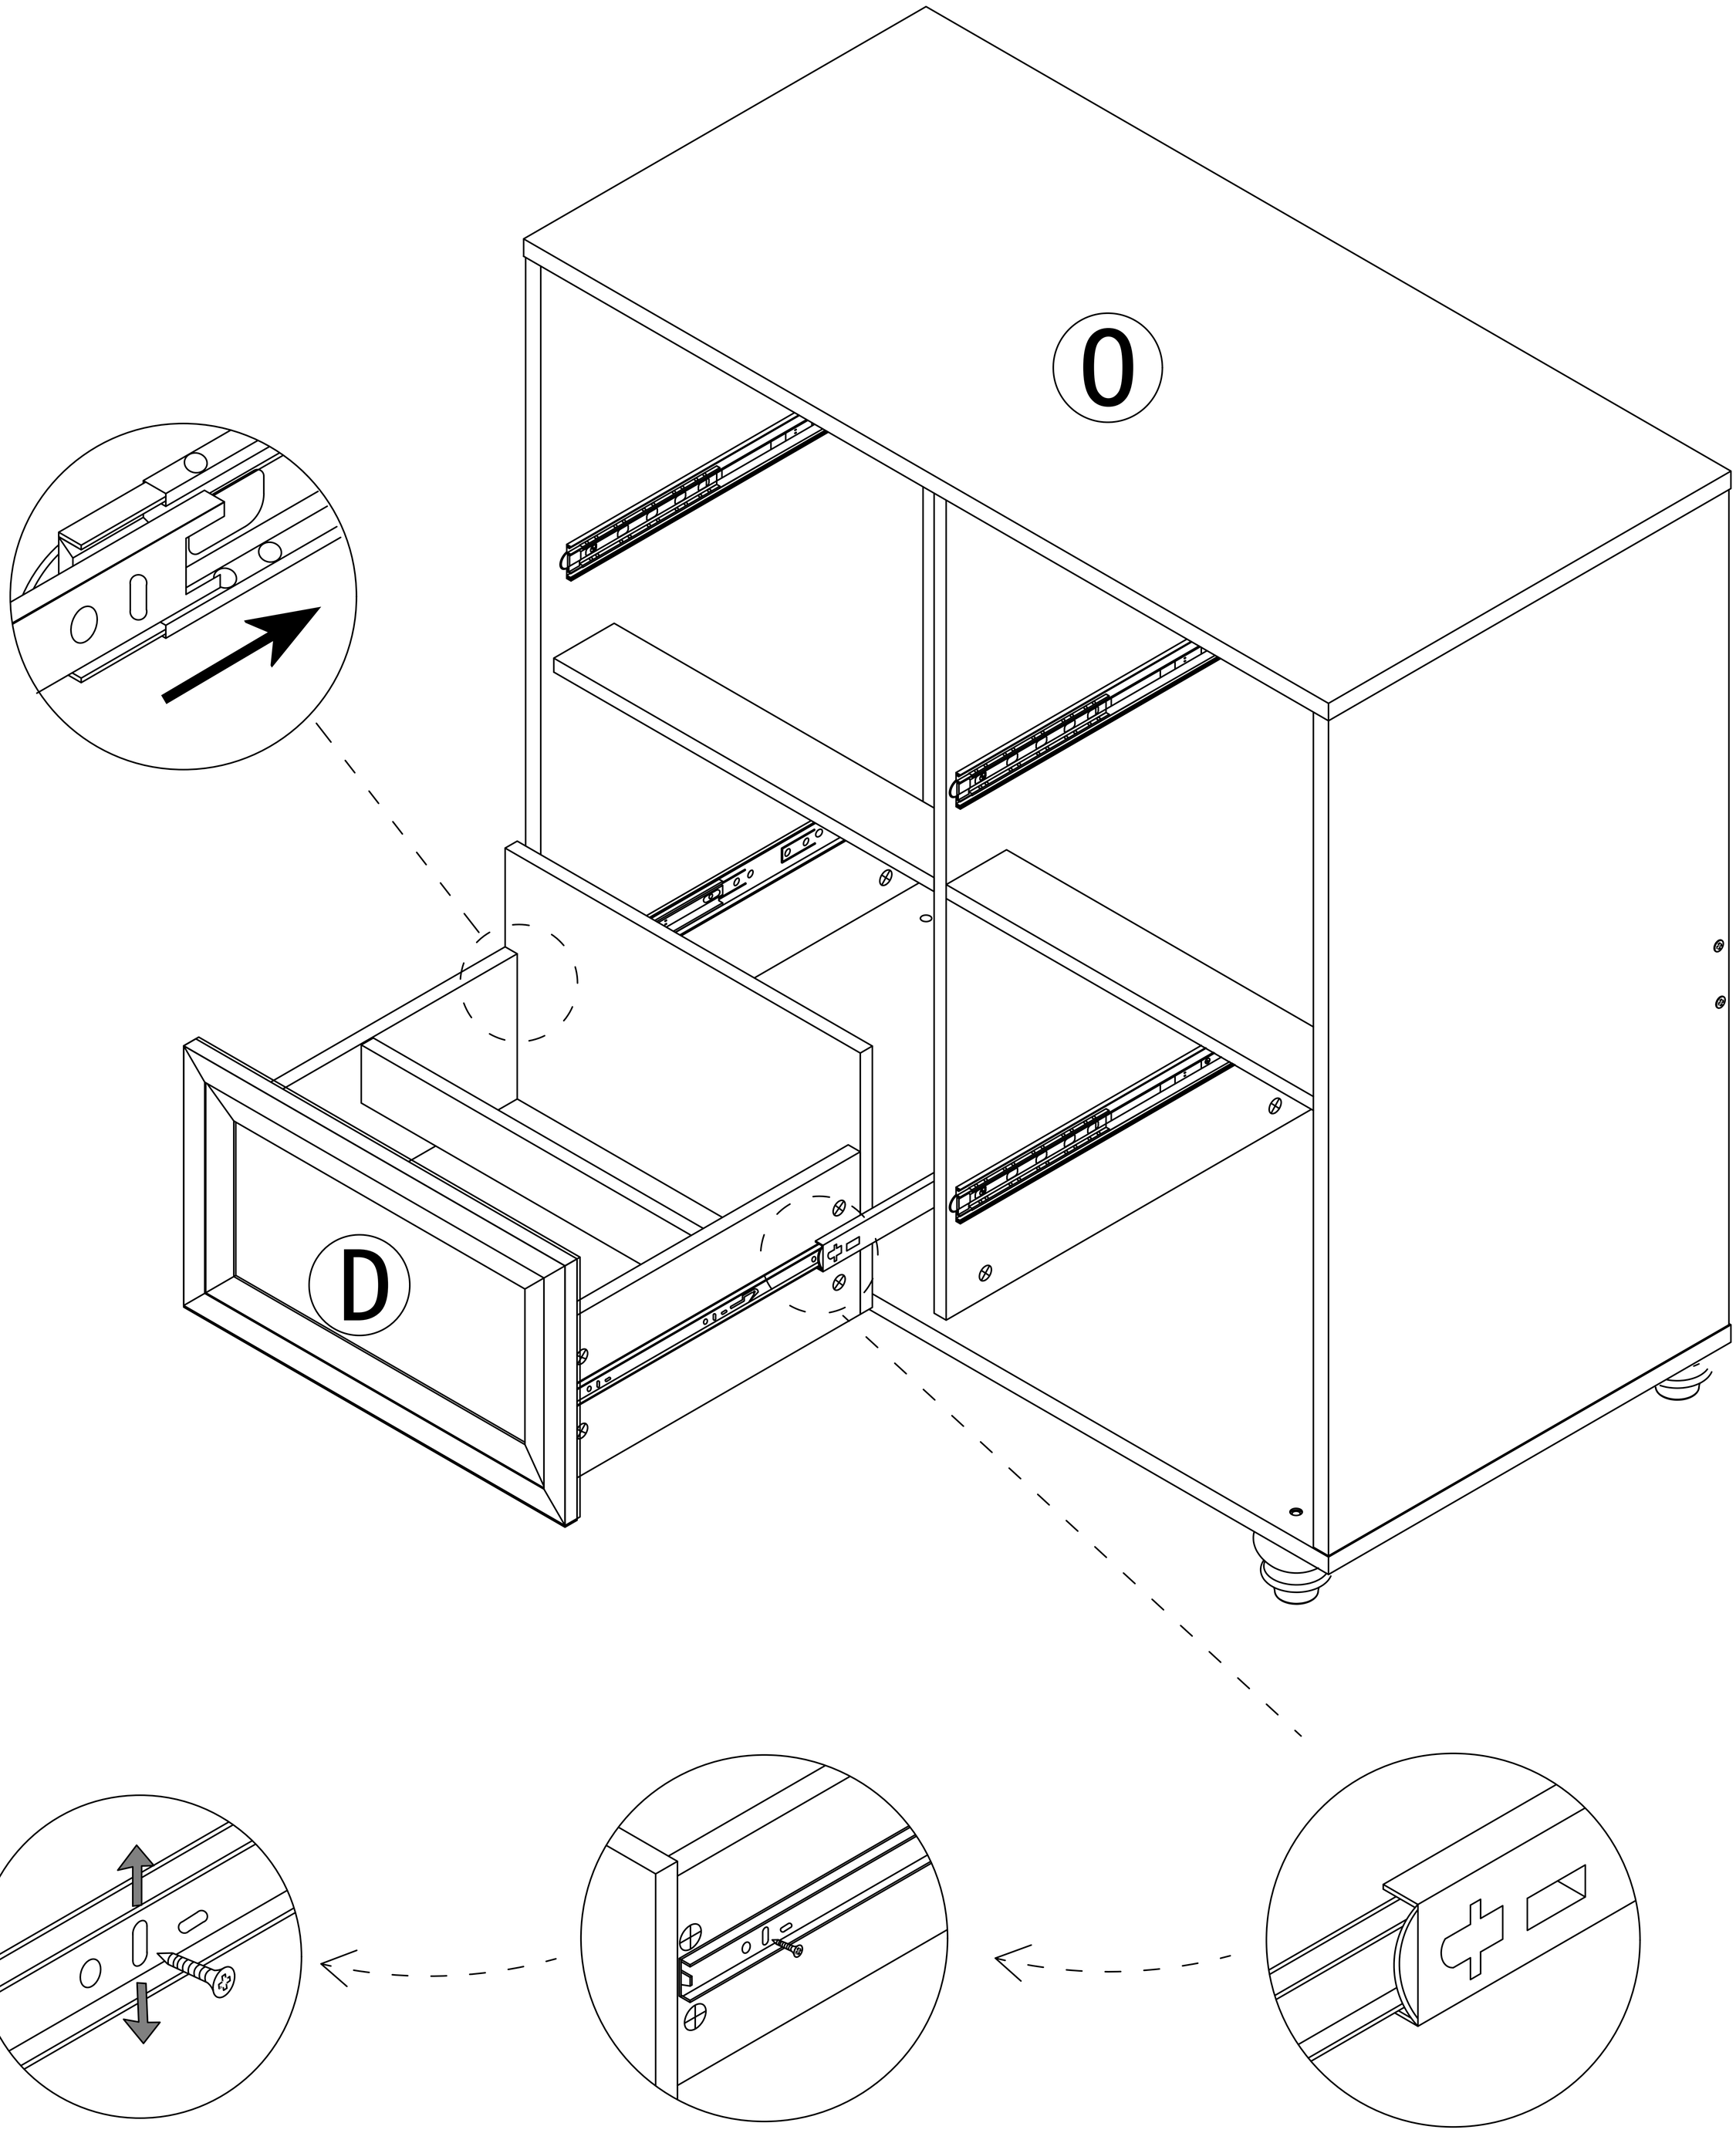

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 36

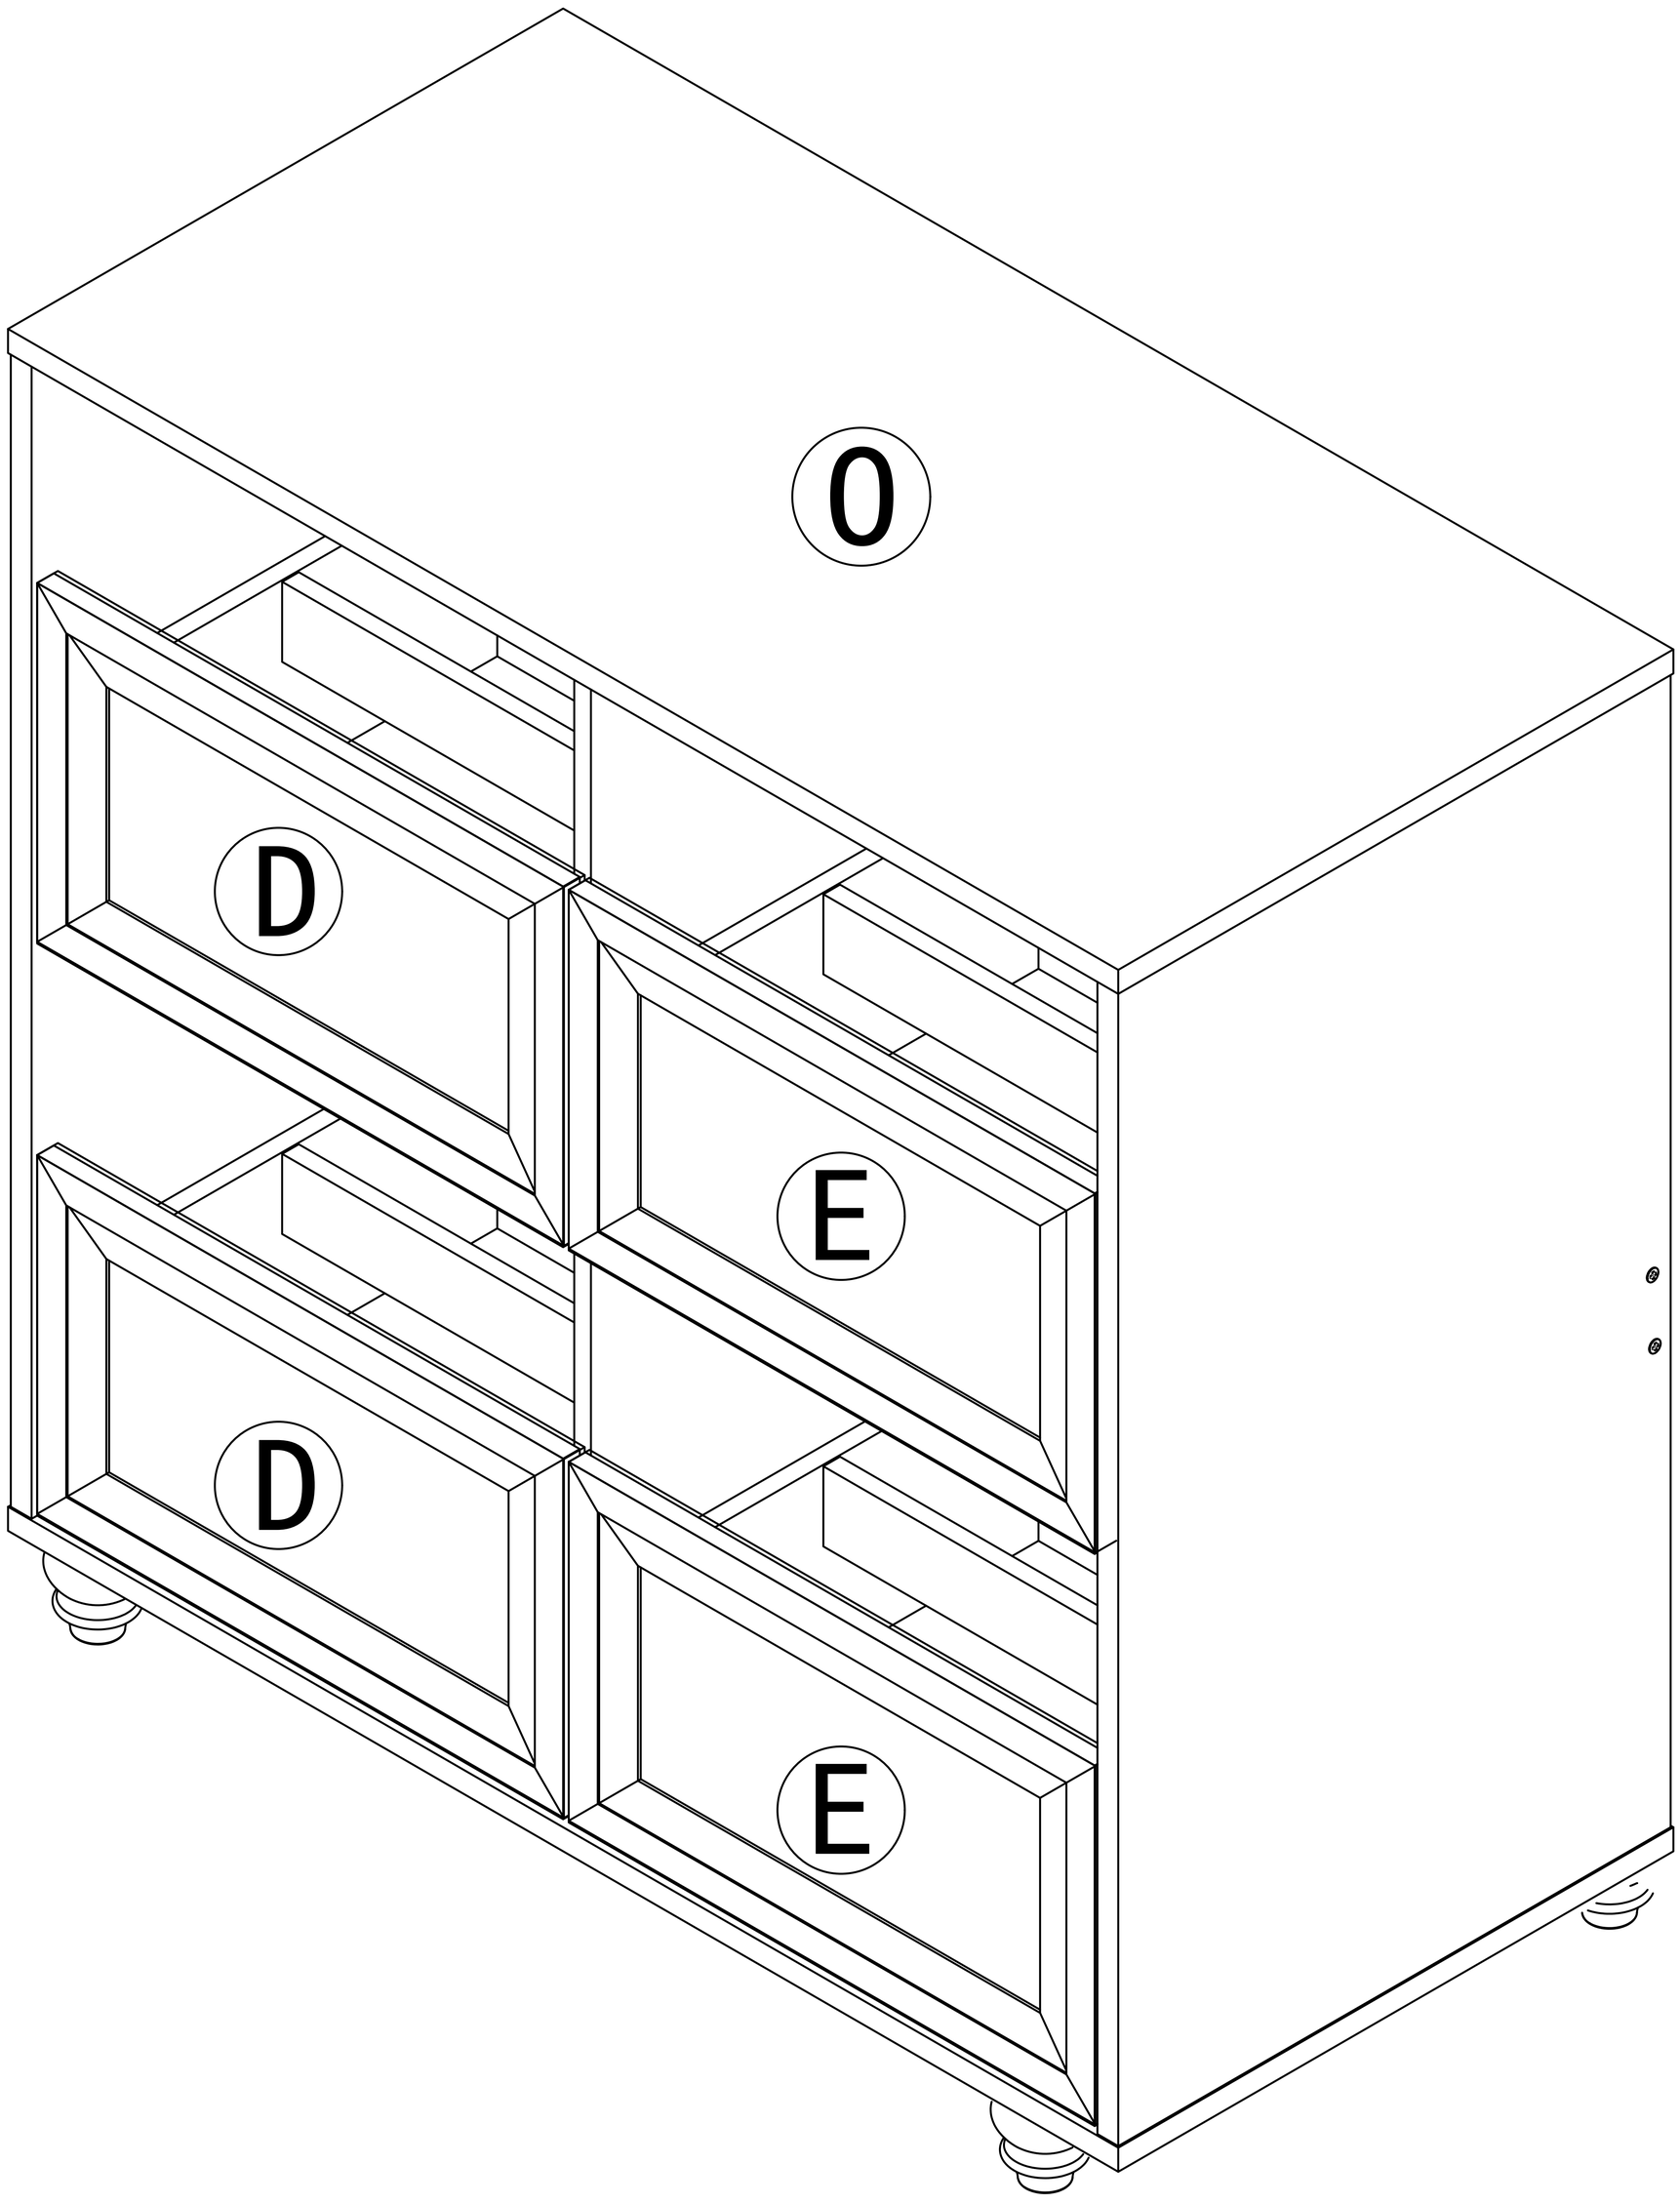


Repeat the drawer installation steps

Step 37

6 x8

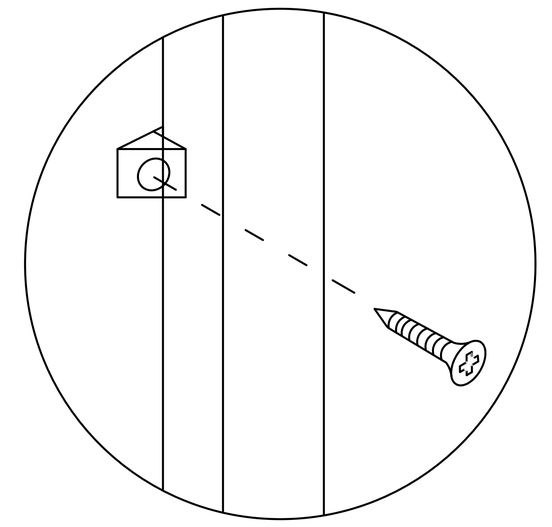


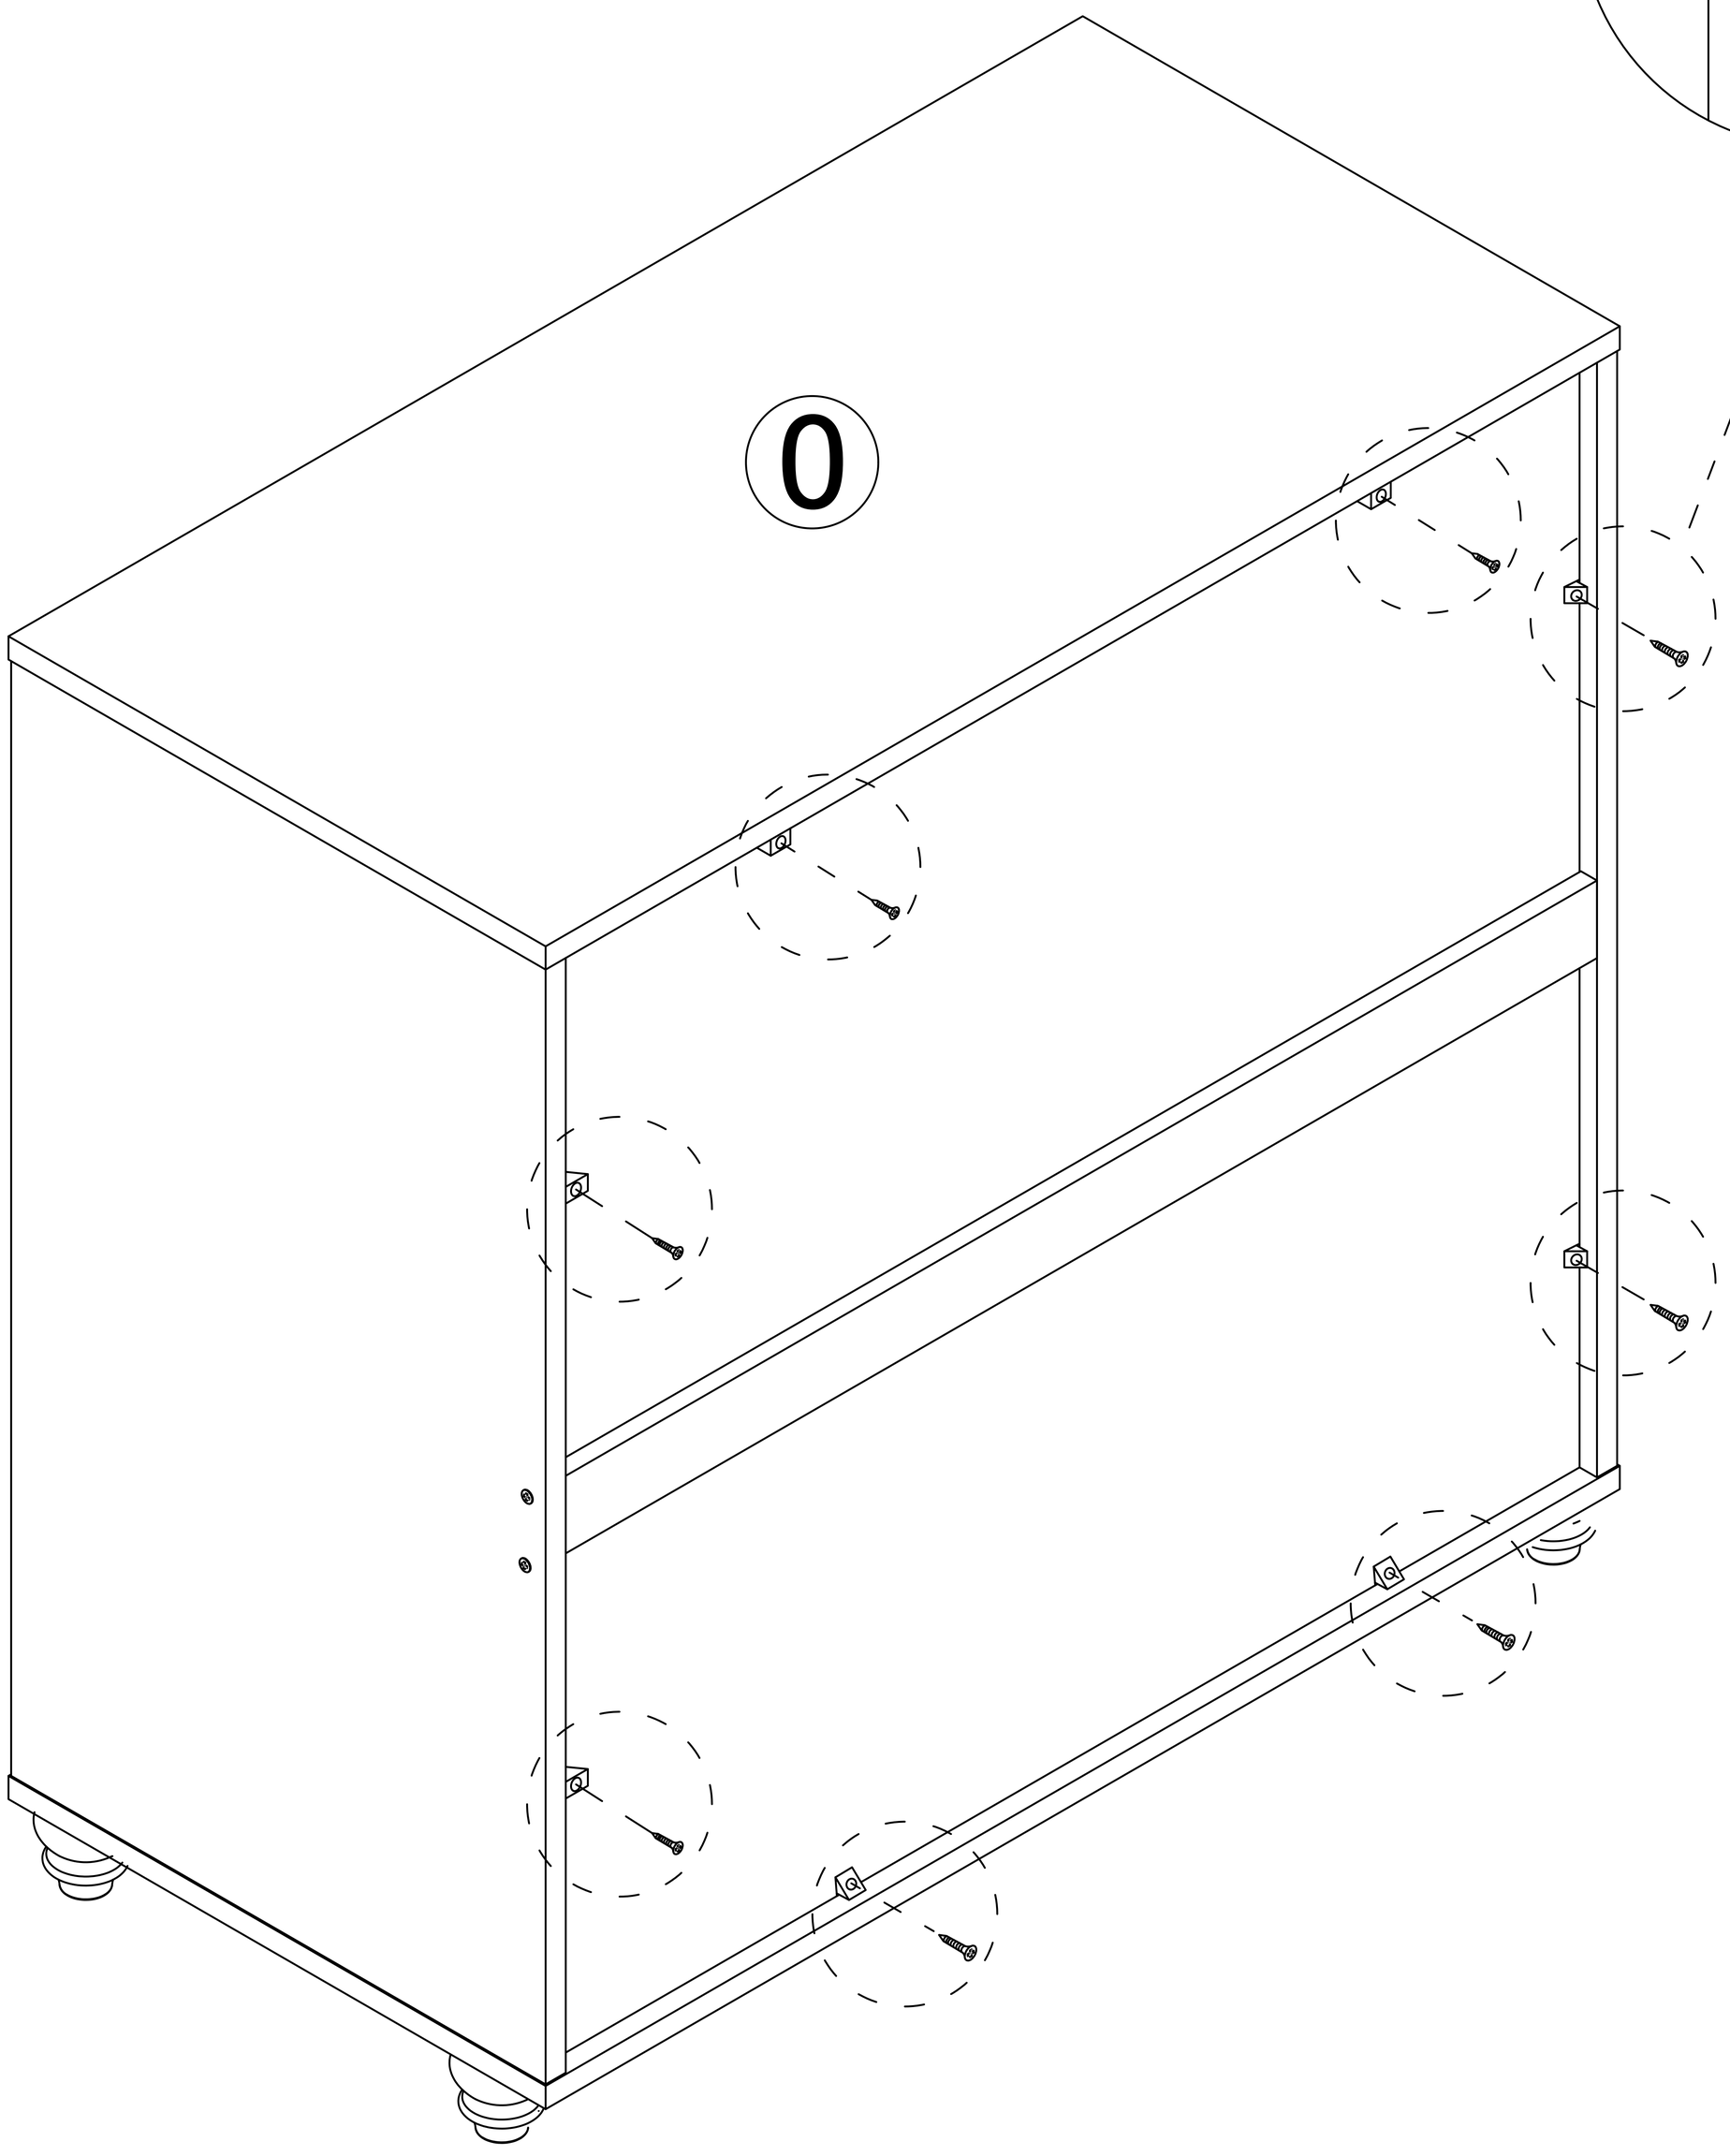


Step 38

Install as required

7

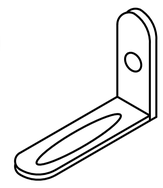

x2




x2





x2

3.5x14mm

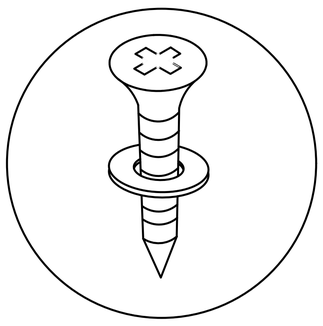


Install the anti fall hardware on the cabinet as shown in the picture first

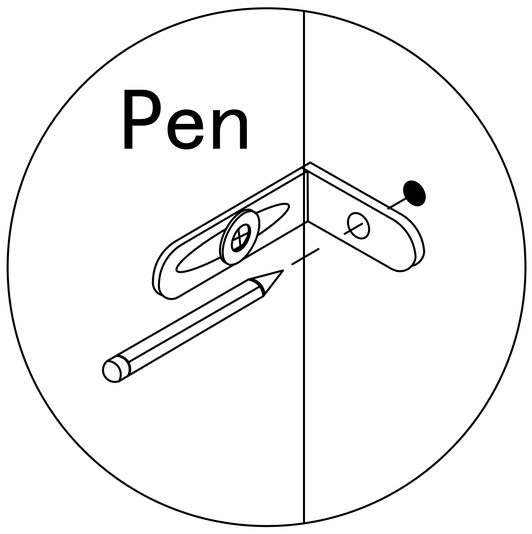

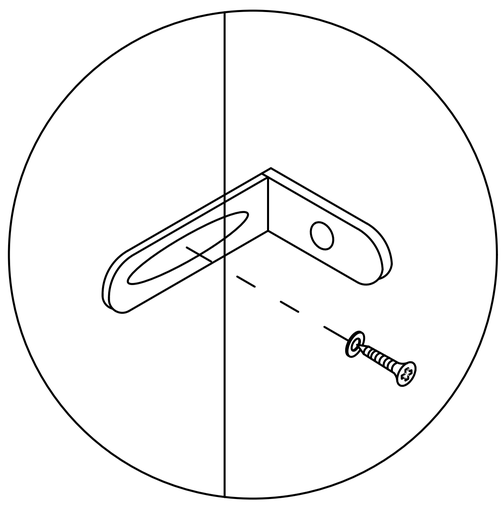


Then mark the wall with a pen through the holes in the anti-fall hardware

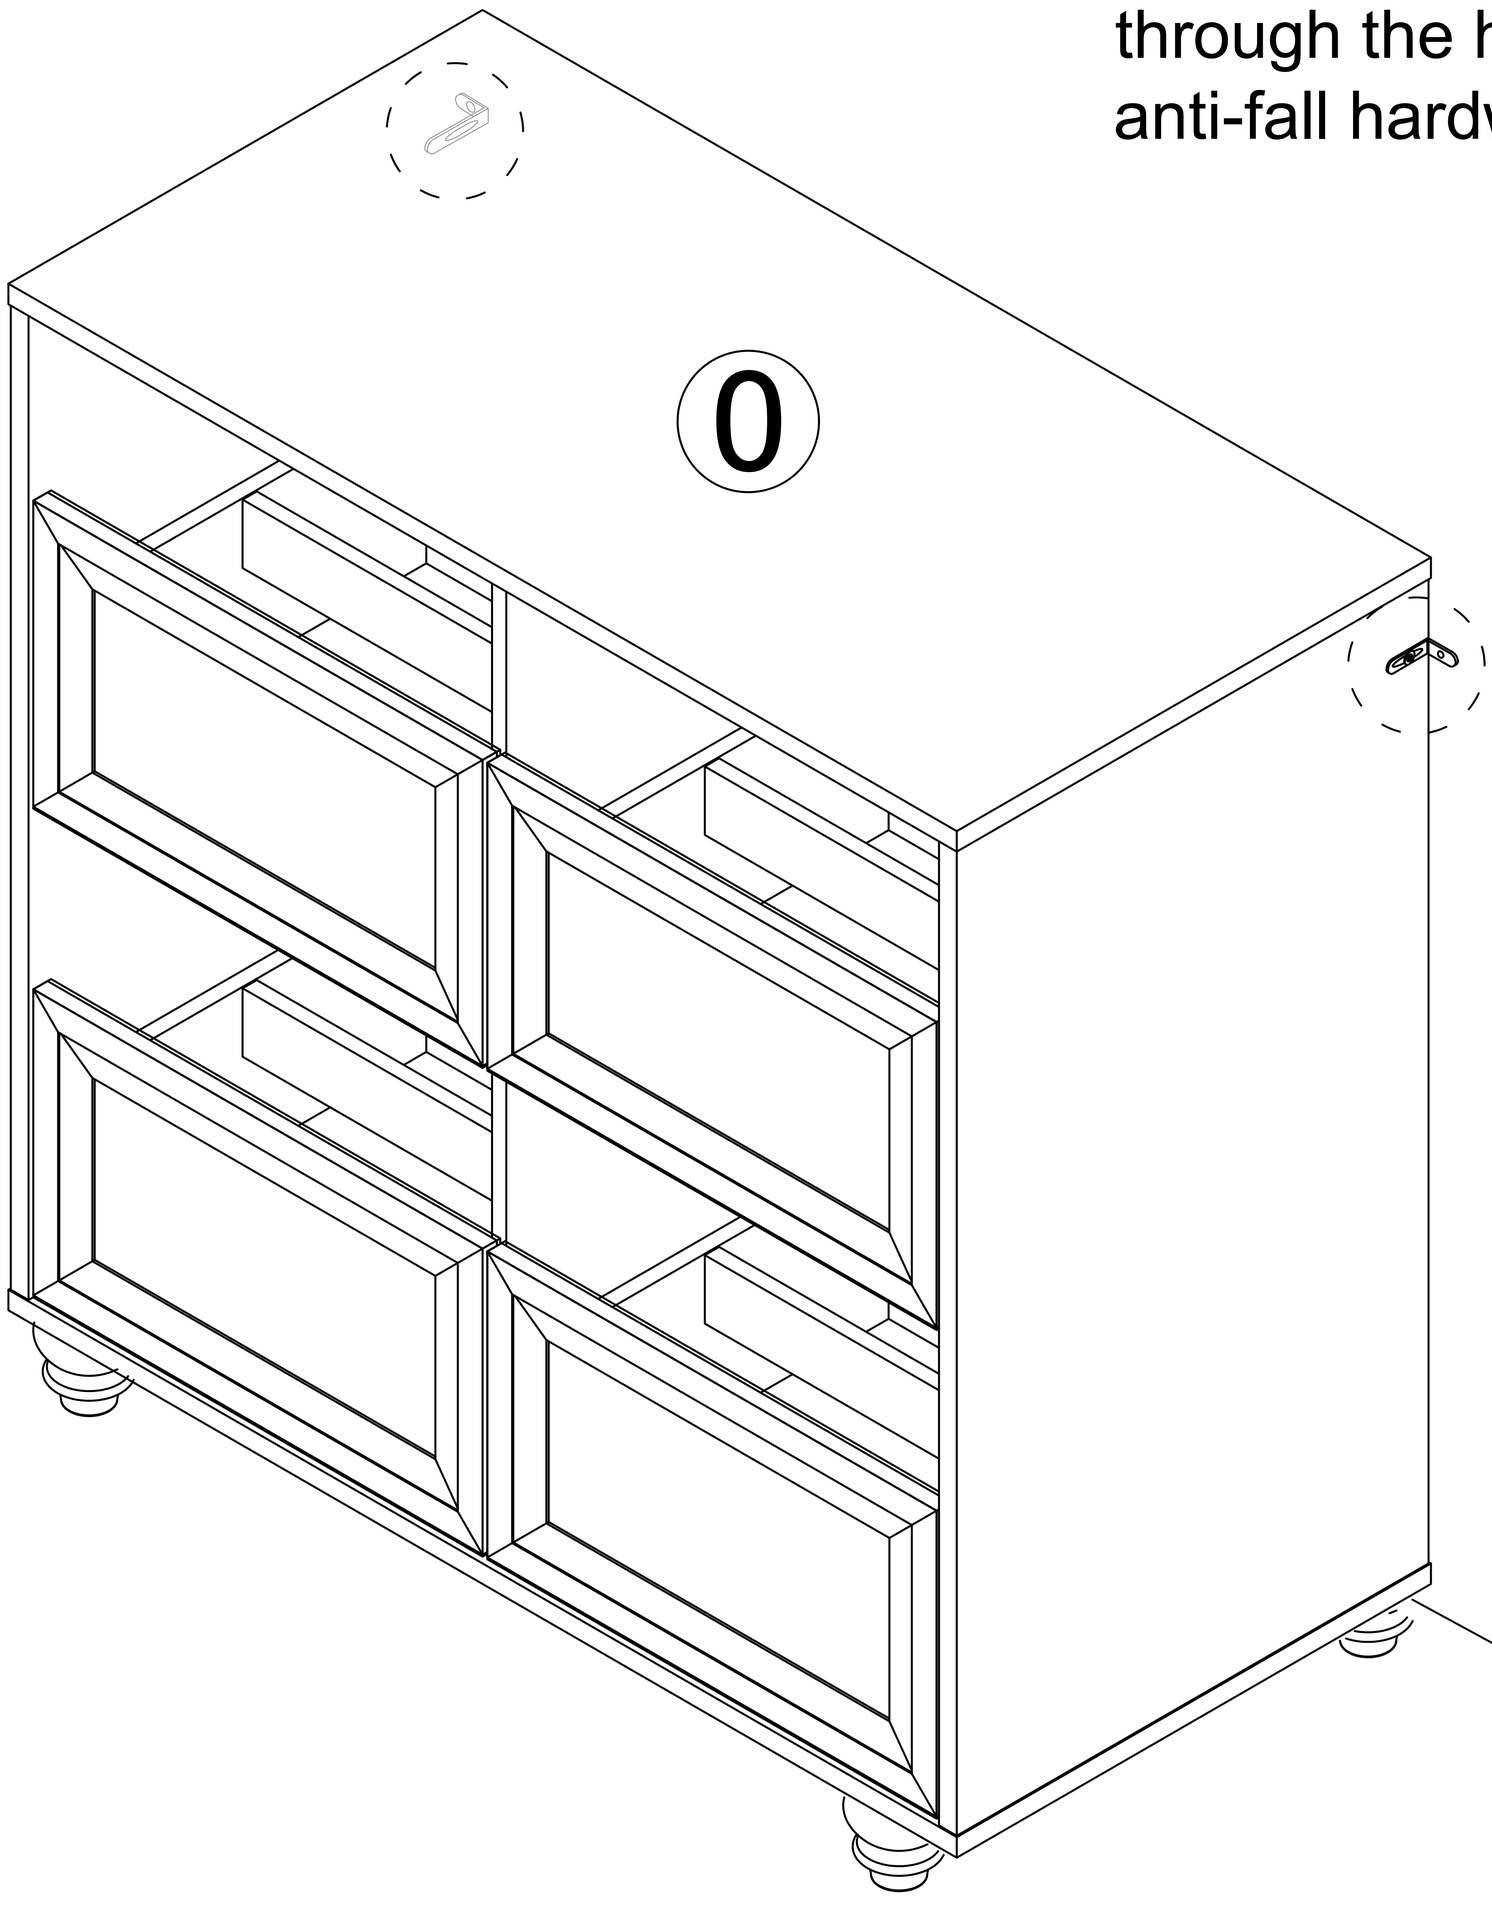


Step 39

use a ruler to measure theapproximate height of the producton the wall, and then mark it witha pencil.

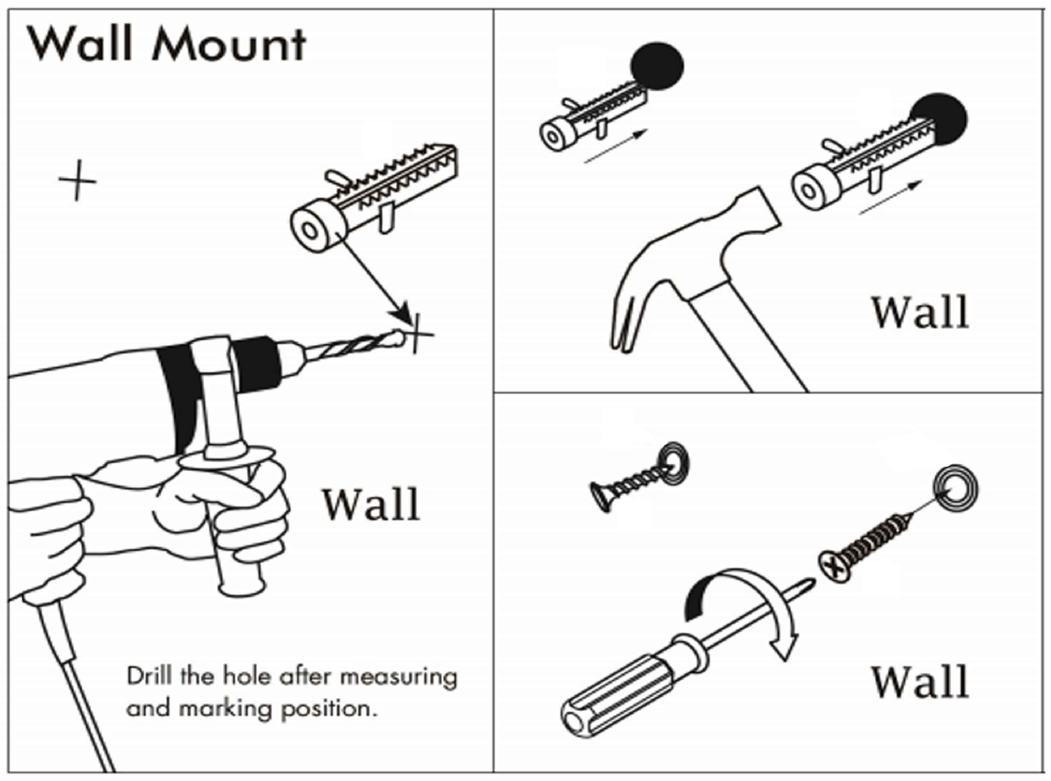


Use a tape drill to make holesin the wall that are suitable for theproduct screws.

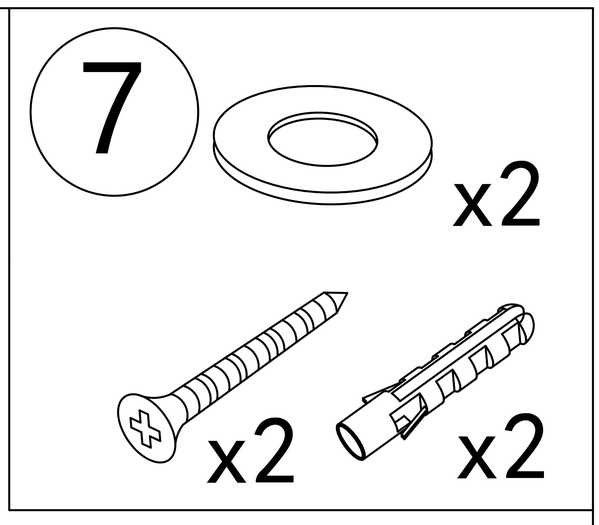


Put the expansion bolt into the hole.

Pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

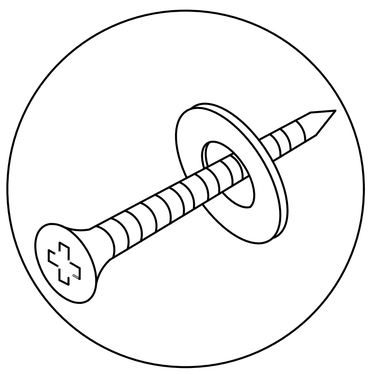

4x45mm

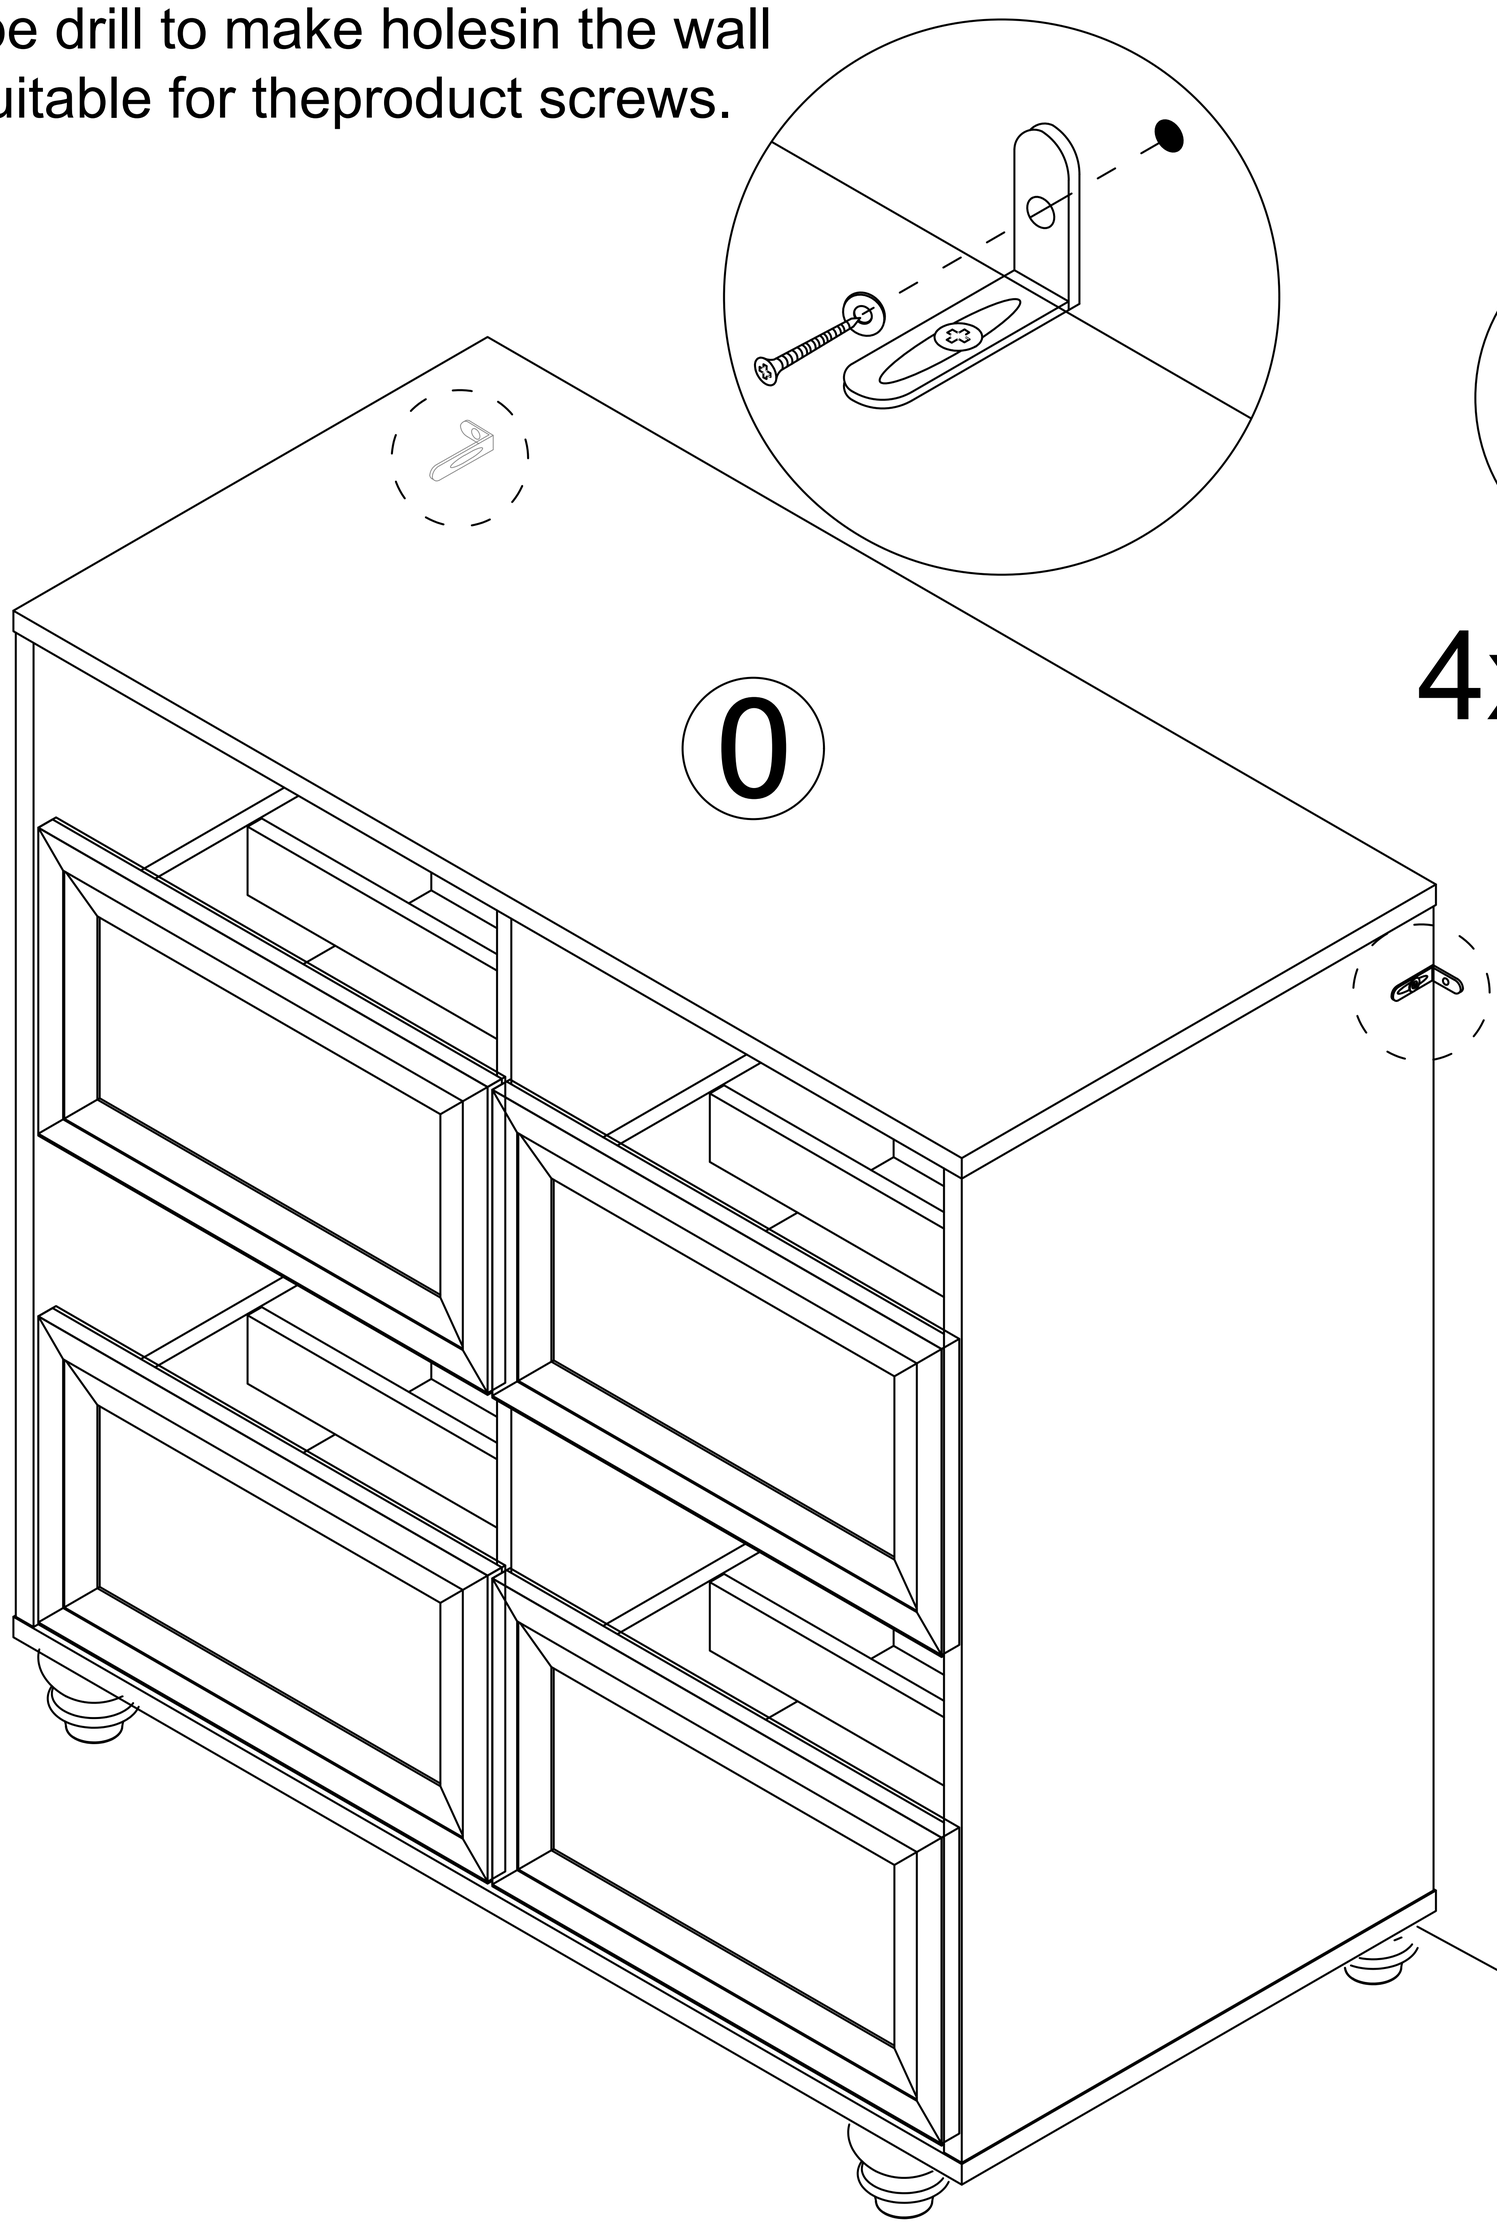

Step 40

