




# FORMOSA

## **INSTALLATION GUIDE**

FVN31-361236ACA

## CONTENTS:


|               |                       |        |
|---------------|-----------------------|--------|
| Mirror .....  | FMR3132ACA .....      | PAGE 2 |
| Cabinet ..... | FCB3136ACA .....      | PAGE 3 |
| Sink .....    | FCT2084WH-D-CMB ..... | PAGE 3 |

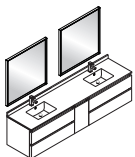


# FVN31-361236ACA FORMOSA INSTALLATION GUIDE




FVN31-361236ACA  
Vanity Front

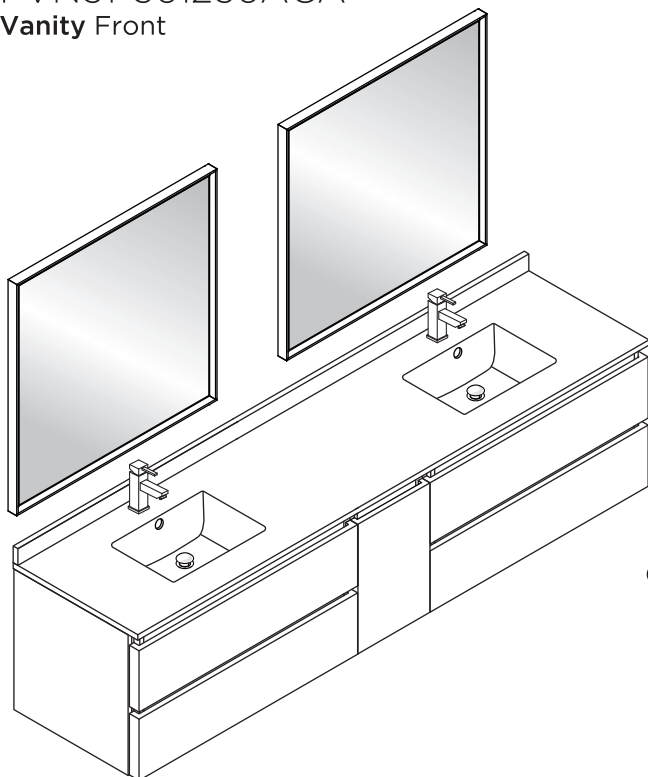


FMR3132ACA (X2)  
Mirror Front

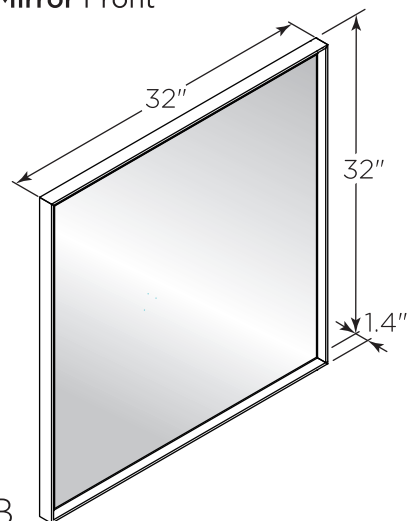


FCT2084WH-D-CMB  
Counter Top Front

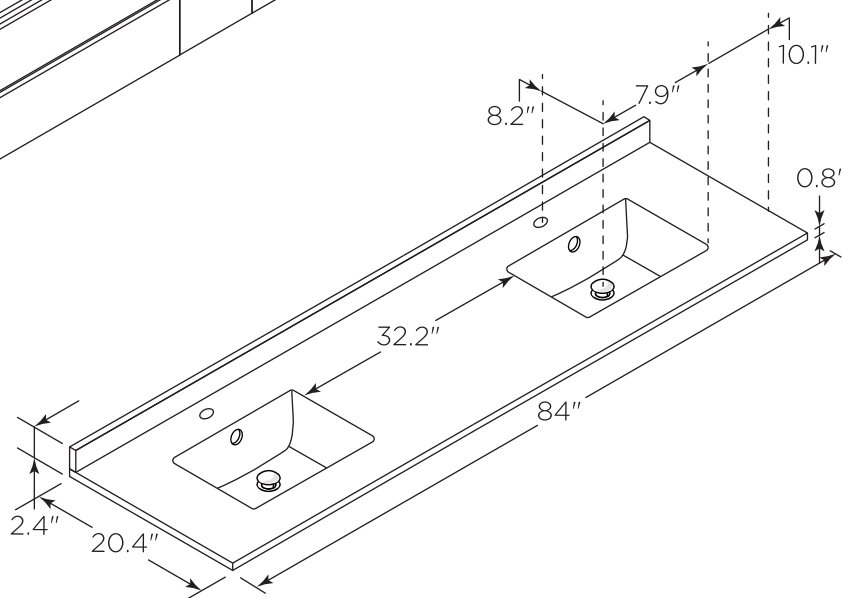


FST3112ACA  
Cabinet Front

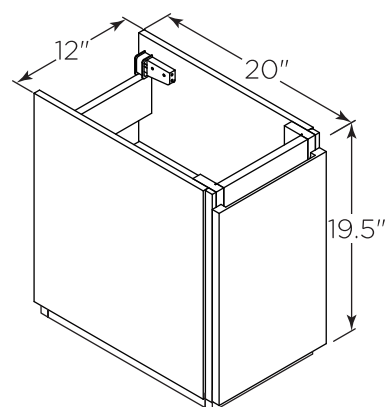


FCB3136ACA (X2)  
Cabinet Front

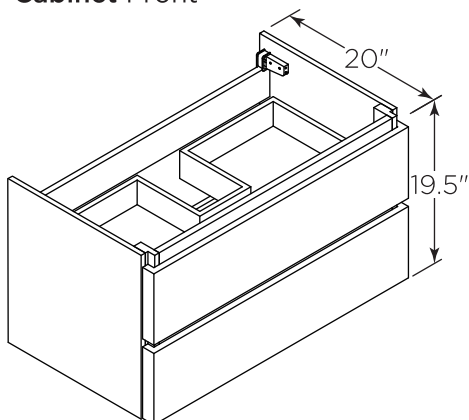


FCB3136ACA  
Cabinet Back

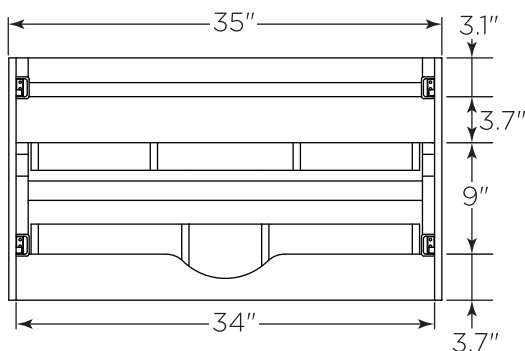

FST3112ACA  
Cabinet Back

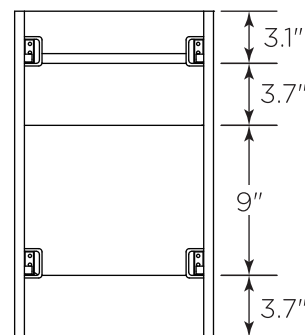


**NOTE:** All dimensions & specifications are approximate and subject to change without notice.

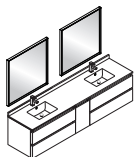

# FVN31-361236ACA FORMOSA INSTALLATION GUIDE




## TOOLS FOR ASSEMBLY

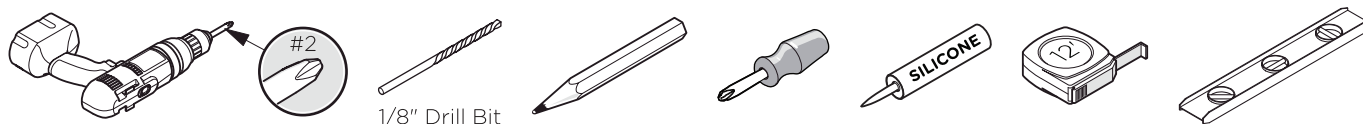


## MIRROR INSTALLATION

- 1** Measure distance between the holes and mark it on the wall using a level.

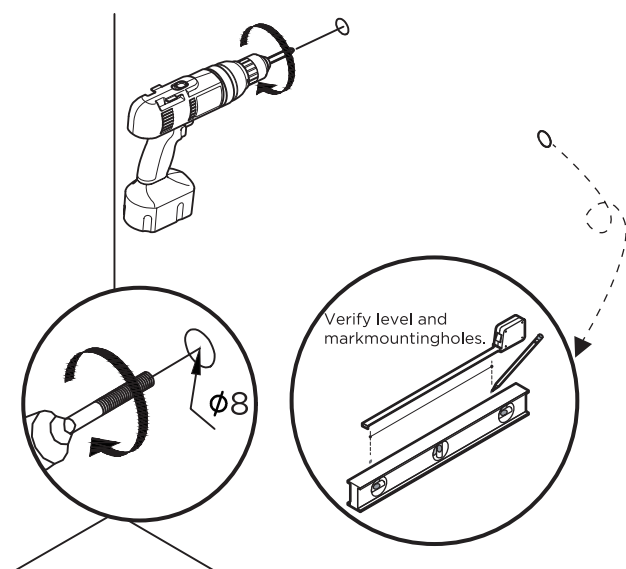



- 2** Press the anchors into the holes.

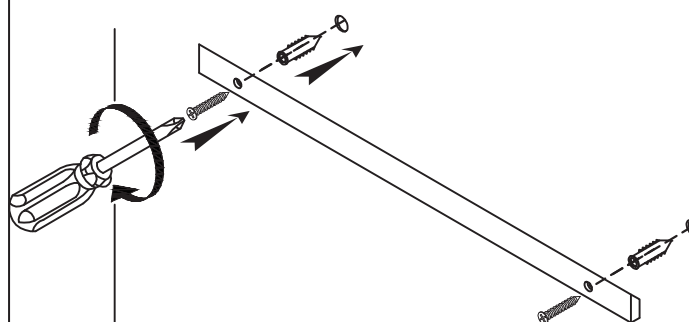

**IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

- 3** Hang mirror on the screws.

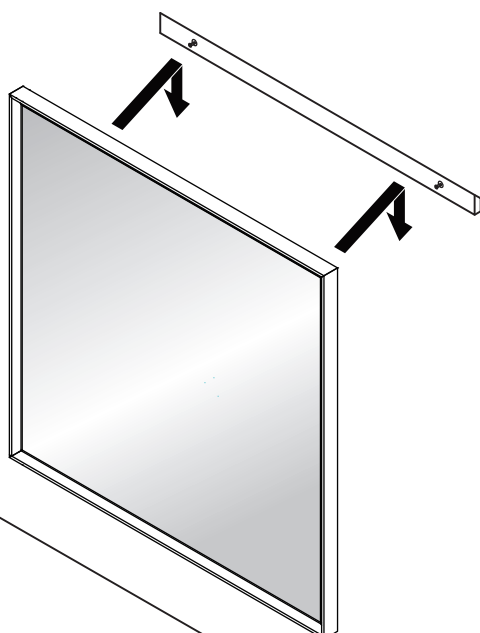

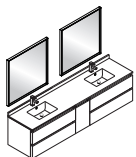


## CABINET AND SINK INSTALLATION

1


Mark anchor mounting hole locations on wall as shown. Drill holes in the finished wall as required.

**IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

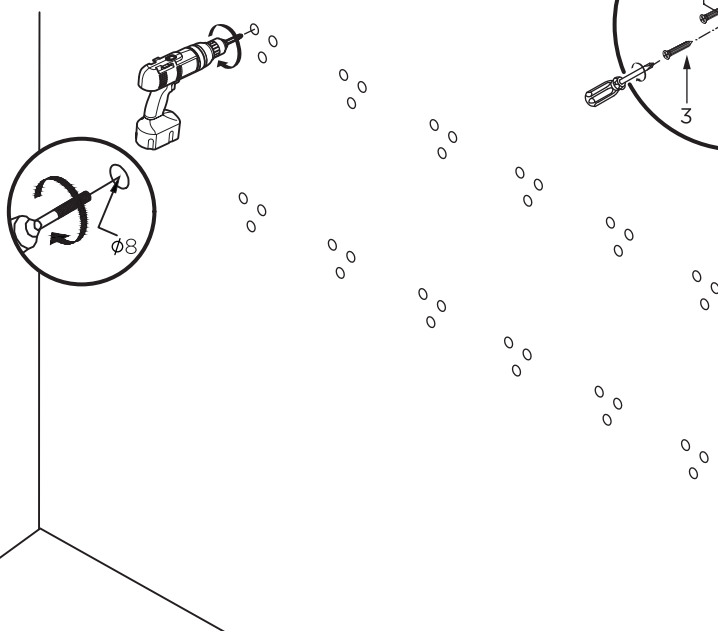


2

Attach cabinet to the wall with the screws. Insert the anchor(1) into the holes and secure the wall bracket(2) with the screws(3).

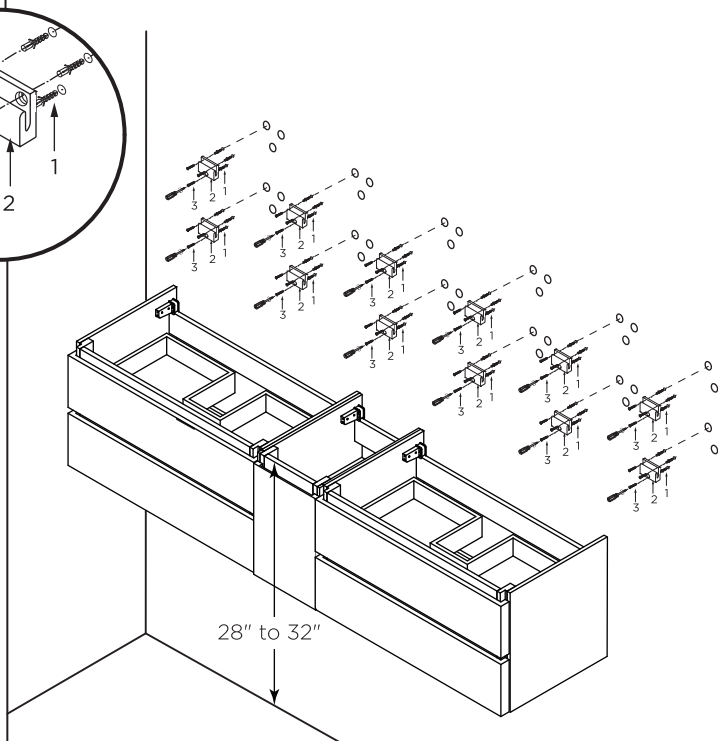


3


Install sink.

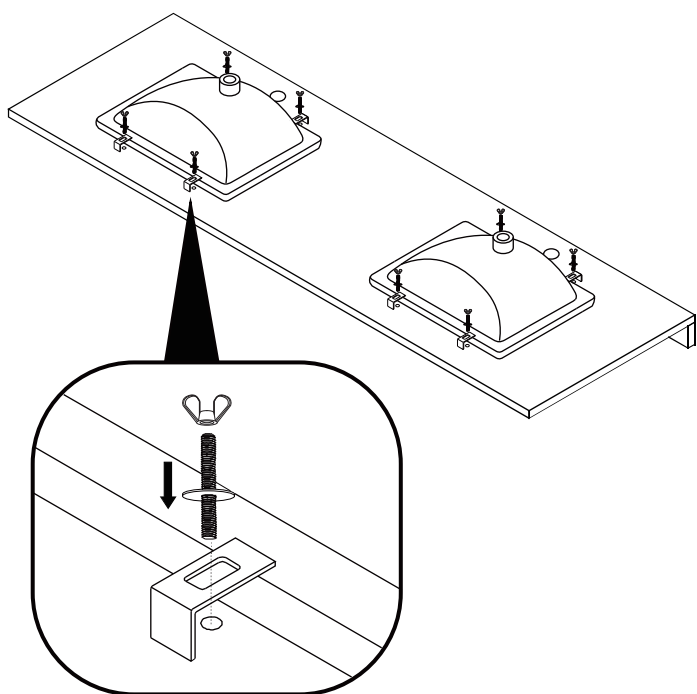

4





Apply a bead of silicone on the top of the cabinet (A) and place sink (B) on the cabinet.

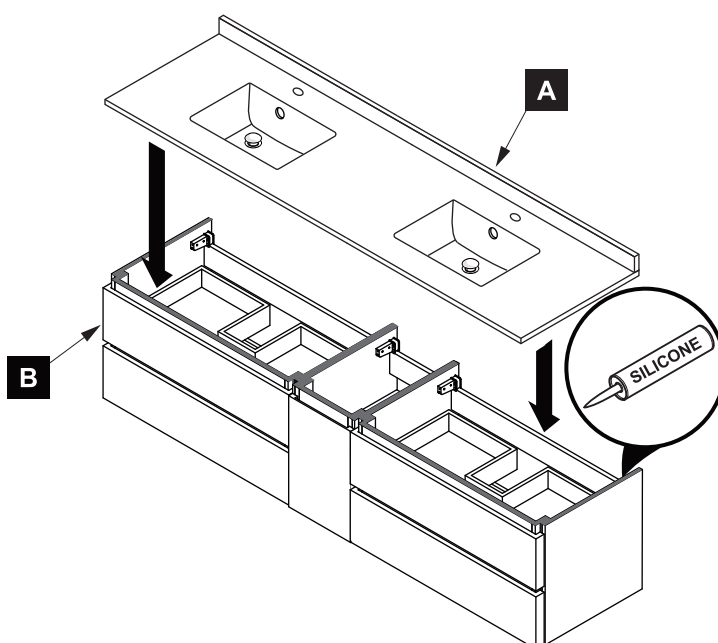




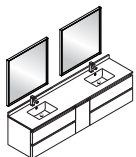



## DRAWER REMOVAL & INSTALLATION

### REMOVAL

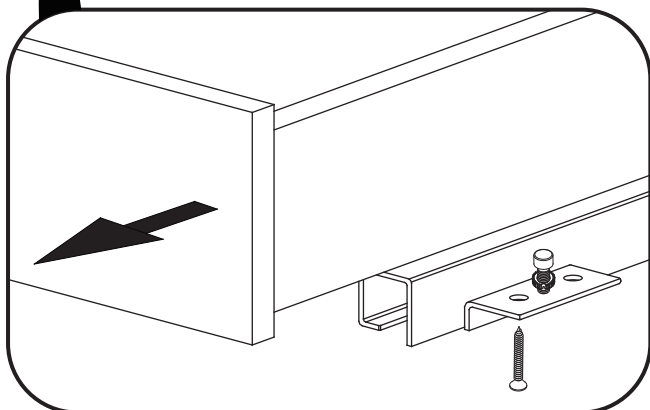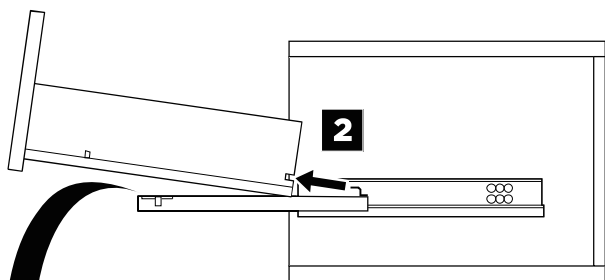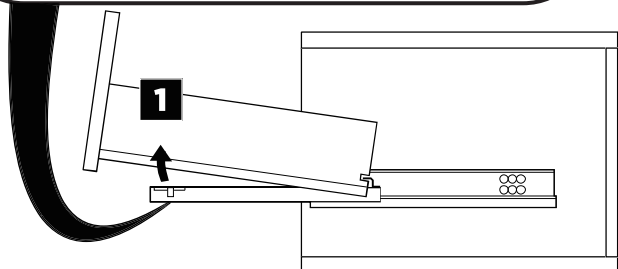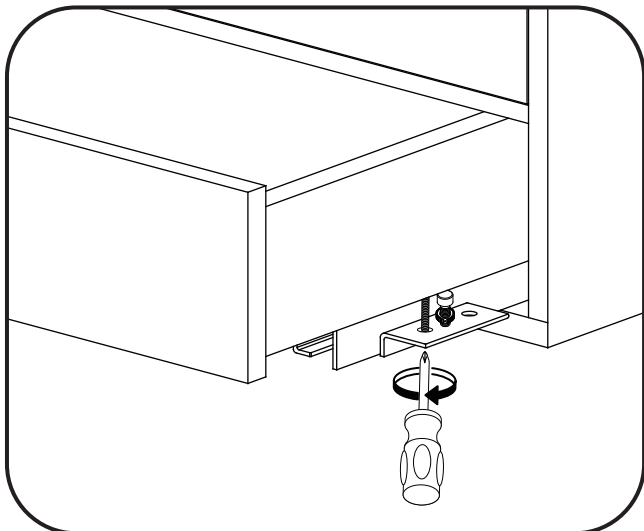

### INSTALLATION

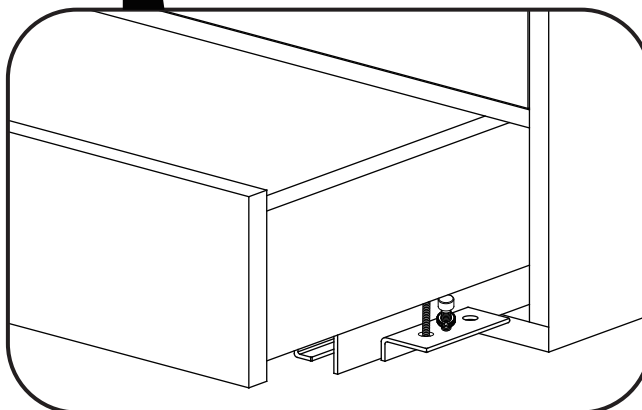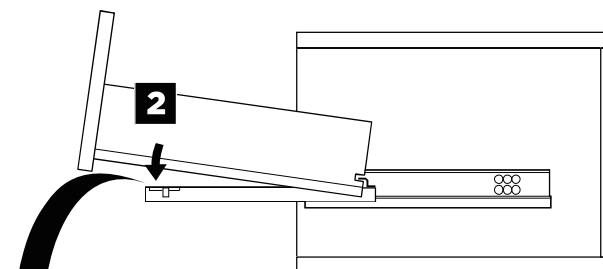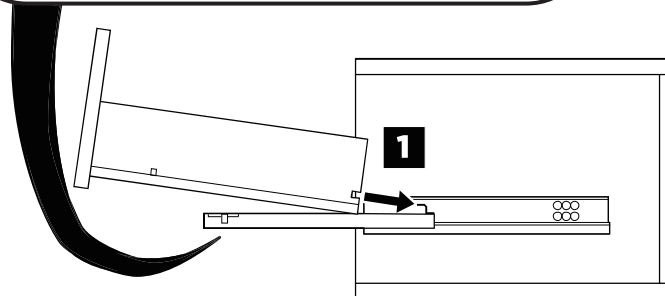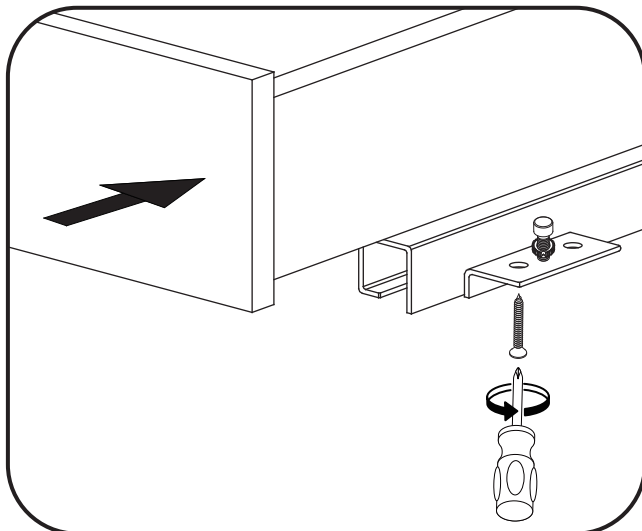


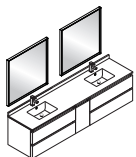

## P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS


**NOTE:**

Your item may appear slightly different from the illustration.

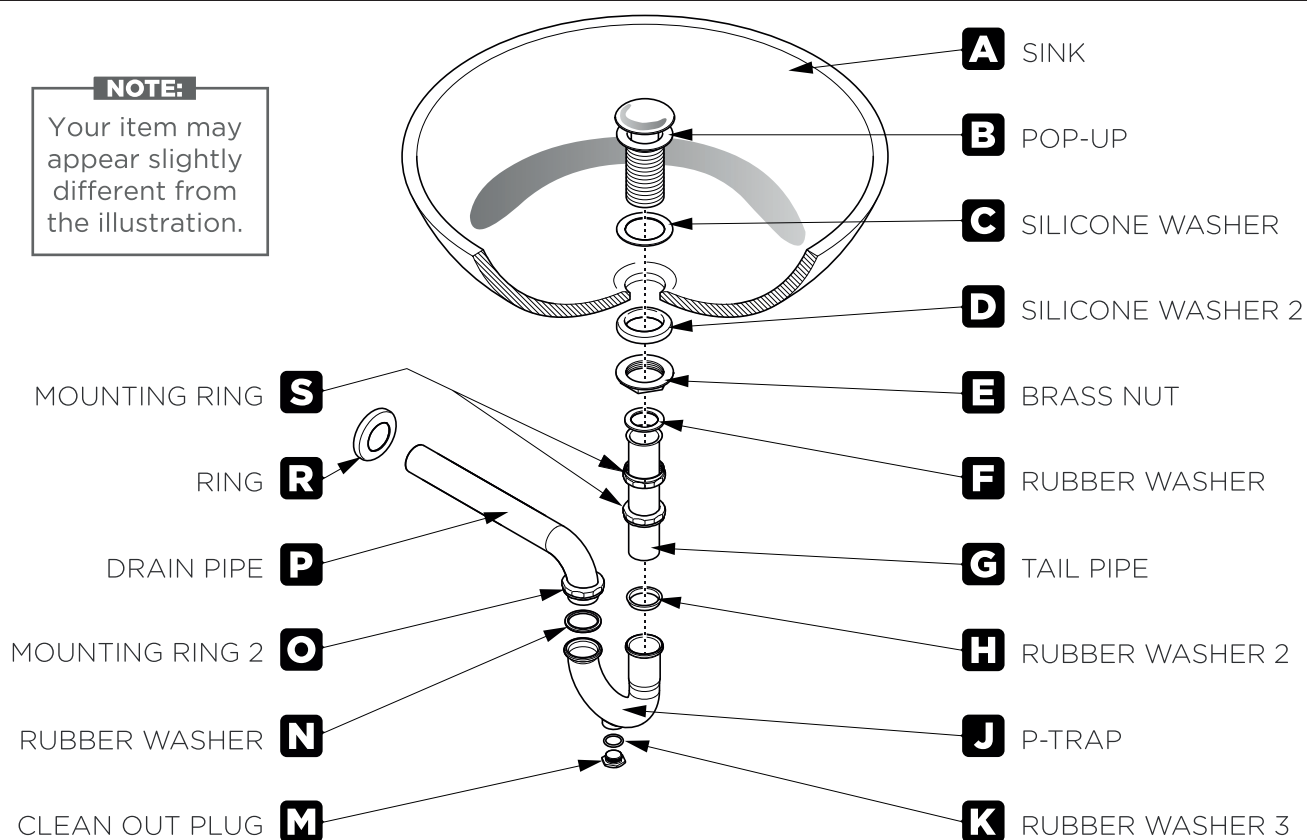


## POP-UP INSTALLATION INSTRUCTIONS


### FOR SINKS WITHOUT OVERFLOW

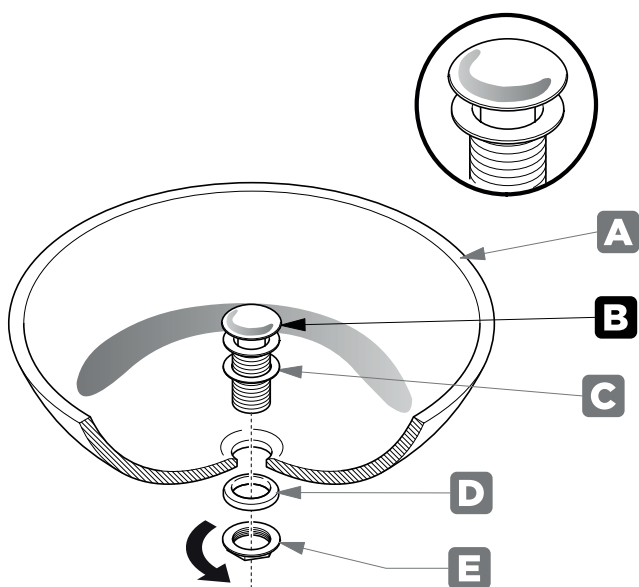

OR


### FOR SINKS WITH OVERFLOW

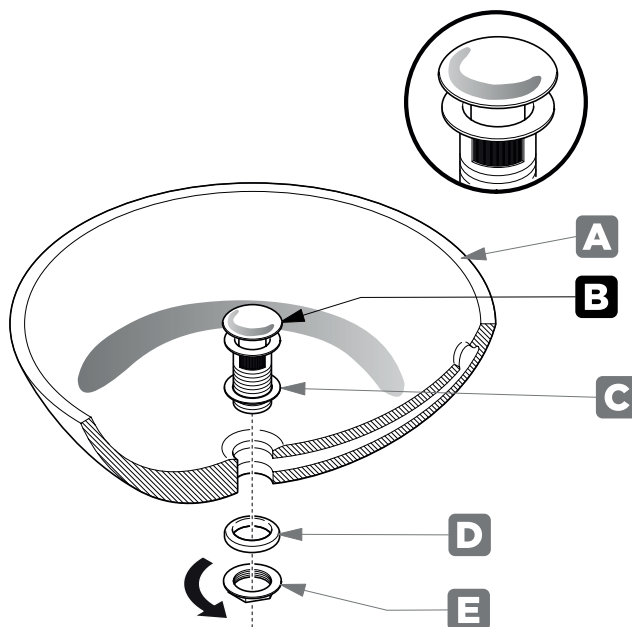

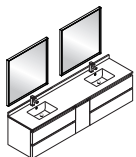

## P-TRAP INSTALLATION

### 1 Install tail pipe (G)

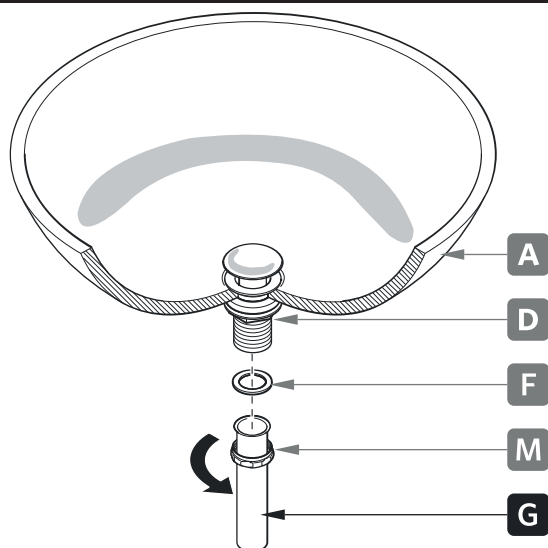

### 2 Install p-trap (J)

