

Bathroom Vanity

Assembly Instructions - Please keep for future reference

1061110002F



1061110003F

1061110004F




NOTE:

Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.

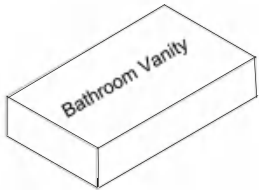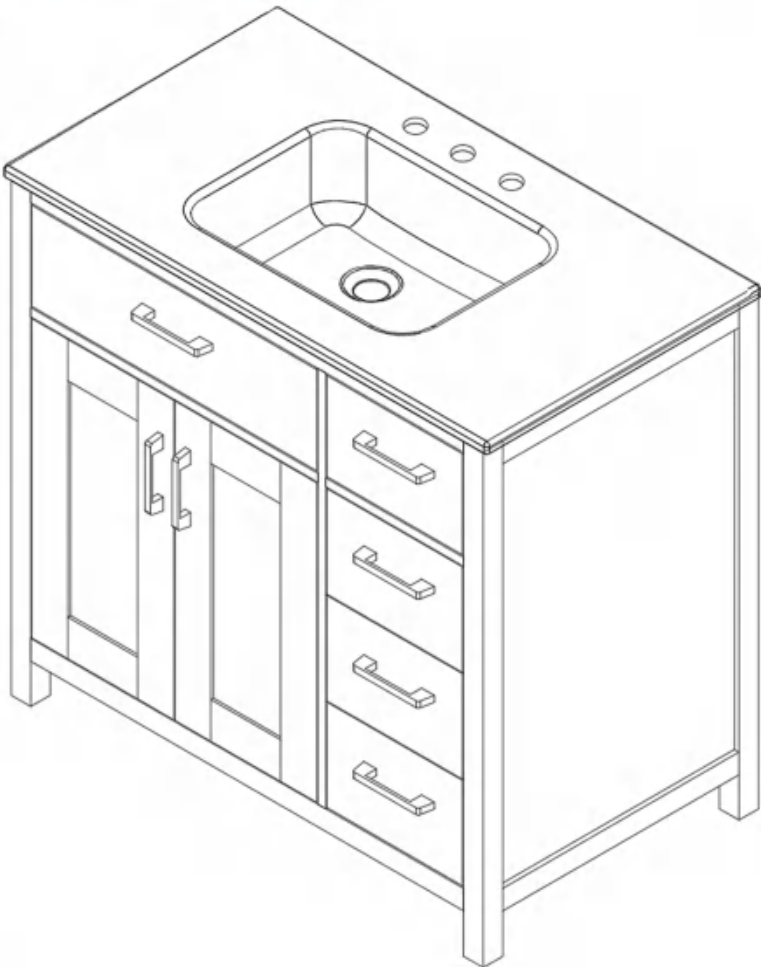

Carton 1 of 2

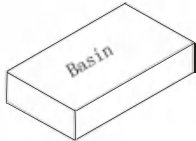

Carton 2 of 2

Dimensions

Width - 37inch
Depth - 22inch
Height - 34.5inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Components - Panels

Please check you have all the panels listed below

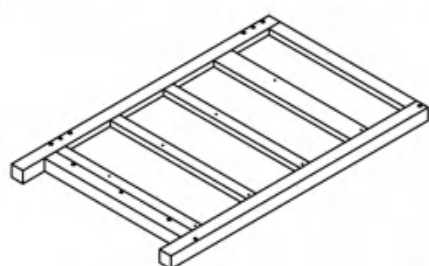


1 (86x53.3x3.8cm) x1




2 (26.7x8.5x1.5cm) x1



3 (83.8x3.8x1.8cm) x1

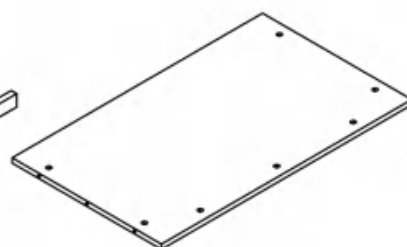

4 (83.8x50x1.5cm) x1

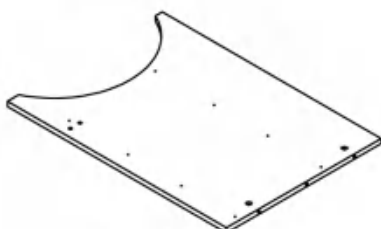

5 (73.3x51.8x1.5cm) x1




6 (83.8x15x1.5cm) x2




7 (83.8x3.8x1.8cm) x1




8 (55.6x5.5x1.5cm) x1

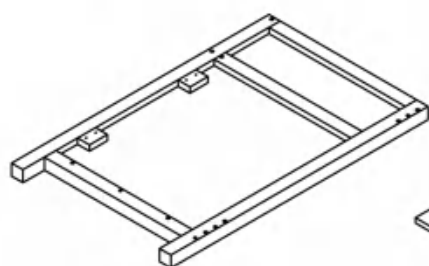

9 (86x53.3x3.8cm) x1

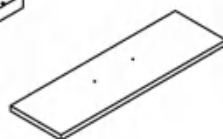

10 (52.2x17x1.5cm) x1



11 (26.3x17x1.5cm) x1



12 (40x8x1.5cm) x1



13 (40x8x1.5cm) x1



14 (21.7x8x1.5cm) x1



15 (39.5x22.8x0.3cm) x4



16 (26.3x17.7x1.5cm) x3




17 (40x10x1.5cm) x3




18 (40x10x1.5cm) x3



19 (21.7x10x1.5cm) x3

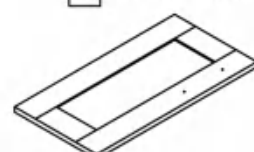

20 (53.6x27.5x1.5cm) x1

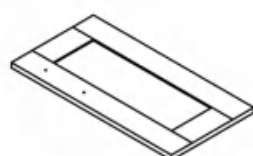

21 (53.6x27.5x1.5cm) x1


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


(A)  x43	(B)  x43	(C)  $\varnothing 8 \times 30$ x9
(D)  x8	(E)  x4	(F)  x2
(G)  M4*16 x32	(H)  M3.5*12 x32	(I)  M3.5*30 x19
(J)  x1	(K)  M4*20 x14	(L)  x7
(M)  x2	(N)  x4	

Tools required


 Phillips screwdriver
 (medium & large)

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170




The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

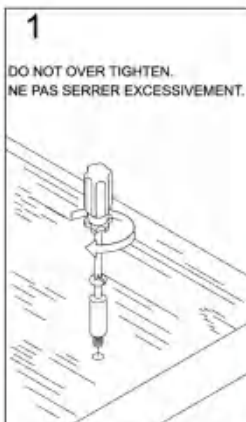

Step 2


Push the male camlock into the entry hole.



Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

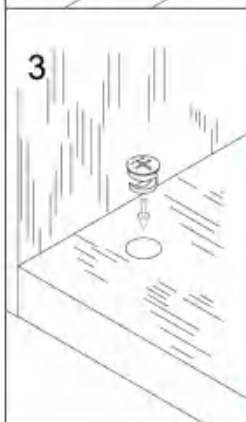


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

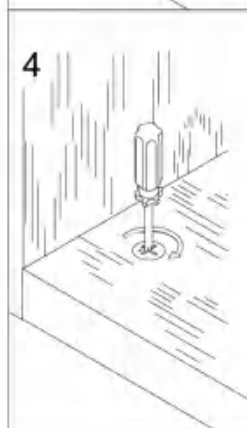

Adjusting Hinges

Hinge adjustment:


a: To move the top panel up or down, loosen screws shown and move top panel to suit

b. To move the top panel in or out, loosen screws shown and move top panel to suit.

Retighten screws

c: To move the top panel left or right, adjust screws shown.



a:

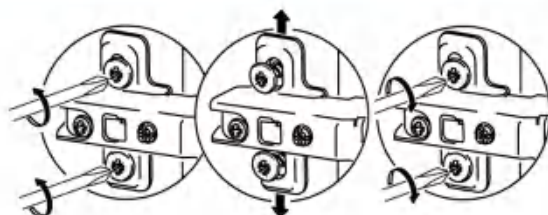


b:



c:

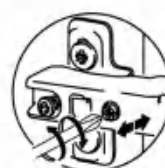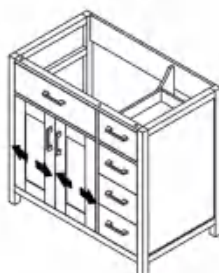



Assembly Instructions

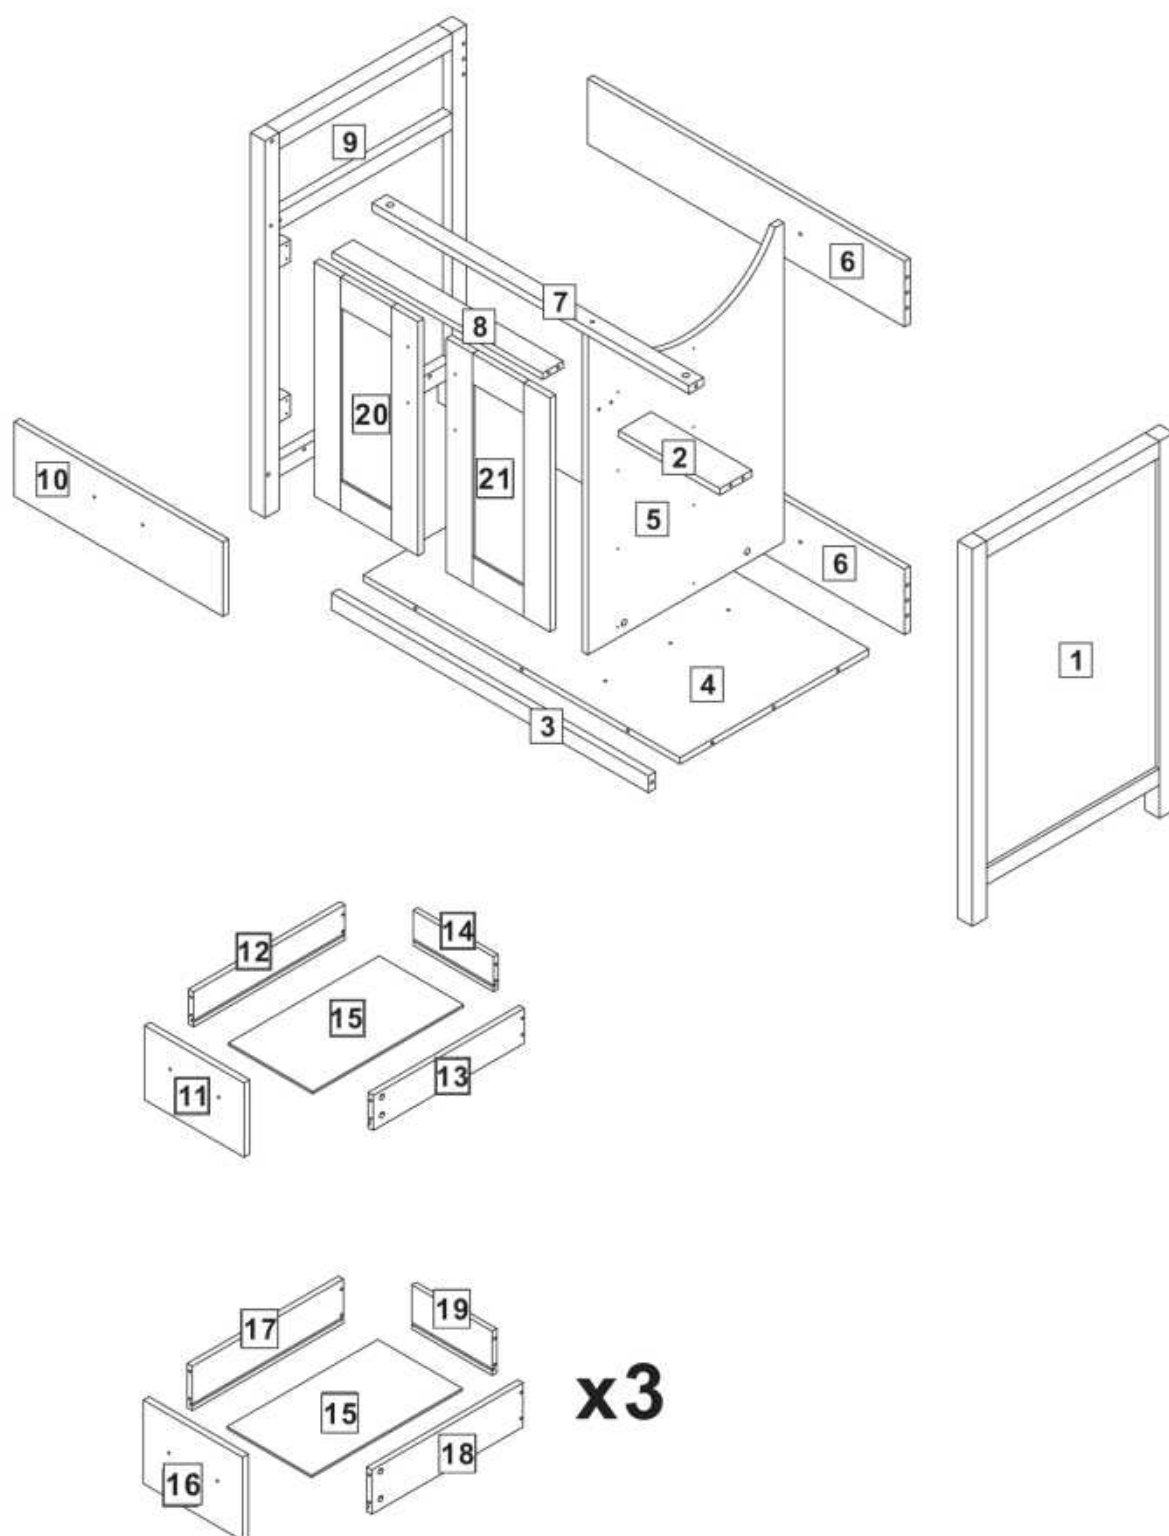

Assembly Instructions

Step1

Separate the slide track (D) into two parts (D1,D2).

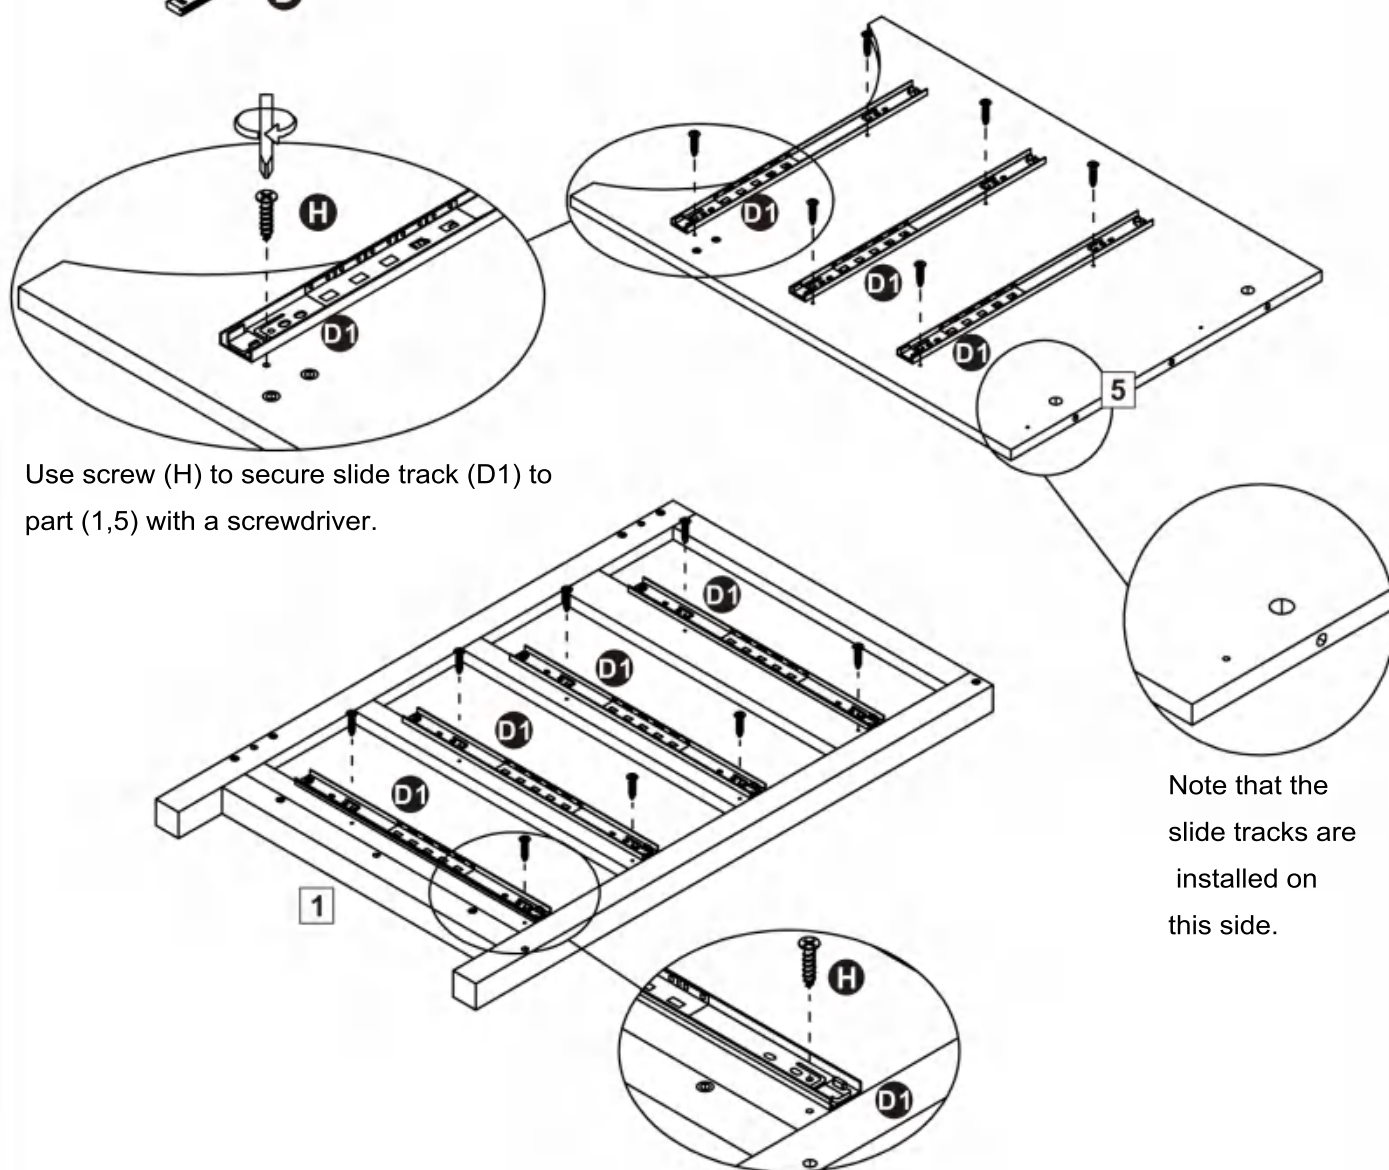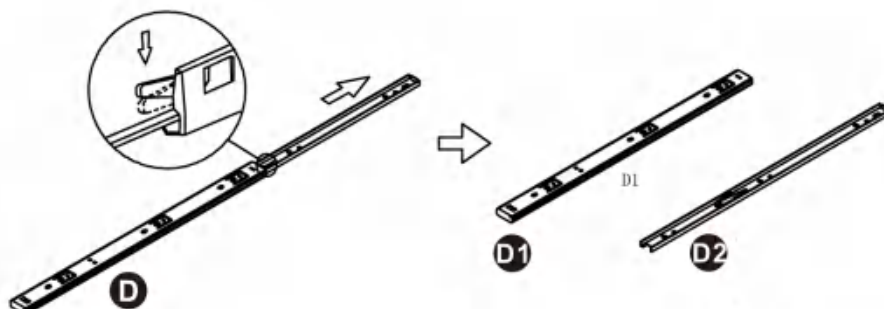

Use screw (H) to secure slide track (D1) to part (1,5) with a screwdriver.









Note that the slide tracks are installed on this side.

Assembly Instructions

Step2



CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

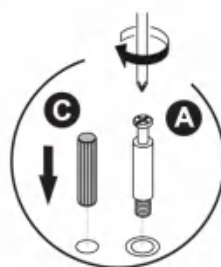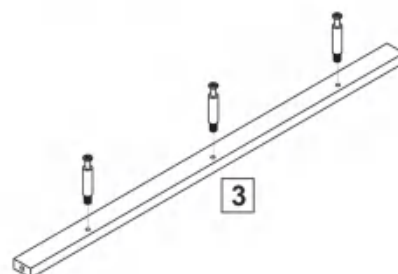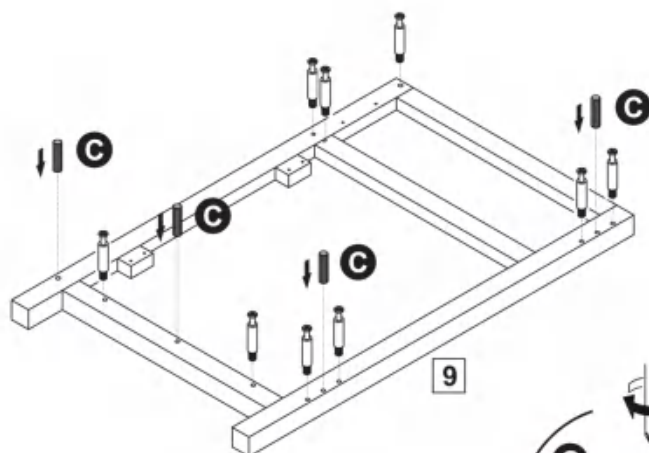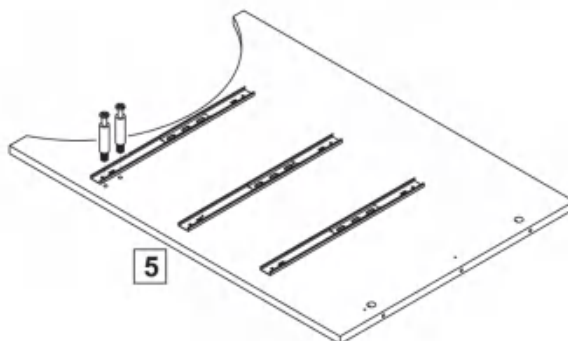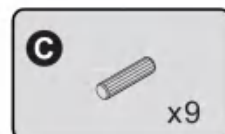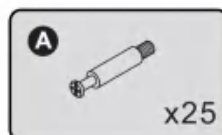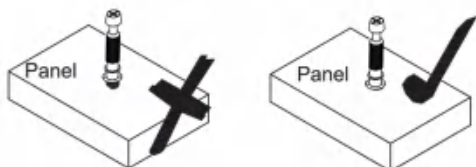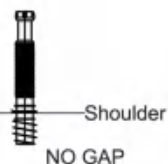




Attach cam-bolt (A) to part (1,3,4,5,9) with a screwdriver.

Insert wooden dowel (C) to part (1,4,9).

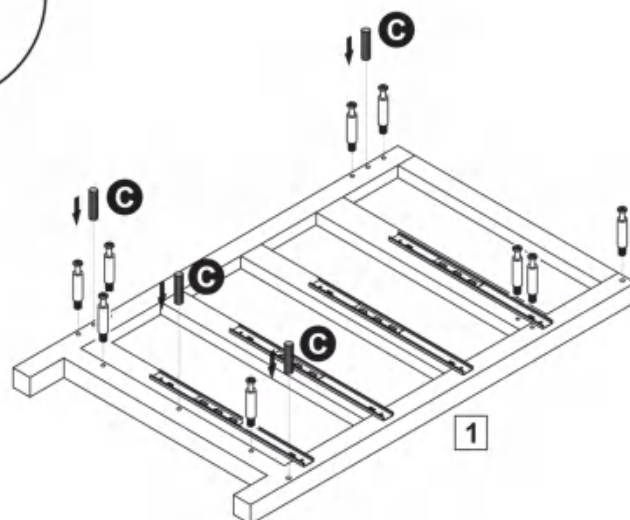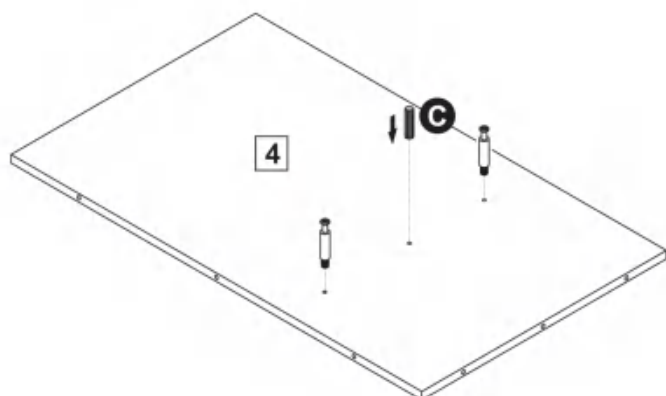





Assembly Instructions

Step3

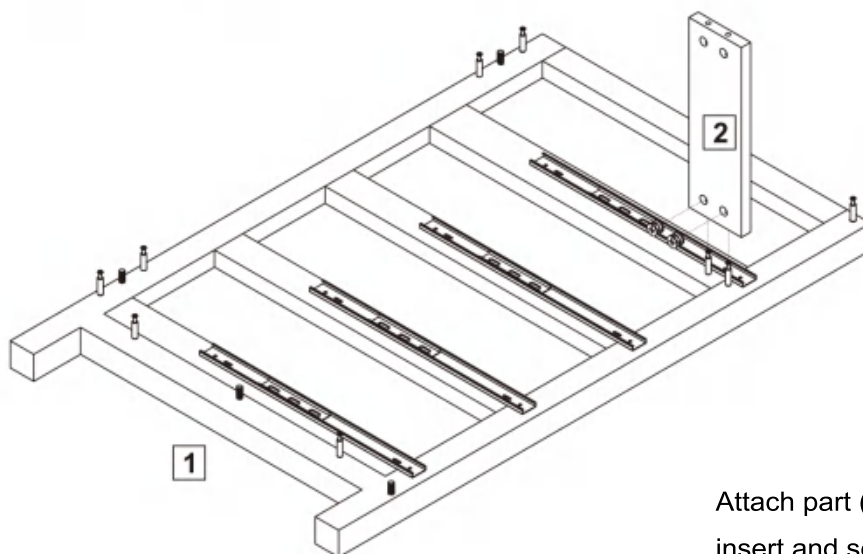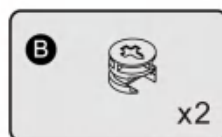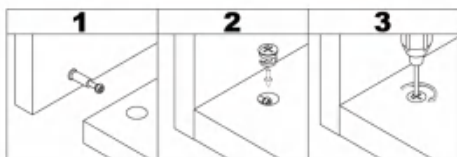

Attach part (2) to part (1), then insert and secure cam-lock (B) to part (2) to lock it.




Step4

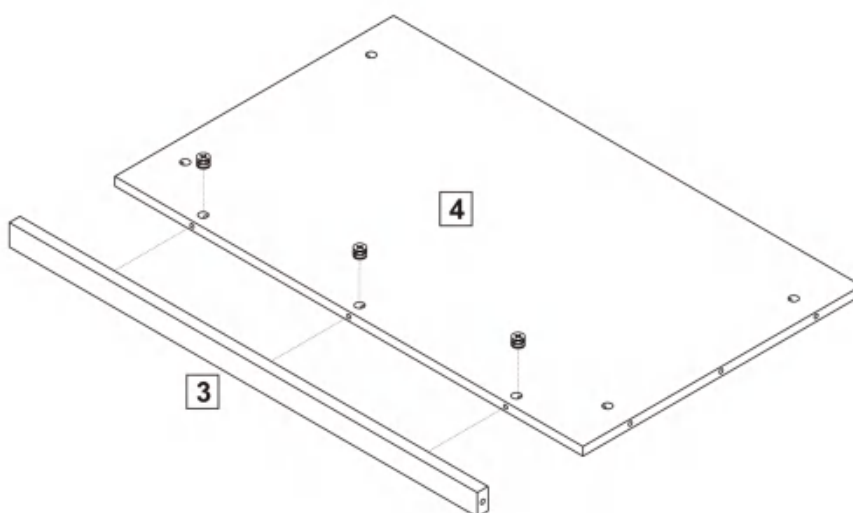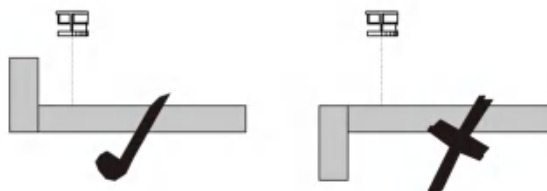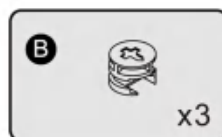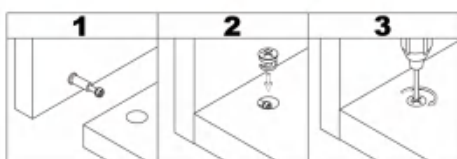

Attach part (3) to part (4), then insert and secure cam-lock (B) to part (4) to lock it.


Assembly Instructions

Step5

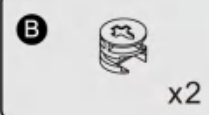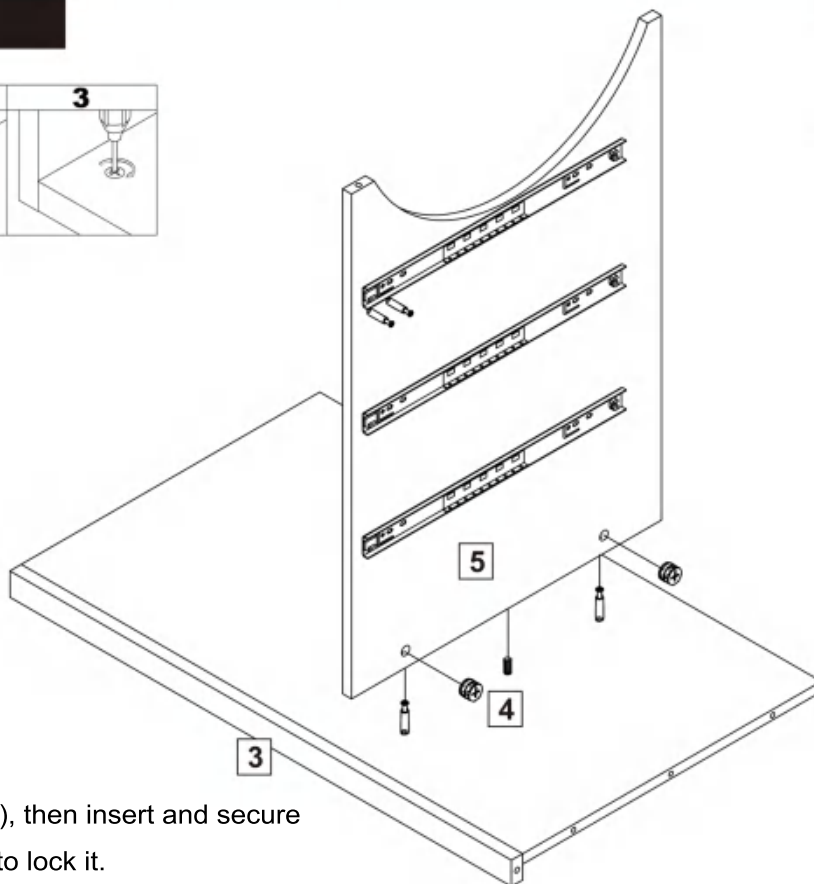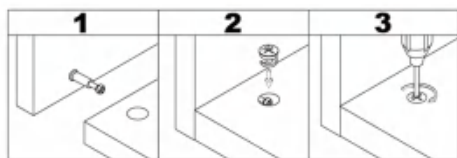

Attach part (5) to part (4), then insert and secure cam-lock (B) to part (5) to lock it.



Step6

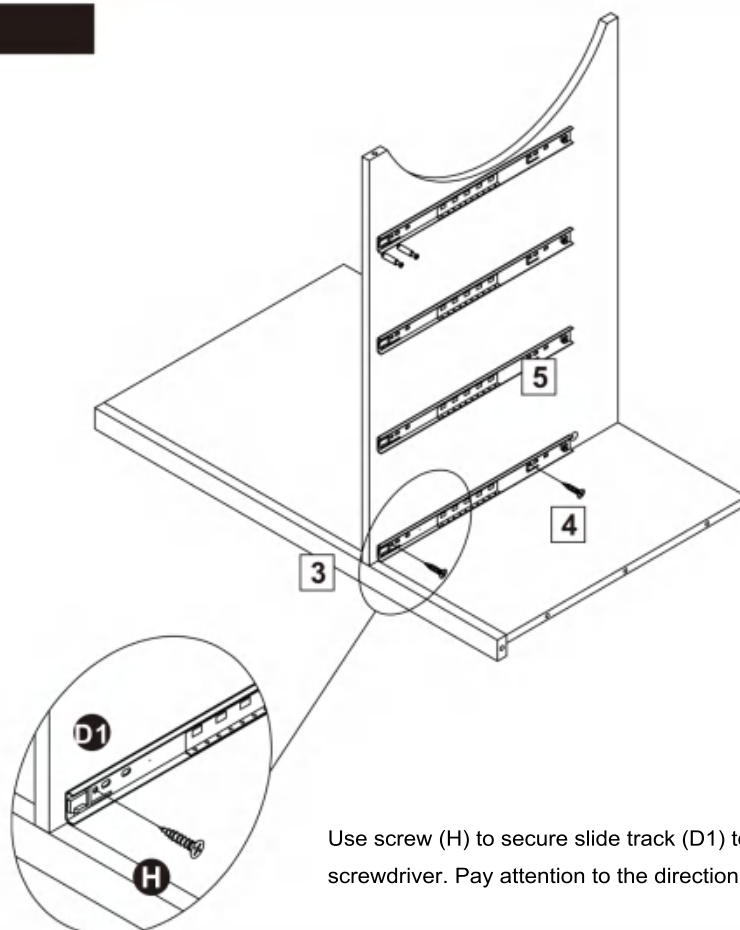

Use screw (H) to secure slide track (D1) to part (5) with a screwdriver. Pay attention to the direction of the slide track.



Assembly Instructions

Step7

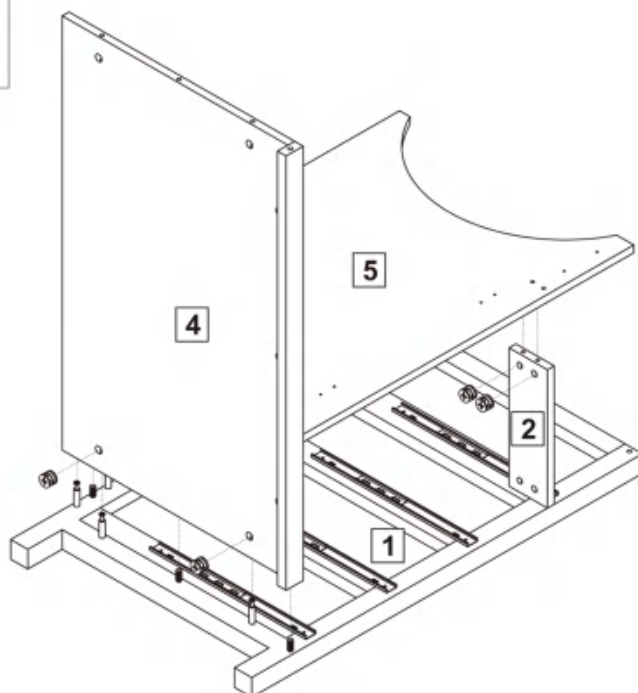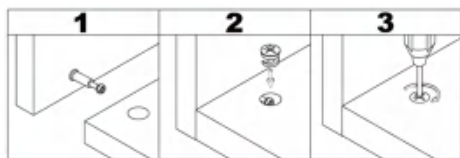

Attach part (4,5) to part (1,2), then insert and secure cam-lock (B) to part (2,4) to lock it.




Step8

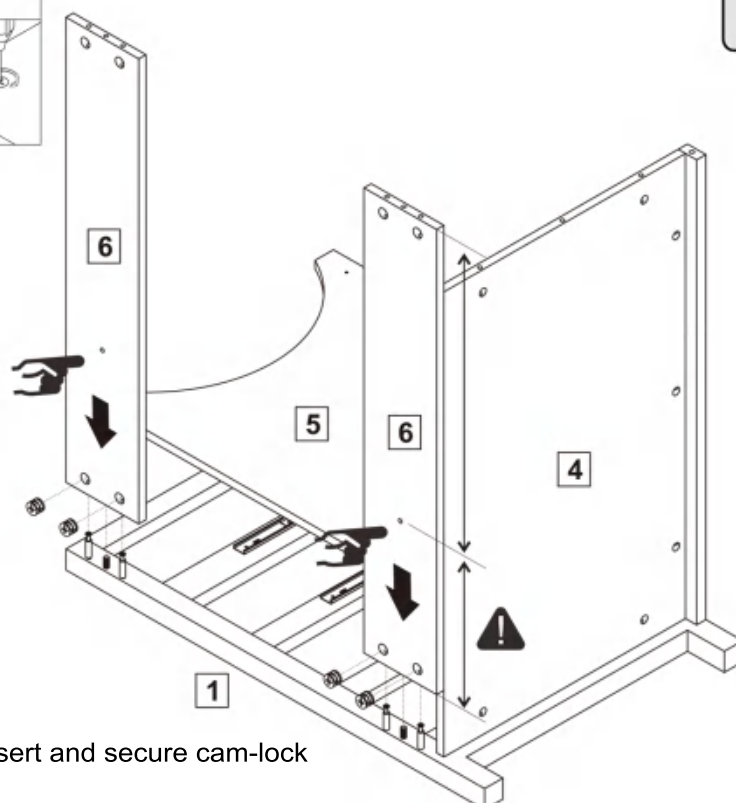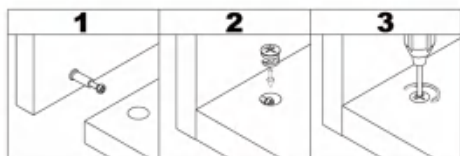

Attach part (6) to part (1), then insert and secure cam-lock (B) to part (6) to lock it.




Assembly Instructions

Step9

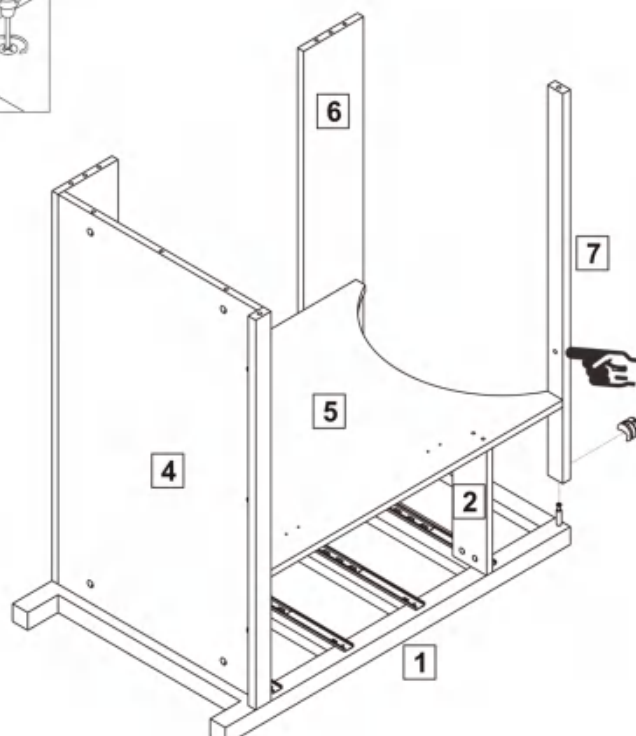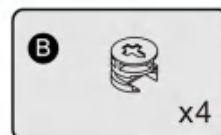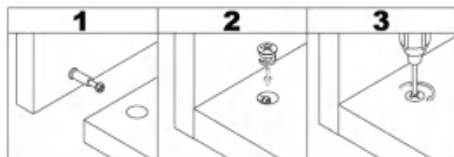


Attach part (7) to part (1), then insert and secure cam-lock (B) to part (7) to lock it.

Step10

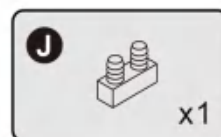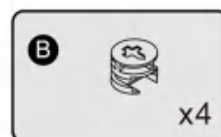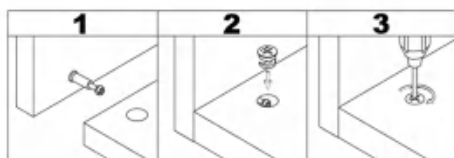


Attach cam-bolt (A) to part (5) with a screwdriver, and insert door bumper (J) to part (8). Attach part (8) to part (5), then insert and secure cam-lock (B) to part (8) to lock it.

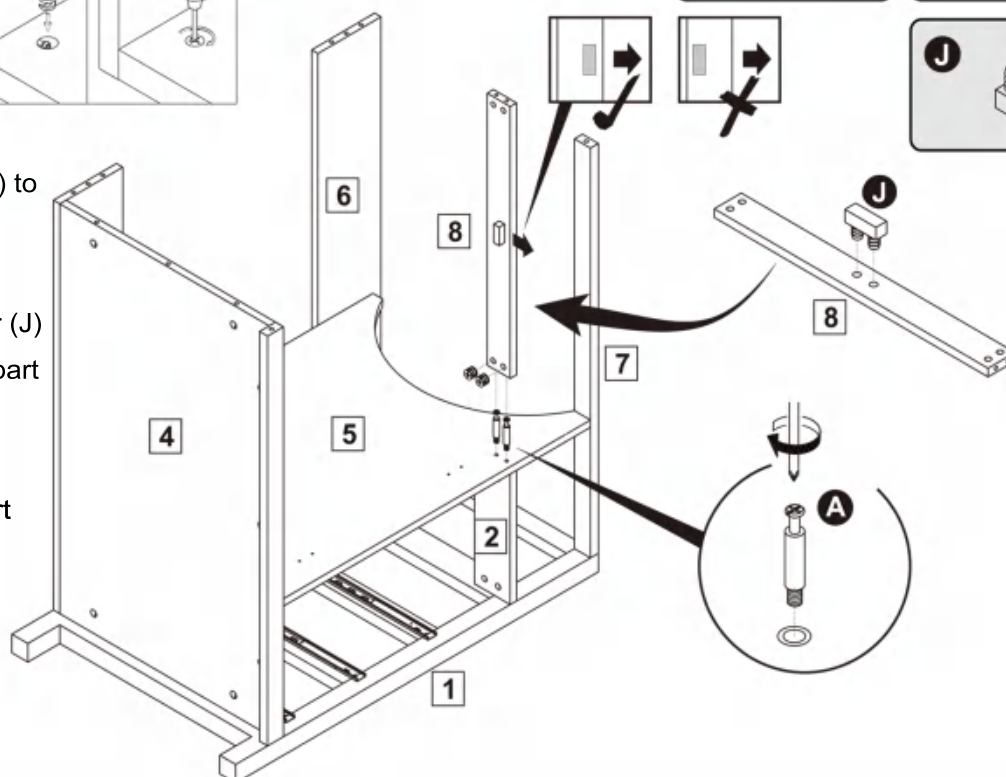





Assembly Instructions

Step 11


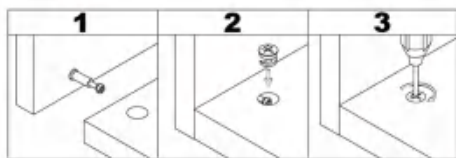


Attach part (9) to part (4,6,7,8), then insert and secure cam-lock (B) to part (4,6,7,8) to lock it.

Attach protective feet (N) to part (1,9).

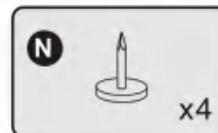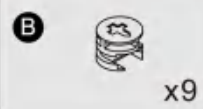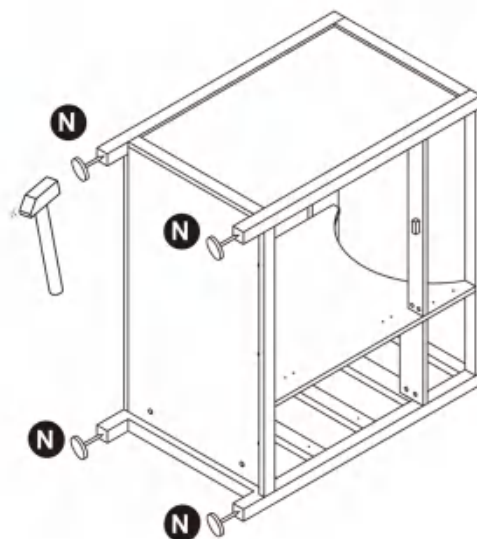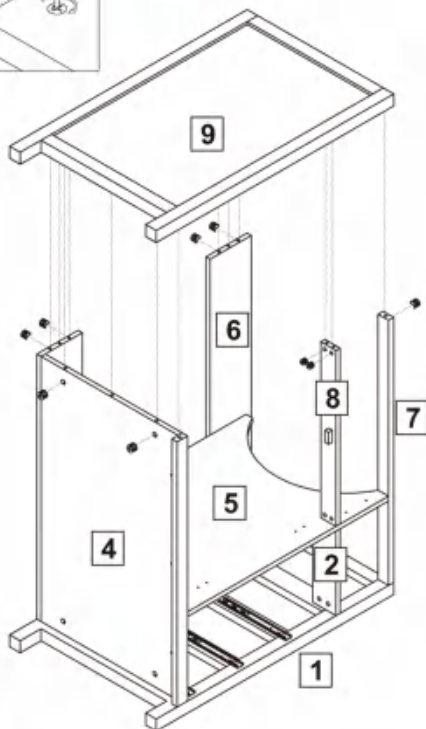


Step 12

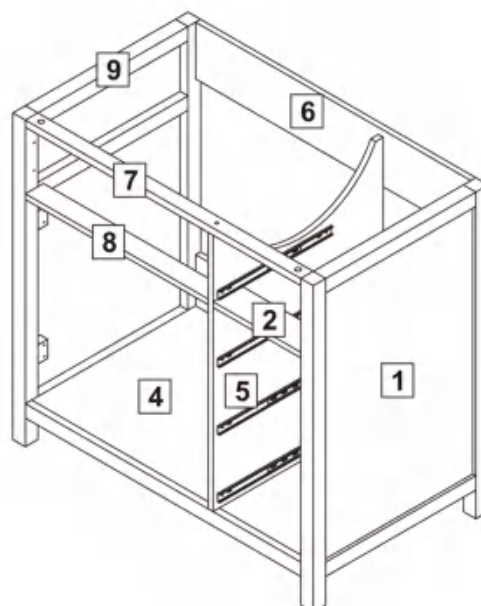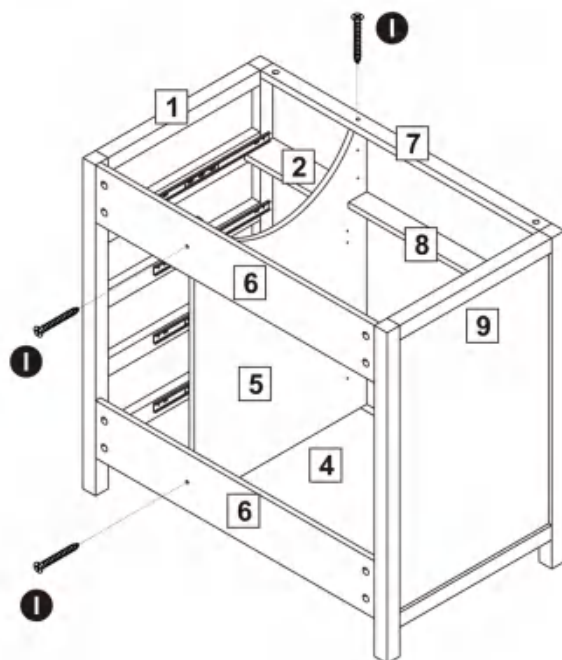

Use screw (I) to secure part (6,7) to part (5) with a screwdriver.


Assembly Instructions

Step13

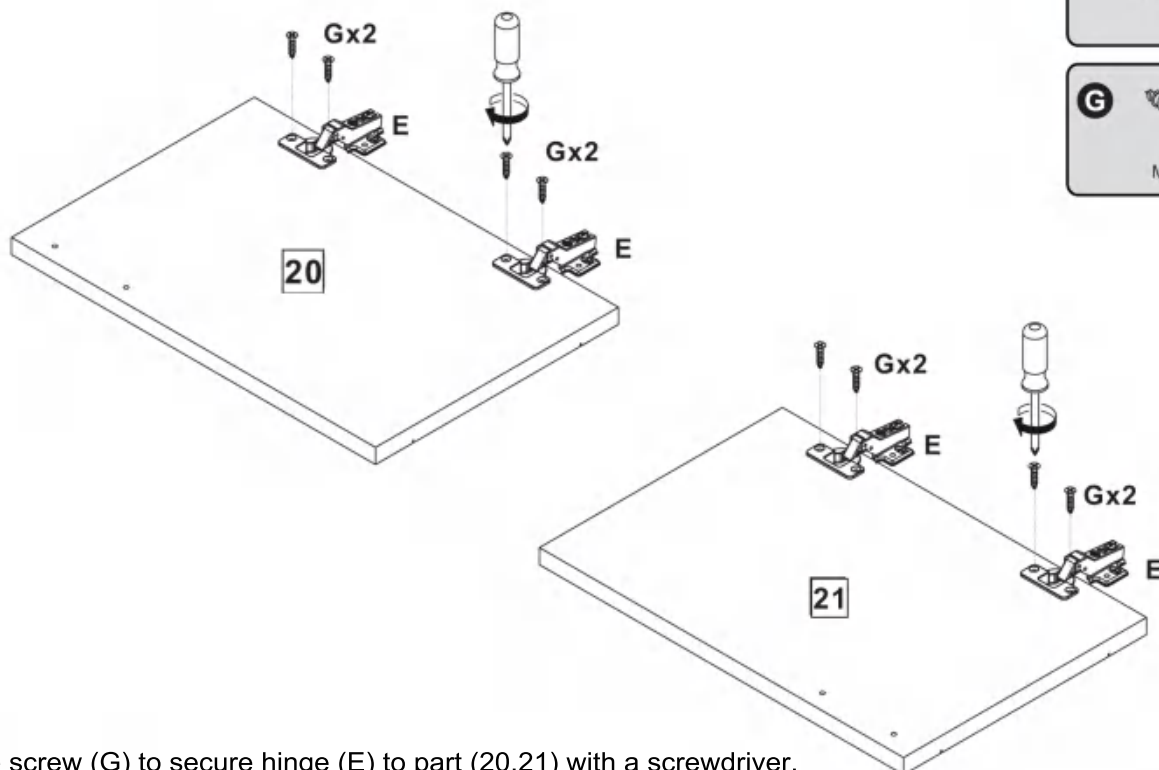

Use screw (G) to secure hinge (E) to part (20,21) with a screwdriver.


Step14

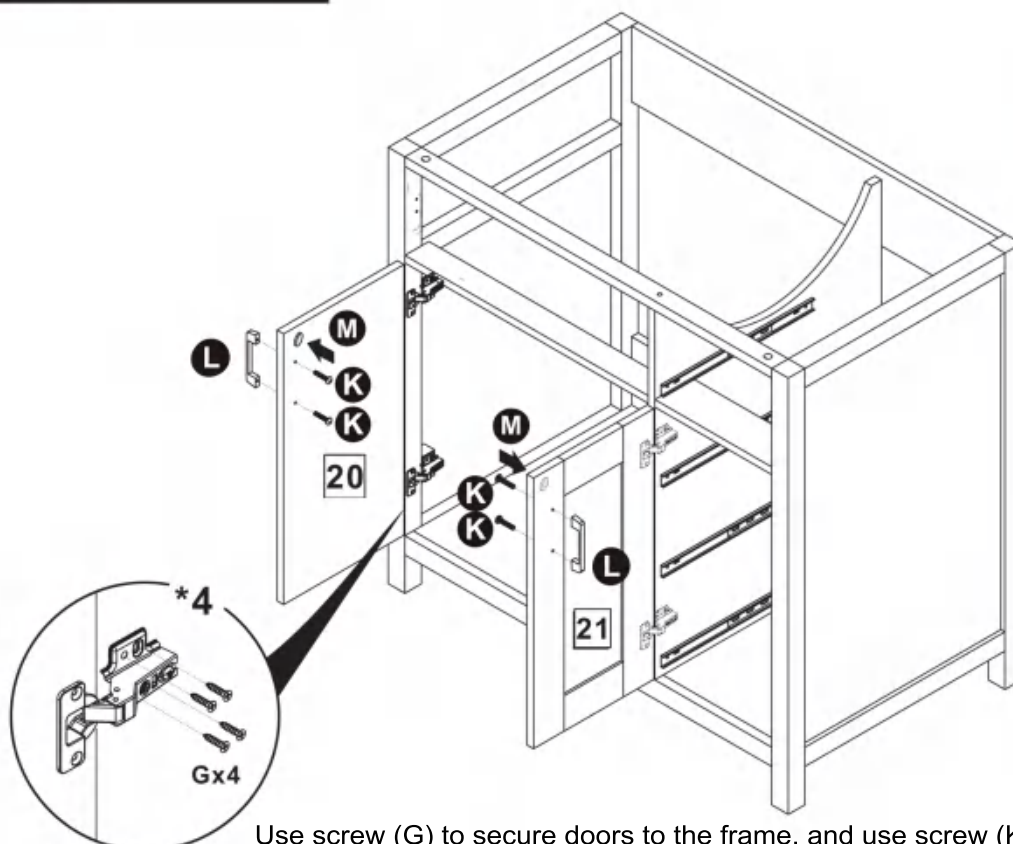

Use screw (G) to secure doors to the frame, and use screw (K) to secure handle (L) to doors (20,21). Attach door bumper (M) to doors (20,21).


Assembly Instructions

Step15

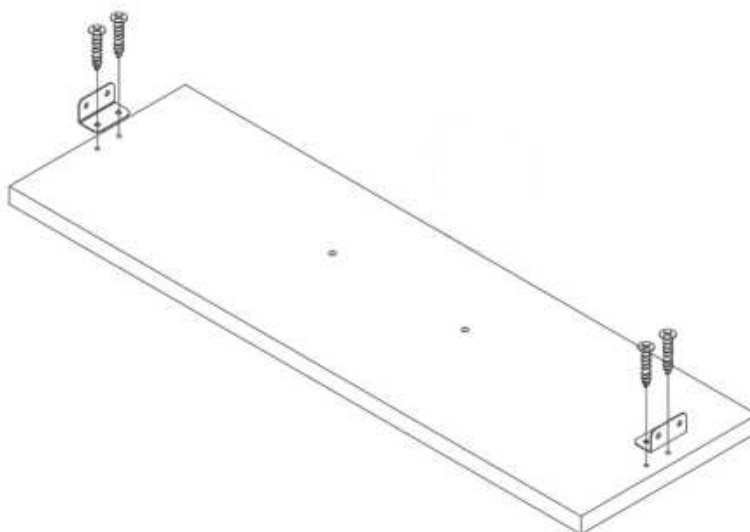


Use screw (G) to secure L shape connectors (F) to part (10) with a screwdriver.

Step16

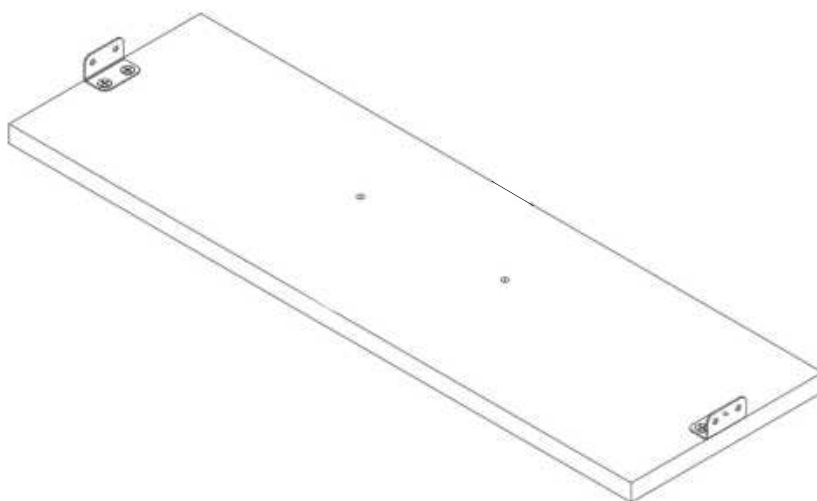



Assembly Instructions

Step17

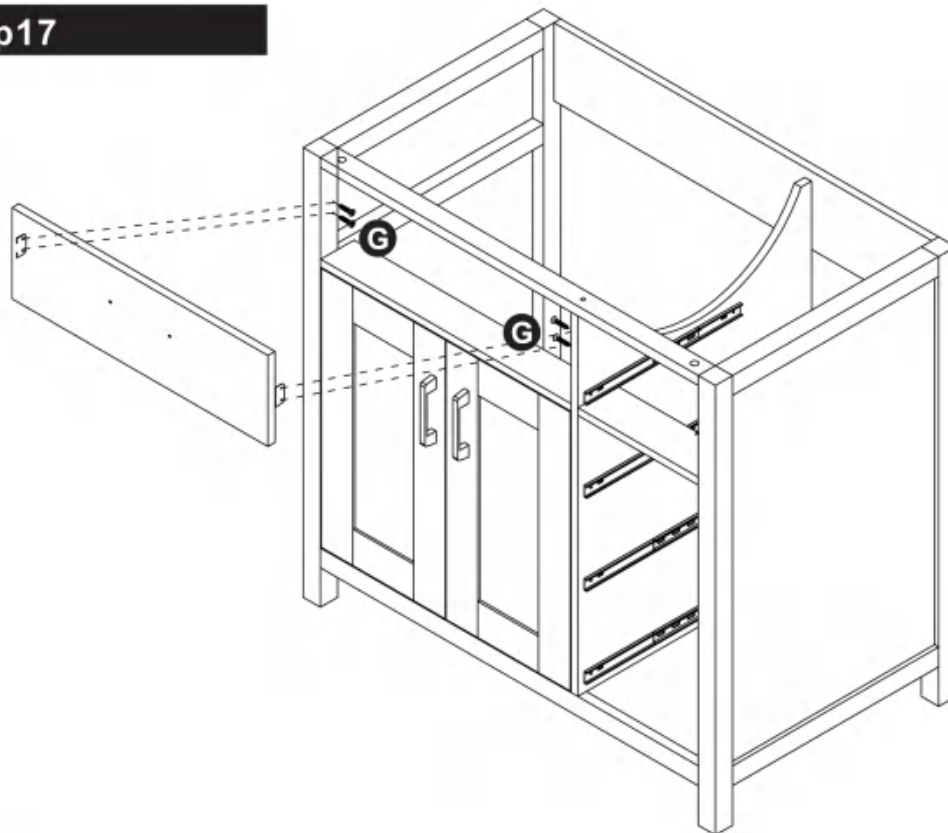

Use screw (G) to secure part (10) to the frame with a screwdriver.


Step18

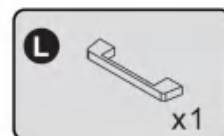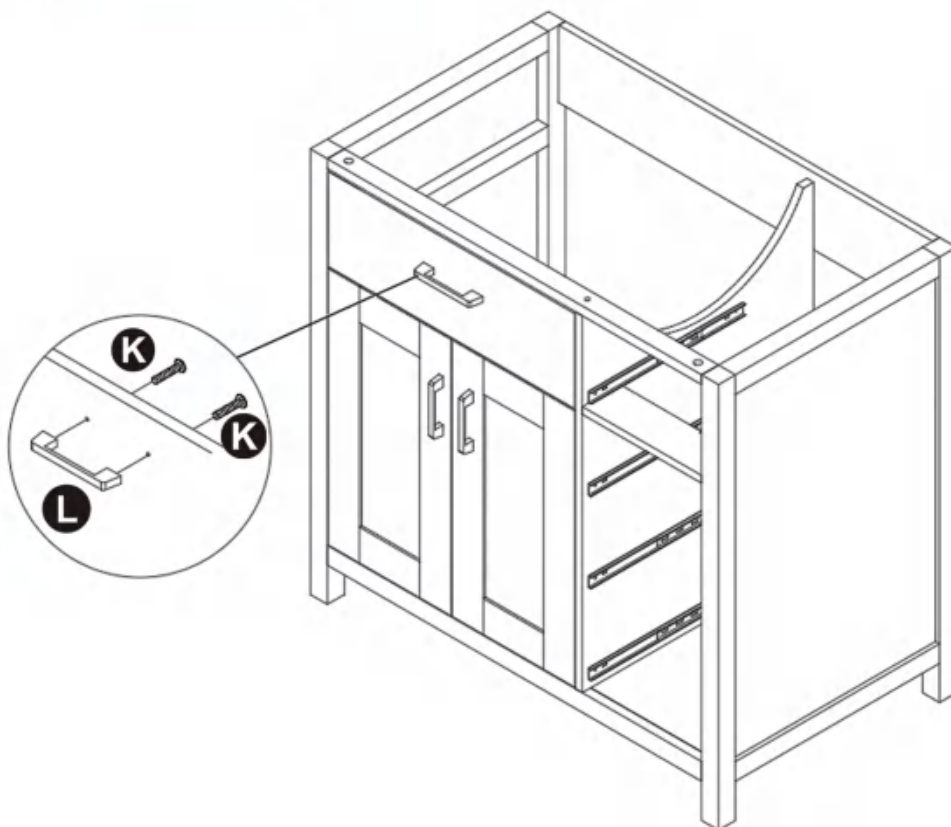

Use screw (K) to secure handle (L) to part (10) with a screwdriver.


Assembly Instructions

Step19

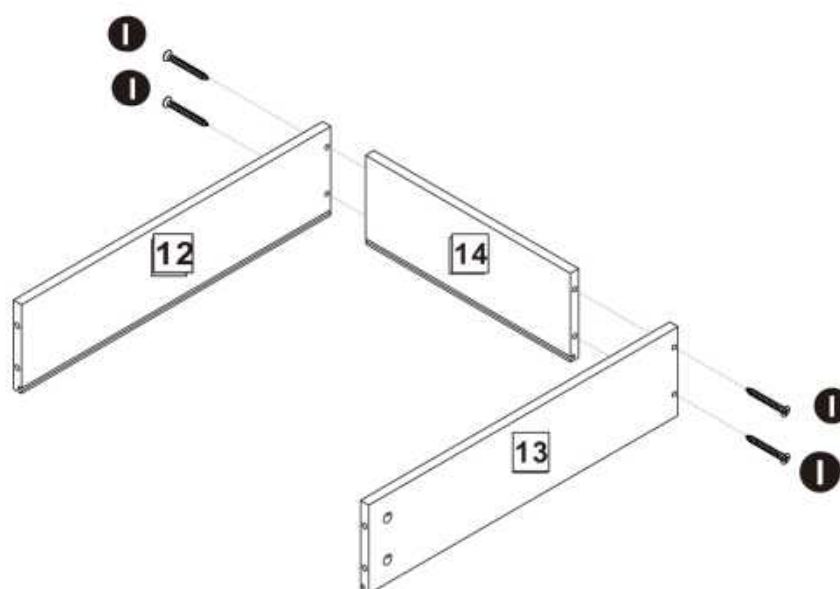

Use screw (I) to secure part (12,13) to part (14) with a screwdriver.

Step20






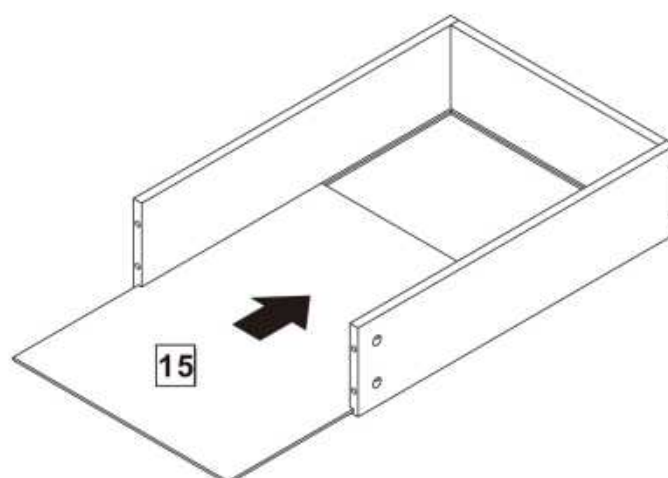


Slide part (15) into grooves as per diagram.



Assembly Instructions

Step21

Attach screw (A) to part (11) with a screwdriver. Use screw (K) to secure handle (L) to part (11) with a screwdriver. Attach part (11) to part (12,13), then insert and secure cam-lock (B) to part (12,13) to lock it.

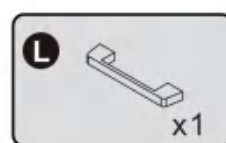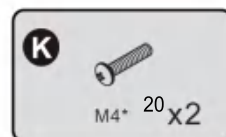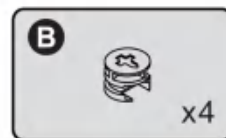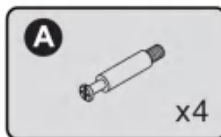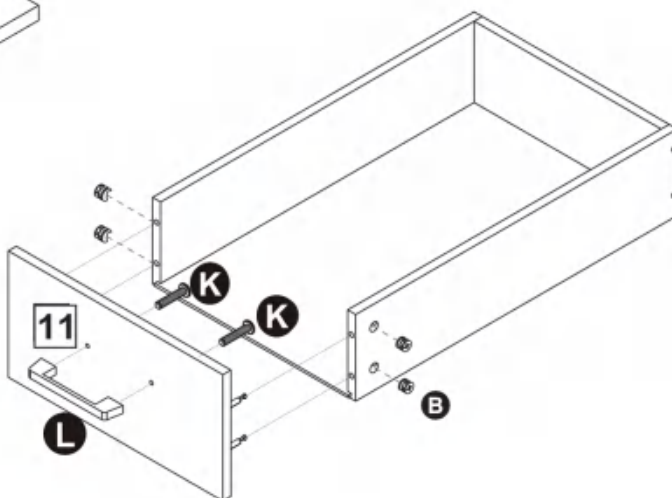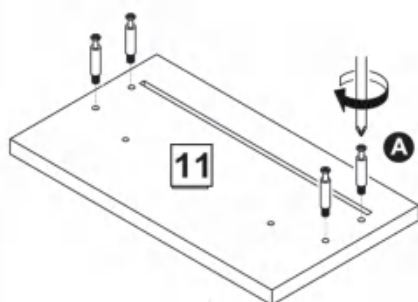


Step22

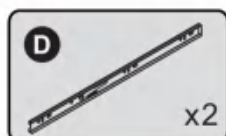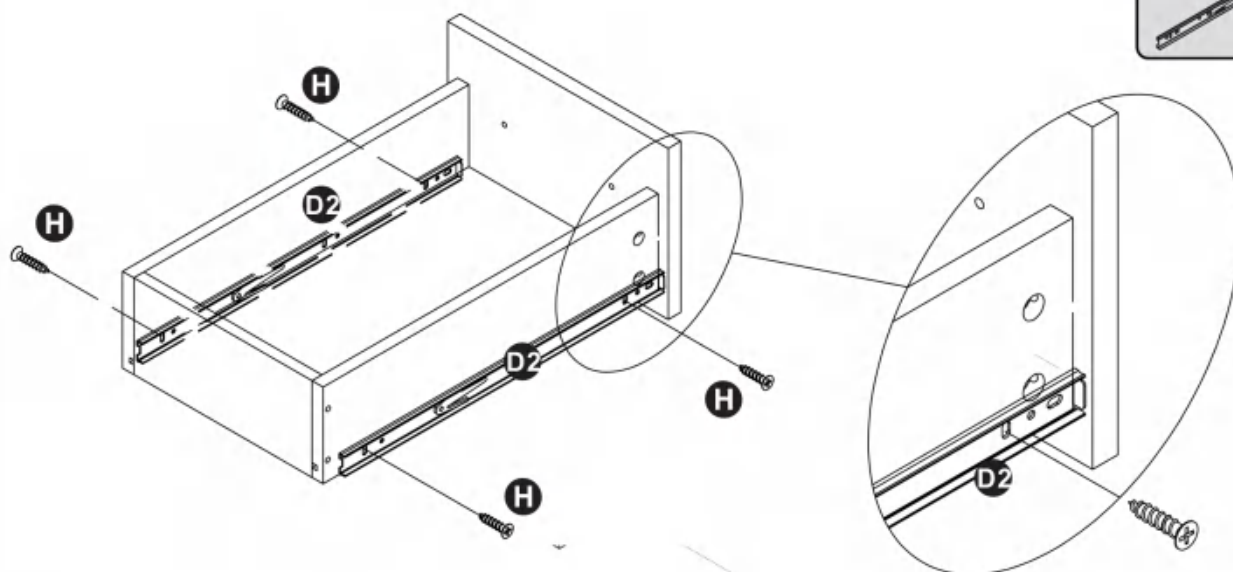

Use screw (H) to secure slide track (D2) to the drawer.


Assembly Instructions

Step23

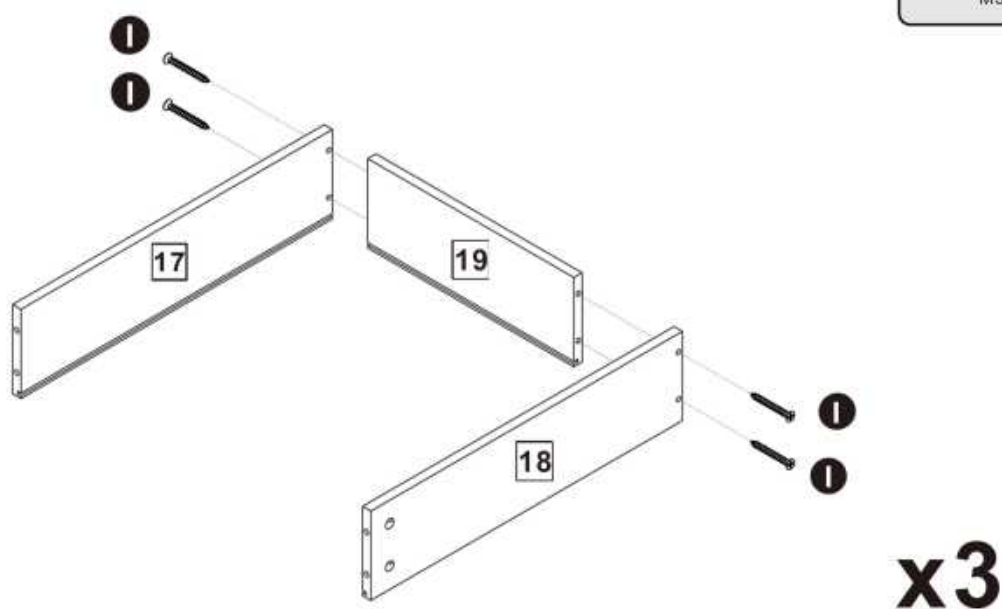

Use screw (I) to secure part (17,18) to part (19) with a screwdriver.







Step24

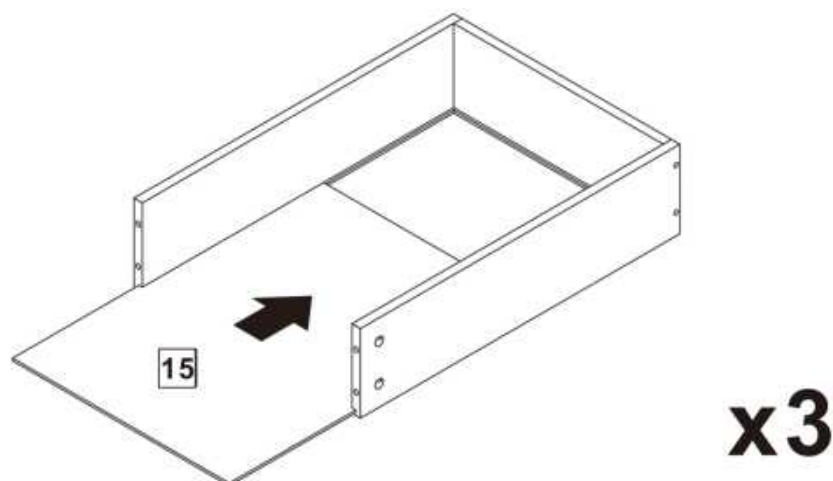

Slide part (15) into grooves as per diagram.

Assembly Instructions

Step25

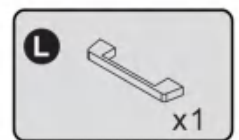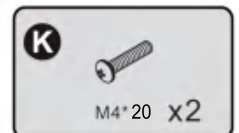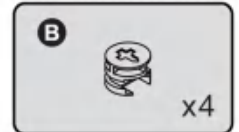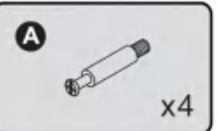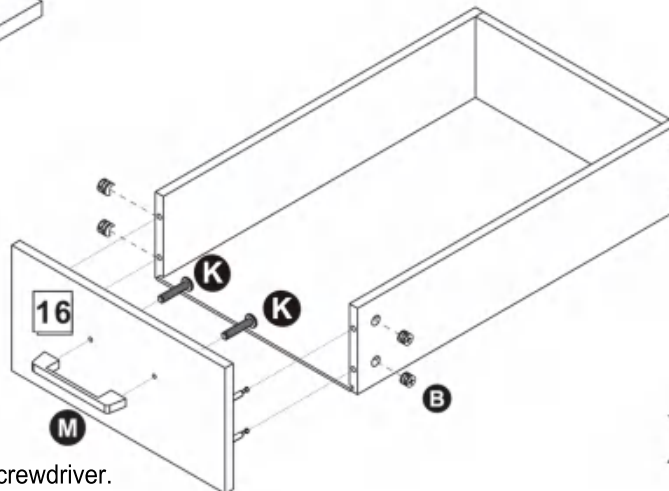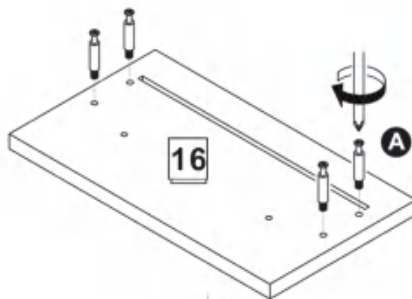


x3

Attach screw (A) to part (16) with a screwdriver.

Use screw (K) to secure handle (L) to part (16) with a screwdriver.

Attach part (16) to part (17,18), then insert and secure cam-lock (B) to part (17,18) to lock it.

Step26

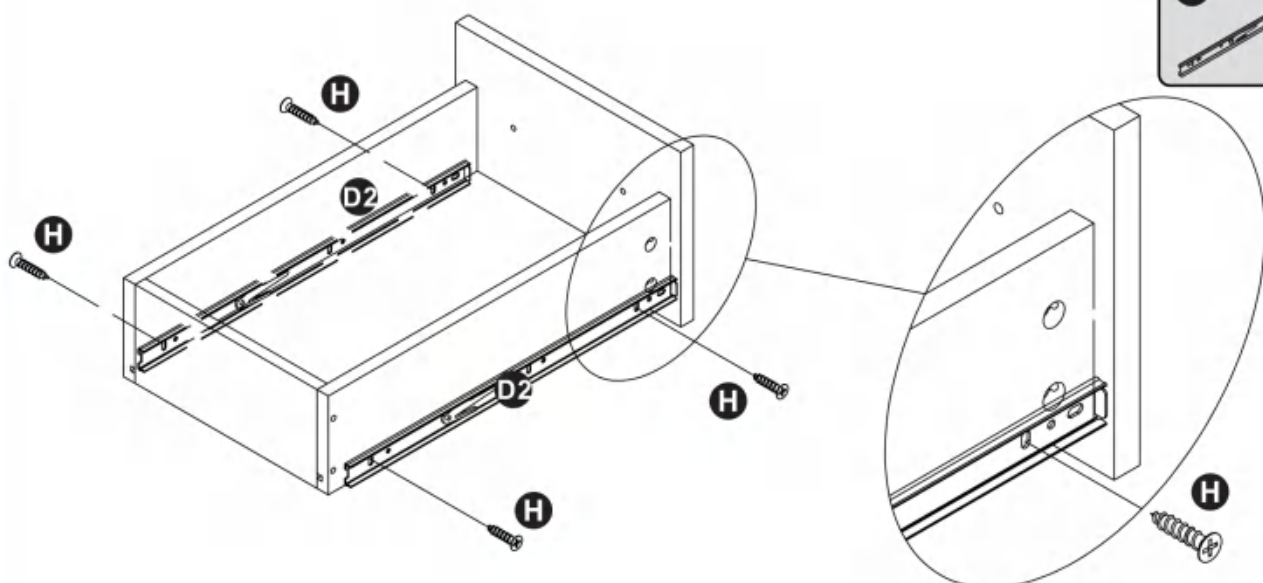


x3

Use screw (H) to secure slide track (D2) to the drawer, repeat this step by three times.

Assembly Instructions

Step27

Match and align slide track (D1) with (D2), then push the drawer all the way into the cabinet until the drawer front plate is completely flush with the front. You may pull out and push in the drawer a few times to lubricate the slide track.

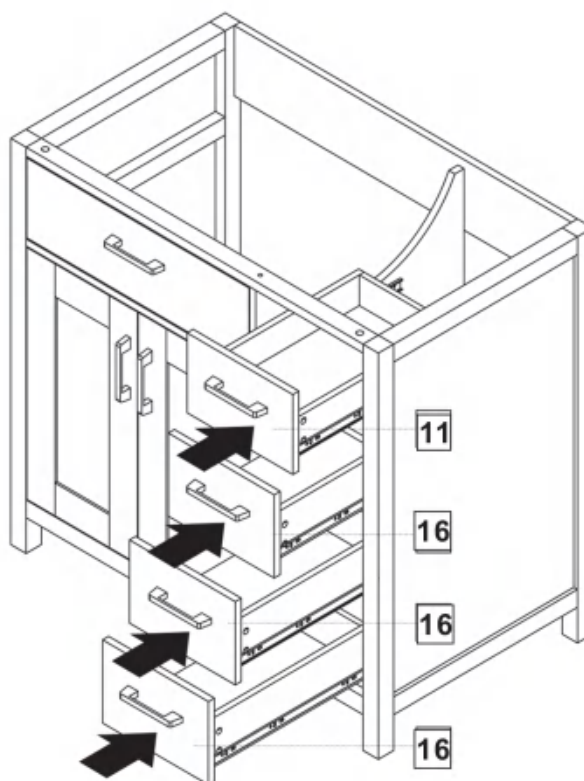


Step28



Assembly Instructions

Step29

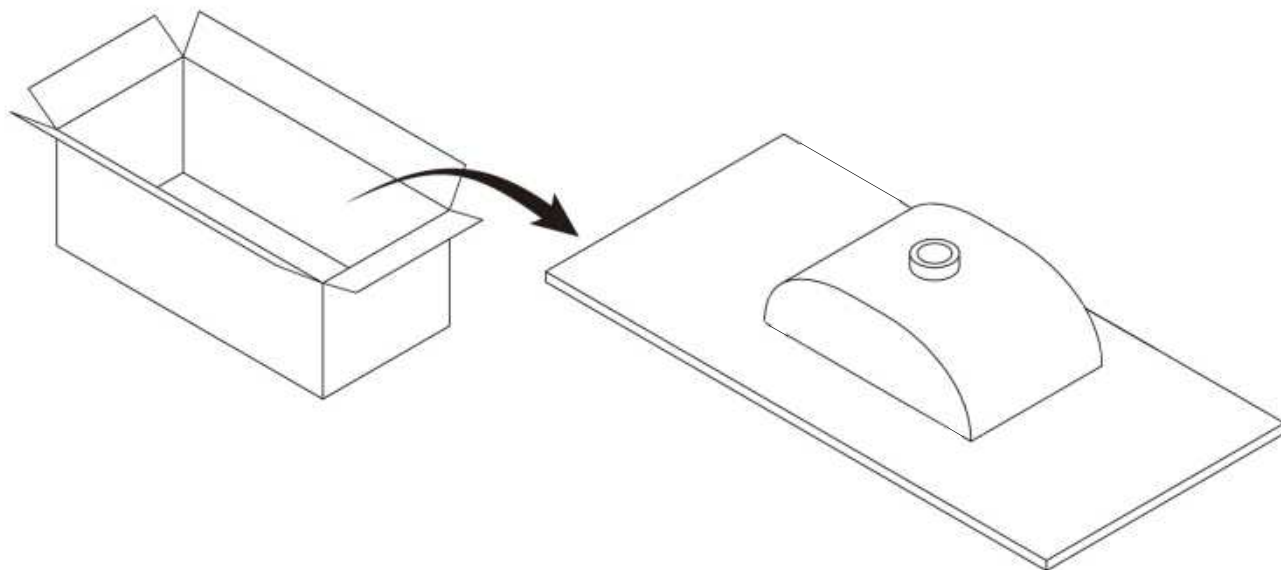


Step30



Assembly Instructions

Step31

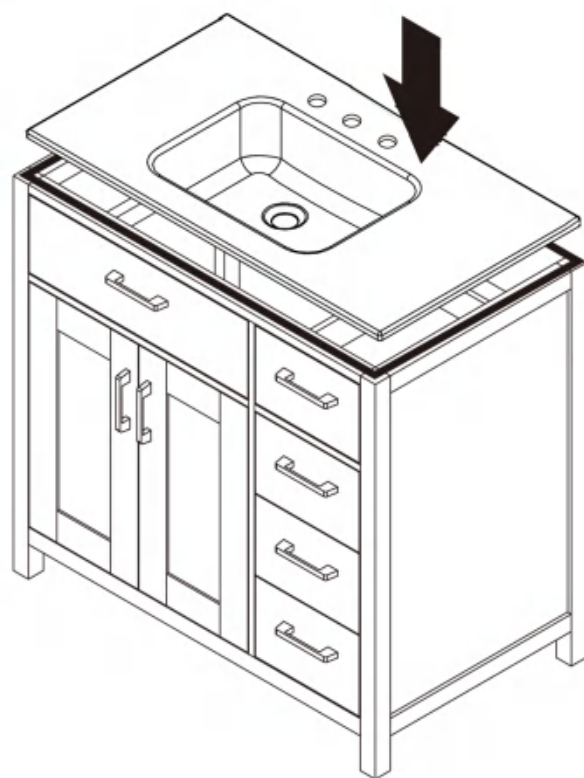


Step32



Assembly Instructions

Step33

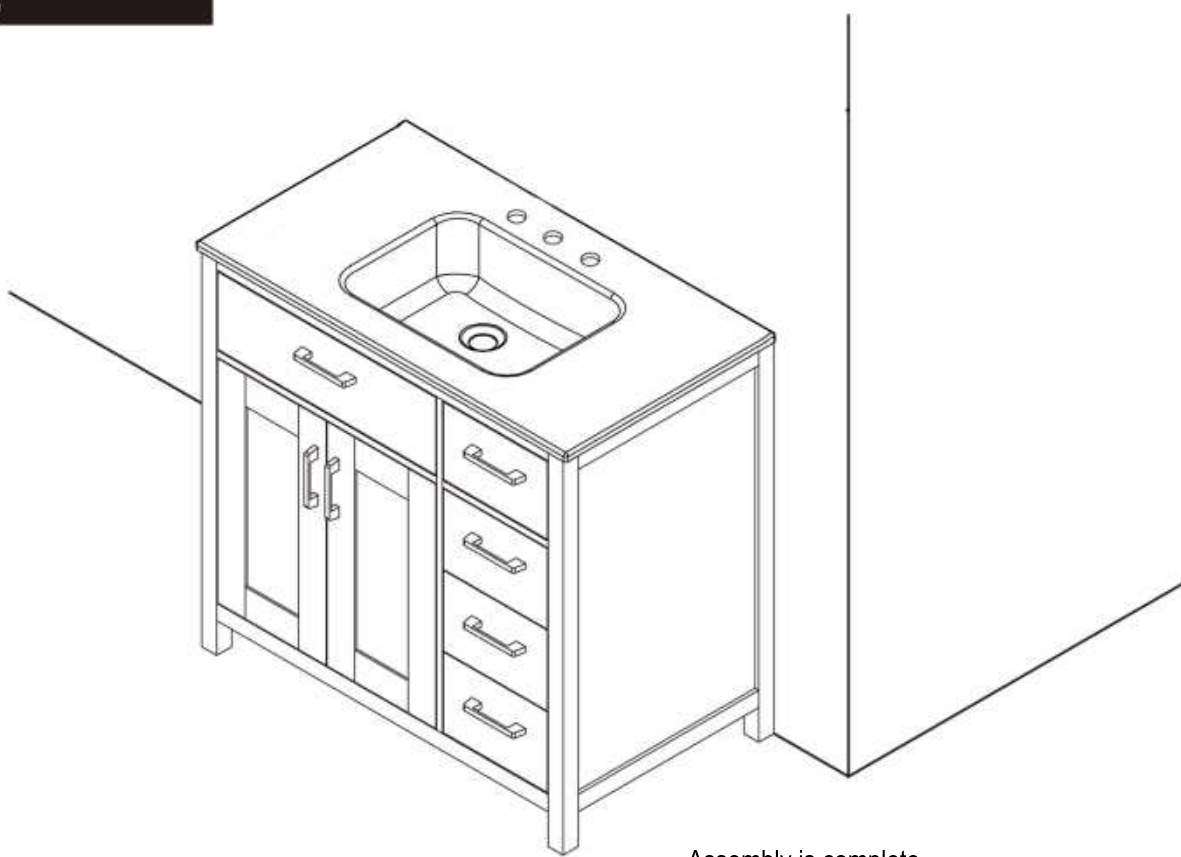

Assembly is complete